



Manufactured by: Backyard  
Discovery  
3305 Airport Drive,  
Pittsburg, KS 66762  
800-856-4445

Basepoint Business Centre: Rivermead Drive, Westlea, Swindon SN5 7EX Phone: 0800-118-2476  
J.P. Coenstraat 7, The Hague, 2595 WP, Netherlands Phone: 08005678990

# LANCASTER GALLEY OUTDOOR KITCHEN

## MODEL # : 2404137



Please visit [www.backyarddiscovery.com](http://www.backyarddiscovery.com)  
For the most up to date assembly manual, to register your product, or to order  
replacement parts *Para obtener instrucciones en español, visite*  
[www.backyarddiscovery.com](http://www.backyarddiscovery.com)



EASY STEP-BY-STEP  
3D INTERACTIVE INSTRUCTIONS  
DOWNLOAD THE FREE APP







# OWNER'S MANUAL - BASIC SETUP DIMENSIONS & ASSEMBLY NOTES

It is critically important that you start with square and level footings or concrete pad to attach your structure


- Pay close attention to the items needed for each step. Make sure you are using the correct hardware for each step. Using incorrect hardware may result in improper assembly
- Remember to double check for underground utilities and overhead electrical lines

Post mounts are provided with your structure which allows you to permanently install your structure to a pre-existing or new wood or concrete surface. See Anchor Instructions for further details and recommendations.

- The hardware to attach the post mounts to the structure is included.
- The hardware to mount the structure permanently to a concrete surface is included.
- The hardware to mount the structure permanently to a wood deck is NOT included and will need to be purchased separately. You must ensure there is ample structural support under the deck before permanently attaching.

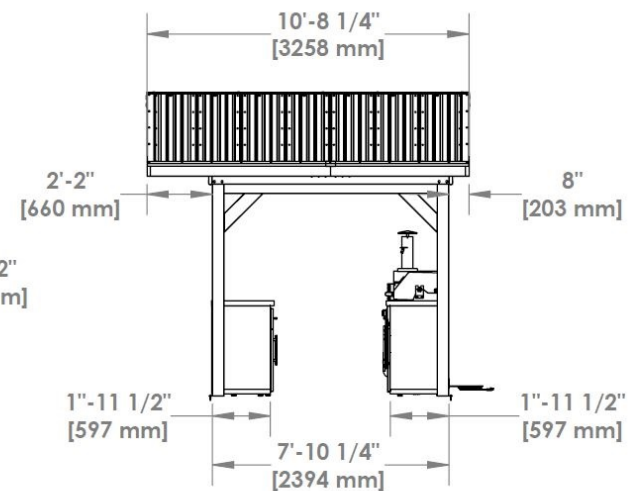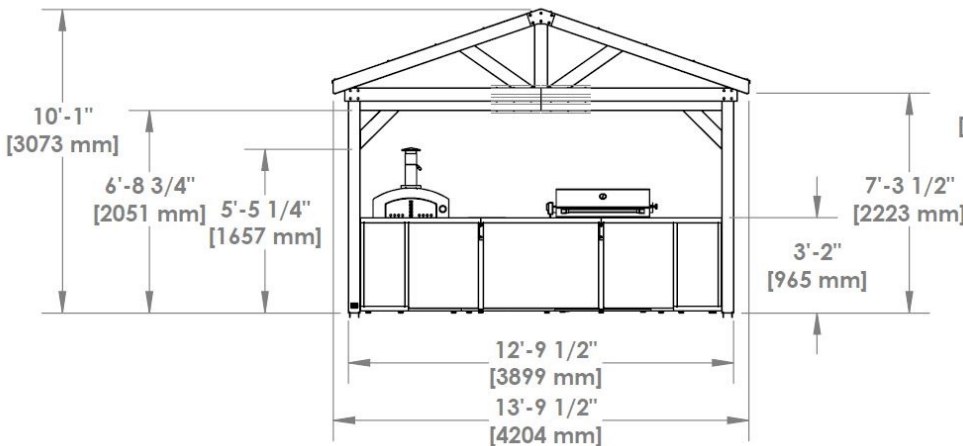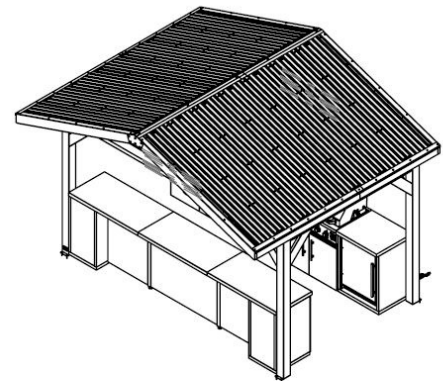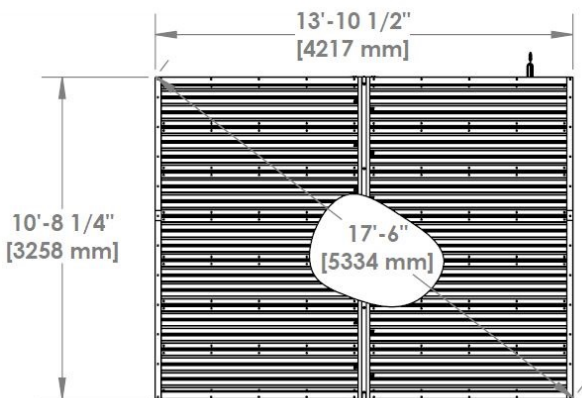


# OWNER'S MANUAL - ANCHORING LAYOUT

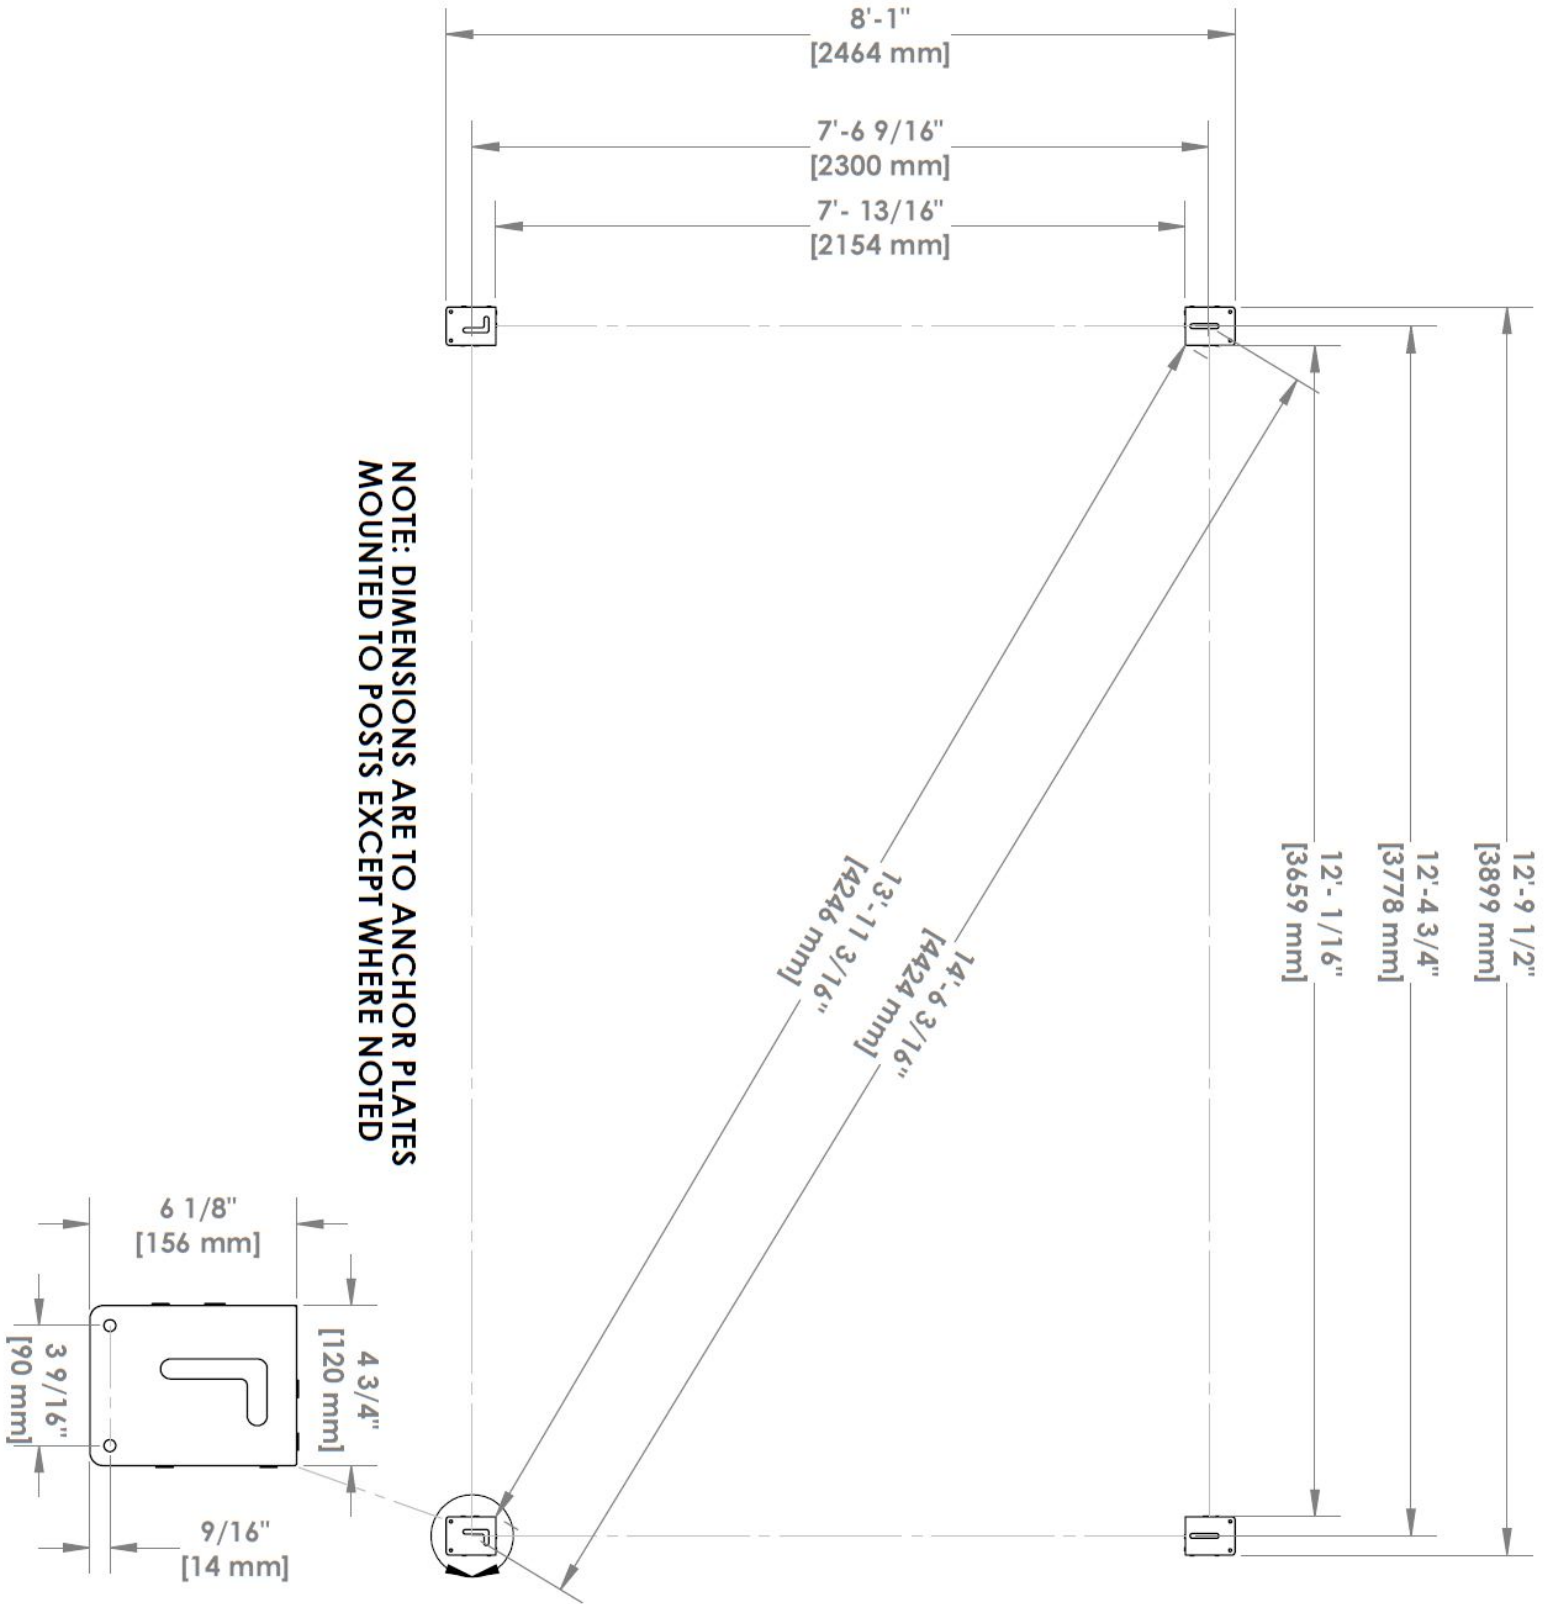


# OWNER'S MANUAL - PARTS IDENTIFICATION


## METAL COMPONENTS (NOT TO SCALE)

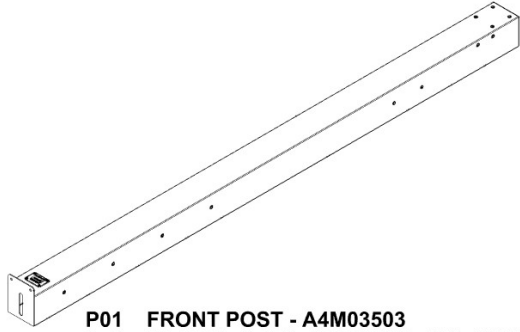


**P01 FRONT POST - A4M03503**  
(x1) 89 9/16"x6 1/8"x4 3/4" (120x155x2275)

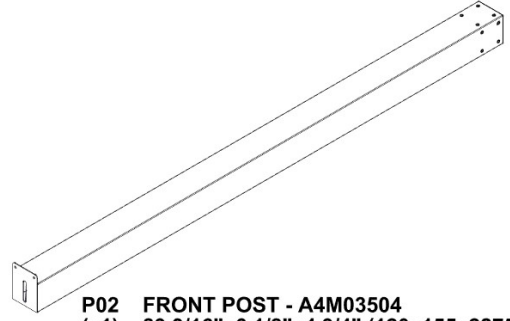


**P02 FRONT POST - A4M03504**  
(x1) 89 9/16"x6 1/8"x4 3/4" (120x155x2275)

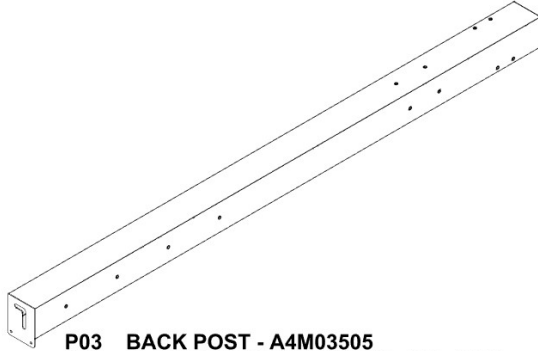

**P03 BACK POST - A4M03505**  
(x1) 89 9/16"x6 1/8"x4 3/4" (120x155x2275)

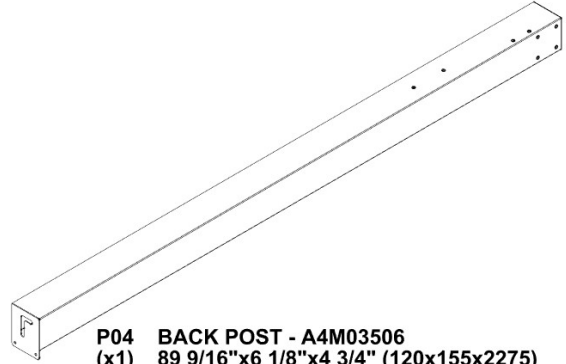

**P04 BACK POST - A4M03506**  
(x1) 89 9/16"x6 1/8"x4 3/4" (120x155x2275)



**B01 SIDE BEAM ASSEMBLY - A4M03507**  
(x2) 94 5/16"x5 1/4"x1 7/16" (36x134x2396)



**B02 SIDE BEAM ASSEMBLY - A4M03508**  
(x2) 84 13/16"x5 1/4"x1 7/16" (36x134x2154)



**B03 FRONT BEAM ASSEMBLY - A4M03509**  
(x2) 78 3/16"x5 1/4"x1 7/16" (36x134x1986)



**B04 FRONT BEAM ASSEMBLY - A4M03510**  
(x2) 78 3/16"x5 1/4"x1 7/16" (36x134x1986)



**B05 FRONT BEAM ASSEMBLY - A4M03511**  
(x2) 72"x5 1/4"x1 7/16" (36x134x1829)



**B06 FRONT BEAM ASSEMBLY - A4M03512**  
(x2) 72"x5 1/4"x1 7/16" (36x134x1829)



**B07 GABLE ARM ASSEMBLY - A4M03513**  
(x2) 29 3/16"x5 1/4"x1 7/16" (36x134x741)



**B08 GABLE ARM ASSEMBLY - A4M03514**  
(x2) 40 1/16"x5 1/4"x1 7/16" (36x134x1017)



**B09 GABLE ARM ASSEMBLY - A4M03515**  
(x2) 40 1/16"x5 1/4"x1 7/16" (36x134x1017)

# OWNER'S MANUAL - PARTS IDENTIFICATION

## METAL COMPONENTS (NOT TO SCALE)




**B10 RIDGE BEAM ASSEMBLY - A4M03516**  
(x1) 67 1/16"x5 1/4"x1 7/16" (36x134x1704)



**B11 RIDGE BEAM ASSEMBLY - A4M03517**  
(x1) 61 3/16"x5 1/4"x1 7/16" (36x134x1554)



**B12 GABLE BEAM ASSEMBLY - A4M03518**  
(x2) 88 13/16"x5 1/4"x1 7/16" (36x134x2255)



**B13 GABLE BEAM ASSEMBLY - A4M03519**  
(x2) 88 13/16"x5 1/4"x1 7/16" (36x134x2255)



**B14 DRIP BEAM ASSEMBLY - A4M03520**  
(x2) 53 11/16"x4 13/16"x1 7/16" (36x122x1364)



**B15 DRIP BEAM ASSEMBLY - A4M03521**  
(x2) 71 3/4"x4 13/16"x1 7/16" (36x122x1822)



**R01 RAFTER ASSEMBLY - A4M03522**  
(x2) 86 3/8"x4 5/16"x3 1/8" (80x110x2194.6)



**R02 RAFTER ASSEMBLY - A4M03523**  
(x2) 86 3/8"x4 5/16"x3 1/8" (80x110x2194.6)




**R03 RAFTER ASSEMBLY - A4M03524**  
(x6) 86 3/8"x4 5/16"x3 1/8" (80x110x2194.6)




**C01 CORBEL ASSEMBLY - A4M03525**  
(x4) 21 13/16"x5 1/4"x2 3/4" (70x134x553.5)



**C02 CORBEL ASSEMBLY - A4M03526**  
(x4) 21 13/16"x5 1/4"x2 3/4" (70x134x553.5)

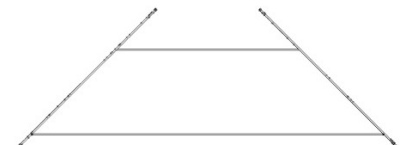


**C03 CORBEL ASSEMBLY - A4M03527**  
(x2) 23 3/8"x12"x1 7/16" (36x304x593)



**E01 PURLIN ASSEMBLY - A4M03800**  
(x10) 71 11/16"x1 15/16"x1 9/16" (40x50x1820.60)



**E02 PURLIN ASSEMBLY - A4M03801**  
(x10) 53 5/8"x1 15/16"x1 9/16" (40x50x1362.40)



**J1 SPLICE BRACKET - A4M02230**  
(x4) 1 5/16"x5 3/16"x39 3/8" (33.2x131.2x1000)




**J2 SPLICE BRACKET - A4M01270**  
(x1) 1 1/4"x5 1/8"x15 3/4" (33x131x400)




**J6 SPLICE BRACKET - A4M03806**  
(x2) 19 11/16"x4 11/16"x32.5 (32.5x118.5x500)

# OWNER'S MANUAL - PARTS IDENTIFICATION


## METAL COMPONENTS (NOT TO SCALE)

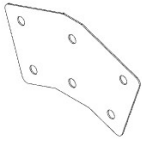


**J3 GABLE BRACKET - A4M03805**  
(x2) 11 1/8"x6 7/16"x1/16" (2x163x282)



**J4 BEAM BRACKET - A4M02990**  
(x8) 1"x1 5/16"x5 1/16" (25x33.2x128)

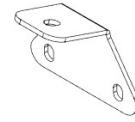

**J5 RAFTER BRACKET - A4M03803**  
(x6) 3 5/8"x2 11/16"x2 1/16" (52x68x91.5)



**J7 RAFTER BRACKET - A4M03802**  
(x4) 3 5/8"x2 3/16"x2" (50x55x92)



**J8 GABLE BRACKET - A4M03804**  
(x4) 4 13/16"x1 9/16"x1 9/16" (40x40x123)



**J9 BEAM BRACKET - A4M03807**  
(x4) 1"x1 5/16"x4 9/16" (25x33.20x116)



**J10 SUPPORT RING - A4M03808**  
(x5) 13/16"x7/16" (11x20x)



**A4M01352 HOLE COVER**  
(x70)




**A6P00530 2-WAY SQUARE PLUG**  
(x10)



**A4M03528 STEEL SHEETING**  
(x14)




**A4M03529 DRIP TRIM**  
(x2)

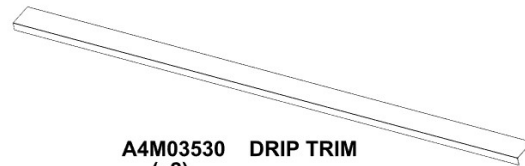


**A4M03530 DRIP TRIM**  
(x2)




**A4M03531 DRIP TRIM SPLICE**  
(x2)

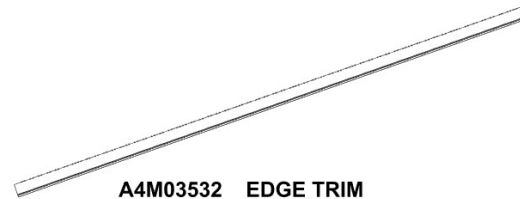

**A4M03532 EDGE TRIM**  
(x4)

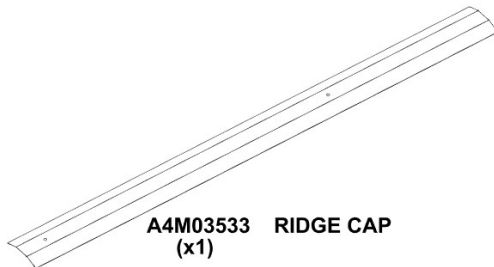

**A4M03533 RIDGE CAP**  
(x1)

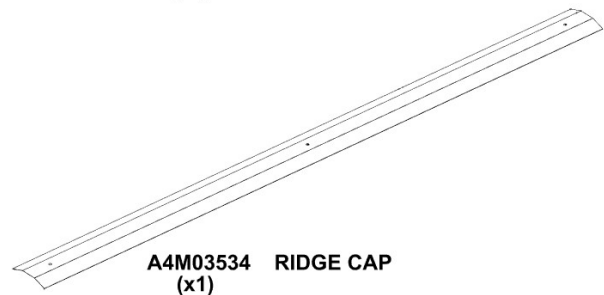


**A4M03534 RIDGE CAP**  
(x1)




**A4M03535 RIDGE CAP SPLICE**  
(x1)

# OWNER'S MANUAL - PARTS IDENTIFICATION


## METAL COMPONENTS (NOT TO SCALE)

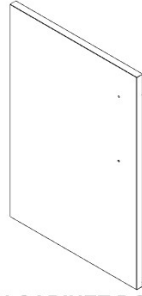


**D1 PIZZA OVEN CABINET DOOR ASSEMBLY L - A4M03546**  
(x1) 28 7/16"x19 5/8"x15/16" (24x498x722.5)

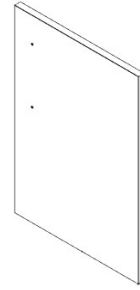


**D2 PIZZA OVEN CABINET DOOR ASSEMBLY R - A4M03555**  
(x1) 28 7/16"x19 5/8"x15/16" (24x498x722.5)

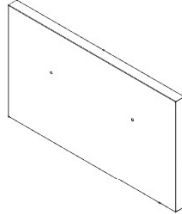


**D3 SINK CABINET DRAWER PANEL ASSEMBLY - A4M03569**  
(x1) 17 3/4"x10 1/4"x15/16" (24x260x451)

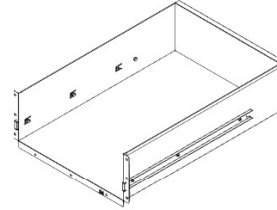


**D4 SINK CABINET DRAWER BODY ASSEMBLY - A4M03571**  
(x1) 22 1/4"x16 1/16"x6 7/16" (164.2x408.4x565.4)

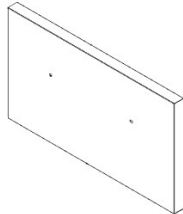


**D5 SINK CABINET TRIM PANEL - A4M03576**  
(x1) 17 13/16"x10 1/4"x1" (26x260x452)




**D6 SINK CABINET DOOR ASSEMBLY L - A4M03577**  
(x1) 22 1/4"x17 13/16"x15/16" (24x452x565)

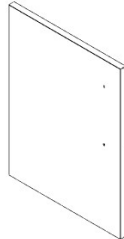


**D7 GRILL CABINET DOOR ASSEMBLY L - A4M03587**  
(x1) 24 13/16"x19 1/16"x15/16" (24x484.15x630)

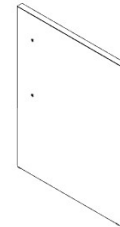


**D8 GRILL CABINET DOOR ASSEMBLY R - A4M03590**  
(x1) 24 13/16"x19 1/16"x15/16" (24x484.15x630)

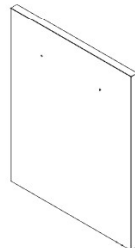


**D9 TRASH CAN PANEL ASSEMBLY - A4M03608**  
(x1) 22 1/4"x17 3/4"x15/16" (24.00x451.00x565.00)

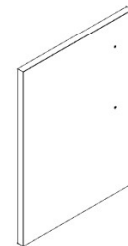

**D10 DOOR PANEL ASSEMBLY - A4M03617**  
(x1) 24 3/4"x17 13/16"x15/16" (24x452x628)

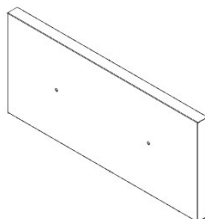


**D11 DRAWER PANEL ASSEMBLY - A4M03619**  
(x2) 17 13/16"x8 1/16"x15/16" (24x205x452)

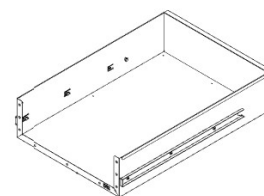


**D12 DRAWER BODY ASSEMBLY - A4M03621**  
(x2) 22 1/4"x15 13/16"x4 15/16" (126x402x565)

# OWNER'S MANUAL - PARTS IDENTIFICATION


## METAL COMPONENTS (NOT TO SCALE)

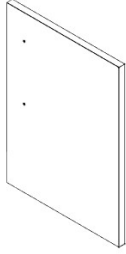


**D13 DOOR PANEL ASSEMBLY - A4M03643**  
(x1) 24 3/4"x17 13/16"x15/16" (24x452x628)

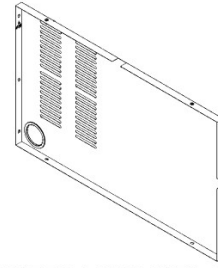


**G10 GRILL CABINET BACK PANEL ASSEMBLY - A4M03055**  
(x1) 1 3/16"x22 7/8"x38 3/16" (30x581x970)

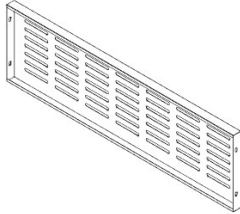


**G11 GRILL VENTILATION PANEL - A4M03056**  
(x1) 1 5/16"x11 3/16"x38 3/16" (33x284x970)

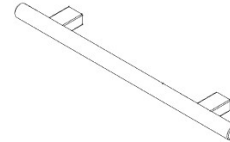

**H2 STAINLESS STEEL HANDLE - A4M03024**  
(x12) 5/8"x1 9/16"x11 13/16" (16x40x300)

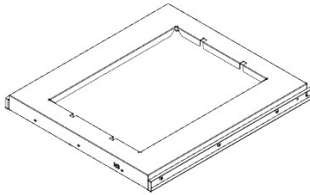


**H3 TRASH CAN BRACKET ASSEMBLY - A4M03610**  
(x1) 18 1/16"x15 13/16"x (35x401.60x458)

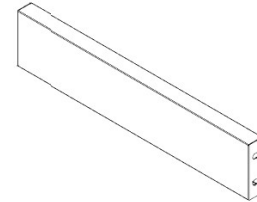


**H4 HORIZONTAL BEAM ASSEMBLY L - A4M03575**  
(x4) 16 1/4"x3 3/8"x1" (25x85x413)




**H5 PIZZA OVEN CABINET HINGE CHANNEL ASSEMBLY - A4M03558**  
(x1) 26 5/8"x2 15/16"x11/16" (18x74.80x676)




**H6 TUBE FRAME SUPPORT - A4M03627**  
(x2) 35 15/16"x15 9/16"x1 15/16" (50x394.5x912.5)

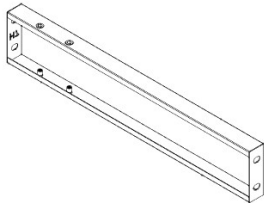


**H7 HORIZONTAL CHANNEL ASSEMBLY - A4M03623**  
(x4) 16 5/16"x2 15/16"x1" (25x75x414)

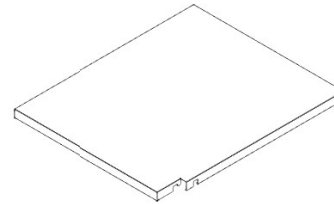

**L1 PIZZA OVEN CABINET SHELF - A4M03548**  
(x1) 23 1/4"x19 5/16"x1" (25x490.5x591)

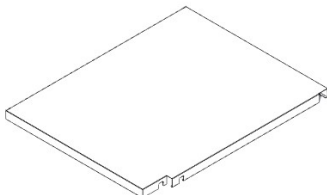


**L2 GRILL CABINET SHELF ASSEMBLY - A4M03589**  
(x1) 23 1/4"x18 3/8"x1" (25x467x591)

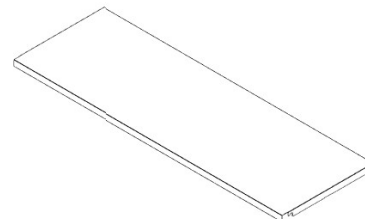


**L3 SHELF ASSEMBLY M - A4M03645**  
(x1) 45 7/8"x15 7/16"x1" (25x392.2x1166)

# OWNER'S MANUAL - PARTS IDENTIFICATION


## METAL COMPONENTS (NOT TO SCALE)

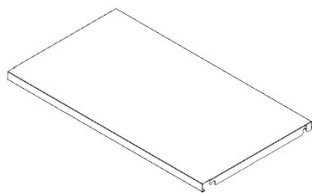


**L4 SHELF ASSEMBLY - A4M03644**  
(x2) 27 3/4"x15 7/16"x1" (25x392.2x705)

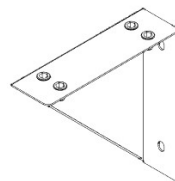


**A1 TABLE BRACKET ASSEMBLY - A4M03634**  
(x2) 6 15/16"x6 15/16"x1 15/16" (50x176x176)

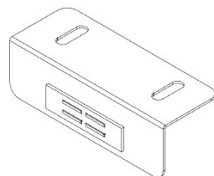


**A2 MAGNET BRACKET - A4M03026**  
(x7) 1"x1 1/4"x3 1/8" (25x31x80)

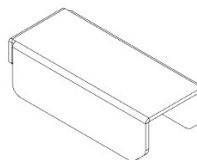


**A5 SHELF BRACKET - A4M03141**  
(x4) 5/8"x7/8"x2 1/16" (16x22x53)

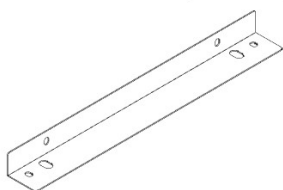


**A6 ANGLED BRACKET - A4M03053**  
(x3) 1 3/8"x1 15/16"x17 1/8" (35x50x435)

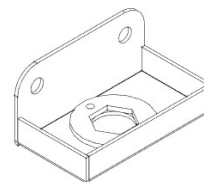


**A9 HOSE BRACKET ASSEMBLY - A4M03060**  
(x2) 1 1/4"x1 7/16"x2 9/16" (31.5x36.5x65)

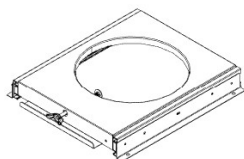


**A13 GAS TANK HOLDER ASSEMBLY - A4M03047**  
(x2) 1 15/16"x12 7/8"x14 3/4" (49x327x374)

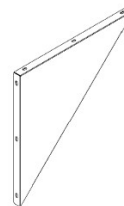


**A11 TRIANGLE PANEL - A4M03086**  
(x2) 13/16"x13 3/4"x13 3/4" (20x350x350)

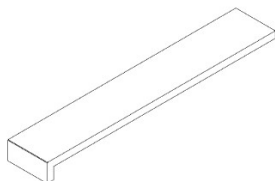


**M1 PIZZA OVEN CABINET MARBLE - A4M03553**  
(x1) 24 13/16"x4 5/16"x1 15/16" (50x109x630)

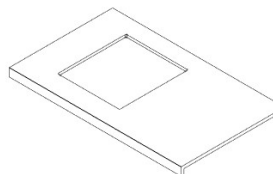


**M2 SINK CABINET MARBLE - A4M03568**  
(x1) 41 1/2"x24 15/16"x1 15/16" (49x633x1054)

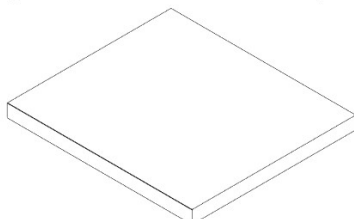


**M3 FRIDGE CABINET MARBLE - A4M03602**  
(x1) 28 1/8"x24 15/16"x1 15/16" (50x634x715)

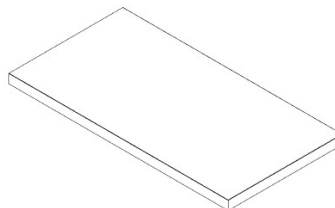

**M4 BAR TABLE MARBLE - A4M03616**  
(x2) 47 15/16"x24 15/16"x1 15/16" (50x634x1218)

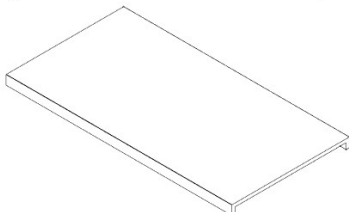


**M6 BAR TABLE MARBLE - A4M03633**  
(x1) 47 7/8"x24 7/8"x1 15/16" (49x632x1216)

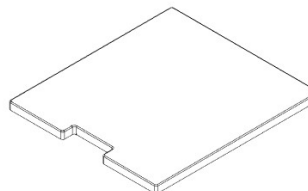


**M5 SINK COVER MARBLE - A4M03147**  
(x1) 11/16"x14 3/4"x16 5/16" (18x375x415)

# OWNER'S MANUAL - PARTS IDENTIFICATION


## METAL COMPONENTS (NOT TO SCALE)

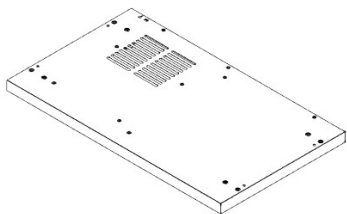


**F1 PIZZA OVEN CABINET FLOOR PANEL ASSEMBLY - A4M03538**  
(x1) 40 3/16"x23 3/8"x2 5/8" (66x594x1020)

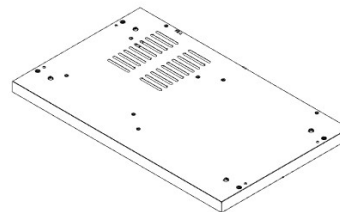


**F2 GRILL CABINET FLOOR PANEL ASSEMBLY - A4M03048**  
(x1) 2 5/8"x23 3/8"x38 1/4" (66x594x972)

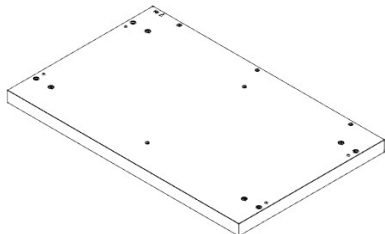


**F3 SINK CABINET FLOOR PANEL ASSEMBLY - A4M03560**  
(x1) 37 3/16"x23 3/8"x2 5/8" (66x594x944)

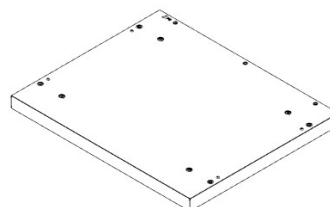


**F4 FRIDGE CABINET FLOOR PANEL ASSEMBLY - A4M03595**  
(x1) 28 1/8"x23 3/8"x2 5/8" (66x594x715)

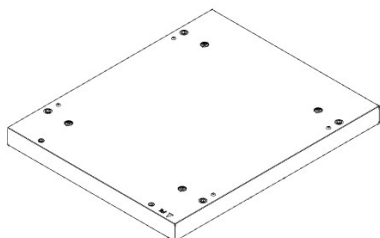

**F5 FLOOR PANEL ASSEMBLY - A4M03611**  
(x2) 23 3/8"x19 1/8"x2 5/8" (66x486x594)

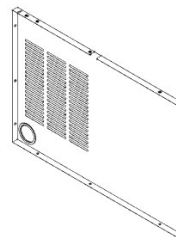


**G1 PIZZA OVEN CABINET BACK PANEL ASSEMBLY - A4M03542**  
(x1) 38 3/4"x26 1/2"x1 3/16" (66x673.5x984)

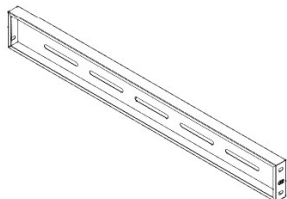

**O8 PIZZA OVEN VENTILATION PANEL - A4M03078**  
(x1) 1 3/16"x3 3/4"x31 7/16" (30x95x798)




**G3 SINK CABINET BACK PANEL ASSEMBLY - A4M03564**  
(x1) 34 5/16"x33 3/8"x1 3/16" (30x847.2x872)

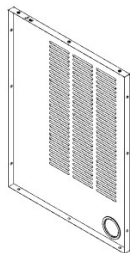


**G4 FRIDGE CABINET BACK PANEL ASSEMBLY - A4M03599**  
(x1) 25 5/16"x33 3/8"x1 3/16" (30x847.2x864)



**G5 BACK PANEL ASSEMBLY - A4M03624**  
(x2) 33 3/8"x16 5/16"x1 3/4" (45x414x847.2)

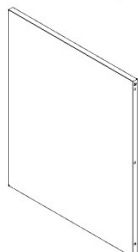


**G6 BACK PANEL - A4M03631**  
(x2) 34"x27 3/4"x1" (25x705x864)

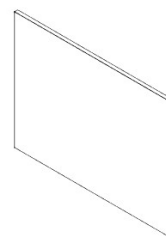


**G7 BACK PANEL - A4M03629**  
(x1) 45 7/8"x34"x1" (25x864x1166)

# OWNER'S MANUAL - PARTS IDENTIFICATION


## METAL COMPONENTS (NOT TO SCALE)

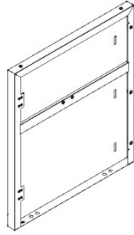


**S1 PIZZA OVEN CABINET SIDE PANEL ASSEMBLY - A4M03540**  
(x1) 26 9/16"x23 3/8"x1 3/8" (35x594x675)

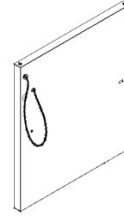


**S2 PIZZA OVEN CABINET SIDE PANEL ASSEMBLY M - A4M03545**  
(x1) 26 1/2"x23 3/8"x1 3/8" (35x593x673.5)




**S3 SINK CABINET SIDE PANEL ASSEMBLY L - A4M03562**  
(x1) 33 3/8"x23 3/8"x1 3/8" (35.00x594.00x848.20)




**S4 SINK CABINET SIDE PANEL ASSEMBLY R - A4M03563**  
(x1) 33 3/8"x23 3/8"x2 5/8" (67x594x848.20)




**S5 SINK CABINET SIDE PANEL ASSEMBLY M - A4M03567**  
(x1) 33 3/8"x23 3/8"x2 3/16" (56.2x593x847)

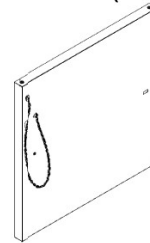


**S6 GRILL CABINET SIDE PANEL ASSEMBLY M - A4M03586**  
(x1) 23 3/8"x22 7/8"x1 3/8" (35x581x593)

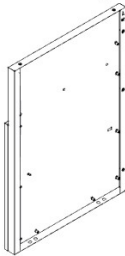


**S7 FRIDGE CABINET SIDE PANEL ASSEMBLY L - A4M03597**  
(x1) 33 7/16"x23 3/8"x2 1/16" (53x594x849.7)




**S8 FRIDGE CABINET SIDE PANEL ASSEMBLY R - A4M03598**  
(x1) 33 3/8"x23 3/8"x1 15/16" (50x594x848.20)

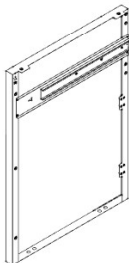


**S9 SIDE PANEL ASSEMBLY - A4M03638**  
(x1) 33 3/8"x23 3/8"x1 15/16" (50x594x848.2)

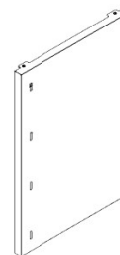

**S10 SIDE PANEL ASSEMBLY - A4M03613**  
(x1) 33 3/8"x23 3/8"x1 15/16" (50x594x848.2)

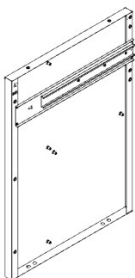


**S11 SIDE PANEL ASSEMBLY - A4M03614**  
(x1) 33 3/8"x23 3/8"x1 15/16" (49.2x594x848.2)

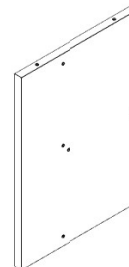


**S12 SIDE PANEL ASSEMBLY - A4M03637**  
(x1) 33 3/8"x23 3/8"x1 15/16" (49.2x594x848.2)

# OWNER'S MANUAL - PARTS IDENTIFICATION


## METAL COMPONENTS (NOT TO SCALE)

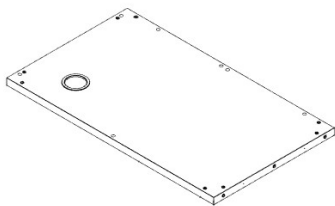


**T1 PIZZA OVEN CABINET TABLETOP ASSEMBLY - A4M03543**  
(x1) 40 3/16"x23 3/8"x1 1/4" (32x594x1020)

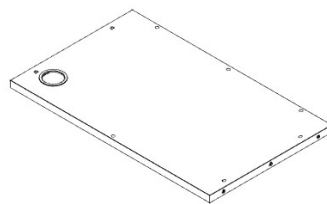


**T2 GRILL TABLETOP ASSEMBLY - A4M03057**  
(x1) 1 1/4"x23 3/8"x38 3/16" (32x594x970)

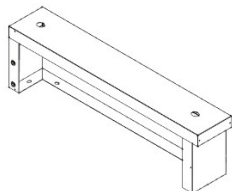


**T3 PIZZA OVEN CABINET MARBLE PANEL ASSEMBLY R - A4M03551**  
(x1) 612x4 5/16"x6 3/4" (109x172.2x612)

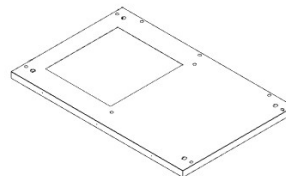


**T4 SINK CABINET TABLETOP FRAME - A4M03566**  
(x1) 37 3/16"x24 1/8"x1 1/4" (32x612x944)

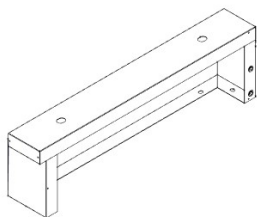


**T5 PIZZA OVEN CABINET MARBLE PANEL ASSEMBLY L - A4M03549**  
(x1) 24 1/8"x4 5/16"x6 3/4" (109x172.2x612)

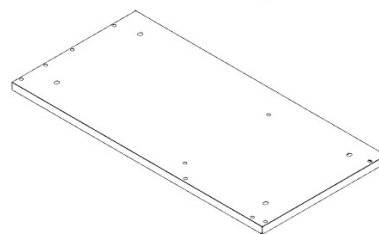


**T6 TABLETOP PANEL ASSEMBLY - A4M03615**  
(x1) 47 3/16"x23 3/8"x1 1/4" (32x593x1199)

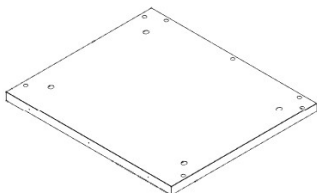


**T7 FRIDGE CABINET TABLETOP - A4M03641**  
(x1) 27 3/8"x24 1/8"x1 1/4" (32x612x696)

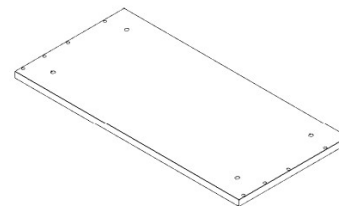


**T8 TABLETOP PANEL - A4M03625**  
(x1) 47 7/8"x23 3/8"x1 1/4" (32x593x1216)

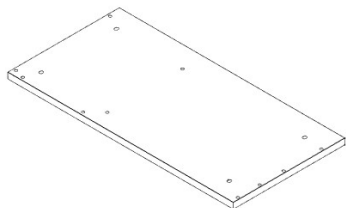


**T9 TABLETOP PANEL ASSEMBLY - A4M03639**  
(x1) 47 3/16"x23 3/8"x1 1/4" (32x593x1199)

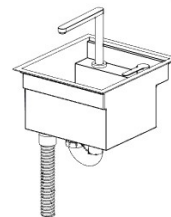

**A16 SINK ASSEMBLY - A4M03143**  
(x1) 15 1/8"x15 5/16"x16 7/8" (384x389x429)

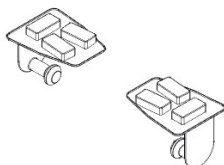

**A4M02290 MAGNETIC PAPER TOWEL HOLDER**  
(x1)

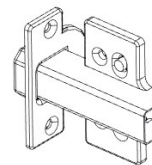


**A4M03025 FULL OVERLAY HINGE**  
(x14)




**A4M03151 GARDEN HOSE ADAPTER**  
(x1)

# OWNER'S MANUAL - PARTS IDENTIFICATION


METAL COMPONENTS (NOT TO SCALE)

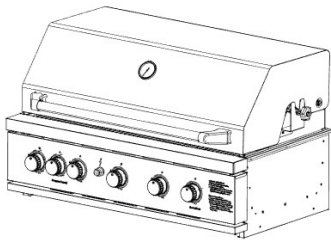


**9240025 OUTDOOR KITCHEN GRILL KIT**  
(x1)

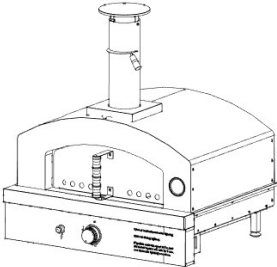

**9240018 OUTDOOR KITCHEN PIZZA OVEN**  
(x1)

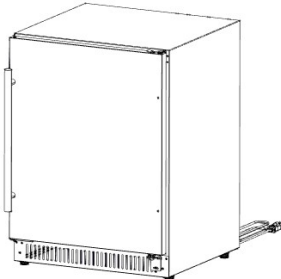


**9240162 OUTDOOR KITCHEN FRIDGE - RIGHT OPEN**  
(x1)

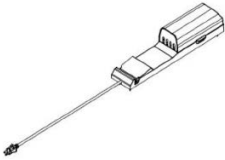


**9205413 ELECTRICAL ENCLOSURE**  
(x1)

# OWNER'S MANUAL - PARTS IDENTIFICATION


## HARDWARE COMPONENTS




**H101185 | PHILLIPS FLAT HEAD**  
(x84) | 8-32x.5 SCREW



**H101287 | PAN HEAD SCREW**  
(x6) | 8-32x1" SS




**H101289 | PAN HEAD SCREW**  
(x64) | 8-32x1/2" SS




**H101292 | TORX PAN HEAD**  
(x30) | 1/4-20x13/32"




**H101293 | TORX PAN HEAD**  
(x5) | 1/4-20x1 3/8"

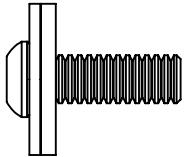


**H101202 | TORX PAN HEAD**  
(x498) | 1/4-20x3/4 ASSY

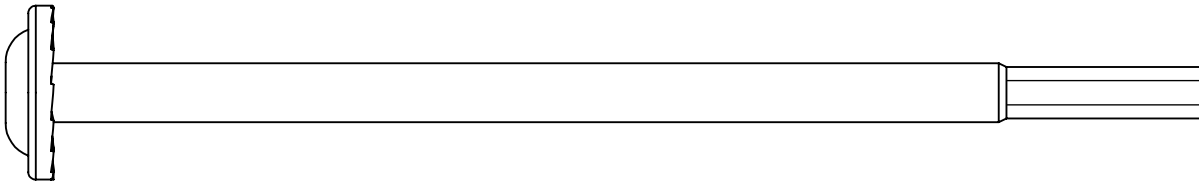


**H101230 | BOLT WH 5/16x6 S.S.**  
(x2) |




**H101294 | HEX DRIVER**  
(x1) |




**H100147 | TORX BIT**  
(x1) | T-30




**H101100 | MAGNETIC DRIVER**  
(x1) |




**H101132 | TORX SOCKET SCREW SHORT**  
(x50) | 1/4-20




**H101103 | TORX SOCKET SCREW**  
(x125) |




**H101117 | SCREW WOODGRIP**  
(x140) | 10-16x3/4




**H101116 | SCREW SELF TAPPING**  
(x40) | 1/4x1 BLK




**H100120 | CONCRETE ANCHOR**  
(x8) |




**H101307 | SHOULD BOLT**  
(x22) | 8-32x30mm SS

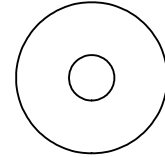


**H101054 | SEALANT WASHER**  
(x34) |

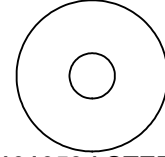


**H101053 | STEEL WASHER**  
(x34) | 6x20

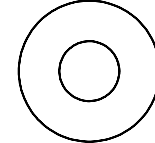


**H100630 | WASHER FLAT**  
(x8) | 8x19 BLK

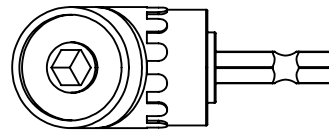

**H101114 | RIGHT ANGLE DRILL ADAPTER**  
(x1) |



**H101106 | SOCKET DRIVER**  
(x1) |

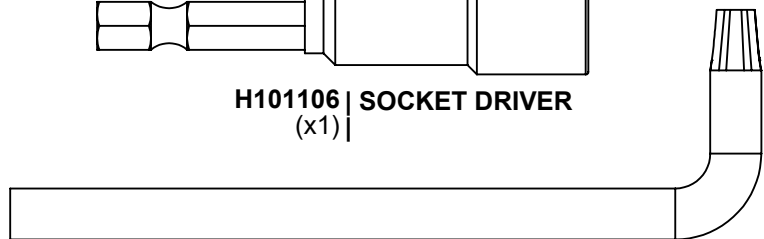

**H100114 | TORX WRENCH**  
(x1) | T-30

# PRE-ASSEMBLY STEP 1 - SORTING PARTS


It is critical for ease of assembly that you take the time to sort and organize the metal and hardware.

---

## METAL PARTS:


- Organize metal parts by the three-digit, alpha-numeric part label on each bag (ex. A01).
- If there are multiple parts with the same part label, stack those pieces together.
- Part labels can be found on the bags of the parts.
- Keep parts in bags until required step.
- Allow yourself plenty of room - the metal pieces can take up a significant amount of space.

**NOTE: CARTONS ARE NOT ORGANIZED BY PART OR STEP NUMBER.**

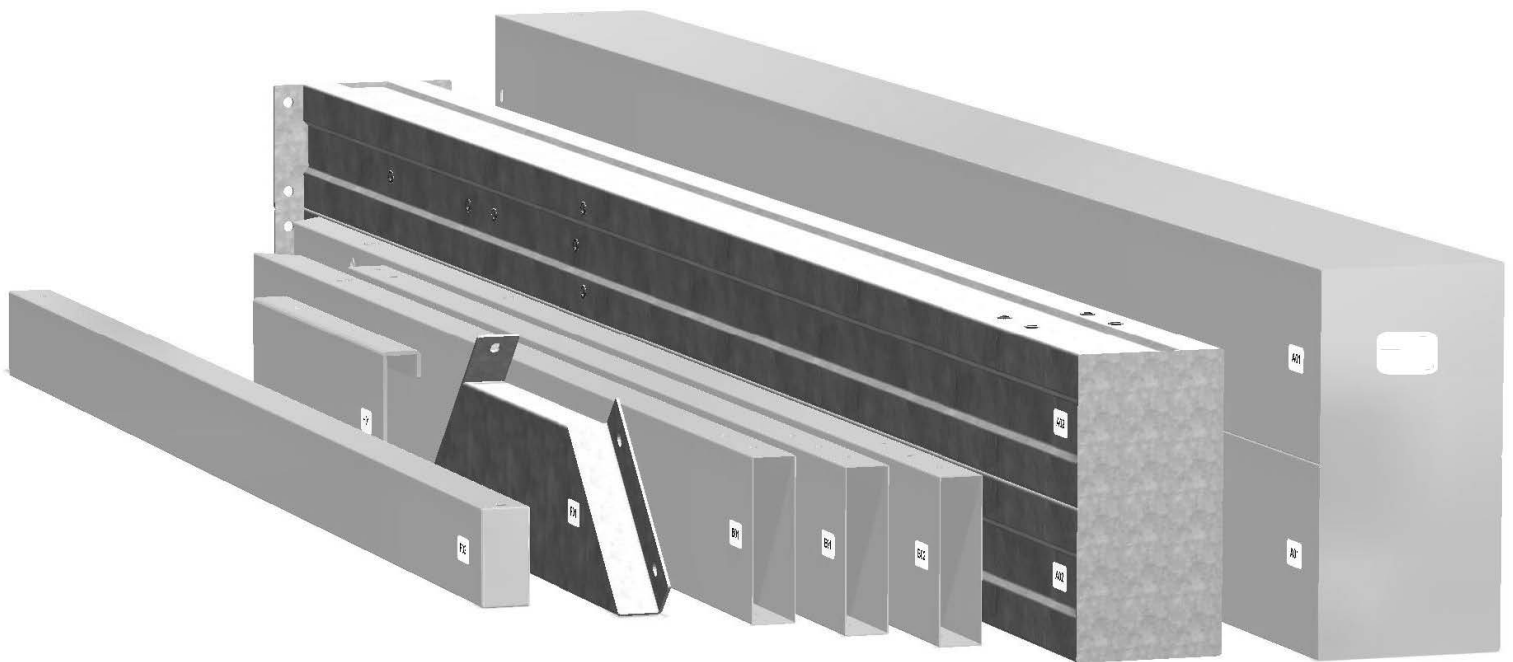

## HARDWARE PARTS:

- We recommend that you have a separate table to organize the hardware.
- Hardware bags are printed with a seven-digit, alpha-numeric part number.
- You can organize your hardware by part number or group by hardware type (e.g. bolts, nuts, etc.).
- During assembly you only need to reference the last four digits of the number.

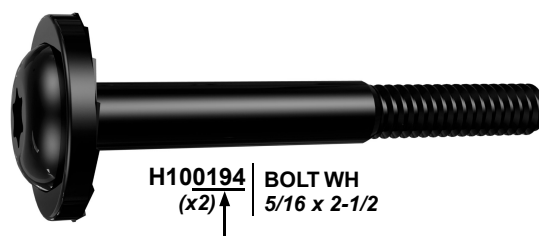


# PRE-ASSEMBLY STEP 2 - TOOLS REQUIRED



Cordless Drill  
or Electric Drill




Drill  
Attachments:  
Phillips Head

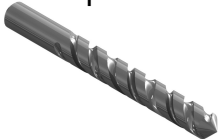

1/8", 3/16", 3/8" &  
7/16" Drill Bits



Phillips Screw Driver



Open End  
Wrenches  
1/2" & 9/16"




3/8" Drive Ratchet, 1/2" &  
7/16" STD Sockets 1/2" & 7/16"  
Deep Sockets




Claw Hammer



Rubber Mallet  
- Optional

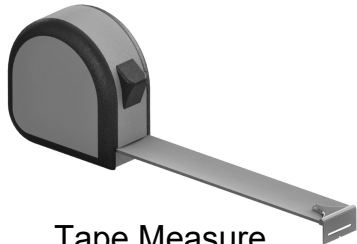

Tape Measure

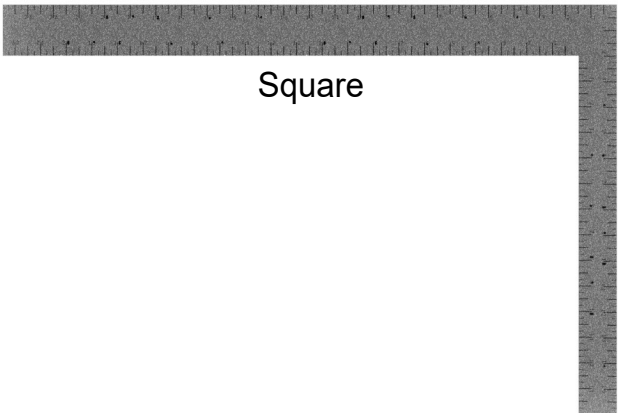

Square




Level 24"

# PRE-ASSEMBLY STEP 3 - CHOOSE YOUR ASSEMBLY METHOD

There are several types of assembly instructions available to you.


1. Printed Assembly Manual included with your set
2. BILT APP - 3D interactive instructions
3. Combination of the Printed Manual and BILT APP (Note: Step numbers can differ between the two methods)



**BILT.**<sup>®</sup>


Scan for easy  
**3D instructions**

Download the BILT app  
before you begin



Download on the  
App Store

GET IT ON  
Google Play

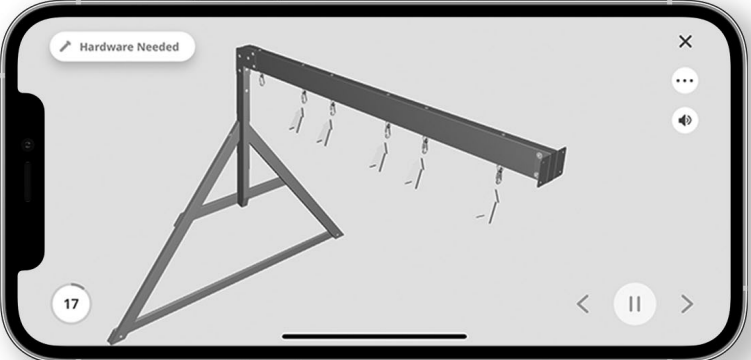

Hardware Needed

17

< || >

The image shows a smartphone screen displaying a 3D assembly instruction. The screen features a 3D model of a metal frame with a horizontal bar and several hanging components. A 'Hardware Needed' button is visible in the top left corner of the app interface. The number '17' is shown in a circle in the bottom left corner, and navigation arrows and a pause button are in the bottom right corner.

# STEP 1 - BEAM ASSEMBLY

QTY	PartNo	DESCRIPTION
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




**B04 FRONT BEAM ASSEMBLY - A4M03510**  
 (x1) 78 3/16"x5 1/4"x1 7/16" (36x134x1986)



**J1 SPLICE BRACKET - A4M02230**  
 (x1) 1 5/16"x5 3/16"x39 3/8" (33.2x131.2x1000)

- FOR EASE OF ASSEMBLY, WE RECOMMEND USING SAW HORSES FOR STEPS 1 - 12.

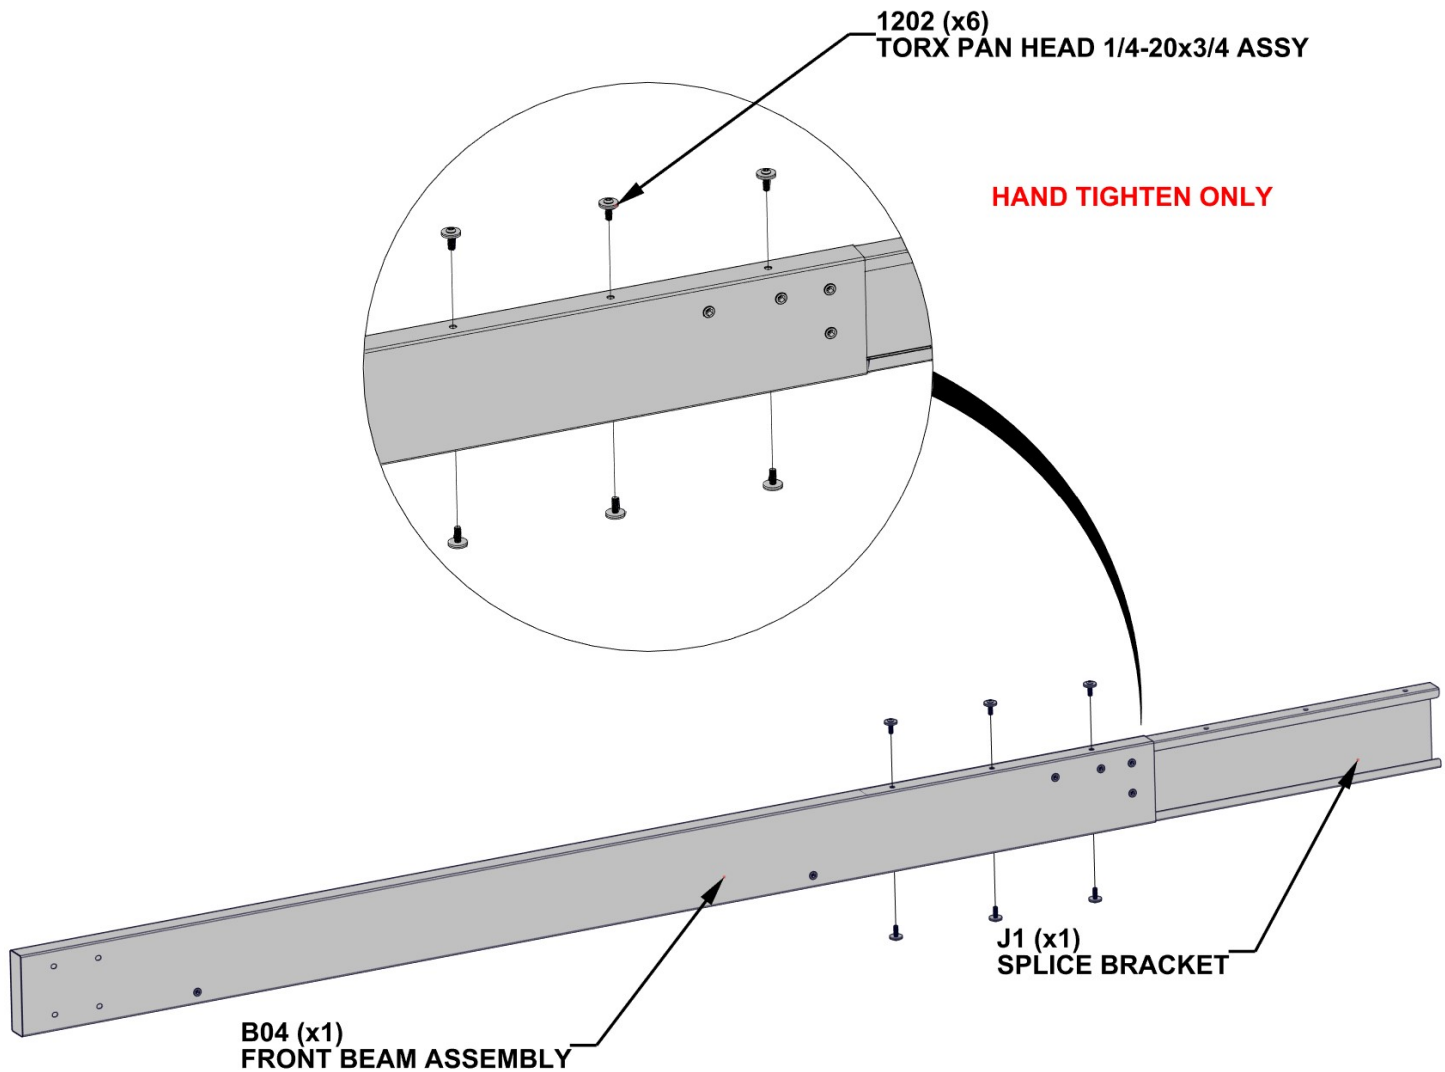

**BEAM AND SPLICE MUST BE ORIENTED AS SHOWN BELOW. SLIDE J1 INTO B04 AND LINE UP THREE HOLES TOP AND BOTTOM**


# STEP 2 - BEAM ASSEMBLY

QTY	PartNo	DESCRIPTION
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



**B03 FRONT BEAM ASSEMBLY - A4M03509**  
(x1) 78 3/16"x5 1/4"x1 7/16" (36x134x1986)

- SLIDE B03 INTO SPLICE BRACKET.  
GENTLY TAP ENDS OF ASSEMBLY WITH  
RUBBER Mallet UNTIL GAP CLOSES.

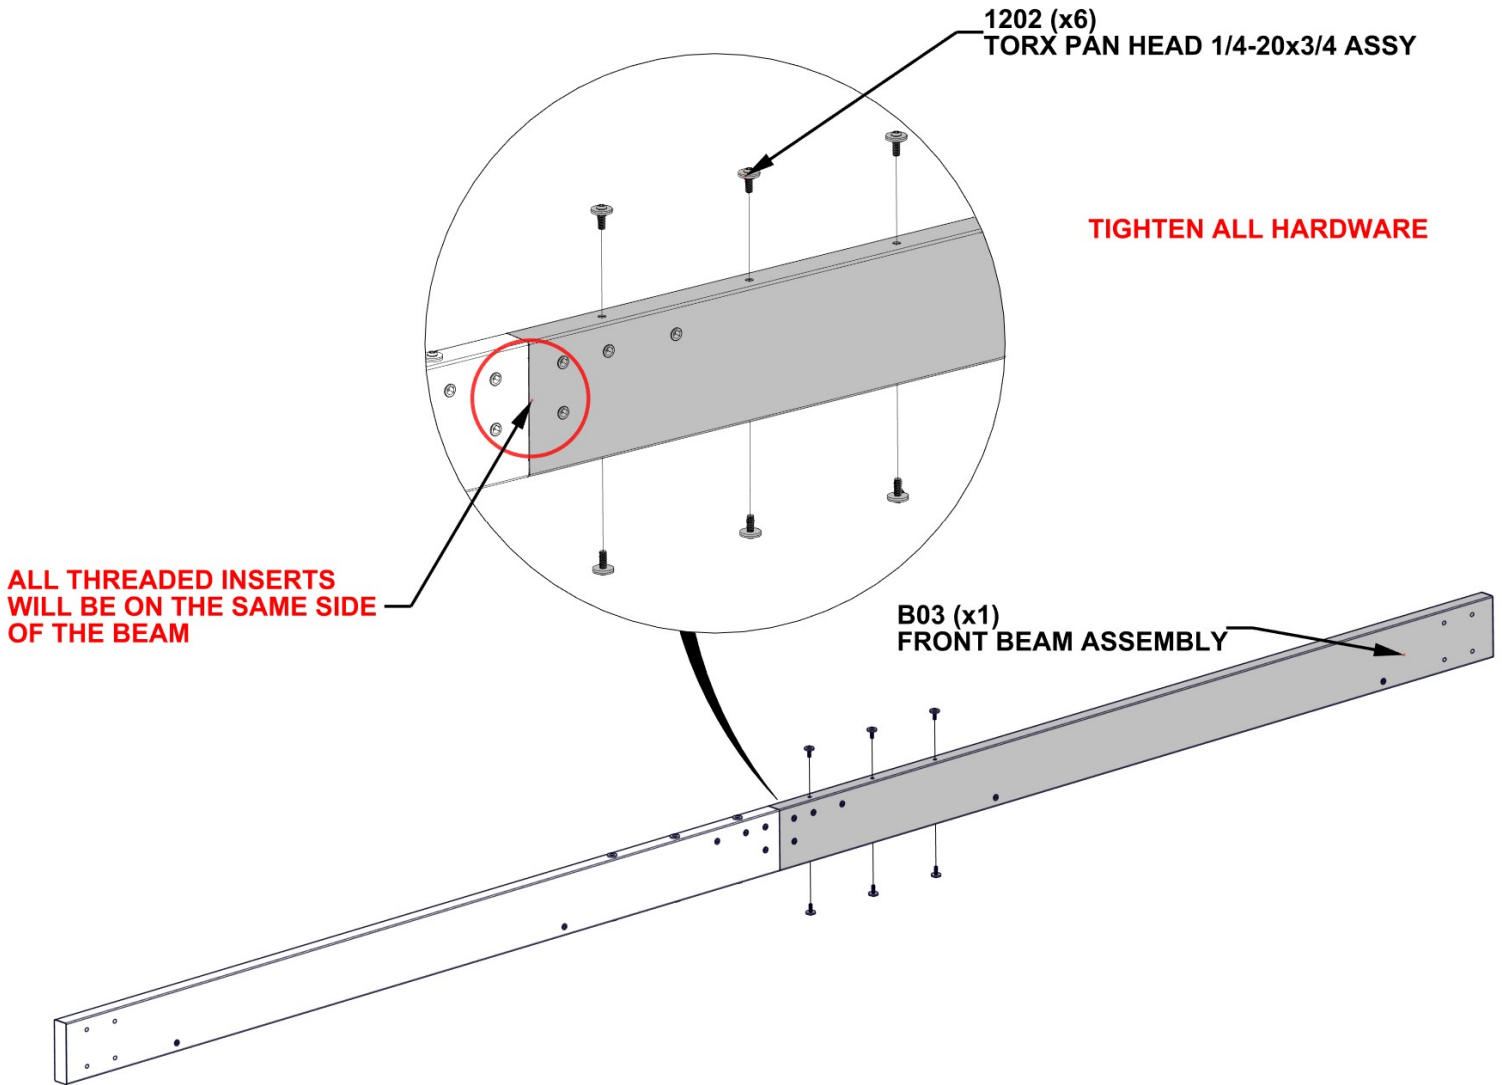

# STEP 3 - BEAM ASSEMBLY

QTY	PartNo	DESCRIPTION
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




**B06 FRONT BEAM ASSEMBLY - A4M03512**  
(x1) 72"x5 1/4"x1 7/16" (36x134x1829)



**J1 SPLICE BRACKET - A4M02230**  
(x1) 1 5/16"x5 3/16"x39 3/8" (33.2x131.2x1000)


1202 (x6)  
TORX PAN HEAD 1/4-20x3/4 ASSY

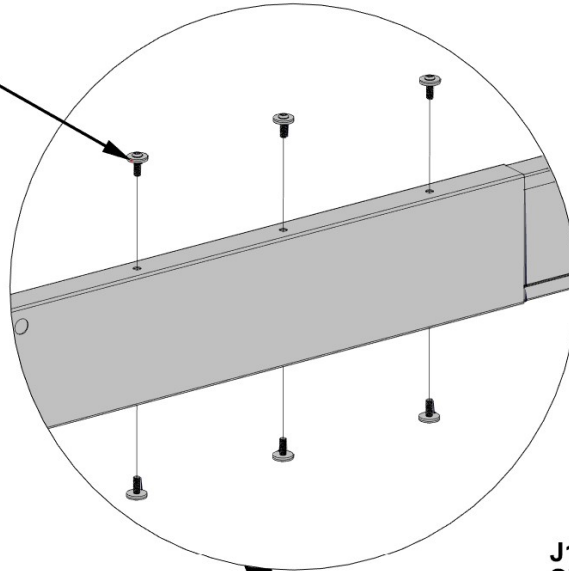

**HAND TIGHTEN ONLY**

J1 (x1)  
SPLICE BRACKET

B06 (x1)  
FRONT BEAM ASSEMBLY

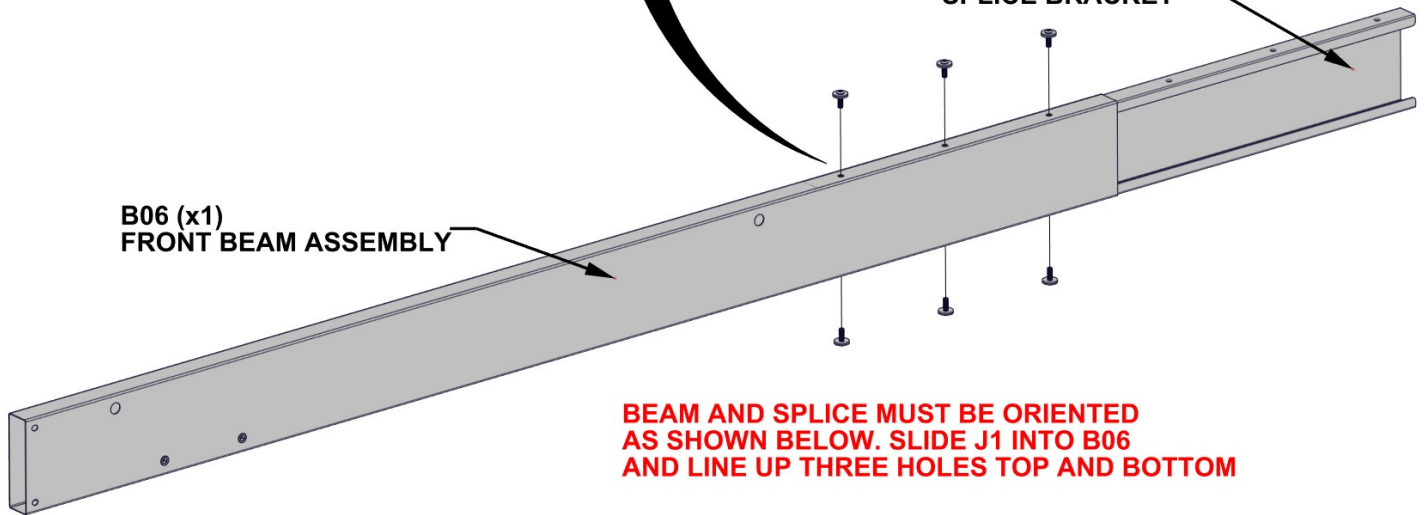

**BEAM AND SPLICE MUST BE ORIENTED AS SHOWN BELOW. SLIDE J1 INTO B06 AND LINE UP THREE HOLES TOP AND BOTTOM**

# STEP 4 - BEAM ASSEMBLY

QTY	PartNo	DESCRIPTION
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




**B05 FRONT BEAM ASSEMBLY - A4M03511**  
(x1) 72"x5 1/4"x1 7/16" (36x134x1829)


- SLIDE B05 INTO SPLICE BRACKET.  
GENTLY TAP ENDS OF ASSEMBLY WITH  
RUBBER Mallet UNTIL GAP CLOSES.

1202 (x6)  
TORX PAN HEAD 1/4-20x3/4 ASSY

**TIGHTEN ALL HARDWARE**

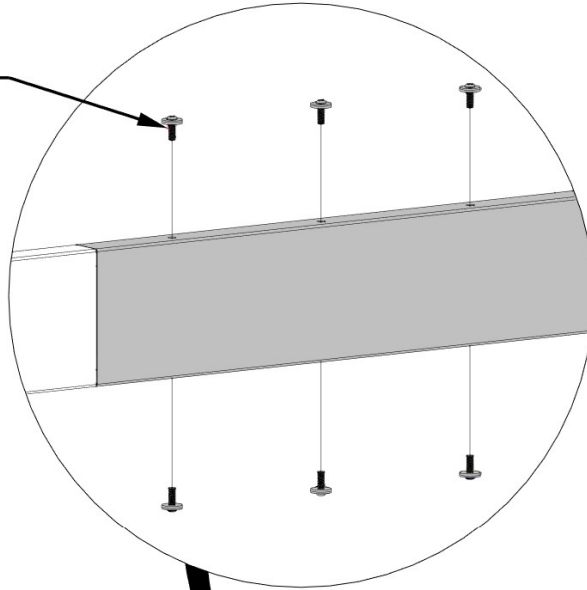


**B05 (x1)**  
**FRONT BEAM ASSEMBLY**

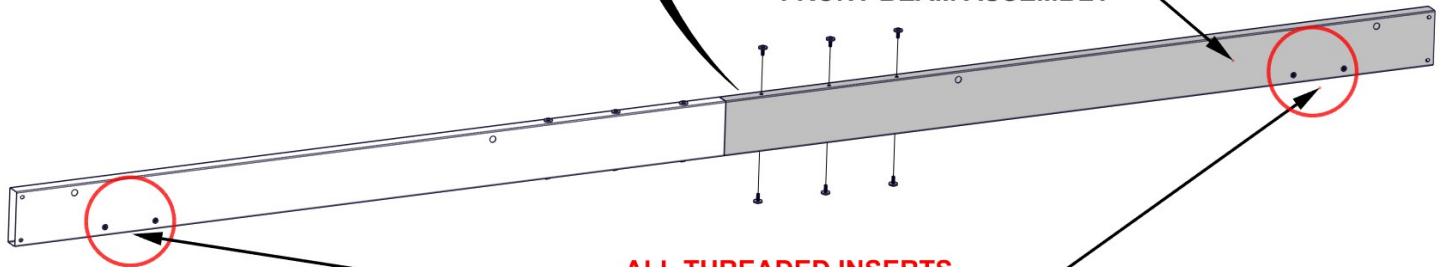

**ALL THREADED INSERTS  
WILL BE ON THE SAME SIDE  
OF THE BEAM**

# STEP 5 - BEAM ASSEMBLY

QTY	PartNo	DESCRIPTION
4	H101103	TORX SOCKET SCREW 1/4-20




UPPER BEAM ASSEMBLY STEPS 1 - 2




LOWER BEAM ASSEMBLY STEPS 3 - 4

- ALIGN THRU HOLES IN LOWER BEAM ASSEMBLY WITH THREADED INSERTS IN UPPER BEAM ASSEMBLY

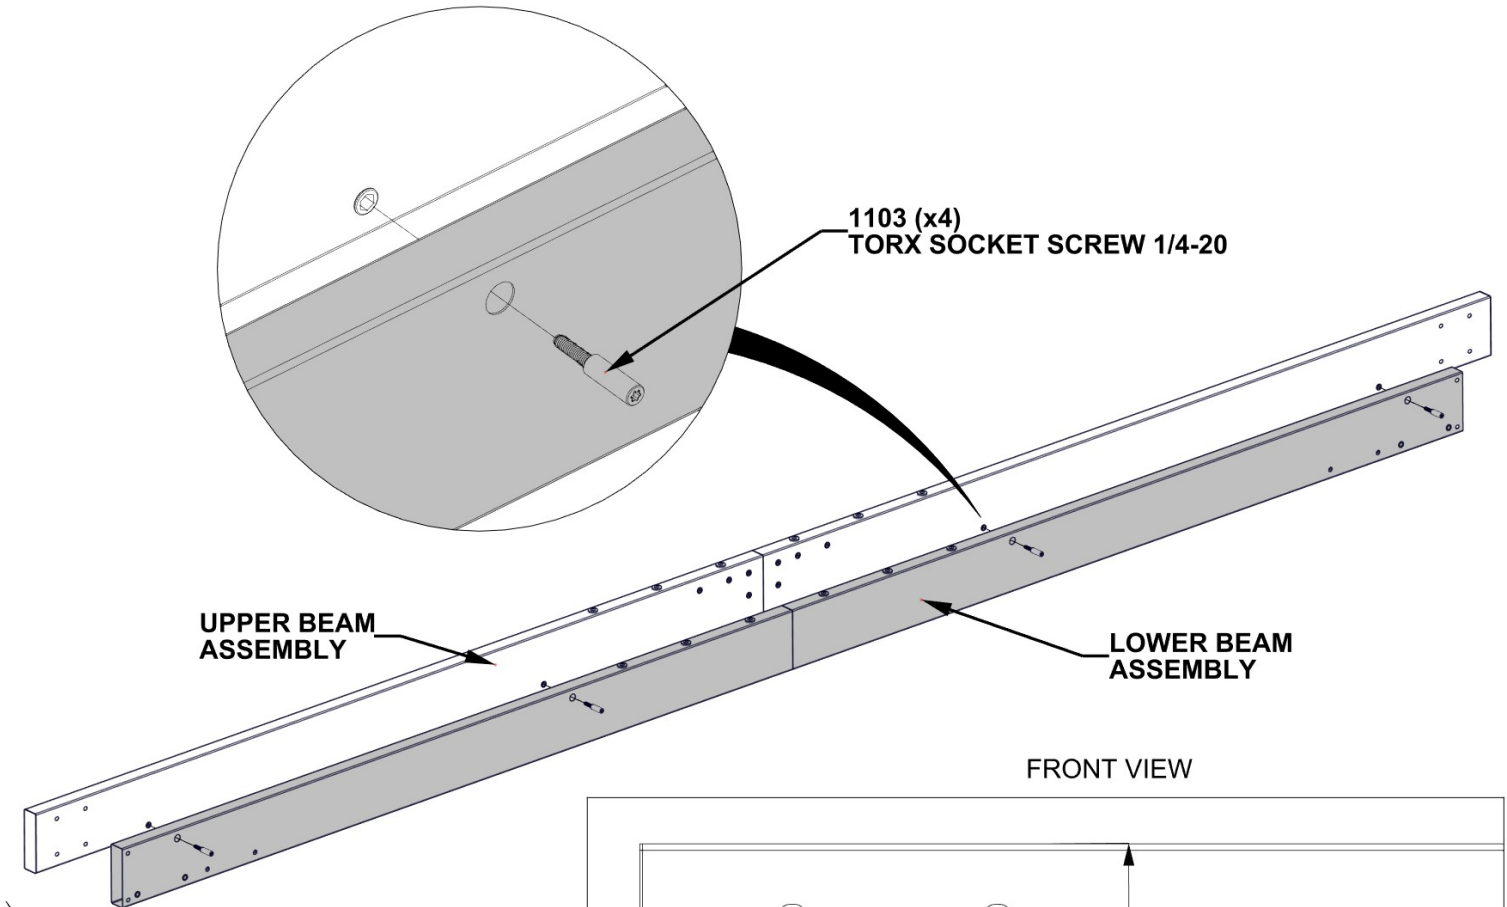

FRONT VIEW

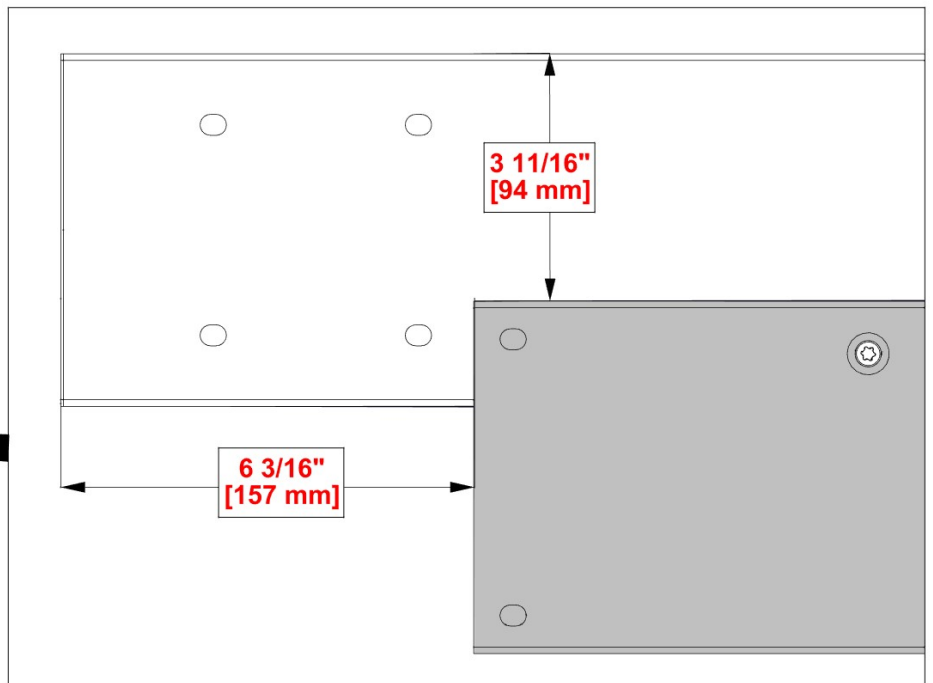


**DIMENSIONS ARE THE SAME AT BOTH ENDS AND CRITICAL TO THE BEAM ASSEMBLY**


**REPEAT BEAM ASSEMBLY  
STEPS 1 THROUGH 5**

# STEP 6 - POST ASSEMBLY


QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

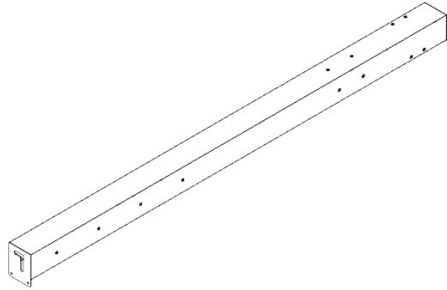

**P03 BACK POST - A4M03505**  
(x1) 89 9/16"x6 1/8"x4 3/4" (120x155x2275)




**J4 BEAM BRACKET - A4M02990**  
(x2) 1"x1 5/16"x5 1/16" (25x33.2x128)

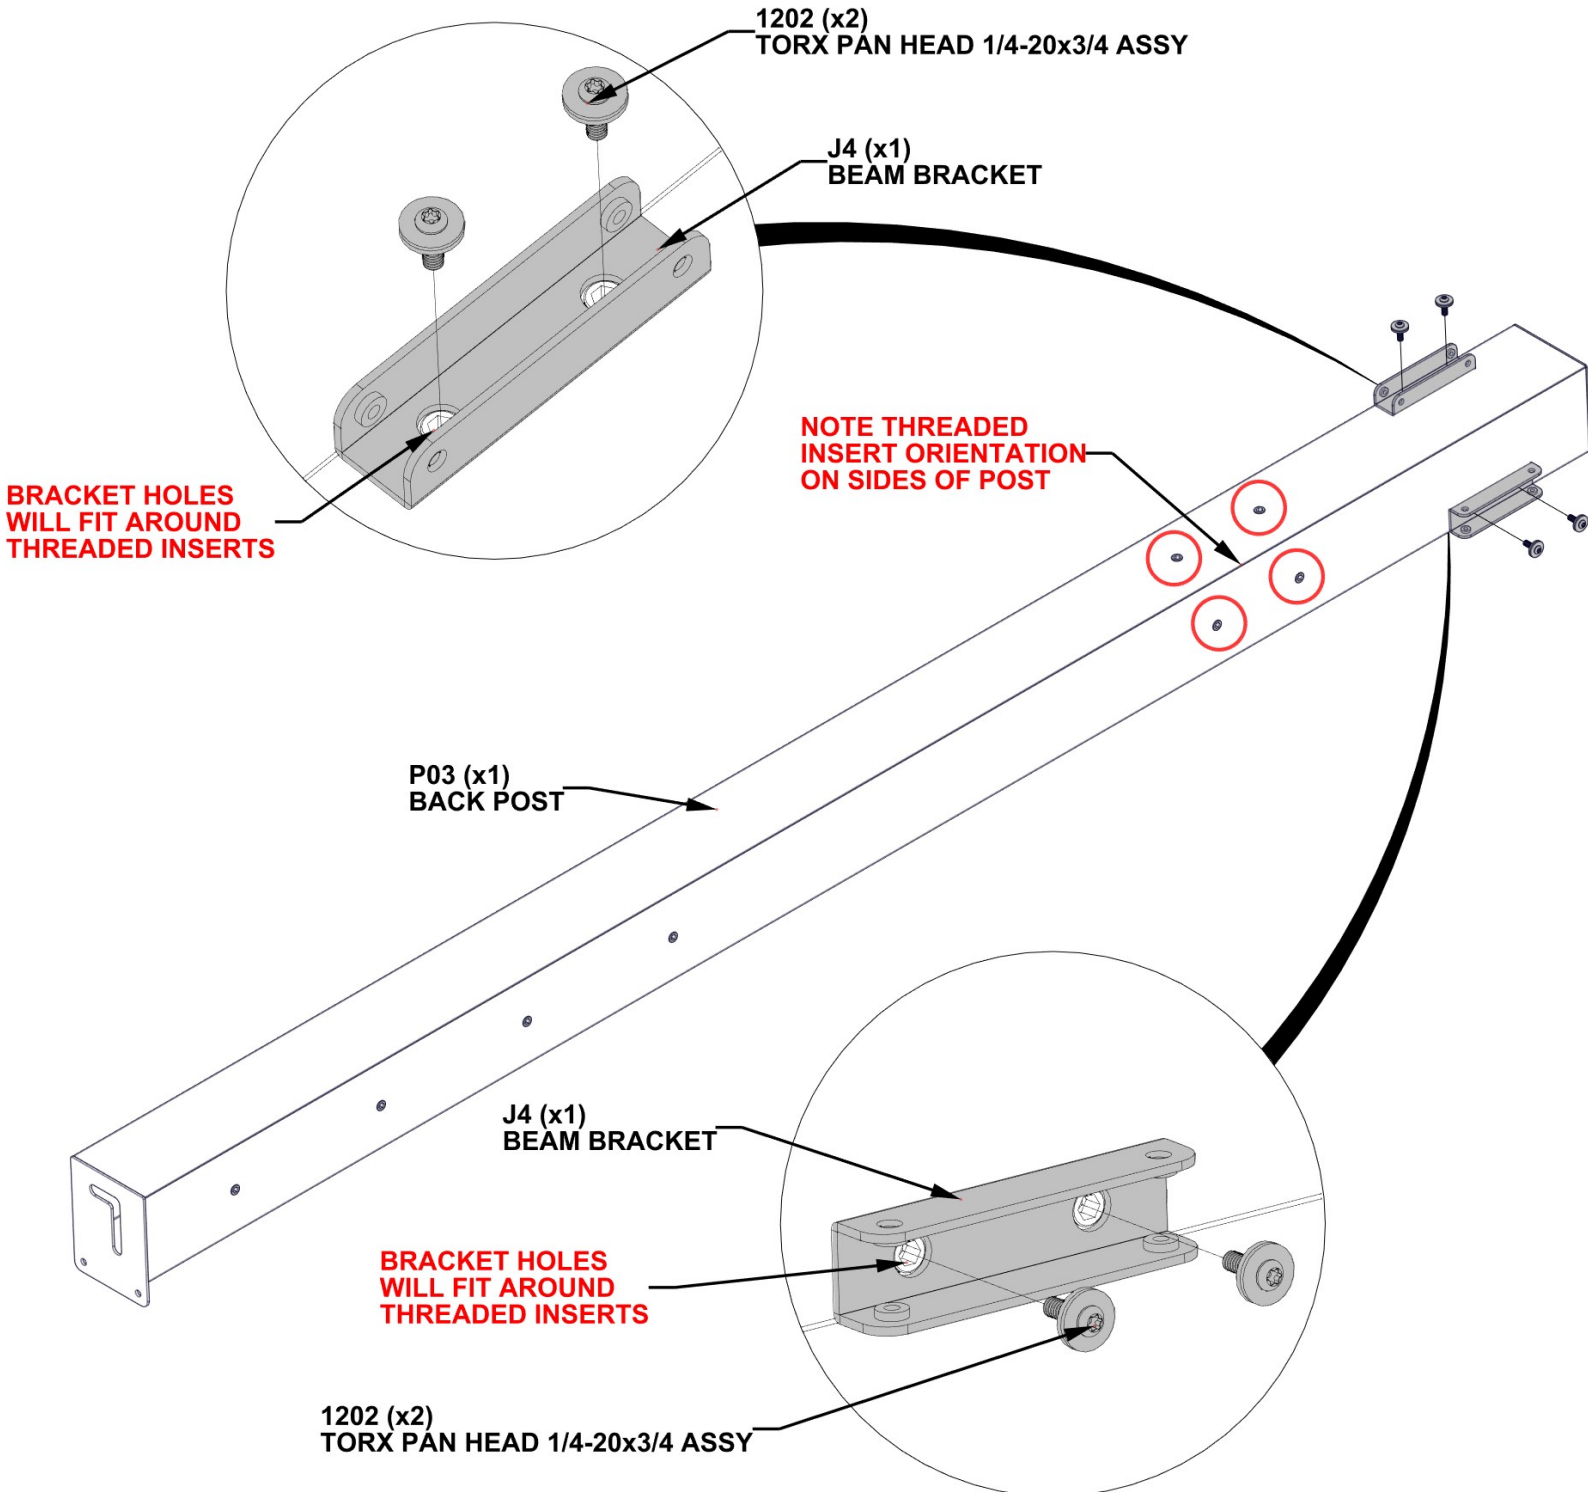


# STEP 7 - POST ASSEMBLY


QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

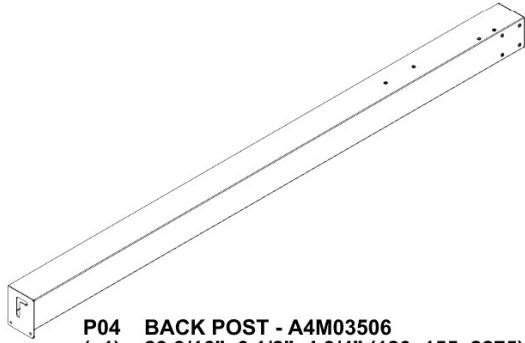


**P04 BACK POST - A4M03506**  
 (x1) 89 9/16"x6 1/8"x4 3/4" (120x155x2275)



**J4 BEAM BRACKET - A4M02990**  
 (x2) 1"x1 5/16"x5 1/16" (25x33.2x128)

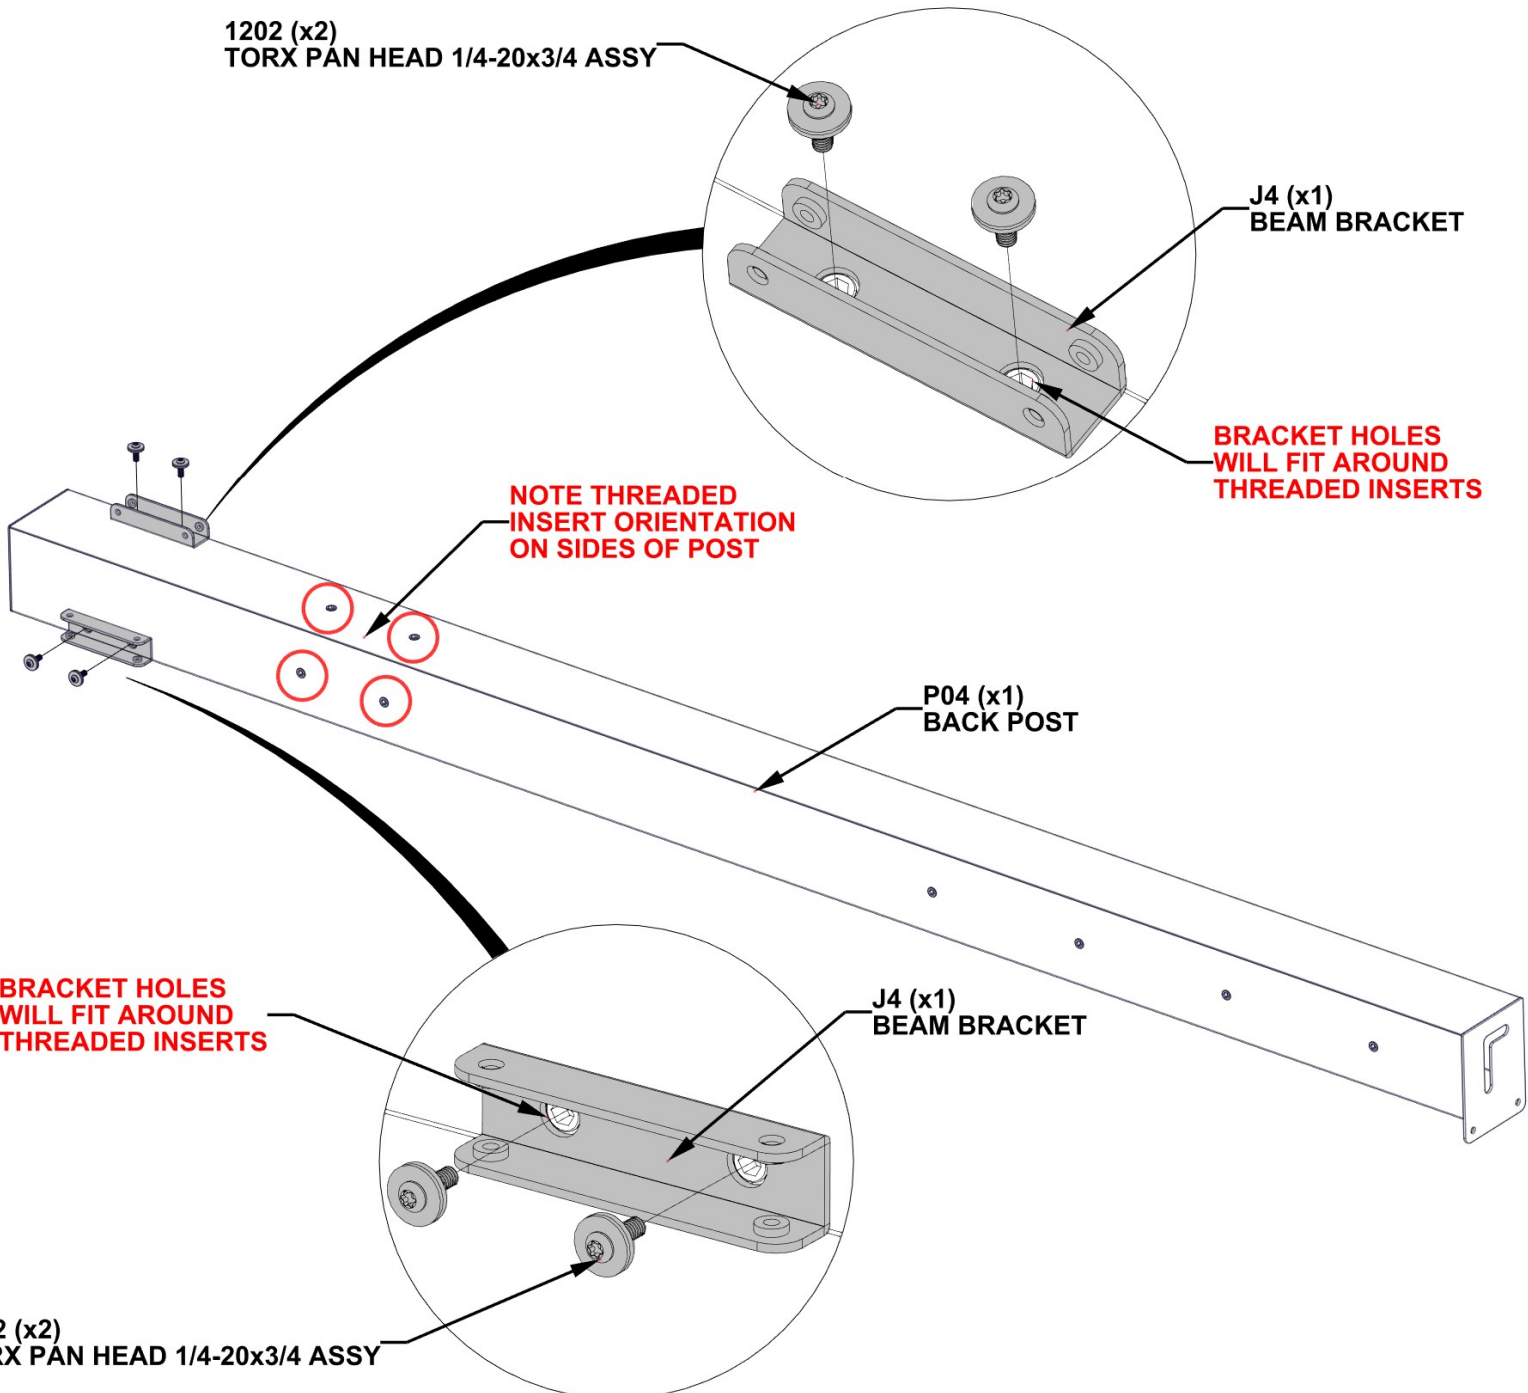


# STEP 8A - FRAME ASSEMBLY




BEAM ASSEMBLY FROM STEPS 1 - 5

- SLIDE EACH POST ASSEMBLY INTO THE BEAM ASSEMBLY FROM STEPS 1 - 5.

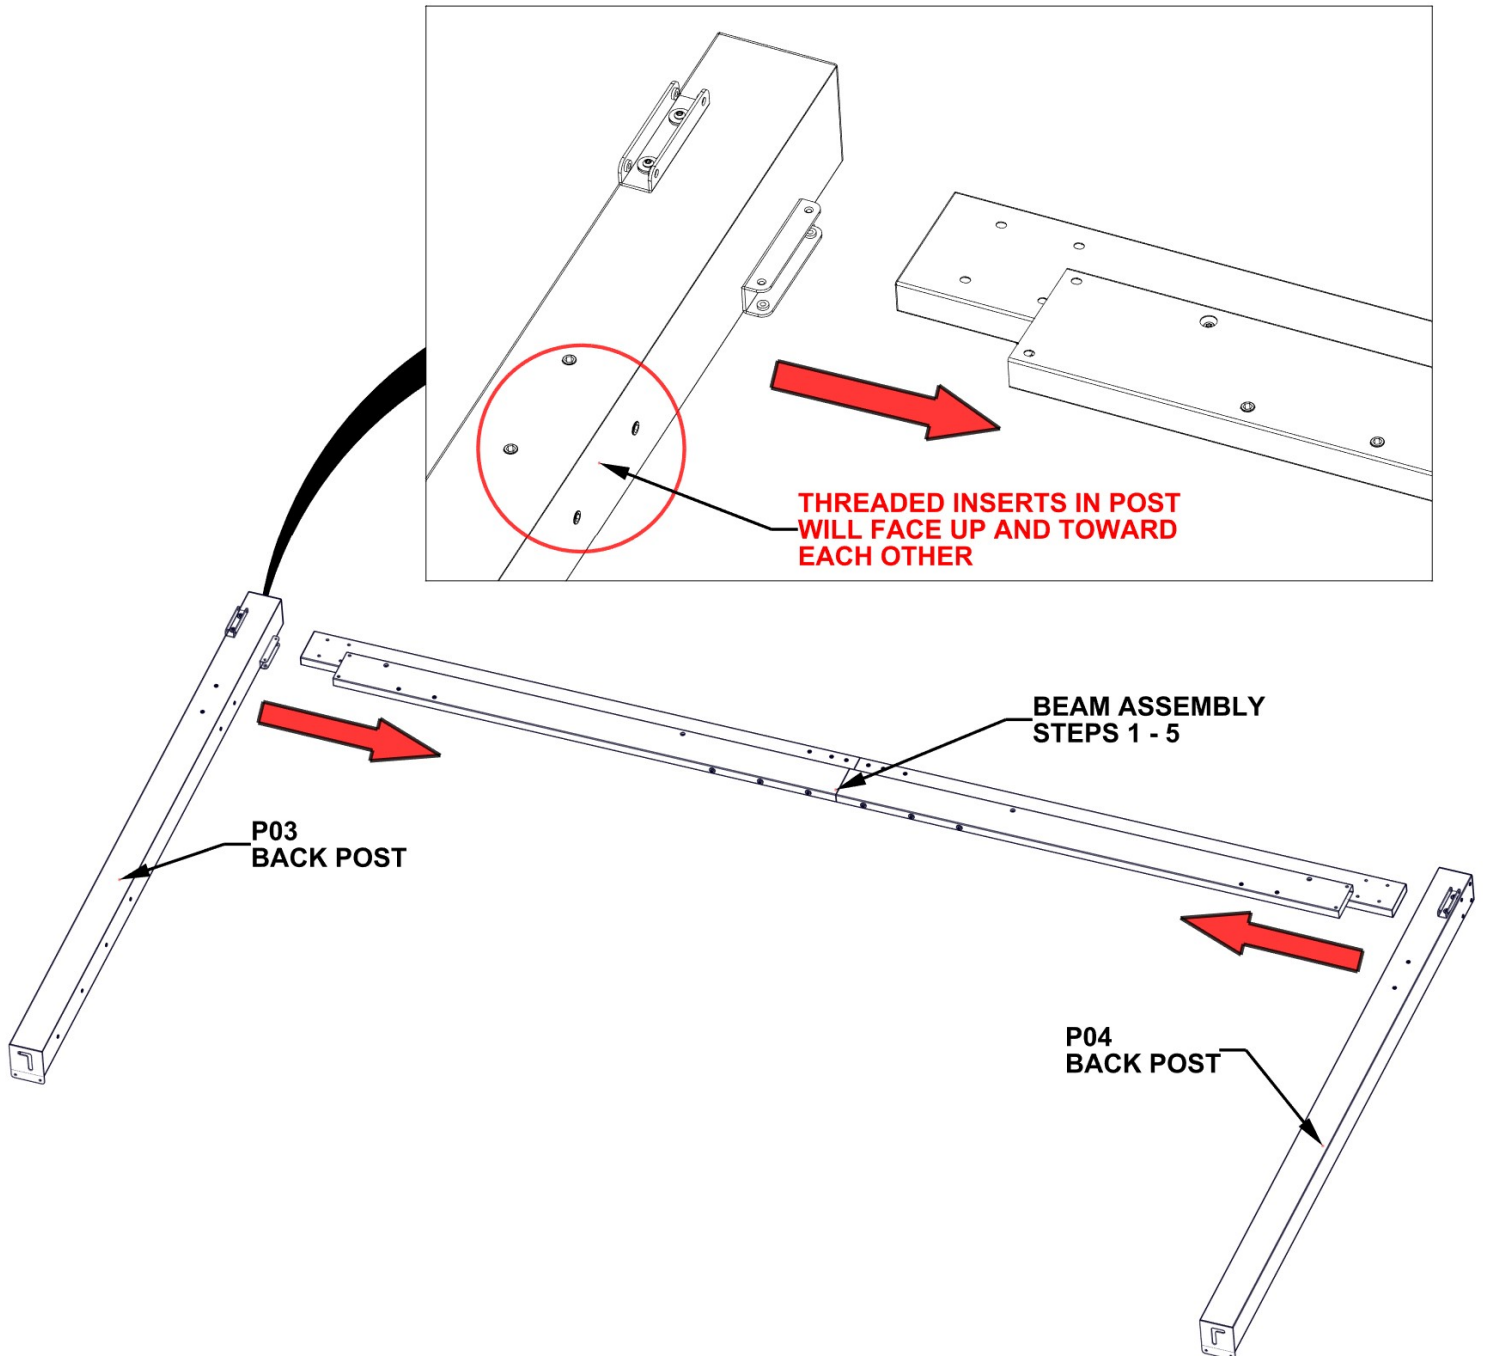

# STEP 8B - FRAME ASSEMBLY

QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

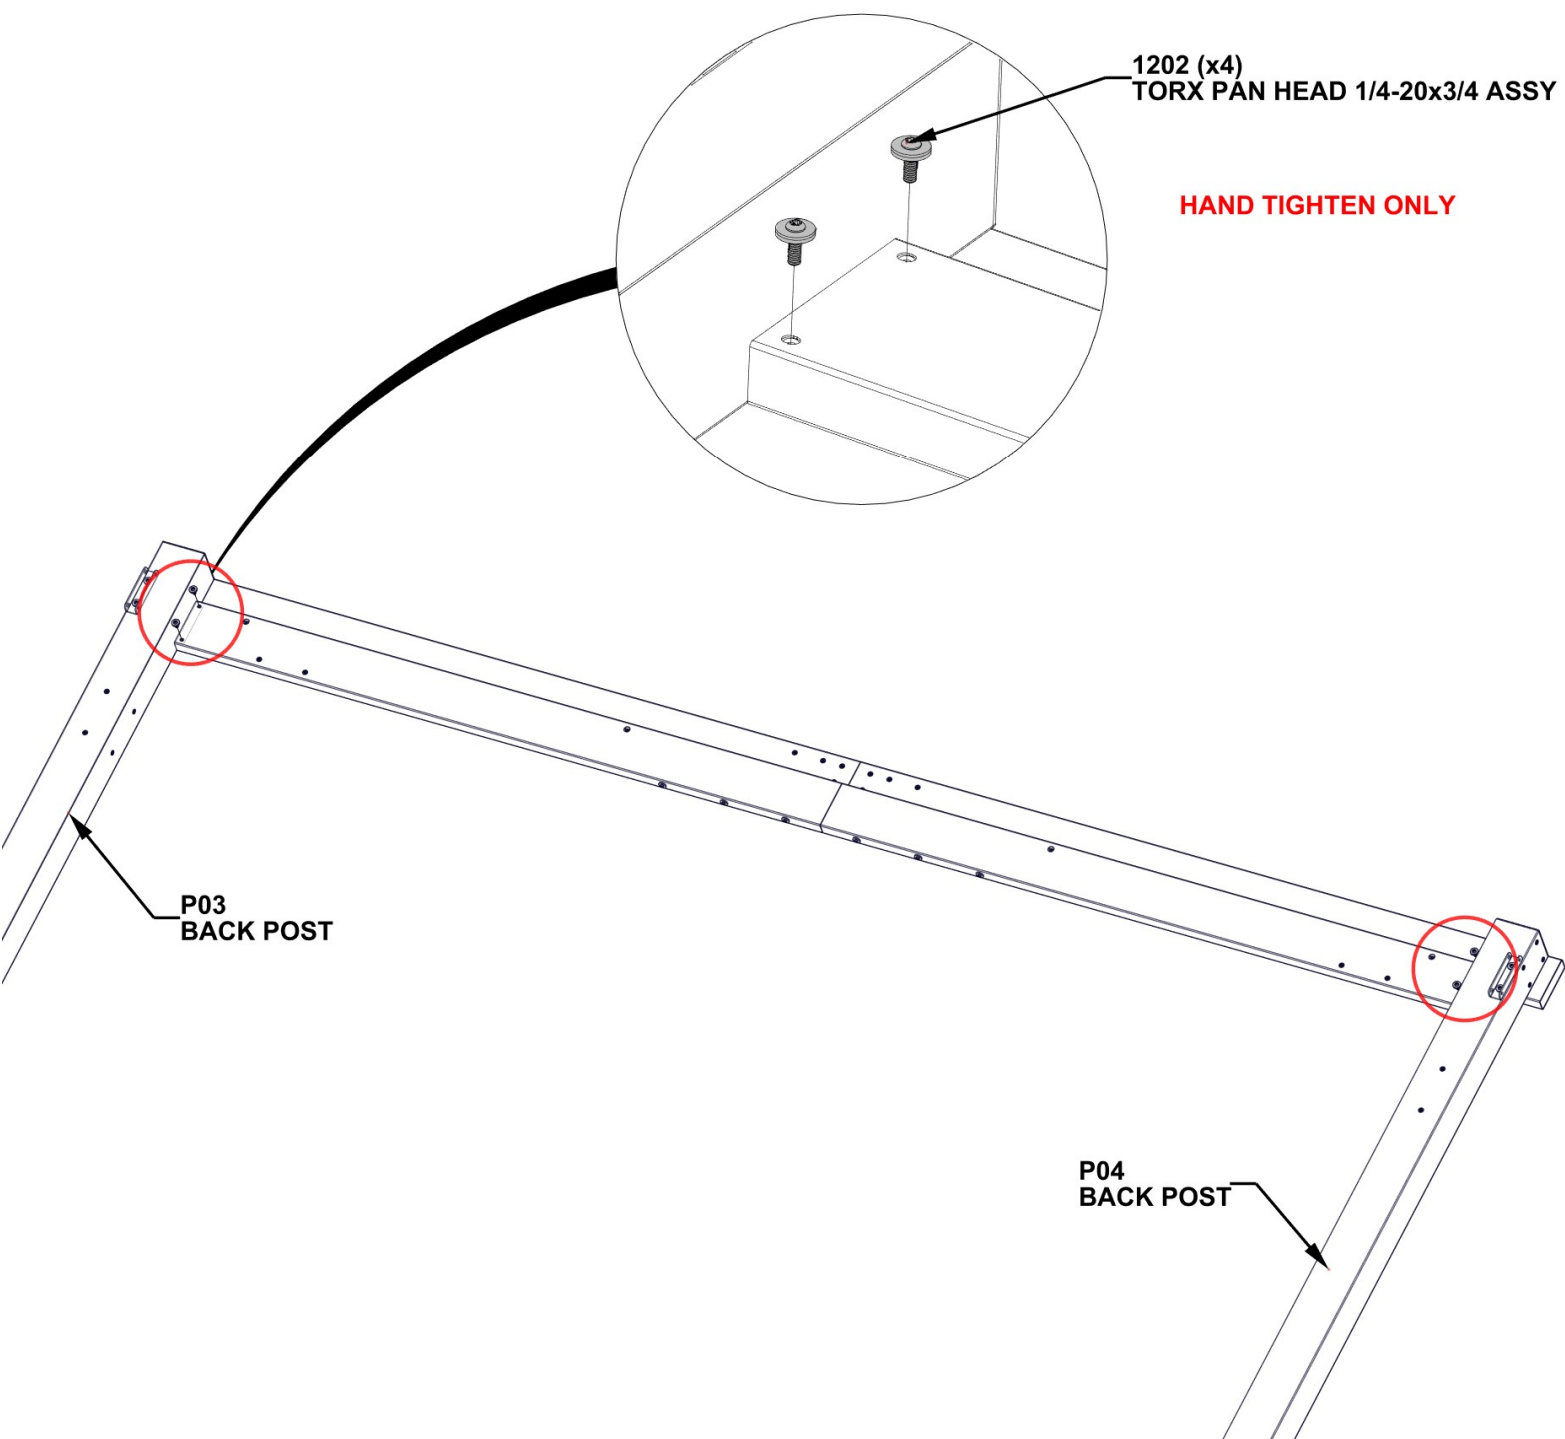

# STEP 8C - FRAME ASSEMBLY

QTY	PartNo	DESCRIPTION
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




**C01 CORBEL ASSEMBLY - A4M03525**  
(x1) 21 13/16"x5 1/4"x2 3/4" (70x134x553.5)




**C02 CORBEL ASSEMBLY - A4M03526**  
(x1) 21 13/16"x5 1/4"x2 3/4" (70x134x553.5)

- ATTACH CORBELS TO BEAM AND POST.
- SQUARE AS NEEDED BEFORE TIGHTENING ALL HARDWARE FROM PREVIOUS STEPS.

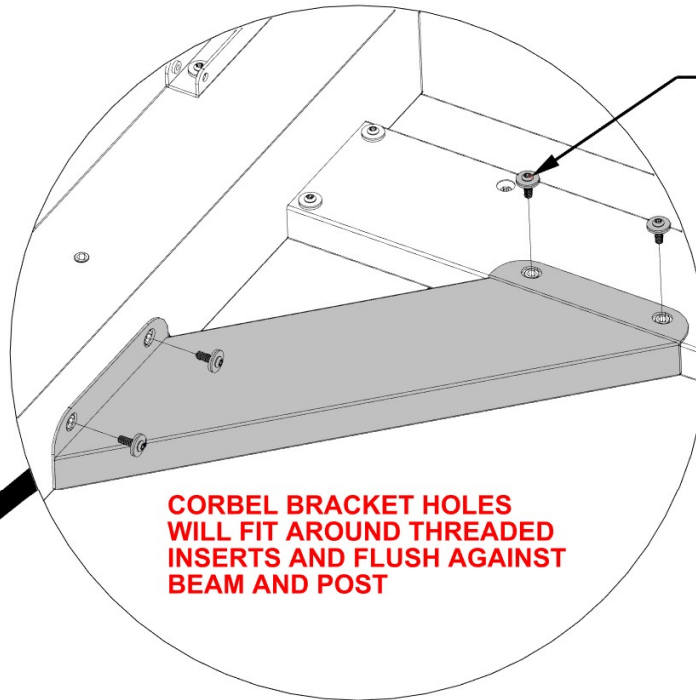

**CORBEL BRACKET HOLES WILL FIT AROUND THREADED INSERTS AND FLUSH AGAINST BEAM AND POST**

**1202 (x8)**  
**TORX PAN HEAD 1/4-20x3/4 ASSY**

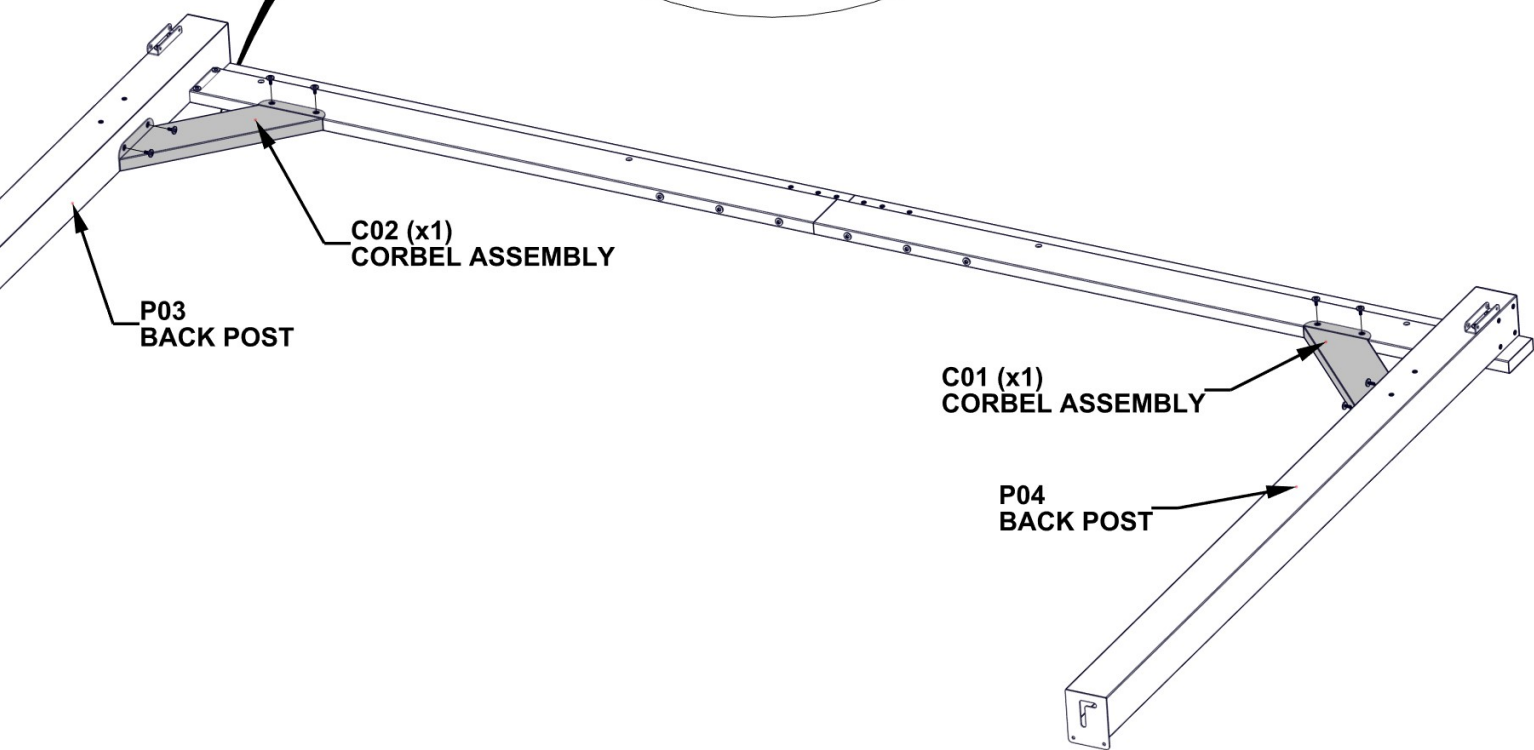

**C02 (x1)**  
**CORBEL ASSEMBLY**

**P03**  
**BACK POST**


**C01 (x1)**  
**CORBEL ASSEMBLY**

**P04**  
**BACK POST**

# STEP 8D - FRAME ASSEMBLY


QTY	PartNo	DESCRIPTION
8	H101103	TORX SOCKET SCREW 1/4-20

- WITH AN ADDITIONAL PERSON, FLIP POST AND BEAM ASSEMBLY

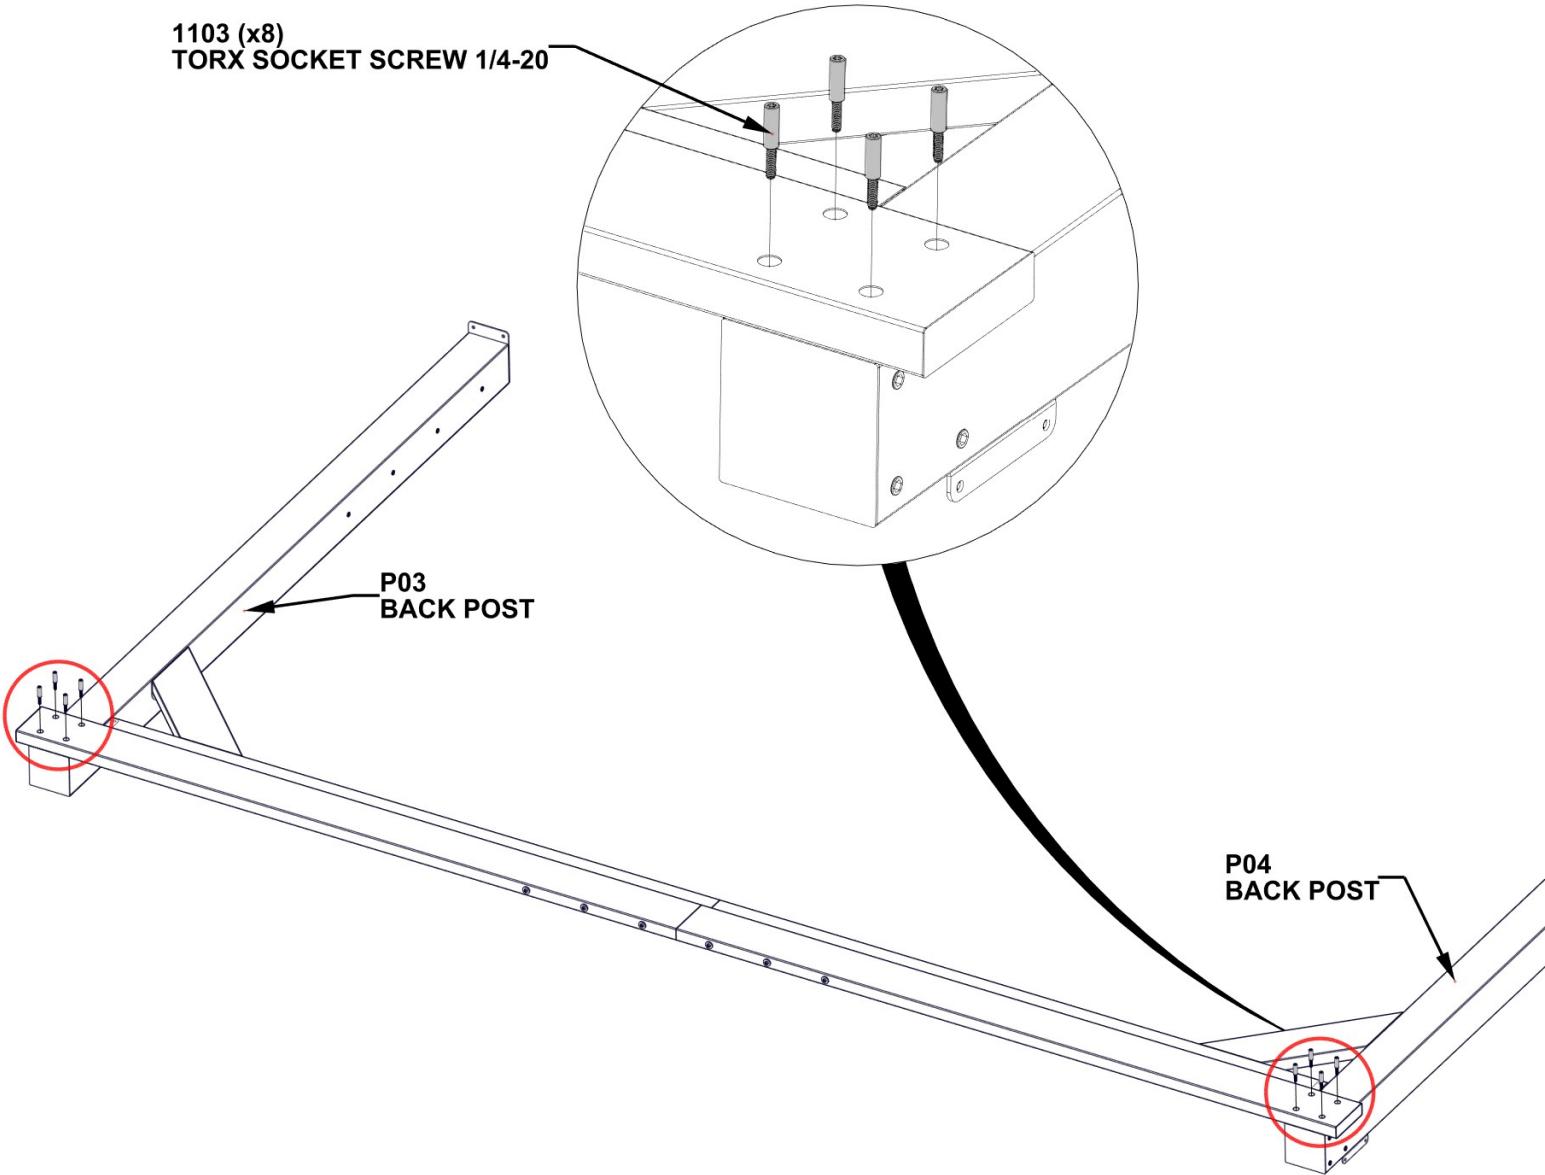

# STEP 9 - BEAM ASSEMBLY

QTY	PartNo	DESCRIPTION
3	H101103	TORX SOCKET SCREW 1/4-20




**B01 SIDE BEAM ASSEMBLY - A4M03507**  
(x1) 94 5/16"x5 1/4"x1 7/16" (36x134x2396)



**B02 SIDE BEAM ASSEMBLY - A4M03508**  
(x1) 84 13/16"x5 1/4"x1 7/16" (36x134x2154)

- ALIGN THRU HOLES IN B02 BEAM WITH THREADED INSERTS IN B01 BEAM.

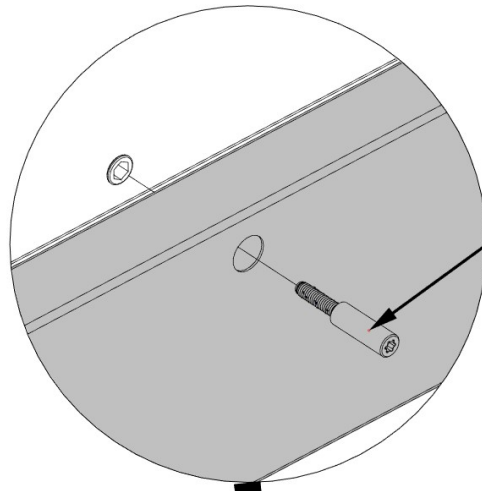


**1103 (x3)**  
**TORX SOCKET SCREW 1/4-20**

**B01 (x1)**  
**SIDE BEAM ASSEMBLY**


**B02 (x1)**  
**SIDE BEAM ASSEMBLY**

FRONT VIEW

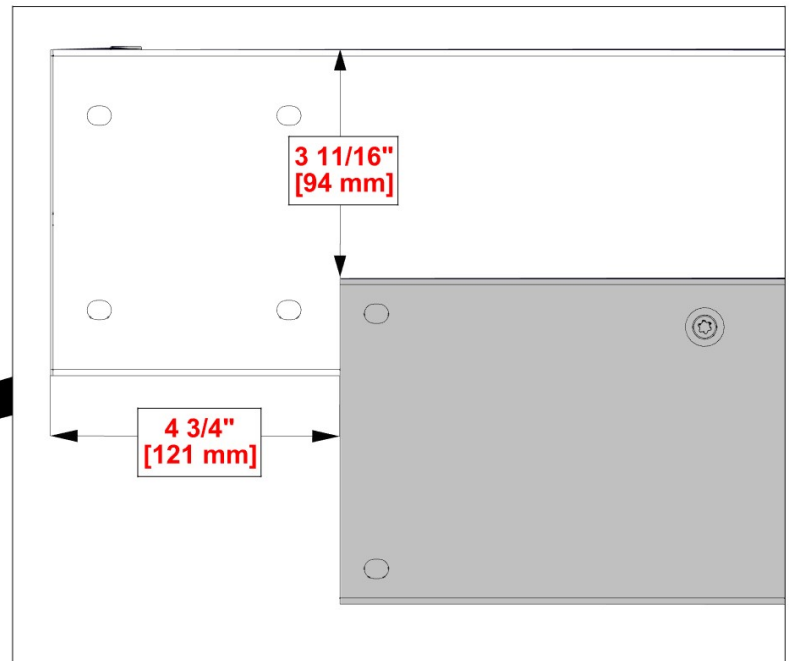



**DIMENSIONS ARE THE SAME AT BOTH ENDS AND CRITICAL TO THE BEAM ASSEMBLY**

# STEP 10 - BEAM ASSEMBLY

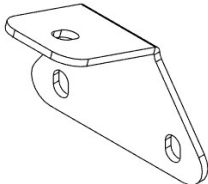

QTY	PartNo	DESCRIPTION
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

**J5 RAFTER BRACKET - A4M03803**  
(x3) 3 5/8"x2 11/16"x2 1/16" (52x68x91.5)

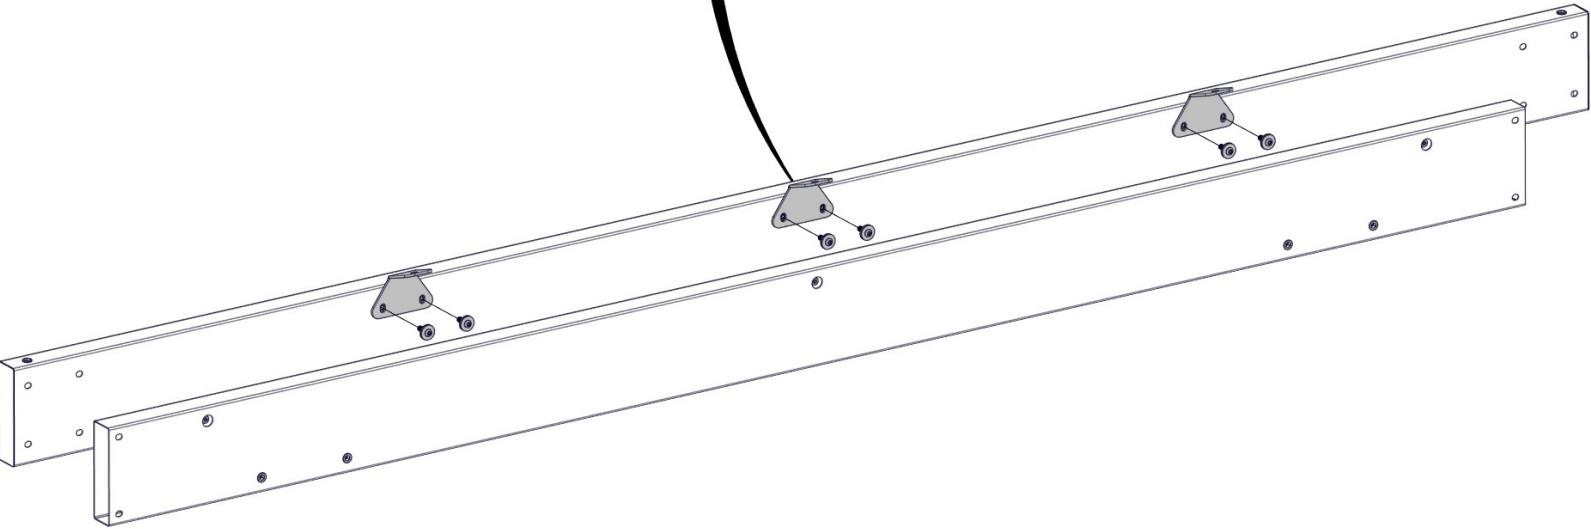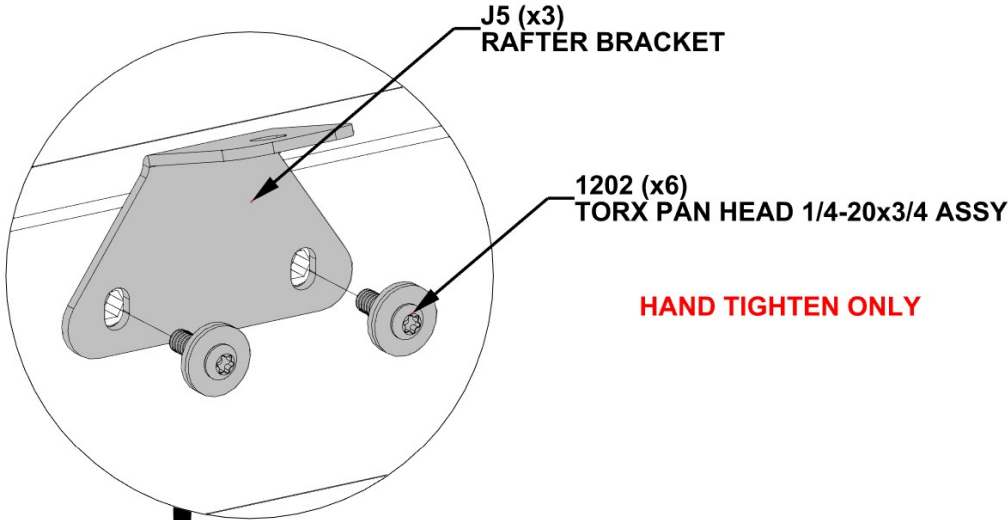


**REPEAT BEAM ASSEMBLY  
STEPS 9 THROUGH 10**

# STEP 11 - POST ASSEMBLY


QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




**P02 FRONT POST - A4M03504**  
(x1) 89 9/16"x6 1/8"x4 3/4" (120x155x2275)



**J4 BEAM BRACKET - A4M02990**  
(x2) 1"x1 5/16"x5 1/16" (25x33.2x128)

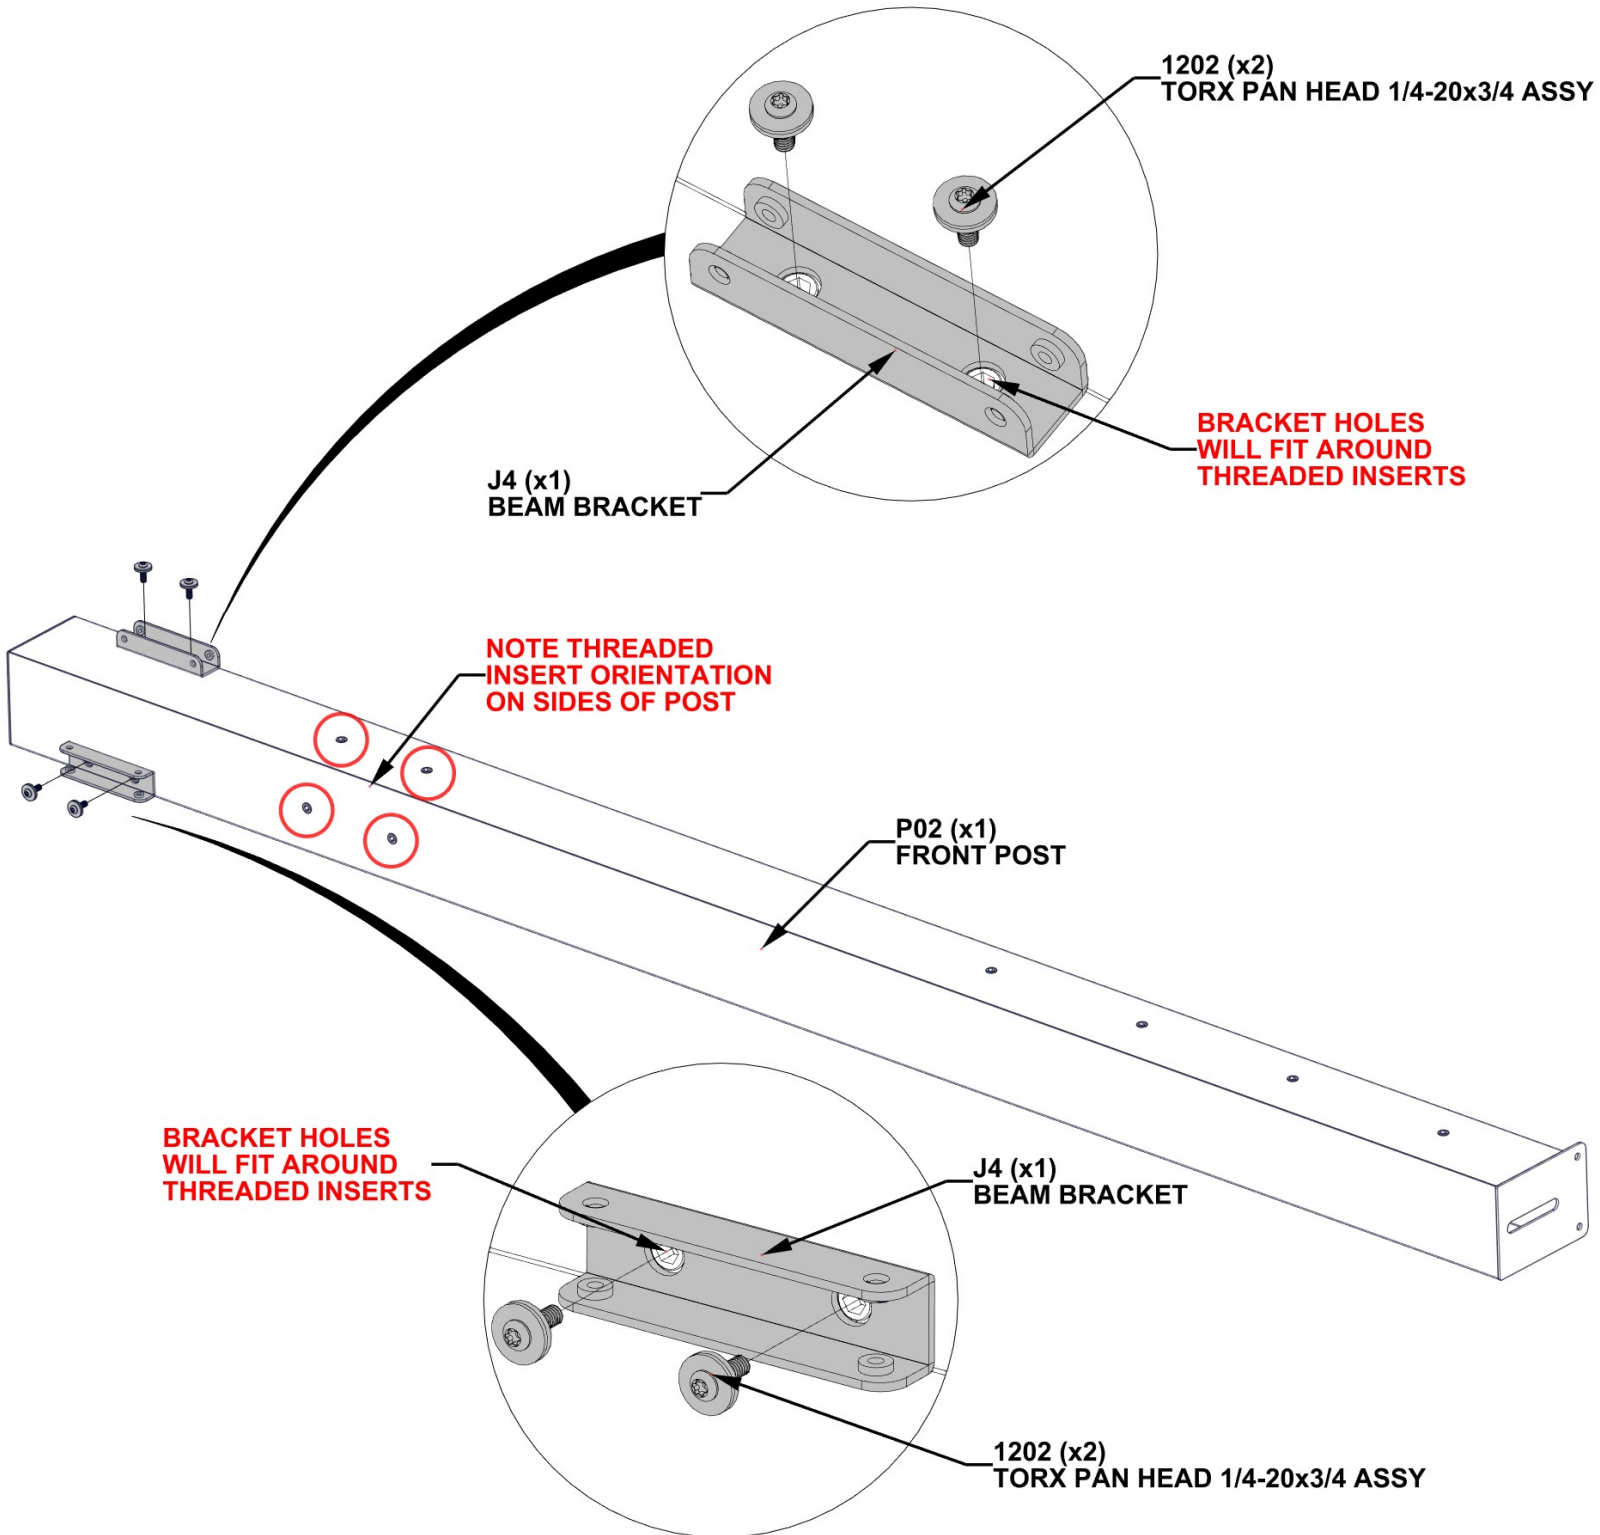


# STEP 12A - FRAME ASSEMBLY

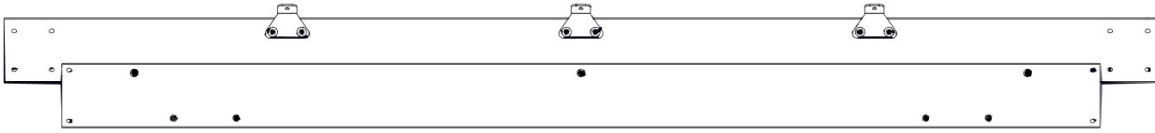

BEAM ASSEMBLY FROM STEPS 9 - 10

- SLIDE POST ASSEMBLY FROM STEP 11 INTO THE BEAM ASSEMBLY FROM STEPS 9 - 10.

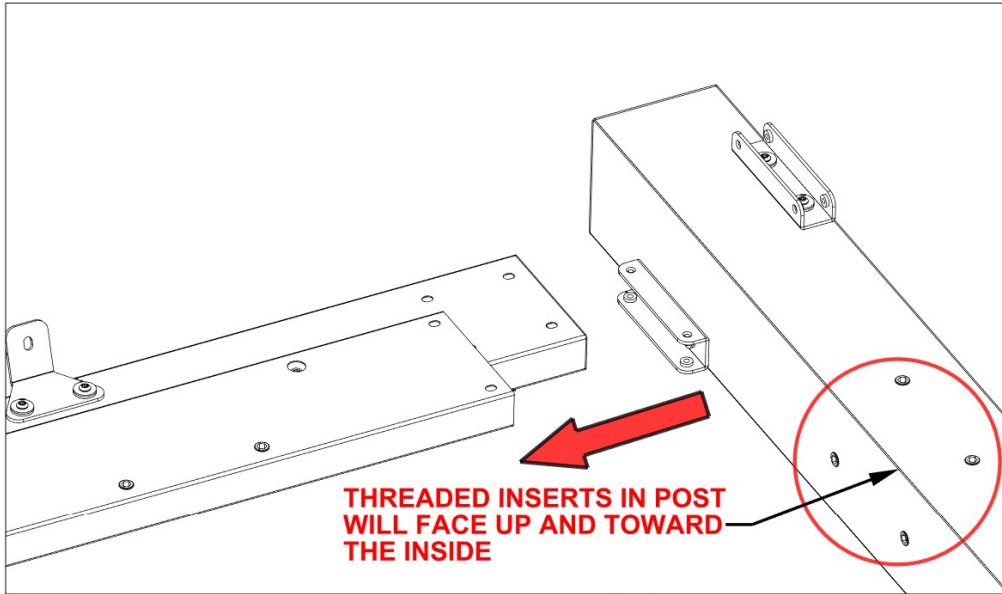


THREADED INSERTS IN POST WILL FACE UP AND TOWARD THE INSIDE

BEAM ASSEMBLY  
STEPS 9 - 10

POST ASSEMBLY  
STEP 11


# STEP 12B - FRAME ASSEMBLY

QTY	PartNo	DESCRIPTION
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

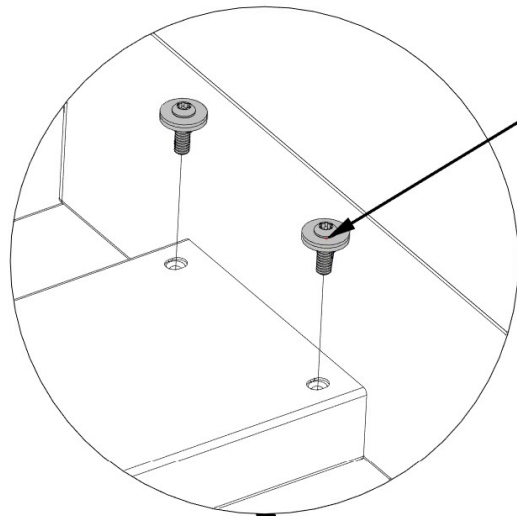

1202 (x2)  
TORX PAN HEAD 1/4-20x3/4 ASSY

**HAND TIGHTEN ONLY**

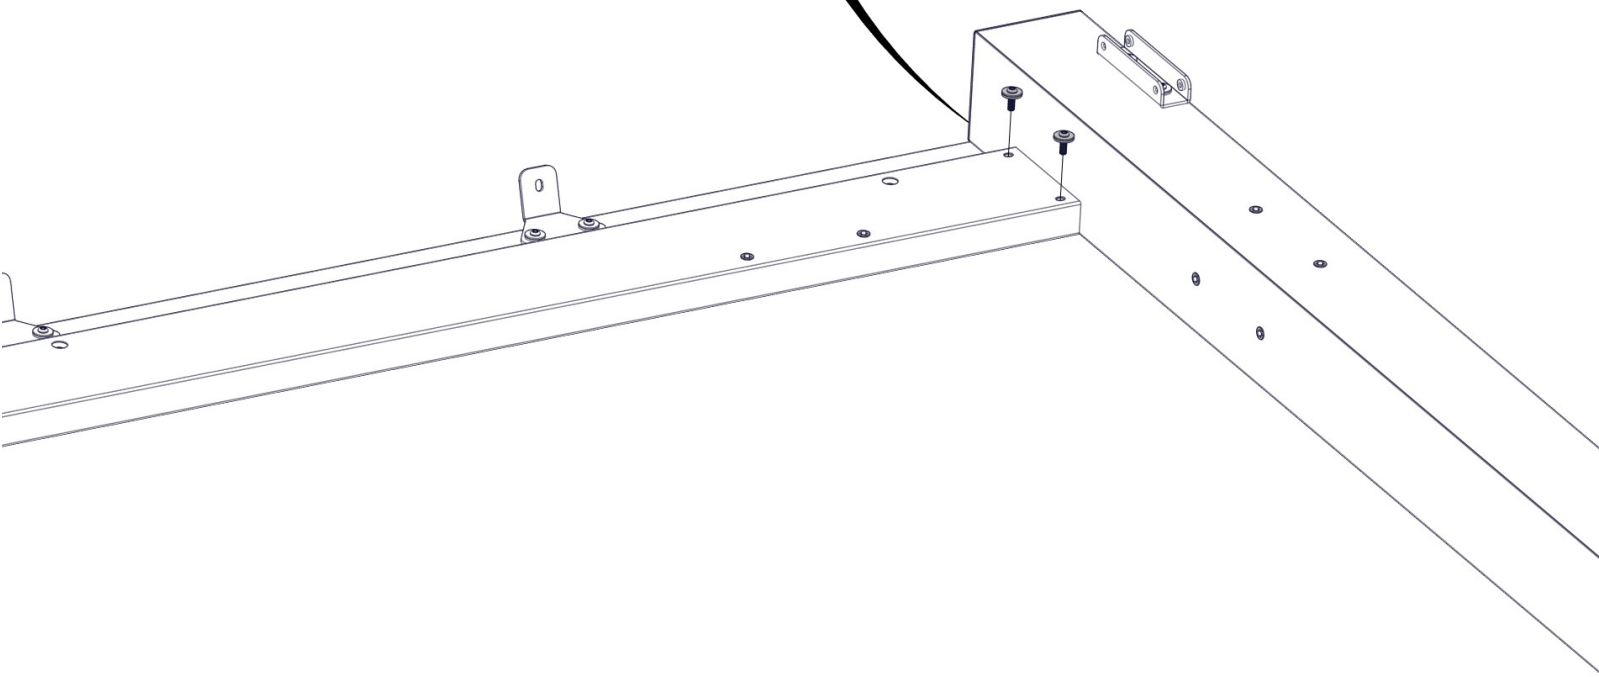

# STEP 12C - FRAME ASSEMBLY




C01 CORBEL ASSEMBLY - A4M03525  
(x1) 21 13/16"x5 1/4"x2 3/4" (70x134x553.5)

QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- ATTACH CORBEL TO BEAM AND POST.
- SQUARE AS NEEDED BEFORE TIGHTENING ALL HARDWARE FROM PREVIOUS STEPS.

1202 (x4)  
TORX PAN HEAD 1/4-20x3/4 ASSY

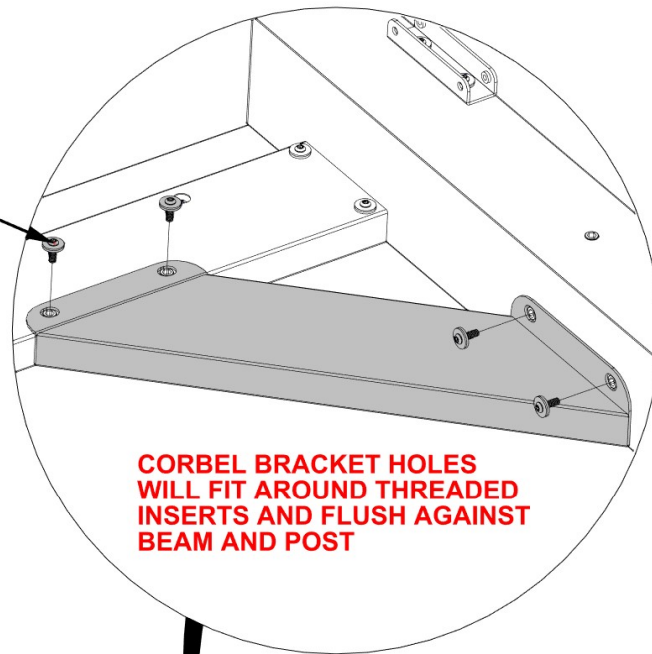



C01 (x1)  
CORBEL ASSEMBLY

# STEP 12D - FRAME ASSEMBLY

QTY	PartNo	DESCRIPTION
4	H101103	TORX SOCKET SCREW 1/4-20



- WITH AN ADDITIONAL PERSON, FLIP POST AND BEAM ASSEMBLY

1103 (x4)  
TORX SOCKET SCREW 1/4-20

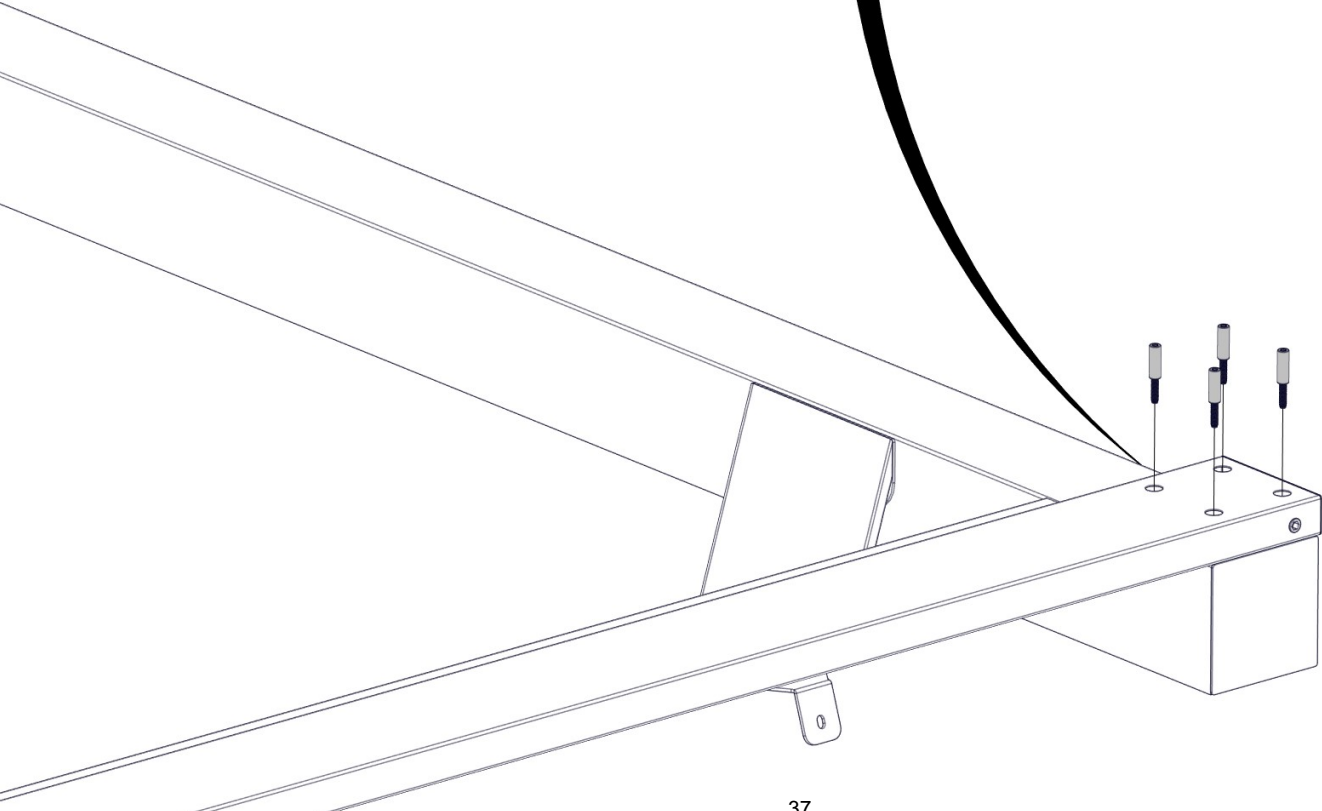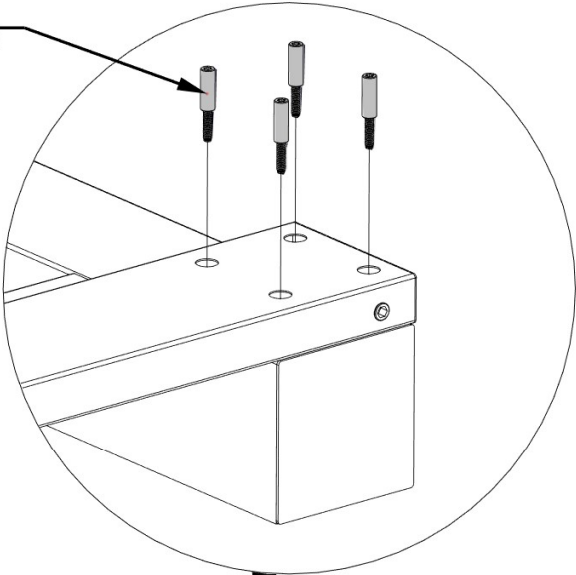


# STEP 13A - FRAME ASSEMBLY

- WITH AT LEAST THREE OTHER PEOPLE, ATTACH BEAM AND POST ASSEMBLIES BY SLIDING IN PLACE.

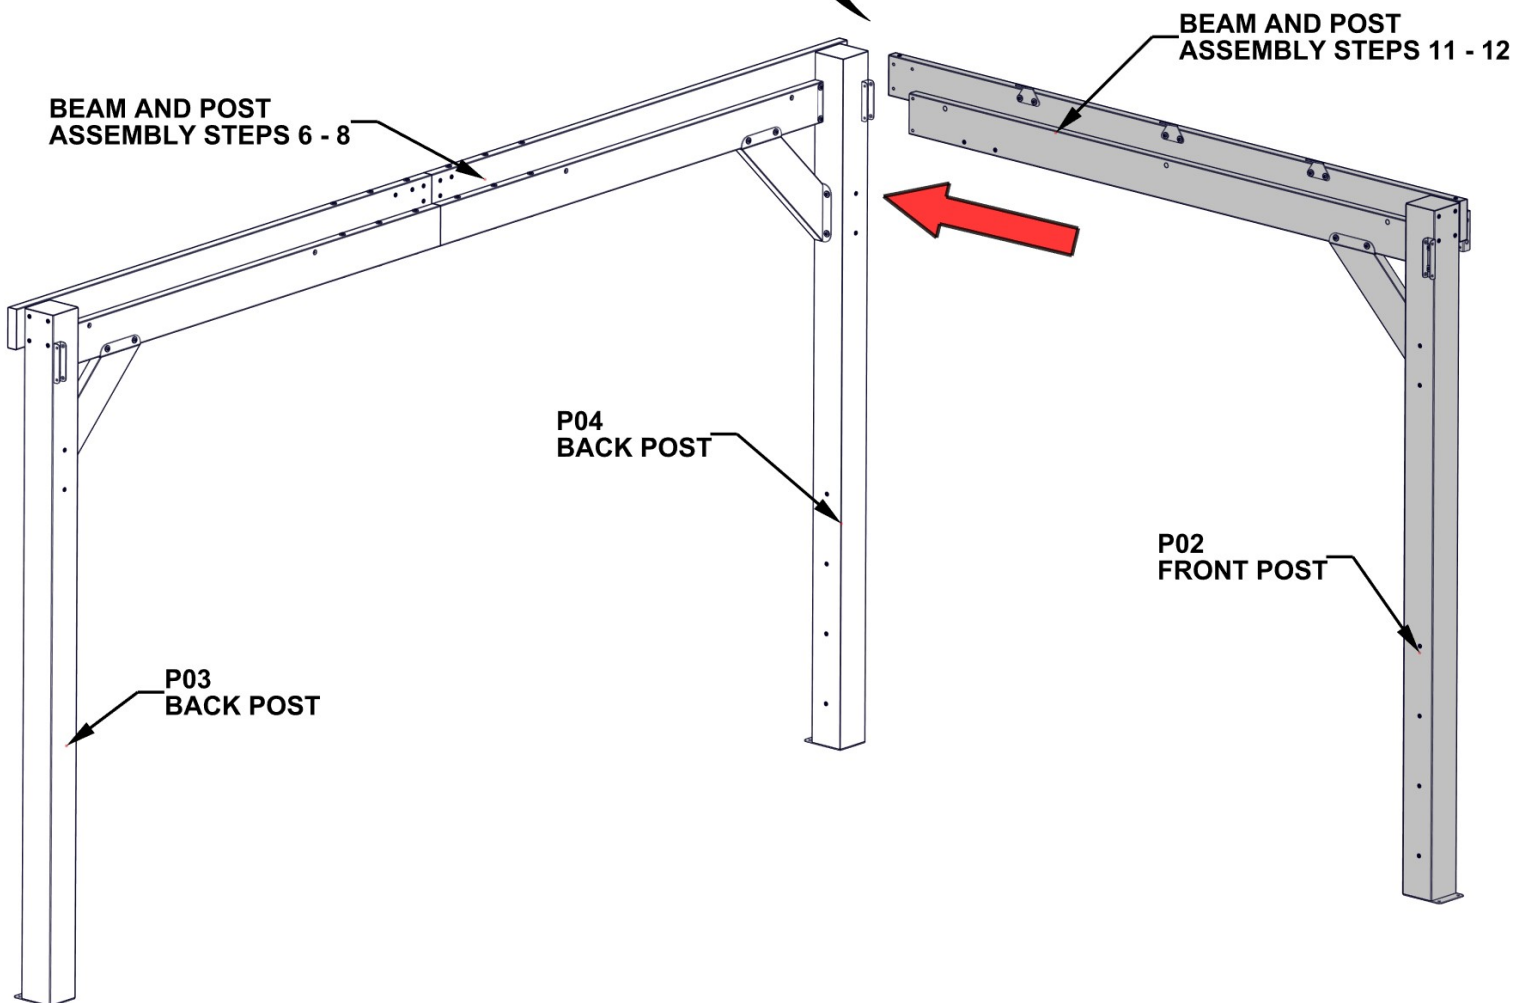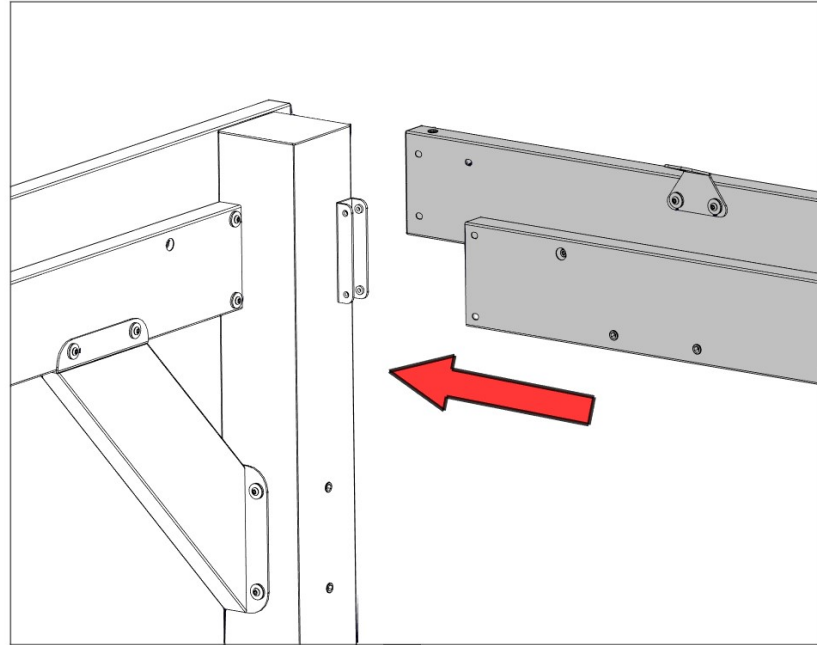

# STEP 13B - FRAME ASSEMBLY

QTY	PartNo	DESCRIPTION
4	H101103	TORX SOCKET SCREW 1/4-20

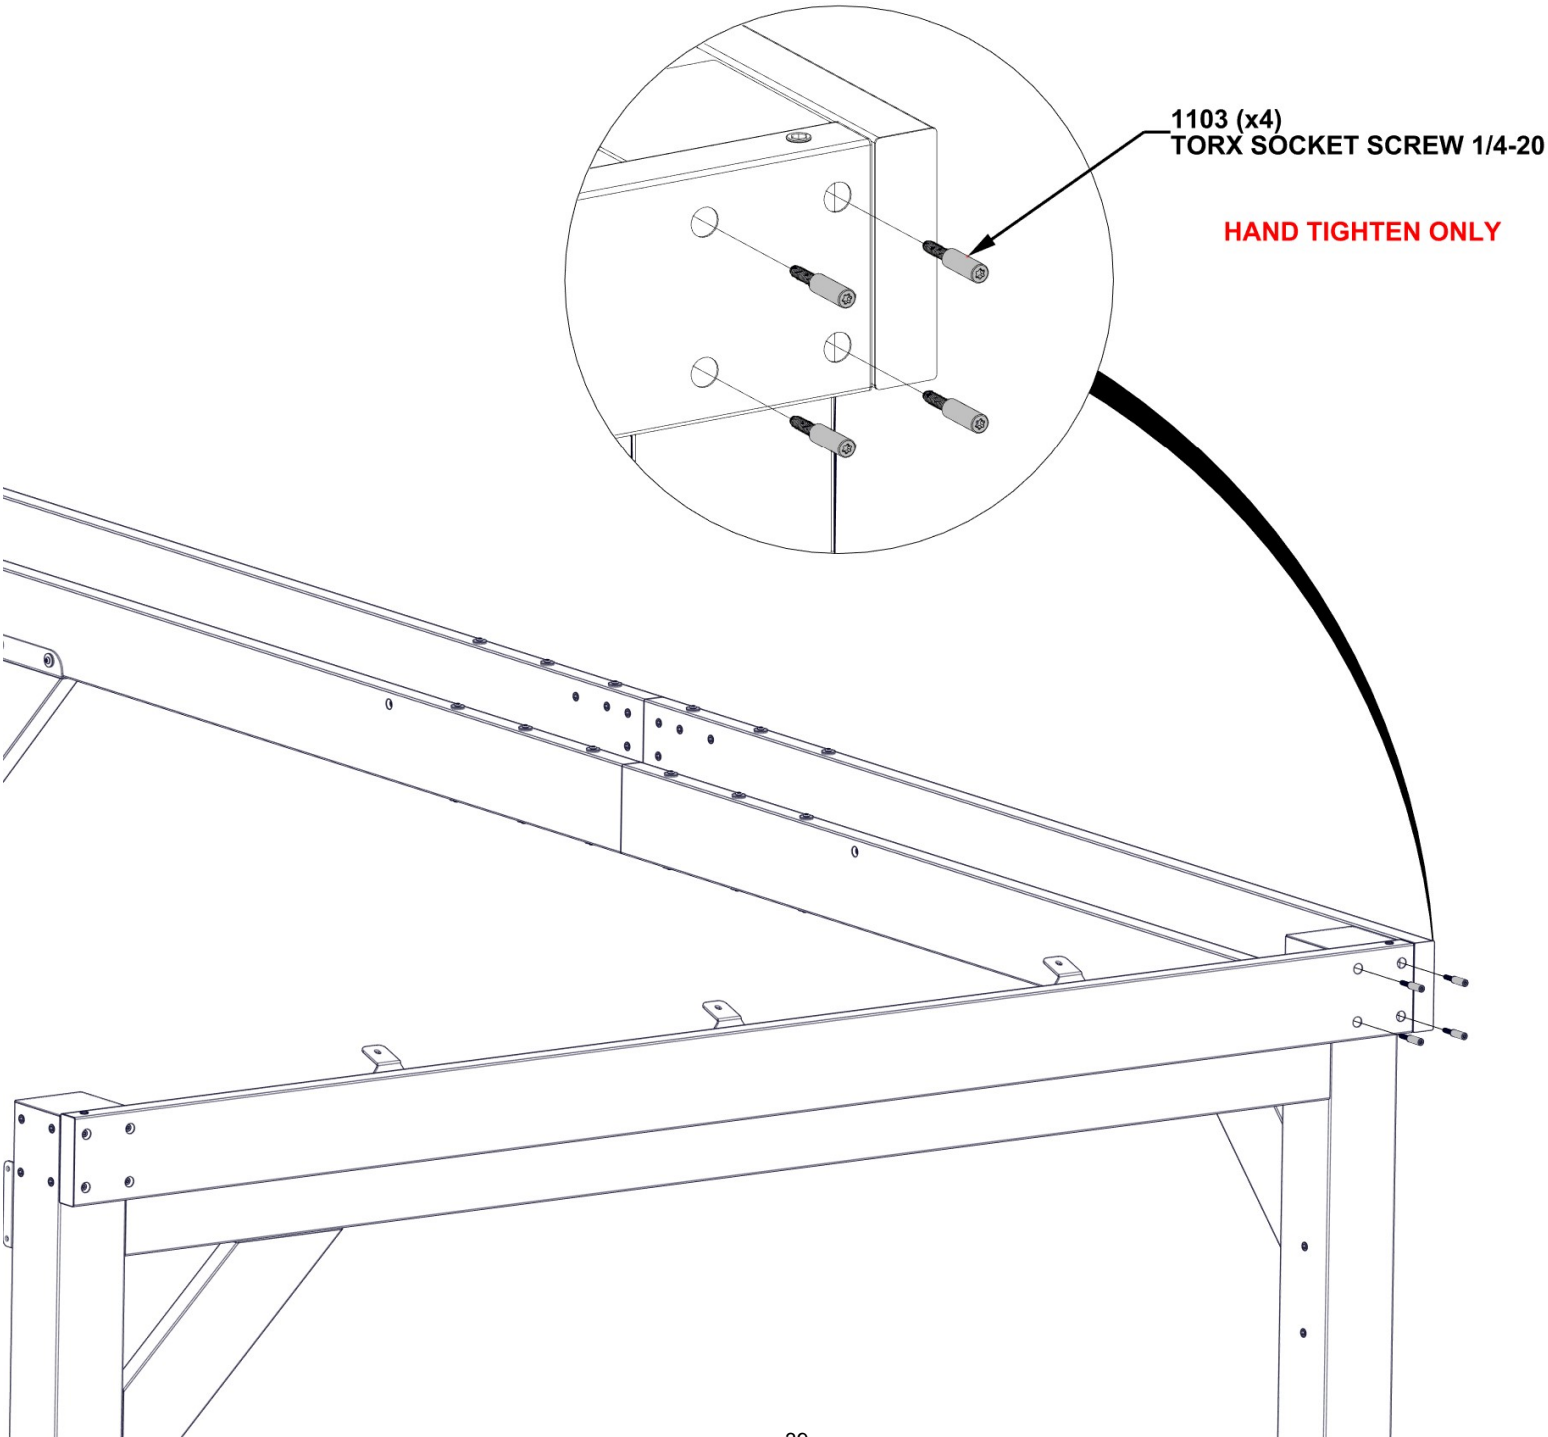



# STEP 13C - FRAME ASSEMBLY

QTY	PartNo	DESCRIPTION
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- SQUARE BEAM ASSEMBLY TO POST

1202 (x2)  
TORX PAN HEAD 1/4-20x3/4 ASSY

**TIGHTEN ALL HARDWARE**

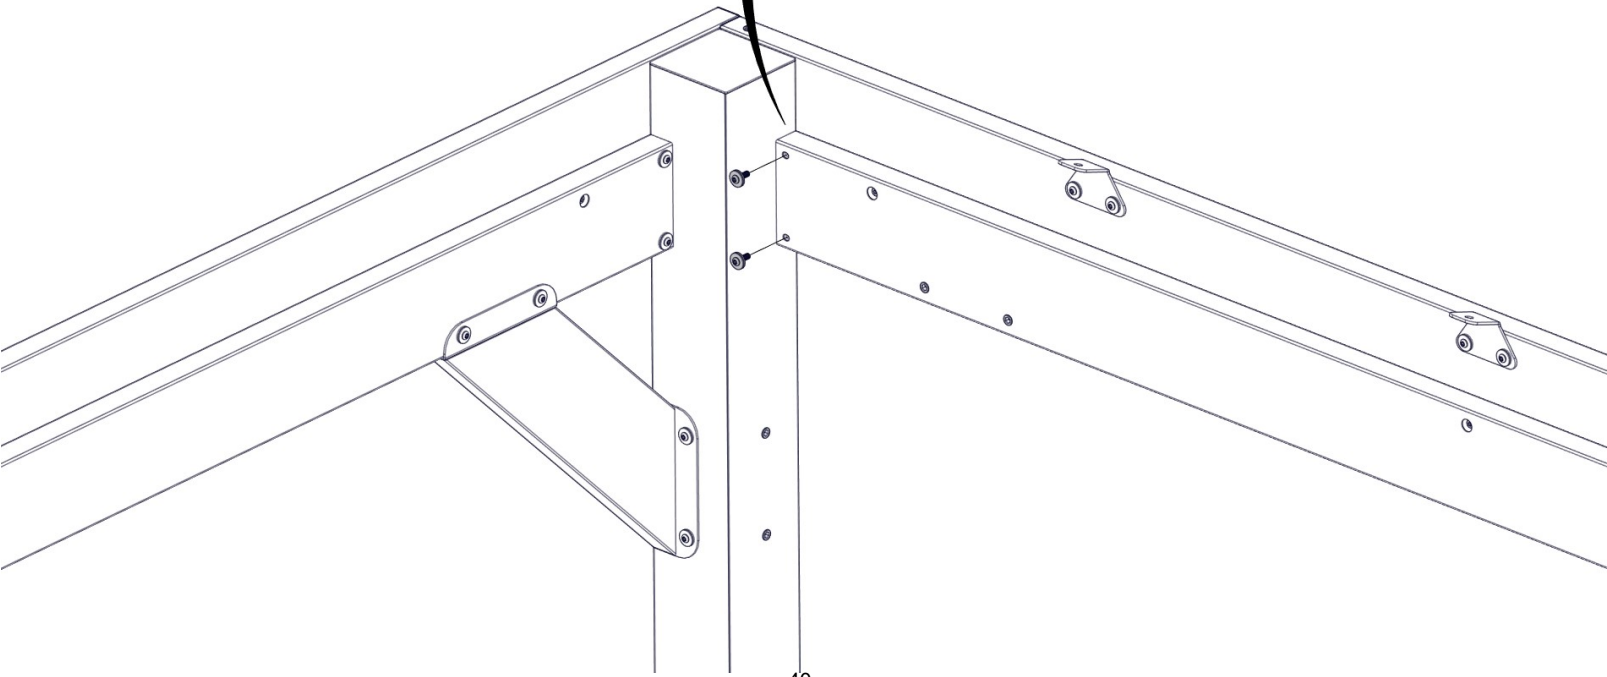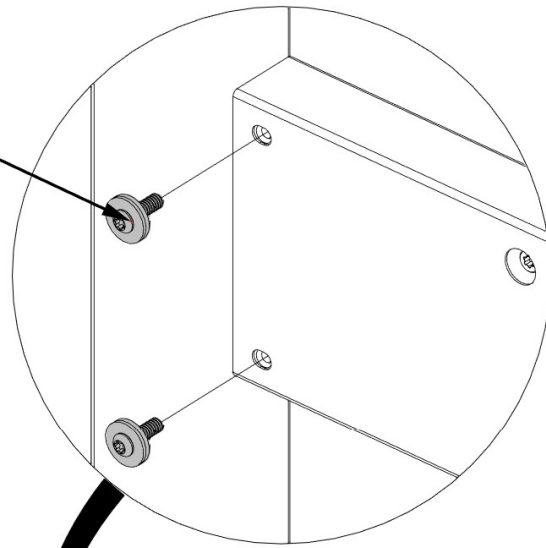


# STEP 14 - FRAME ASSEMBLY



**C02 CORBEL ASSEMBLY - A4M03526**  
(x1) 21 13/16"x5 1/4"x2 3/4" (70x134x553.5)


QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- ATTACH CORBELS TO BEAM AND POST.
- SQUARE AS NEEDED BEFORE TIGHTENING ALL HARDWARE.

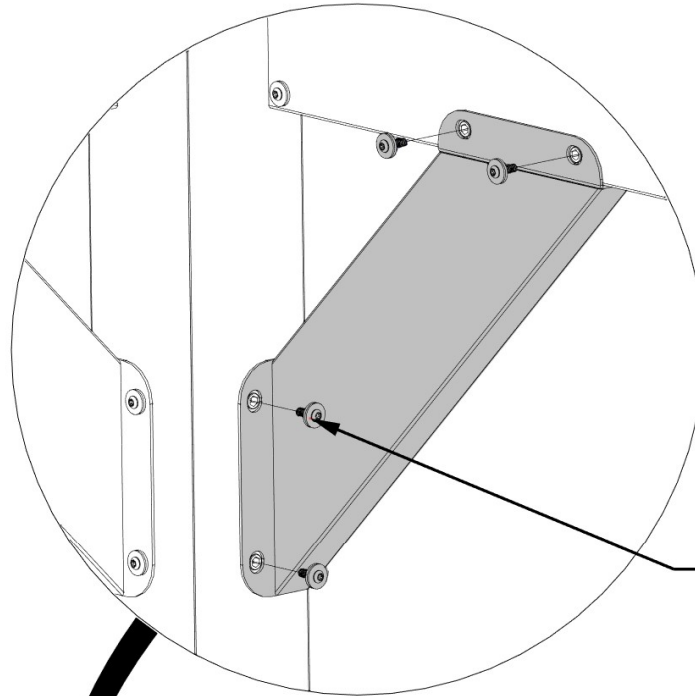

**1202 (x4)**  
**TORX PAN HEAD**  
**1/4-20x3/4 ASSY**


**CORBEL BRACKET HOLES**  
**WILL FIT AROUND THREADED**  
**INSERTS AND FLUSH AGAINST**  
**BEAM AND POST**

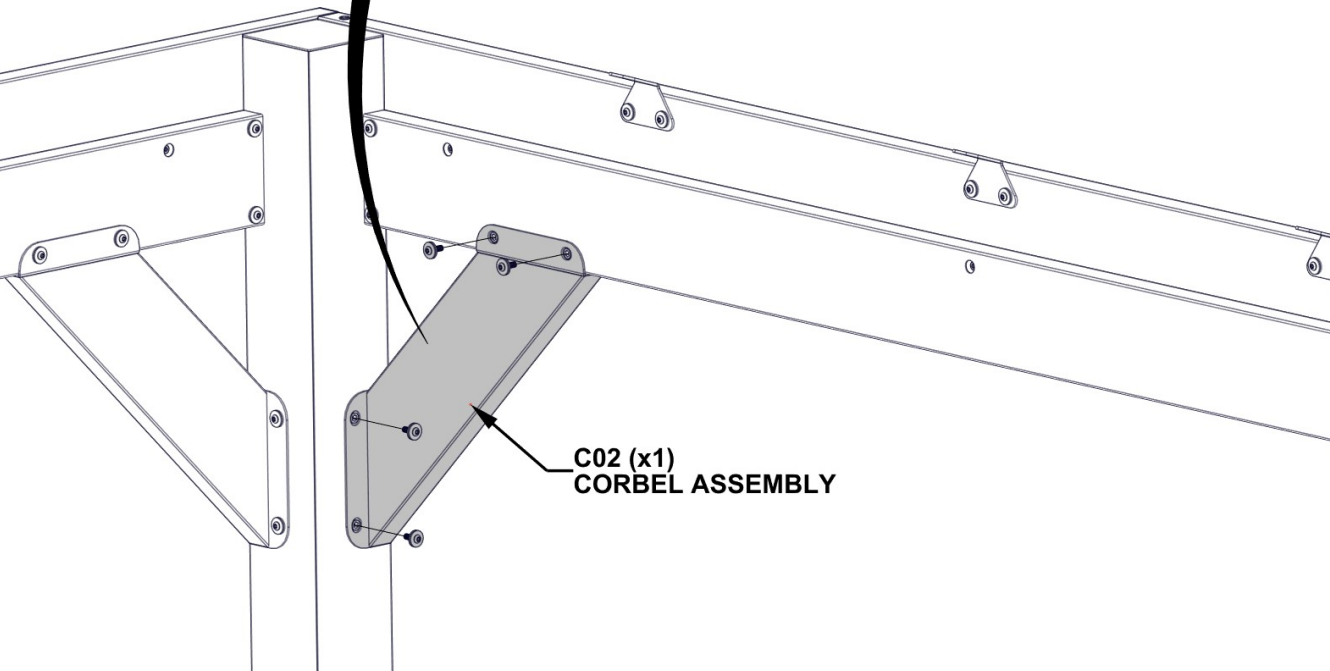


**C02 (x1)**  
**CORBEL ASSEMBLY**

# STEP 15 - POST ASSEMBLY

QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

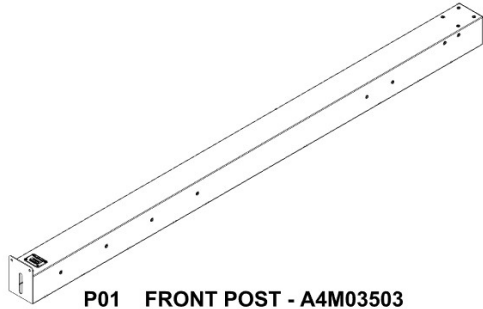


**P01 FRONT POST - A4M03503**  
(x1) 89 9/16"x6 1/8"x4 3/4" (120x155x2275)




**J4 BEAM BRACKET - A4M02990**  
(x2) 1"x1 5/16"x5 1/16" (25x33.2x128)

- FOR EASE OF ASSEMBLY, WE RECOMMEND USING SAW HORSES FOR STEPS 15 - 16.

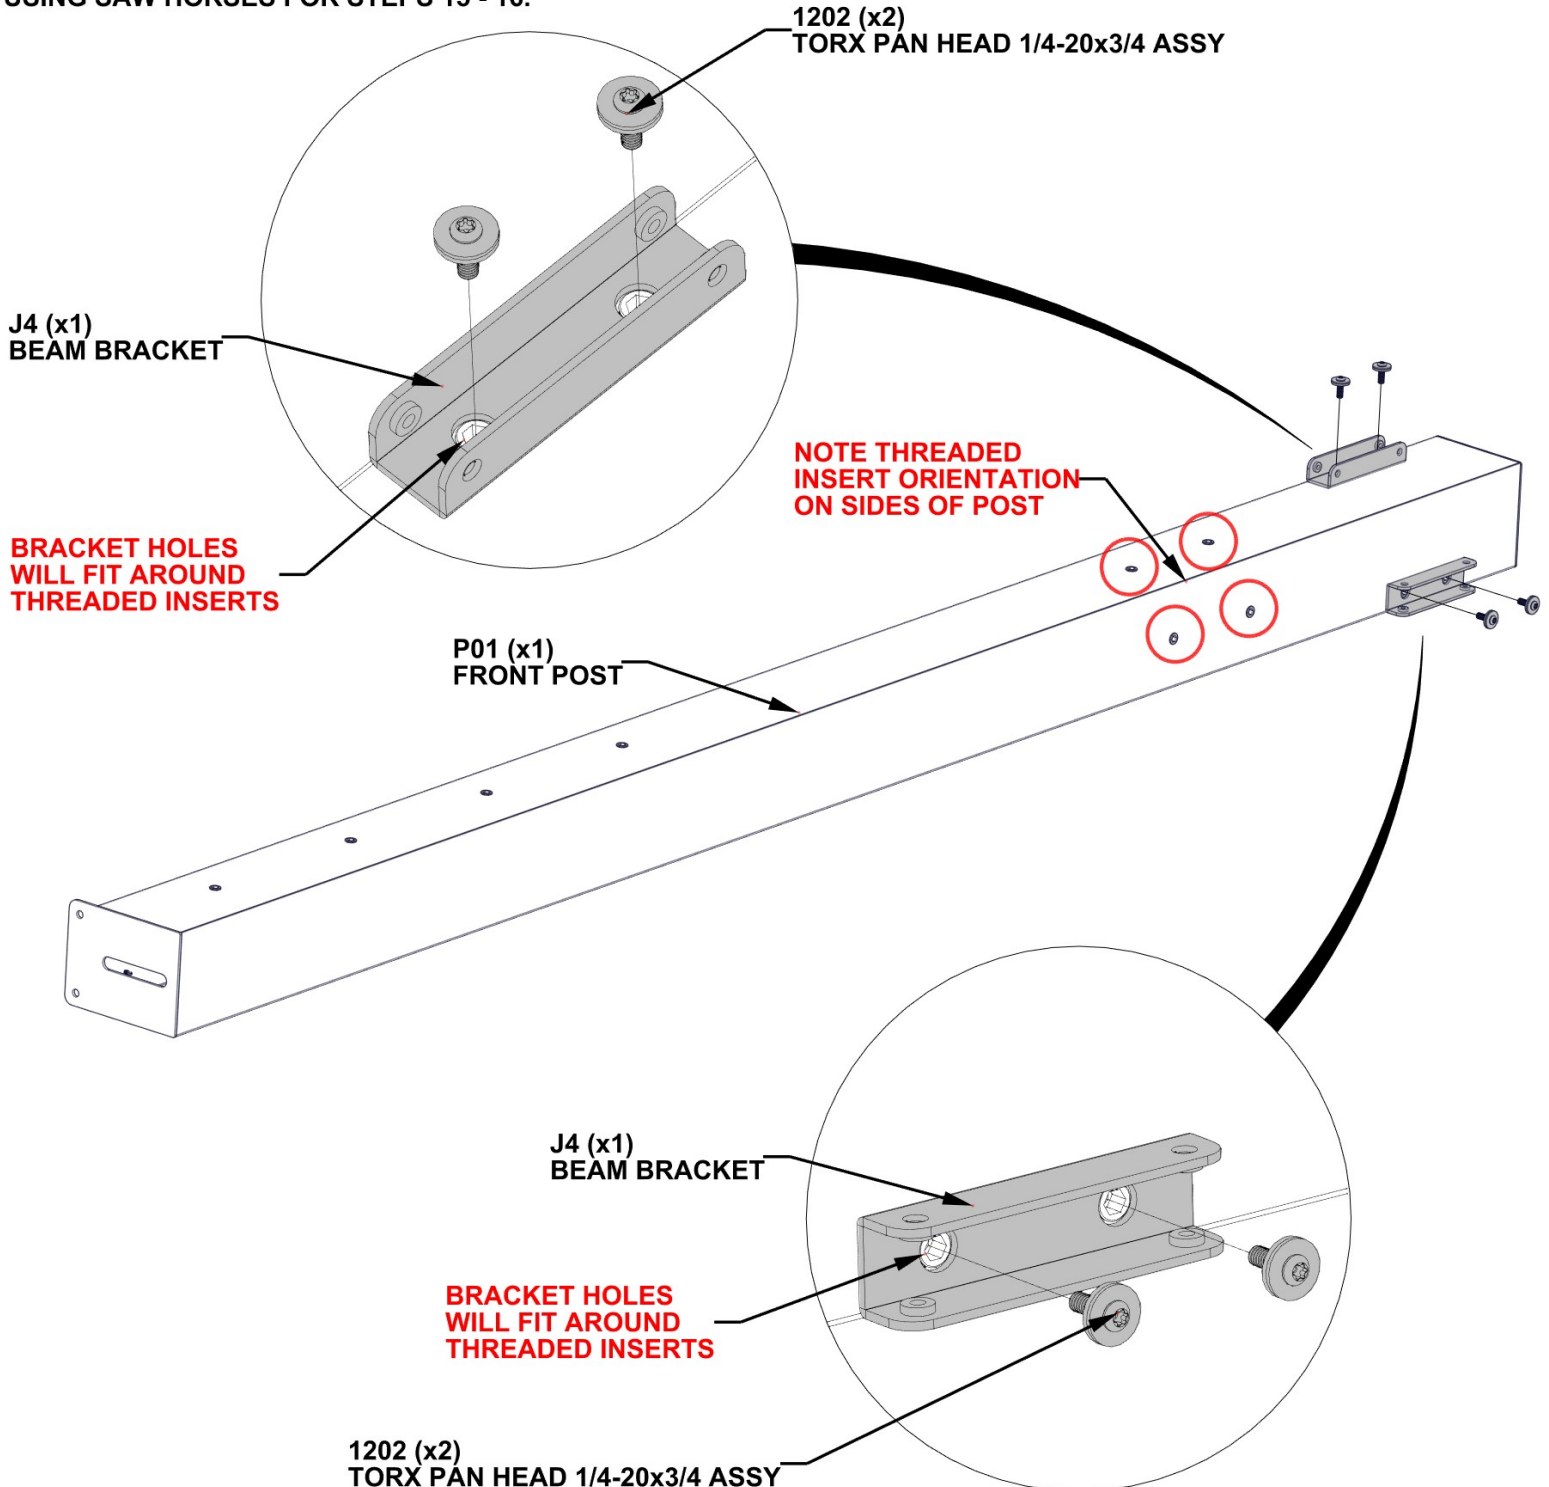


# STEP 16A - FRAME ASSEMBLY

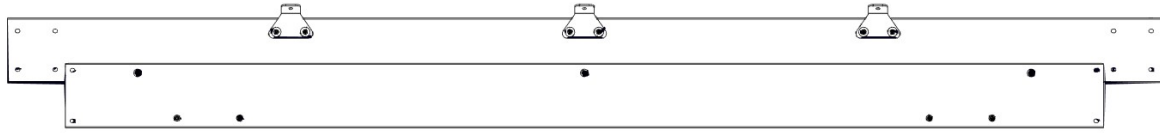


BEAM ASSEMBLY FROM STEPS 9 - 10

- SLIDE POST ASSEMBLY FROM STEP 15 INTO THE BEAM ASSEMBLY FROM STEPS 9 - 10.

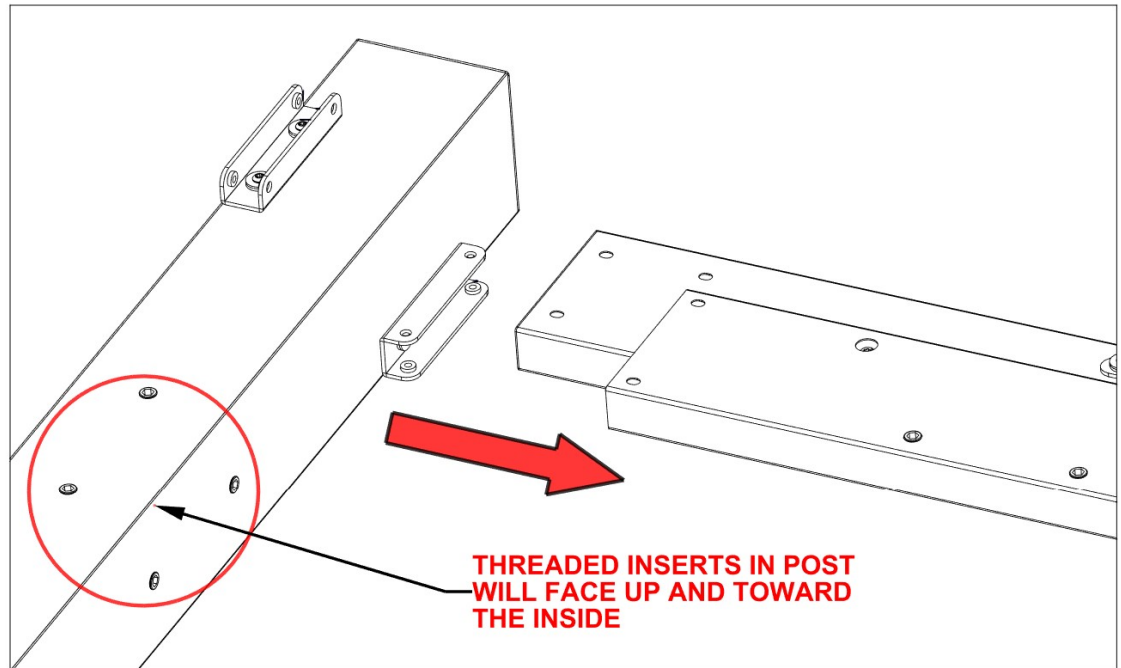

THREADED INSERTS IN POST WILL FACE UP AND TOWARD THE INSIDE

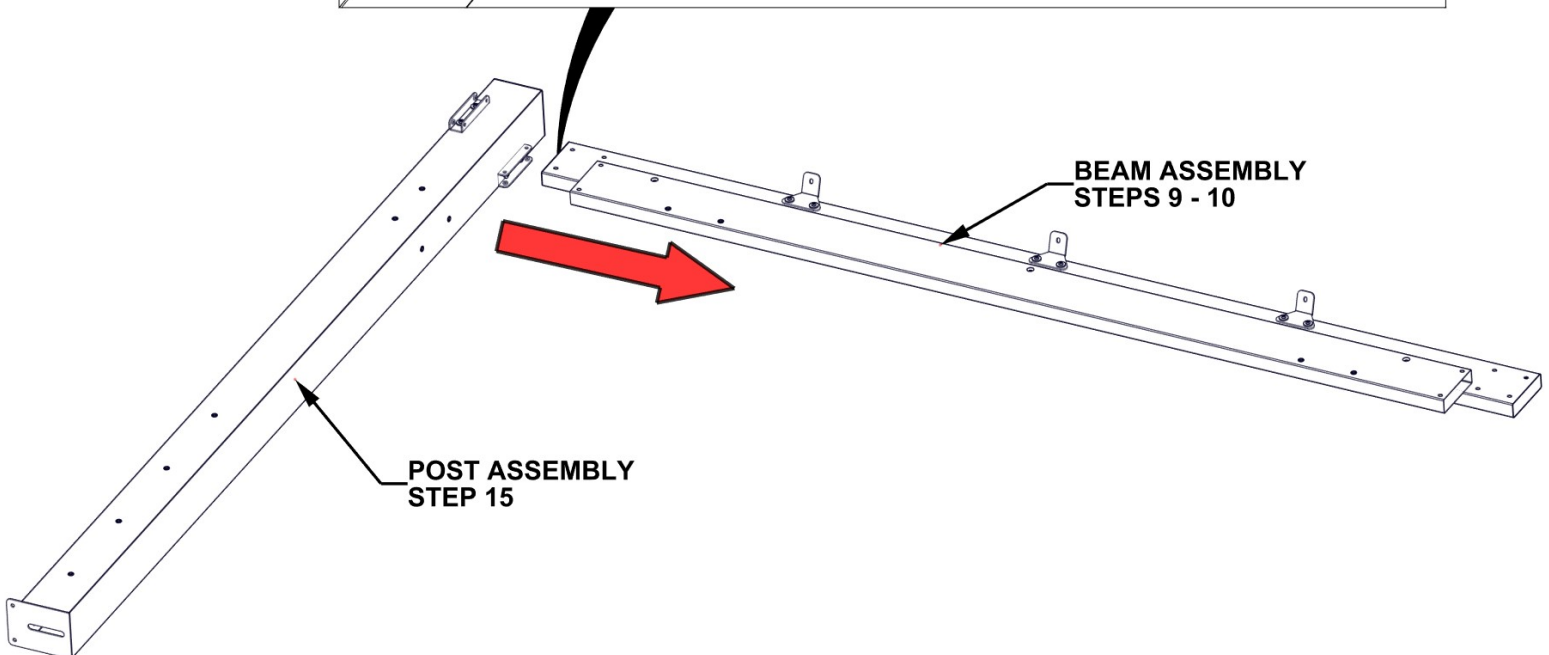

POST ASSEMBLY STEP 15



BEAM ASSEMBLY STEPS 9 - 10

# STEP 16B - FRAME ASSEMBLY

QTY	PartNo	DESCRIPTION
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

1202 (x2)  
TORX PAN HEAD 1/4-20x3/4 ASSY

**HAND TIGHTEN ONLY**

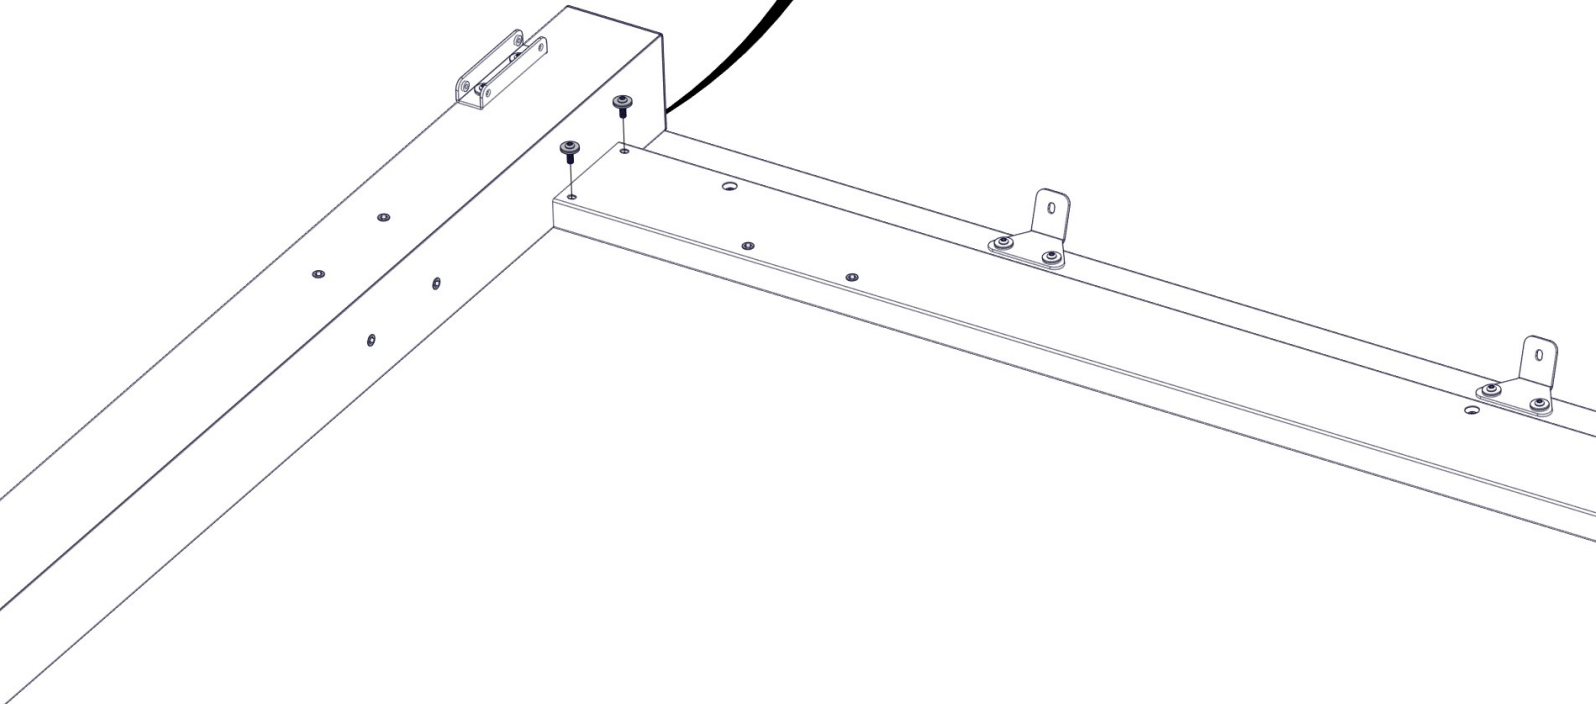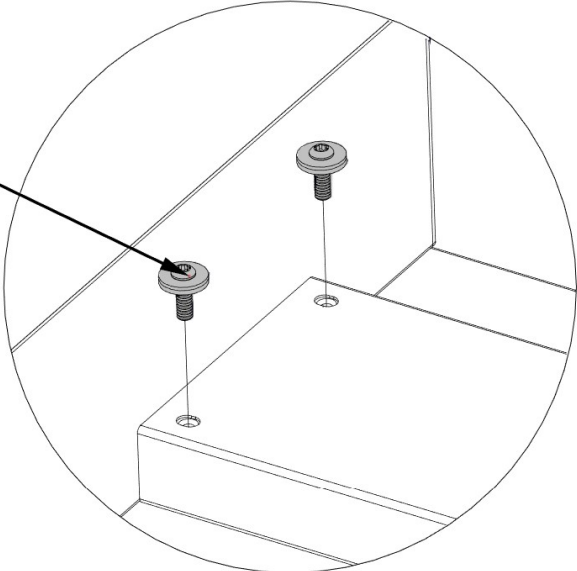


# STEP 16C - FRAME ASSEMBLY



C02 CORBEL ASSEMBLY - A4M03526  
(x1) 21 13/16"x5 1/4"x2 3/4" (70x134x553.5)


QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- ATTACH CORBEL TO BEAM AND POST.
- SQUARE AS NEEDED BEFORE TIGHTENING ALL HARDWARE FROM PREVIOUS STEPS.

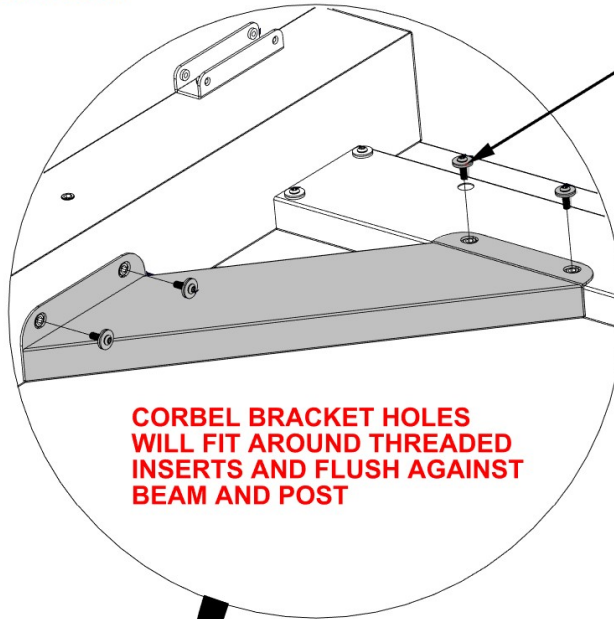

1202 (x4)  
TORX PAN HEAD 1/4-20x3/4 ASSY

**CORBEL BRACKET HOLES  
WILL FIT AROUND THREADED  
INSERTS AND FLUSH AGAINST  
BEAM AND POST**

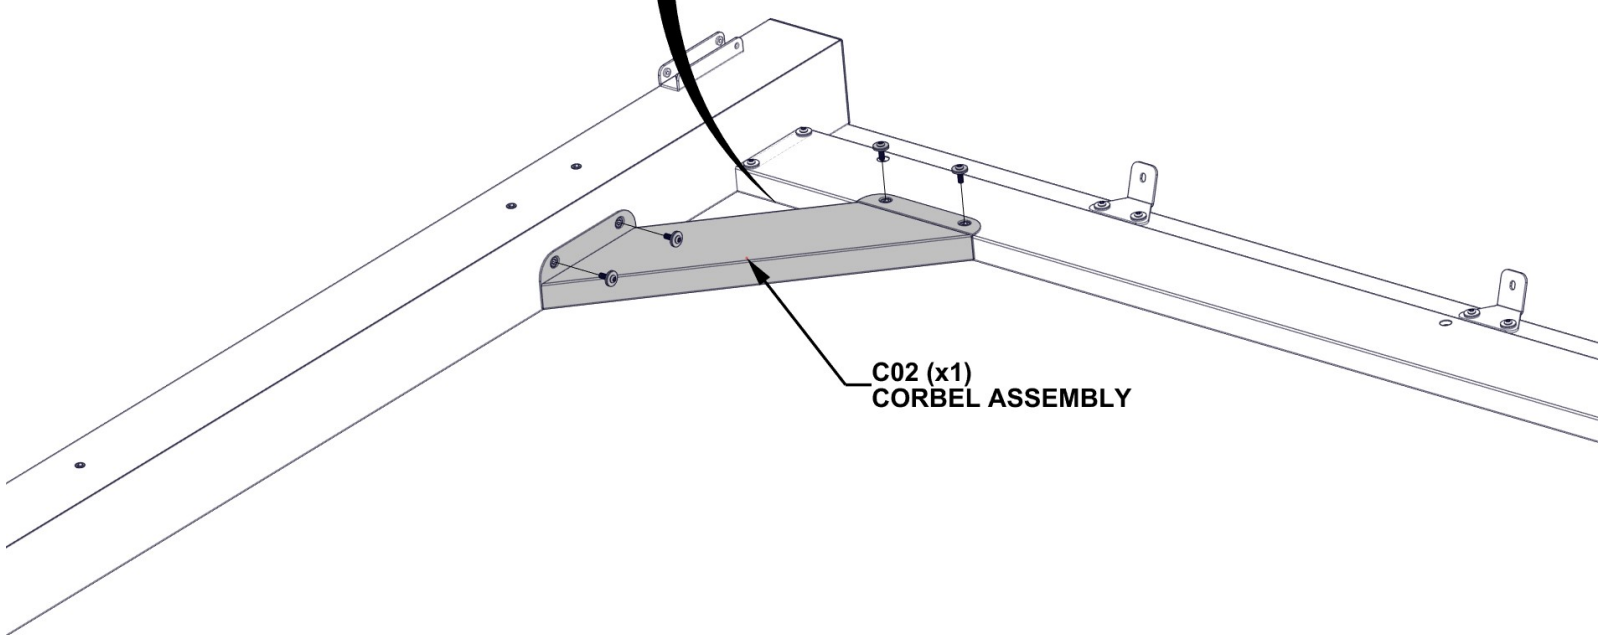


C02 (x1)  
CORBEL ASSEMBLY

# STEP 16D - FRAME ASSEMBLY


QTY	PartNo	DESCRIPTION
4	H101103	TORX SOCKET SCREW 1/4-20

- WITH AN ADDITIONAL PERSON, FLIP POST AND BEAM ASSEMBLY

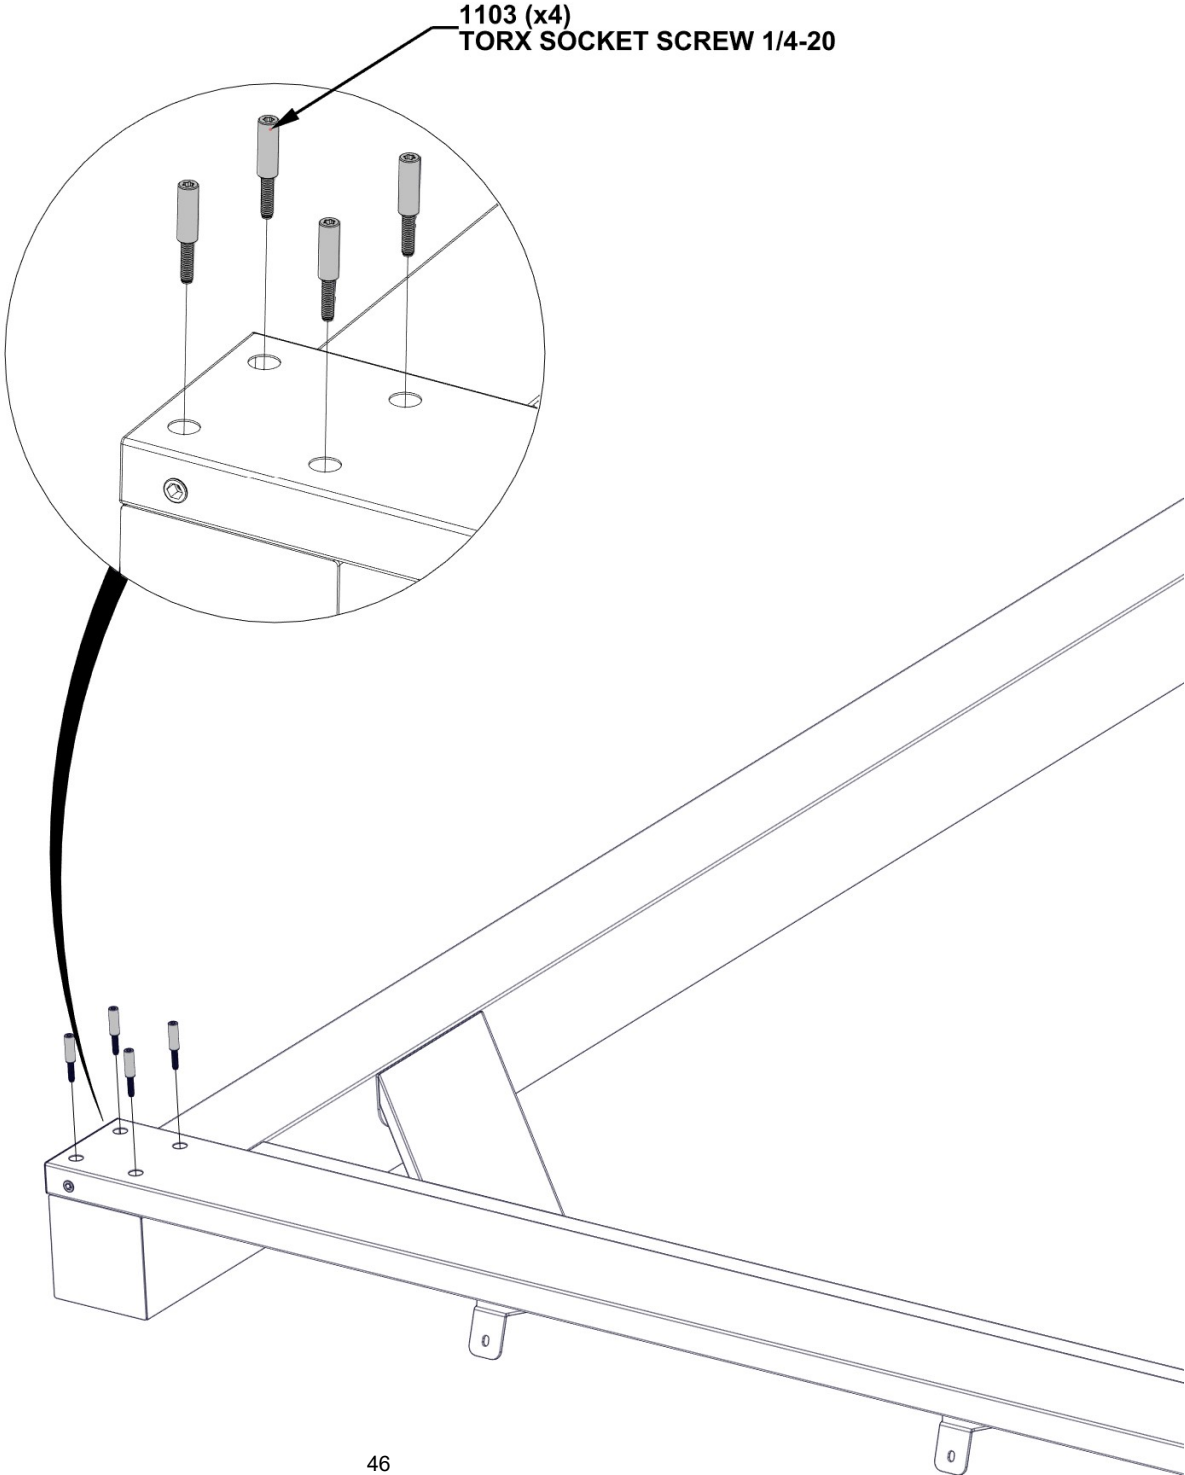


# STEP 17A - FRAME ASSEMBLY

- WITH AT LEAST TWO OTHER PEOPLE, ATTACH BEAM AND POST ASSEMBLIES BY SLIDING IN PLACE.

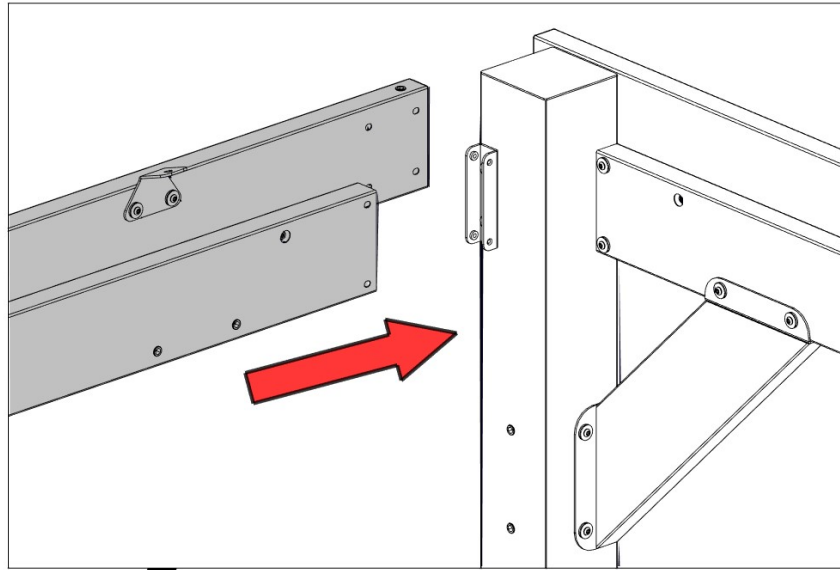


BEAM AND POST  
ASSEMBLY STEPS 15 - 16

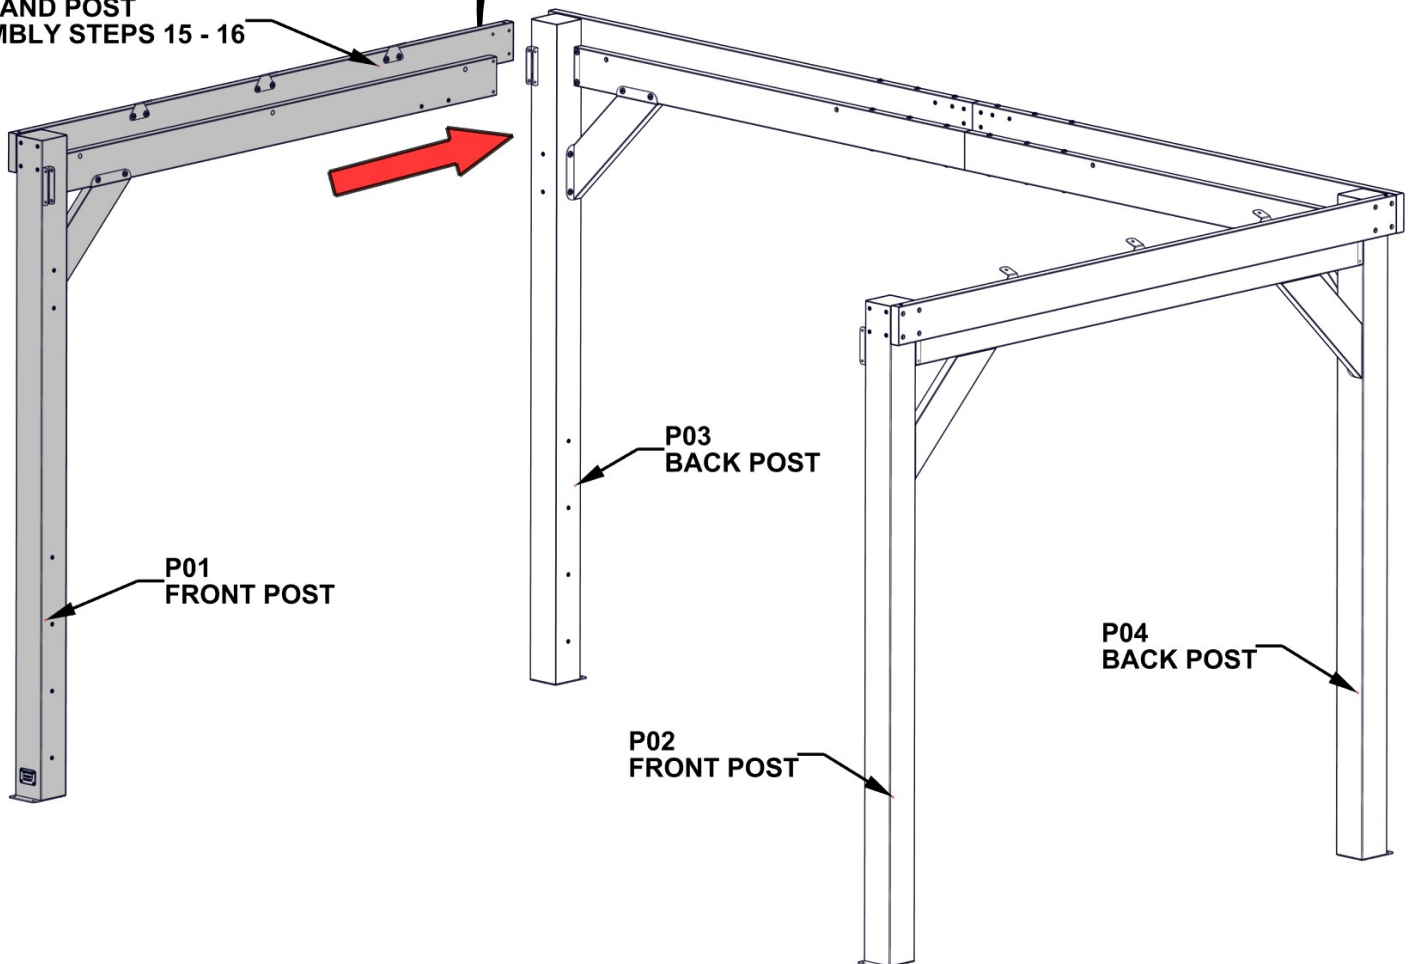

# STEP 17B - FRAME ASSEMBLY


QTY	PartNo	DESCRIPTION
4	H101103	TORX SOCKET SCREW 1/4-20

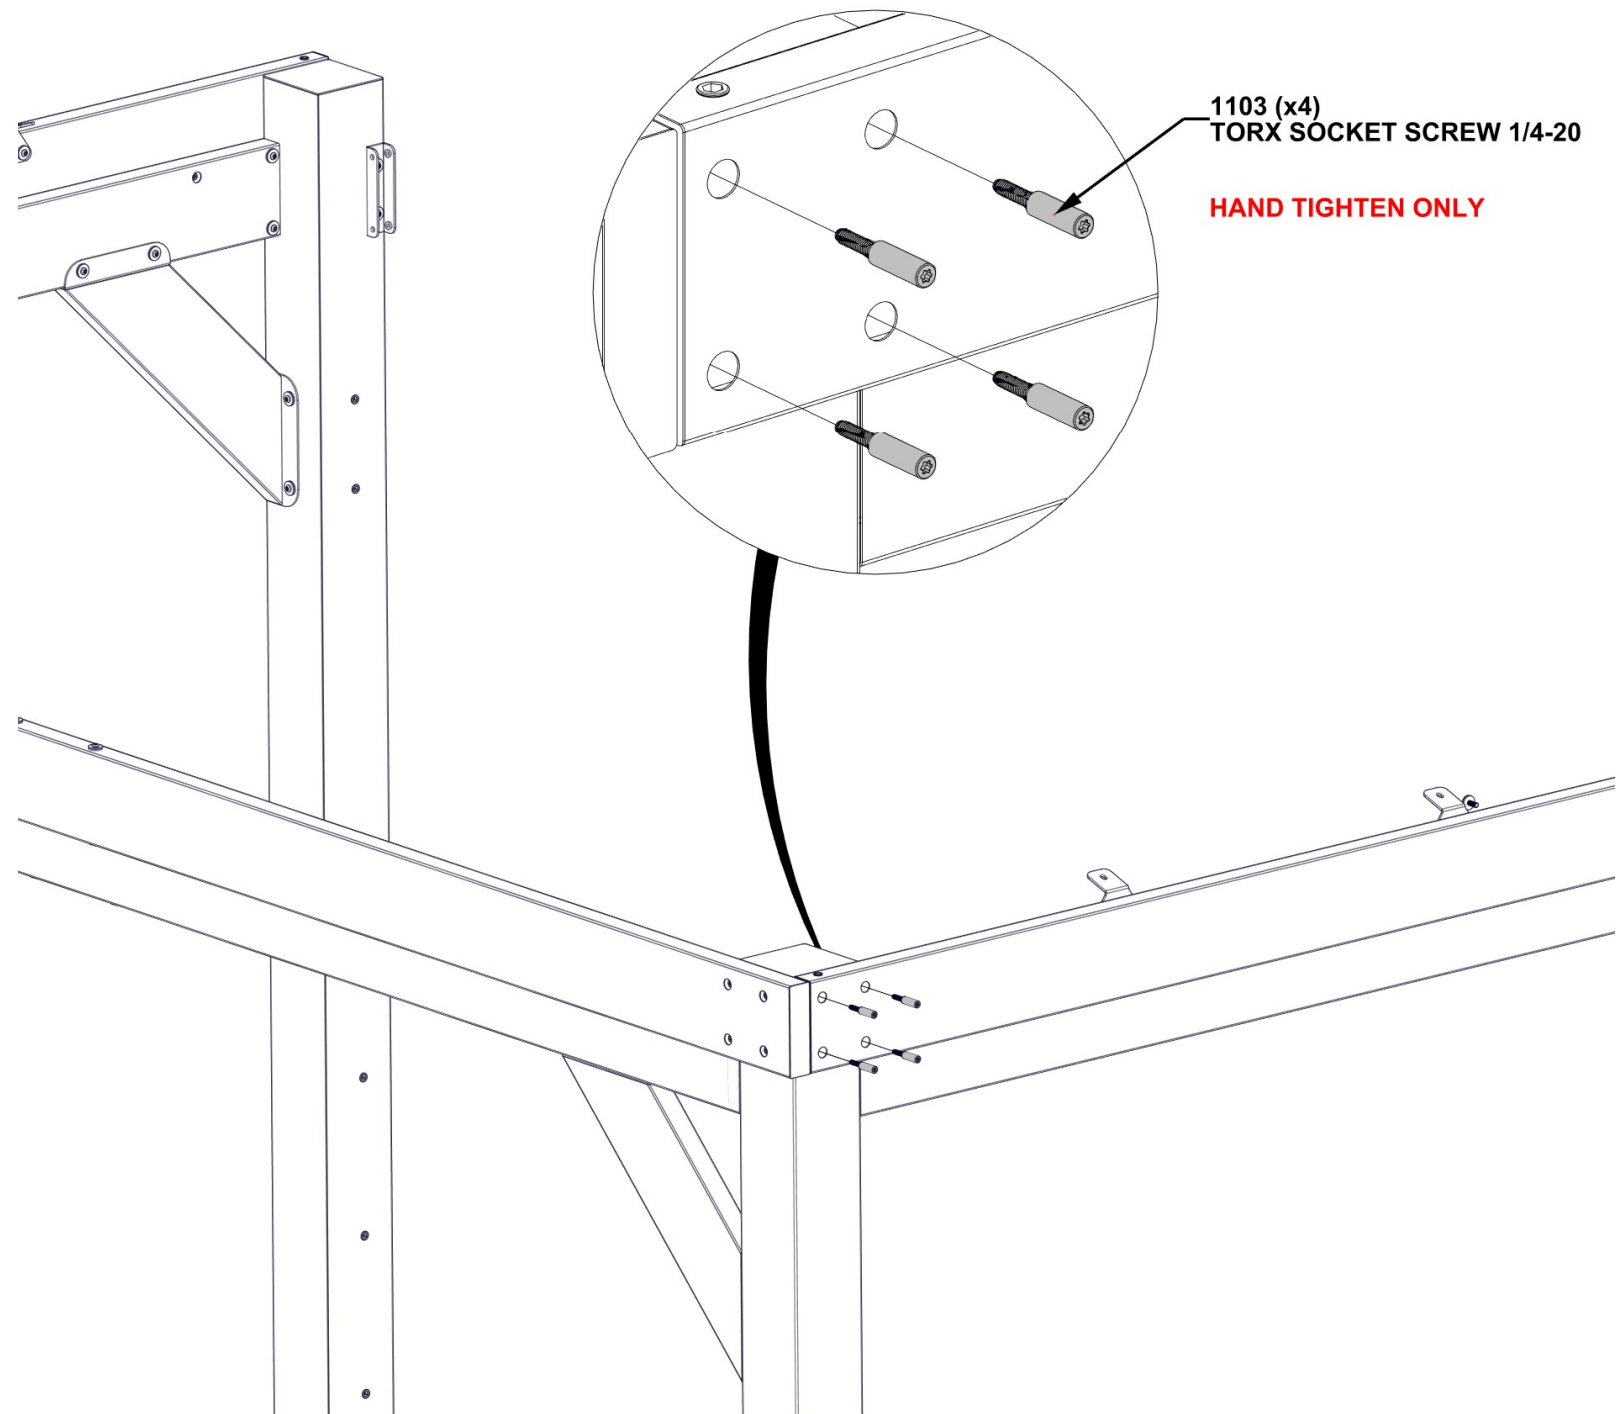

# STEP 17C - FRAME ASSEMBLY

QTY	PartNo	DESCRIPTION
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- SQUARE BEAM ASSEMBLY TO POST

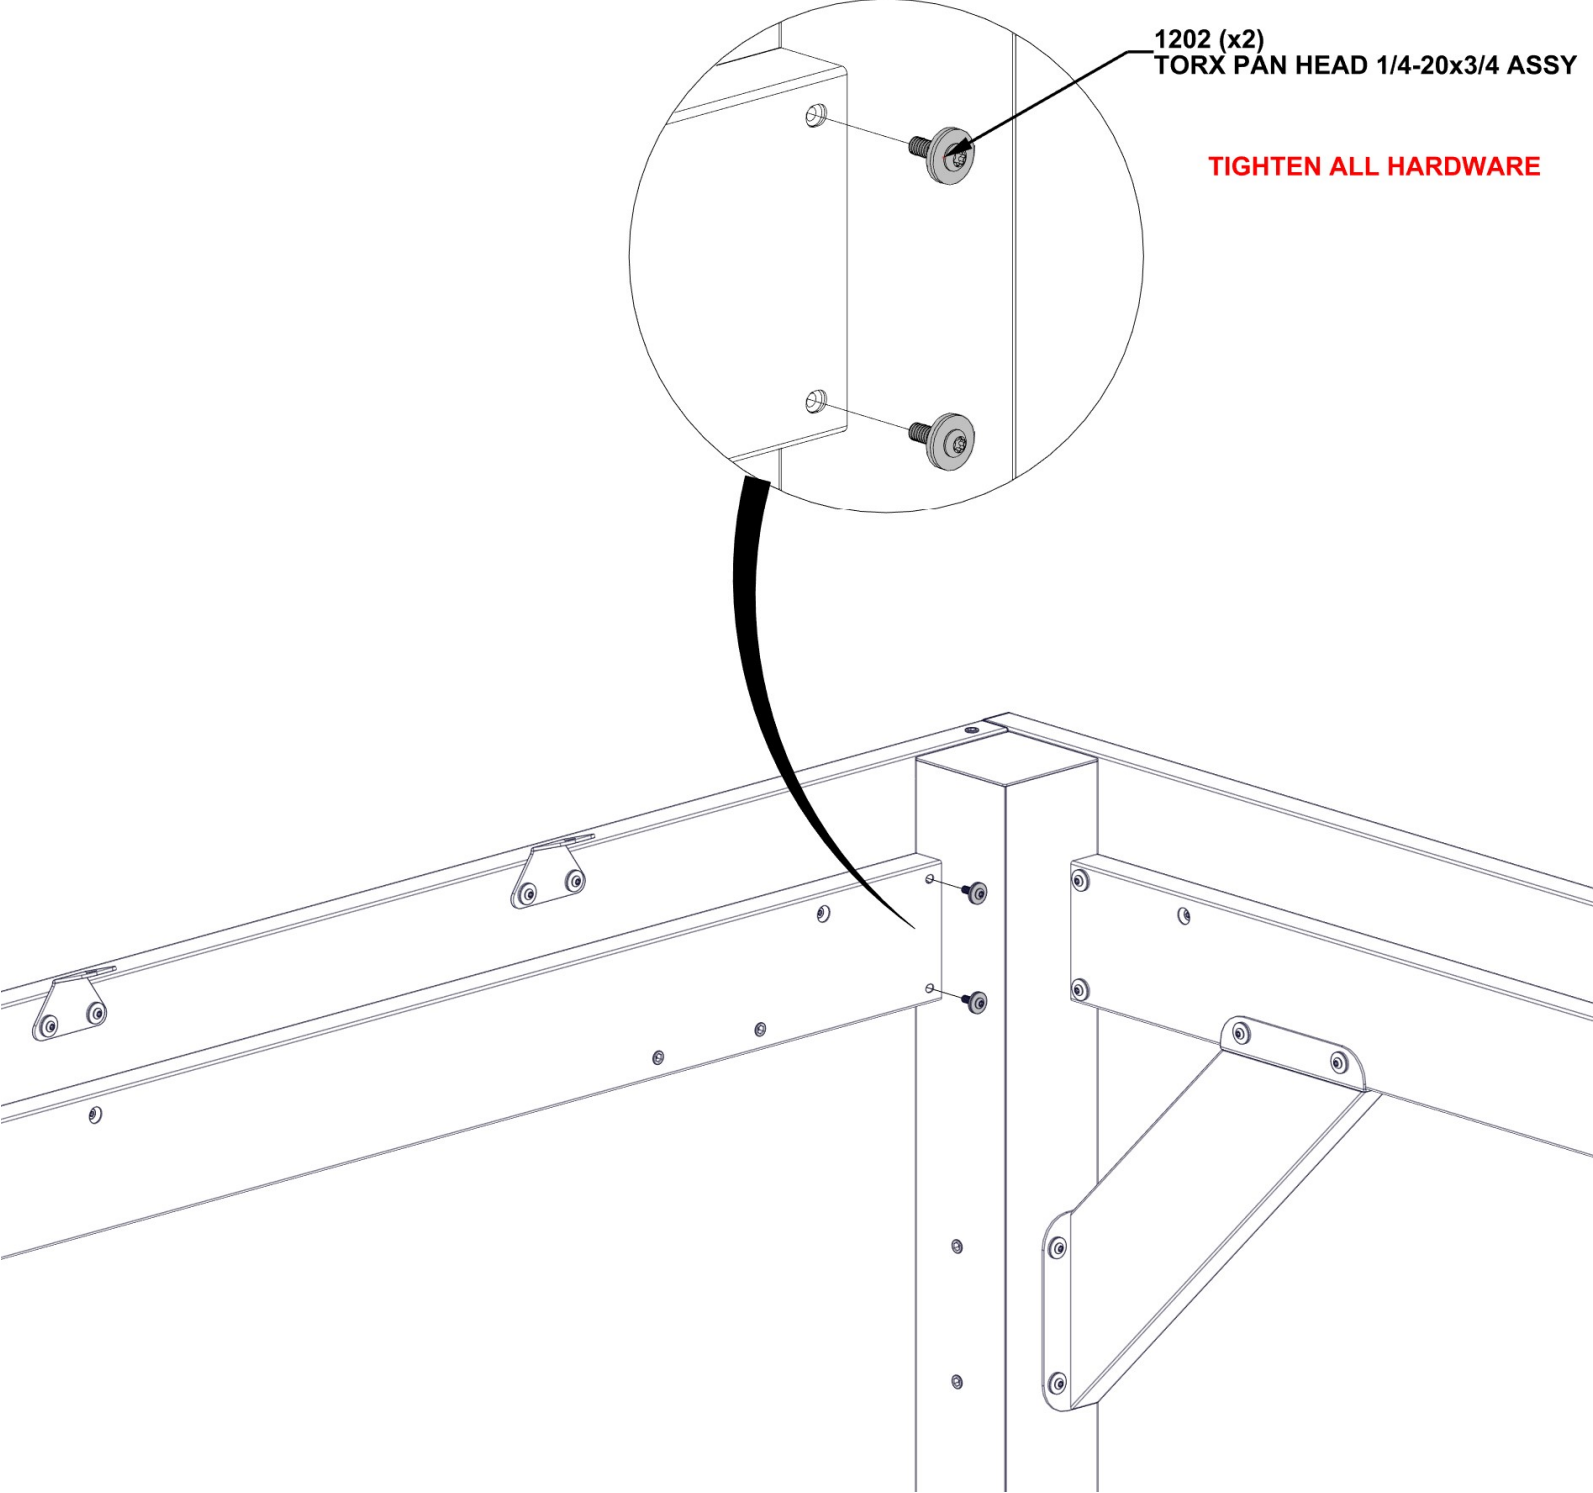


# STEP 18 - FRAME ASSEMBLY



C01 CORBEL ASSEMBLY - A4M03525  
(x1) 21 13/16"x5 1/4"x2 3/4" (70x134x553.5)

QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- ATTACH CORBELS TO BEAM AND POST.
- SQUARE AS NEEDED BEFORE TIGHTENING ALL HARDWARE.

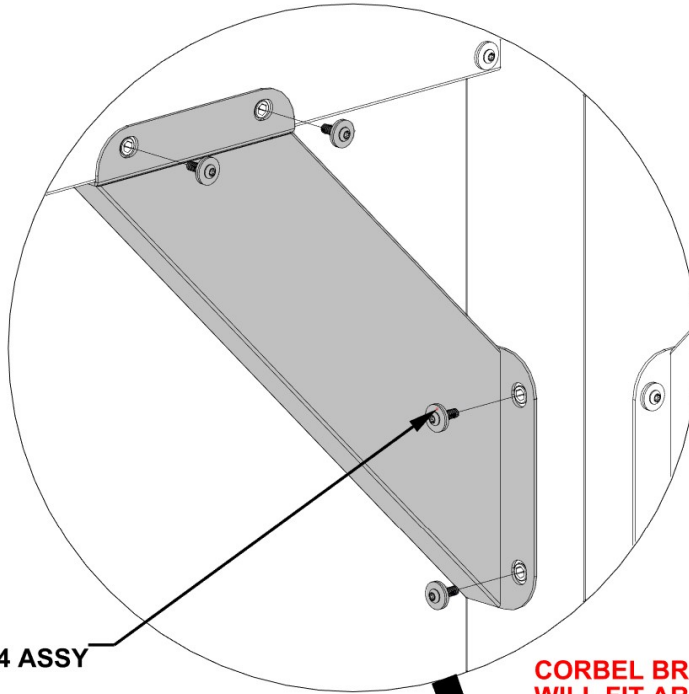


1202 (x4)  
TORX PAN HEAD 1/4-20x3/4 ASSY

**CORBEL BRACKET HOLES  
WILL FIT AROUND THREADED  
INSERTS AND FLUSH AGAINST  
BEAM AND POST**


C01 (x1)  
CORBEL ASSEMBLY

# STEP 19A - FRAME ASSEMBLY




BEAM ASSEMBLY FROM STEPS 1 - 5

- WITH AT LEAST TWO OTHER PEOPLE, SPREAD FRONT POST APART ENOUGH TO ATTACH BEAM ASSEMBLY INTO BEAM BRACKETS.

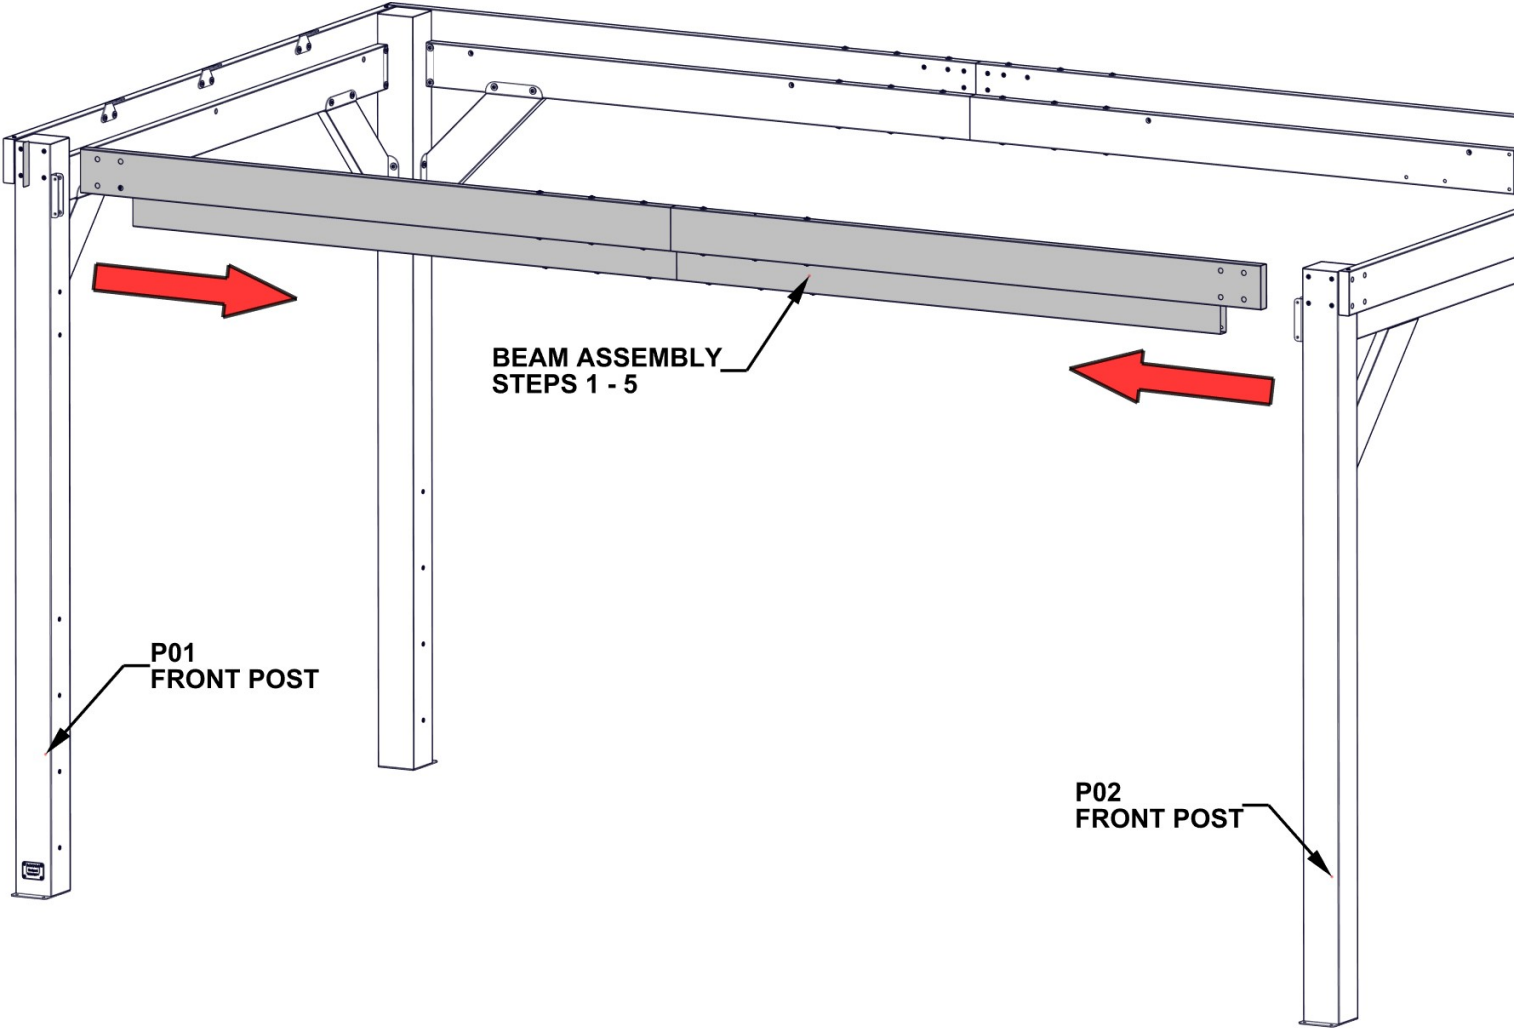

# STEP 19B - FRAME ASSEMBLY

QTY	PartNo	DESCRIPTION
8	H101103	TORX SOCKET SCREW 1/4-20

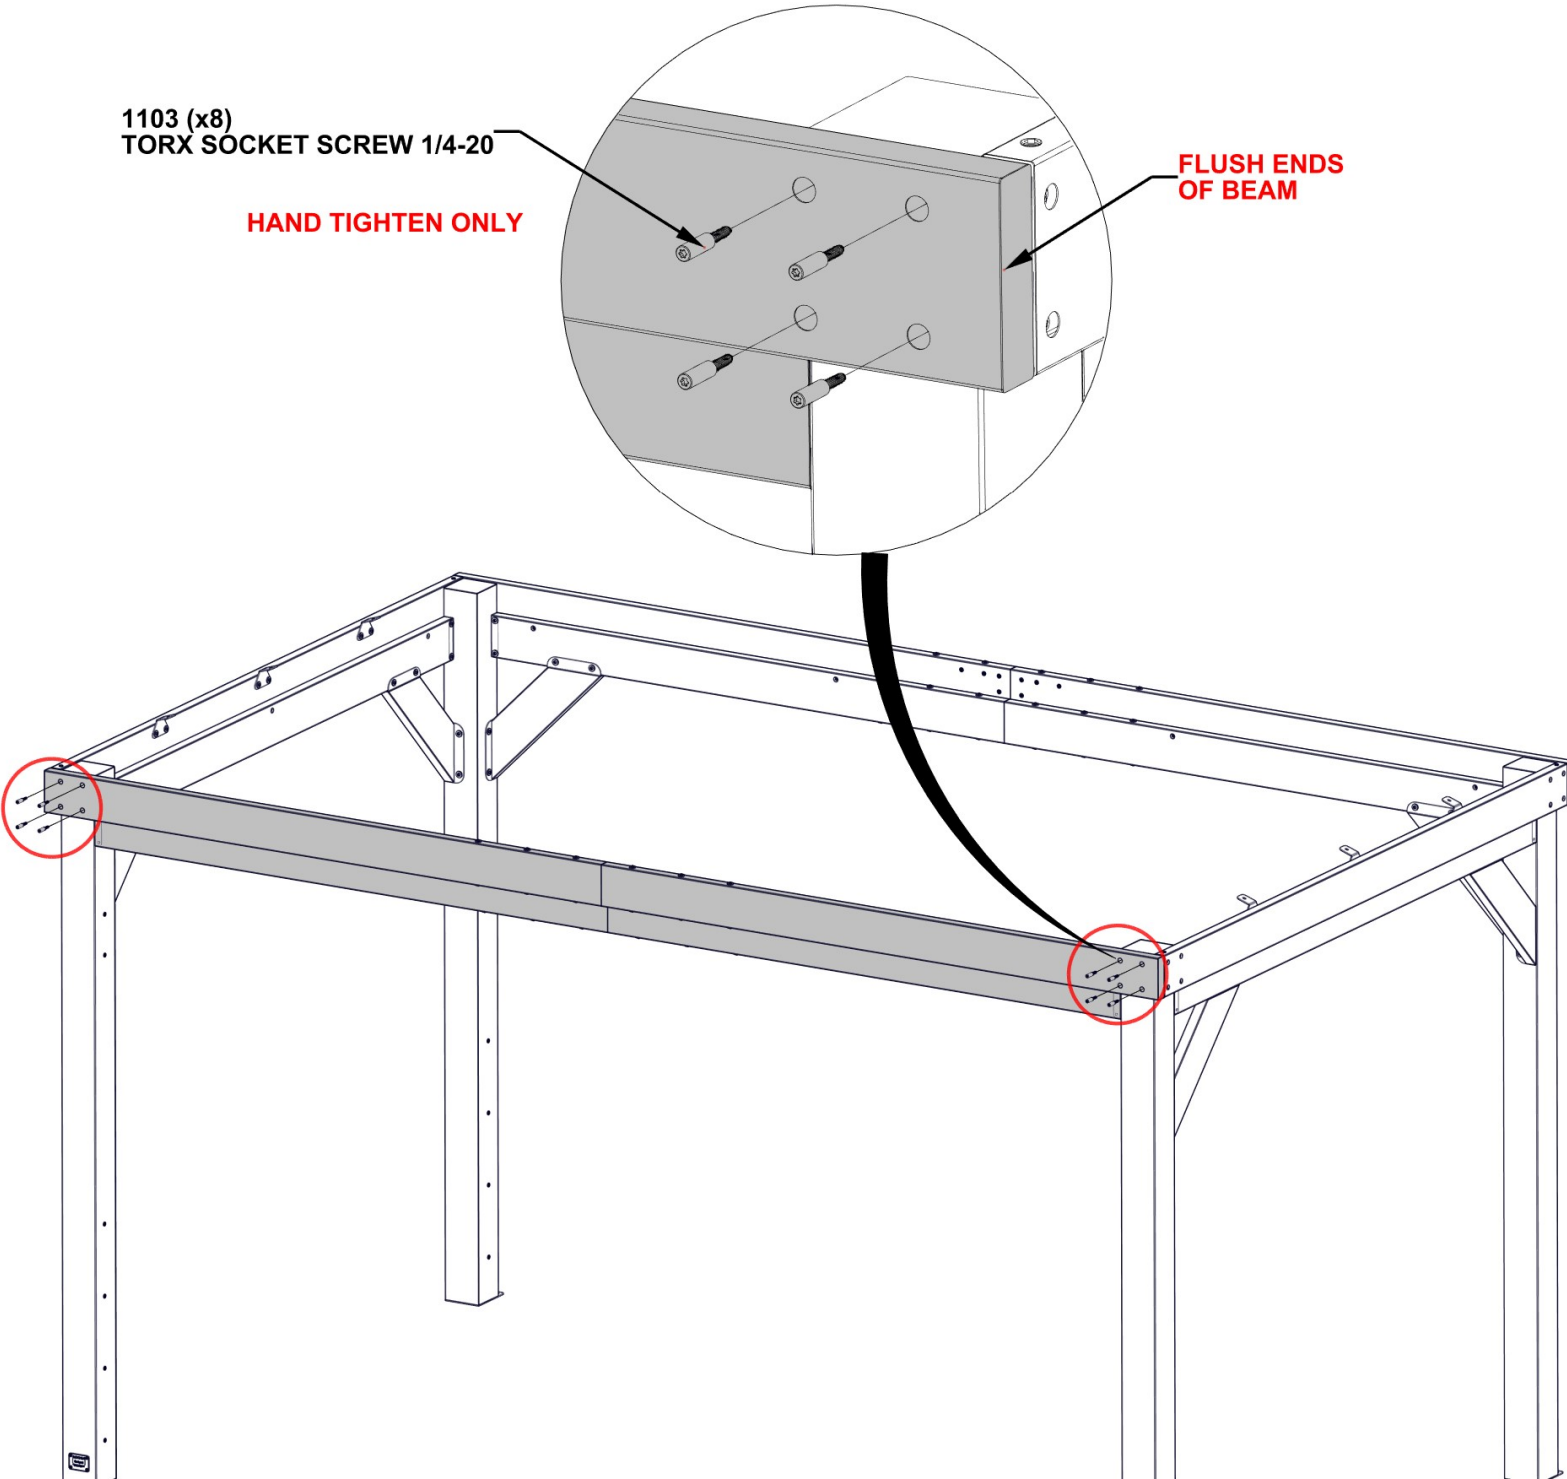



# STEP 19C - FRAME ASSEMBLY

QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- SQUARE BEAM ASSEMBLY TO POST

1202 (x4)  
TORX PAN HEAD 1/4-20x3/4 ASSY

**TIGHTEN ALL HARDWARE**

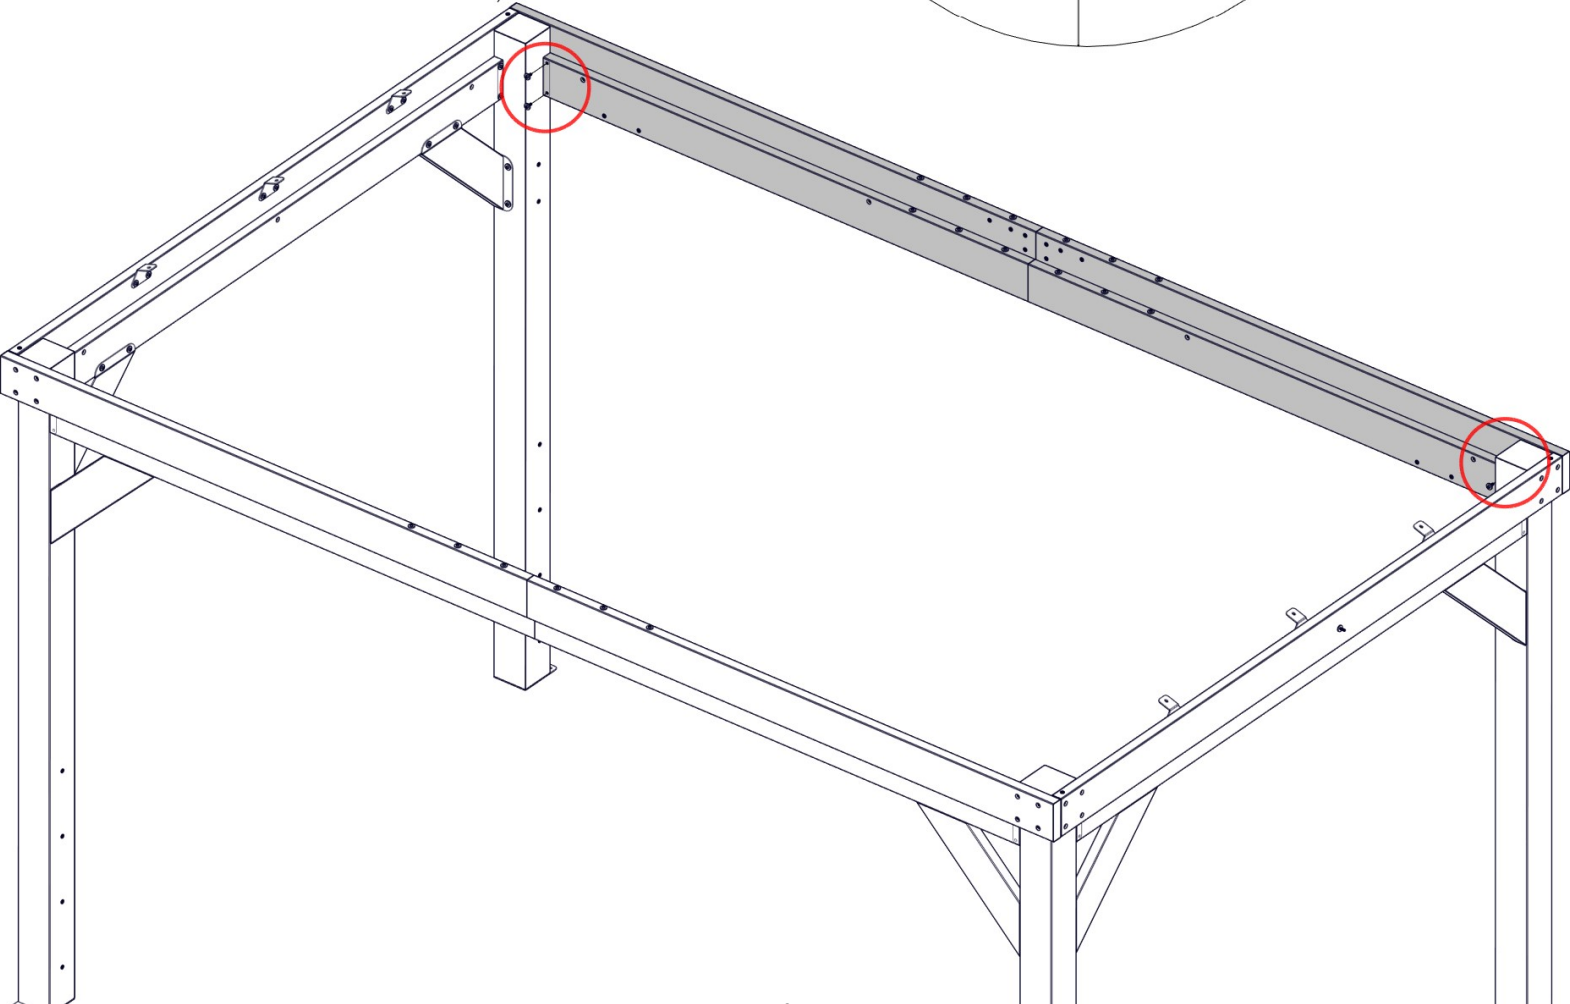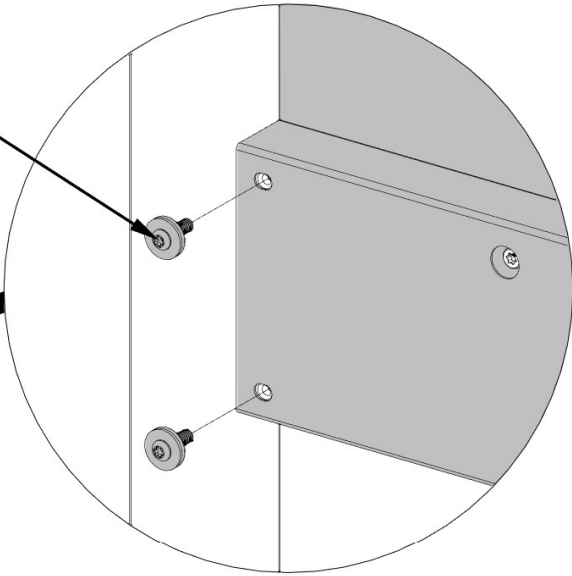

# STEP 20 - FRAME ASSEMBLY

QTY	PartNo	DESCRIPTION
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




C01 CORBEL ASSEMBLY - A4M03525  
(x1) 21 13/16"x5 1/4"x2 3/4" (70x134x553.5)



C02 CORBEL ASSEMBLY - A4M03526  
(x1) 21 13/16"x5 1/4"x2 3/4" (70x134x553.5)

- ATTACH CORBELS TO BEAM AND POST.
- SQUARE AS NEEDED BEFORE TIGHTENING ALL HARDWARE FROM PREVIOUS STEPS.


1202 (x8)  
TORX PAN HEAD 1/4-20x3/4 ASSY

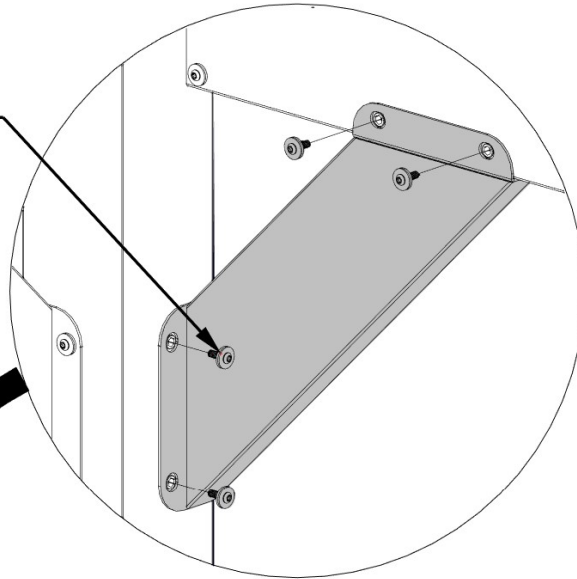

**CORBEL BRACKET HOLES  
WILL FIT AROUND THREADED  
INSERTS AND FLUSH AGAINST  
BEAM AND POST**

C02 (x1)  
CORBEL ASSEMBLY


C01 (x1)  
CORBEL ASSEMBLY

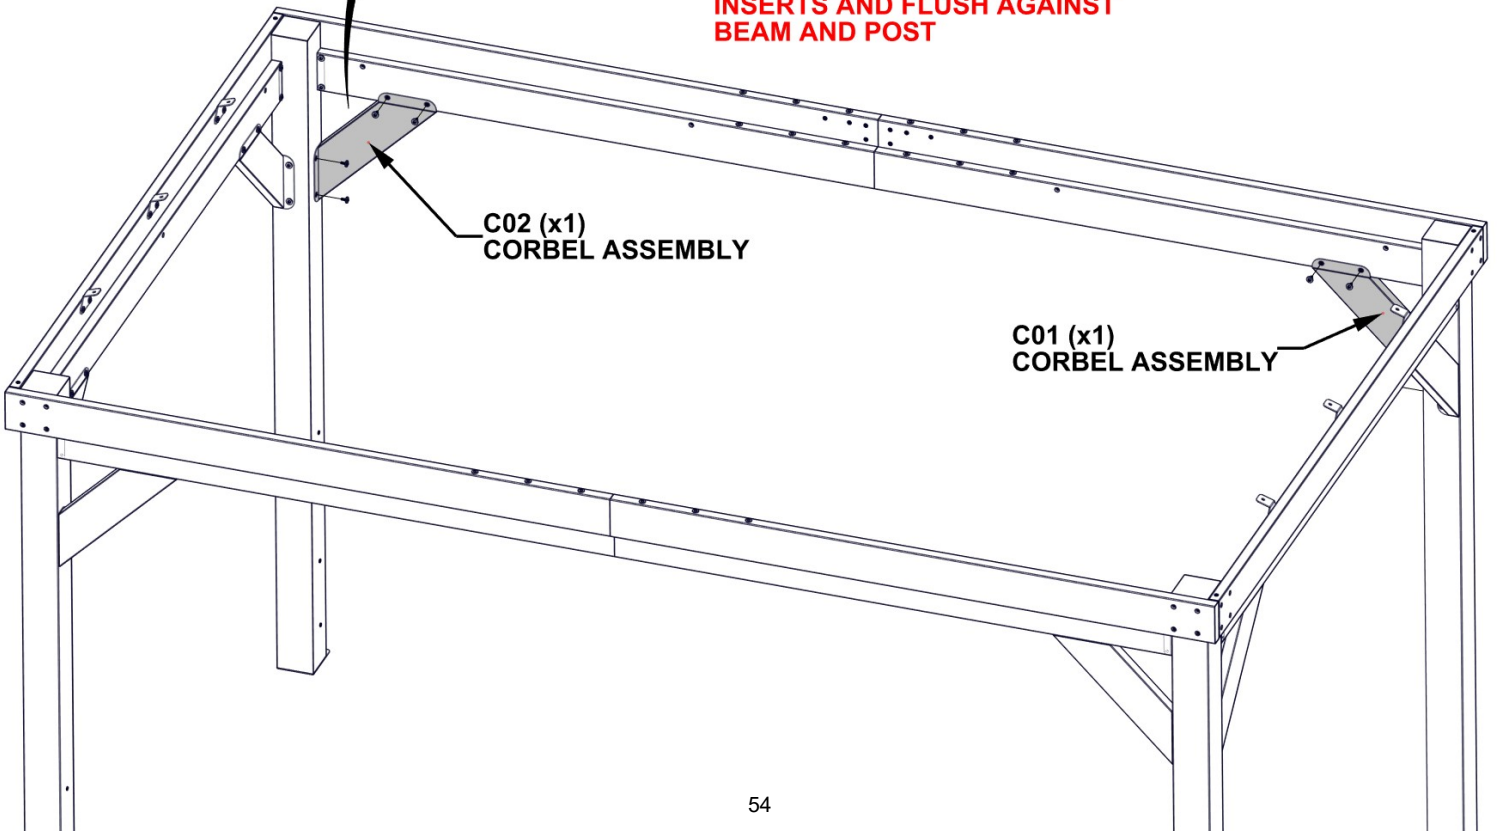

# STEP 21 - SQUARE STRUCTURE

- CRITICAL:**
- SQUARE UNIT BEFORE PROCEEDING TO NEXT STEPS.
  - THE BELOW DIMENSIONS ARE CRITICAL TO THE FINAL ASSEMBLY.
  - MEASUREMENTS SHOULD BE WITHIN +/- 1/4" (6mm).
  - MEASUREMENTS OUTSIDE OF TOLERANCE WILL LEAD TO ISSUES ON FUTURE ASSEMBLY STEPS.
  - TIGHTEN ALL HARDWARE FROM PREVIOUS STEPS.

MEASUREMENTS TAKEN FROM INSIDE CORNER TO INSIDE CORNER OF POST

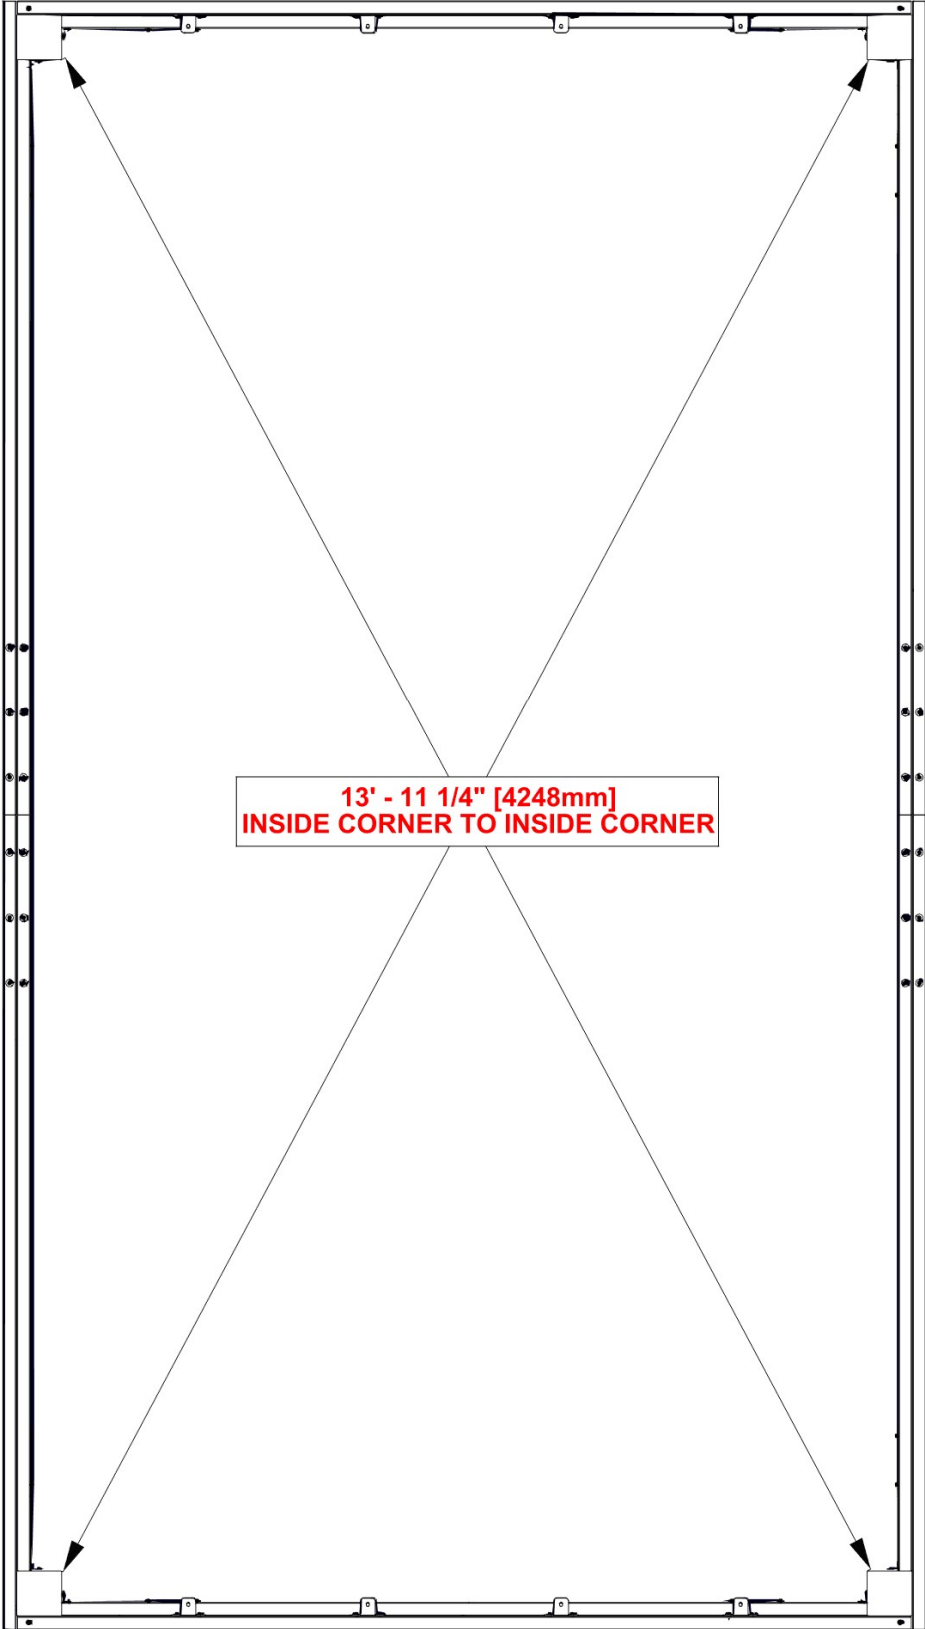

# STEP 22 - GABLE ASSEMBLY




**B07 GABLE ARM ASSEMBLY - A4M03513**  
 (x2) 29 3/16"x5 1/4"x1 7/16" (36x134x741)

QTY	PartNo	DESCRIPTION
8	H101103	TORX SOCKET SCREW 1/4-20

**- YOU WILL NEED A LADDER FOR STEPS 22 - 49.**

**1103 (x8)**  
**TORX SOCKET SCREW 1/4-20**

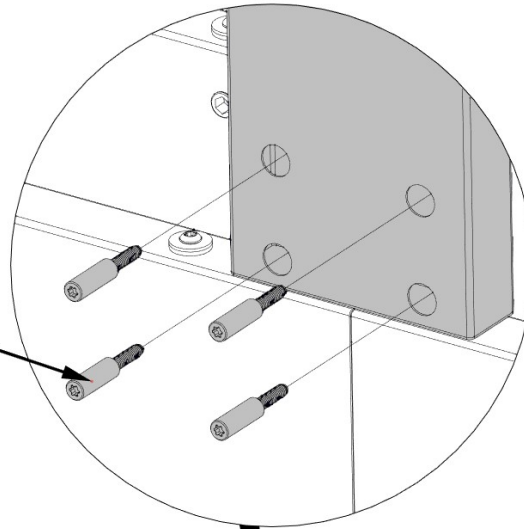

**THREADED INSERTS WILL  
 FACE TOWARD EACH OTHER  
 ON GABLE ARMS**

**B07 (x2)**  
**GABLE ARM ASSEMBLY**

# STEP 23 - RIDGE BEAM ASSEMBLY

QTY	PartNo	DESCRIPTION
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




**B11 RIDGE BEAM ASSEMBLY - A4M03517**  
 (x1) 61 3/16"x5 1/4"x1 7/16" (36x134x1554)



**J2 SPLICE BRACKET - A4M01270**  
 (x1) 1 1/4"X5 1/8"X15 3/4" (33x131x400)

- FOR EASE OF ASSEMBLY, WE RECOMMEND USING SAW HORSES FOR STEPS 23 - 25.

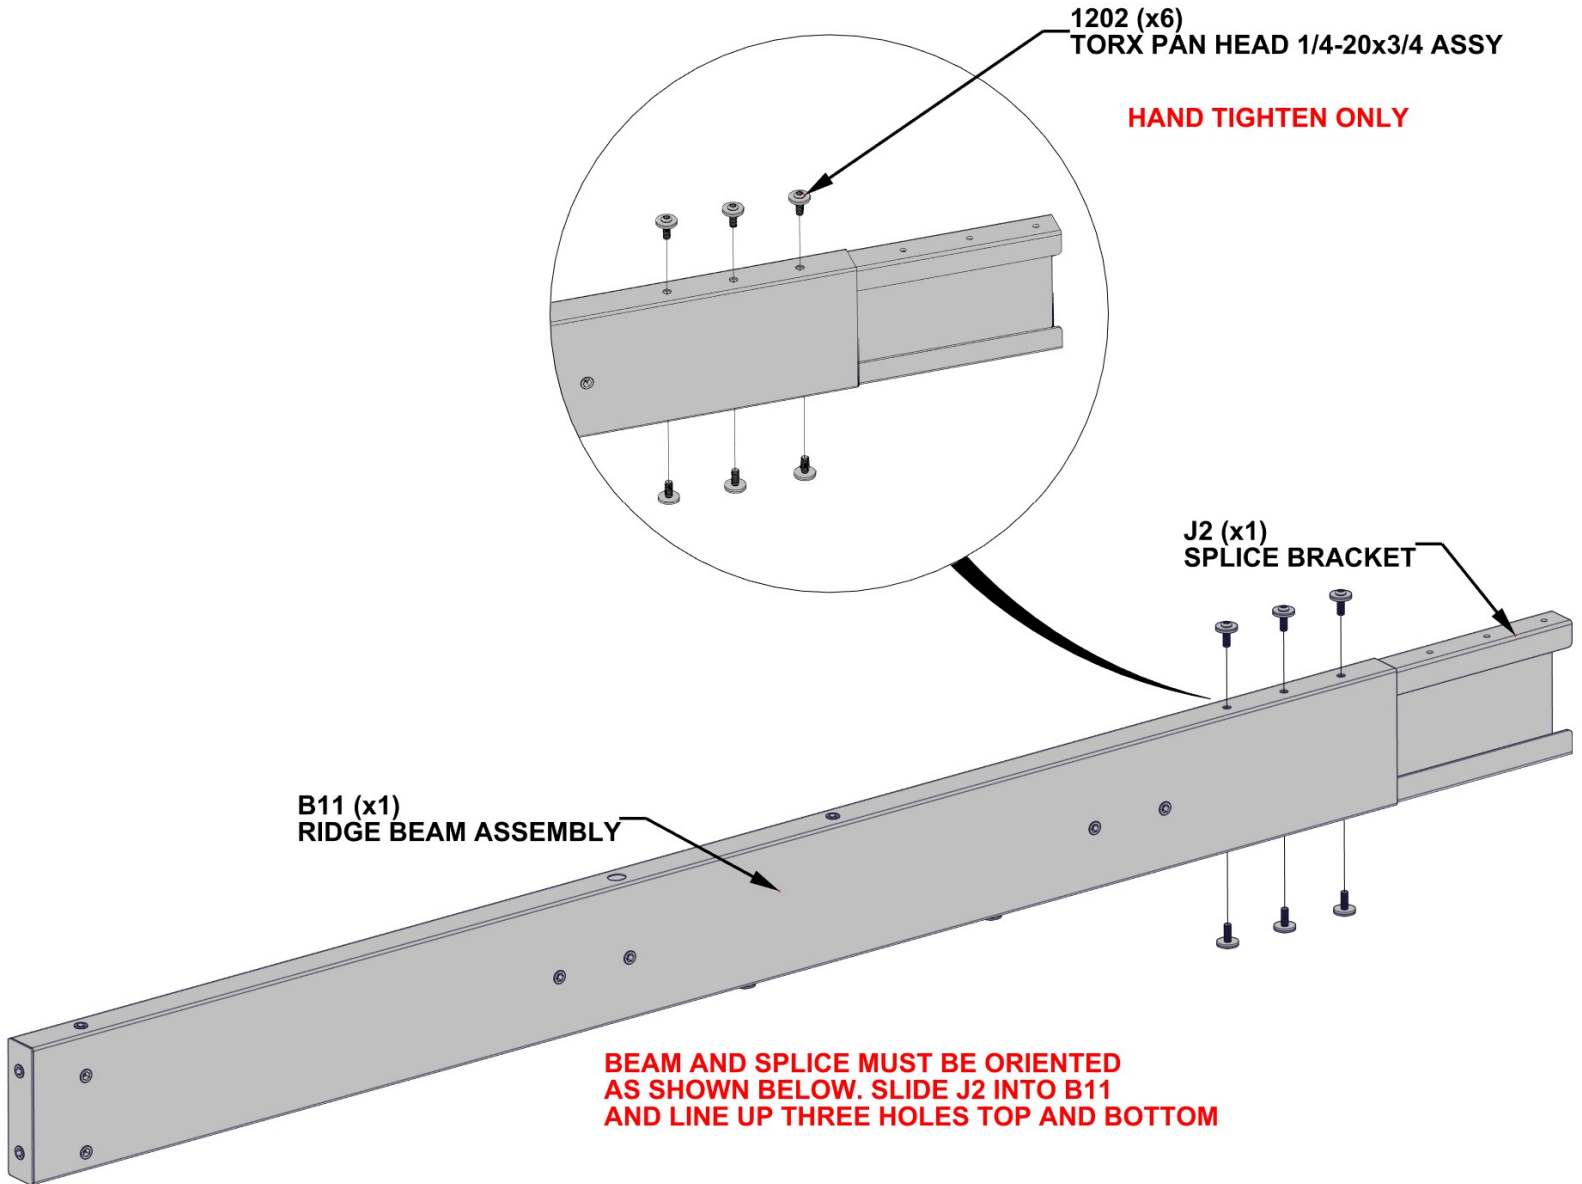


# STEP 24 - RIDGE BEAM ASSEMBLY

QTY	PartNo	DESCRIPTION
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



**B10 RIDGE BEAM ASSEMBLY - A4M03516**  
(x1) 67 1/16"x5 1/4"x1 7/16" (36x134x1704)

- SLIDE B10 INTO SPLICE BRACKET.  
GENTLY TAP ENDS OF ASSEMBLY WITH  
RUBBER Mallet UNTIL GAP CLOSES.

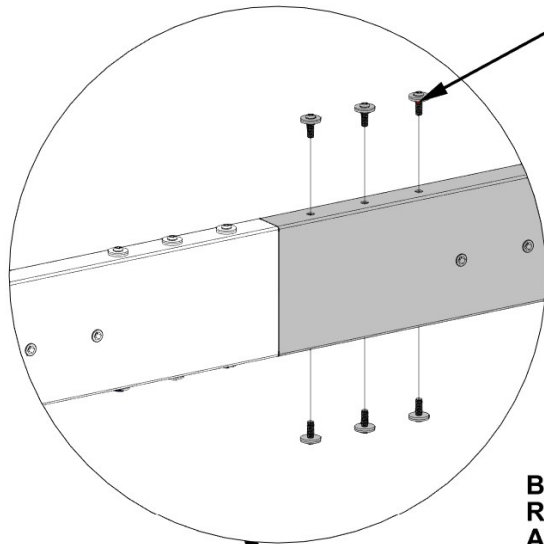


**1202 (x6)**  
**TORX PAN HEAD 1/4-20x3/4 ASSY**


**TIGHTEN ALL HARDWARE**

**B10 (x1)**  
**RIDGE BEAM**  
**ASSEMBLY**

**THREADED INSERTS CLOSEST**  
**TO END OF BEAM INDICATE**  
**TOP OF RIDGE**

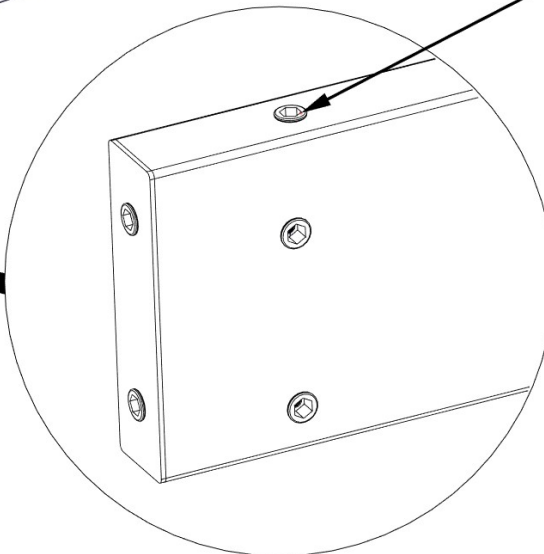

# STEP 25 - RIDGE BEAM ASSEMBLY

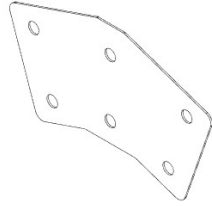

QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

J3 GABLE BRACKET - A4M03805  
 (x2) 11 1/8"x6 7/16"x1/16" (2x163x282)


1202 (x4)  
 TORX PAN HEAD 1/4-20x3/4 ASSY

**BRACKET HOLES  
 WILL FIT AROUND  
 THREADED INSERTS**

**FLUSH BOTTOM OF  
 BRACKET WITH BOTTOM  
 SIDE OF RIDGE BEAM**


**THREADED INSERTS CLOSEST  
 TO END OF BEAM INDICATE  
 TOP OF RIDGE**

J3 (x2)  
 GABLE BRACKET

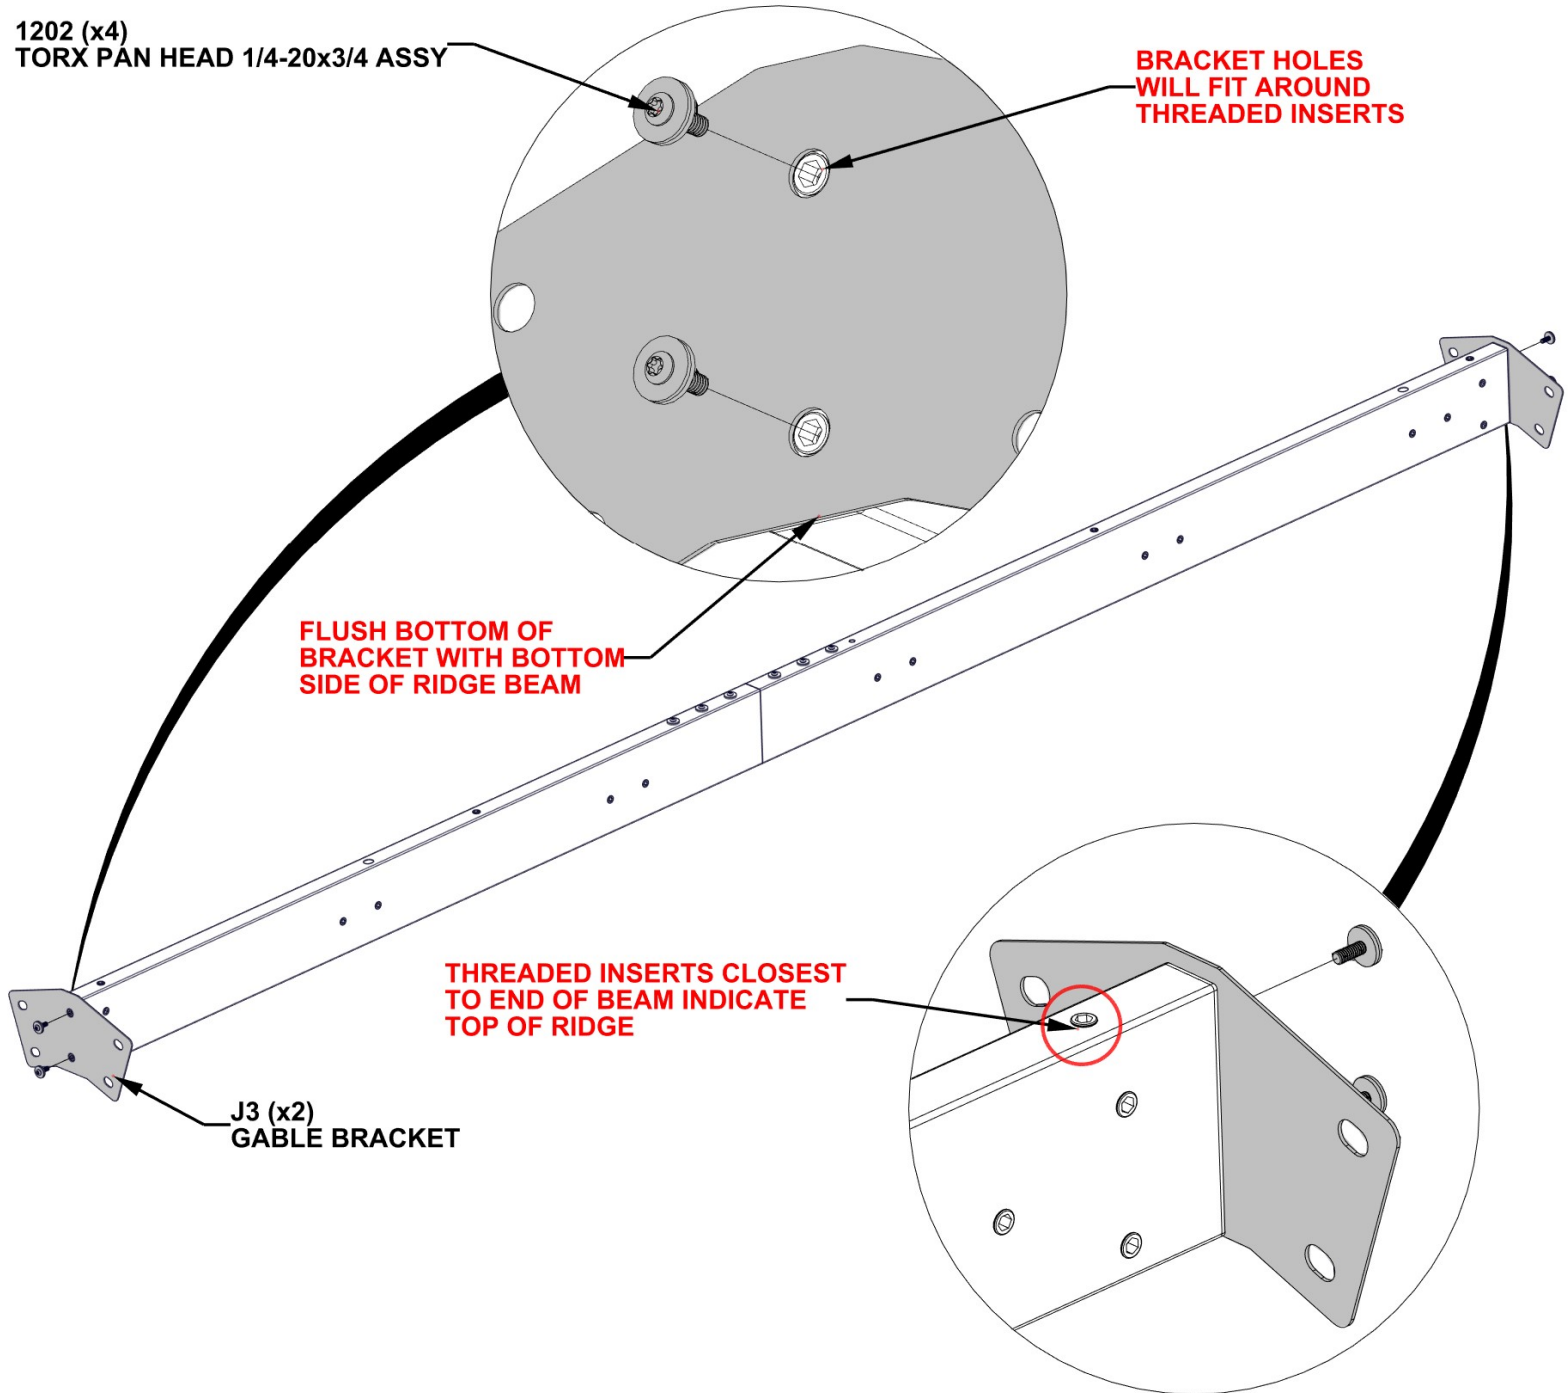


# STEP 26 - RIDGE ASSEMBLY

QTY	PartNo	DESCRIPTION
2	H101230	BOLT WH 5/16x6 S.S.

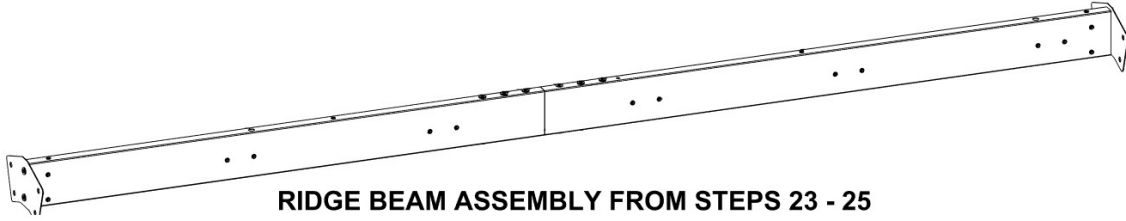

- WITH AT LEAST TWO PEOPLE, ATTACH RIDGE ASSEMBLY TO GABLE UPRIGHTS.
- RIDGE BEAM ASSEMBLY MUST BE ORIENTED AS SHOWN BELOW WITH LONG OVERHANG TOWARD THE FRONT

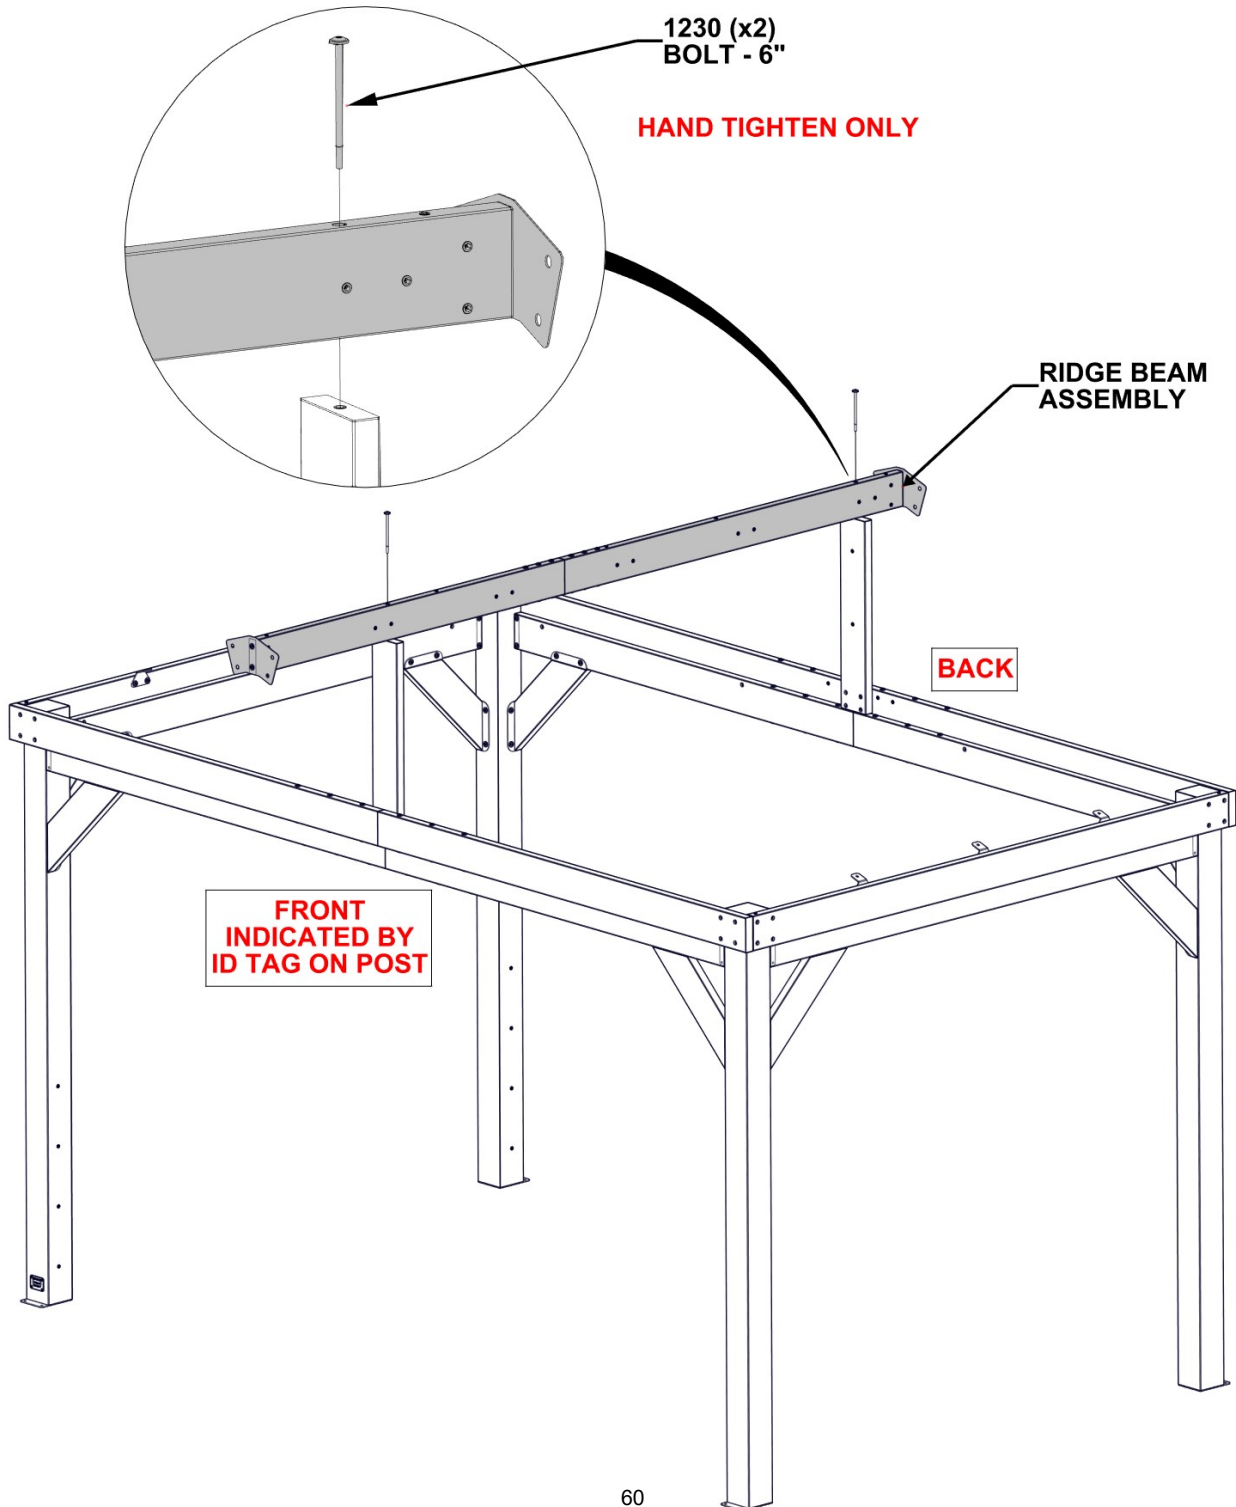

# STEP 27 - RIDGE ASSEMBLY



C03 CORBEL ASSEMBLY - A4M03527  
(x2) 23 3/8"x12"x1 7/16" (36x304x593)


QTY	PartNo	DESCRIPTION
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- IT IS RECOMMENDED TO USE PROVIDED ANGLE DRIVER TO INSTALL HARDWARE IN THIS STEP.
- ATTACH CORBELS TO RIDGE BEAM AND GABLE ARMS.
- SQUARE AS NEEDED BEFORE TIGHTENING ALL HARDWARE FROM PREVIOUS STEPS.

1202 (x8)  
TORX PAN HEAD 1/4-20x3/4 ASSY


**TIGHTEN ALL HARDWARE**

**CORBEL BRACKET HOLES WILL FIT AROUND THREADED INSERTS AND FLUSH AGAINST RIDGE BEAM AND GABLE**

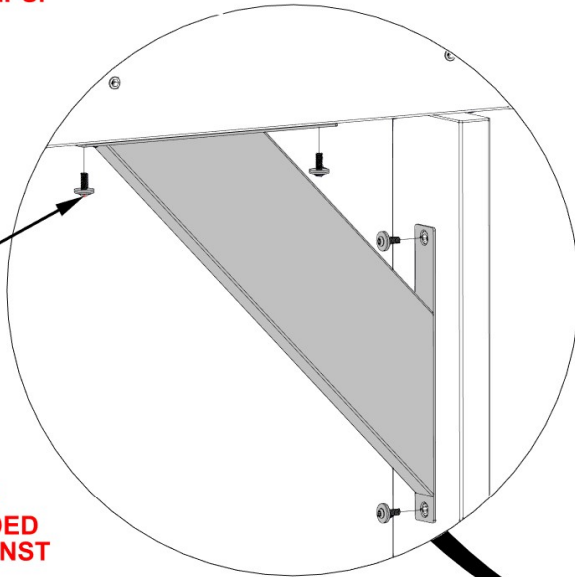


C03 (x1)  
CORBEL ASSEMBLY

C03 (x1)  
CORBEL ASSEMBLY

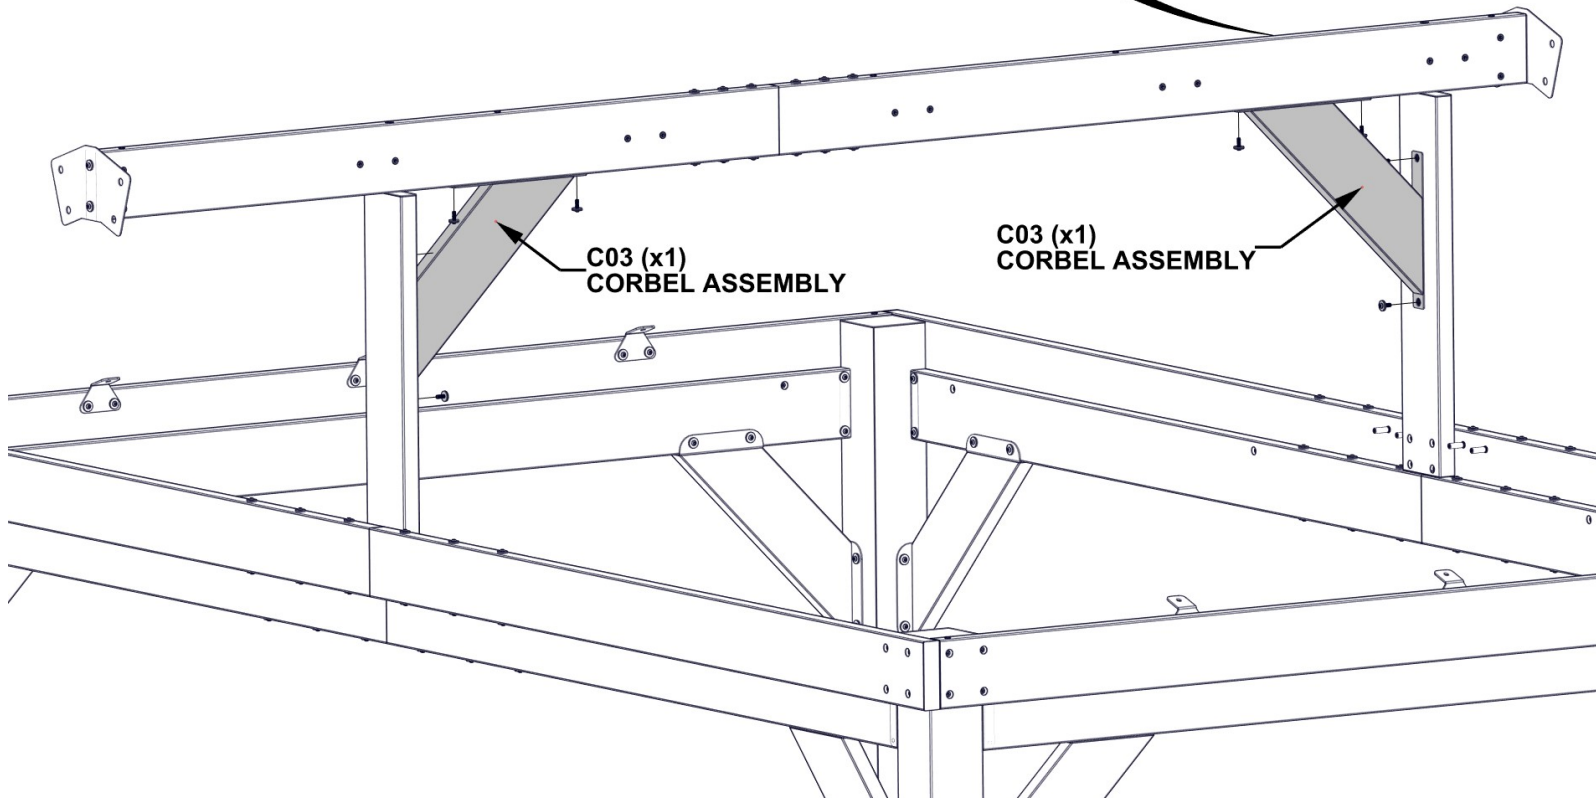

# STEP 28A - RIDGE ASSEMBLY



QTY	PartNo	DESCRIPTION
3	H101053	STEEL WASHER 6x20
3	H101054	SEALANT WASHER
3	H101293	TORX PAN HEAD 1/4-20x1 3/8"

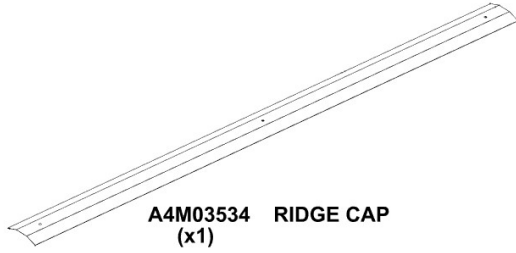


J10 SUPPORT RING - A4M03808  
(x3) 13/16"x7/16" (11x20x)

- REMOVE PROTECTIVE FILM.
- ORIENT RIDGE CAP AS SHOWN BELOW.
- **WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.**

**FLUSH END OF RIDGE CAP WITH RIDGE PLATE**

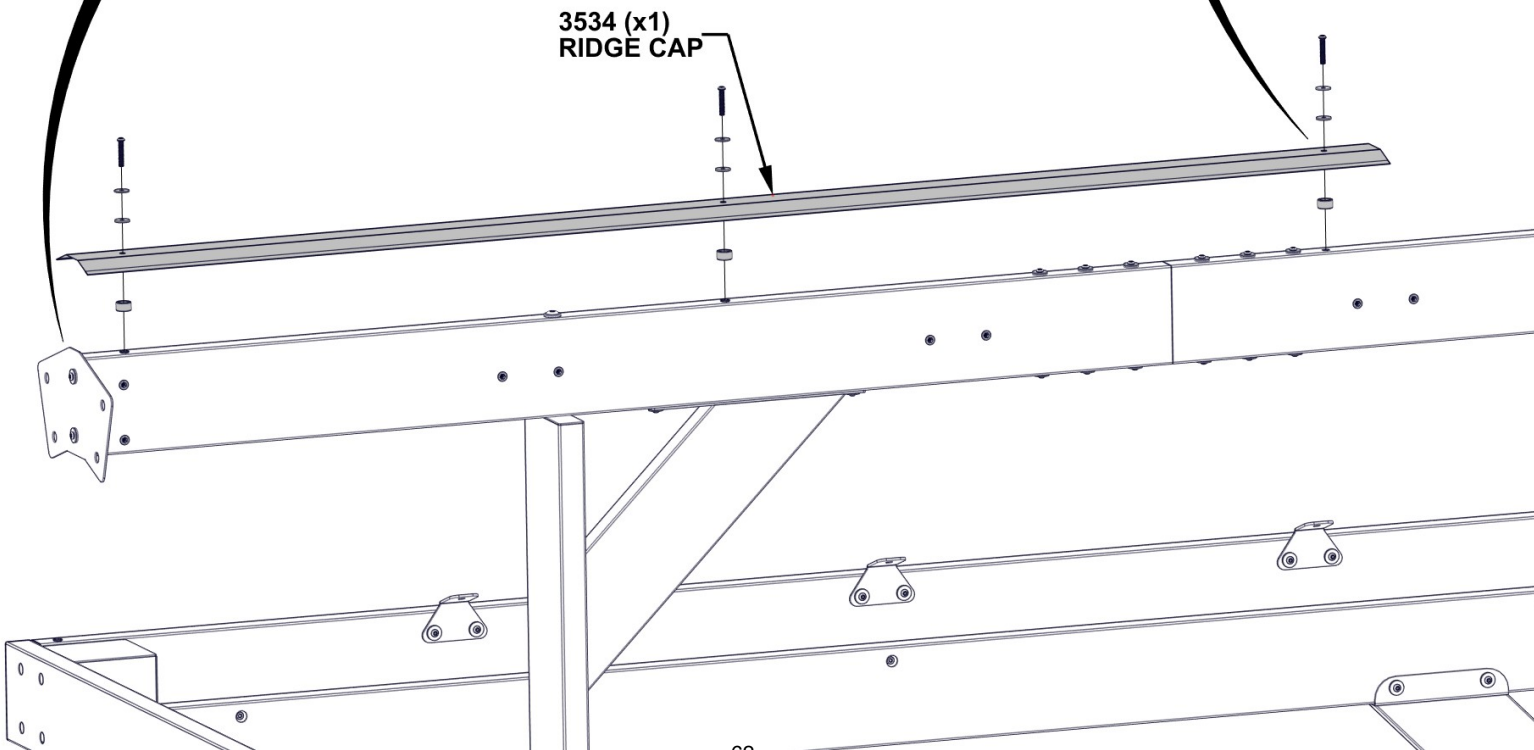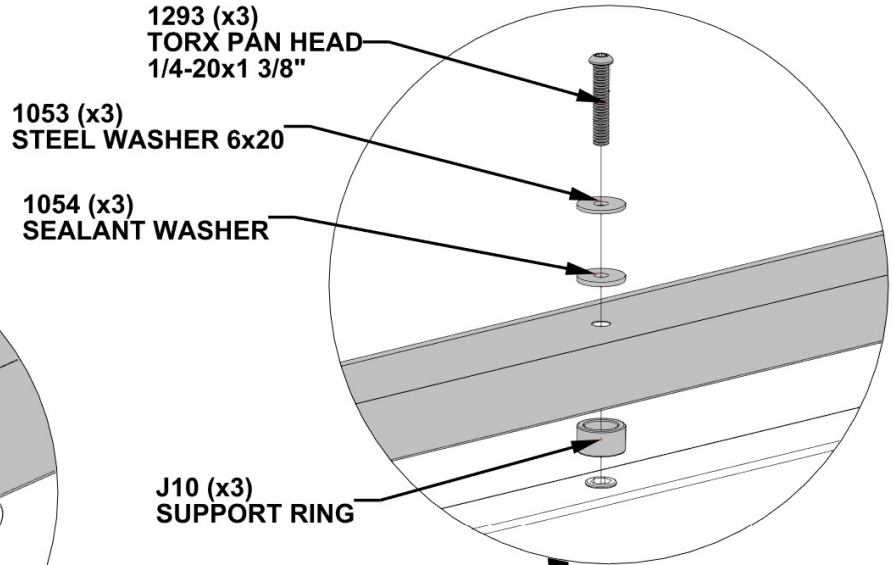

# STEP 28B - RIDGE ASSEMBLY


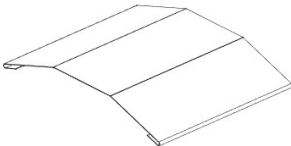


A4M03535 RIDGE CAP SPLICE  
(x1)

- REMOVE PROTECTIVE FILM.
- ORIENT RIDGE CAP SPLICE AS SHOWN BELOW.


**- WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.**

3535 (x1)  
RIDGE CAP SPLICE

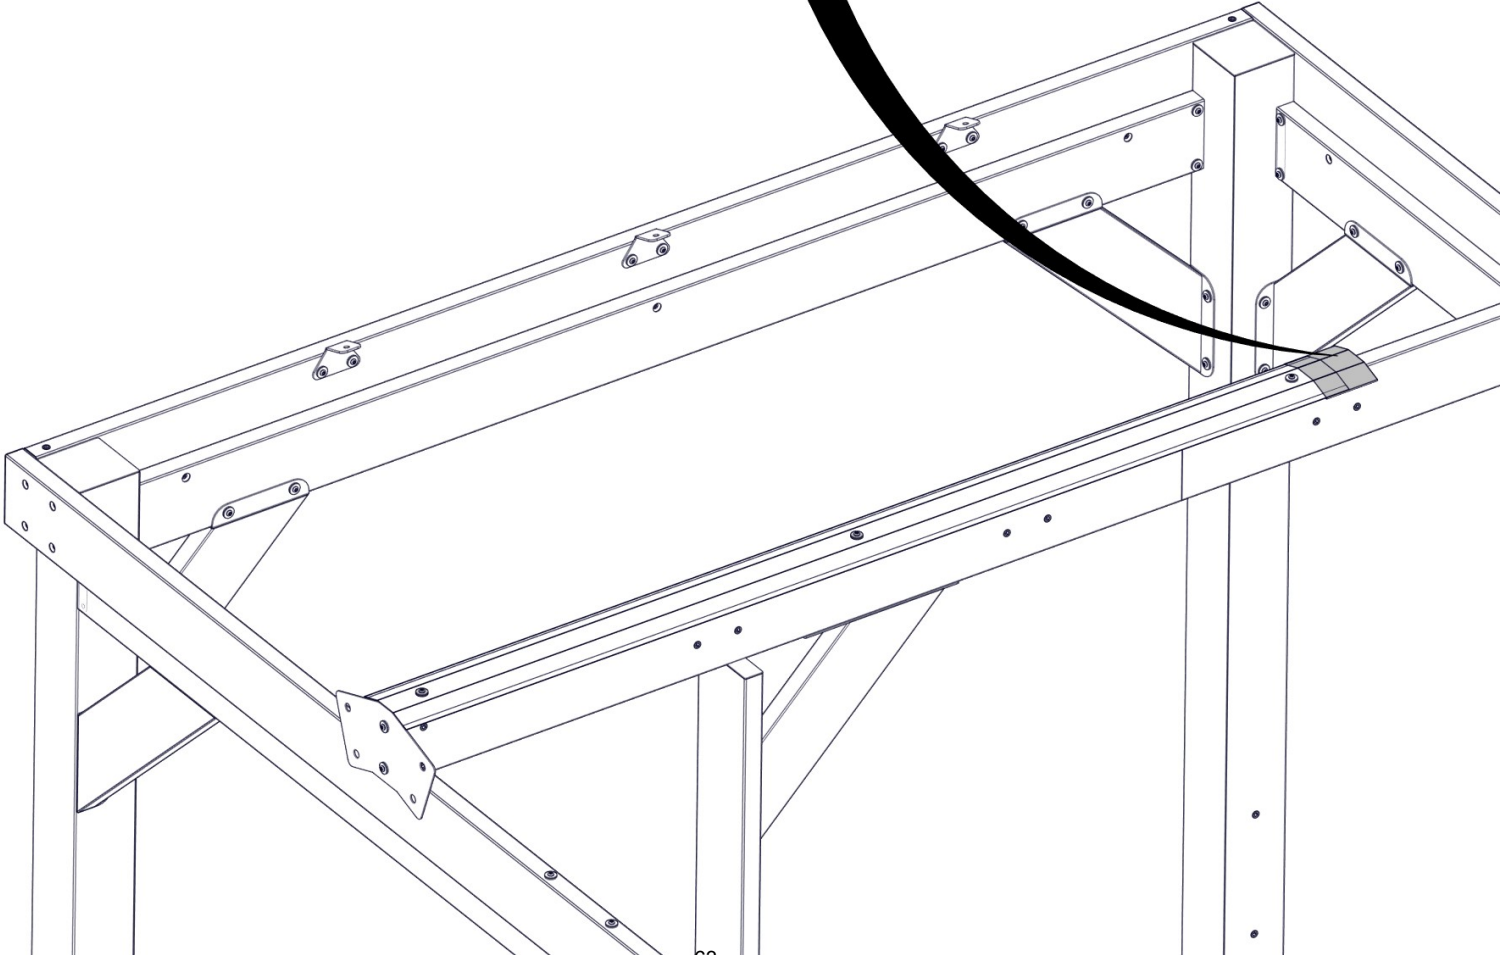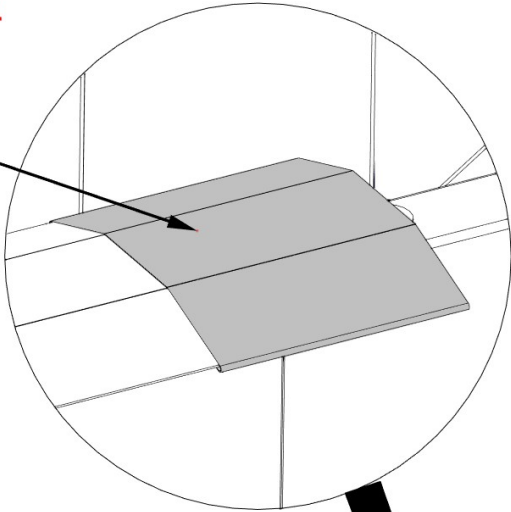

# STEP 28C - RIDGE ASSEMBLY

QTY	PartNo	DESCRIPTION
2	H101053	STEEL WASHER 6x20
2	H101054	SEALANT WASHER
2	H101293	TORX PAN HEAD 1/4-20x1 3/8"

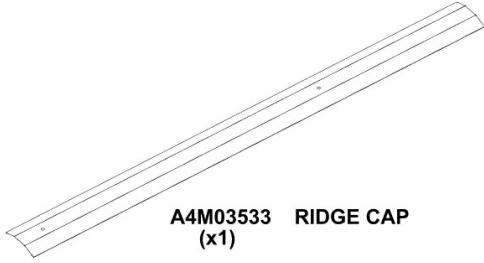

- REMOVE PROTECTIVE FILM.
- ORIENT RIDGE CAP AND SLIDE INTO RIDGE CAP SPLICE AS SHOWN BELOW.
- **WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.**

FLUSH END OF RIDGE CAP WITH RIDGE PLATE

1293 (x2)  
TORX PAN HEAD 1/4-20x1 3/8"


1053 (x2)  
STEEL WASHER 6x20

1054 (x2)  
SEALANT WASHER


J10 (x2)  
SUPPORT RING

3533 (x1)  
RIDGE CAP

SLIDE RIDGE CAP INTO SPLICE

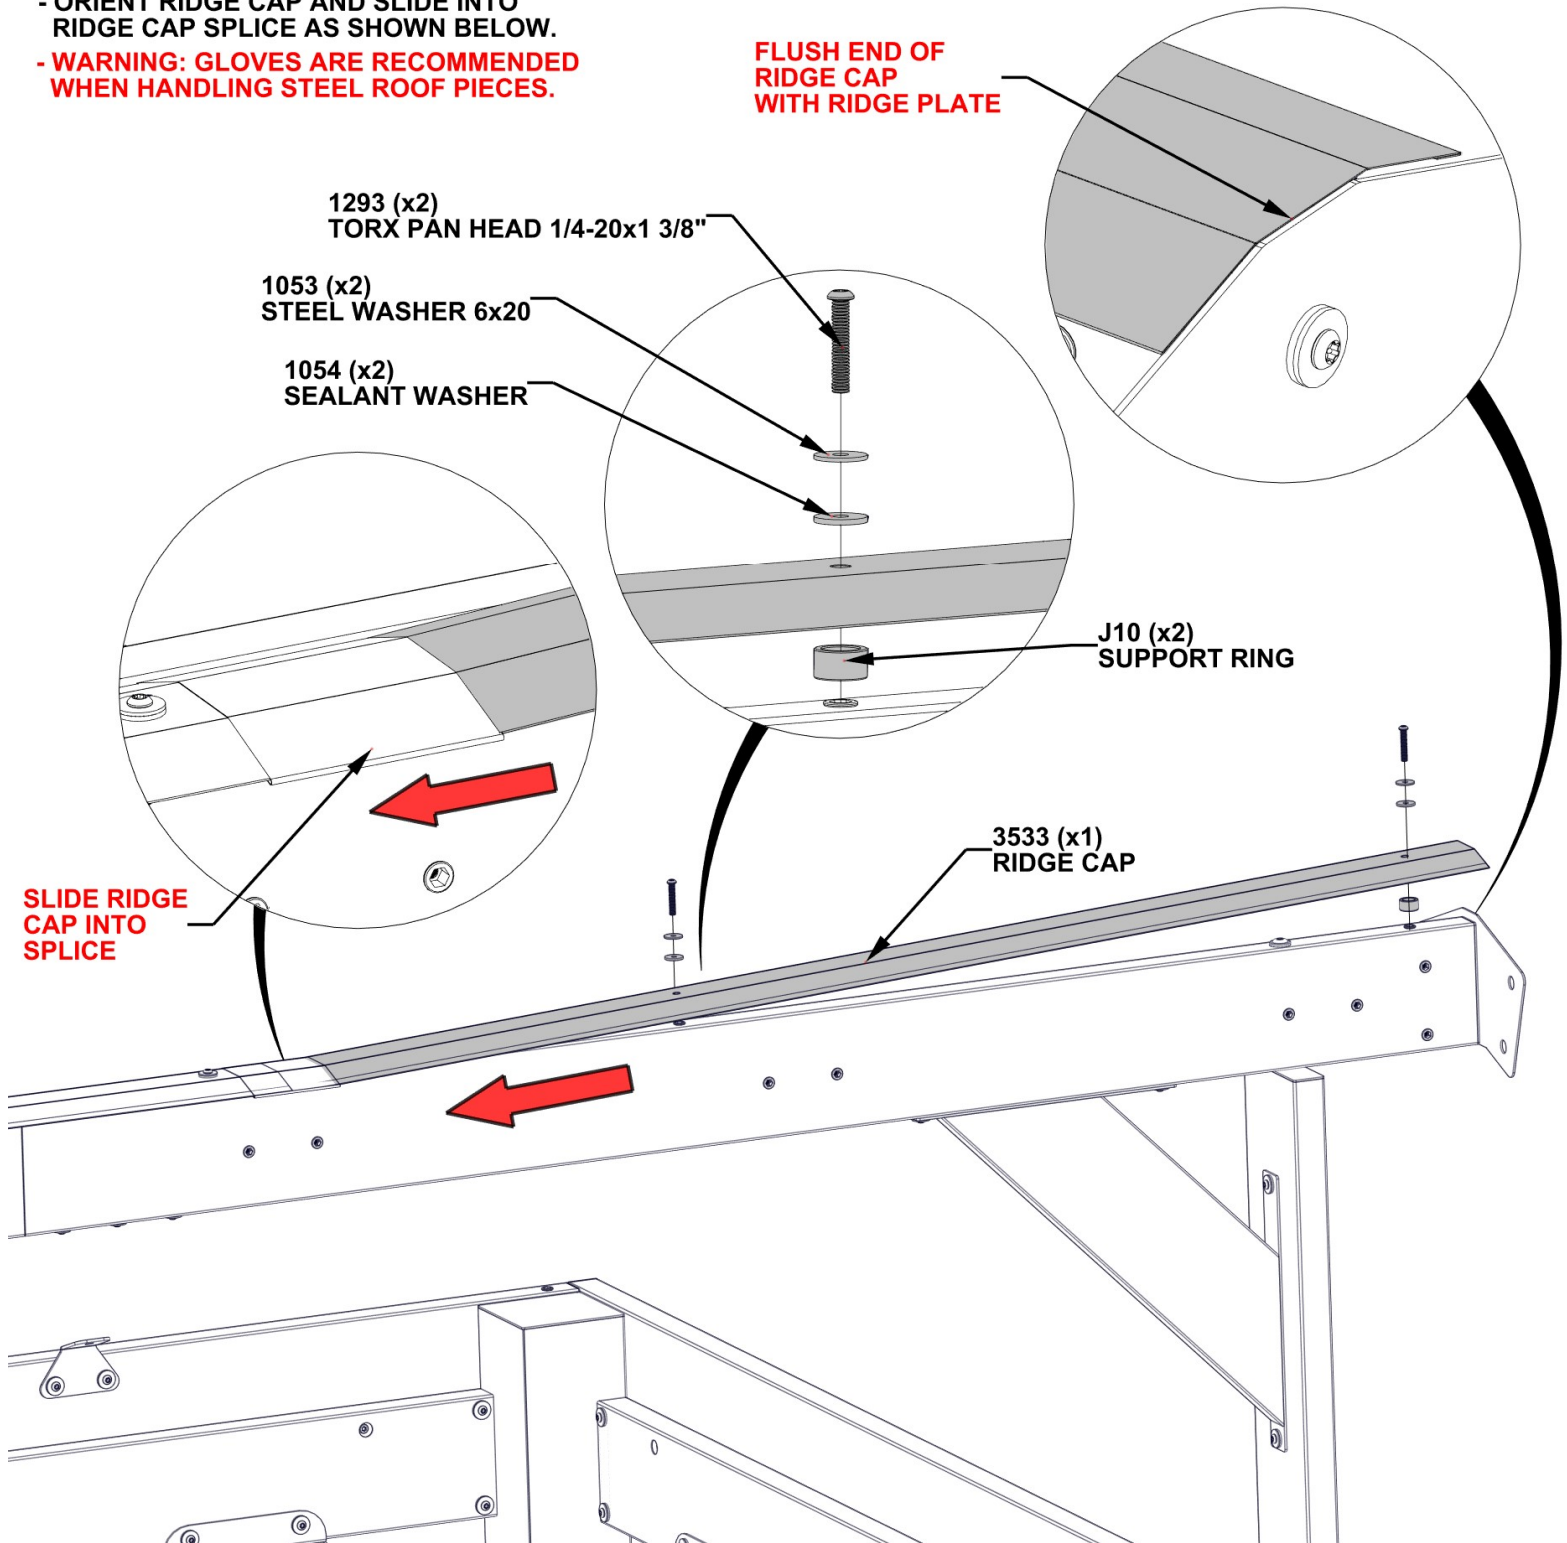

# STEP 29 - ROOF ASSEMBLY

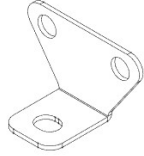

QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY


J7 RAFTER BRACKET - A4M03802  
(x4) 3 5/8"x2 3/16"x2" (50x55x92)

1202 (x4)  
TORX PAN HEAD 1/4-20x3/4 ASSY

J7 (x4)  
RAFTER BRACKET

**HAND TIGHTEN ONLY**

**BRACKET HOLES  
WILL FIT AROUND  
THREADED INSERTS**

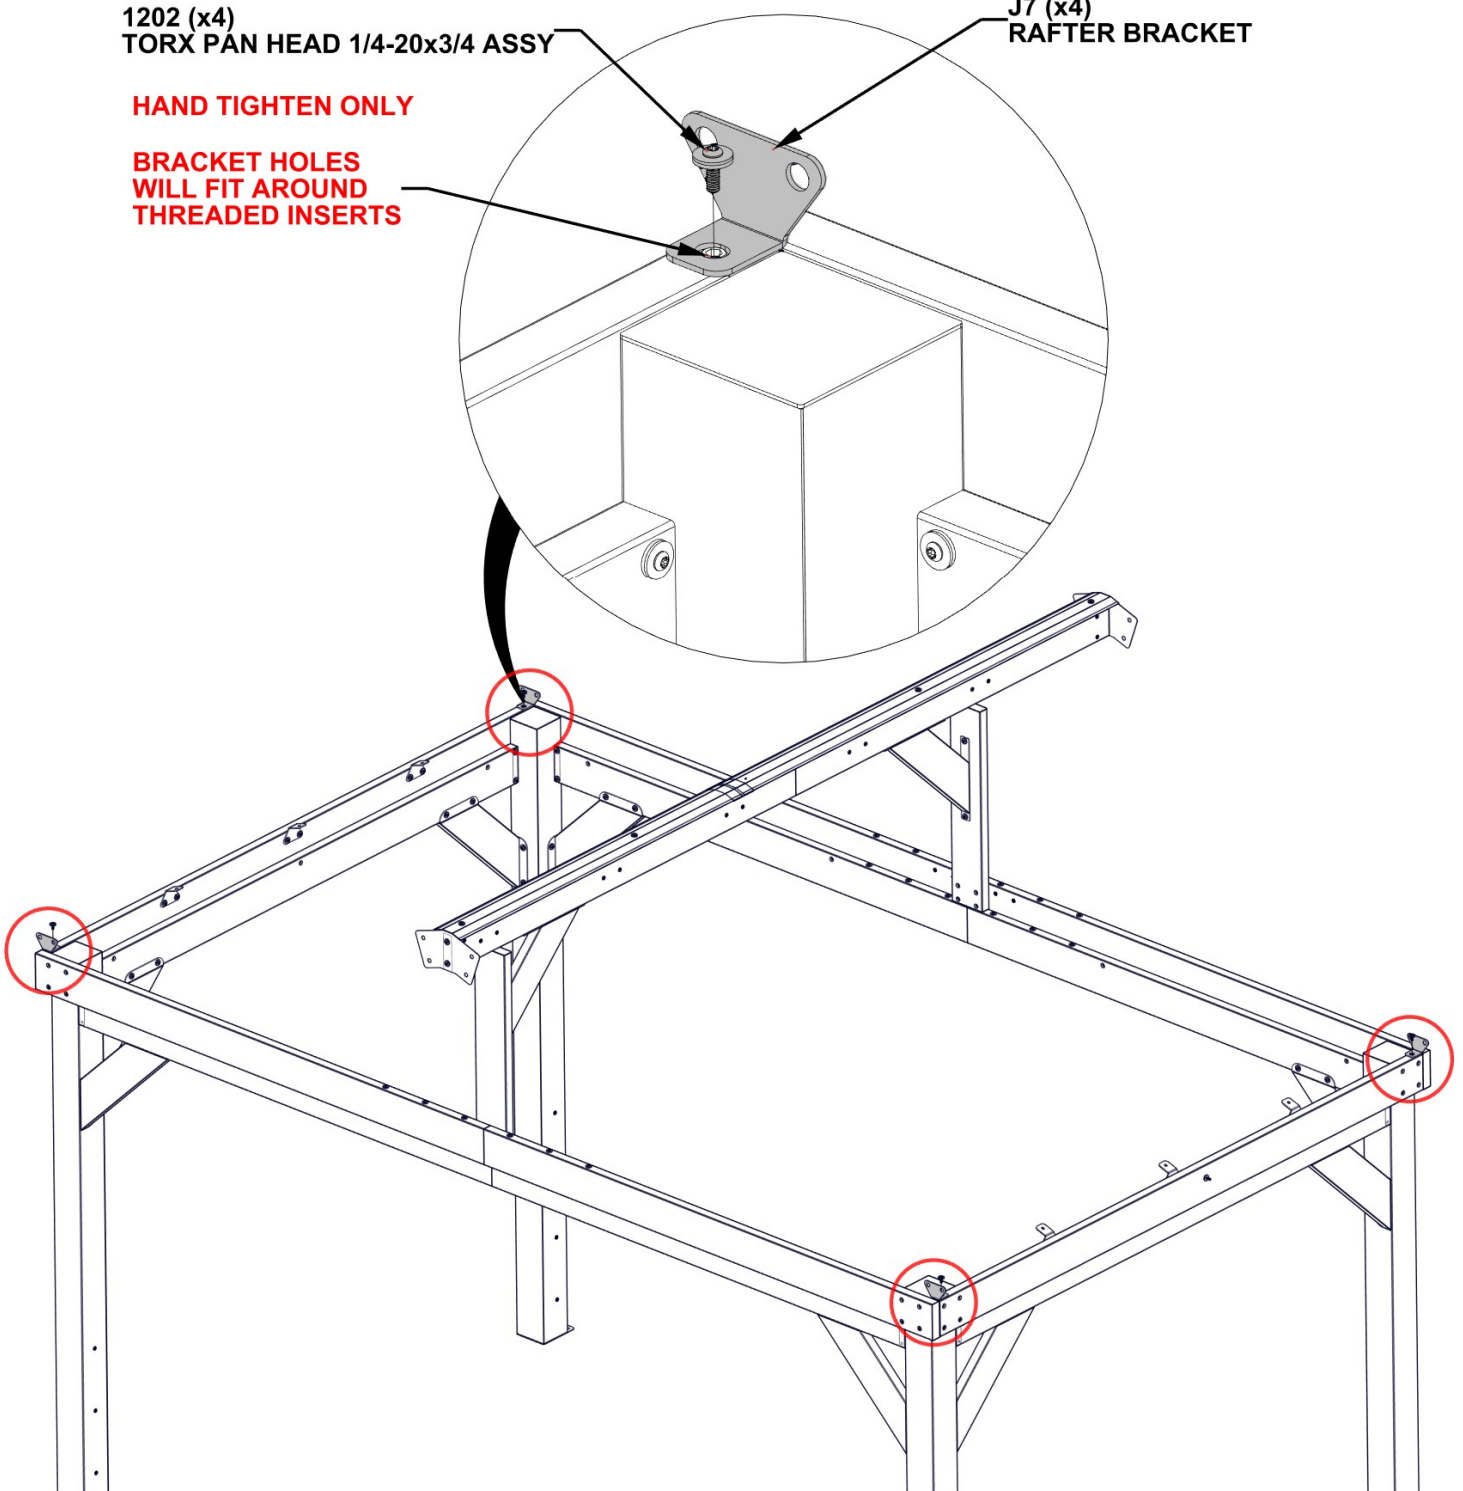

# STEP 30 - ROOF ASSEMBLY

QTY	PartNo	DESCRIPTION
16	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




**R01 RAFTER ASSEMBLY - A4M03522**  
(x2) 86 3/8"x4 5/16"x3 1/8" (80x110x2194.6)



**R02 RAFTER ASSEMBLY - A4M03523**  
(x2) 86 3/8"x4 5/16"x3 1/8" (80x110x2194.6)

- INSERTS ON THE SIDE OF EACH RAFTER MUST FACE TOWARD THE INSIDE OF THE STRUCTURE.
- ATTACH EACH RAFTER AT THE RIDGE AS SHOWN BELOW.
- ONCE SUPPORTED, ATTACH END OF RAFTER TO RAFTER BRACKETS AT TOP OF EACH POST.

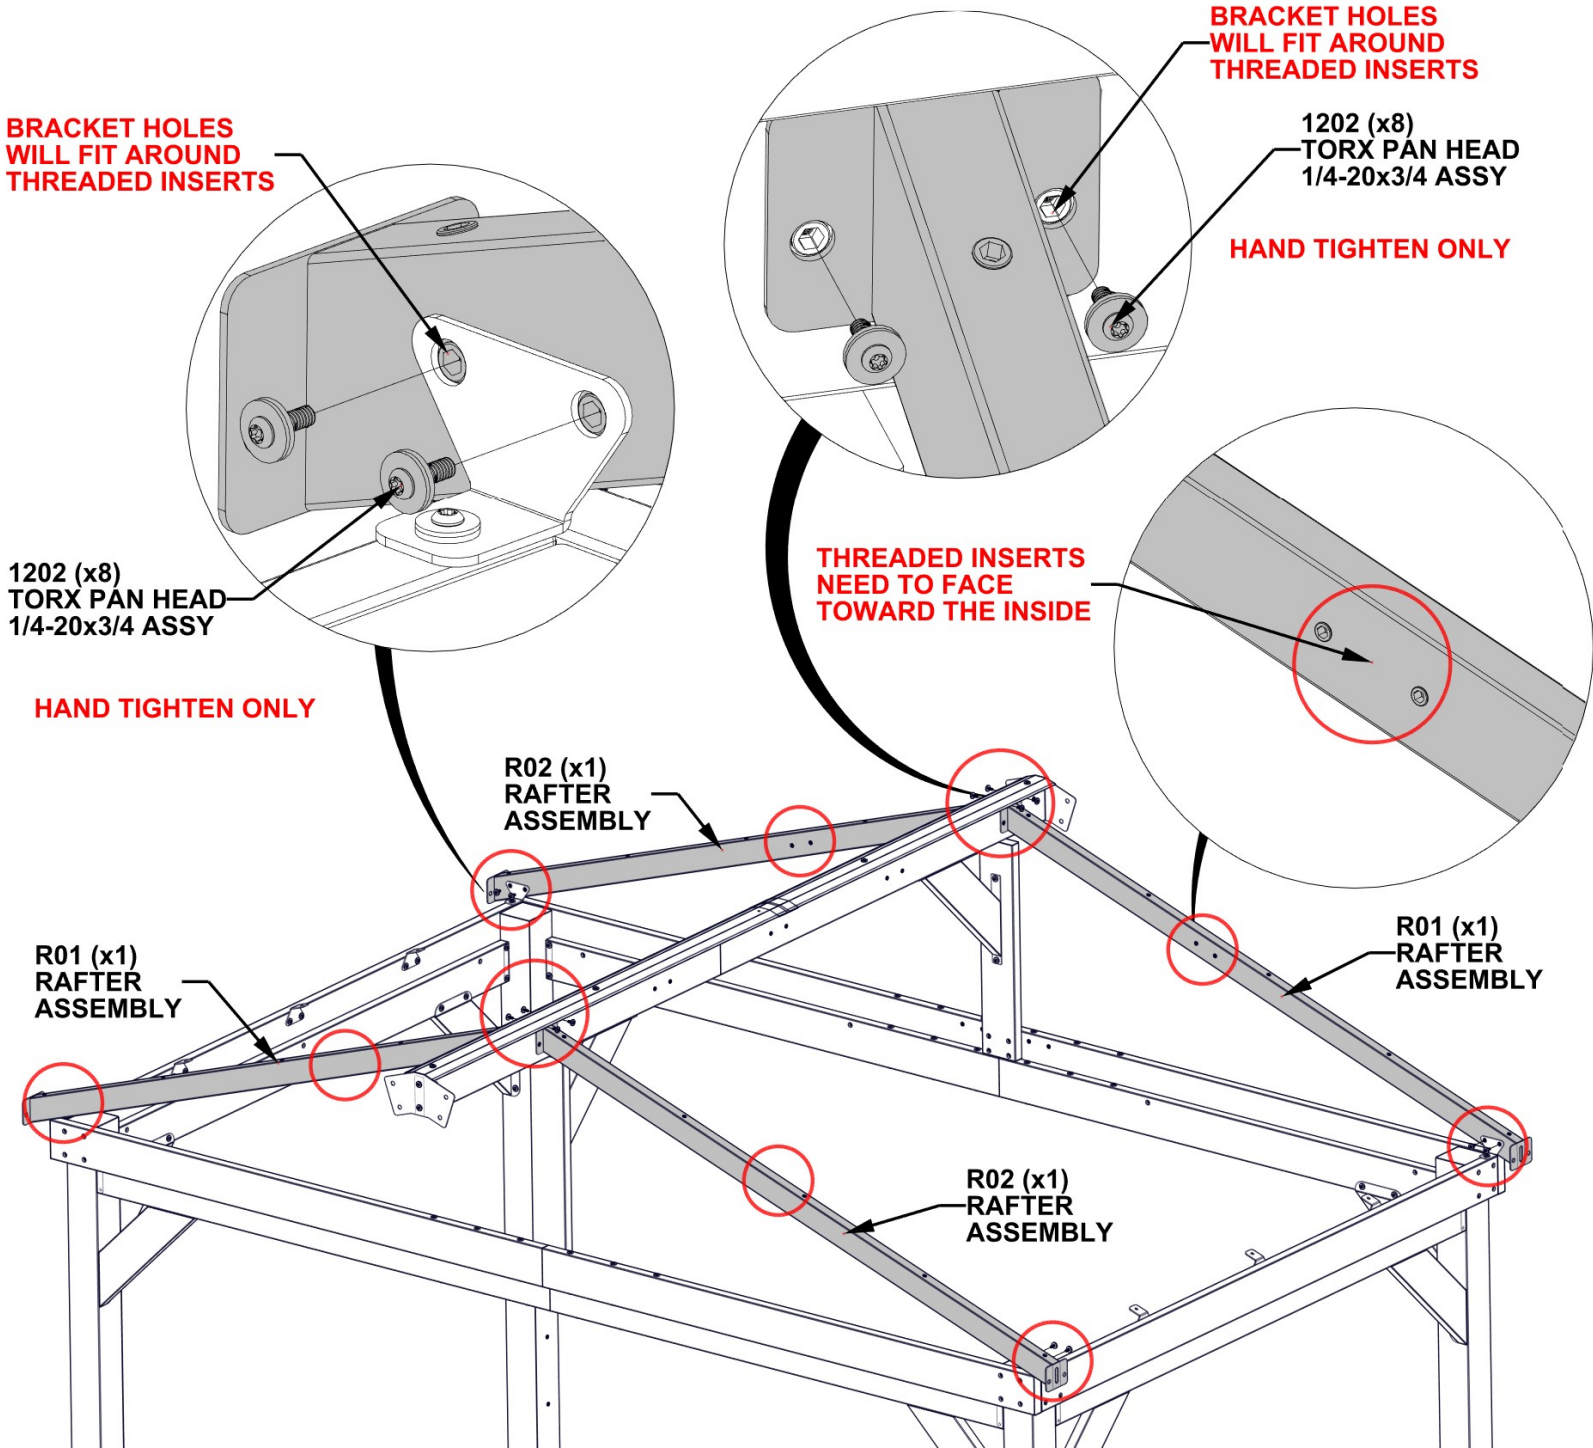

# STEP 31 - ROOF ASSEMBLY

QTY	PartNo	DESCRIPTION
16	H101103	TORX SOCKET SCREW 1/4-20




**B08 GABLE ARM ASSEMBLY - A4M03514**  
(x2) 40 1/16"x5 1/4"x1 7/16" (36x134x1017)




**B09 GABLE ARM ASSEMBLY - A4M03515**  
(x2) 40 1/16"x5 1/4"x1 7/16" (36x134x1017)

**FLUSH TOP SURFACE  
OF GABLE AND RAFTER**

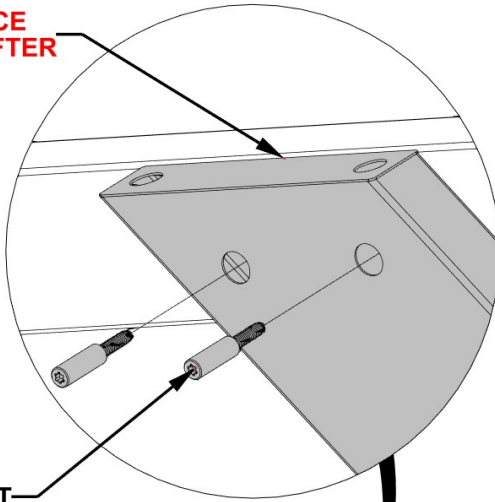

**1103 (x8)  
TORX SOCKET  
SCREW 1/4-20**

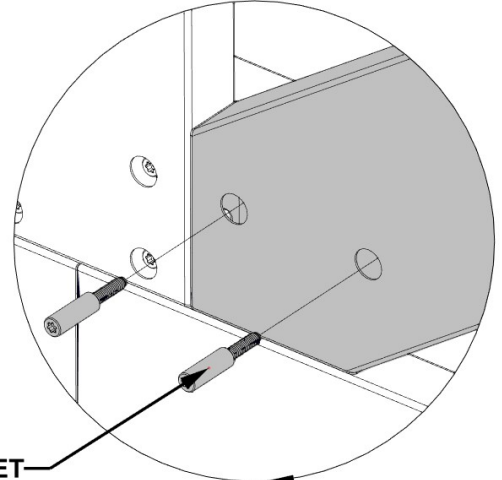

**1103 (x8)  
TORX SOCKET  
SCREW 1/4-20**

**TIGHTEN ALL HARDWARE**

**B09 (x1)  
GABLE ARM  
ASSEMBLY**

**B08 (x1)  
GABLE ARM  
ASSEMBLY**

**B08 (x1)  
GABLE ARM  
ASSEMBLY**

**B09 (x1)  
GABLE ARM  
ASSEMBLY**

# STEP 32A - ROOF ASSEMBLY

QTY	PartNo	DESCRIPTION
12	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



R03 RAFTER ASSEMBLY - A4M03524  
(x6) 86 3/8"x4 5/16"x3 1/8" (80x110x2194.6)



- ATTACH EACH RAFTER AT THE RIDGE AS SHOWN BELOW.

**BRACKET HOLES  
WILL FIT AROUND  
THREADED INSERTS**

1202 (x12)  
TORX PAN HEAD 1/4-20x3/4 ASSY

**HAND TIGHTEN ONLY**


R03 (x6)  
RAFTER ASSEMBLY

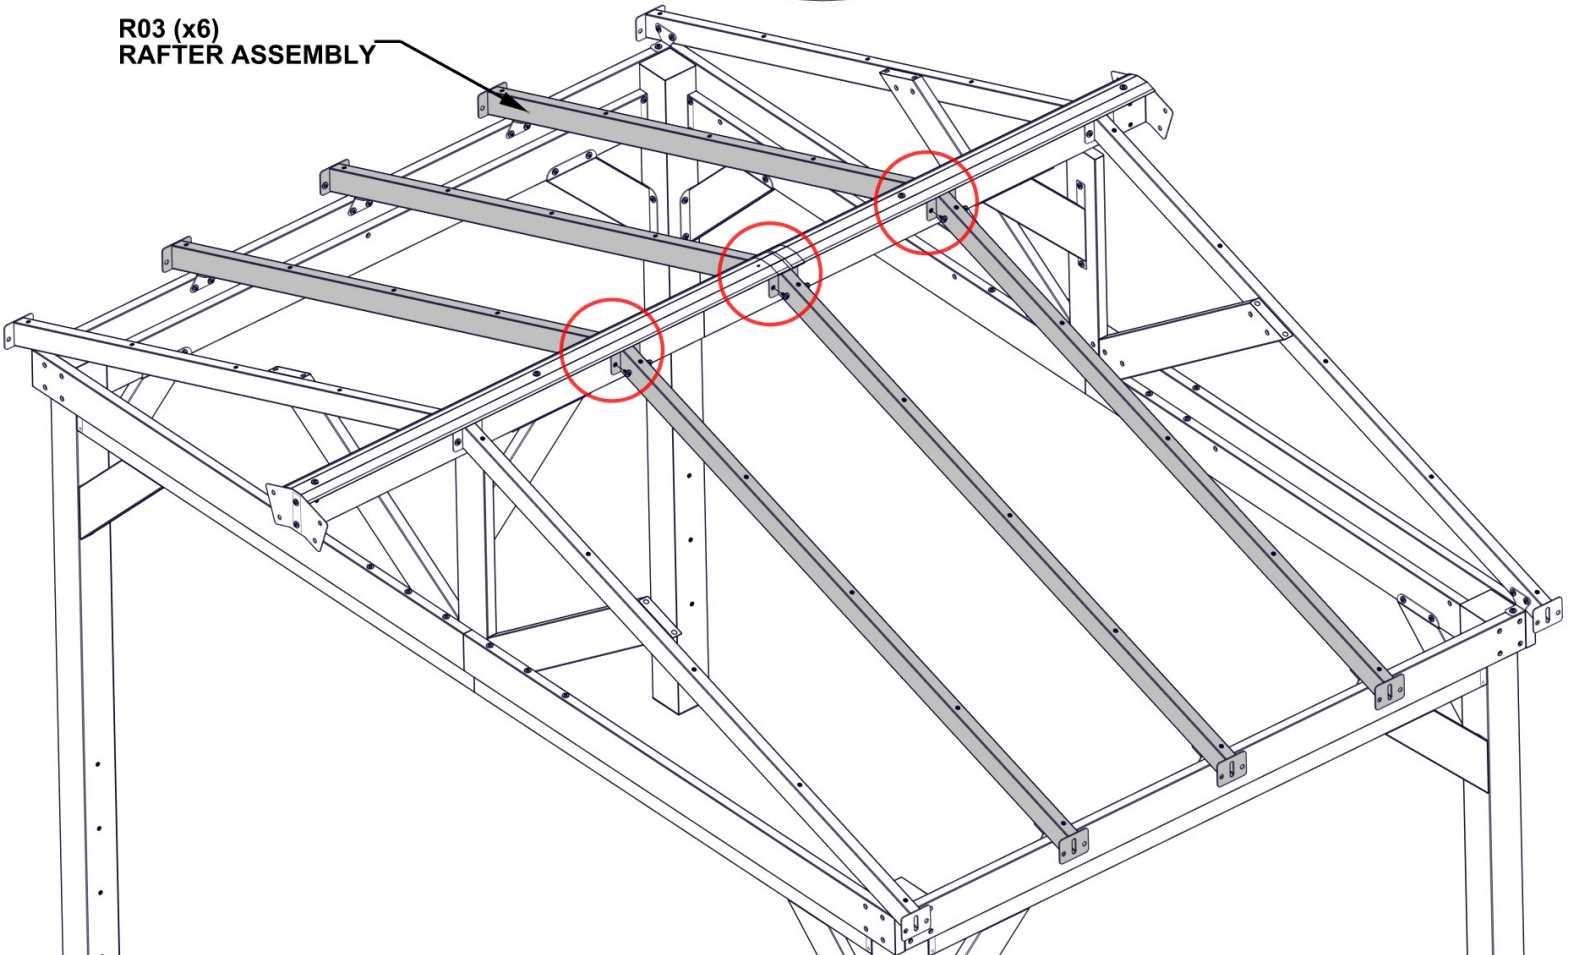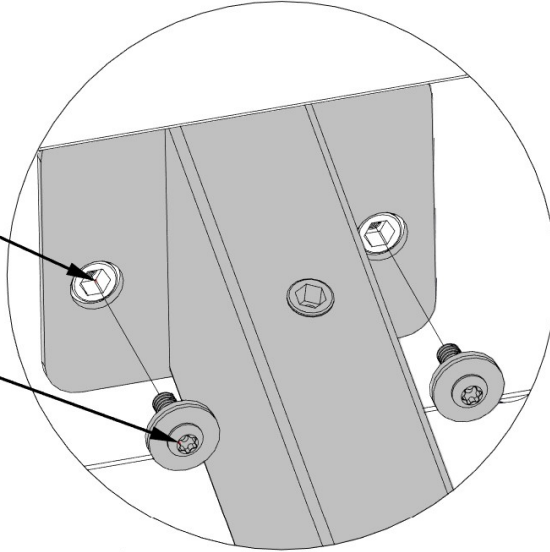

# STEP 32B - ROOF ASSEMBLY

QTY	PartNo	DESCRIPTION
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- ATTACH END OF EACH RAFTER TO BRACKETS ALONG SIDE BEAMS.

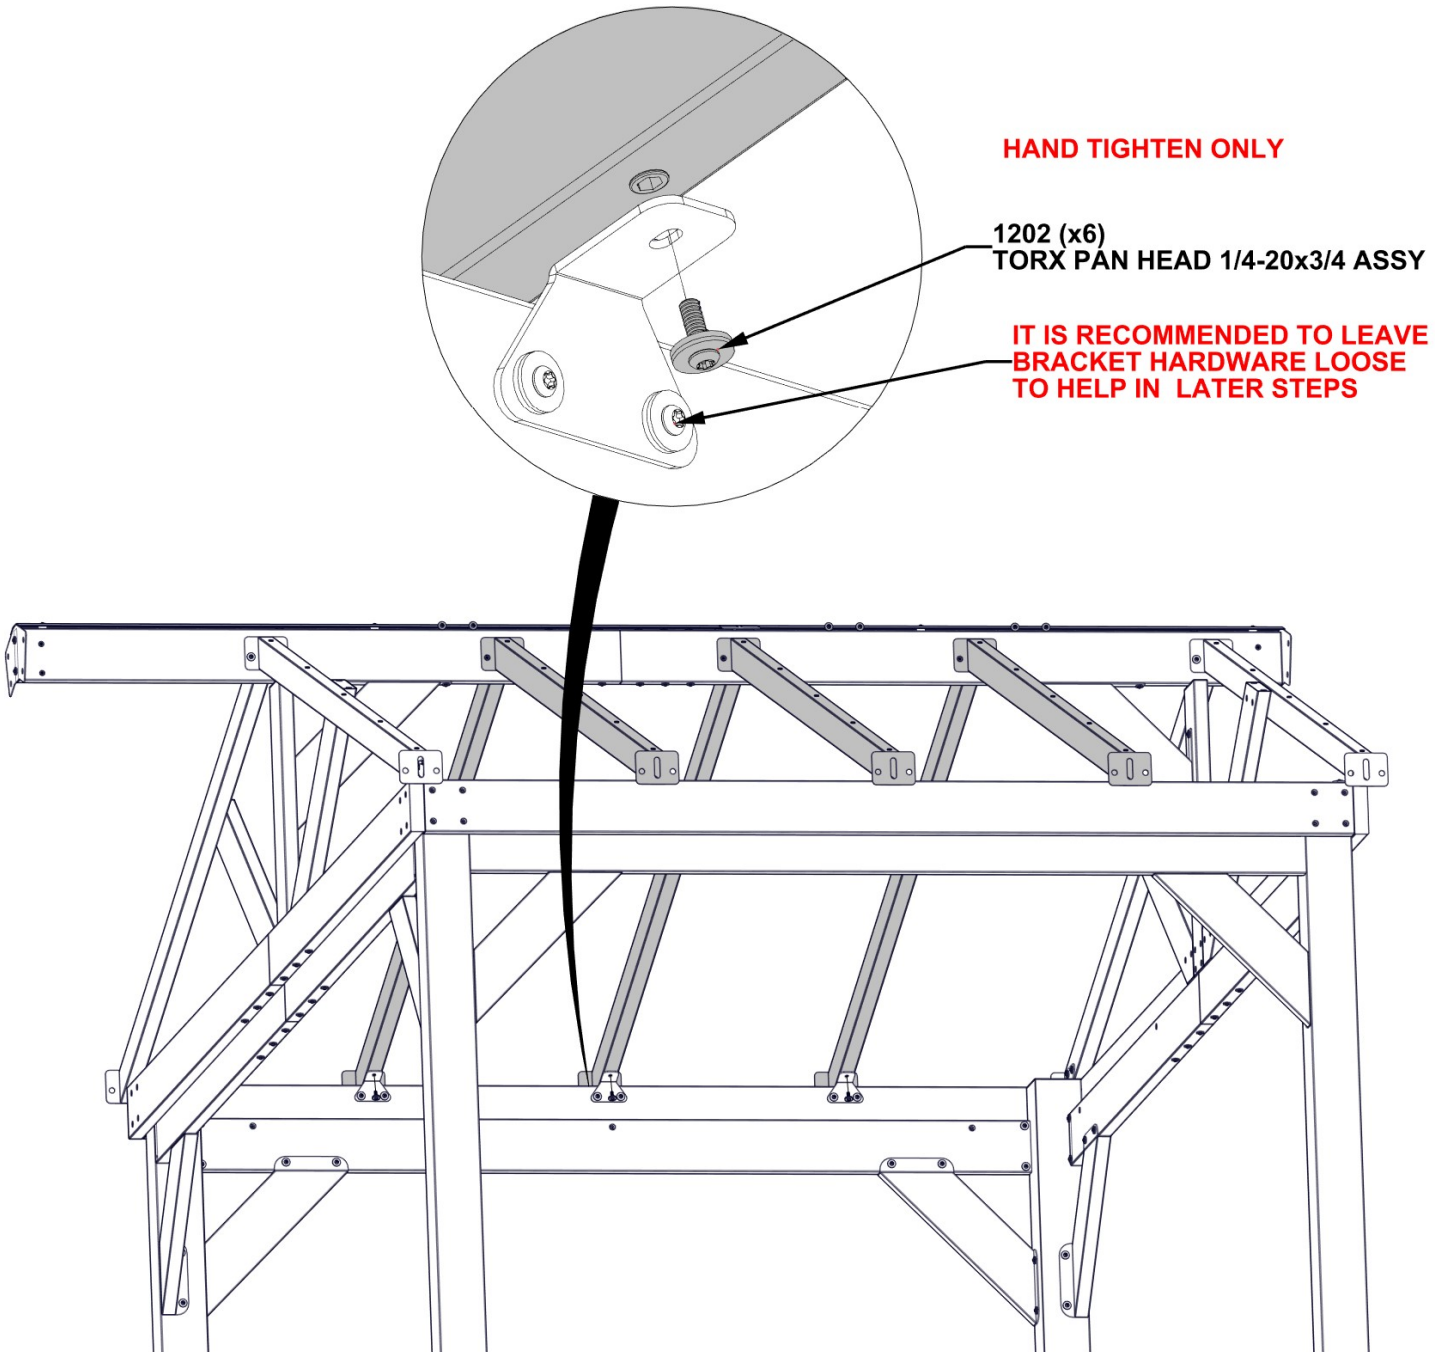


# STEP 33 - BEAM ASSEMBLY

QTY	PartNo	DESCRIPTION
12	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




**B15 DRIP BEAM ASSEMBLY - A4M03521**  
(x2) 71 3/4"x4 13/16"x1 7/16" (36x122x1822)



**J6 SPLICE BRACKET - A4M03806**  
(x2) 19 11/16"x4 11/16"x32.5 (32.5x118.5x500)

- FOR EASE OF ASSEMBLY, WE RECOMMEND USING SAW HORSES FOR STEPS 33 - 34.

- REPEAT THIS STEP TWICE

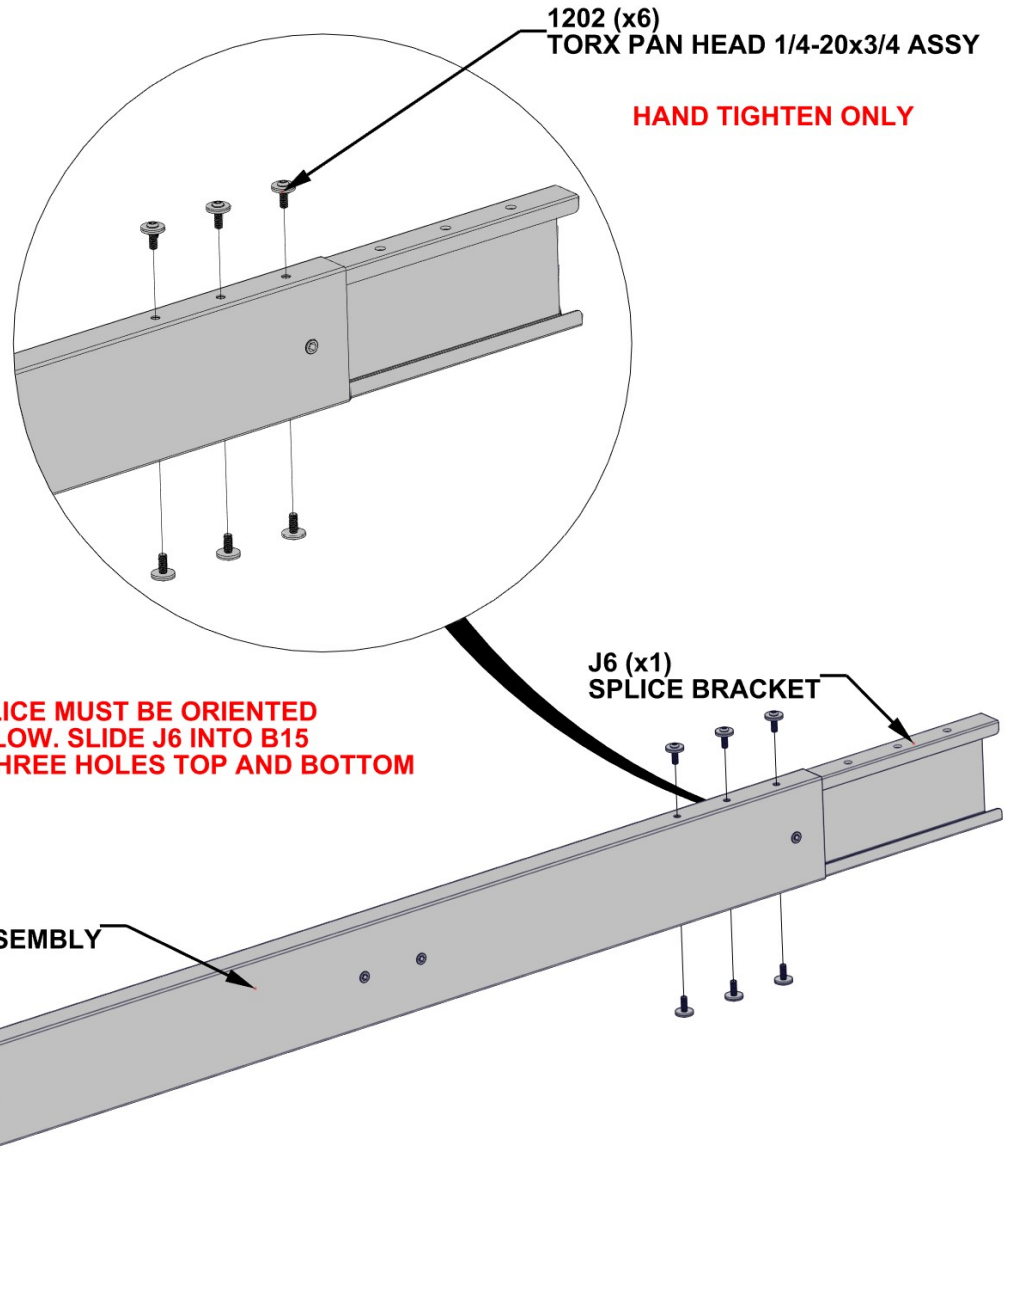

# STEP 34 - BEAM ASSEMBLY


QTY	PartNo	DESCRIPTION
12	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



B14 DRIP BEAM ASSEMBLY - A4M03520  
(x2) 53 11/16"x4 13/16"x1 7/16" (36x122x1364)


- SLIDE B14 INTO SPLICE BRACKET.  
GENTLY TAP ENDS OF ASSEMBLY WITH  
RUBBER Mallet UNTIL GAP CLOSES.

- REPEAT THIS STEP TWICE

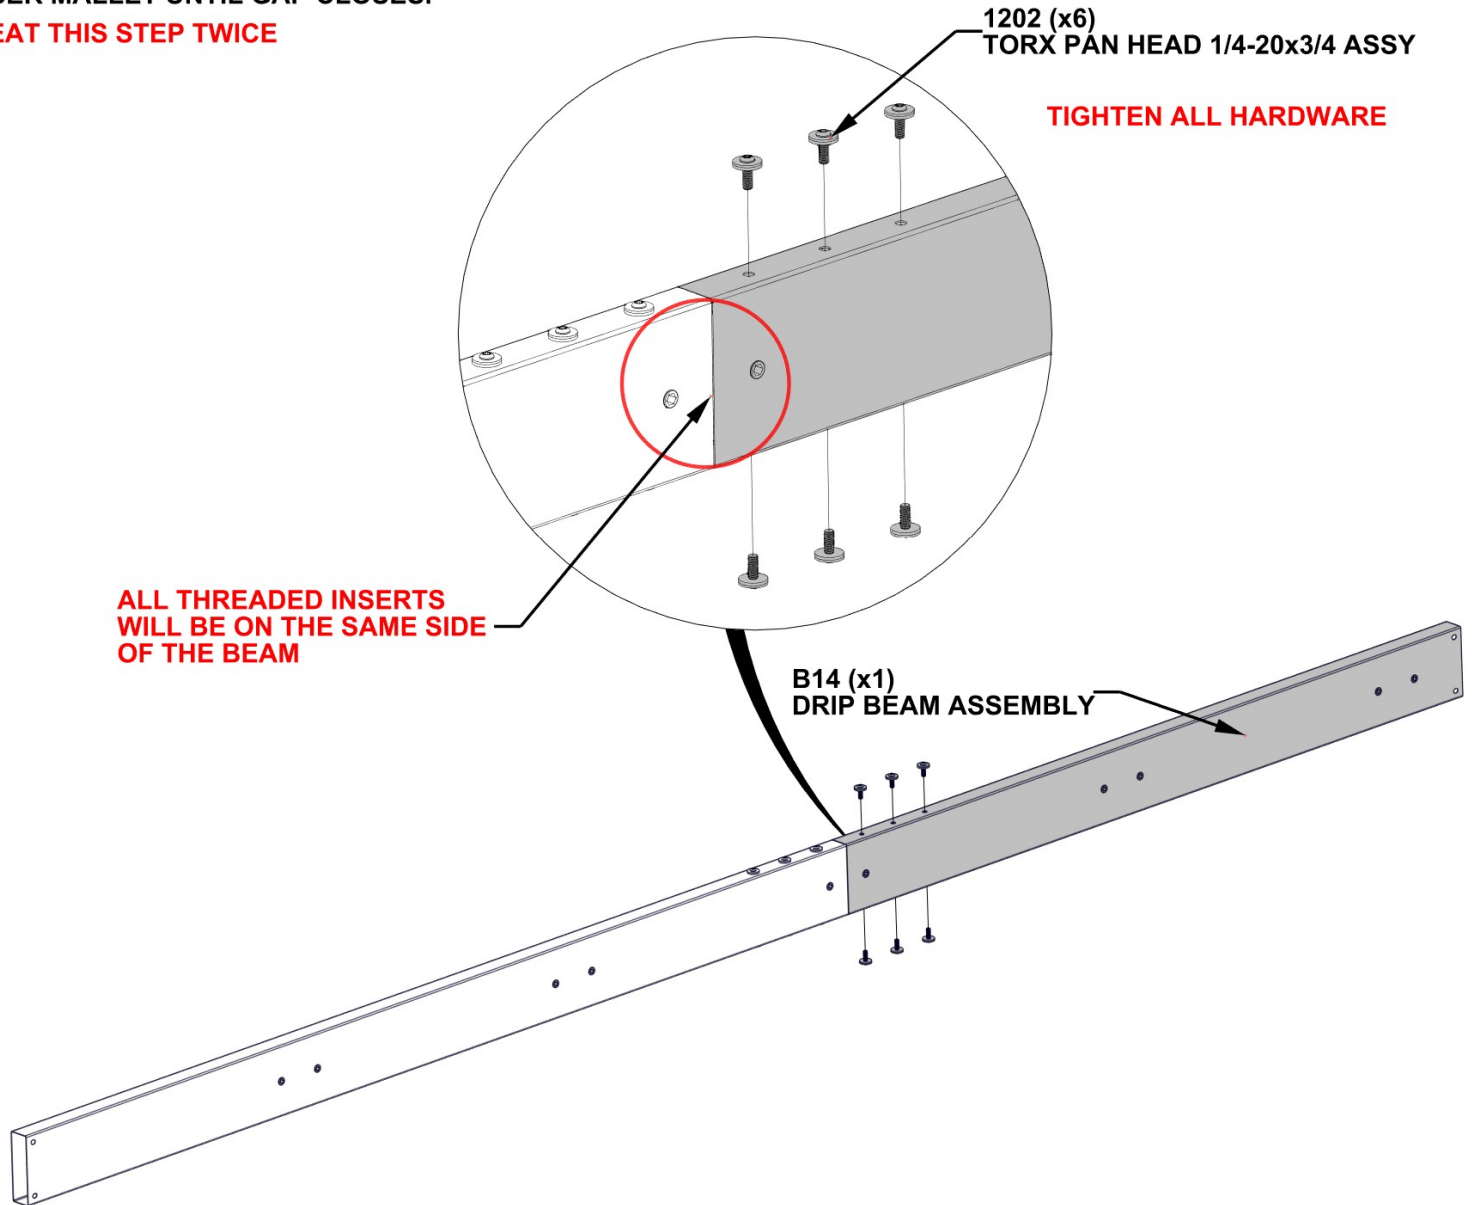


# STEP 35 - ROOF ASSEMBLY

QTY	PartNo	DESCRIPTION
20	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



BEAM ASSEMBLIES FROM  
STEPS 33 - 34 (x2)

- WITH AT LEAST TWO ADDITIONAL PEOPLE, ATTACH BEAM ASSEMBLY TO RAFTER ENDS.
- BEAM ASSEMBLY MUST BE ORIENTED AS SHOWN BELOW WITH LONG OVERHANG TOWARD THE FRONT

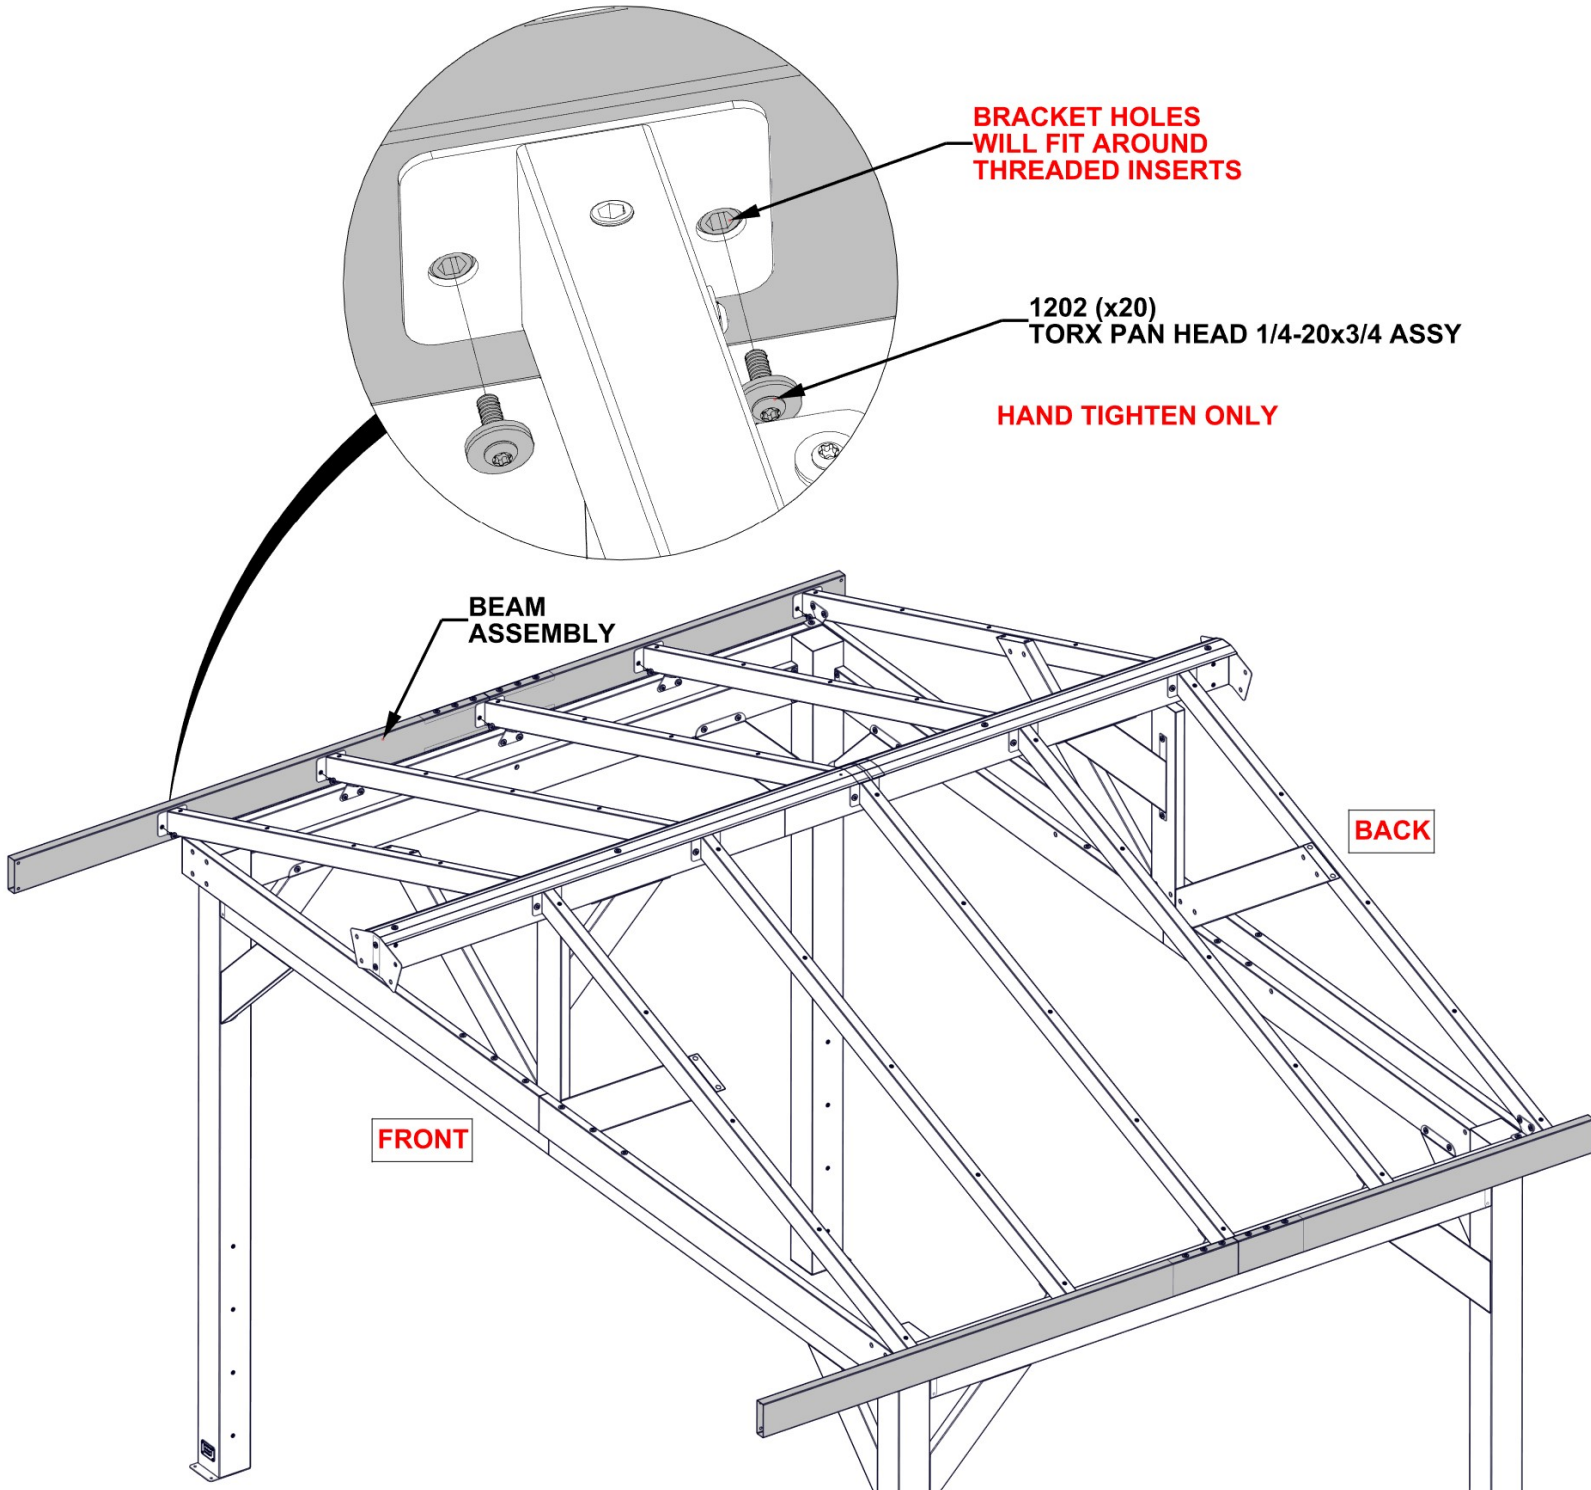

BRACKET HOLES  
WILL FIT AROUND  
THREADED INSERTS

1202 (x20)  
TORX PAN HEAD 1/4-20x3/4 ASSY

HAND TIGHTEN ONLY


BEAM  
ASSEMBLY

BACK


FRONT

# STEP 36 - ROOF ASSEMBLY

QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




**B13 GABLE BEAM ASSEMBLY - A4M03519**  
(x2) 88 13/16"x5 1/4"x1 7/16" (36x134x2255)




**J9 BEAM BRACKET - A4M03807**  
(x2) 1"x1 5/16"x4 9/16" (25x33.20x116)

**- REPEAT THIS STEP TWICE**

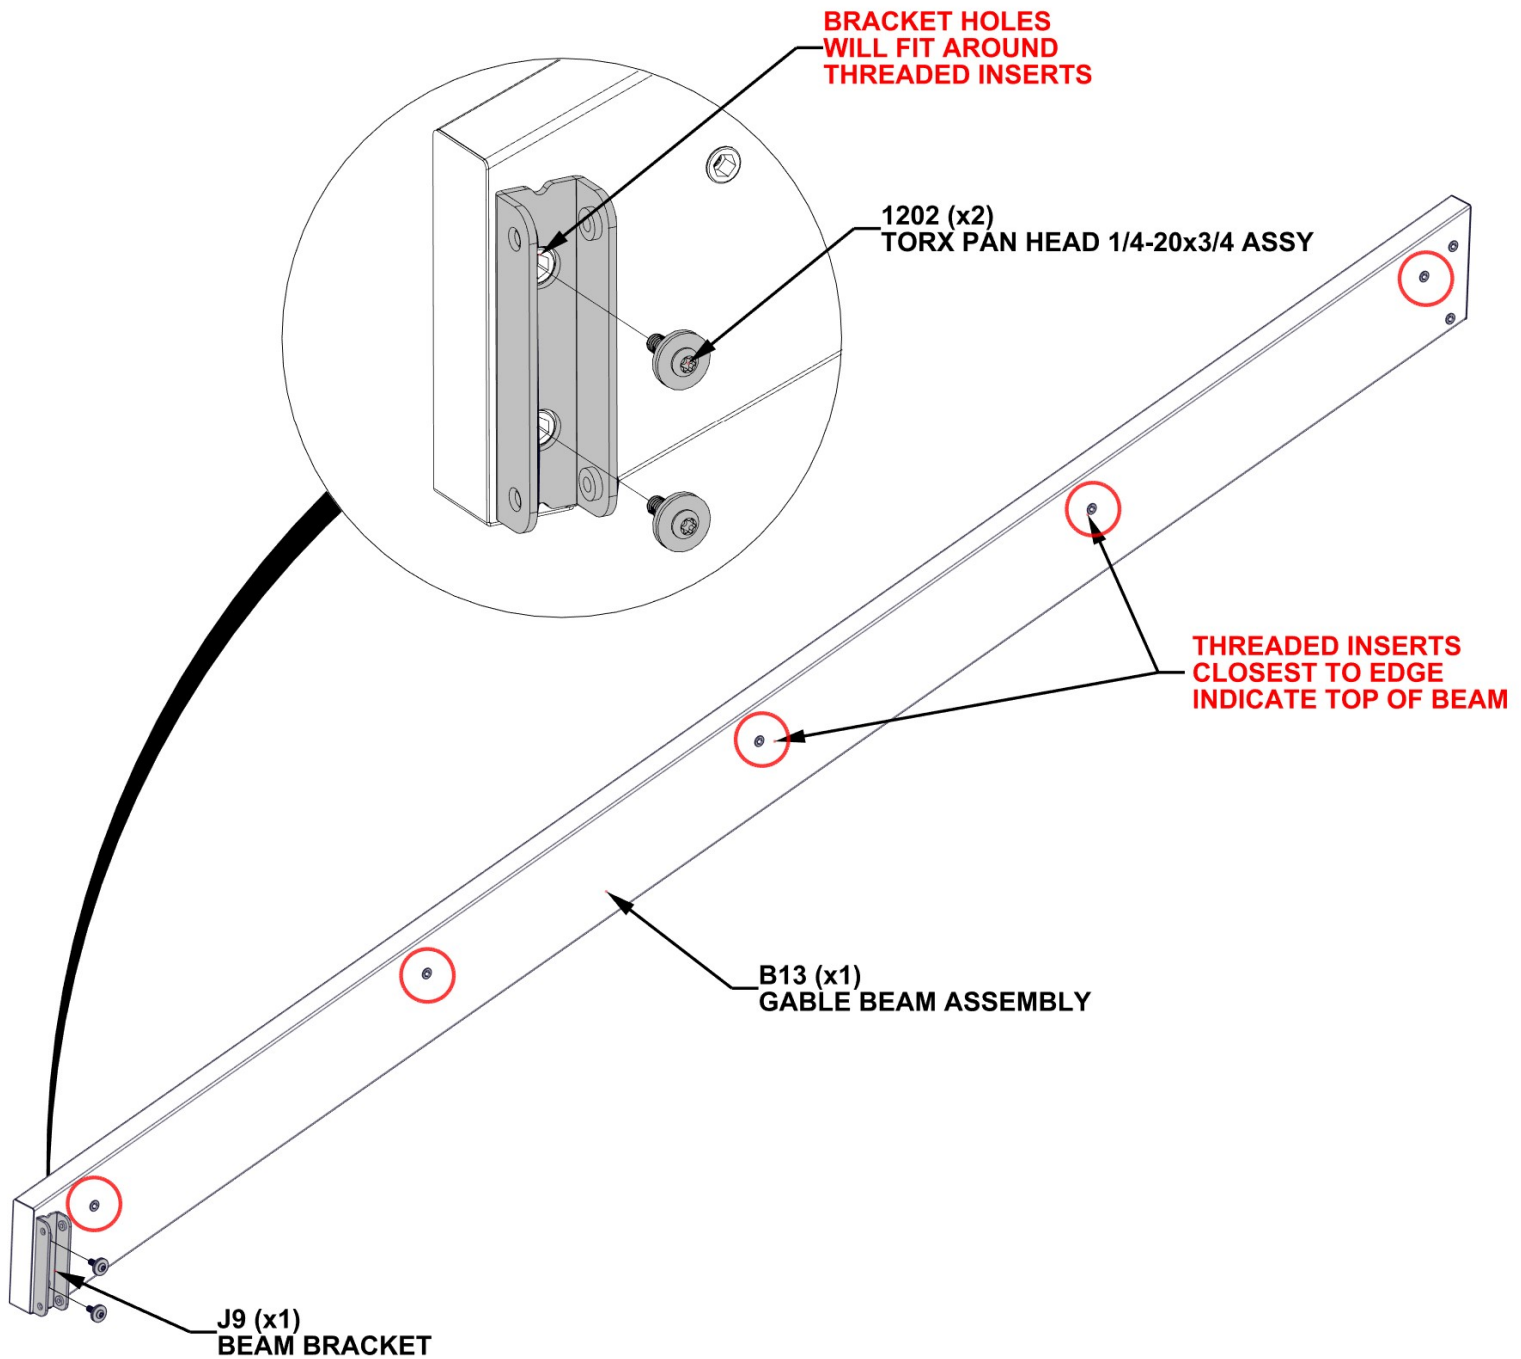


# STEP 37 - ROOF ASSEMBLY

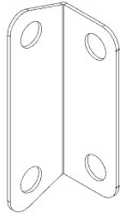

J8 GABLE BRACKET - A4M03804  
(x2) 4 13/16"x1 9/16"x1 9/16" (40x40x123)


QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

**- REPEAT THIS STEP TWICE**

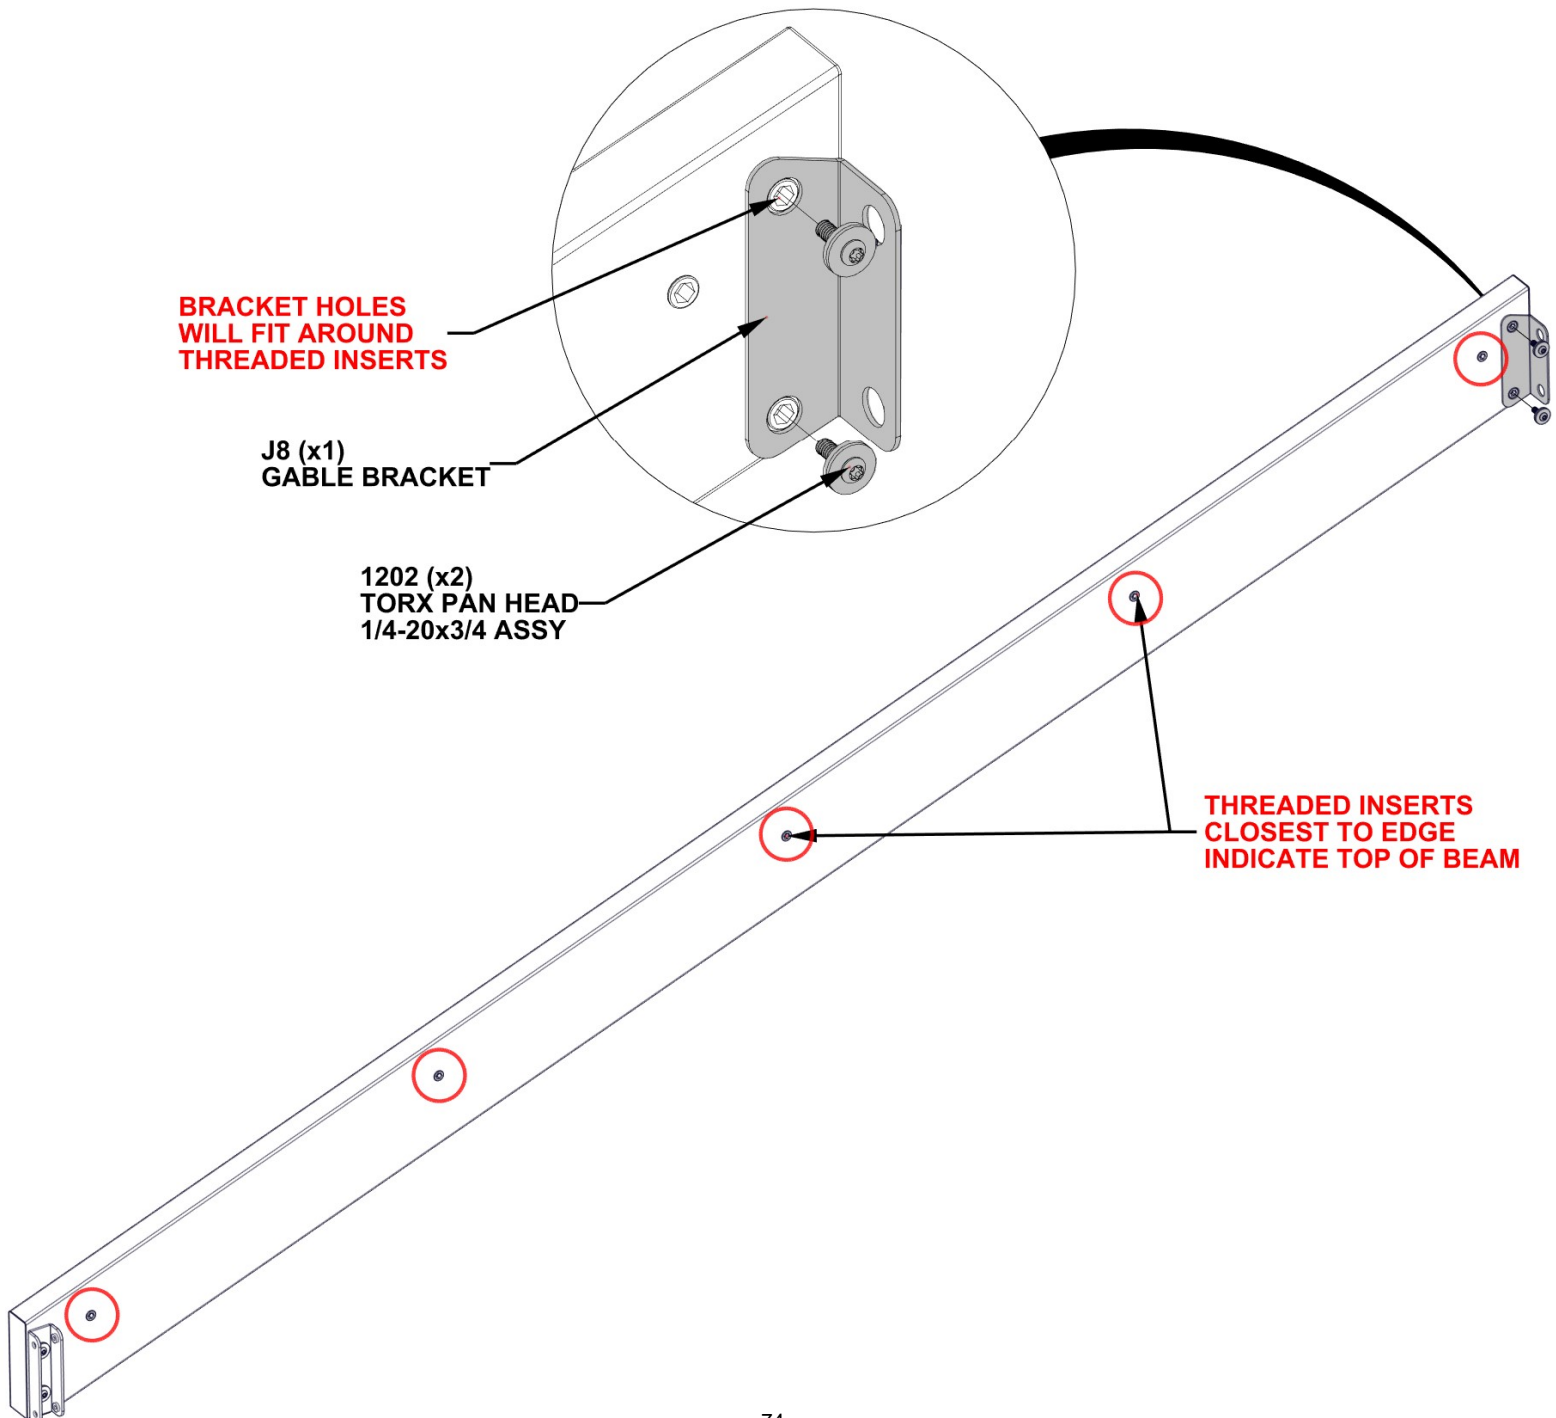

# STEP 38A - ROOF ASSEMBLY

QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

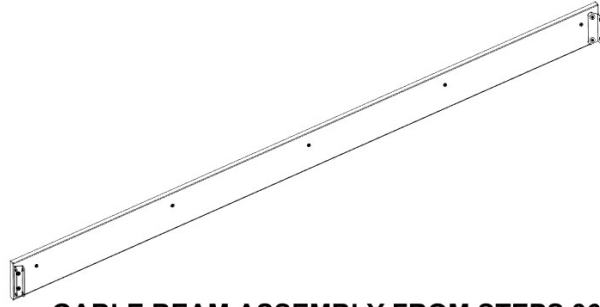


GABLE BEAM ASSEMBLY FROM STEPS 36 - 37

- WITH AT LEAST TWO ADDITIONAL PEOPLE, ATTACH GABLE BEAM ASSEMBLIES.
- REPEAT THIS STEP TWICE FOR BOTH SIDES OF STRUCTURE.
- GABLE BEAM ASSEMBLIES WILL BE ATTACHED ON OPPOSITE SIDES OF ROOF STRUCTURE.

BRACKET SLOTS  
WILL FIT AROUND  
THREADED INSERTS


HAND TIGHTEN ONLY

1202 (x2)  
TORX PAN HEAD  
1/4-20x3/4 ASSY

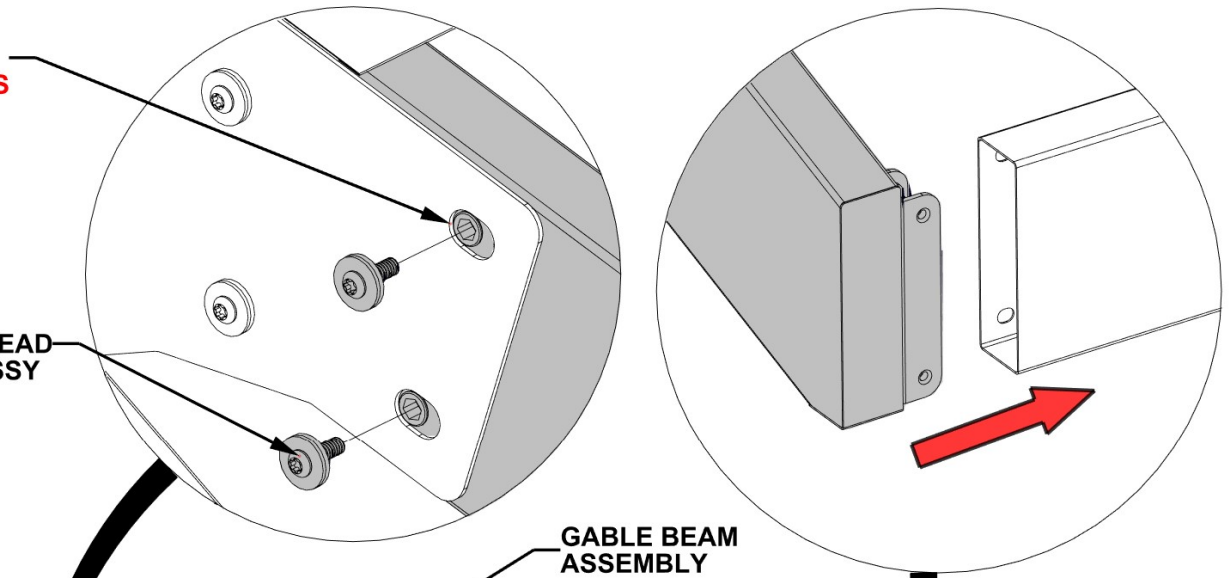

GABLE BEAM  
ASSEMBLY


GABLE BEAM  
ASSEMBLY

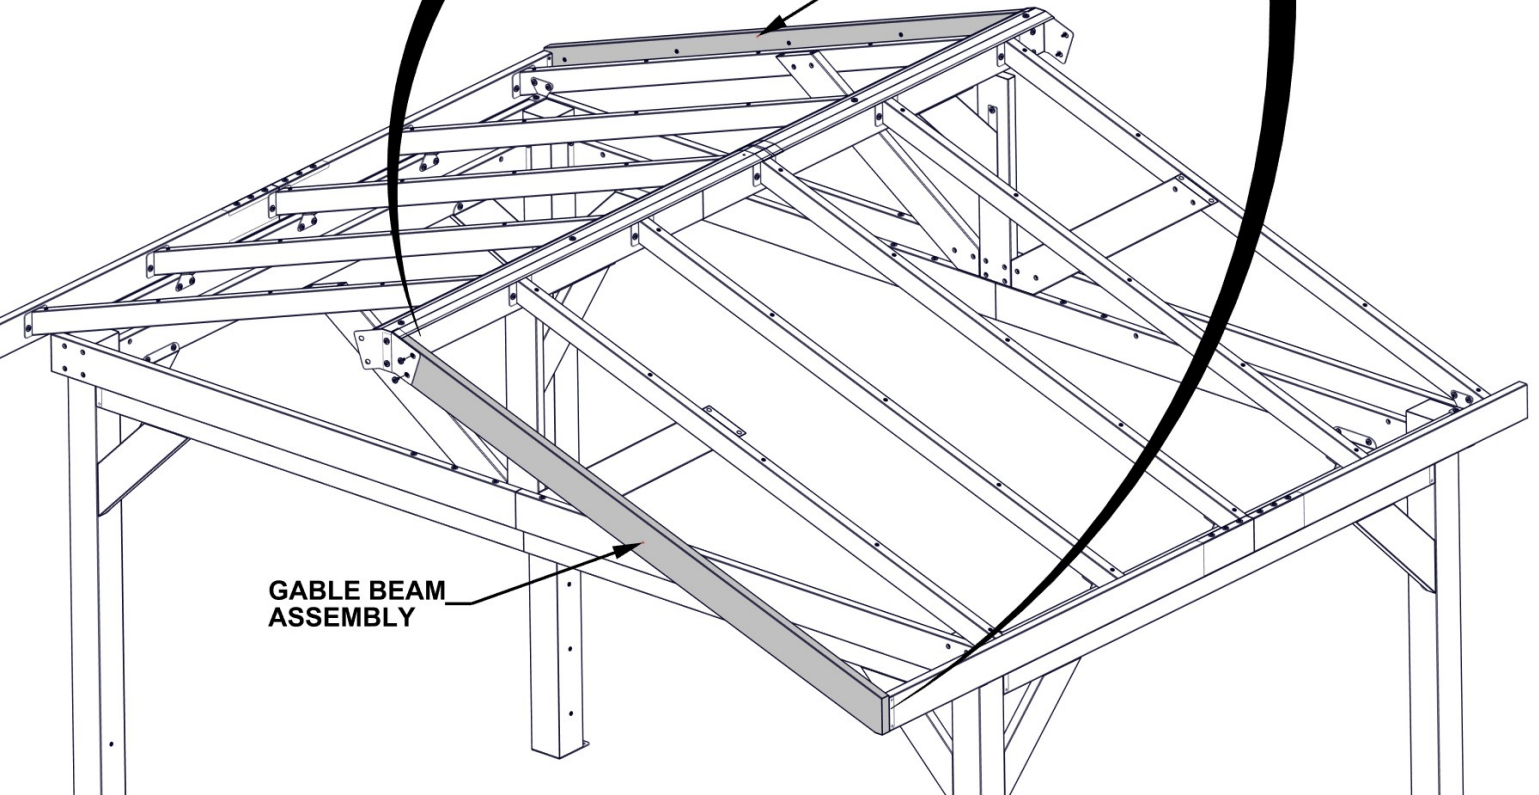

# STEP 38B - ROOF ASSEMBLY


QTY	PartNo	DESCRIPTION
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- REPEAT THIS STEP TWICE FOR BOTH SIDES OF STRUCTURE

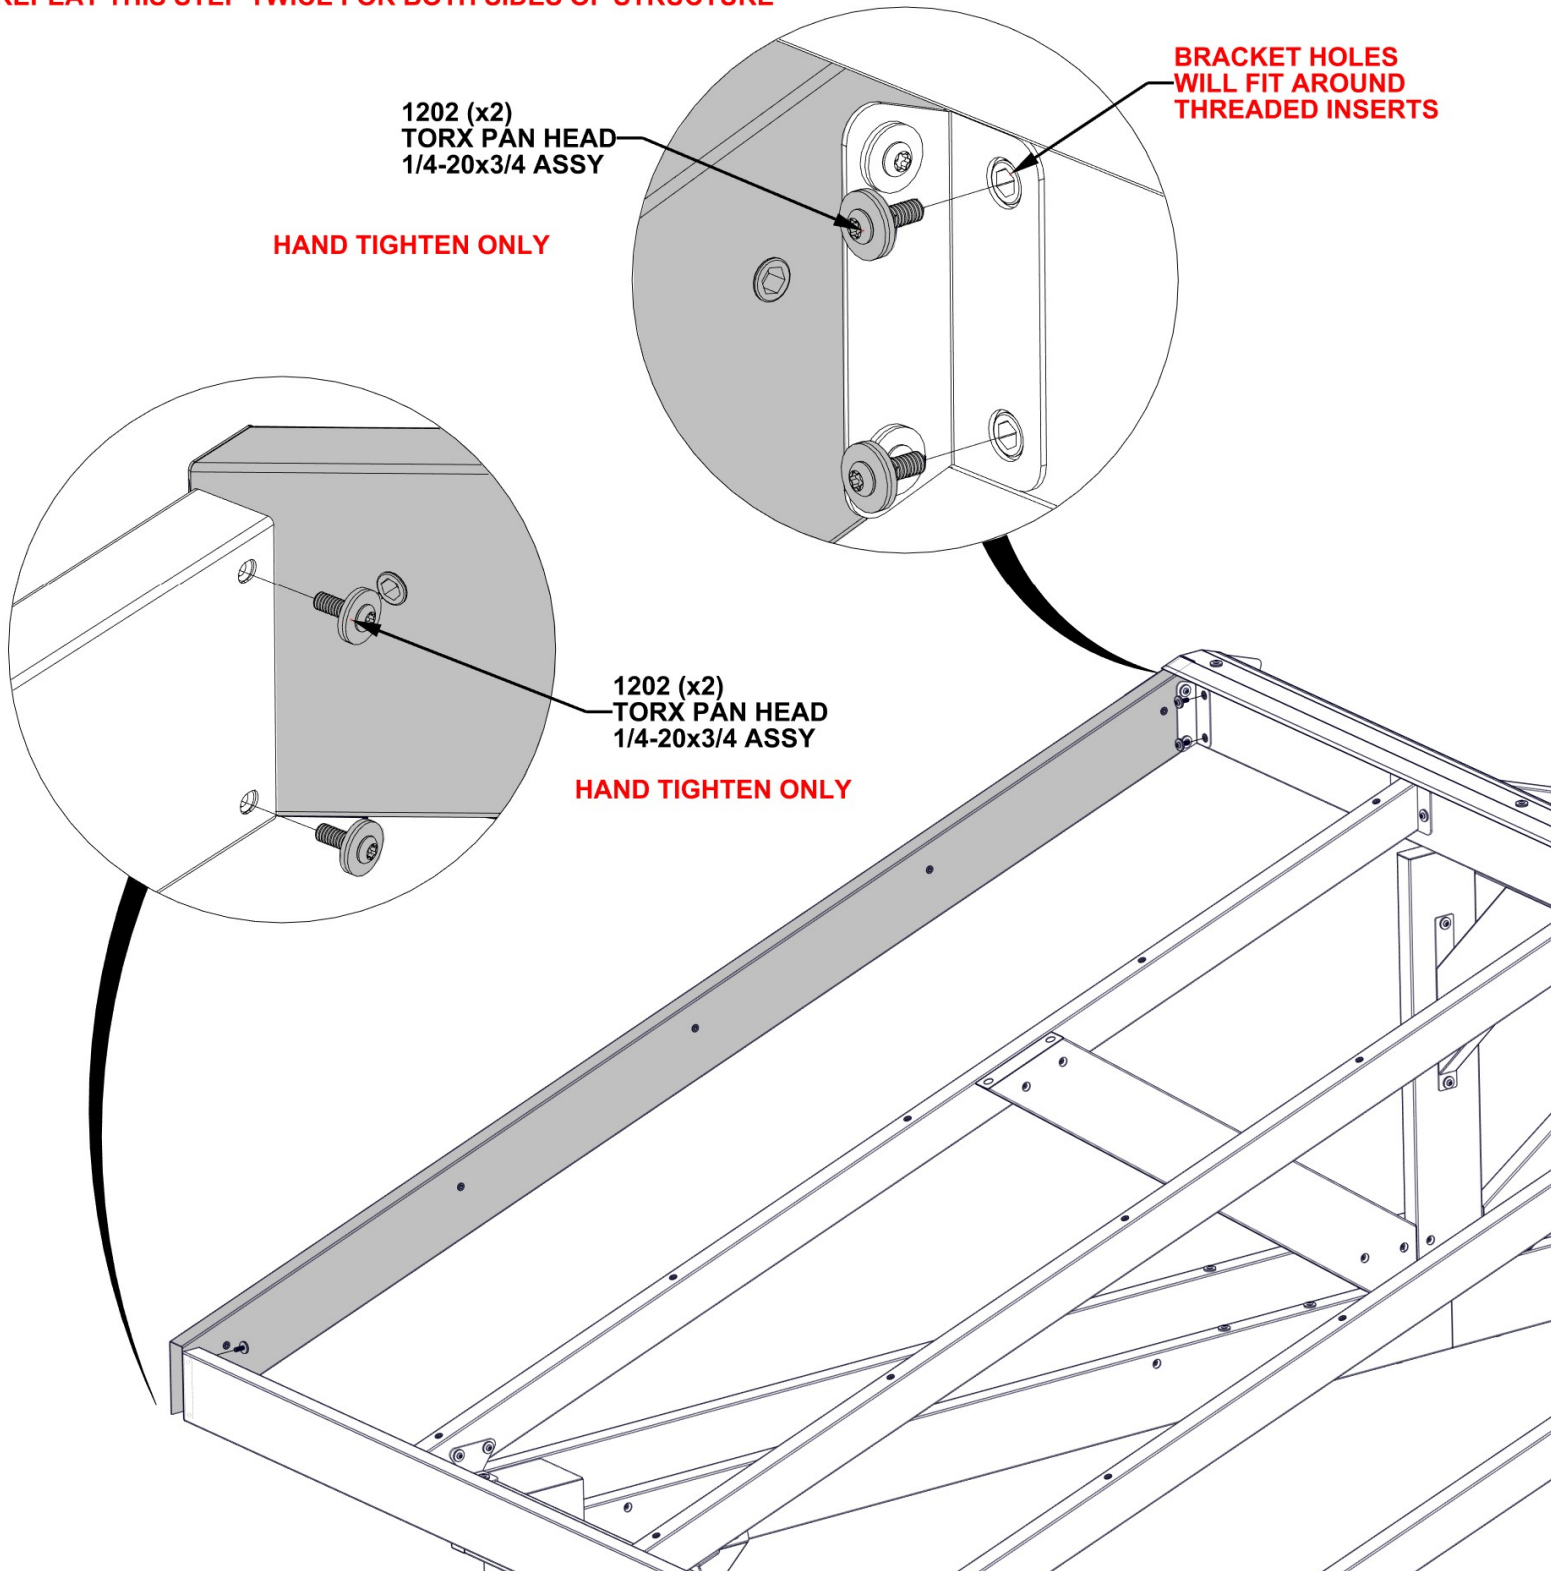

# STEP 39 - ROOF ASSEMBLY

QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




**B12 GABLE BEAM ASSEMBLY - A4M03518**  
 (x2) 88 13/16"x5 1/4"x1 7/16" (36x134x225)




**J9 BEAM BRACKET - A4M03807**  
 (x2) 1"x1 5/16"x4 9/16" (25x33.20x116)

**- REPEAT THIS STEP TWICE**

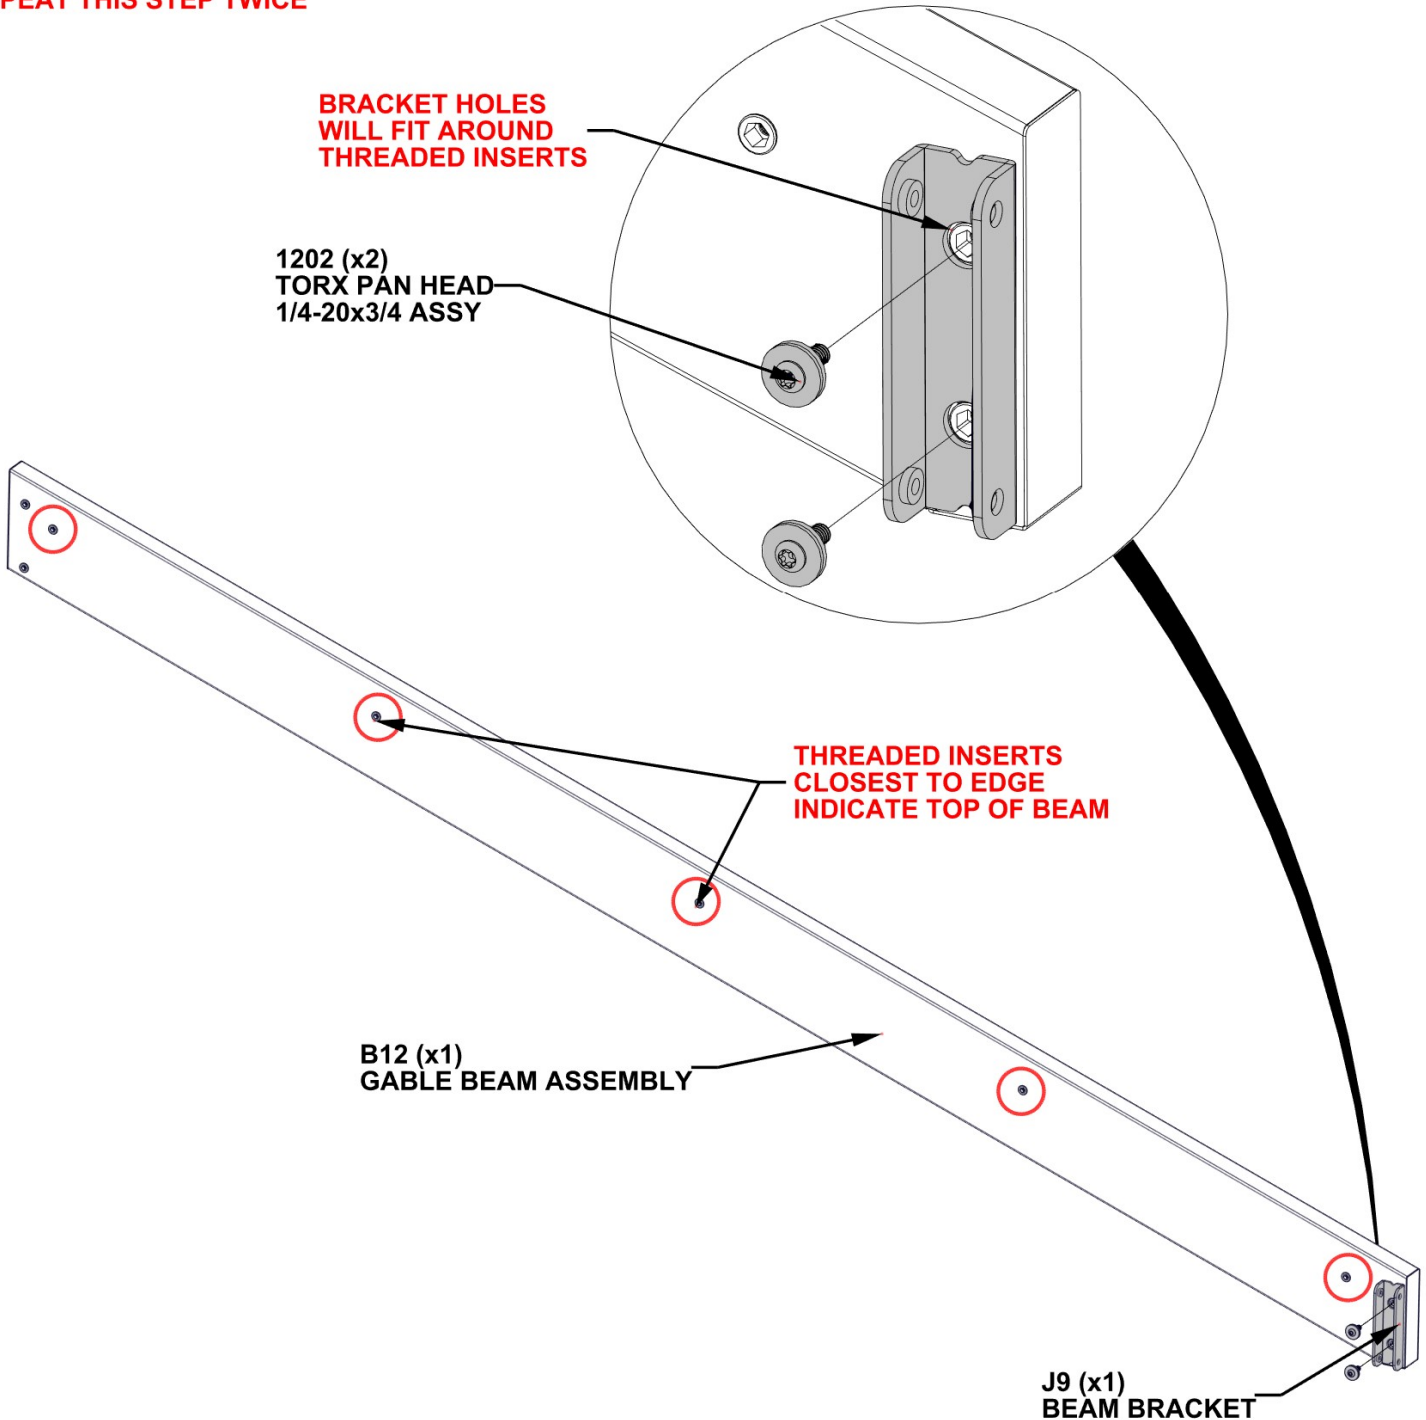


# STEP 40 - ROOF ASSEMBLY

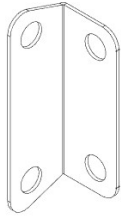

J8 GABLE BRACKET - A4M03804  
(x2) 4 13/16"x1 9/16"x1 9/16" (40x40x123)


QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- REPEAT THIS STEP TWICE

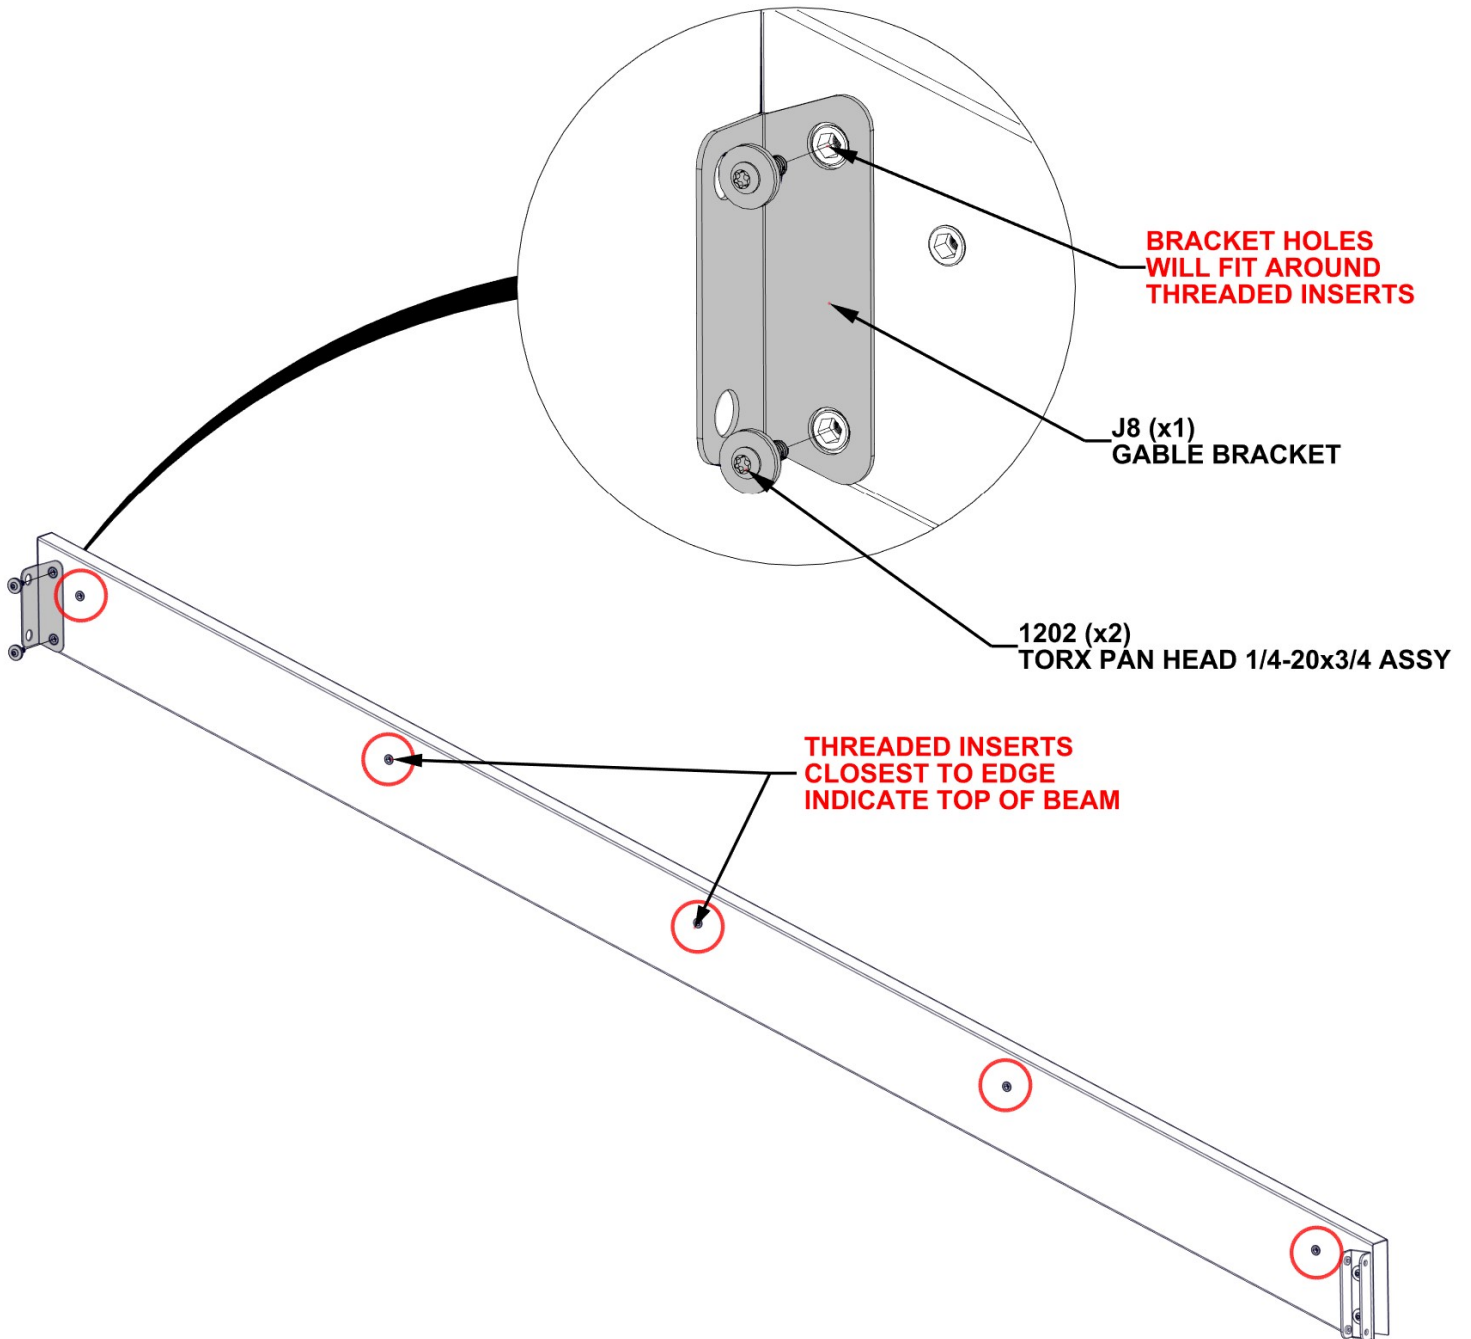


# STEP 41A - ROOF ASSEMBLY

QTY	PartNo	DESCRIPTION
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

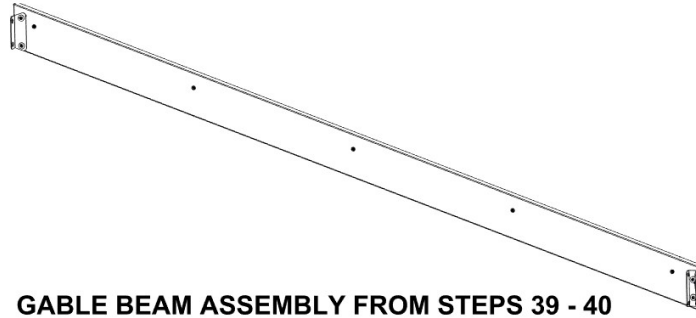

- WITH AT LEAST TWO ADDITIONAL PEOPLE, ATTACH GABLE BEAM ASSEMBLIES.
- REPEAT THIS STEP TWICE FOR BOTH SIDES OF STRUCTURE.
- GABLE BEAM ASSEMBLIES WILL BE ATTACHED ON OPPOSITE SIDES OF ROOF STRUCTURE.

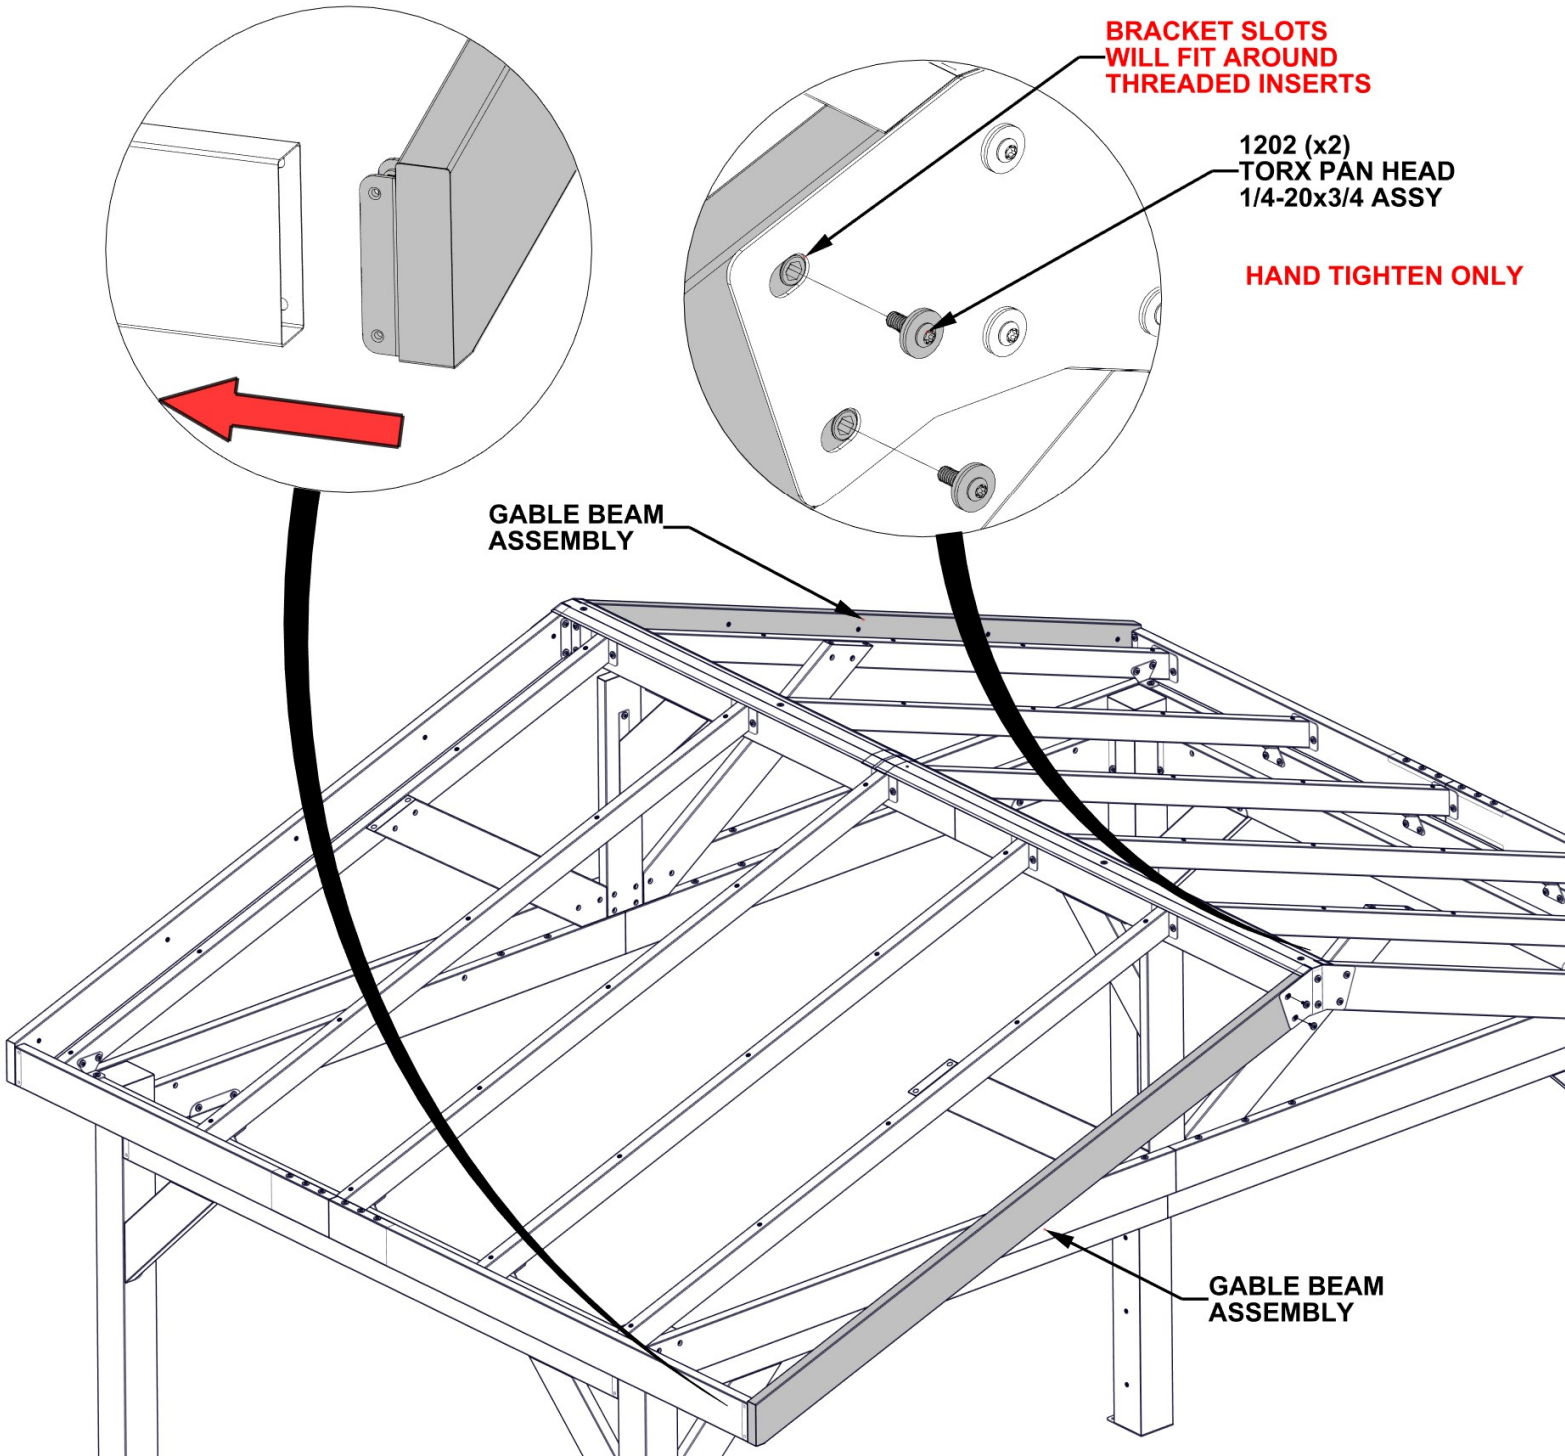

# STEP 41B - ROOF ASSEMBLY

QTY	PartNo	DESCRIPTION
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- REPEAT THIS STEP TWICE FOR BOTH SIDES OF STRUCTURE


BRACKET HOLES  
WILL FIT AROUND  
THREADED INSERTS

1202 (x2)  
TORX PAN HEAD 1/4-20x3/4 ASSY

HAND TIGHTEN ONLY

1202 (x2)  
TORX PAN HEAD 1/4-20x3/4 ASSY

HAND TIGHTEN ONLY

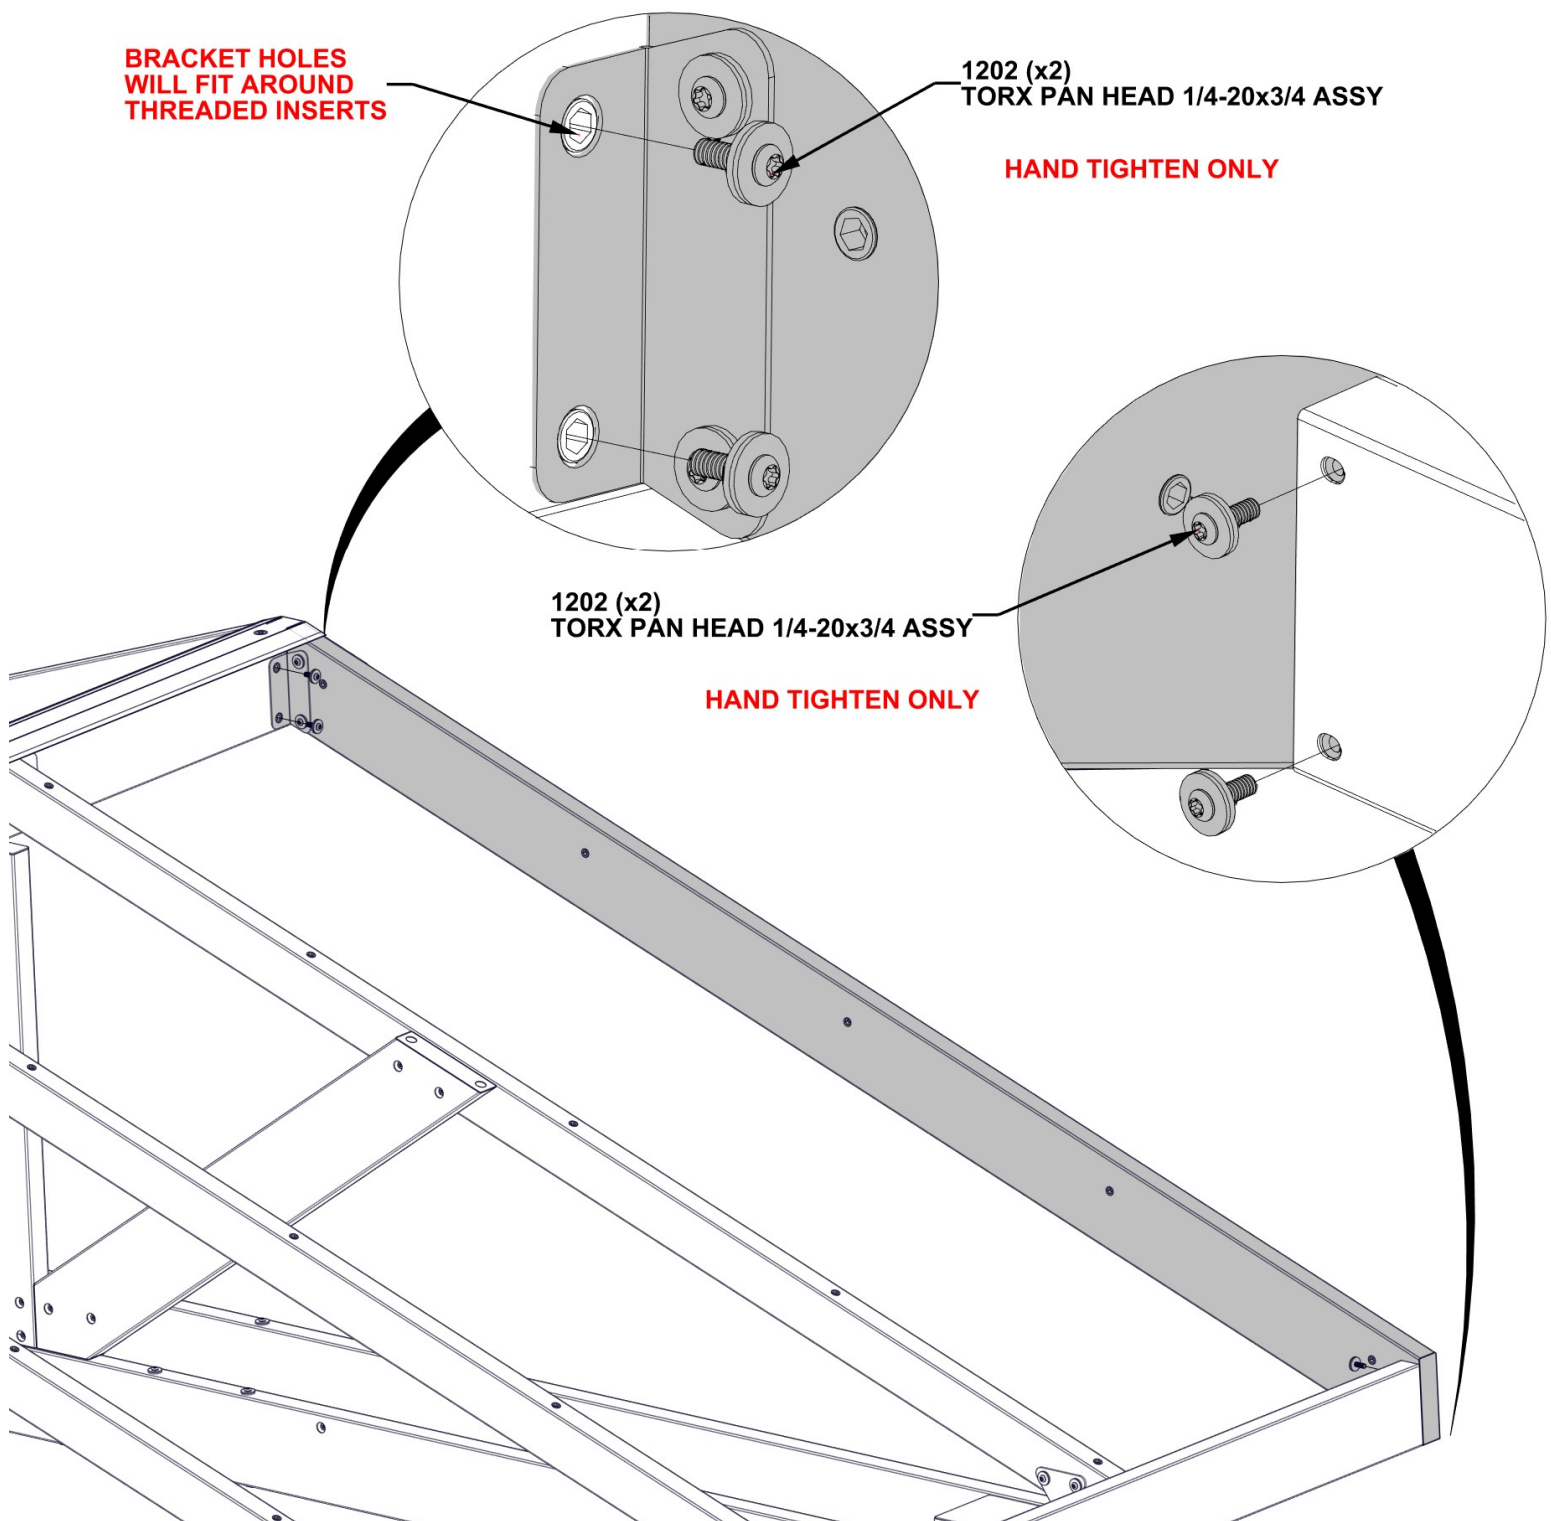

# STEP 42 - PURLIN ASSEMBLY




E01 PURLIN ASSEMBLY - A4M03800  
(x10) 71 11/16"x1 15/16"x1 9/16" (40x50x1820.60)




A6P00530 2-WAY SQUARE PLUG  
(x10)

- COMPLETE THIS STEP TEN TIMES
- USE A RUBBER Mallet TO TAP 2-WAY SQUARE PLUG INTO END OF PURLIN

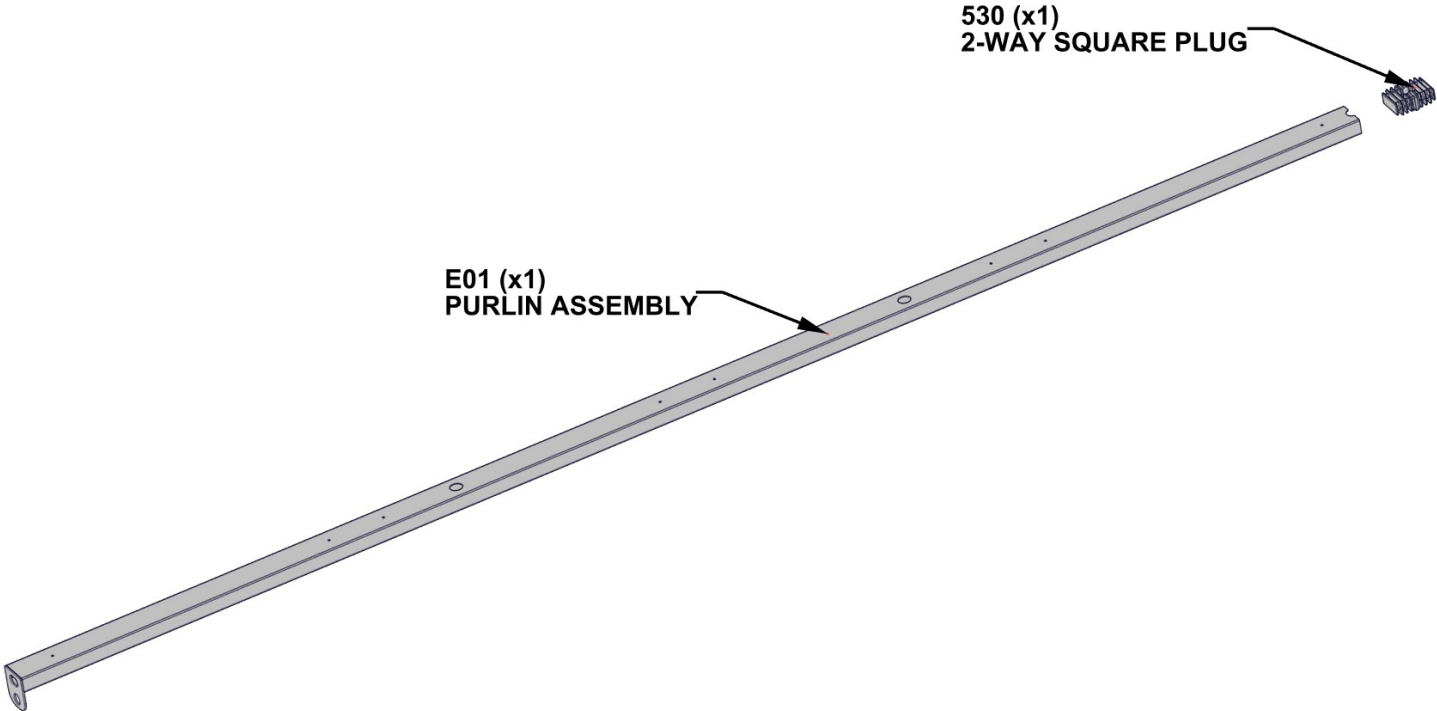


# STEP 43 - PURLIN ASSEMBLY



**E02 PURLIN ASSEMBLY - A4M03801**  
(x10) 53 5/8"x1 15/16"x1 9/16" (40x50x1362.40)

- **COMPLETE THIS STEP TEN TIMES**
- **USE A RUBBER Mallet TO TAP ENDS OF EACH PURLIN UNTIL TIGHT AGAINST 2-WAY PLUG**

**ENSURE E02 IS ORIENTED  
CORRECTLY WITH PILOT  
HOLES FACING UP**

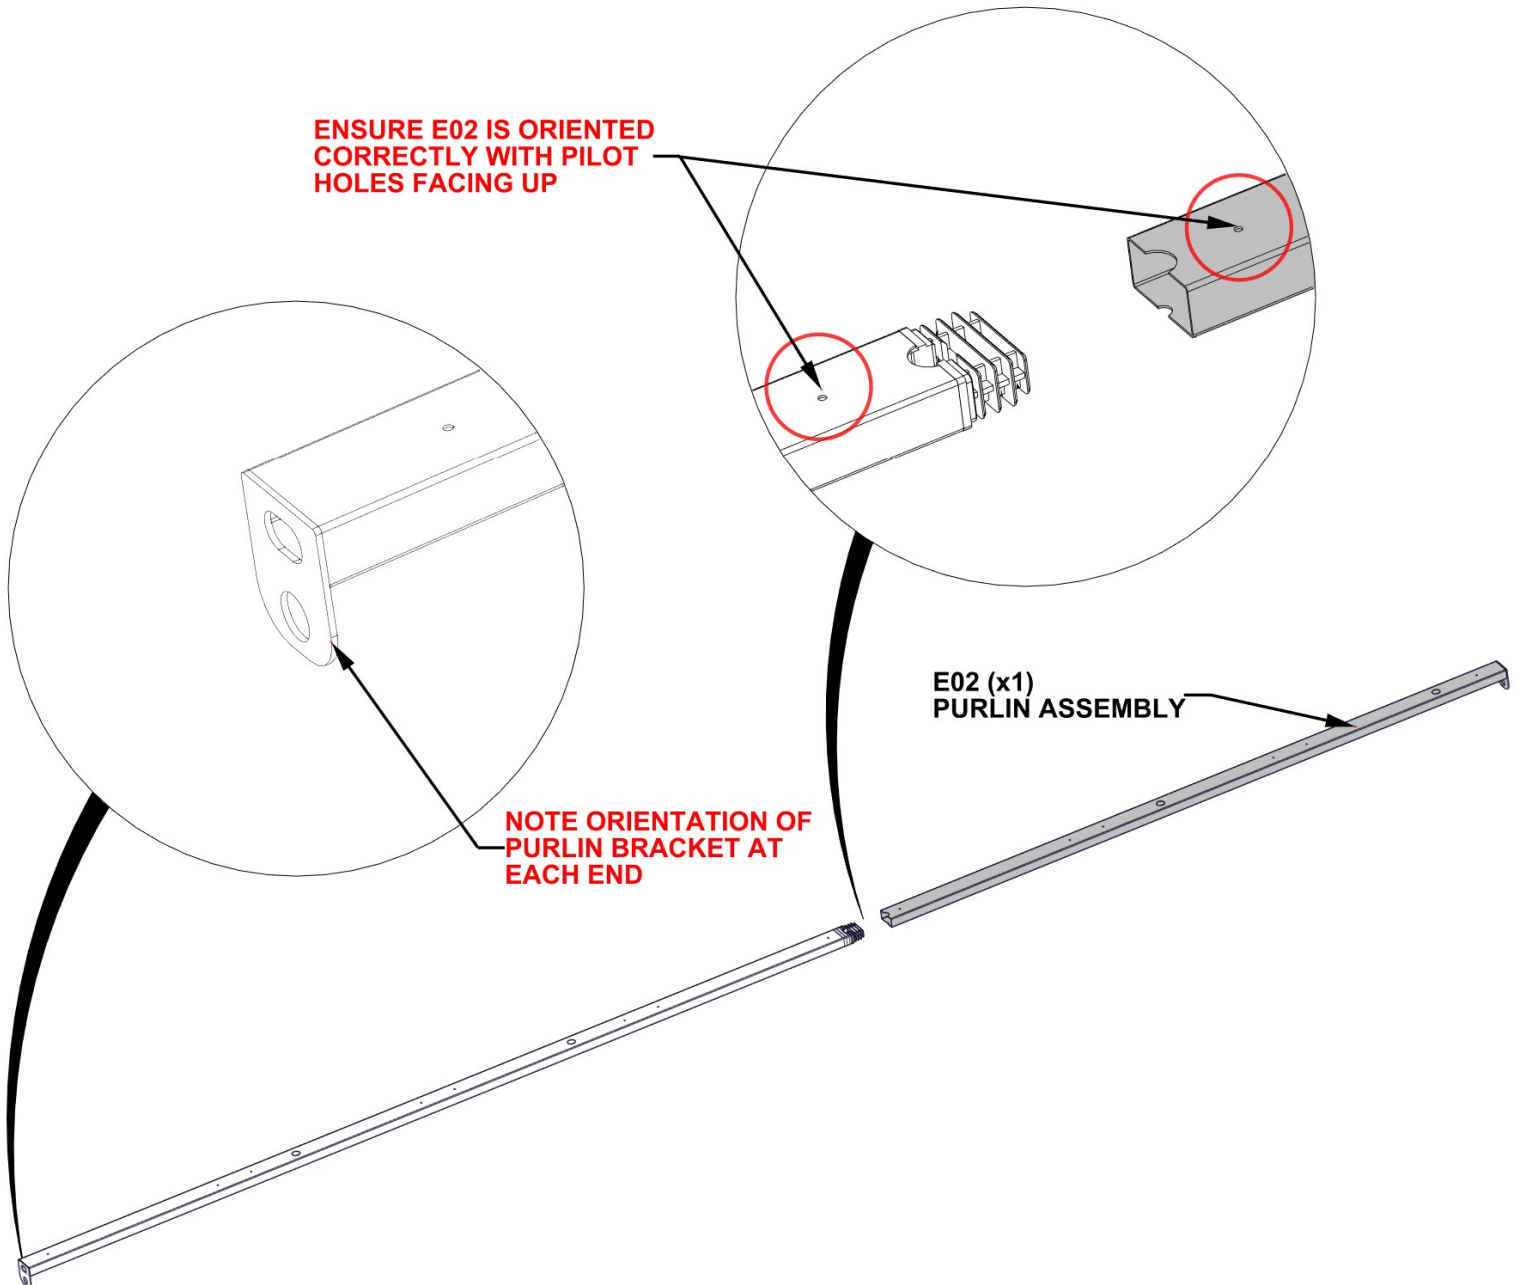

**NOTE ORIENTATION OF  
PURLIN BRACKET AT  
EACH END**


**E02 (x1)  
PURLIN ASSEMBLY**

# STEP 44A - ROOF ASSEMBLY

QTY	PartNo	DESCRIPTION
50	H101132	TORX SOCKET SCREW SHORT 1/4-20

## PURLIN ASSEMBLIES STEP 42 - 43 (x10)


- MAKE SURE MIDDLE OF PURLIN ASSEMBLY IS SUPPORTED WHEN LIFTING.
- ALIGN ALL PURLIN JOINTS ALONG THE THIRD RAFTER FROM THE BACK.
- STARTING AT THE RIDGE AND WORKING DOWN WILL MAKE IT EASIER TO INSTALL PURLIN ASSEMBLIES.

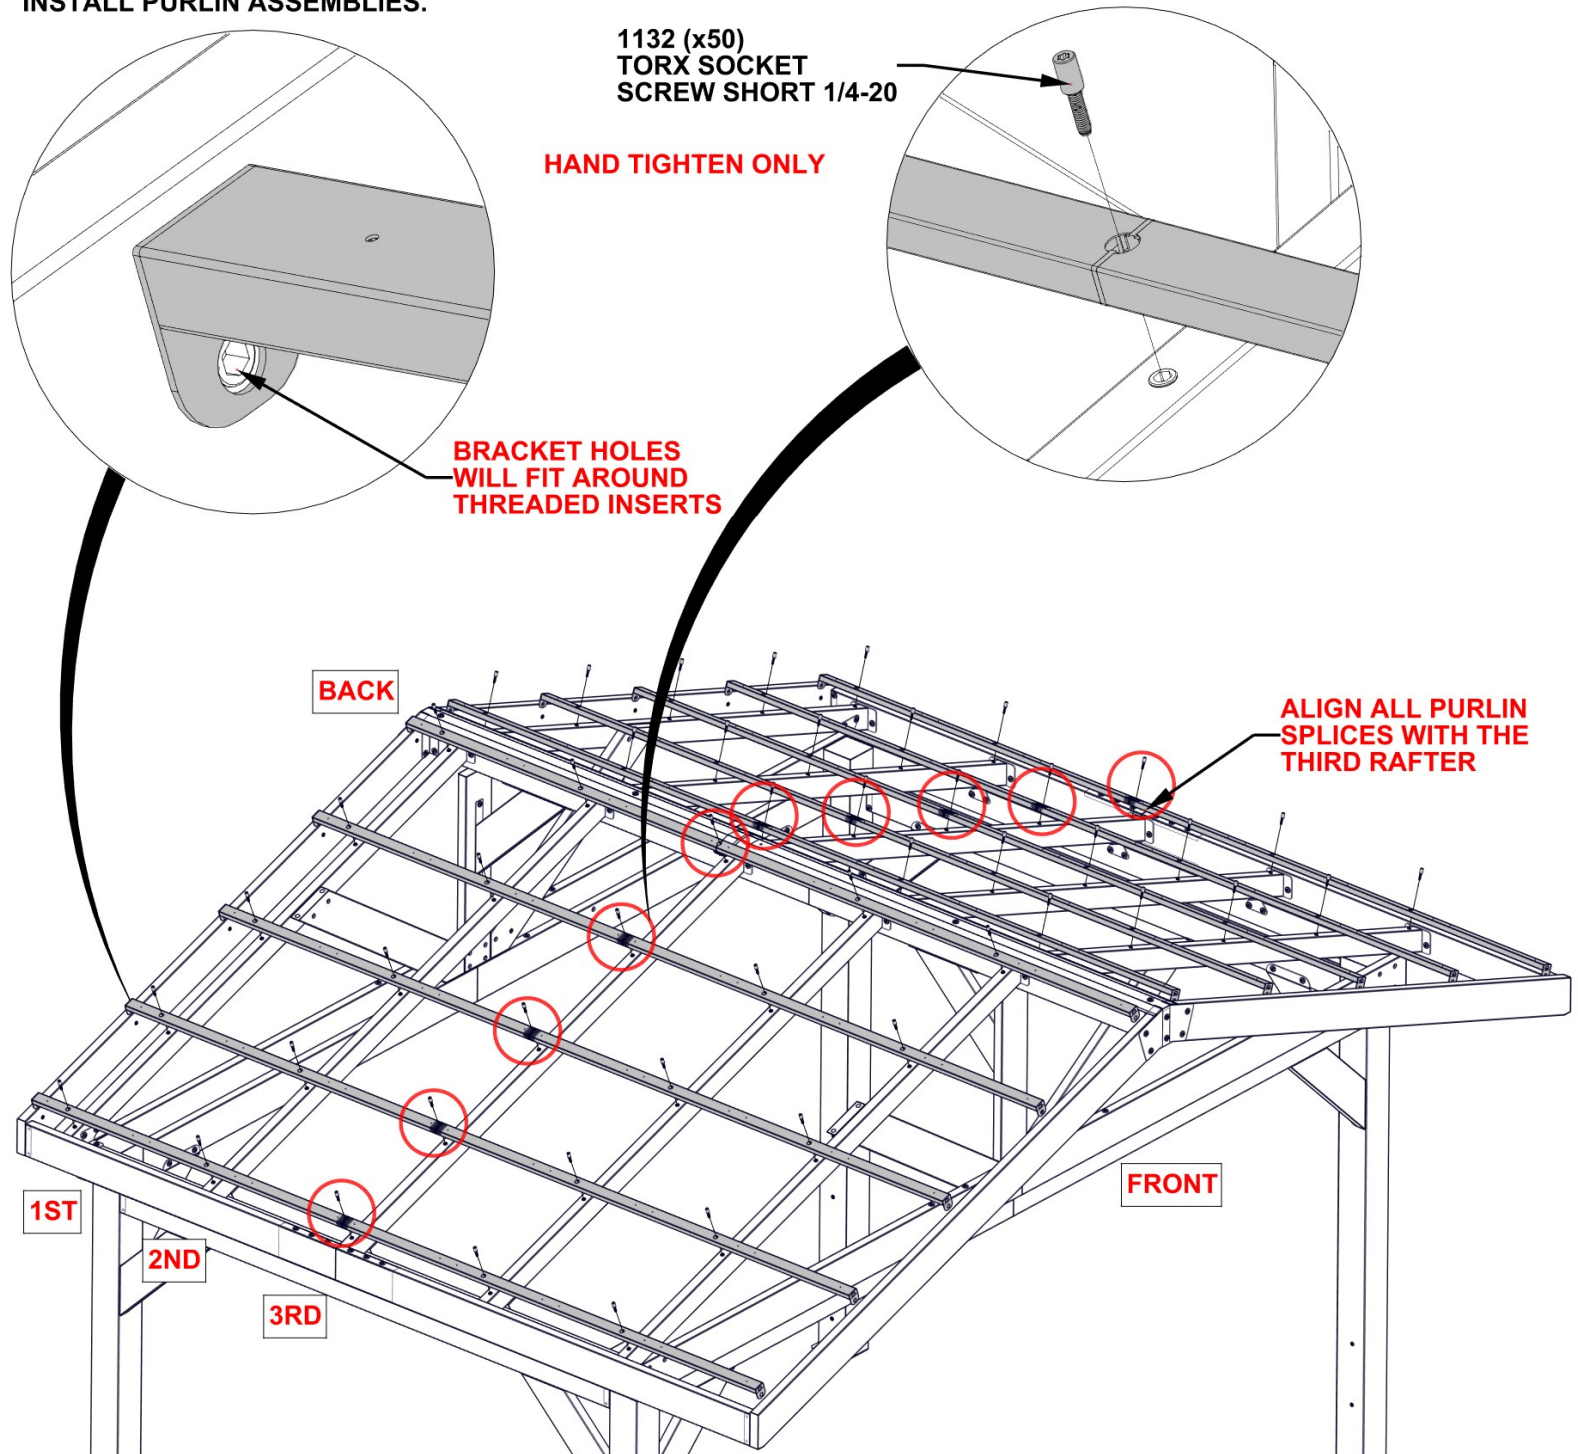

# STEP 44B - ROOF ASSEMBLY


QTY	PartNo	DESCRIPTION
20	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- ONCE PURLINS HAVE BEEN INSTALLED,  
TIGHTEN ALL HARDWARE FROM PREVIOUS STEPS.

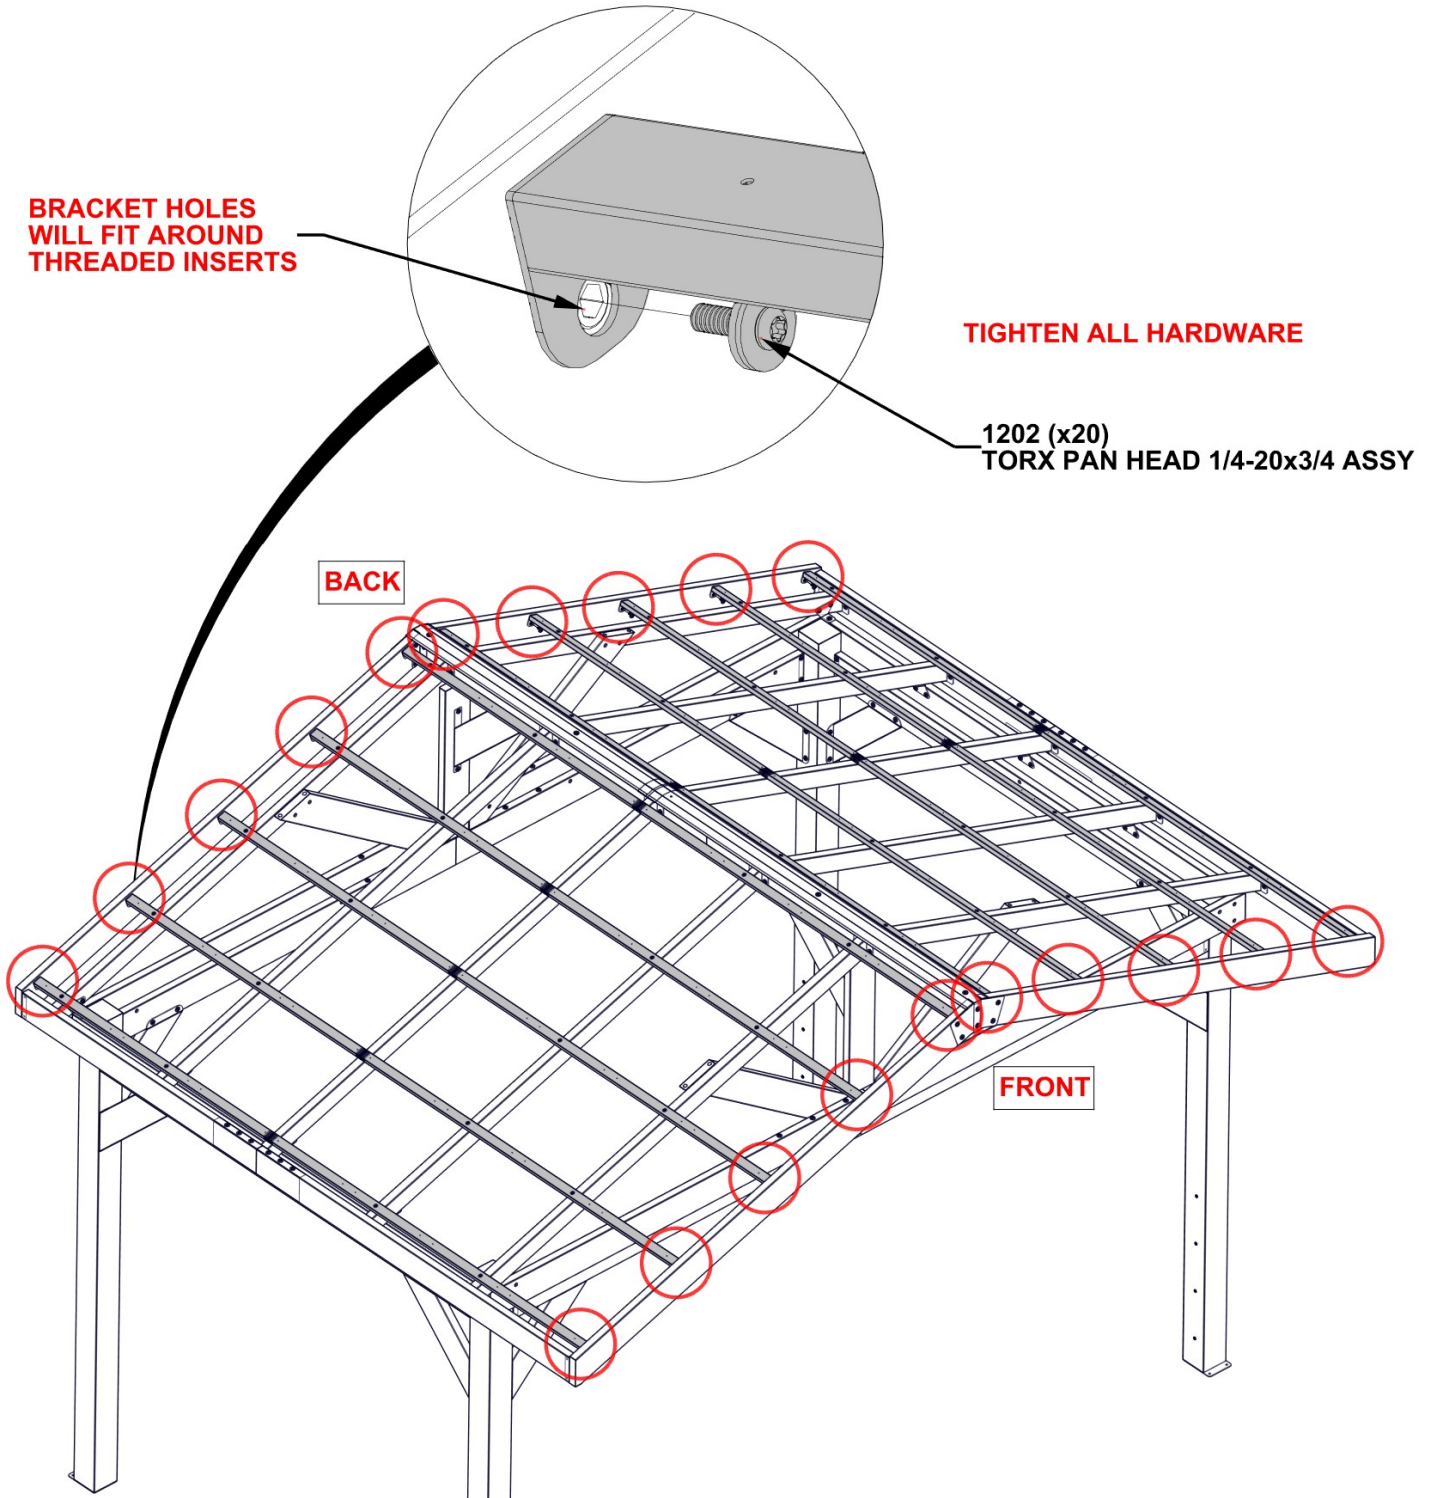


# STEP 45 - ROOF ASSEMBLY

QTY	PartNo	DESCRIPTION
10	H101117	SCREW WOODGRIP 10-16x3/4" BLK

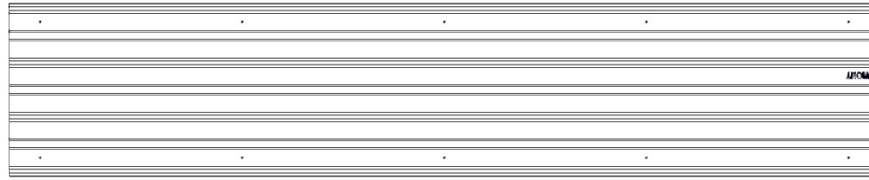

A4M03528 STEEL SHEETING  
(x1)

- REMOVE PROTECTIVE FILM.
- SLIDE ROOF SHEET UP, MAKING SURE IT SLIDES UNDERNEATH THE RIDGE CAP.
- STARTING AT THE LEFT SIDE AND WORKING TO THE RIGHT, LINE UP THE HOLES IN THE ROOF SHEET WITH THE PILOT HOLES IN THE PURLINS.
- **WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.**
- **LINE UP THE PILOT HOLES IN THE ROOF SHEET WITH THE PILOT HOLES IN THE PURLINS.**

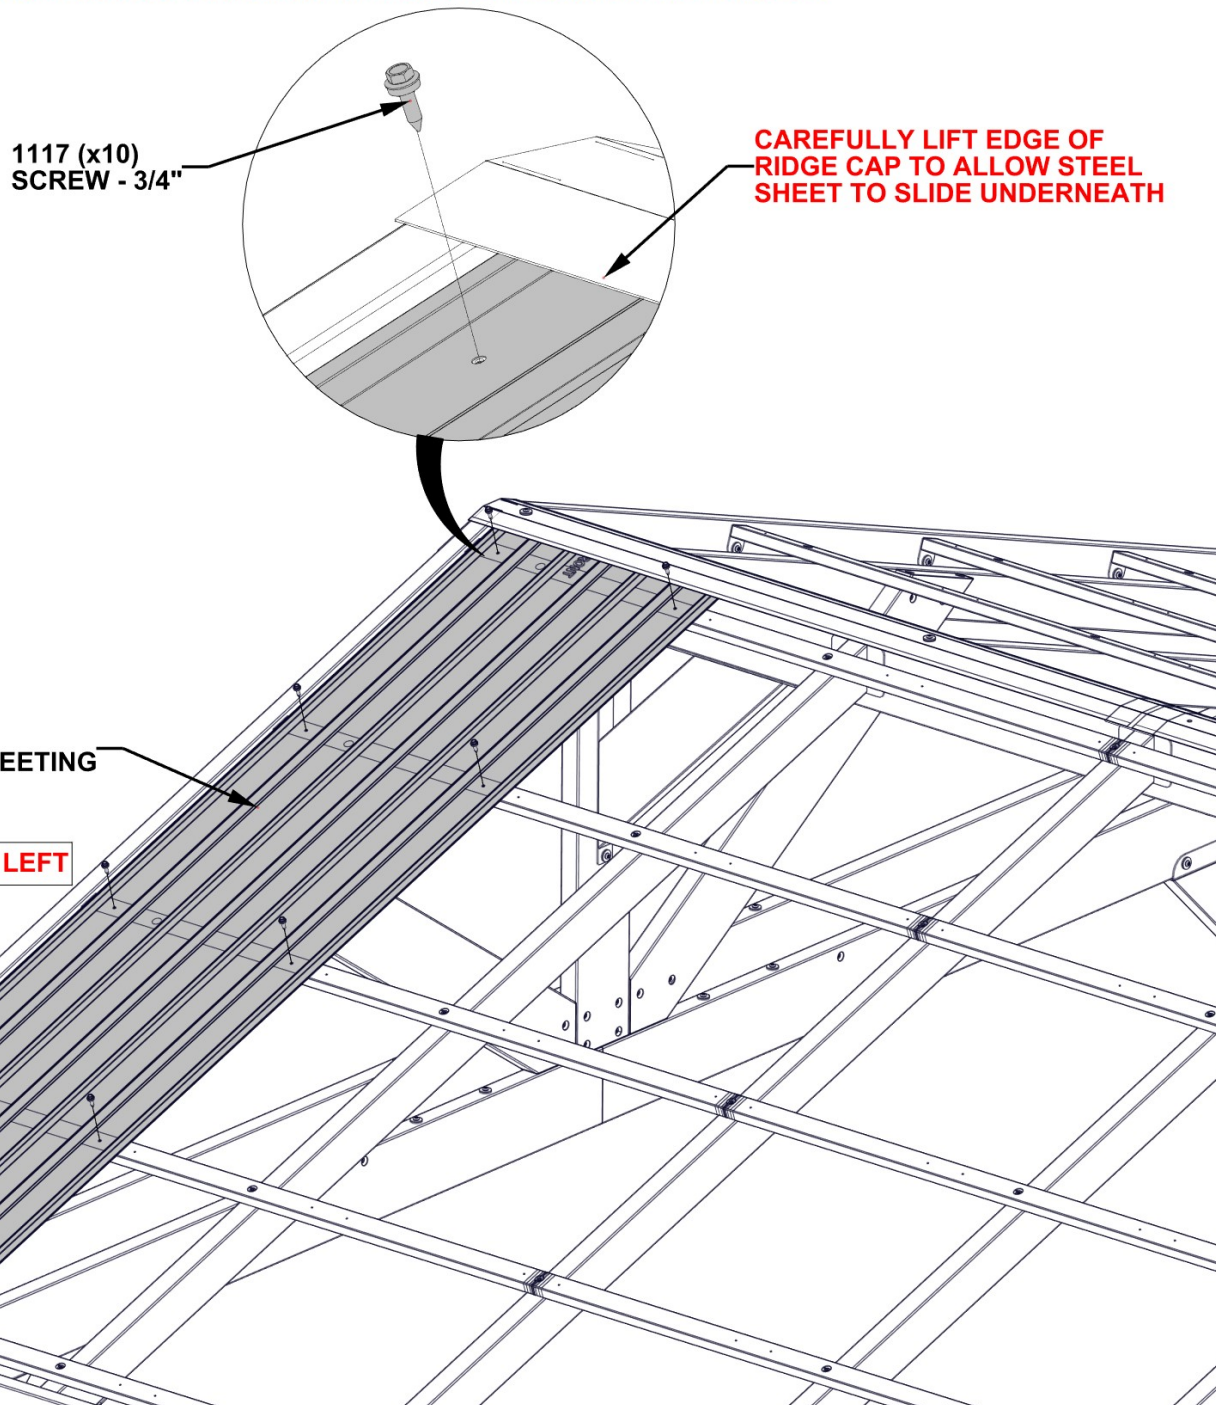


# STEP 46 - ROOF ASSEMBLY

QTY	PartNo	DESCRIPTION
10	H101117	SCREW WOODGRIP 10-16x3/4" BLK



A4M03528 STEEL SHEETING  
(x1)

- REMOVE PROTECTIVE FILM.
- SLIDE ROOF SHEET UP, MAKING SURE IT SLIDES UNDERNEATH THE RIDGE CAP.
- STARTING AT THE LEFT SIDE AND WORKING TO THE RIGHT, LINE UP THE HOLES IN THE ROOF SHEET WITH THE PILOT HOLES IN THE PURLINS.
- **WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.**
- **LINE UP THE PILOT HOLES IN THE ROOF SHEET WITH THE PILOT HOLES IN THE PURLINS.**

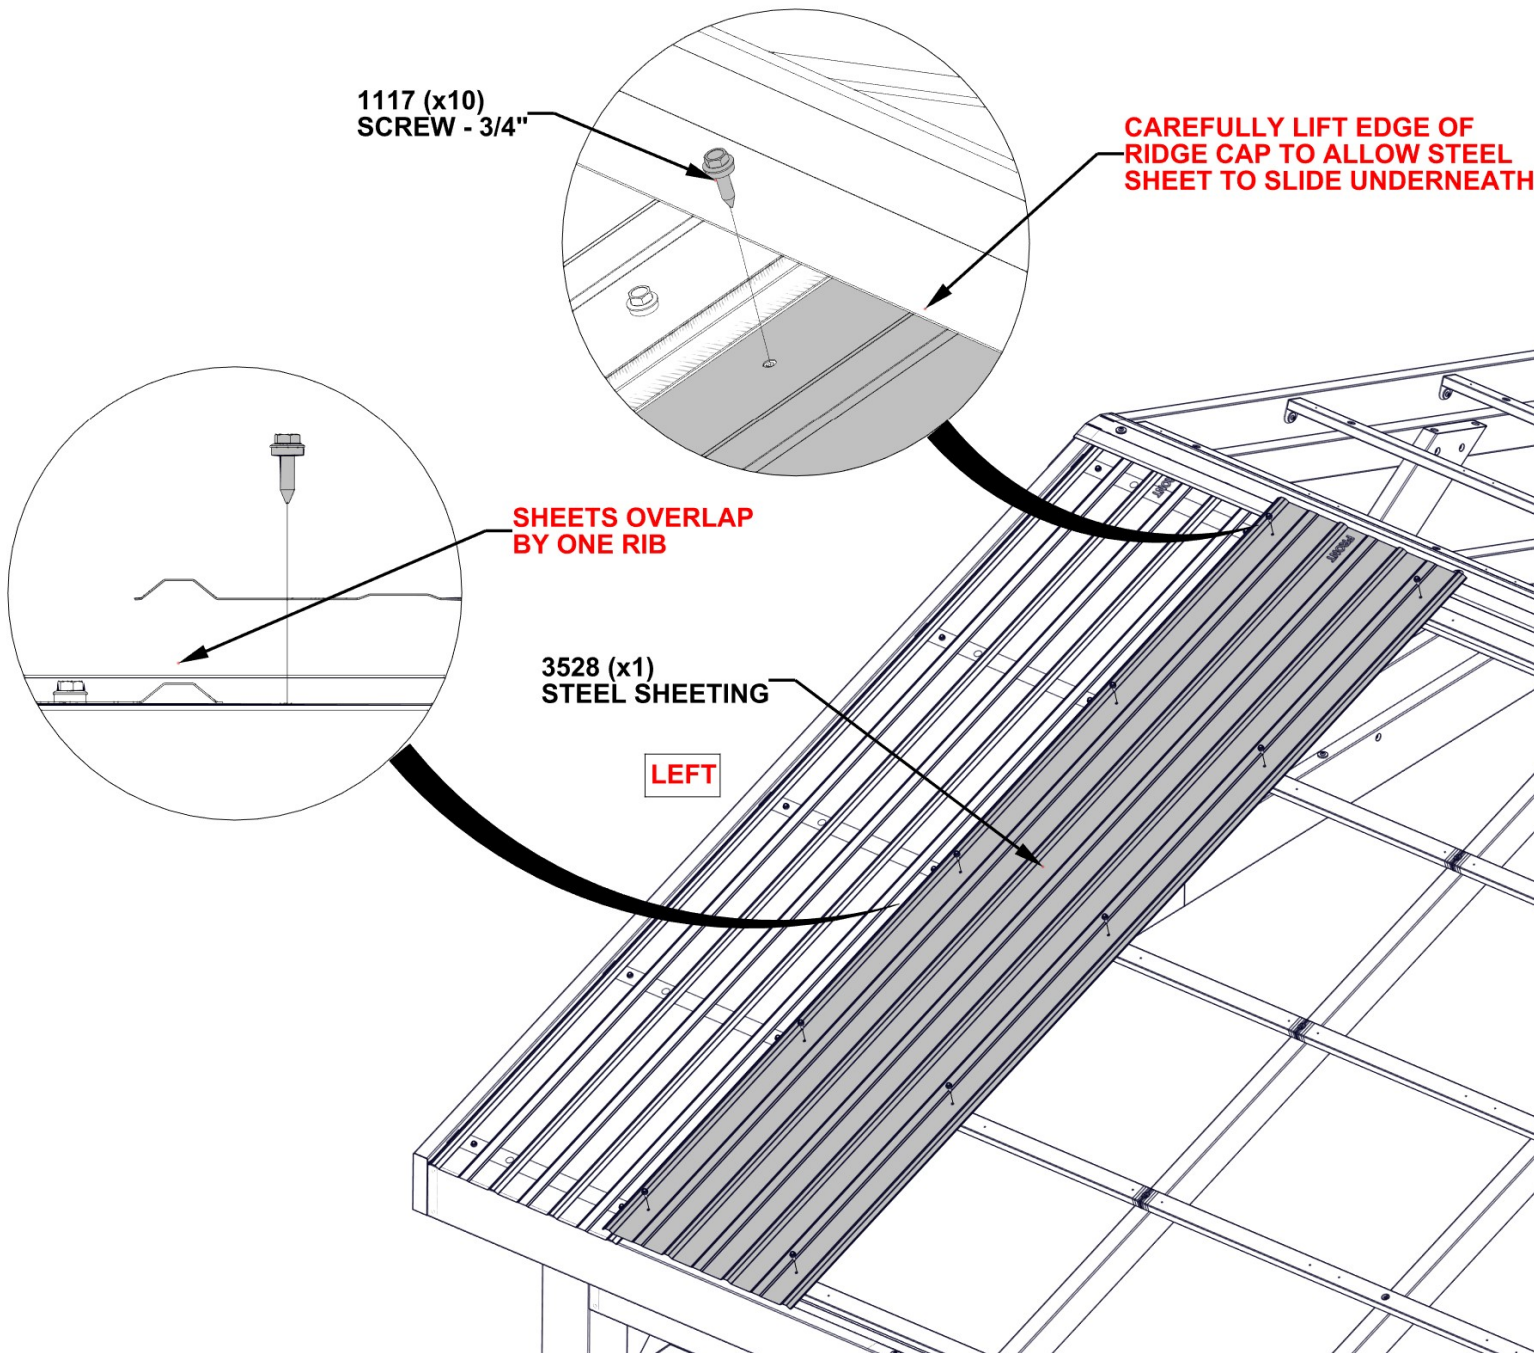


# STEP 47 - ROOF ASSEMBLY

QTY	PartNo	DESCRIPTION
50	H101117	SCREW WOODGRIP 10-16x3/4" BLK




A4M03528 STEEL SHEETING  
(x5)

- REMOVE PROTECTIVE FILM.
- INSTALL FIVE SHEETS IN THE SAME WAY AS THE FIRST TWO.
- ATTACH AND FULLY TIGHTEN ALL SCREWS ON EACH ROOF SHEET BEFORE ATTACHING THE NEXT ONE. THIS MAKES IT POSSIBLE TO REACH ALL THE SCREWS WITHOUT GETTING ON THE ROOF.
- **WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.**
- **LINE UP THE PILOT HOLES IN THE ROOF SHEET WITH THE PILOT HOLES IN THE PURLINS.**

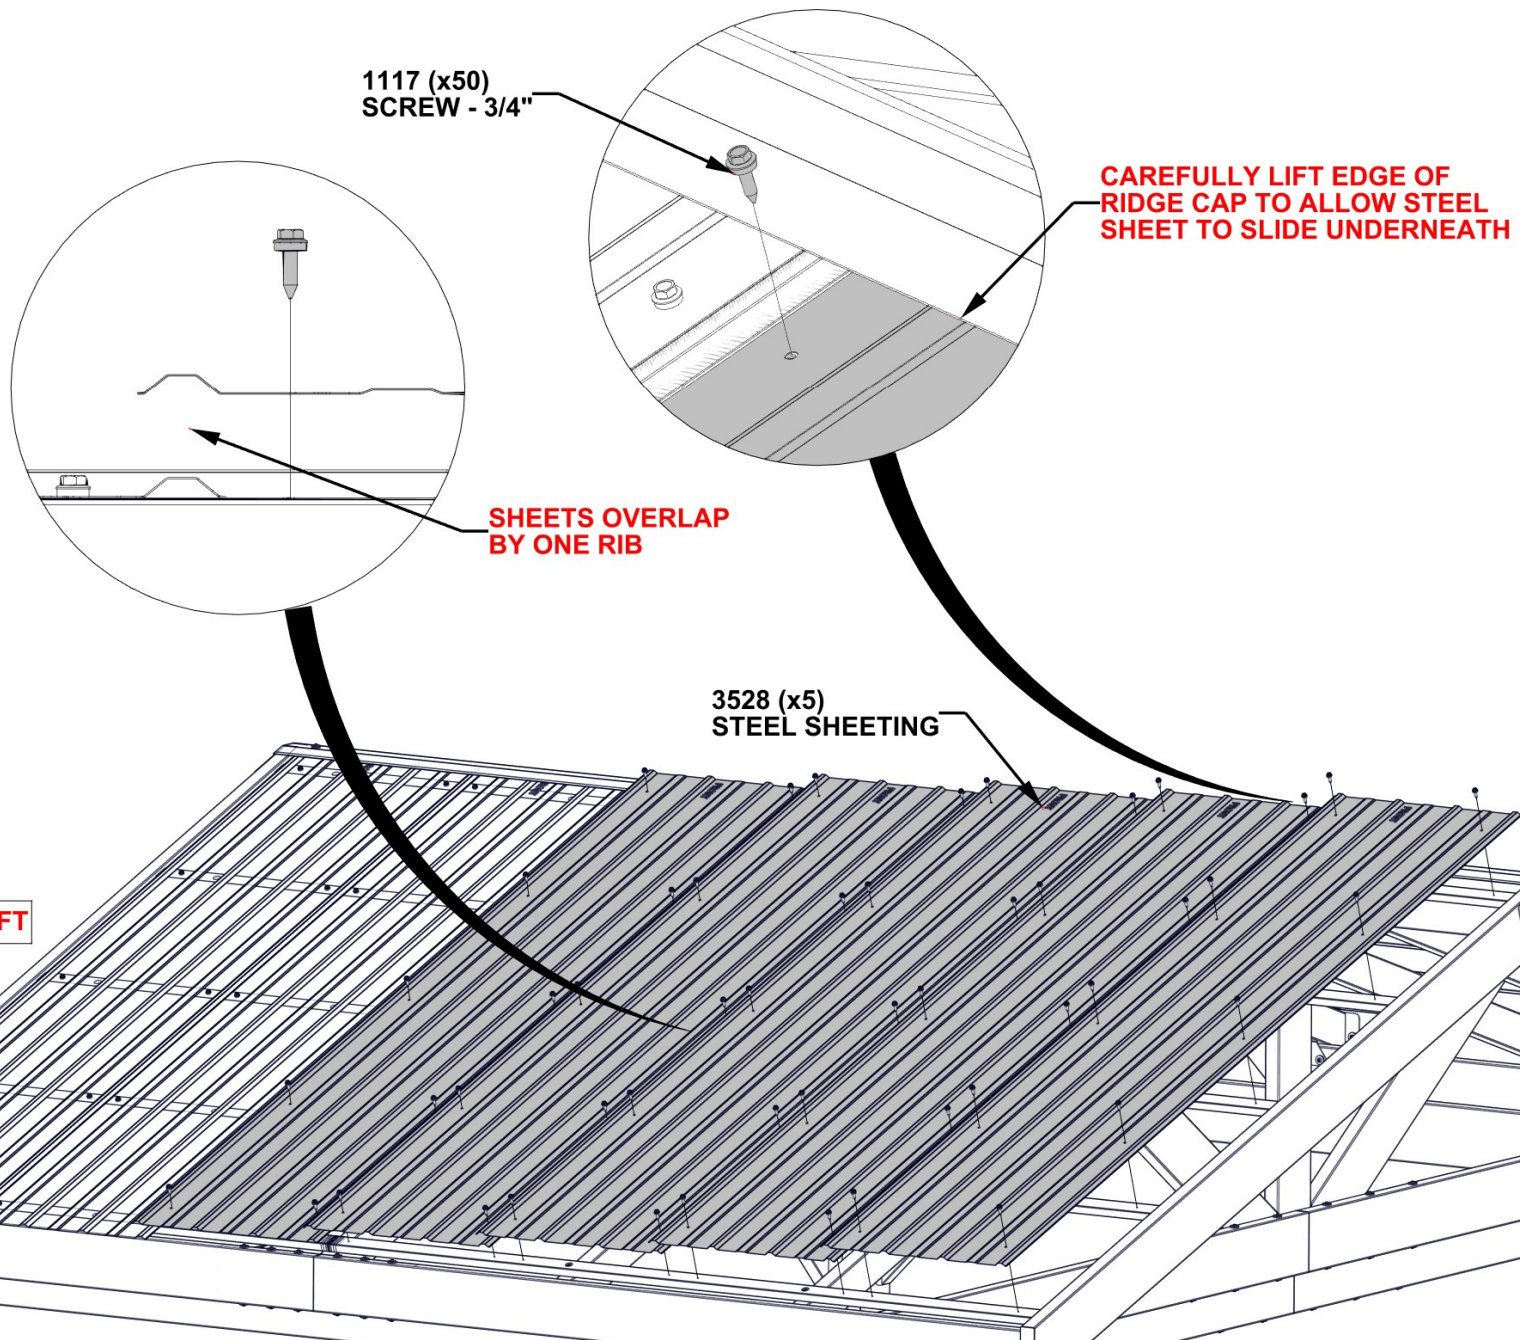


# STEP 48 - ROOF ASSEMBLY

QTY	PartNo	DESCRIPTION
8	H101116	SCREW SELF TAPPING 1/4x1 BLK

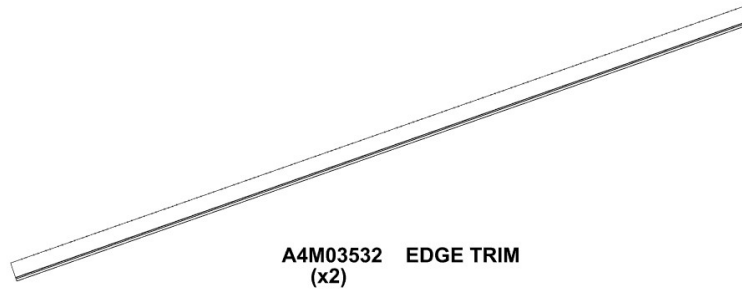


- REMOVE PROTECTIVE FILM.
- SLIDE EDGE TRIM UNTIL ONE END IS POSITIONED UNDERNEATH RIDGE CAP AND OTHER END IS FLUSH WITH END.
- STARTING AT THE TOP. ALIGN SCREWS WITH SHEET SCREWS.
- **DUE TO MULTIPLE LAYERS OF METAL ON THE DRIP EDGE, IT IS RECOMMENDED THAT A 1/8" (3mm) DRILL BIT BE USED TO CREATE STARTER HOLES.**
- **WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.**

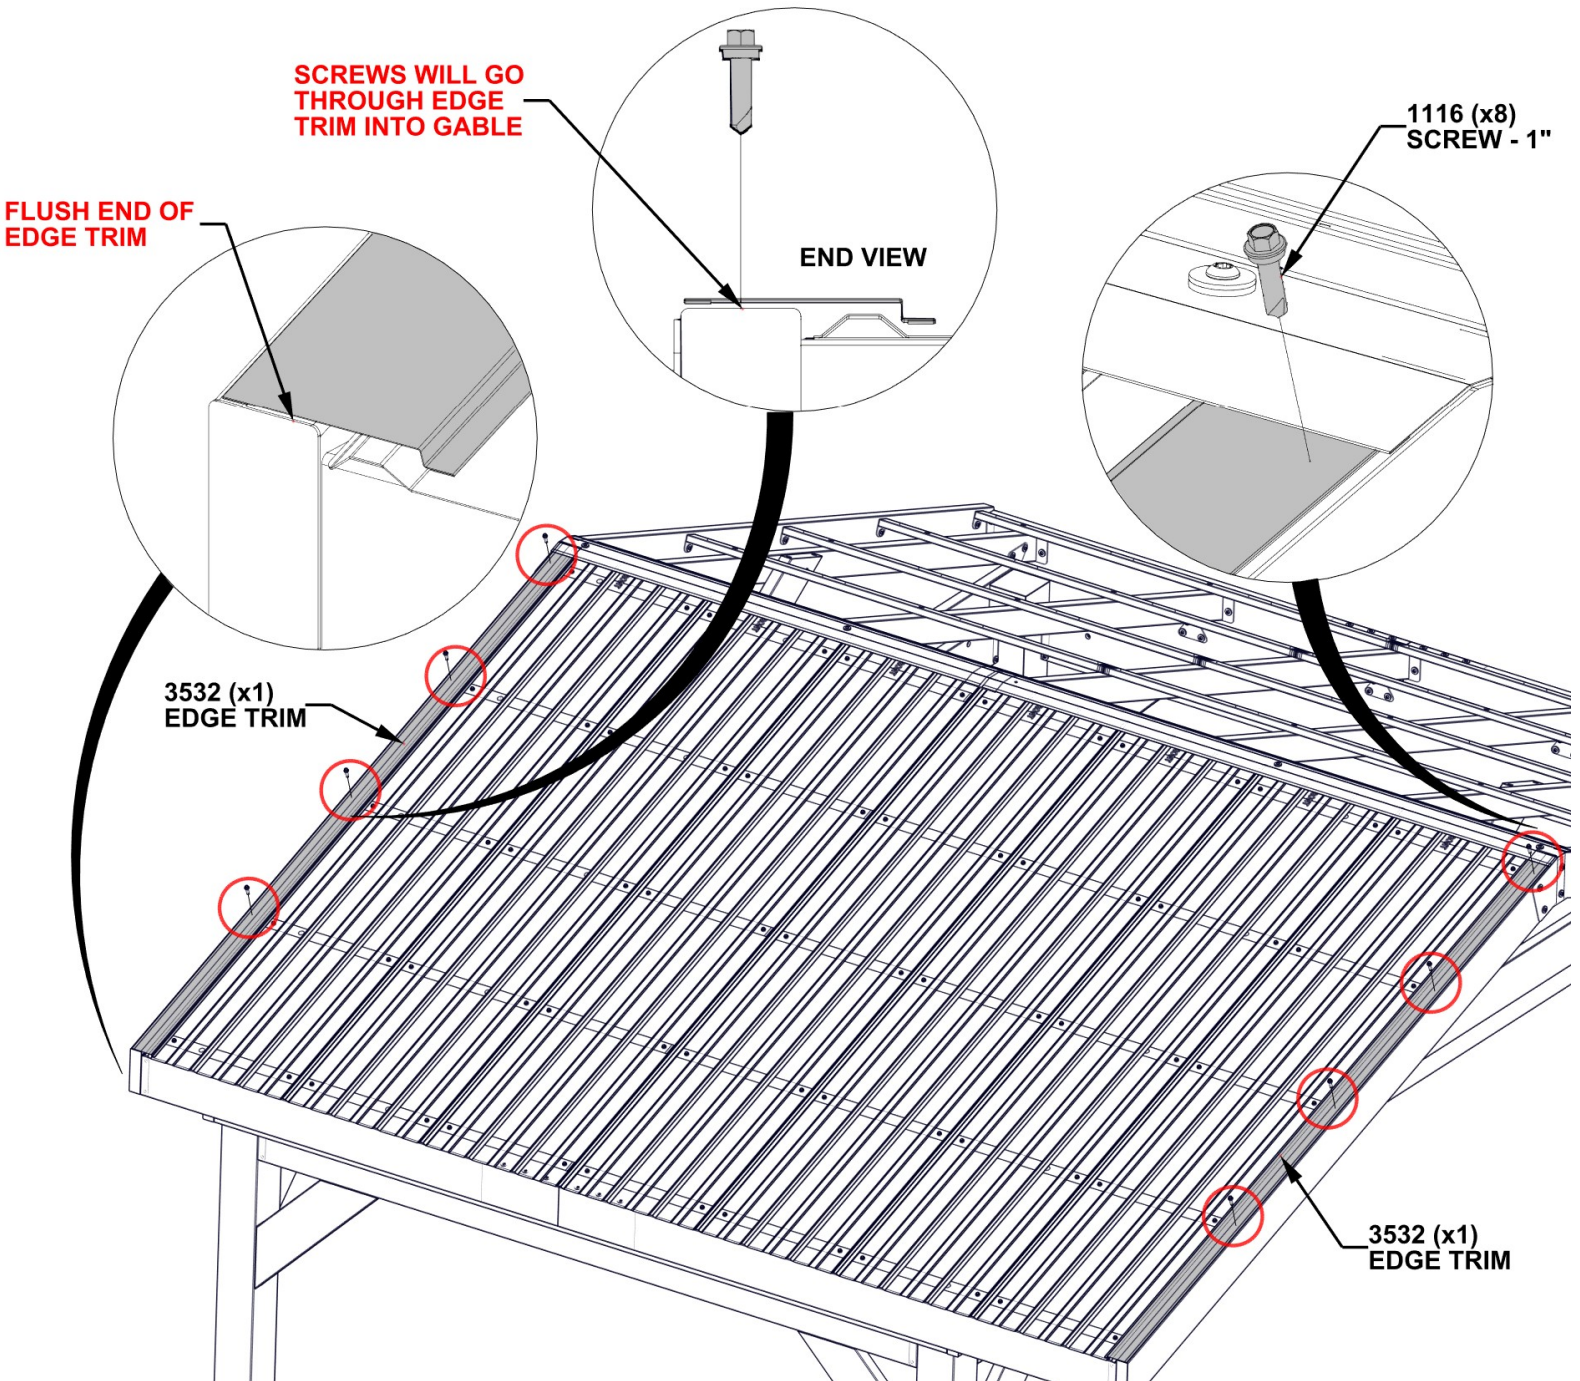


# STEP 49A - ROOF ASSEMBLY



A4M03529 DRIP TRIM  
(x1)

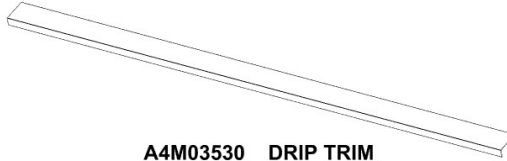


A4M03530 DRIP TRIM  
(x1)

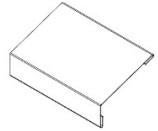

A4M03531 DRIP TRIM SPLICE  
(x1)


- REMOVE PROTECTIVE FILM.
- ORIENT DRIP EDGE AND SPLICE AS SHOWN BELOW.
- STARTING IN THE FRONT CORNER, ATTACH SCREWS SPACING EVERY OTHER RIB.
- **DUE TO MULTIPLE LAYERS OF METAL ON THE DRIP EDGE, IT IS RECOMMENDED THAT A 1/8" (3mm) DRILL BIT BE USED TO CREATE STARTER HOLES.**
- **WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.**

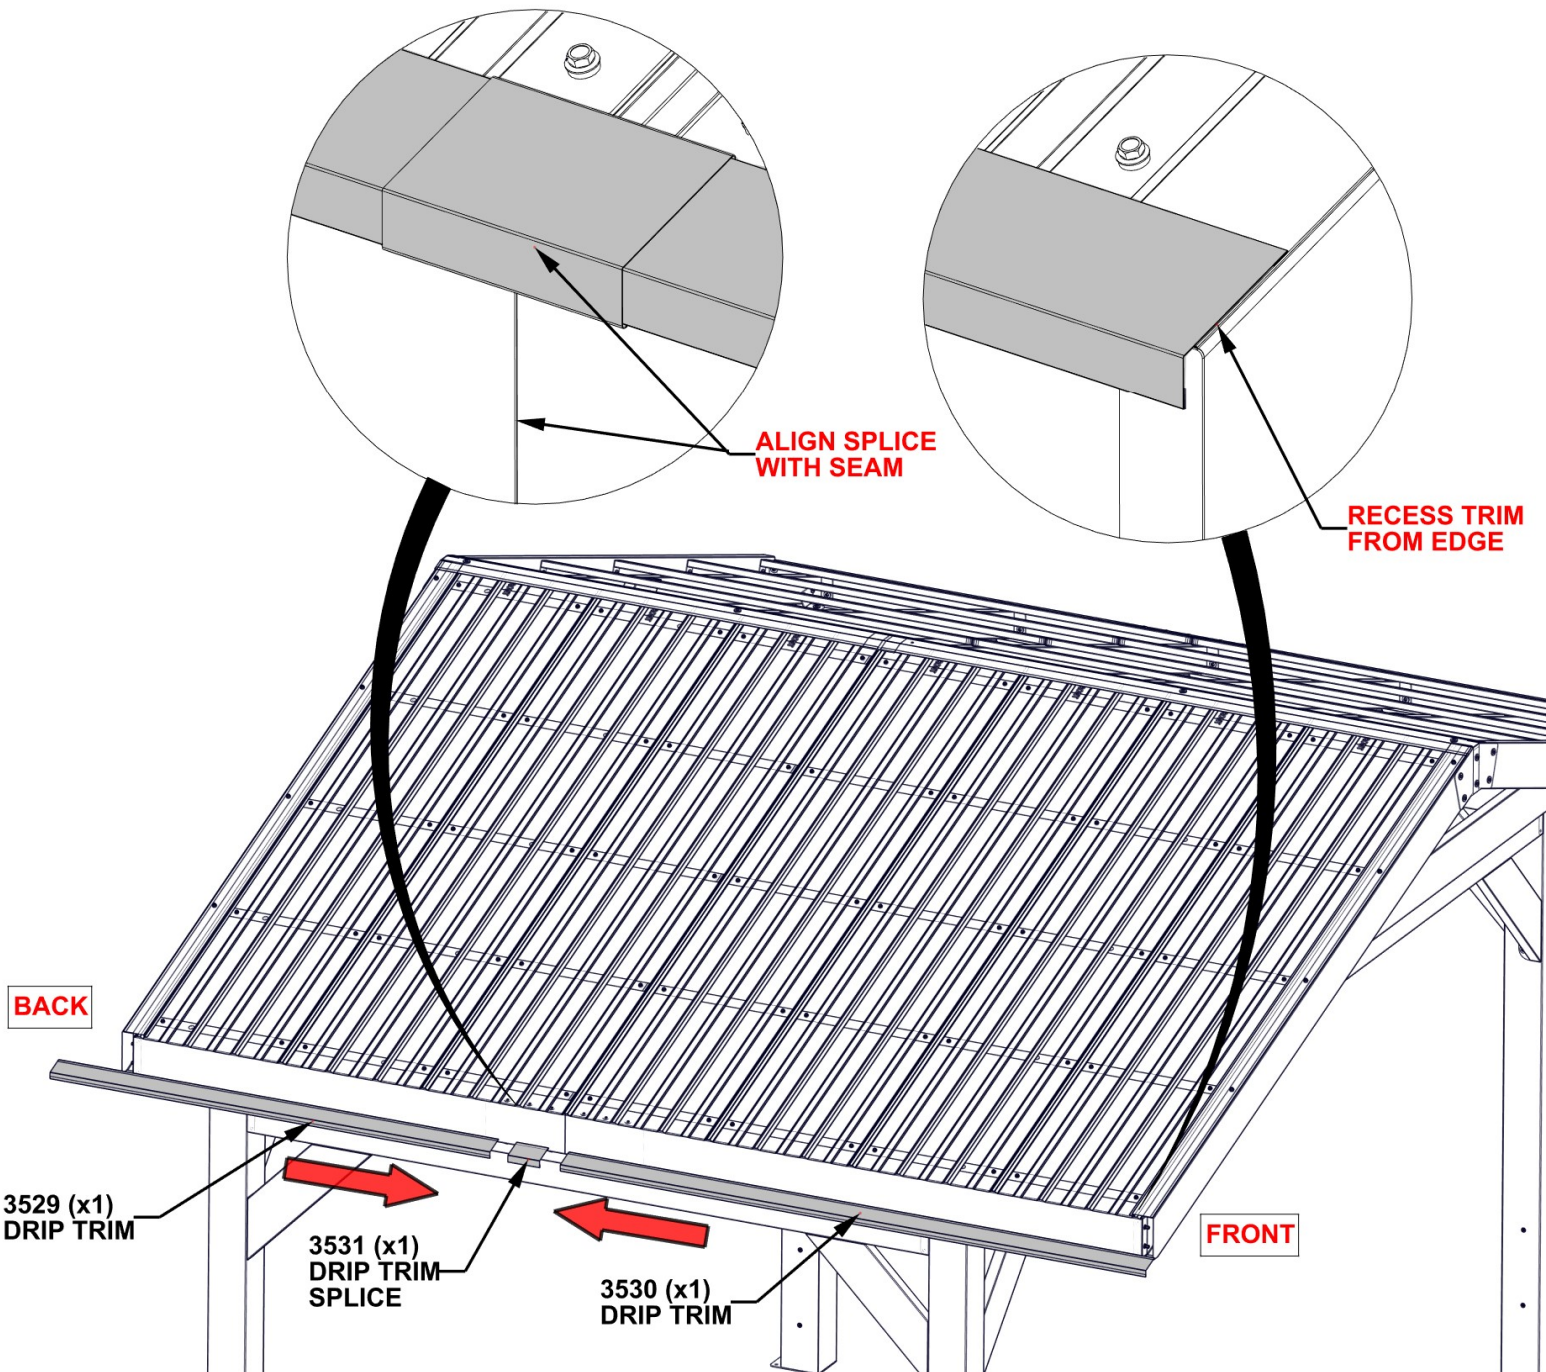

# STEP 49B - ROOF ASSEMBLY

QTY	PartNo	DESCRIPTION
12	H101116	SCREW SELF TAPPING 1/4x1 BLK

- REMOVE PROTECTIVE FILM.
- ORIENT DRIP EDGE AND SPLICE AS SHOWN BELOW.
- STARTING IN THE FRONT CORNER, ATTACH SCREWS SPACING EVERY OTHER RIB.
- DUE TO MULTIPLE LAYERS OF METAL ON THE DRIP EDGE, IT IS RECOMMENDED THAT A 1/8" (3mm) DRILL BIT BE USED TO CREATE STARTER HOLES.
- WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.

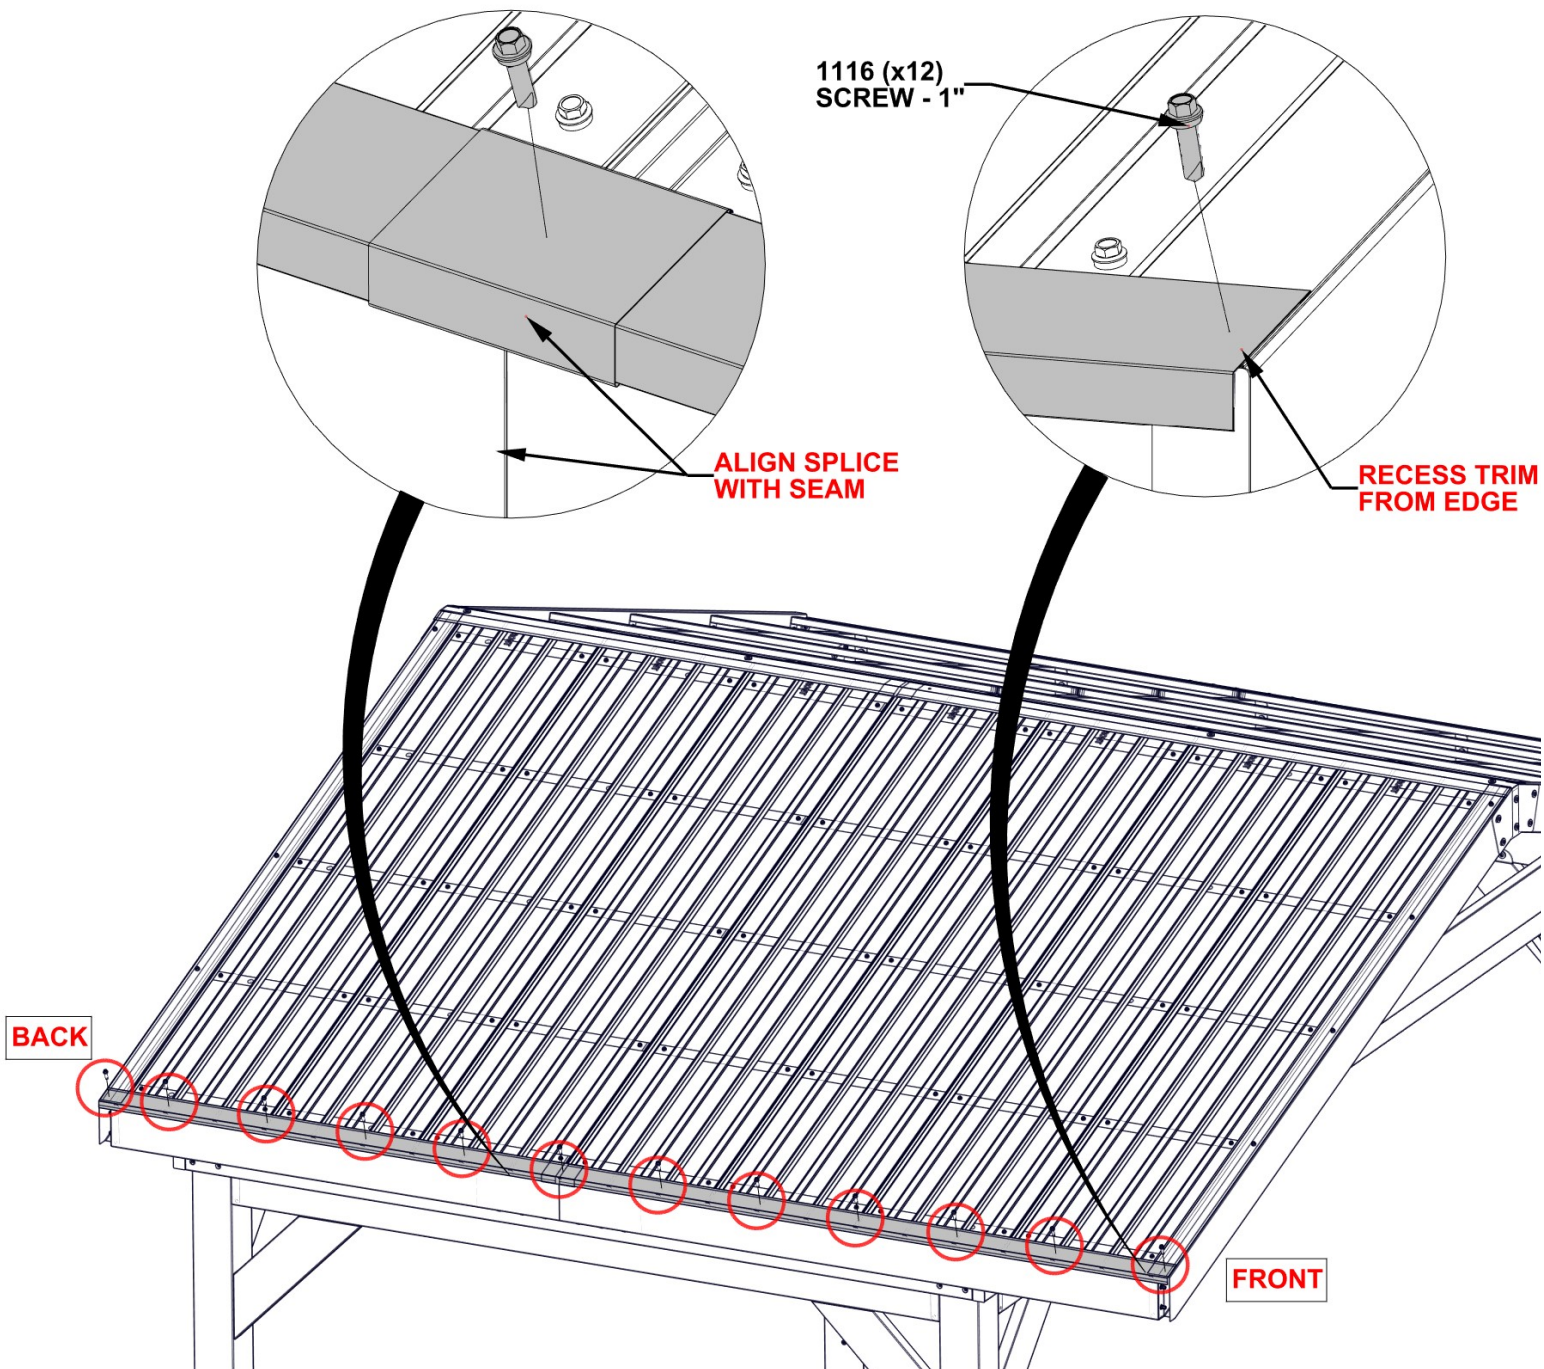


**REPEAT ROOF ASSEMBLY STEPS 45 - 49  
TO INSTALL SHEETMETAL ON OPPOSITE SIDE OF ROOF**

# STEP 50 - STRUCTURE ASSEMBLY



A4M01352 HOLE COVER  
(x70)


- USE A SMALL PIECE OF WOOD AND RUBBER Mallet TO TAP HOLE COVERS IN.
- DO NOT TAP DIRECTLY WITH A HAMMER AS YOU MAY DAMAGE THE POWDER COAT FINISH ON PRODUCT.

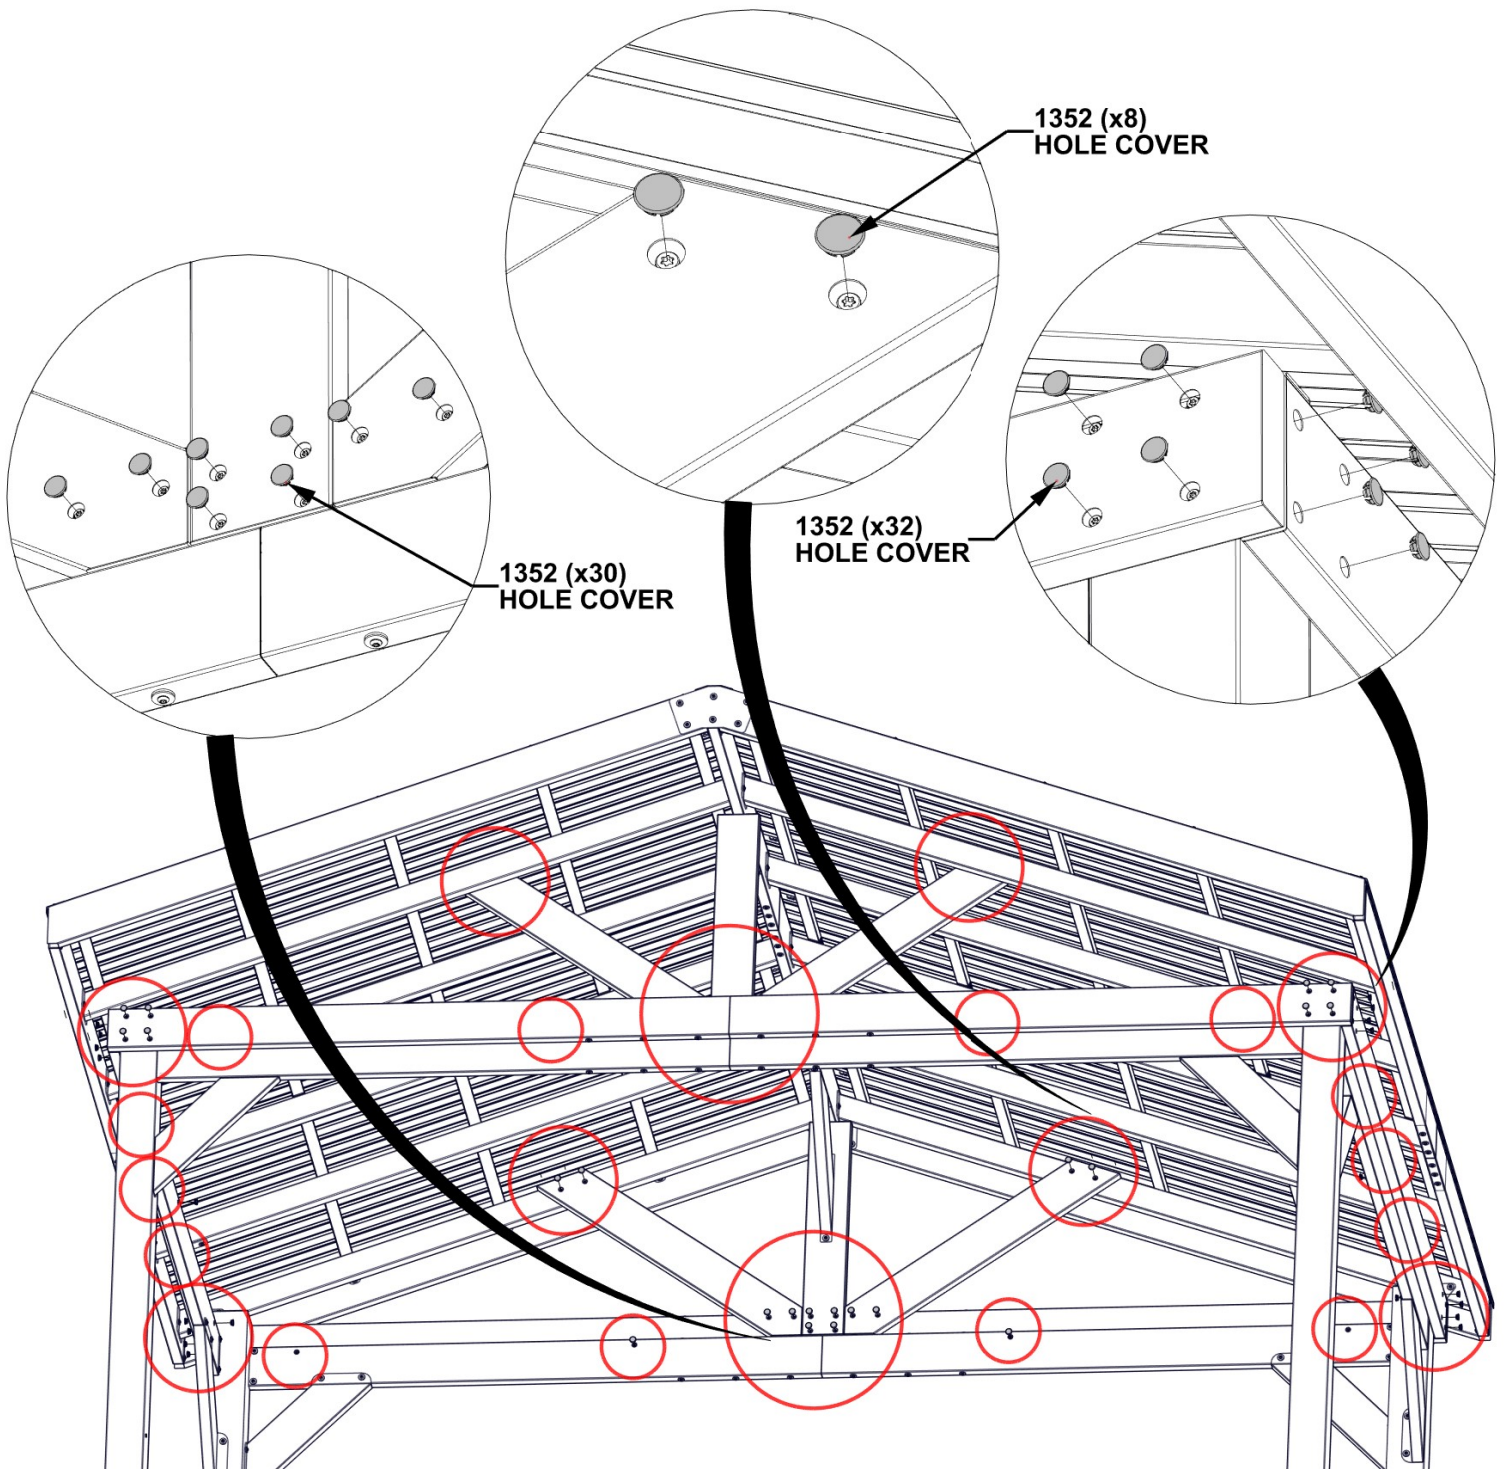


**COMPLETE STEPS 51 - 138 FOR  
LANCASTER GALLEY OUTDOOR KITCHEN CABINETS**

# STEP 51 - FRIDGE CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

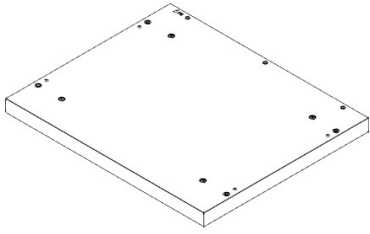


**F4 FRIDGE CABINET FLOOR PANEL ASSEMBLY - A4M03595**  
(x1) 28 1/8"x23 3/8"x2 5/8" (66x594x715)

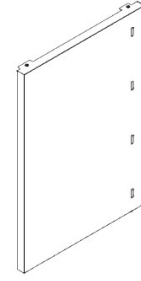


**S8 FRIDGE CABINET SIDE PANEL ASSEMBLY R - A4M03598**  
(x1) 33 3/8"x23 3/8"x1 15/16" (50x594x848.20)

- POSITION FLOOR PANEL IN THE PROXIMITY OF WHERE YOUR KITCHEN WILL BE.
- EACH FLOOR PANEL HAS FACTORY INSTALLED ADJUSTABLE FEET. USE PROVIDED HEX DRIVER TO ADJUST EACH FOOT UNTIL PANEL IS LEVEL.

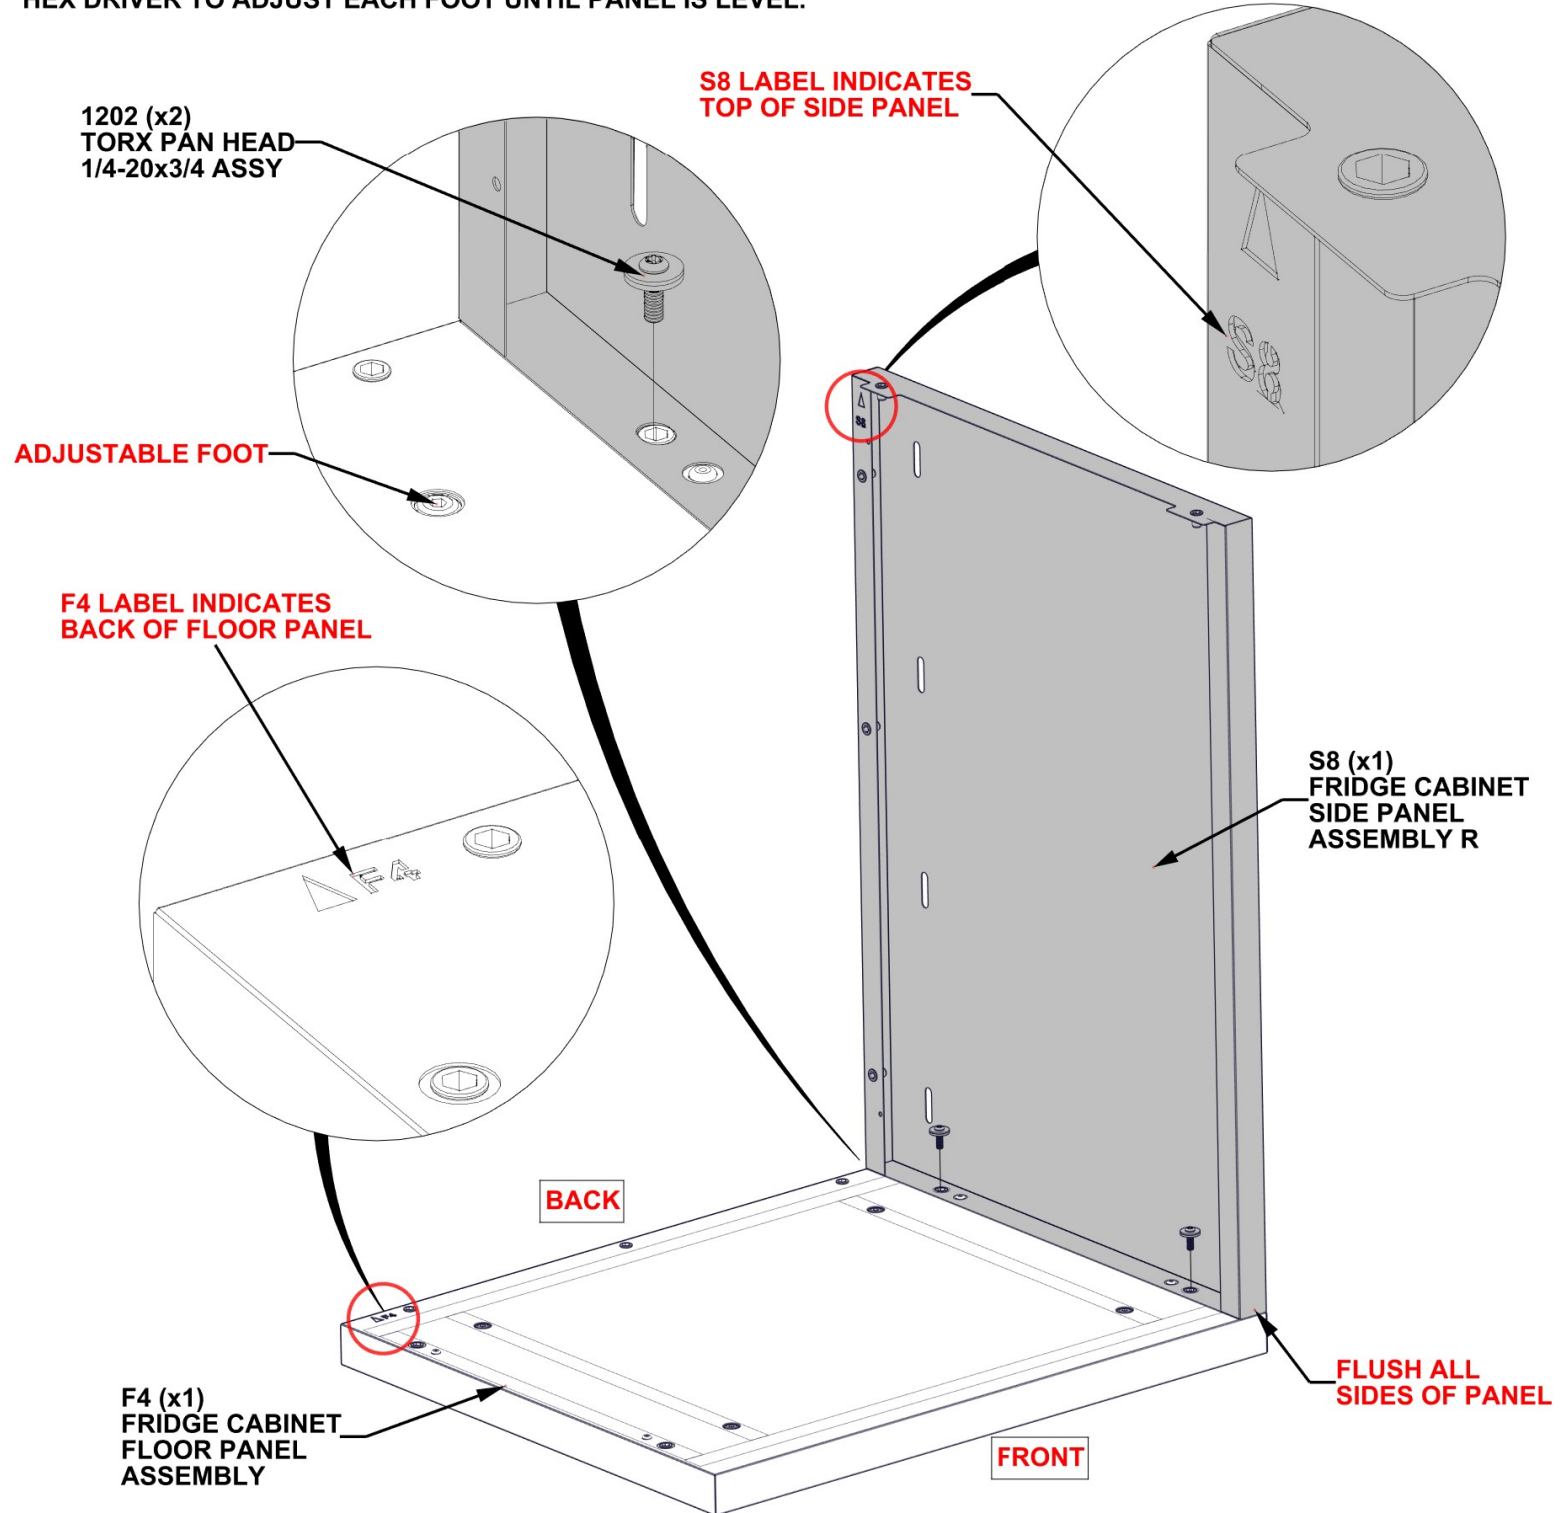


# STEP 52 - FRIDGE CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

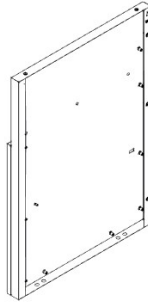


**S7 FRIDGE CABINET SIDE PANEL ASSEMBLY L - A4M03597**  
(x1) 33 7/16"x23 3/8"x2 1/16" (53x594x849.7)

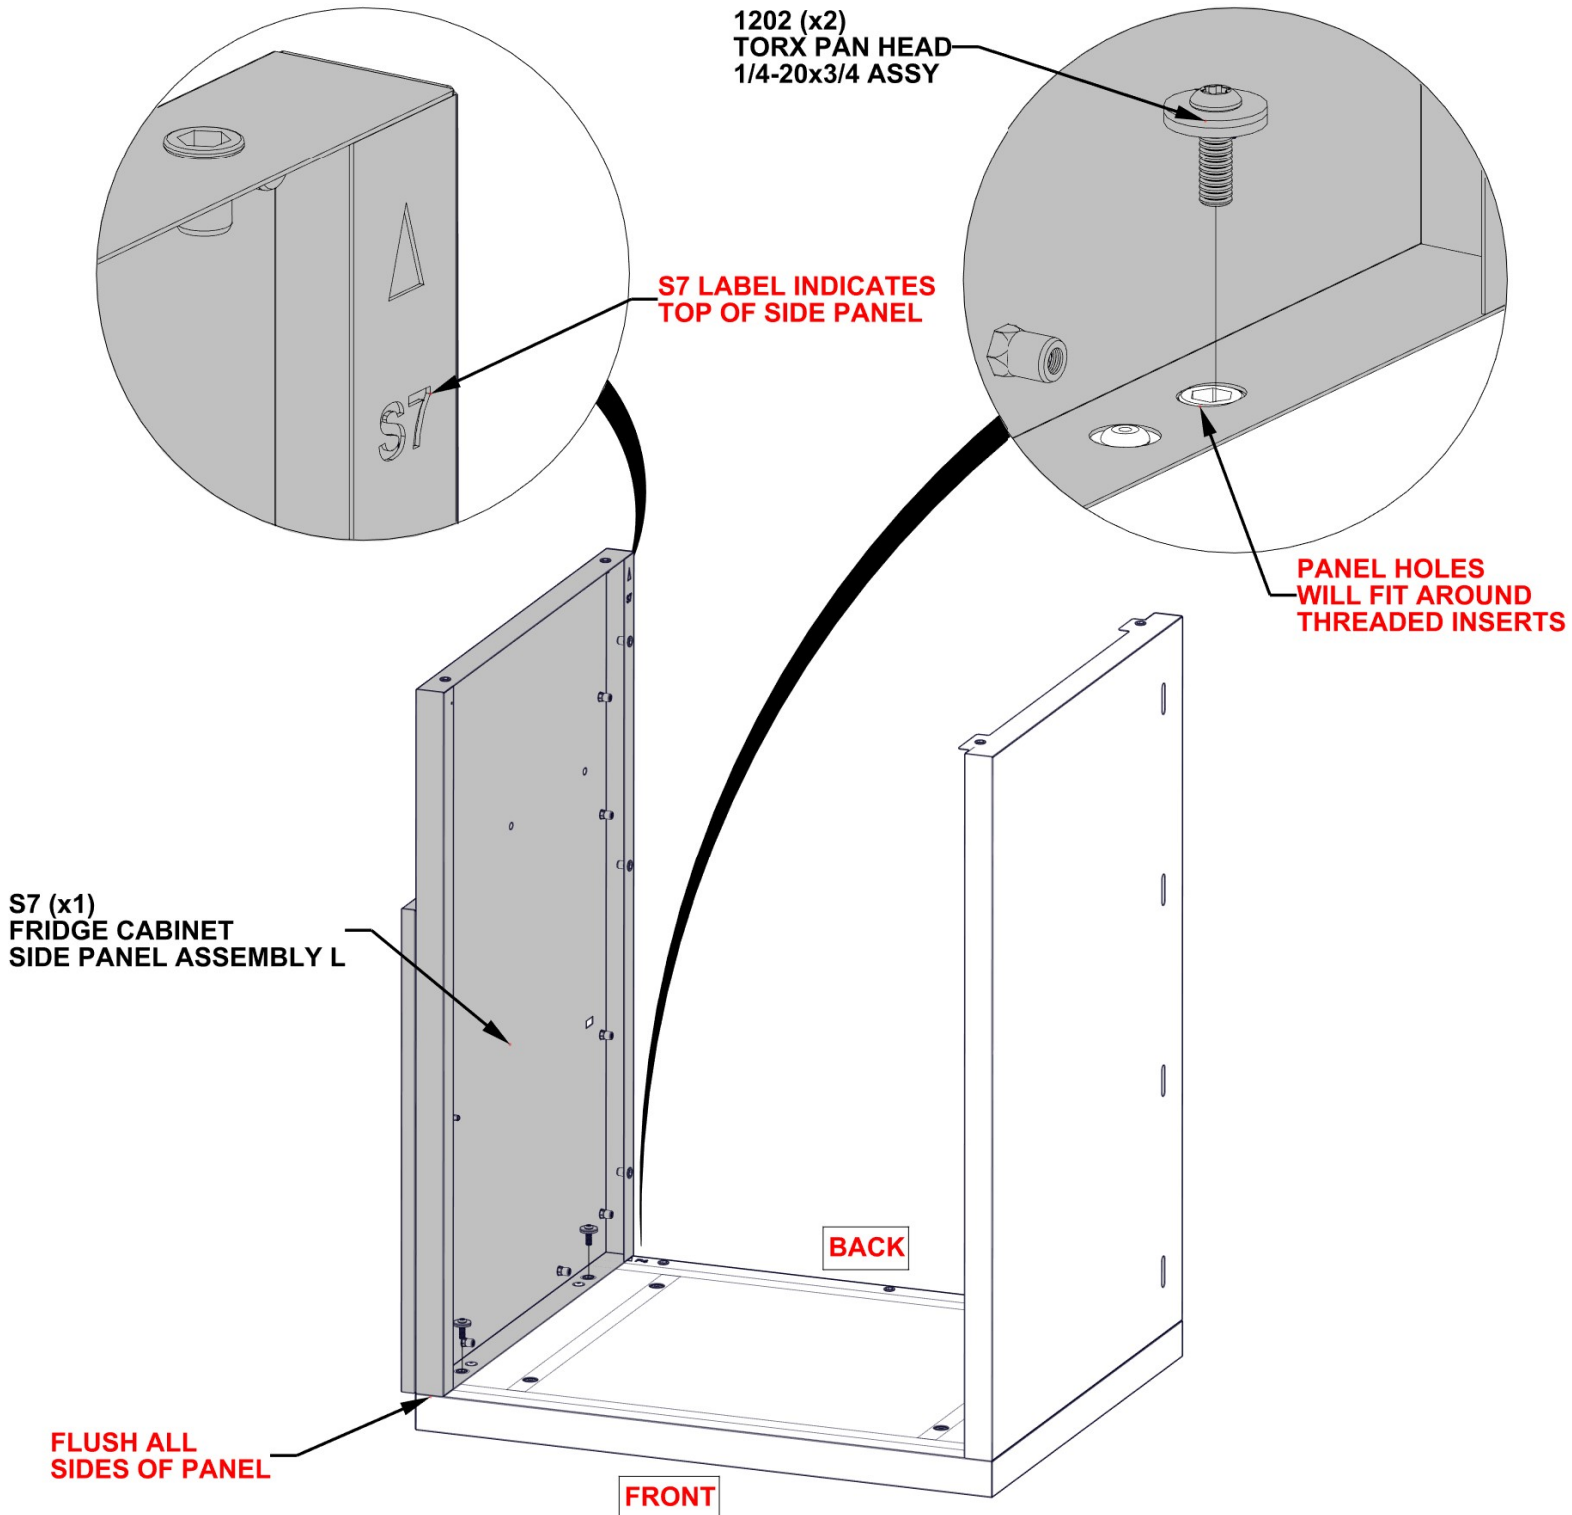


# STEP 53 - FRIDGE CABINET ASSEMBLY

Qty	PartNo	Description
9	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

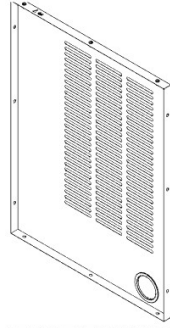

**G4 FRIDGE CABINET BACK PANEL ASSEMBLY - A4M03599**  
 (x1) 25 5/16"x33 3/8"x1 3/16" (30x847.2x643)

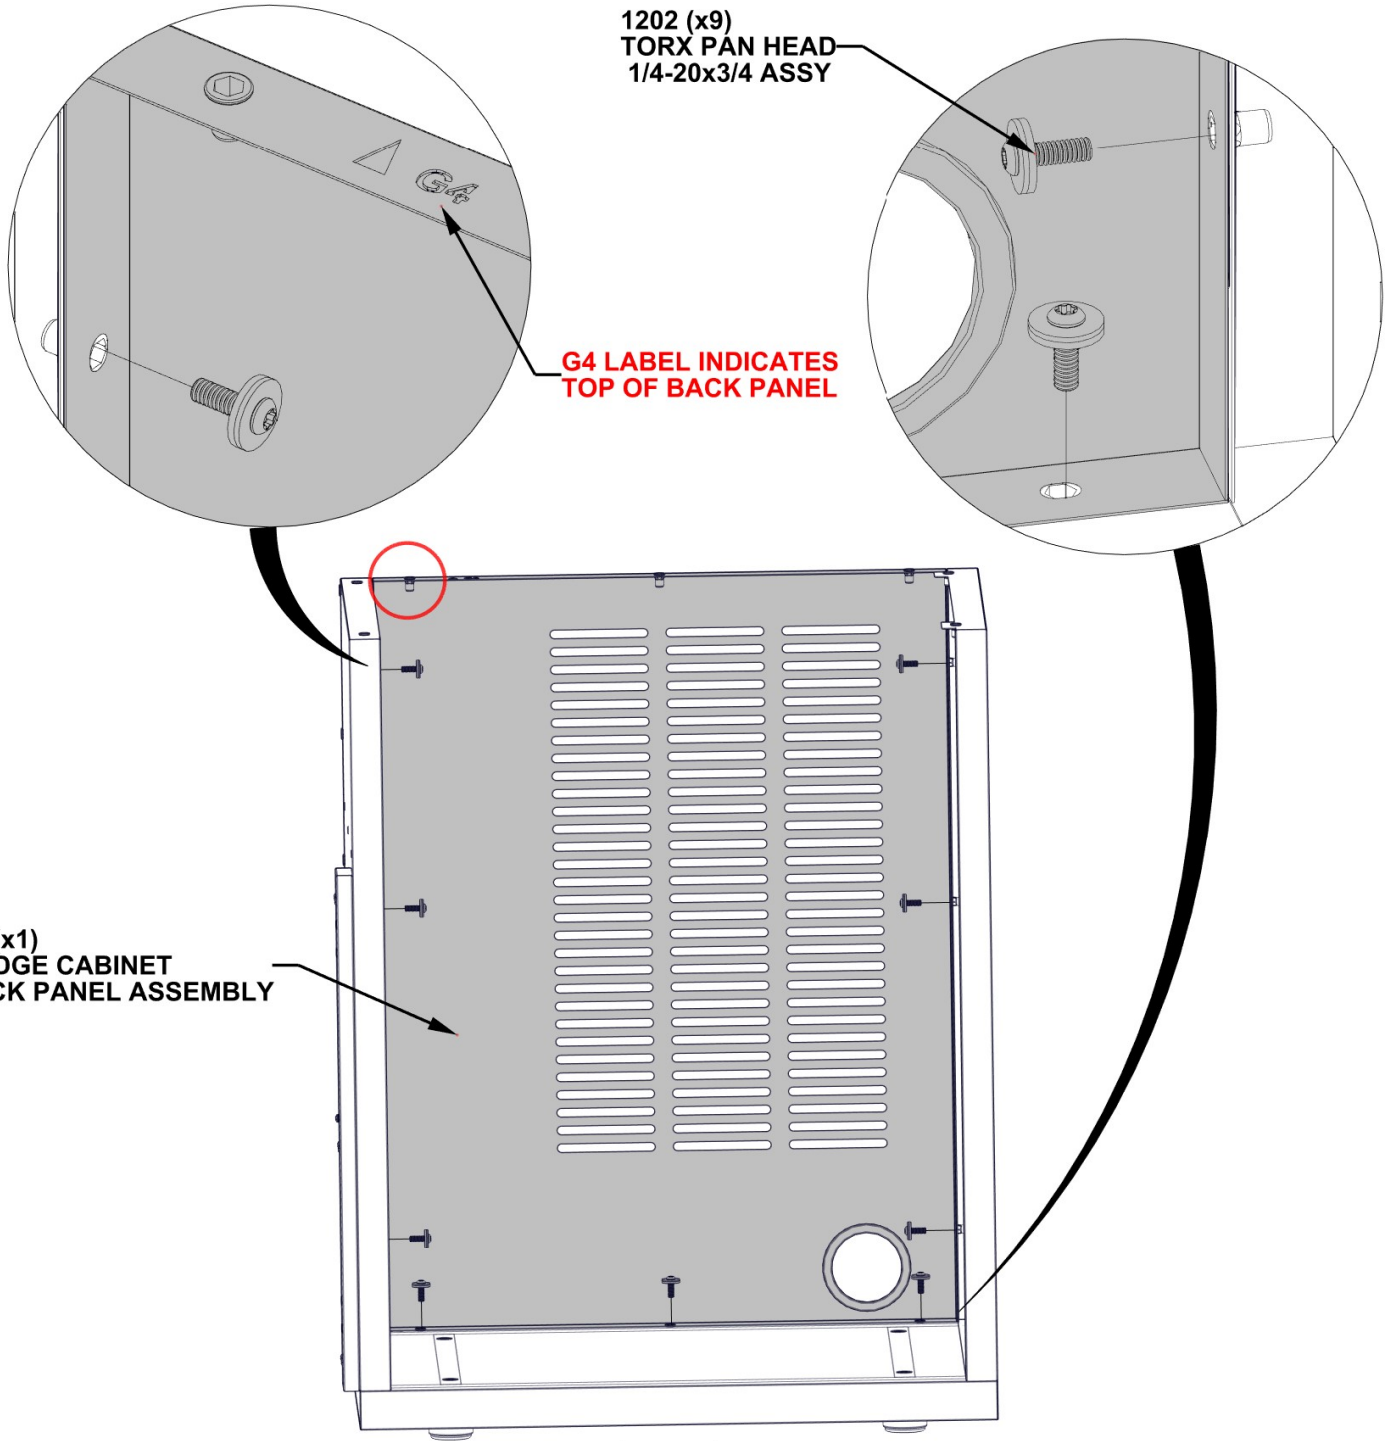

1202 (x9)  
 TORX PAN HEAD  
 1/4-20x3/4 ASSY


**G4 LABEL INDICATES  
 TOP OF BACK PANEL**

**G4 (x1)  
 FRIDGE CABINET  
 BACK PANEL ASSEMBLY**

**FRONT**


# STEP 54 - FRIDGE CABINET ASSEMBLY

Qty	PartNo	Description
7	H101103	TORX SOCKET SCREW 1/4-20

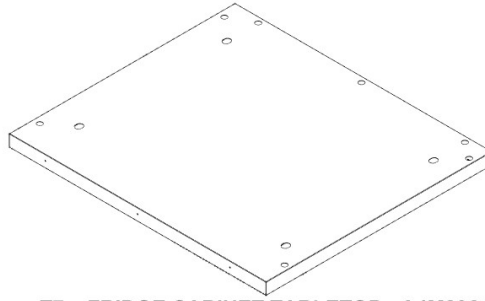


T7 FRIDGE CABINET TABLETOP - A4M03641  
(x1) 27 3/8"x24 1/8"x1 1/4" (32x612x696)

- FLUSH BACK AND SIDES OF PANEL ASSEMBLY.
- **SQUARE ALL SIDES OF CABINET BEFORE TIGHTENING HARDWARE.**

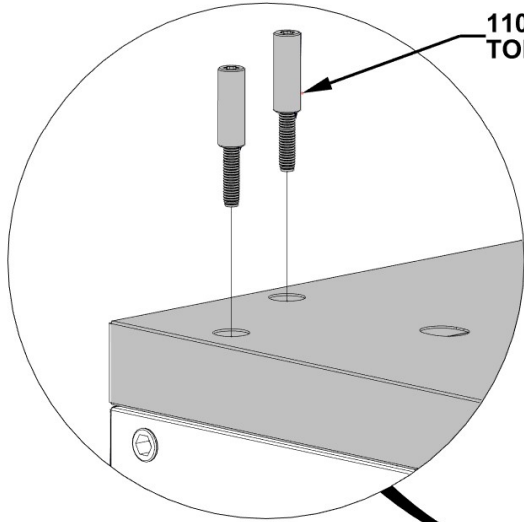


1103 (x7)  
TORX SOCKET SCREW 1/4-20

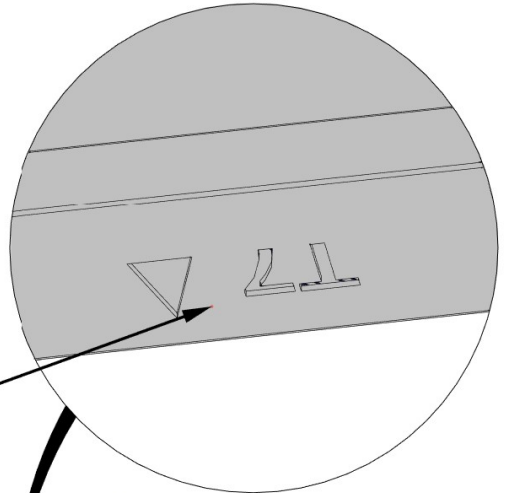


**T7 LABEL ON BOTTOM SIDE INDICATES BACK**

T7 (x1)  
FRIDGE CABINET TABLETOP

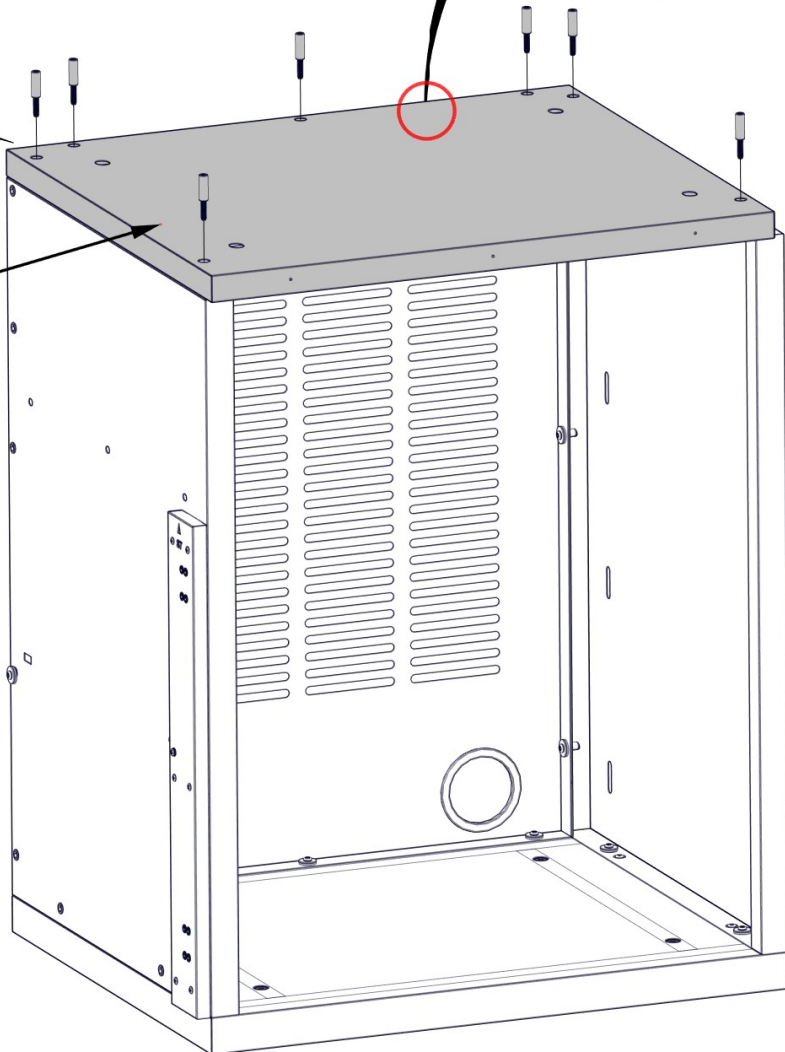


# STEP 55 - FRIDGE CABINET INSTALLATION

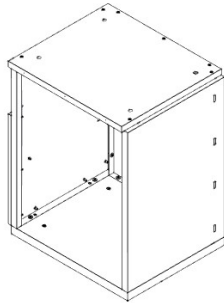

FRIDGE CABINET FROM  
STEPS 51 - 54


Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- POSITION FRIDGE CABINET ASSEMBLY UNDERNEATH LANCASTER GALLEY STRUCTURE.
- SIDE OF FRIDGE CABINET WILL SIT AGAINST THE INSIDE OF THE BACK RIGHT POST.
- BACKSIDE OF FRIDGE CABINET WILL SIT FLUSH WITH BACKSIDE OF POST.
- **BEFORE TIGHTENING HARDWARE, ADJUST CABINET FEET AS NEEDED UNTIL FRIDGE CABINET IS LEVEL.**

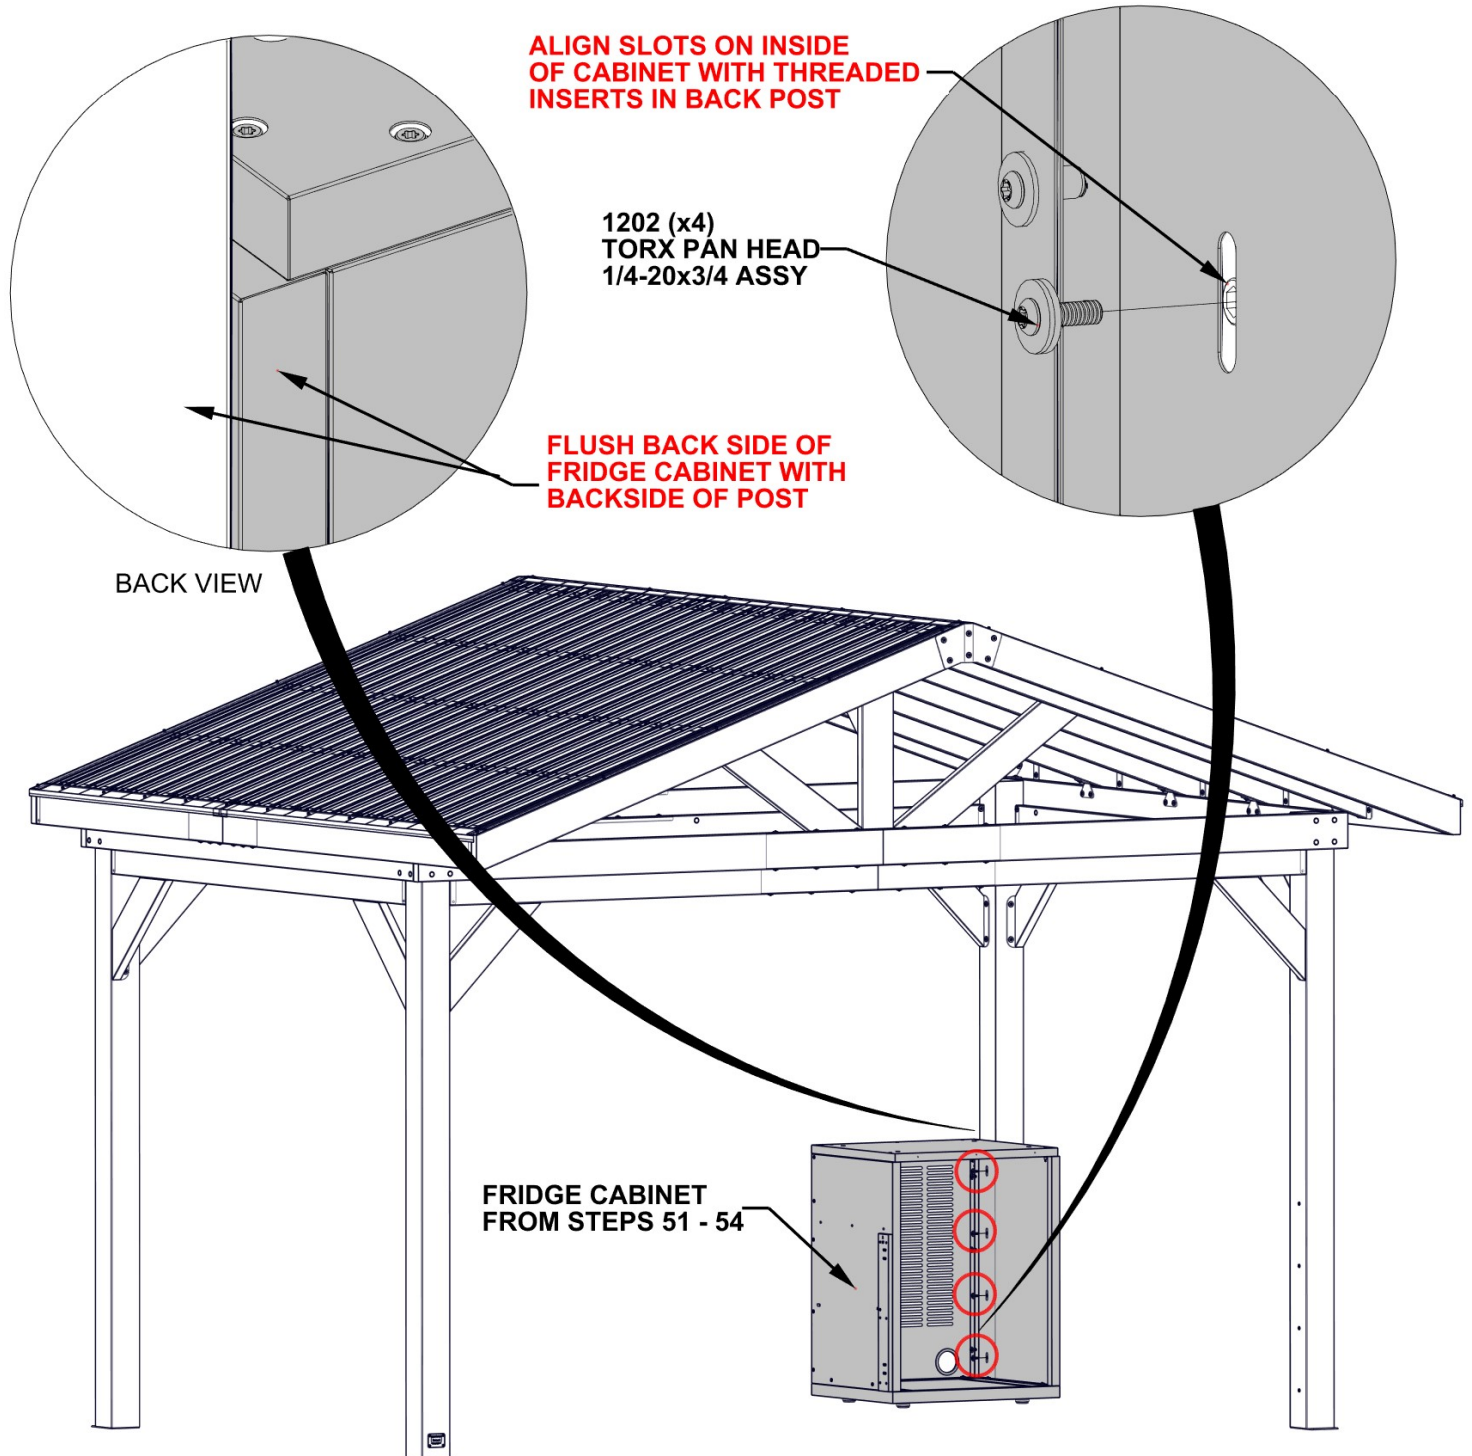


# STEP 56 - SINK CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

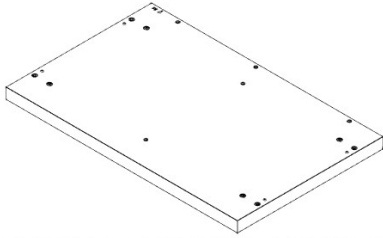


**F3 SINK CABINET FLOOR PANEL ASSEMBLY - A4M03560**  
(x1) 37 3/16"x23 3/8"x2 5/8" (66x594x944)

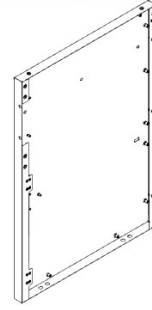


**S3 SINK CABINET SIDE PANEL ASSEMBLY L - A4M03562**  
(x1) 33 3/8"x23 3/8"x1 3/8" (35.00x594.00x848.20)

- POSITION FLOOR PANEL IN THE PROXIMITY OF WHERE YOUR KITCHEN WILL BE.
- EACH FLOOR PANEL HAS FACTORY INSTALLED ADJUSTABLE FEET. USE PROVIDED HEX DRIVER TO ADJUST EACH FOOT UNTIL PANEL IS LEVEL.

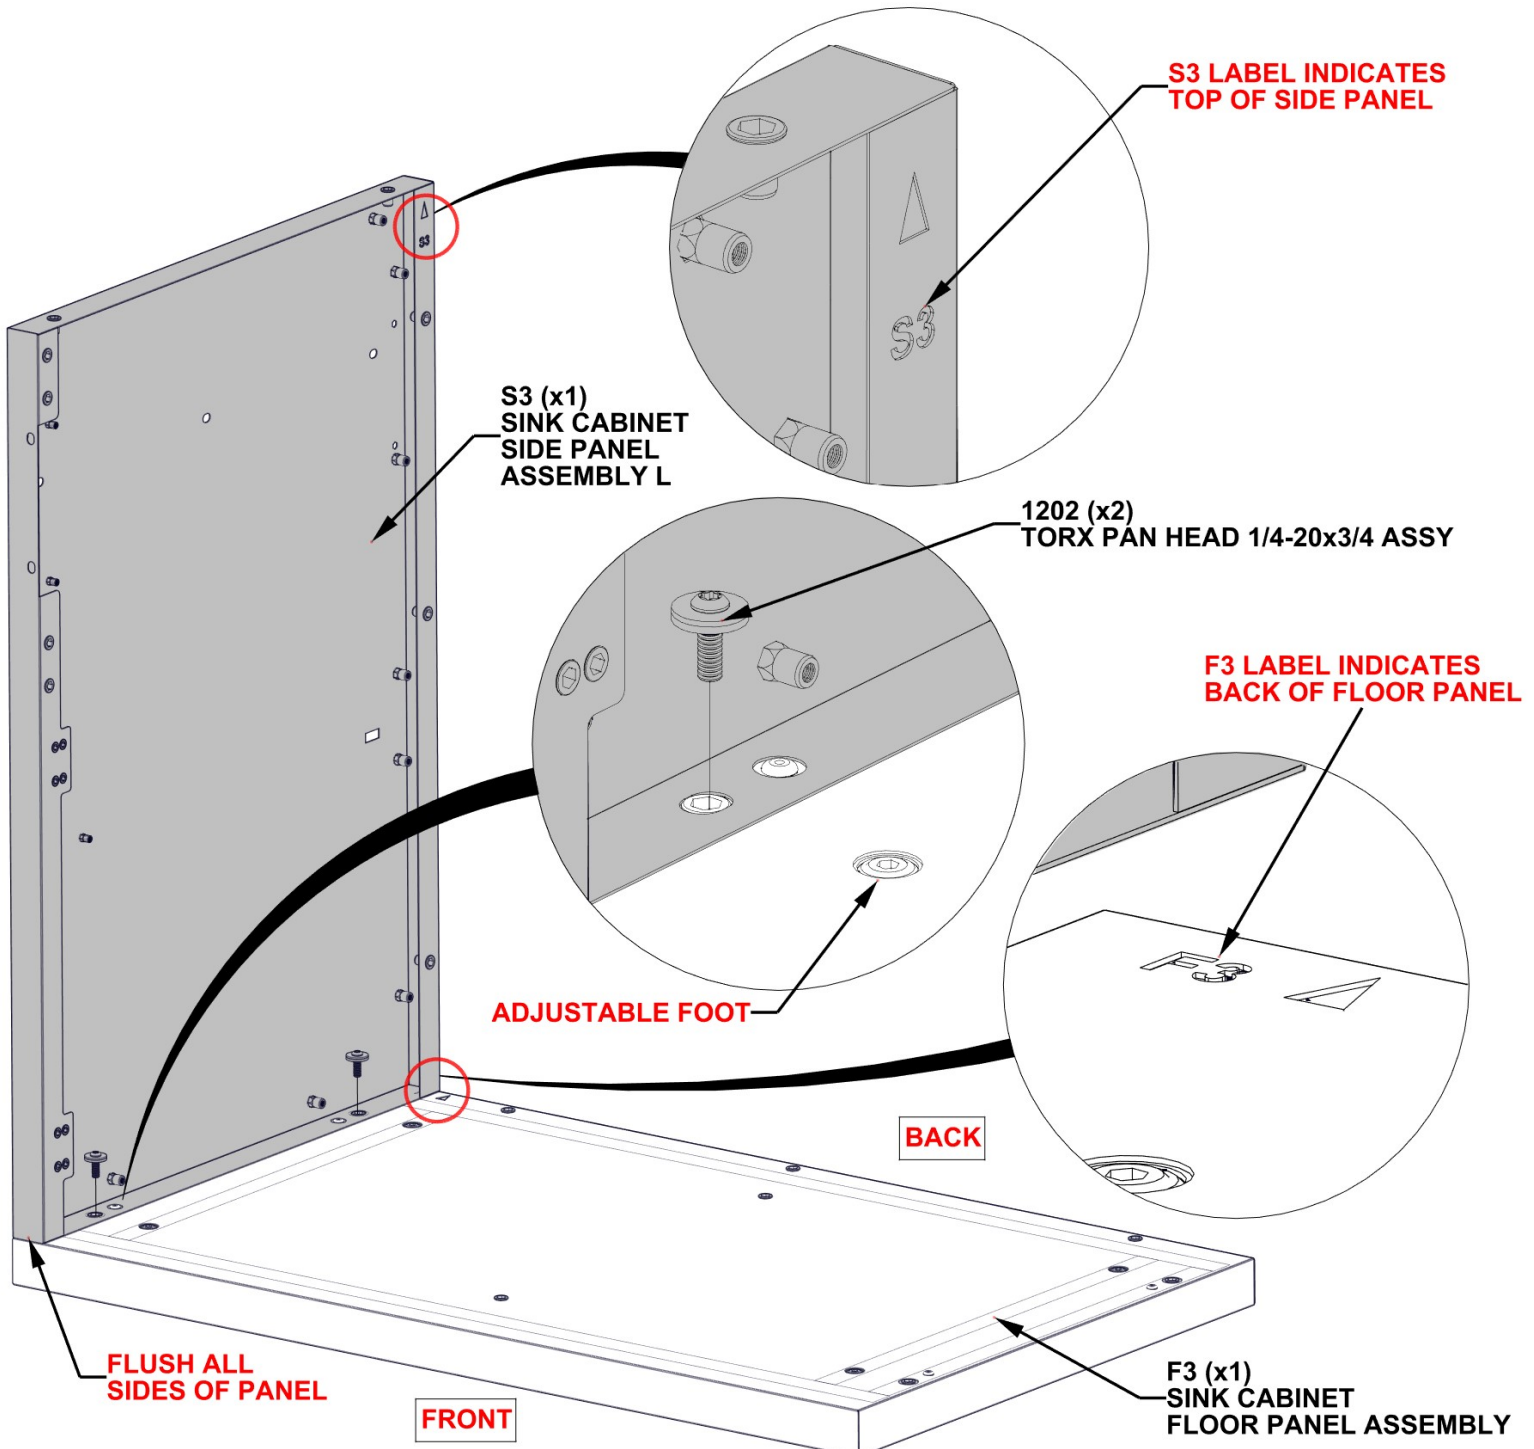


# STEP 57 - SINK CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

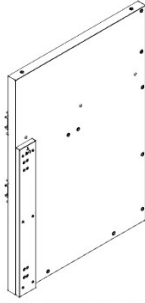


**S4 SINK CABINET SIDE PANEL ASSEMBLY R - A4M03563**  
 (x1) 33 3/8"x23 3/8"x2 5/8" (67x594x848.20)

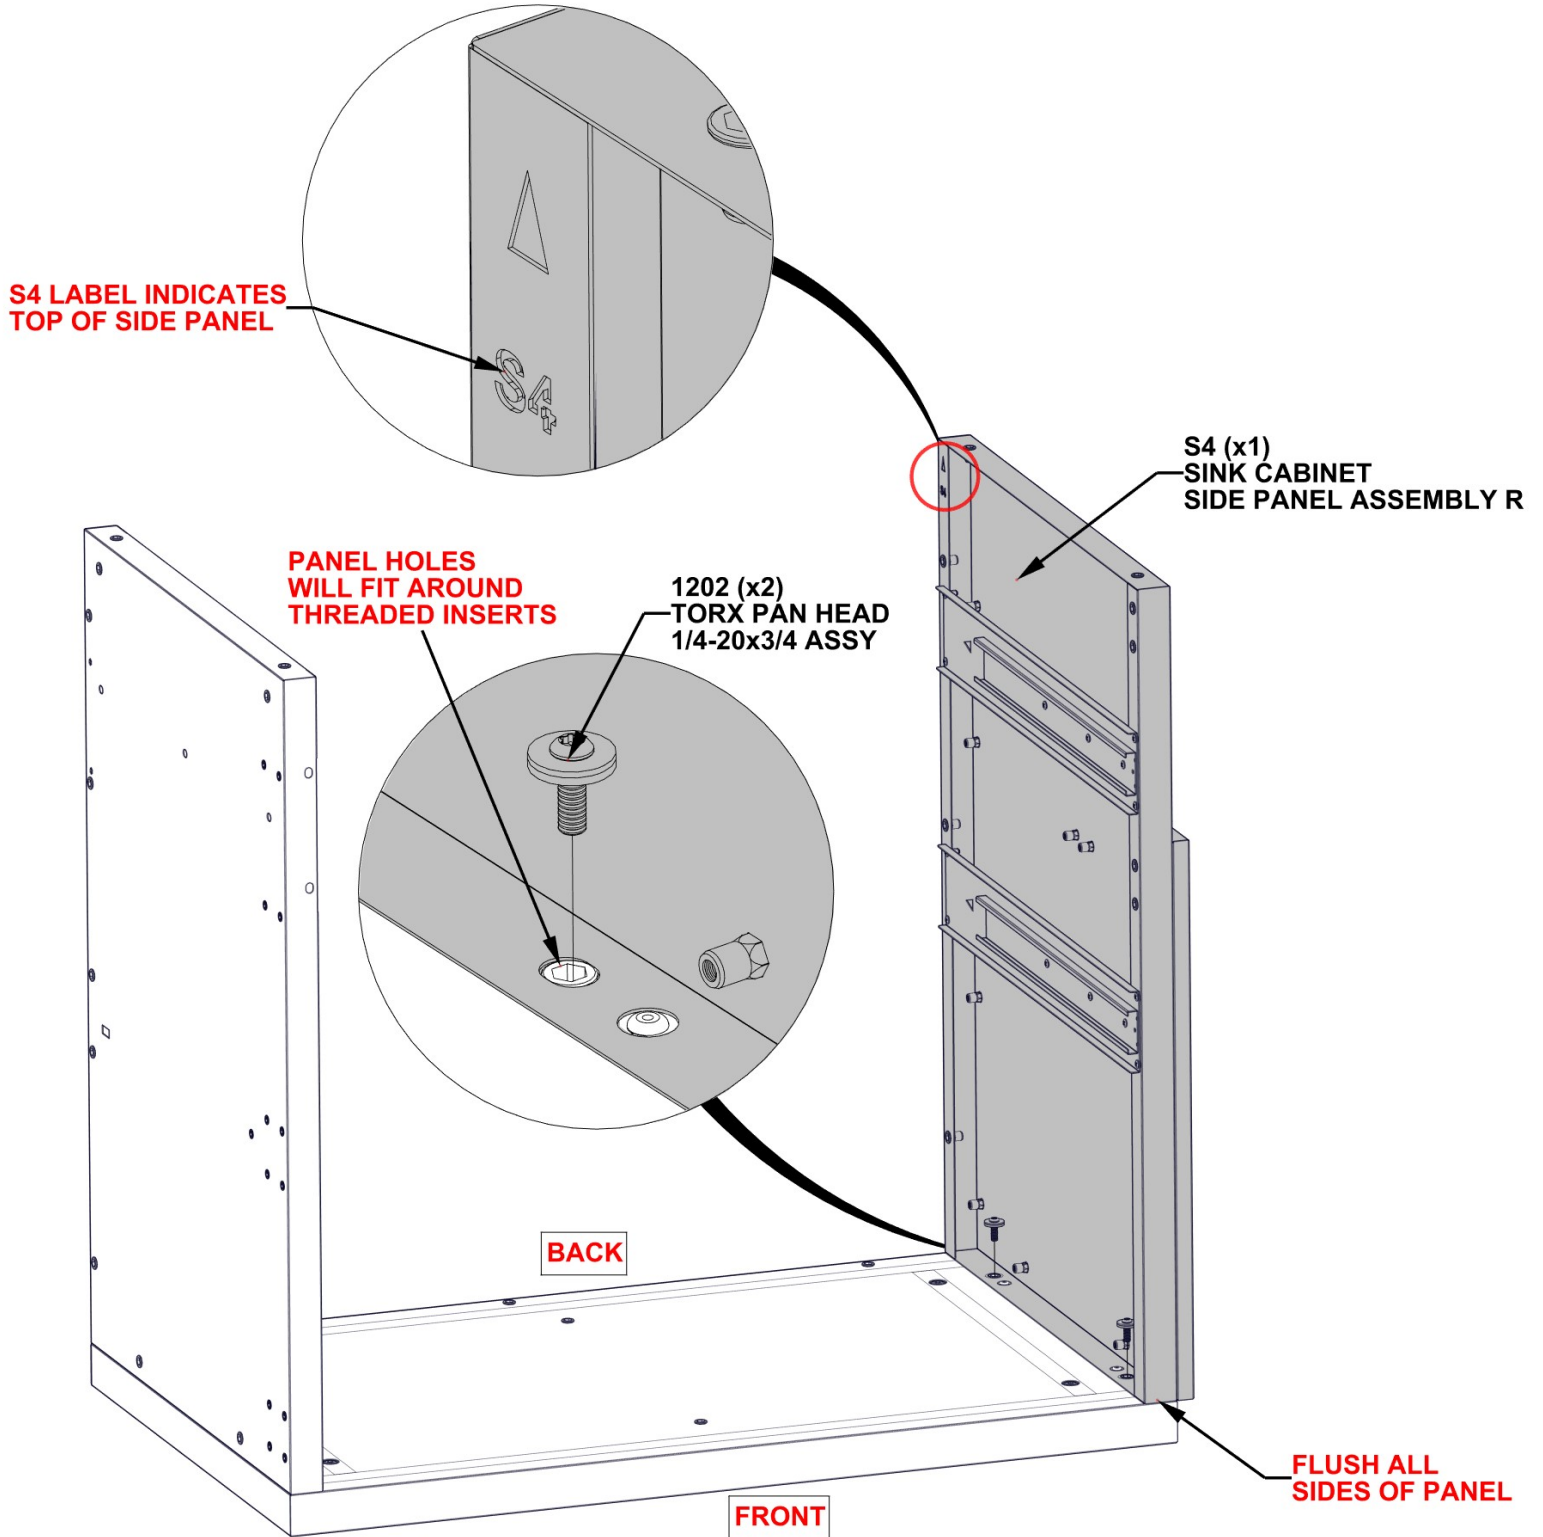



# STEP 58 - SINK CABINET ASSEMBLY

Qty	PartNo	Description
9	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

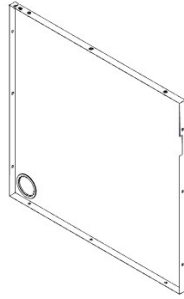


**G3 SINK CABINET BACK PANEL ASSEMBLY - A4M03564**  
(x1) 34 5/16"x33 3/8"x1 3/16" (30x847.2x872)

**G3 LABEL INDICATES  
TOP OF BACK PANEL**

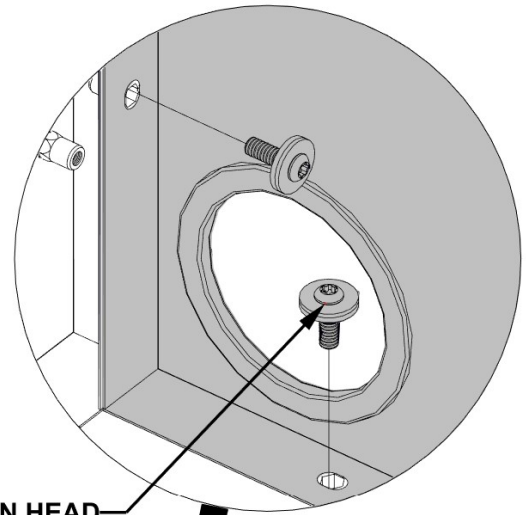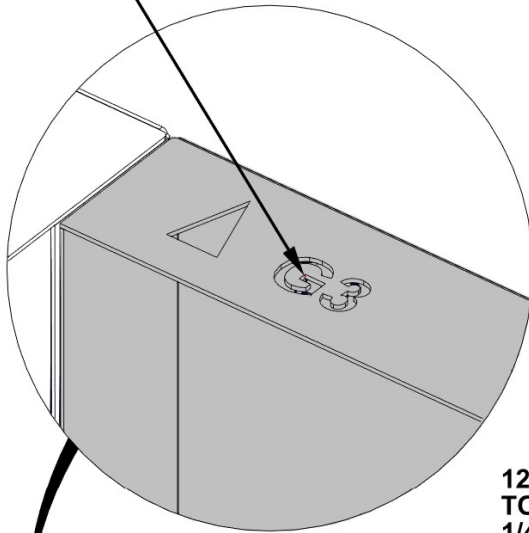

**1202 (x9)  
TORX PAN HEAD  
1/4-20x3/4 ASSY**

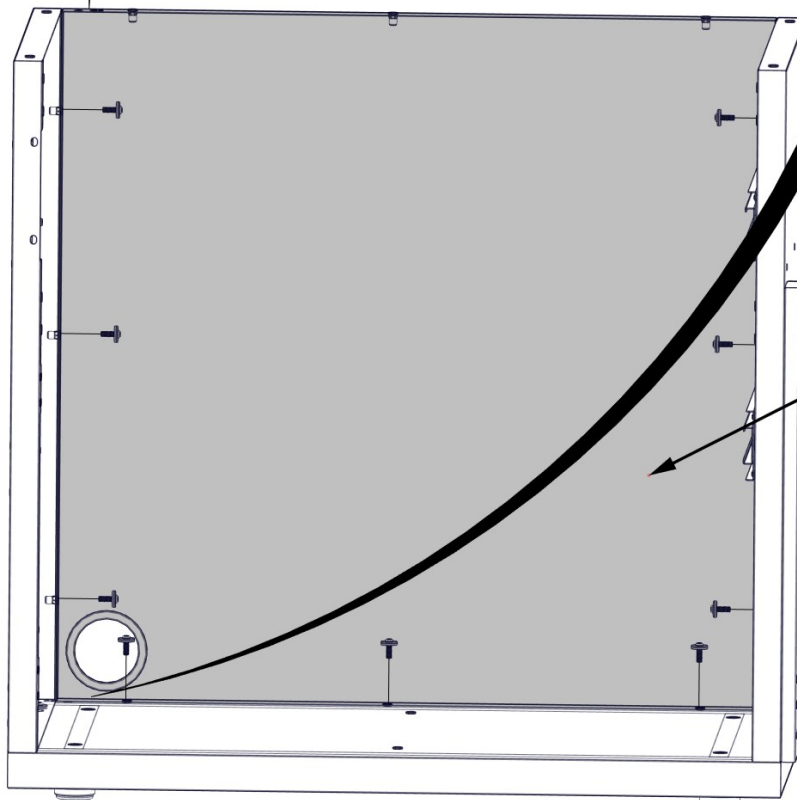


**G3 (x1)  
SINK CABINET BACK  
PANEL ASSEMBLY**

**FRONT**


# STEP 59 - SINK CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

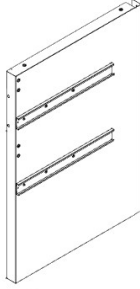


**S5 SINK CABINET SIDE PANEL ASSEMBLY M - A4M03567**  
 (x1) 33 3/8"x23 3/8"x2 3/16" (56.2x593x847)

1202 (x2)  
 TORX PAN HEAD  
 1/4-20x3/4 ASSY

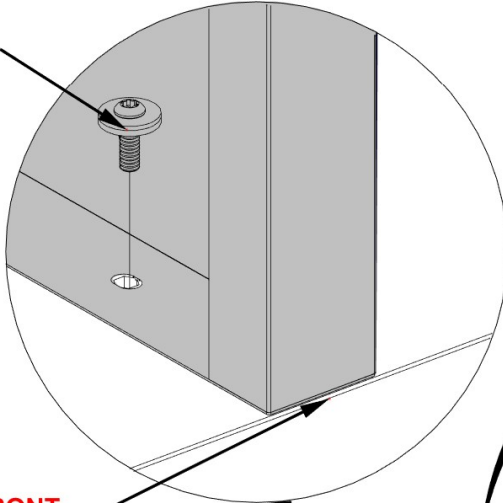


**FLUSH FRONT SURFACE**

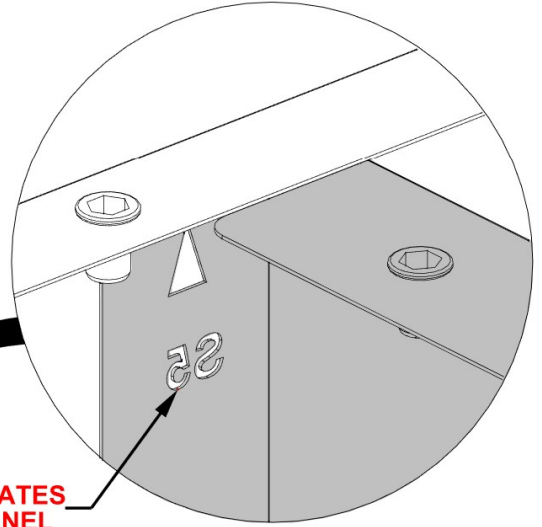

**S5 LABEL INDICATES TOP OF SIDE PANEL**


S5 (x1)  
 SINK CABINET SIDE  
 PANEL ASSEMBLY M

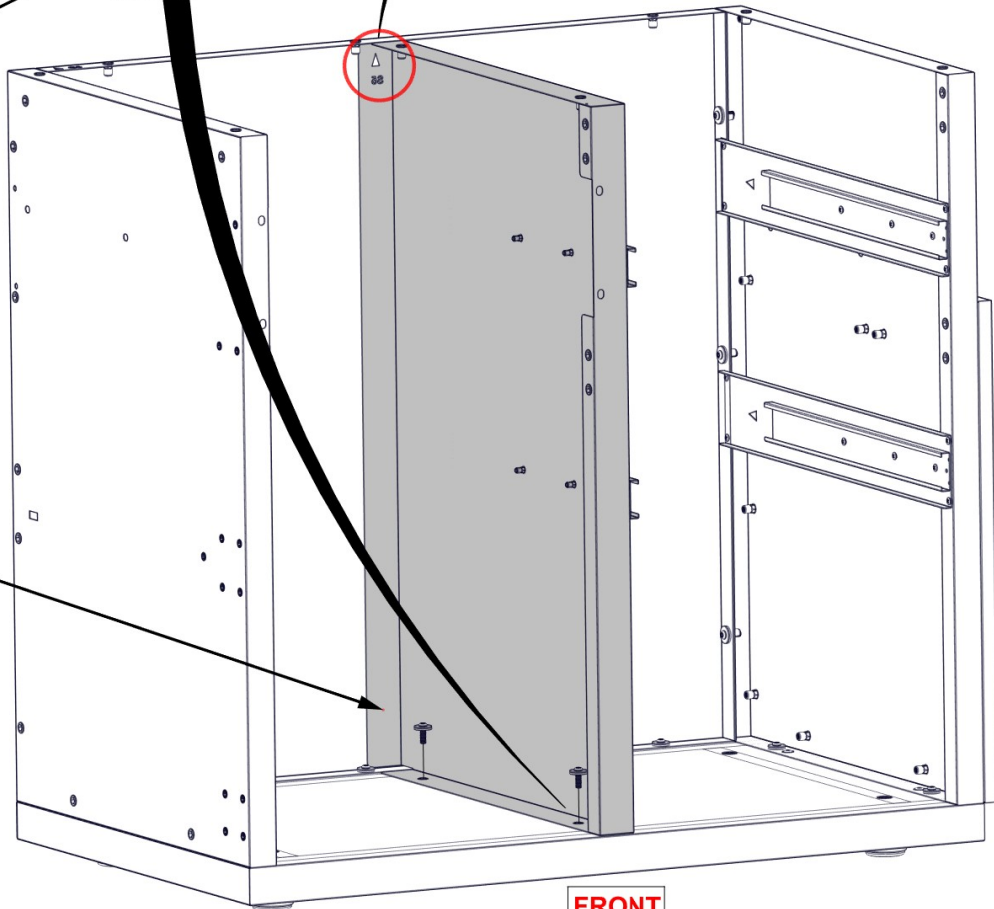

**FRONT**

# STEP 60 - SINK CABINET ASSEMBLY


Qty	PartNo	Description
16	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

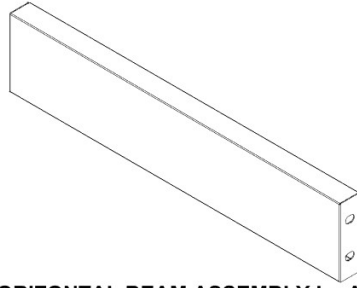


H4 HORIZONTAL BEAM ASSEMBLY L - A4M03575  
(x4) 16 1/4"x3 3/8"x1" (25x85x413)

**- HARDWARE ATTACHES ON INSIDE OF CABINET**


1202 (x16)  
TORX PAN HEAD  
1/4-20x3/4 ASSY

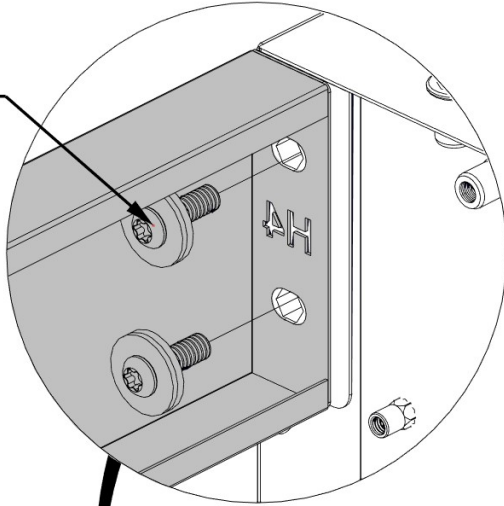

**THREADED INSERTS  
FACE DOWN**

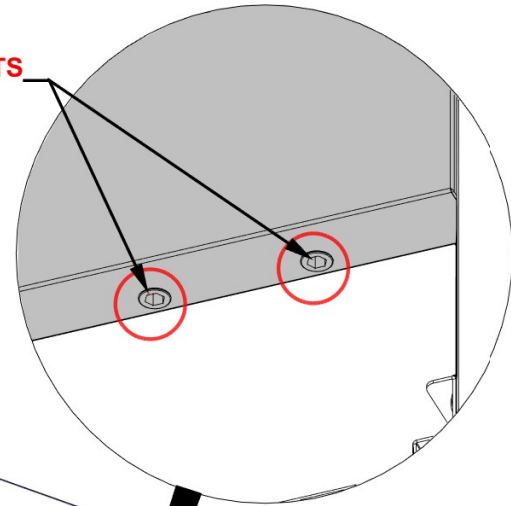


H4 (x4)  
HORIZONTAL BEAM  
ASSEMBLY L

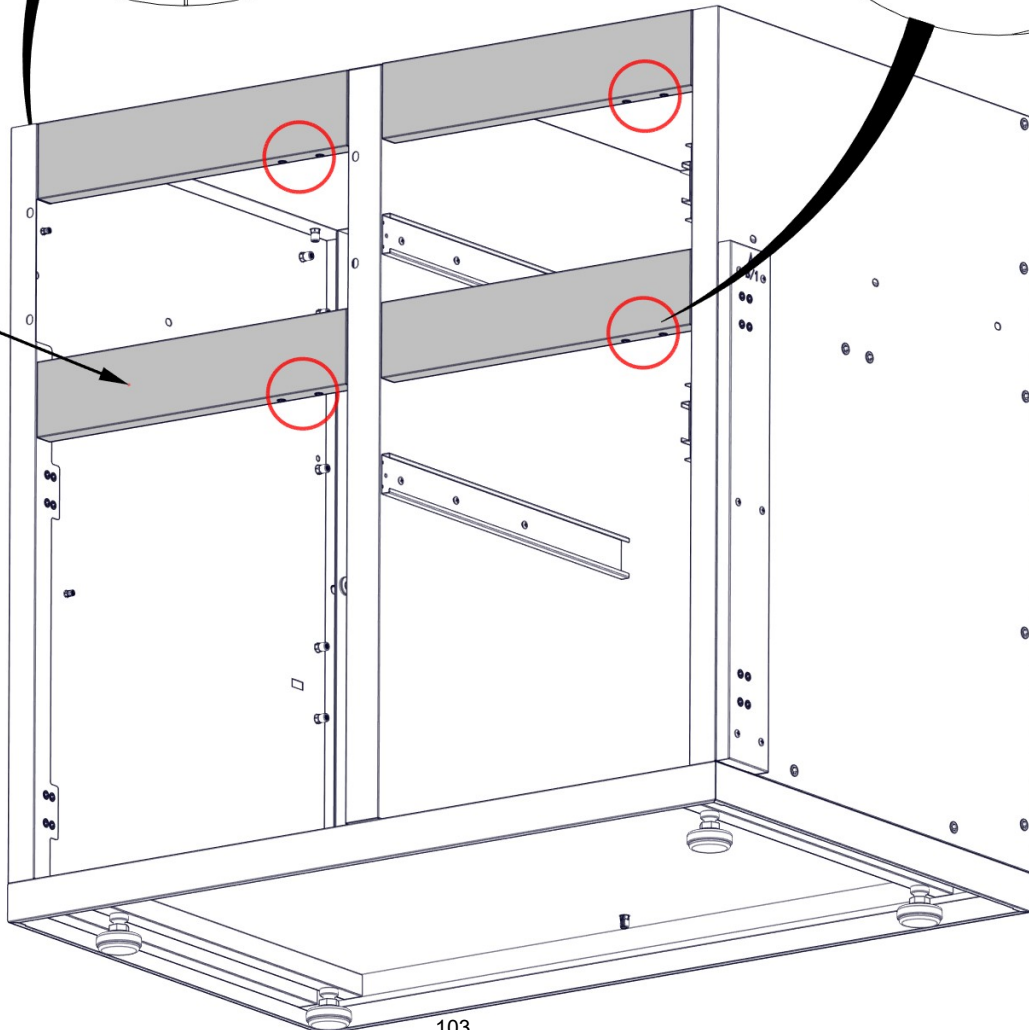


# STEP 61 - SINK CABINET ASSEMBLY

Qty	PartNo	Description
2	H101289	PAN HEAD SCREW 8-32x1/2" SS

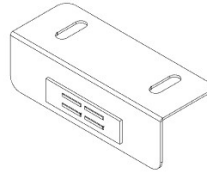

**A2 MAGNET BRACKET - A4M03026**  
**(x1) 1"x1 1/4"x3 1/8" (25x31x80)**

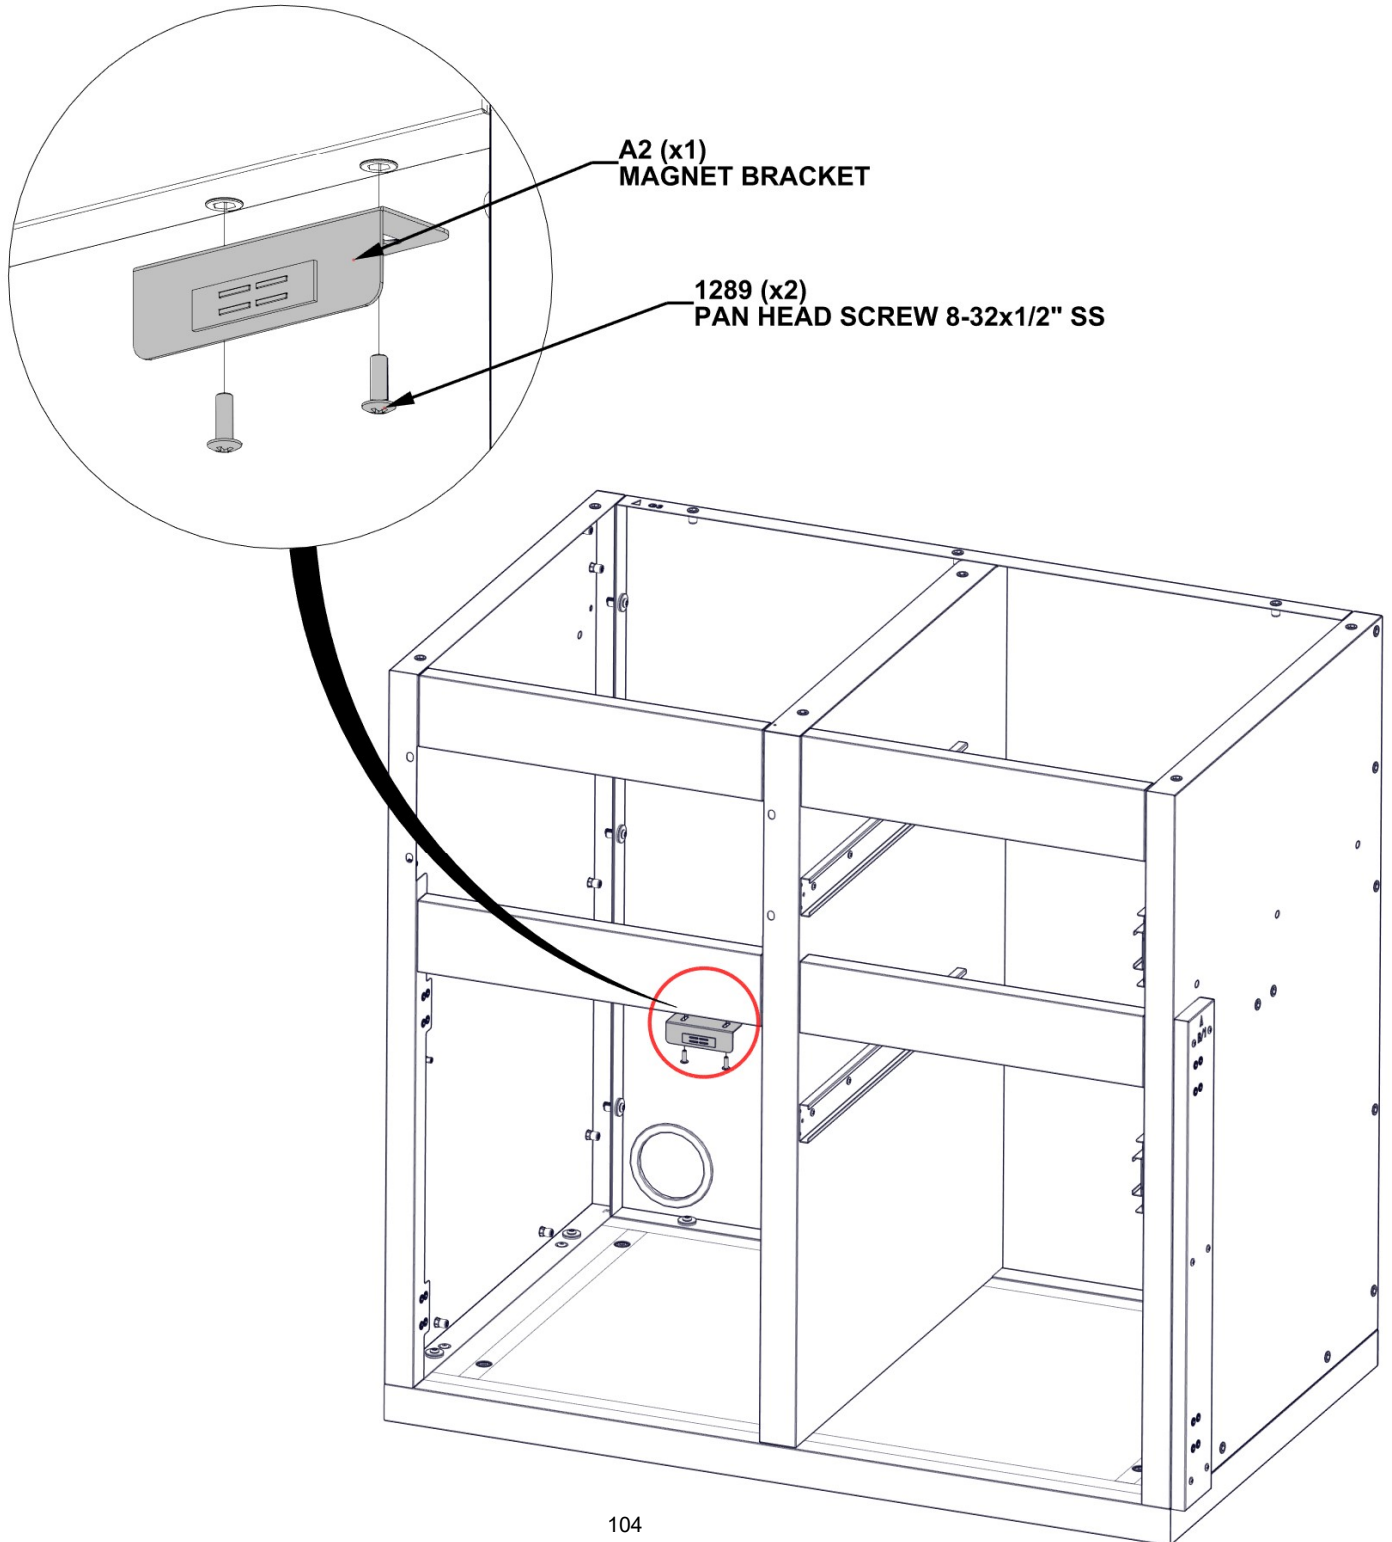

**A2 (x1)**  
**MAGNET BRACKET**


**1289 (x2)**  
**PAN HEAD SCREW 8-32x1/2" SS**

# STEP 62 - SINK CABINET ASSEMBLY

Qty	PartNo	Description
6	H101287	PAN HEAD SCREW 8-32x1" SS




H5 PIZZA OVEN CABINET HINGE CHANNEL ASSEMBLY - A4M03558  
(x1) 26 5/8"x2 15/16"x11/16" (18x74.80x676)

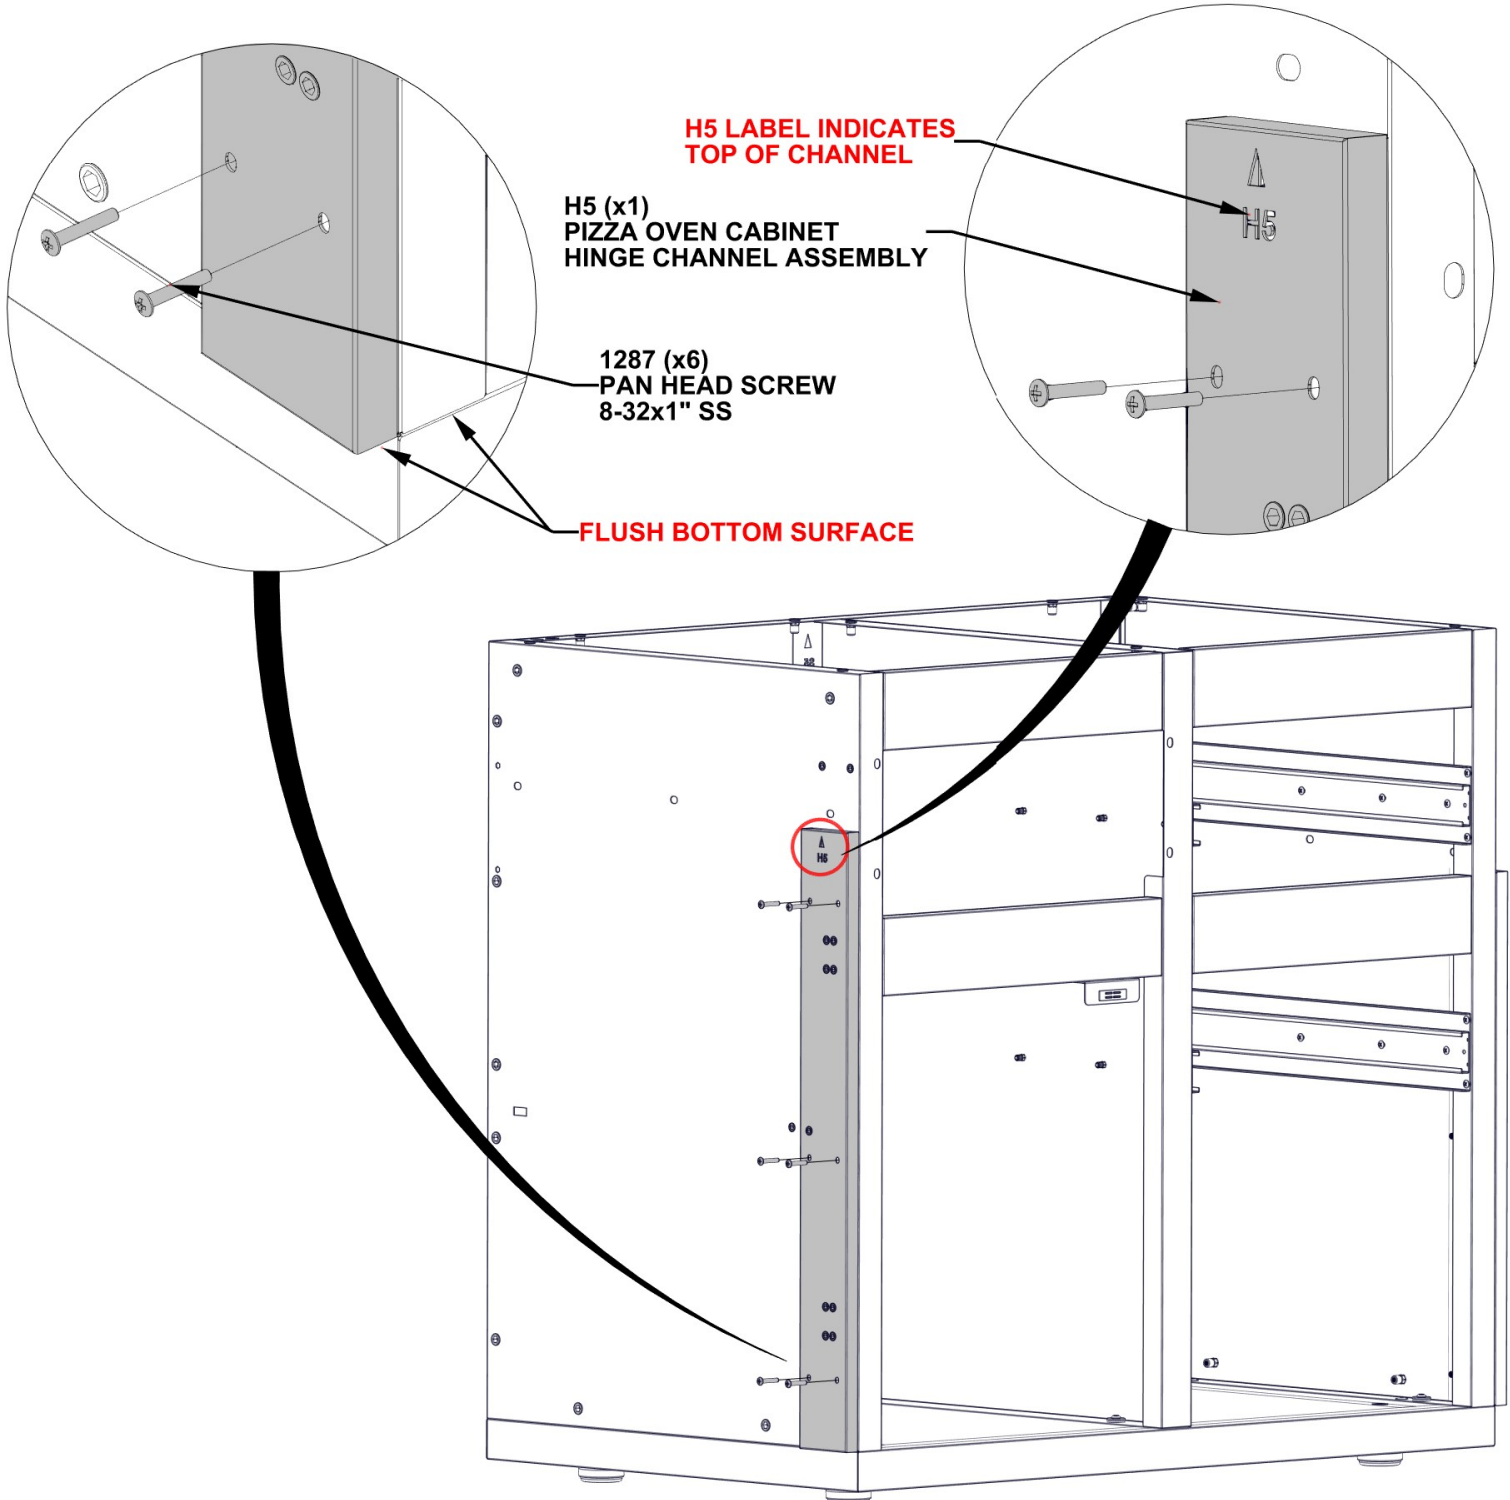


# STEP 63 - SINK CABINET ASSEMBLY

Qty	PartNo	Description
9	H101103	TORX SOCKET SCREW 1/4-20

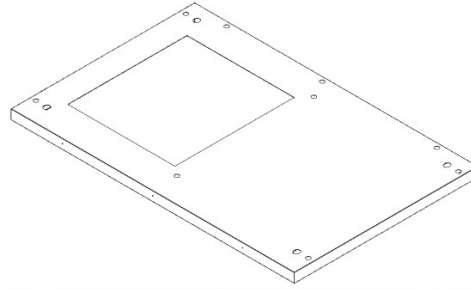


**T4 SINK CABINET TABLETOP FRAME - A4M03566**  
(x1) 37 3/16"x24 1/8"x1 1/4" (32x612x944)

- FLUSH BACK AND SIDE OF PANEL ASSEMBLY.
- **SQUARE ALL SIDES OF CABINET BEFORE TIGHTENING HARDWARE.**

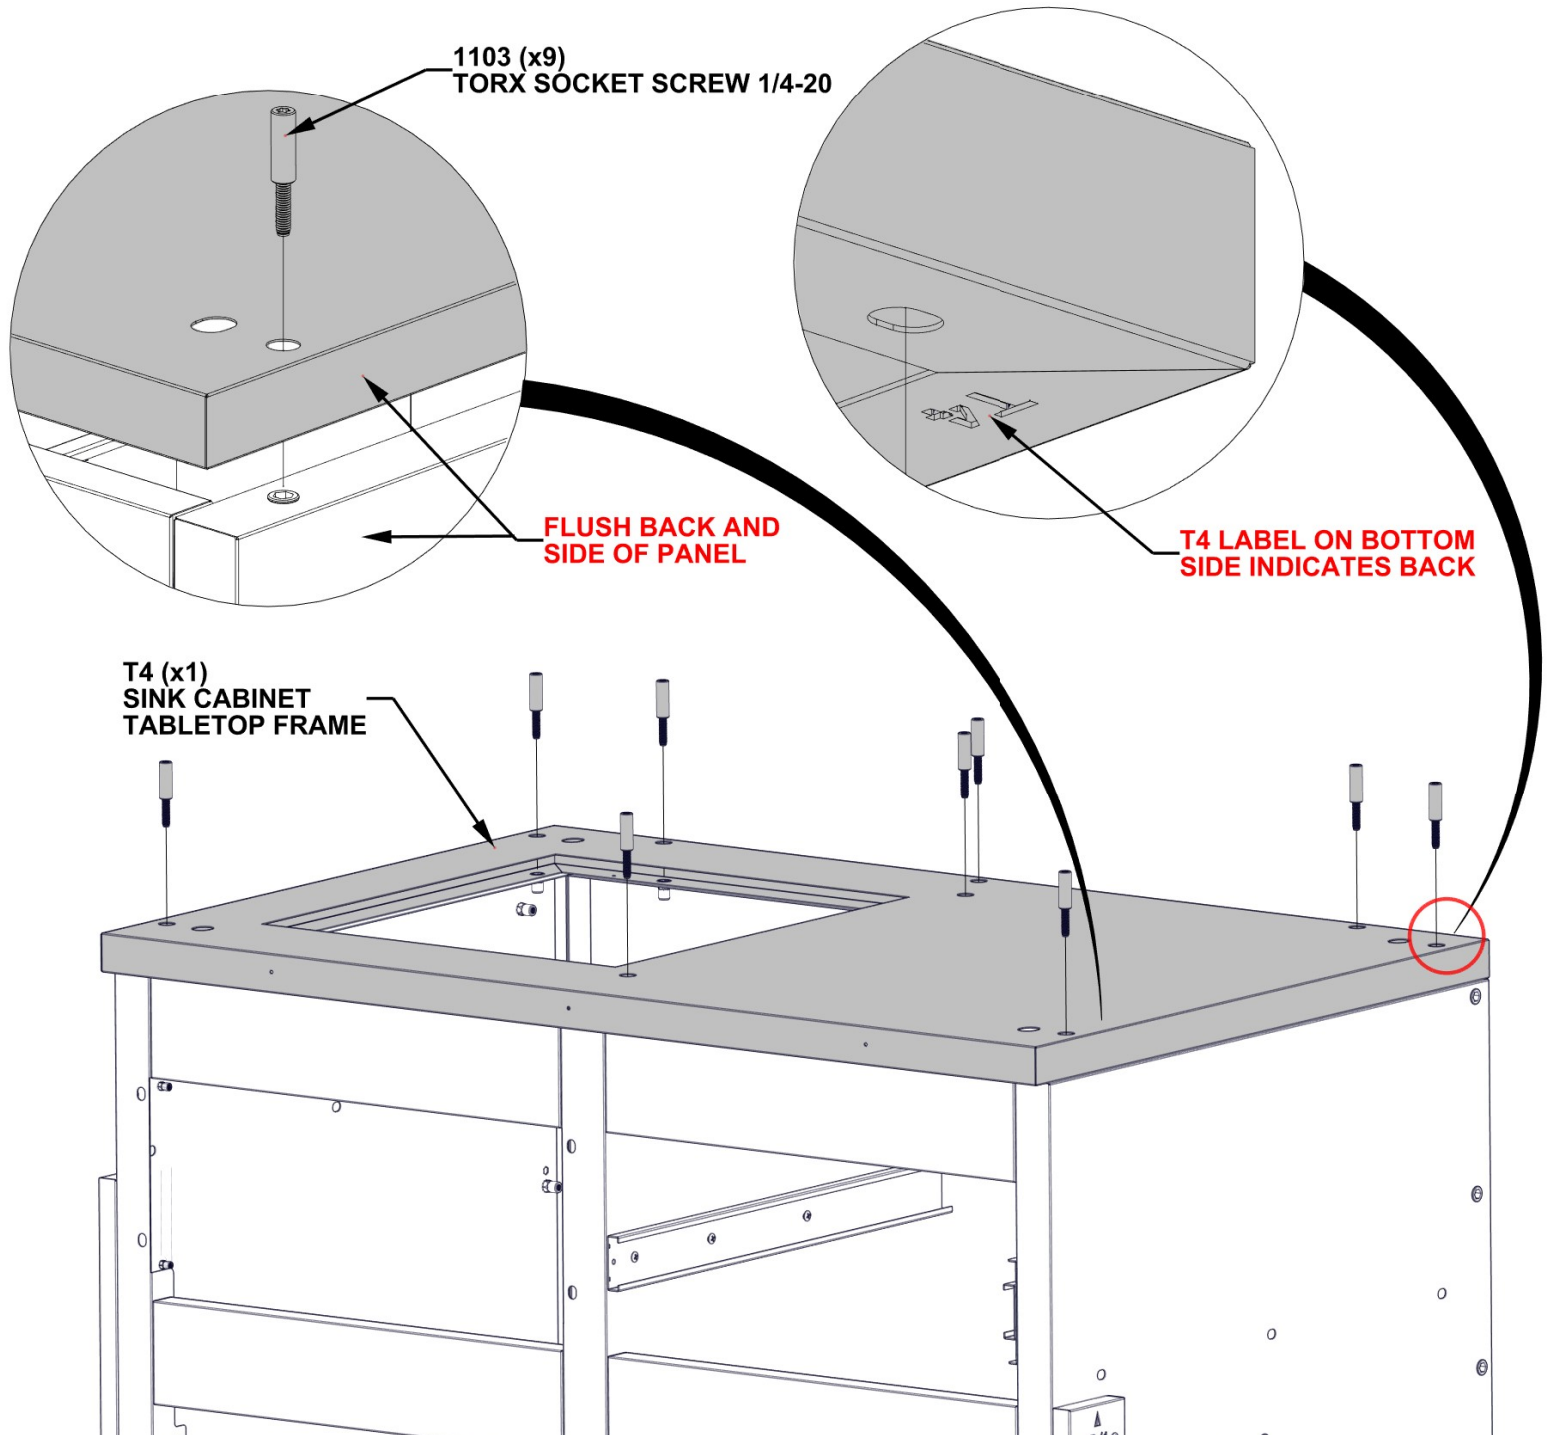


# STEP 64 - SINK CABINET INSTALLATION

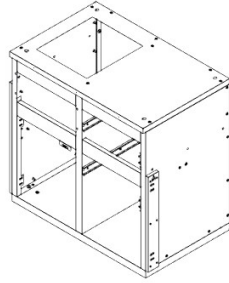


SINK CABINET FROM  
STEPS 56 - 63

- POSITION SINK CABINET ASSEMBLY UNDERNEATH LANCASTER GALLEY STRUCTURE.
- DISTANCE BETWEEN FRIDGE CABINET WILL BE DETERMINED IN NEXT STEP.

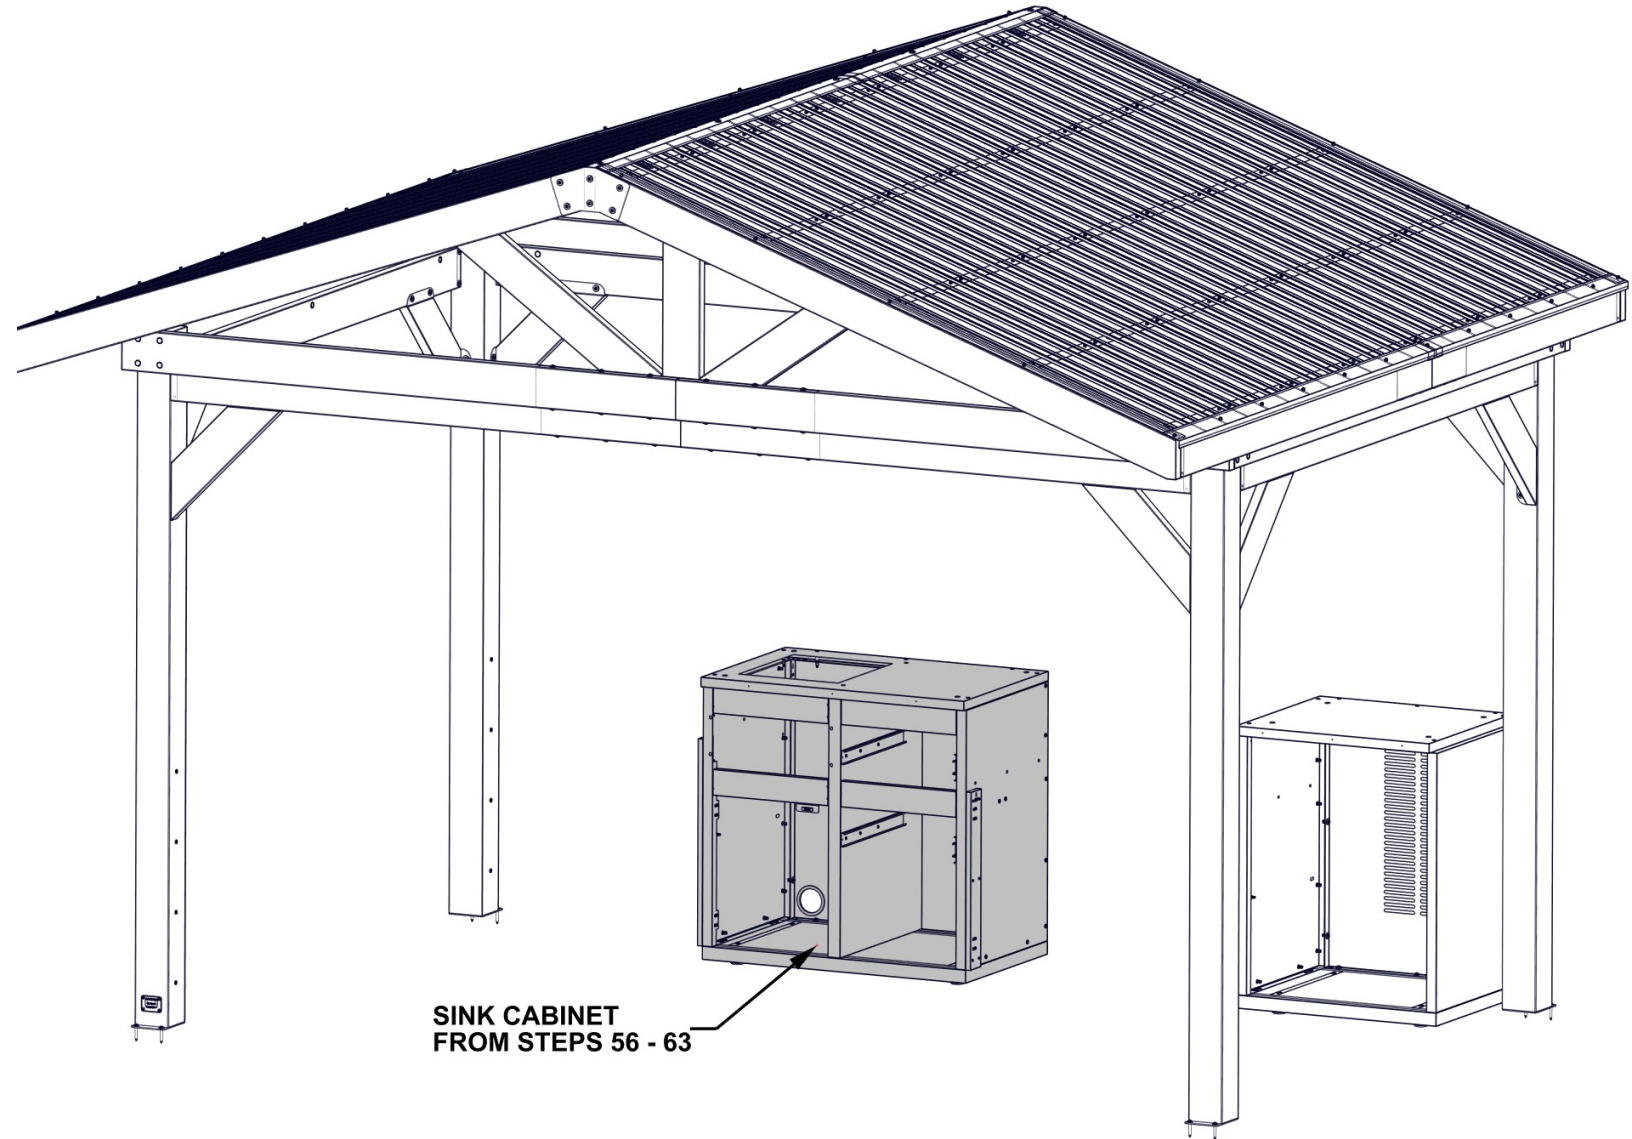


SINK CABINET  
FROM STEPS 56 - 63

# STEP 65 - GRILL CABINET ASSEMBLY

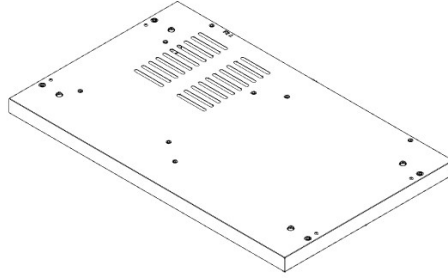


F2 GRILL CABINET FLOOR PANEL ASSEMBLY - A4M03048  
(x1) 2 5/8"x23 3/8"x38 1/4" (66x594x972)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- **LOOKING AT THE FRONT SIDE OF THE CABINETS, SLIDE FLOOR PANEL IN BETWEEN SINK AND FRIDGE CABINETS.**

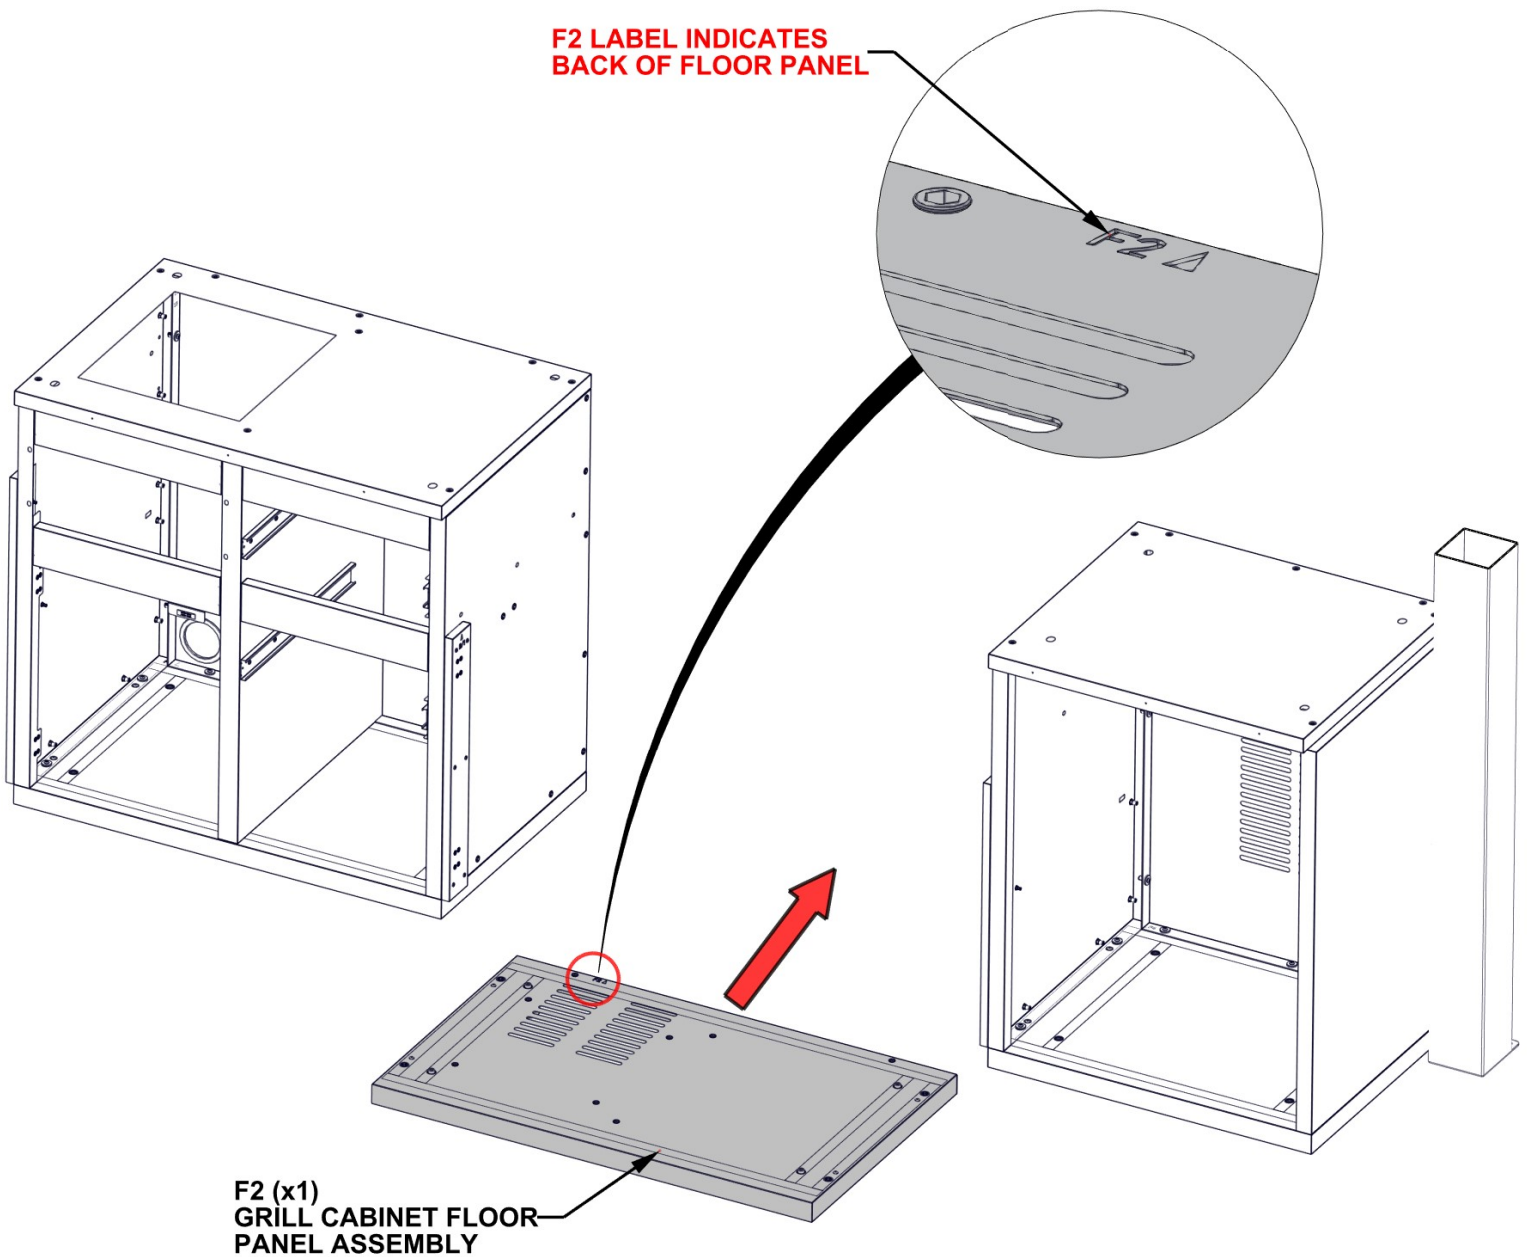

# STEP 66 - GRILL CABINET ASSEMBLY

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- POSITION FLOOR PANEL AS SHOWN BELOW.
- EACH FLOOR PANEL HAS FACTORY INSTALLED ADJUSTABLE FEET. USE PROVIDED HEX DRIVER TO ADJUST EACH FOOT UNTIL PANEL IS LEVEL.
- ADJUST LEFT AND RIGHT CORNER CABINET TO ELIMINATE ANY GAPS BETWEEN FLOOR PANEL AND CABINETS.

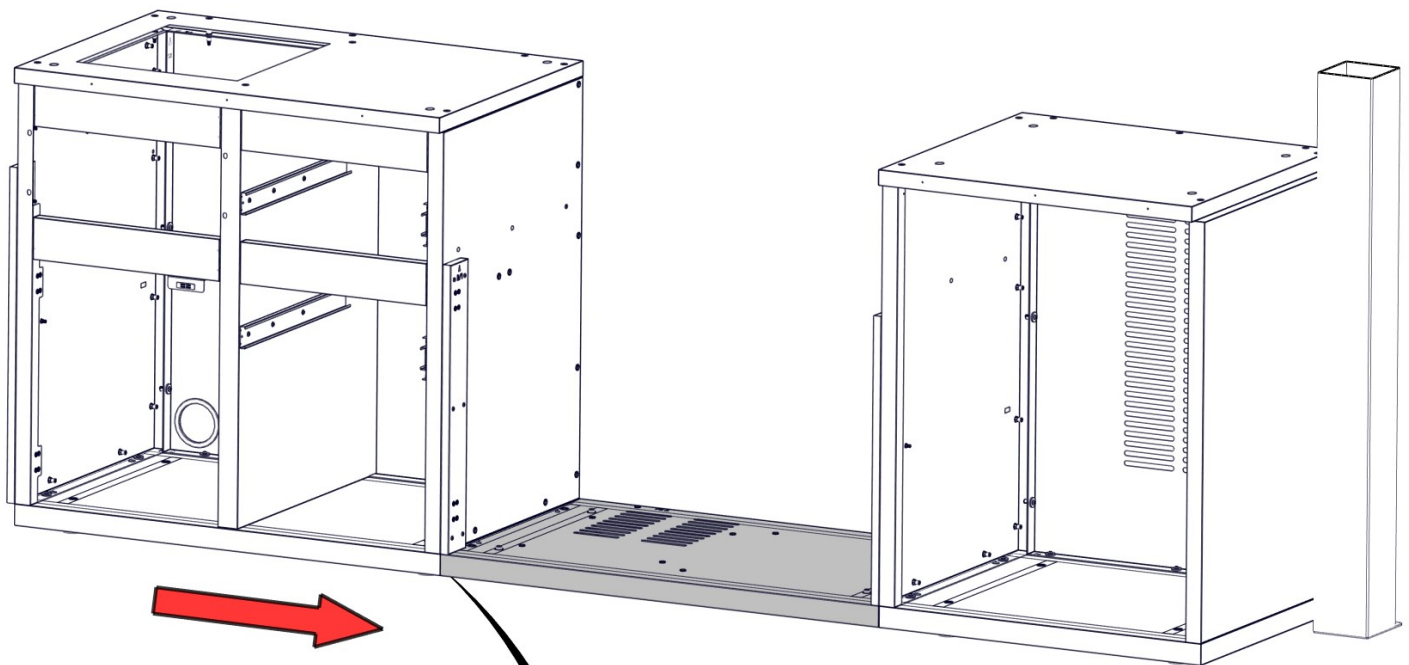


**FLUSH FRONT  
FACE OF PANELS**

**ADJUSTABLE FOOT**


# STEP 67 - GRILL CABINET ASSEMBLY

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

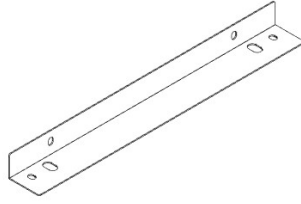

**A6 ANGLED BRACKET - A4M03053**  
(x1) 1 3/8" x 1 15/16" x 17 1/8" (35x50x435)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

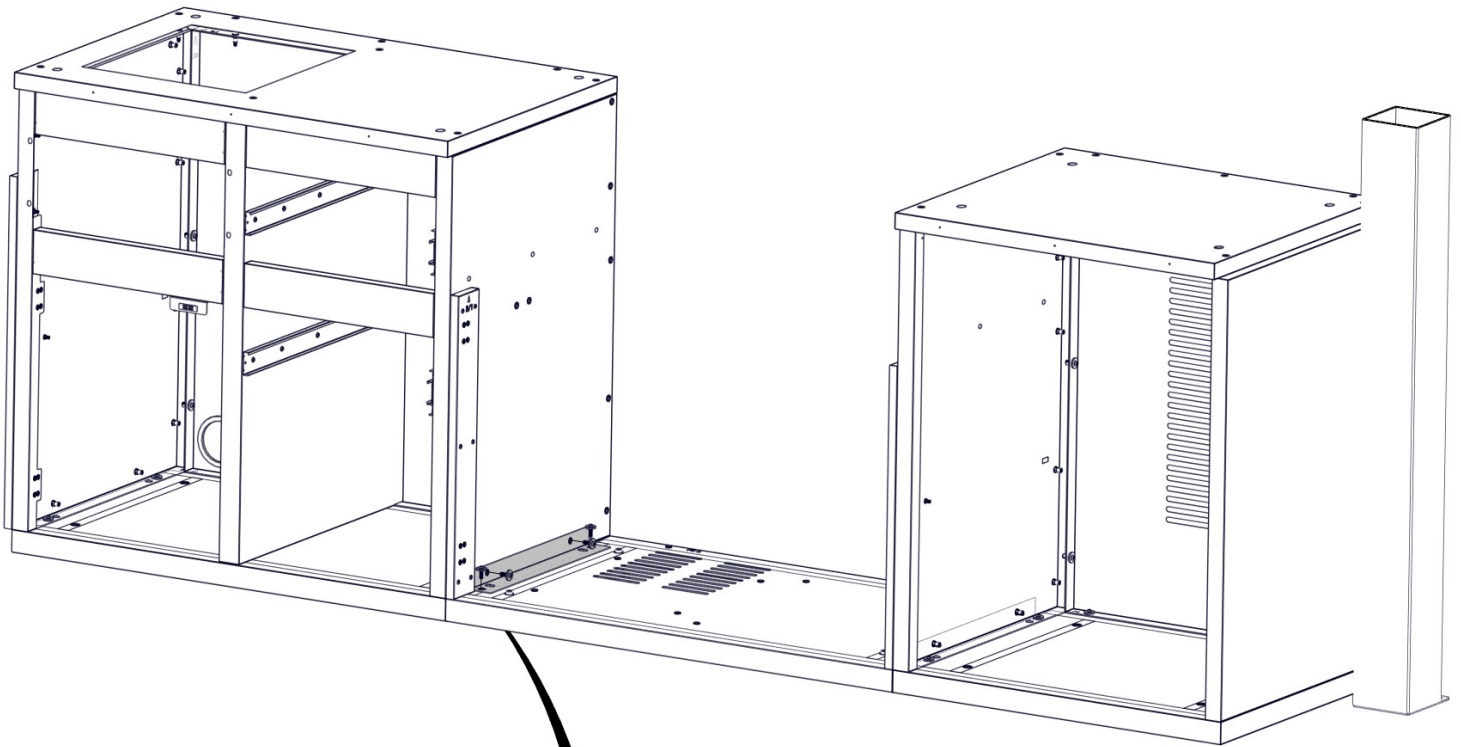


**A6 (x1)**  
**ANGLED BRACKET**

**1202 (x4)**  
**TORX PAN HEAD 1/4-20x3/4 ASSY**

**MAKE SURE FRONT  
FACE OF FLOOR  
PANELS ARE FLUSH**


# STEP 68 - GRILL CABINET ASSEMBLY

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

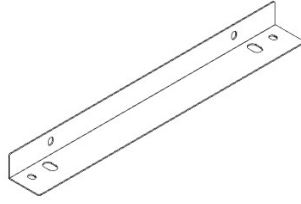

**A6 ANGLED BRACKET - A4M03053**  
(x1) 1 3/8"x1 15/16"x17 1/8" (35x50x435)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

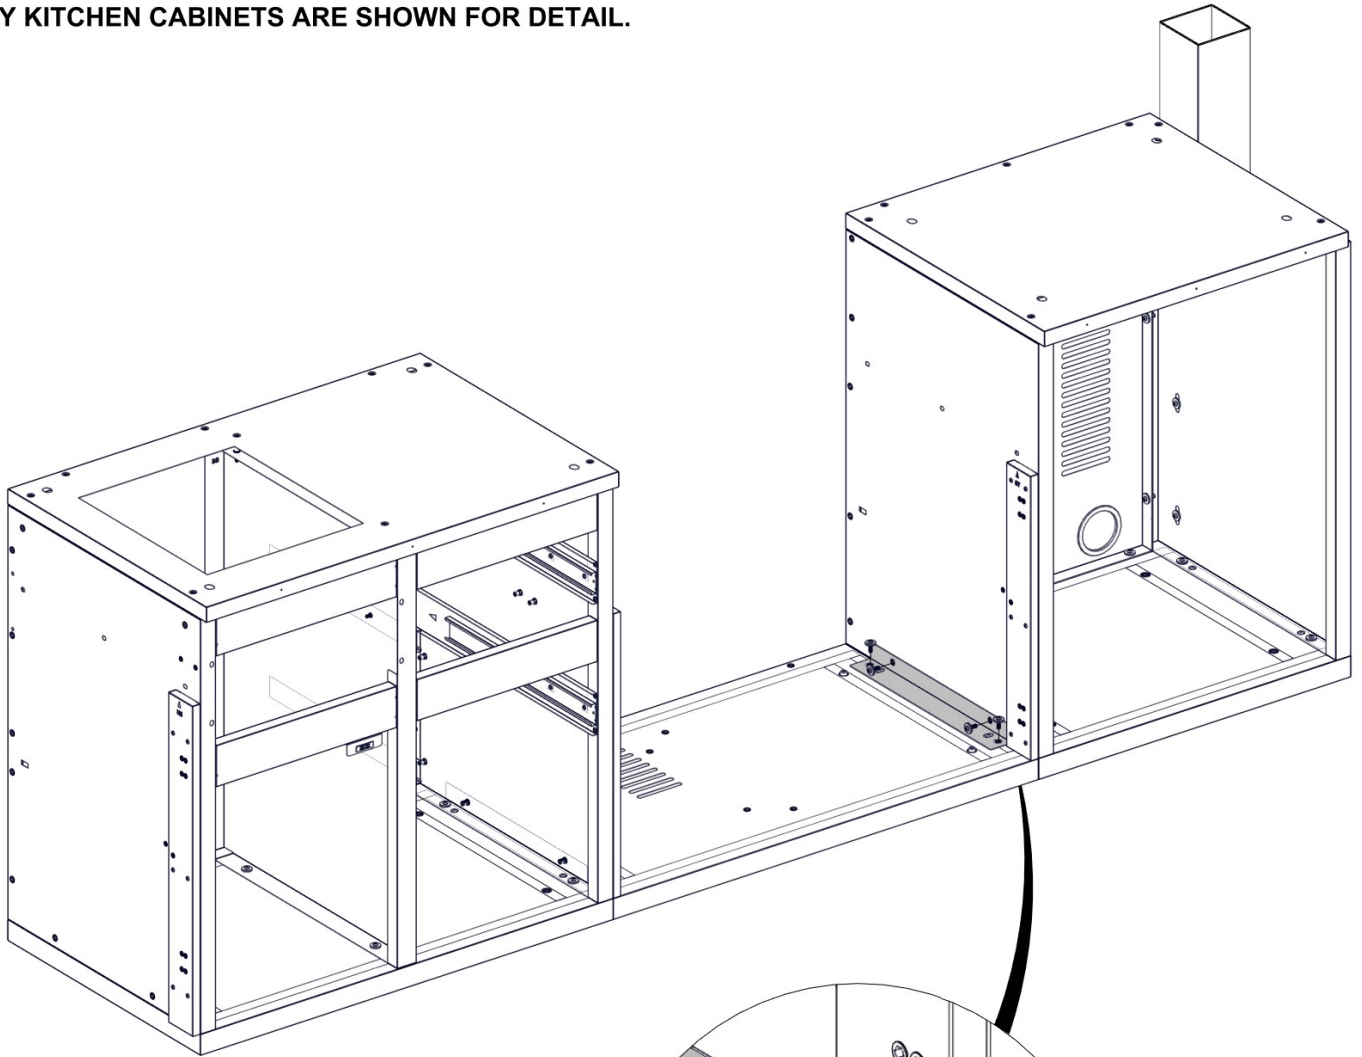


**1202 (x4)**  
**TORX PAN HEAD 1/4-20x3/4 ASSY**

**A6 (x1)**  
**ANGLED BRACKET**

**MAKE SURE FRONT  
FACE OF FLOOR  
PANELS ARE FLUSH**

# STEP 69 - GRILL CABINET ASSEMBLY


Qty	PartNo	Description
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

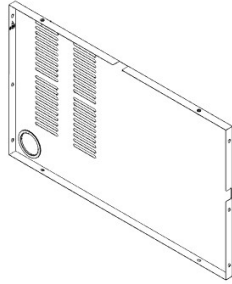


**G10 GRILL CABINET BACK PANEL ASSEMBLY - A4M03055**  
(x1) 1 3/16"x22 7/8"x38 3/16" (30x581x970)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

**G10 LABEL INDICATES TOP OF BACK PANEL**

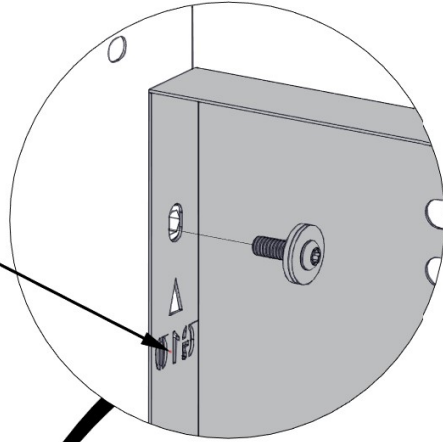


**G10 (x1) GRILL CABINET BACK PANEL ASSEMBLY**

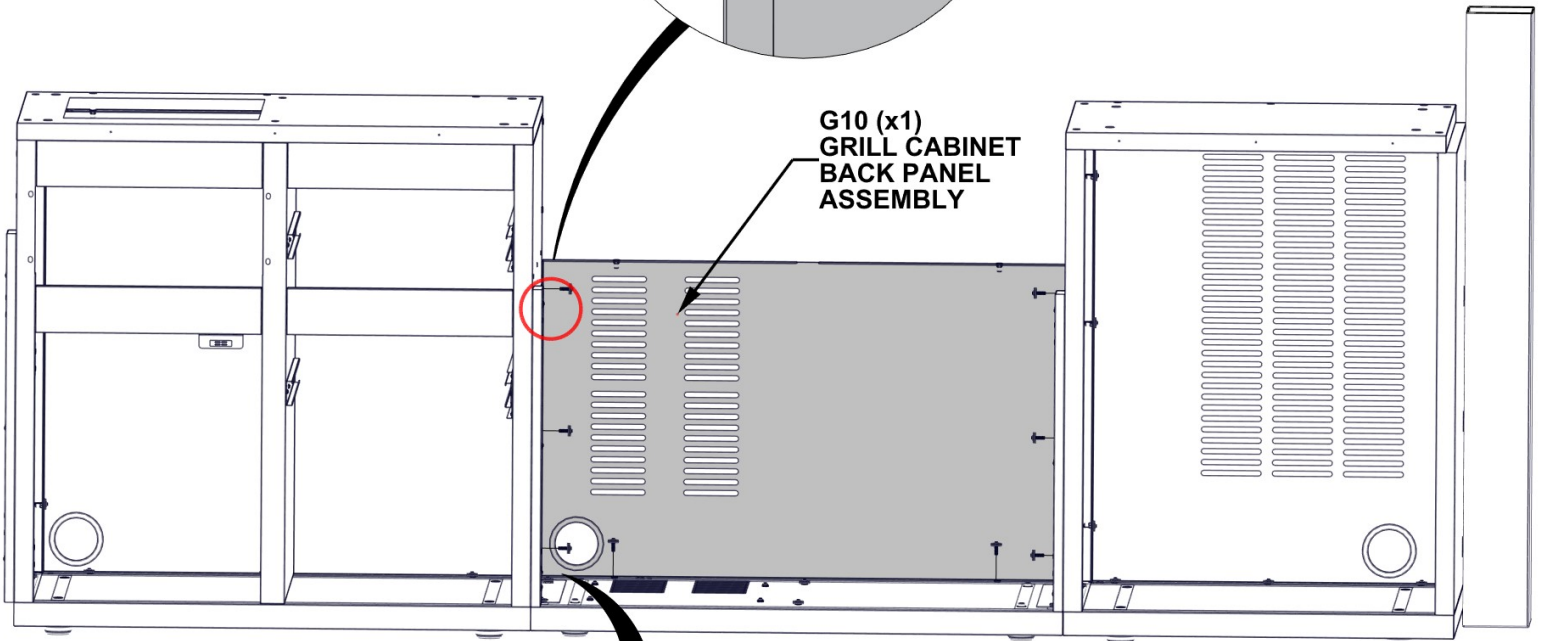


**1202 (x8) TORX PAN HEAD 1/4-20x3/4 ASSY**

**HAND TIGHTEN ONLY**

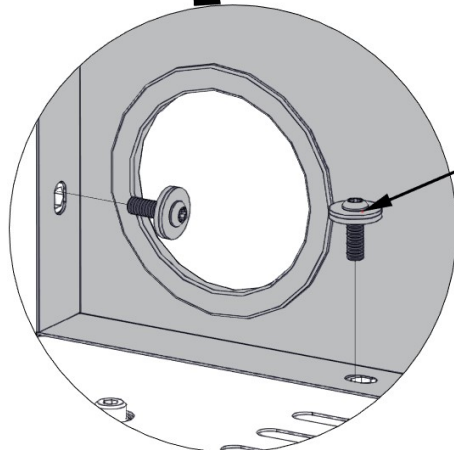


# STEP 70 - GRILL CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

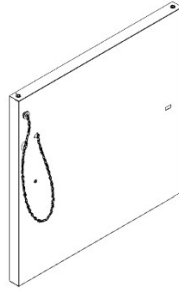

**S6 GRILL CABINET SIDE PANEL ASSEMBLY M - A4M03586**  
 (x1) 23 3/8"x22 7/8"x1 3/8" (35x581x593)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

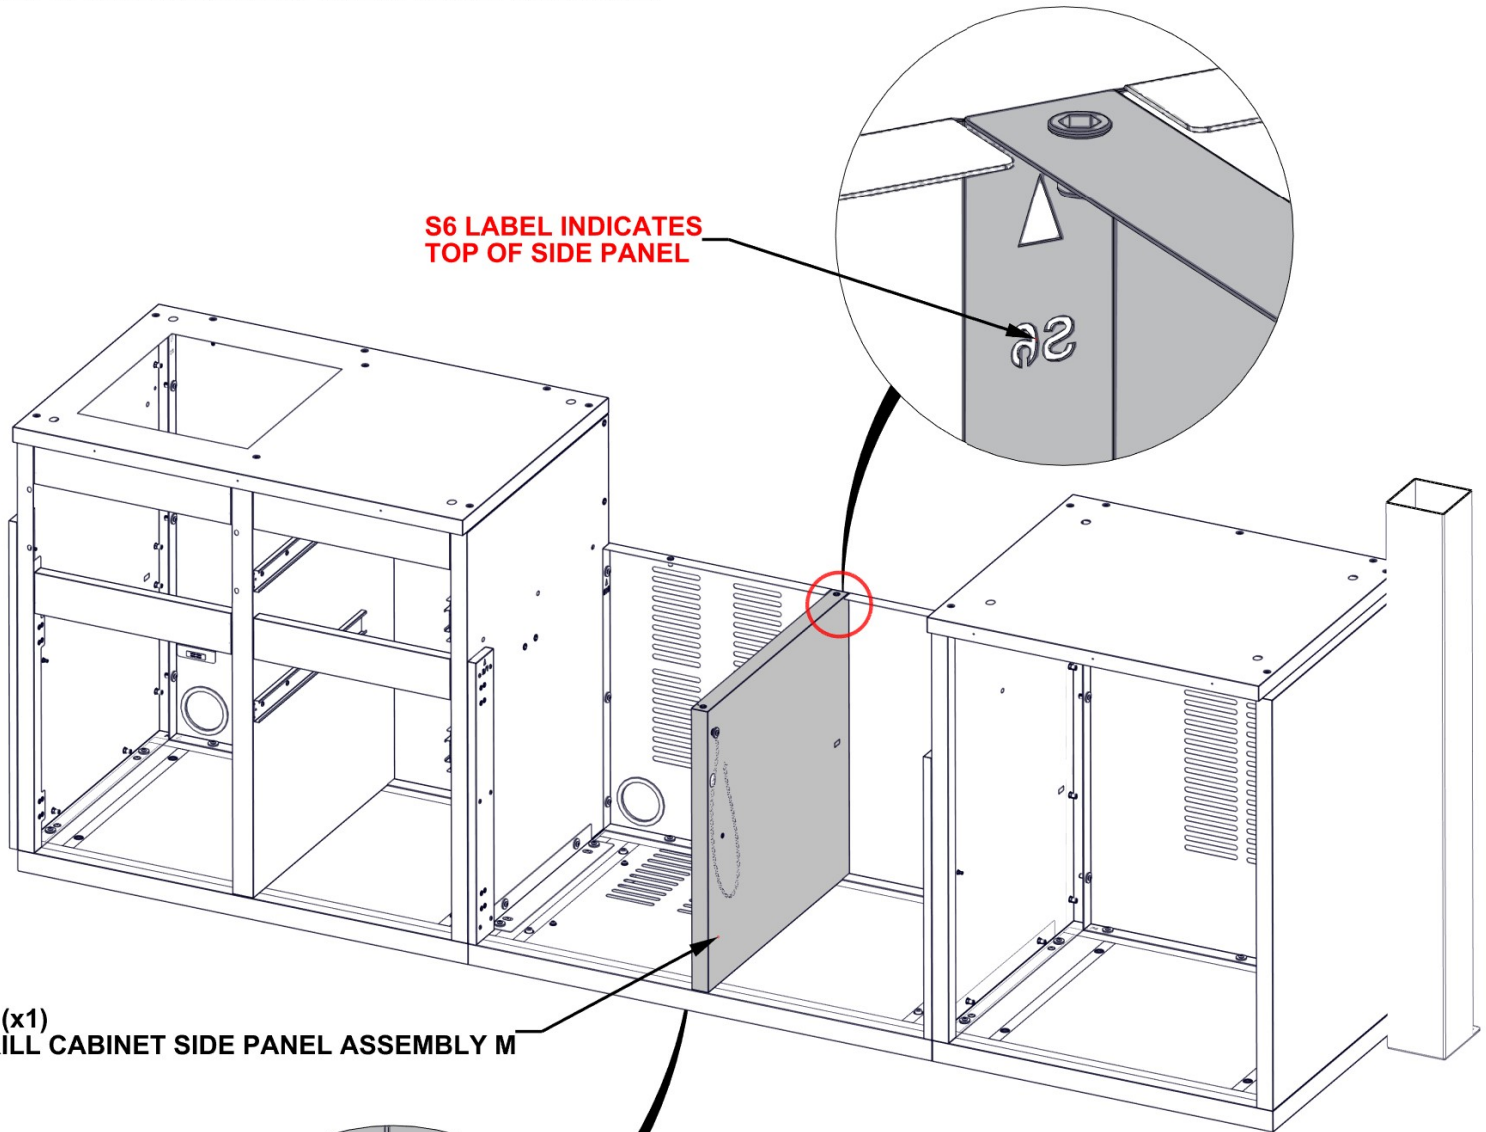

**S6 LABEL INDICATES TOP OF SIDE PANEL**


**S6 (x1)**  
**GRILL CABINET SIDE PANEL ASSEMBLY M**

**TIGHTEN ALL HARDWARE**

**1202 (x2)**  
**TORX PAN HEAD 1/4-20x3/4 ASSY**


**FLUSH FRONT FACE OF SIDE PANEL WITH FLOOR PANEL**

# STEP 71A - GRILL CABINET ASSEMBLY

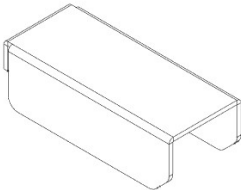


A5 SHELF BRACKET - A4M03141  
(x2) 5/8"x7/8"x2 1/16" (16x22x53)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- ATTACH SHELF BRACKETS ON BOTH SIDES OF CENTER GRILL CABINET.

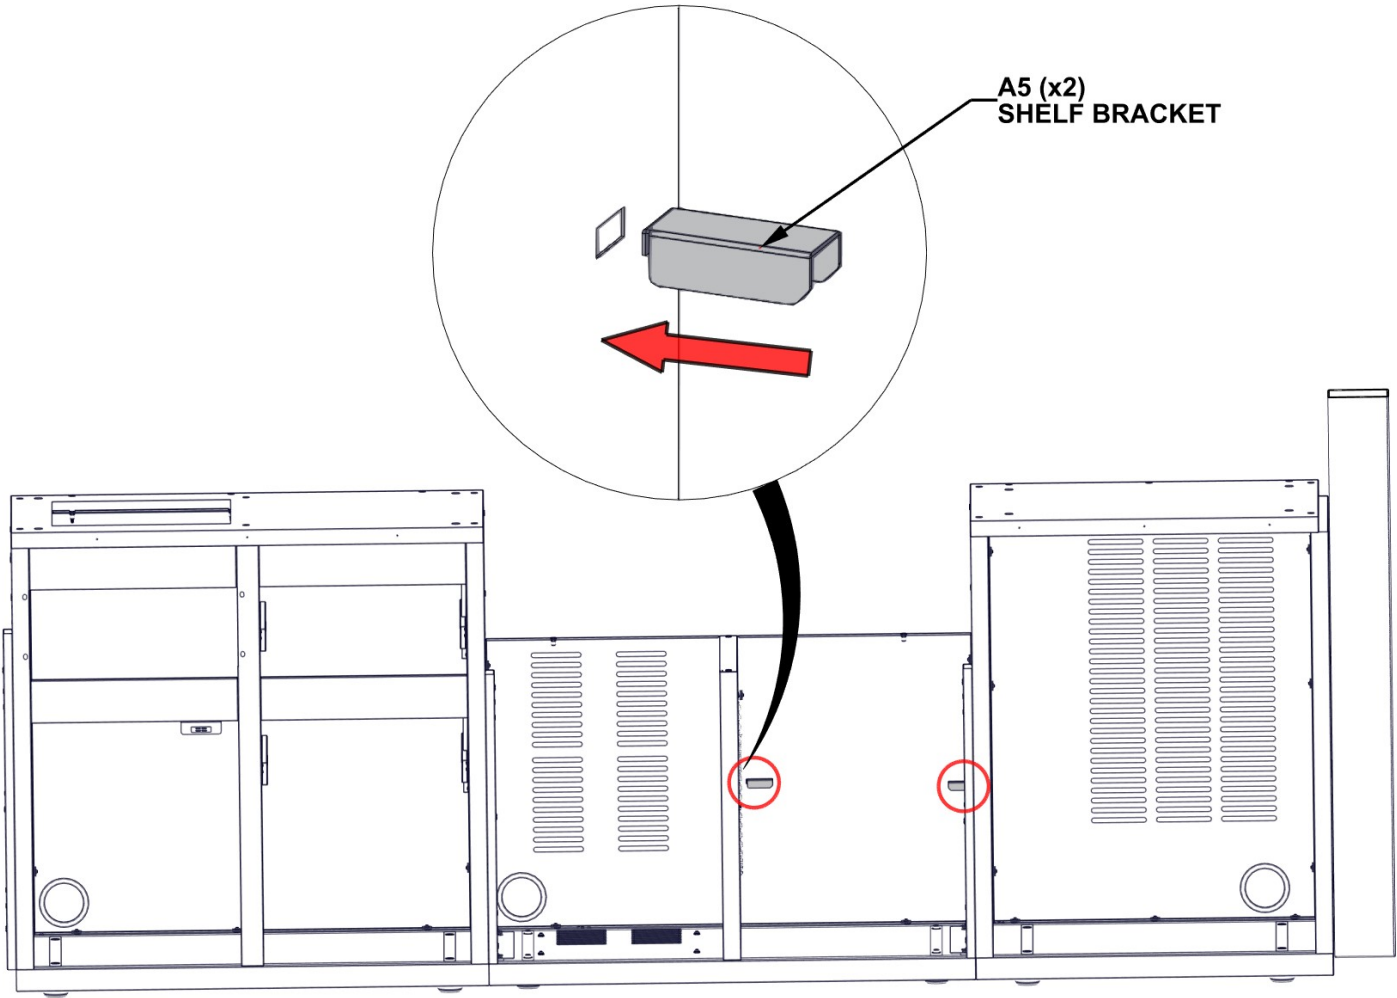


# STEP 71B - GRILL CABINET ASSEMBLY

Qty	PartNo	Description
3	H101289	PAN HEAD SCREW 8-32x1/2" SS

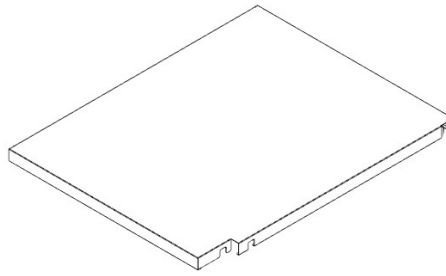


L2 GRILL CABINET SHELF ASSEMBLY - A4M03589  
(x1) 23 1/4"x18 3/8"x1" (25.00x467.00x591.00)


- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- ALIGN SHELF WITH THREADED INSERTS AND ATTACH HARDWARE TO FASTEN IN PLACE.

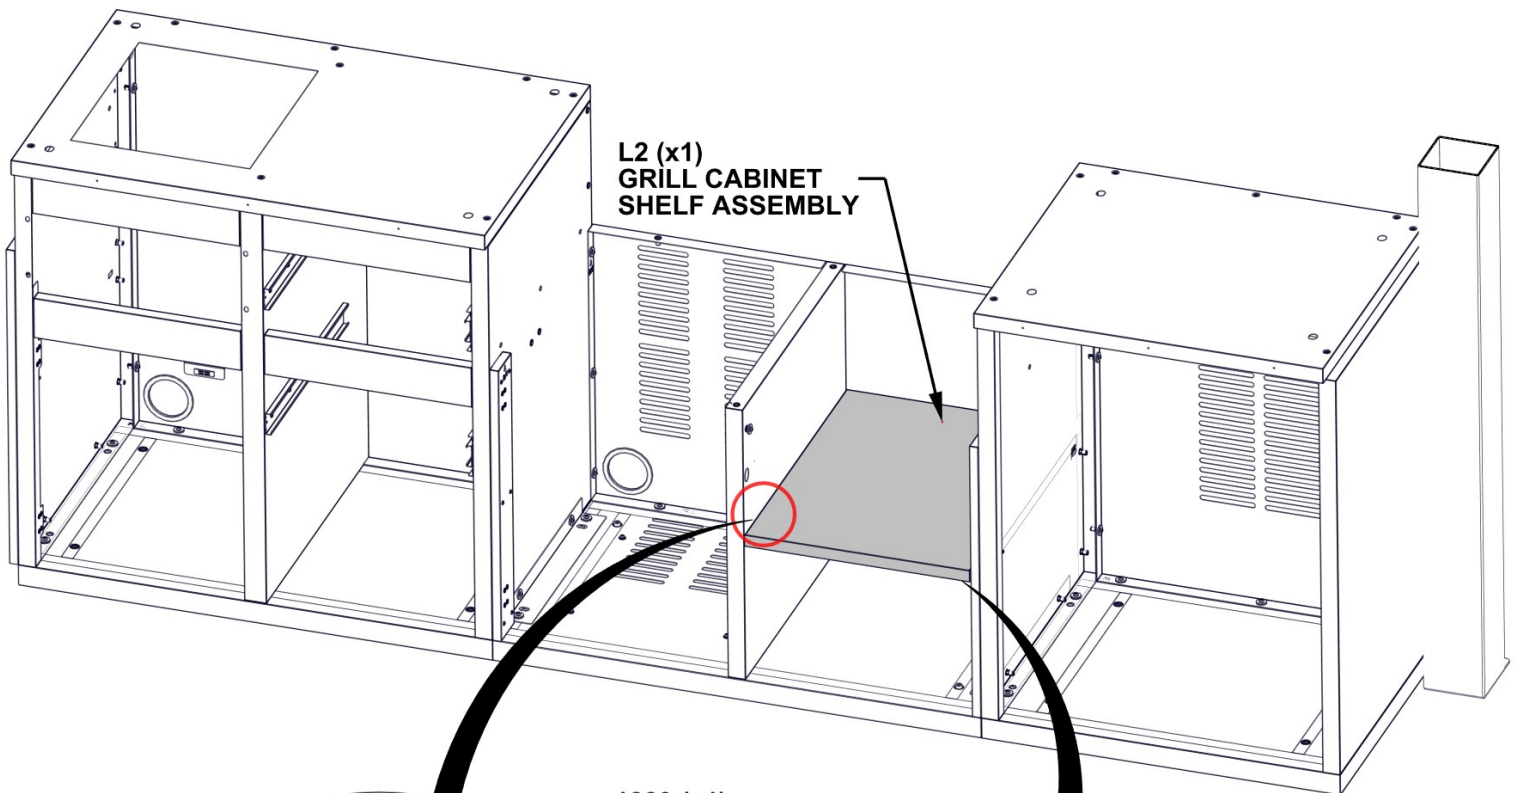

L2 (x1)  
GRILL CABINET  
SHELF ASSEMBLY

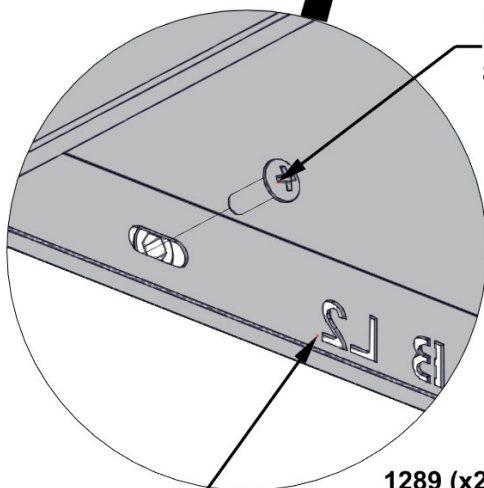

1289 (x1)  
PAN HEAD SCREW  
8-32x1/2" SS

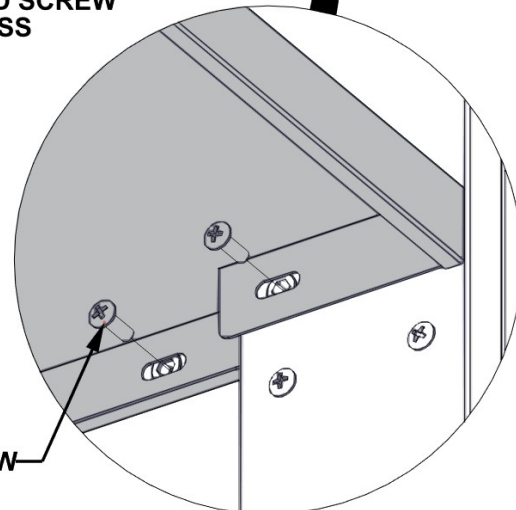


1289 (x2)  
PAN HEAD SCREW  
8-32x1/2" SS

L2 LABEL INDICATES  
FRONT OF SHELF


# STEP 72 - GRILL CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

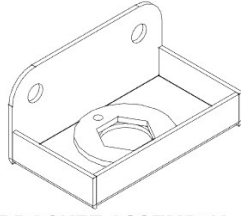


**A9 HOSE BRACKET ASSEMBLY - A4M03060**  
(x1) 1 1/4"x1 7/16"x2 9/16" (31.5x36.5x65)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

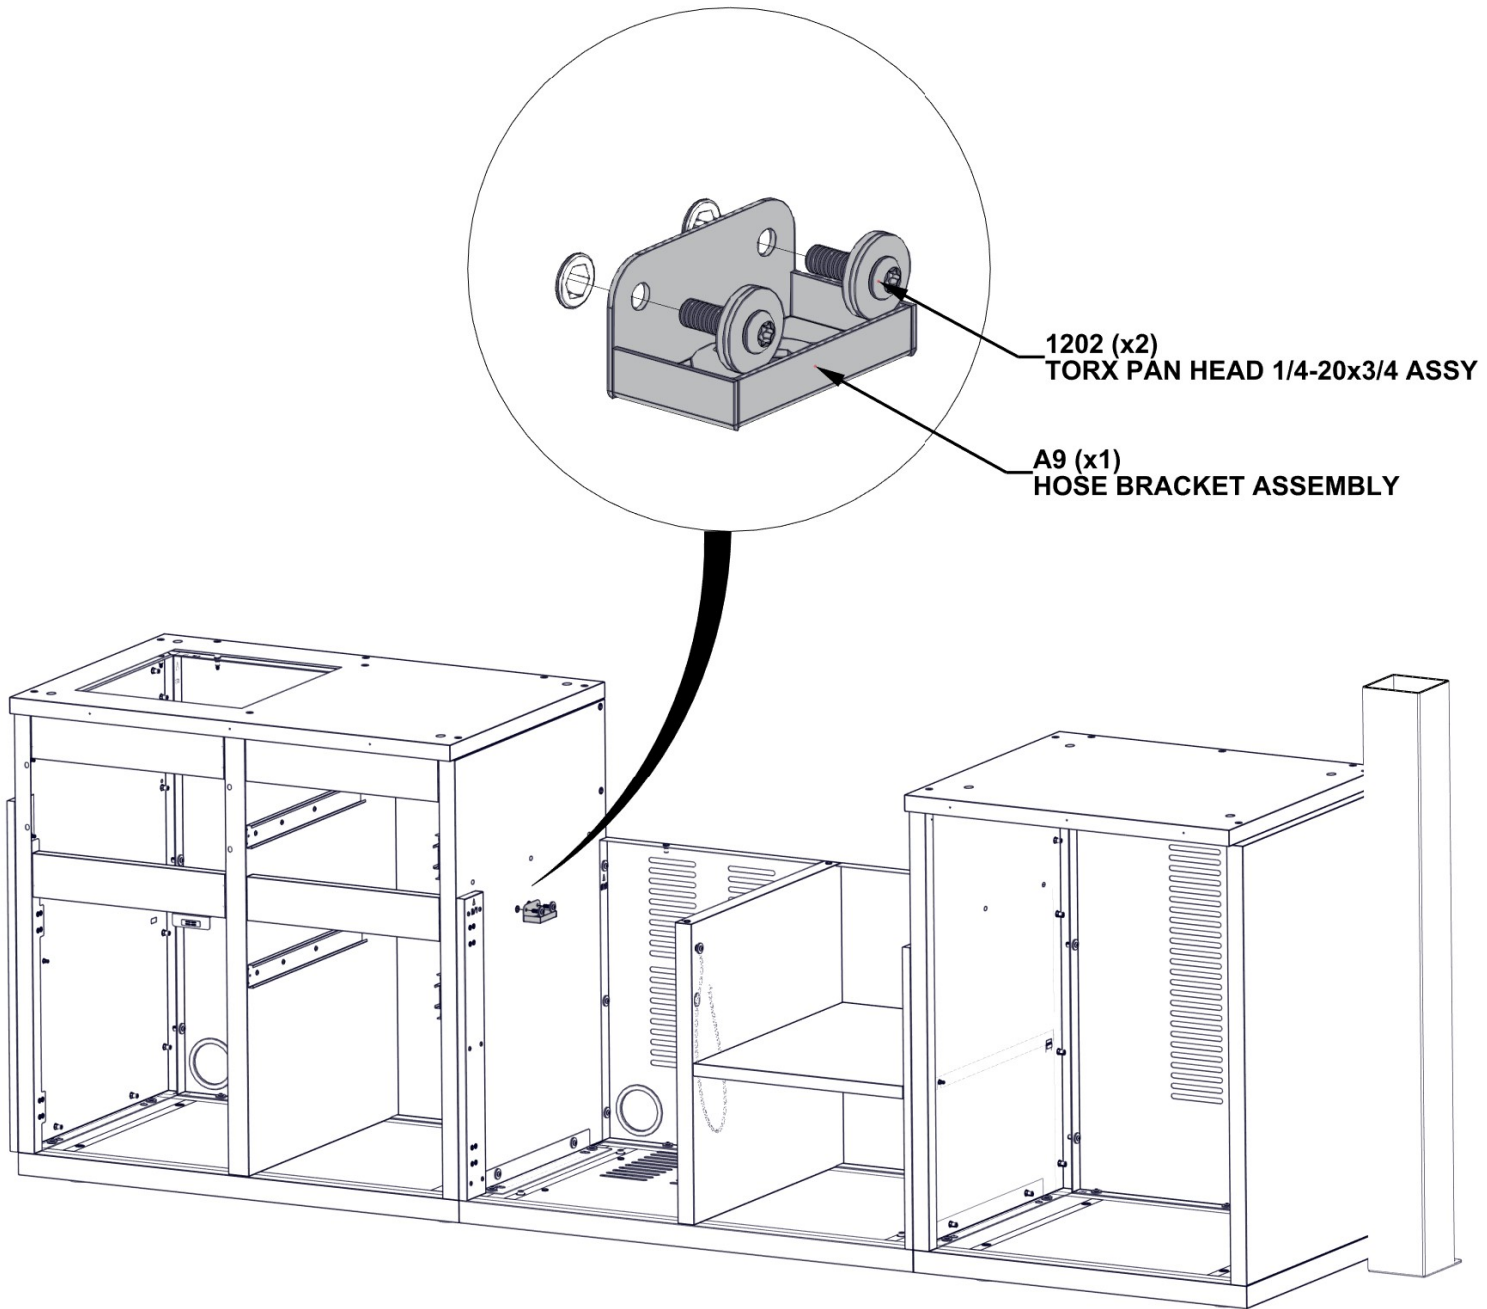


# STEP 73 - GRILL CABINET ASSEMBLY

Qty	PartNo	Description
4	H101292	TORX PAN HEAD 1/4-20x13/32"

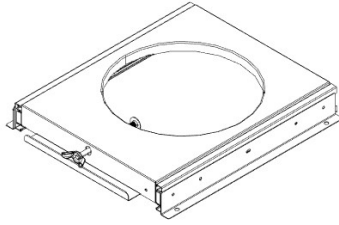


**A13 GAS TANK HOLDER ASSEMBLY - A4M03047**  
(x1) 1 15/16"x12 7/8"x14 3/4" (49x327x374)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

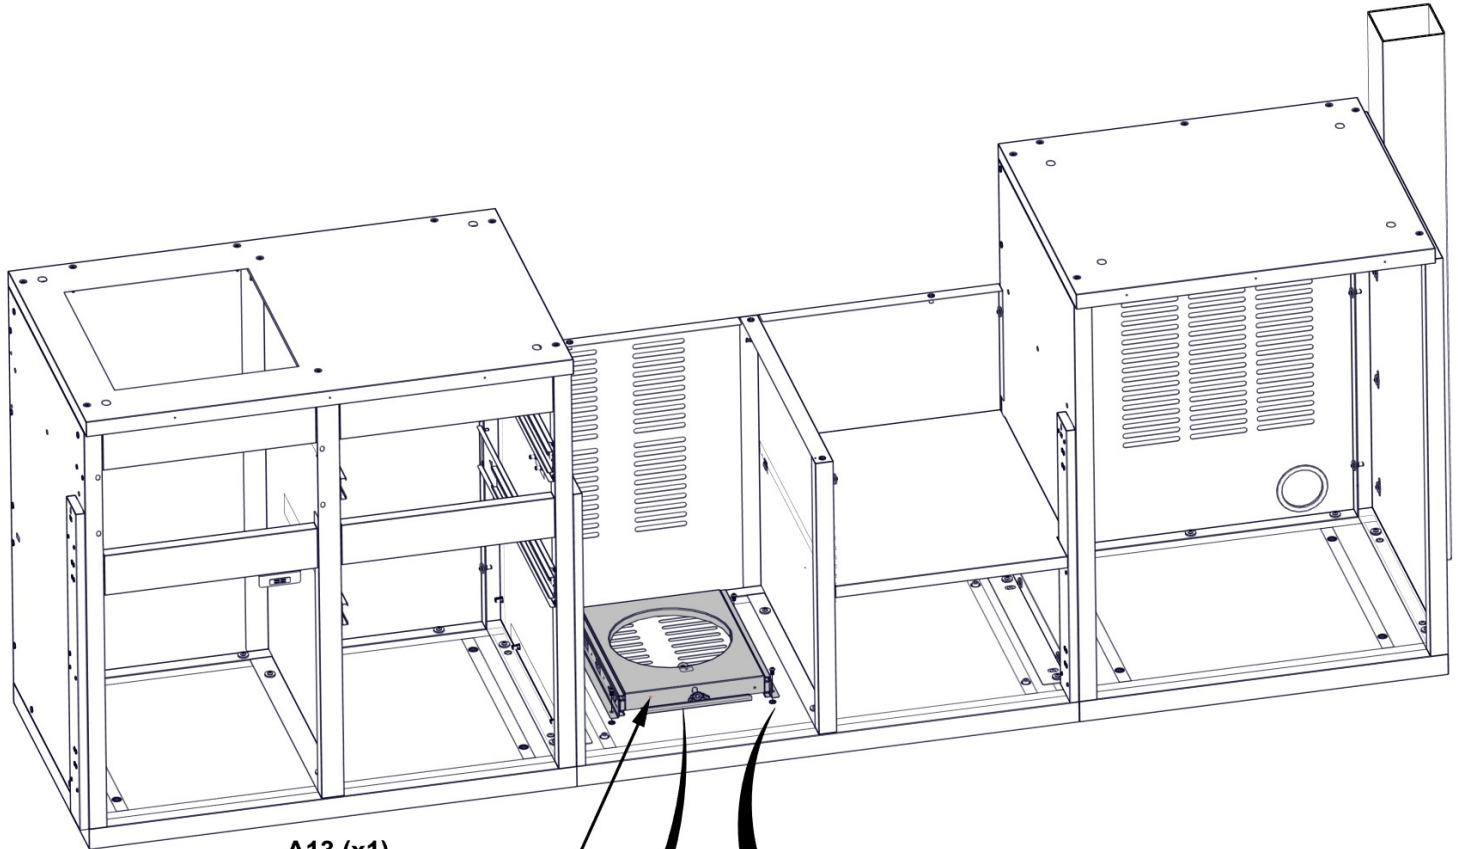

**A13 (x1)**  
**GAS TANK HOLDER**  
**ASSEMBLY**


**1292 (x4)**  
**TORX PAN HEAD 1/4-20x13/32"**

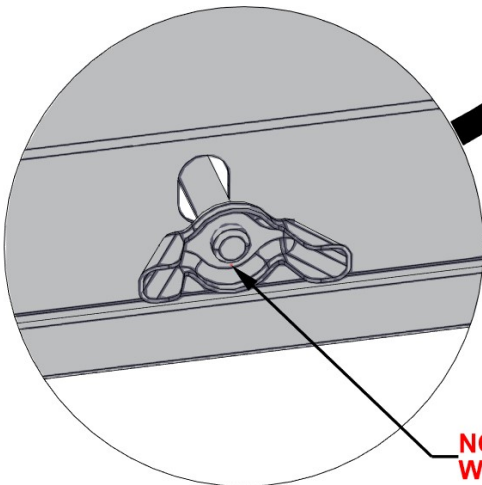


**NOTE ORIENTATION OF**  
**WING NUT TOWARDS FRONT**

# STEP 74 - GRILL CABINET ASSEMBLY


Qty	PartNo	Description
4	H101289	PAN HEAD SCREW 8-32x1/2" SS

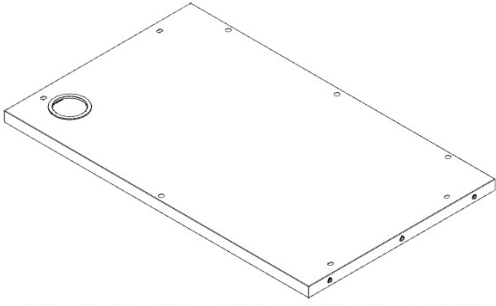

**T2 GRILL TABLETOP ASSEMBLY - A4M03057**  
 (x1) 1 1/4"x23 3/8"x38 3/16" (32x594x970)

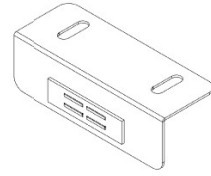


**A2 MAGNET BRACKET - A4M03026**  
 (x2) 1"x1 1/4"x3 1/8" (25x31x80)

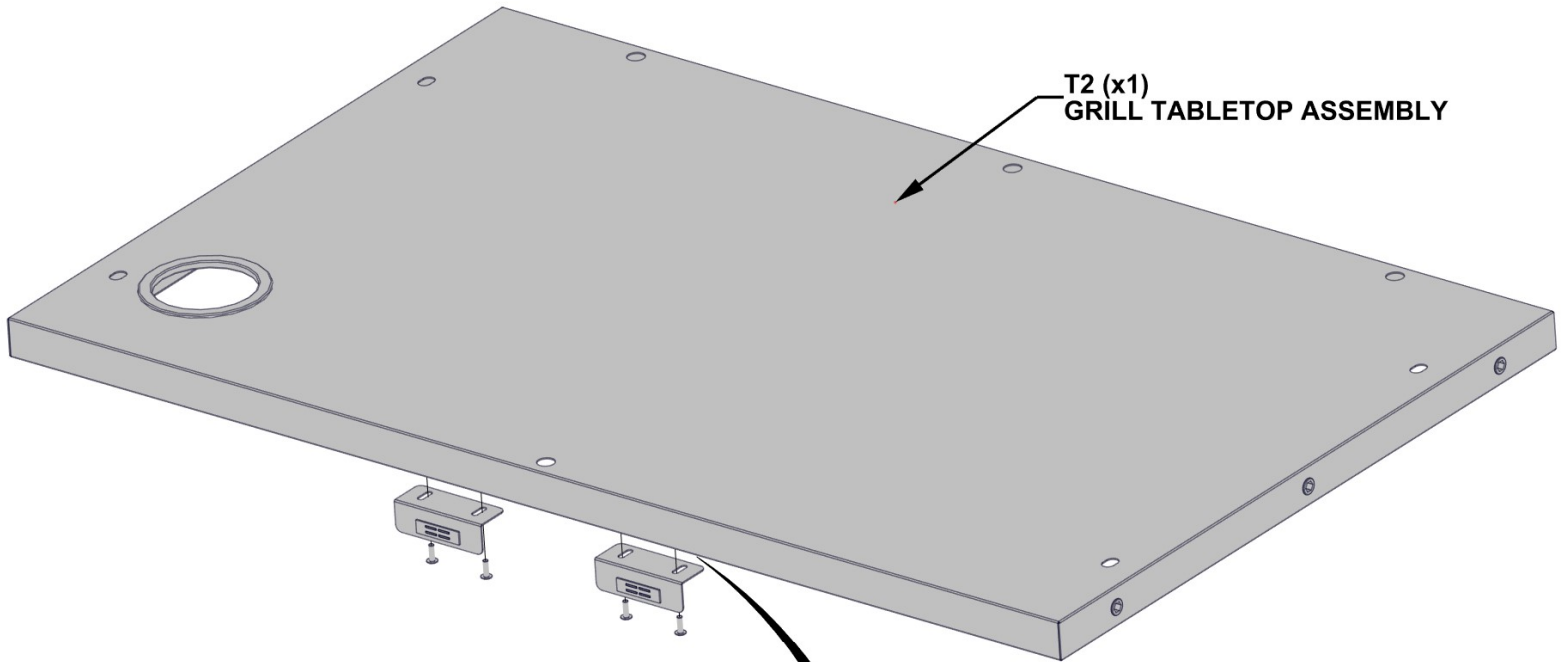

**T2 (x1)**  
**GRILL TABLETOP ASSEMBLY**


**A2 (x2)**  
**MAGNET BRACKET**

**1289 (x4)**  
**PAN HEAD SCREW 8-32x1/2" SS**

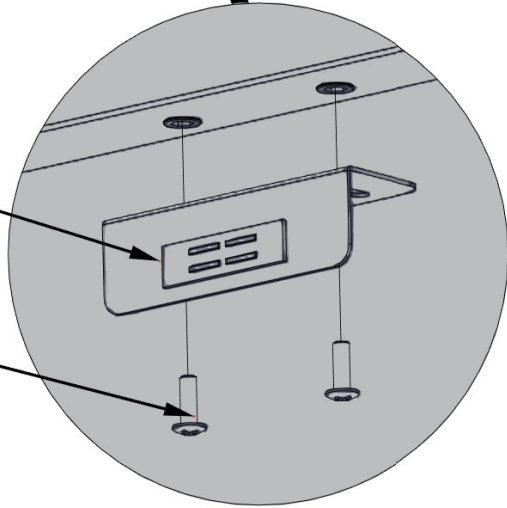


# STEP 75A - GRILL CABINET ASSEMBLY

Qty	PartNo	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

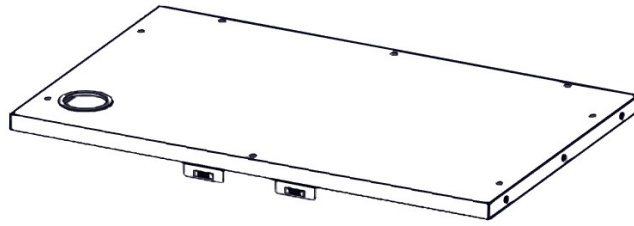

GRILL TABLETOP ASSEMBLY FROM STEP 74


- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- **HARDWARE ATTACHES ON INSIDE OF CABINET**

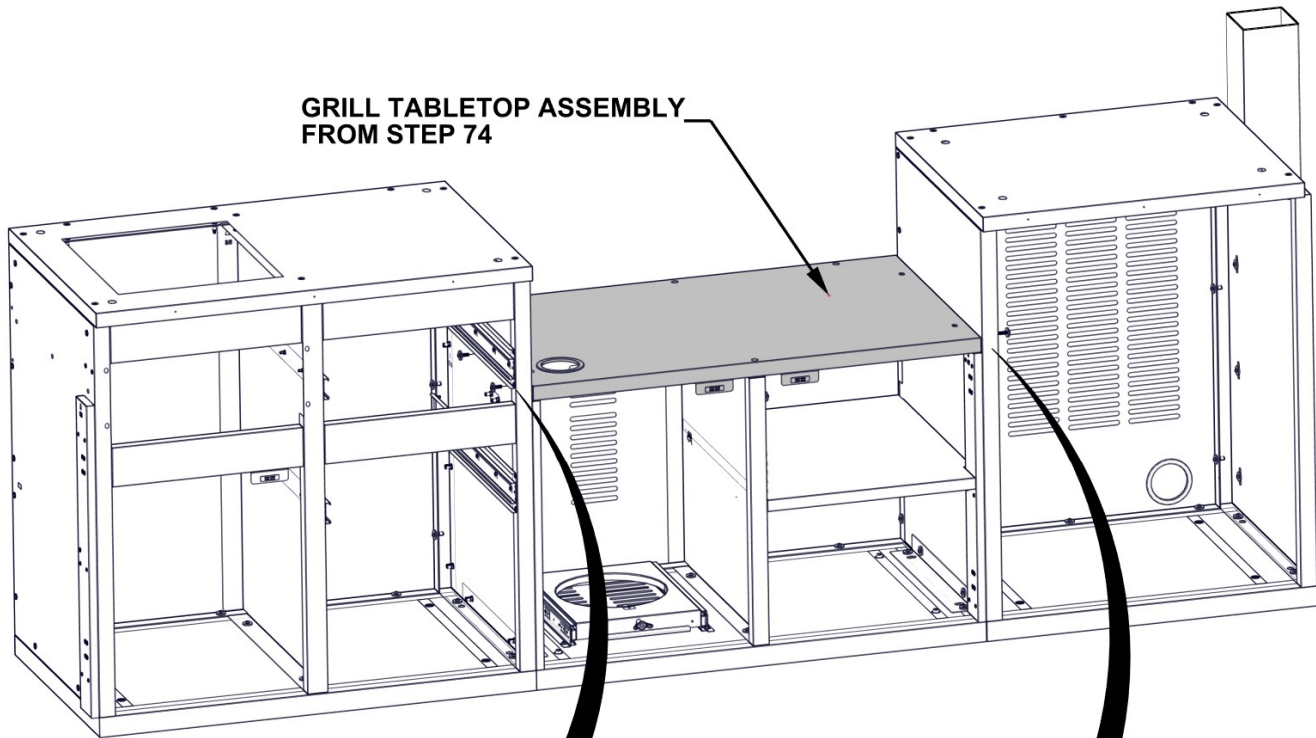

GRILL TABLETOP ASSEMBLY FROM STEP 74


**HAND TIGHTEN ONLY**

1202 (x3)  
TORX PAN HEAD  
1/4-20x3/4 ASSY

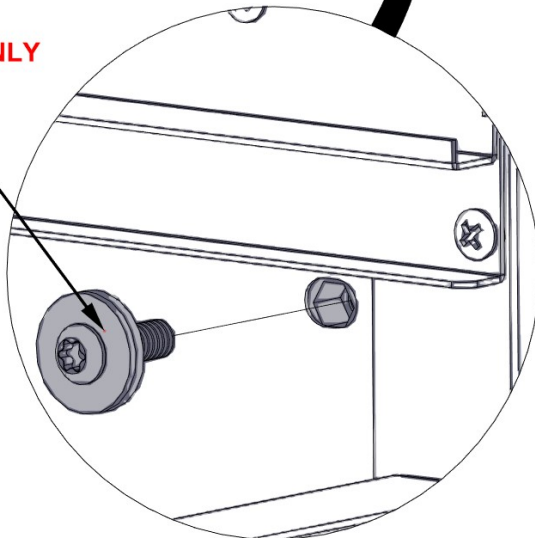

**HAND TIGHTEN ONLY**



1202 (x3)  
TORX PAN HEAD  
1/4-20x3/4 ASSY

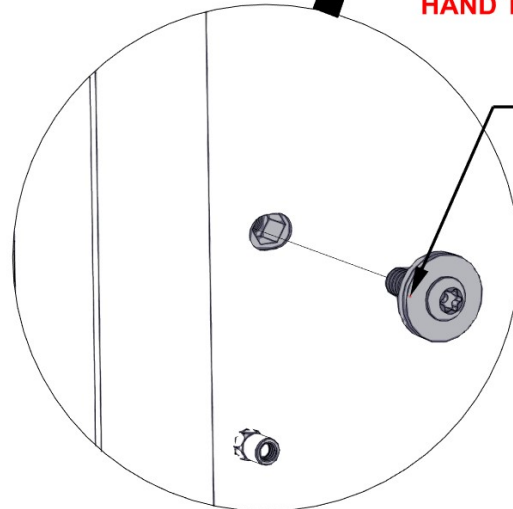

# STEP 75B - GRILL CABINET ASSEMBLY

Qty	PartNo	Description
4	H101103	TORX SOCKET SCREW 1/4-20

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

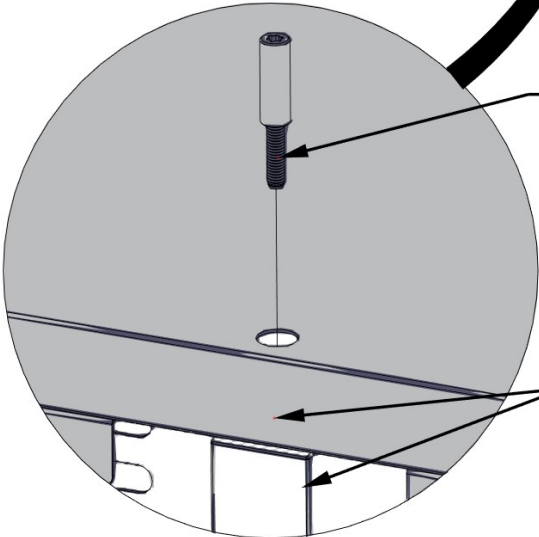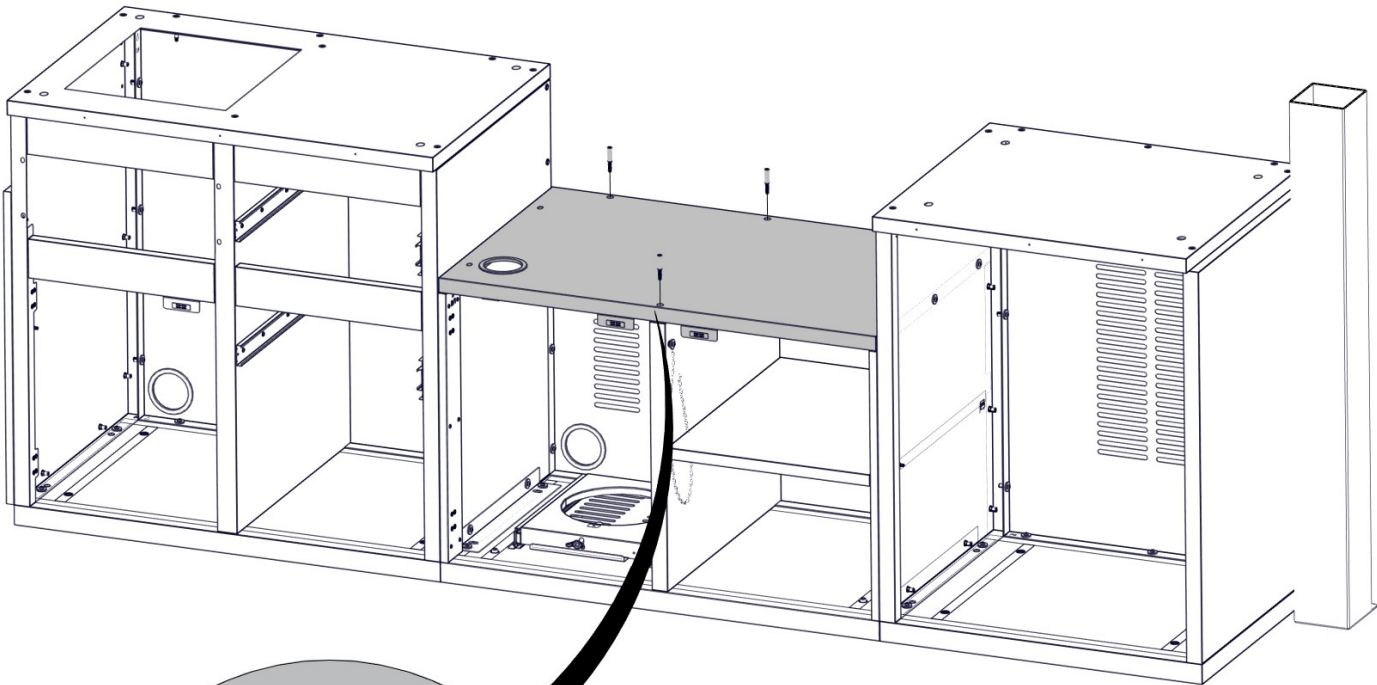


1103 (x4)  
TORX SOCKET SCREW 1/4-20

**TIGHTEN ALL HARDWARE**

**MAKE SURE FRONT  
FACE OF TABLETOP  
IS FLUSH WITH  
UPRIGHT PANEL**


# STEP 76 - GRILL CABINET ASSEMBLY

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

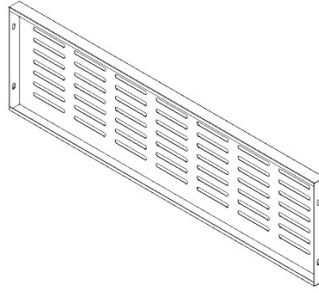


**G11 GRILL VENTILATION PANEL - A4M03056**  
(x1) 1 5/16"x11 3/16"x38 3/16" (33x284x970)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

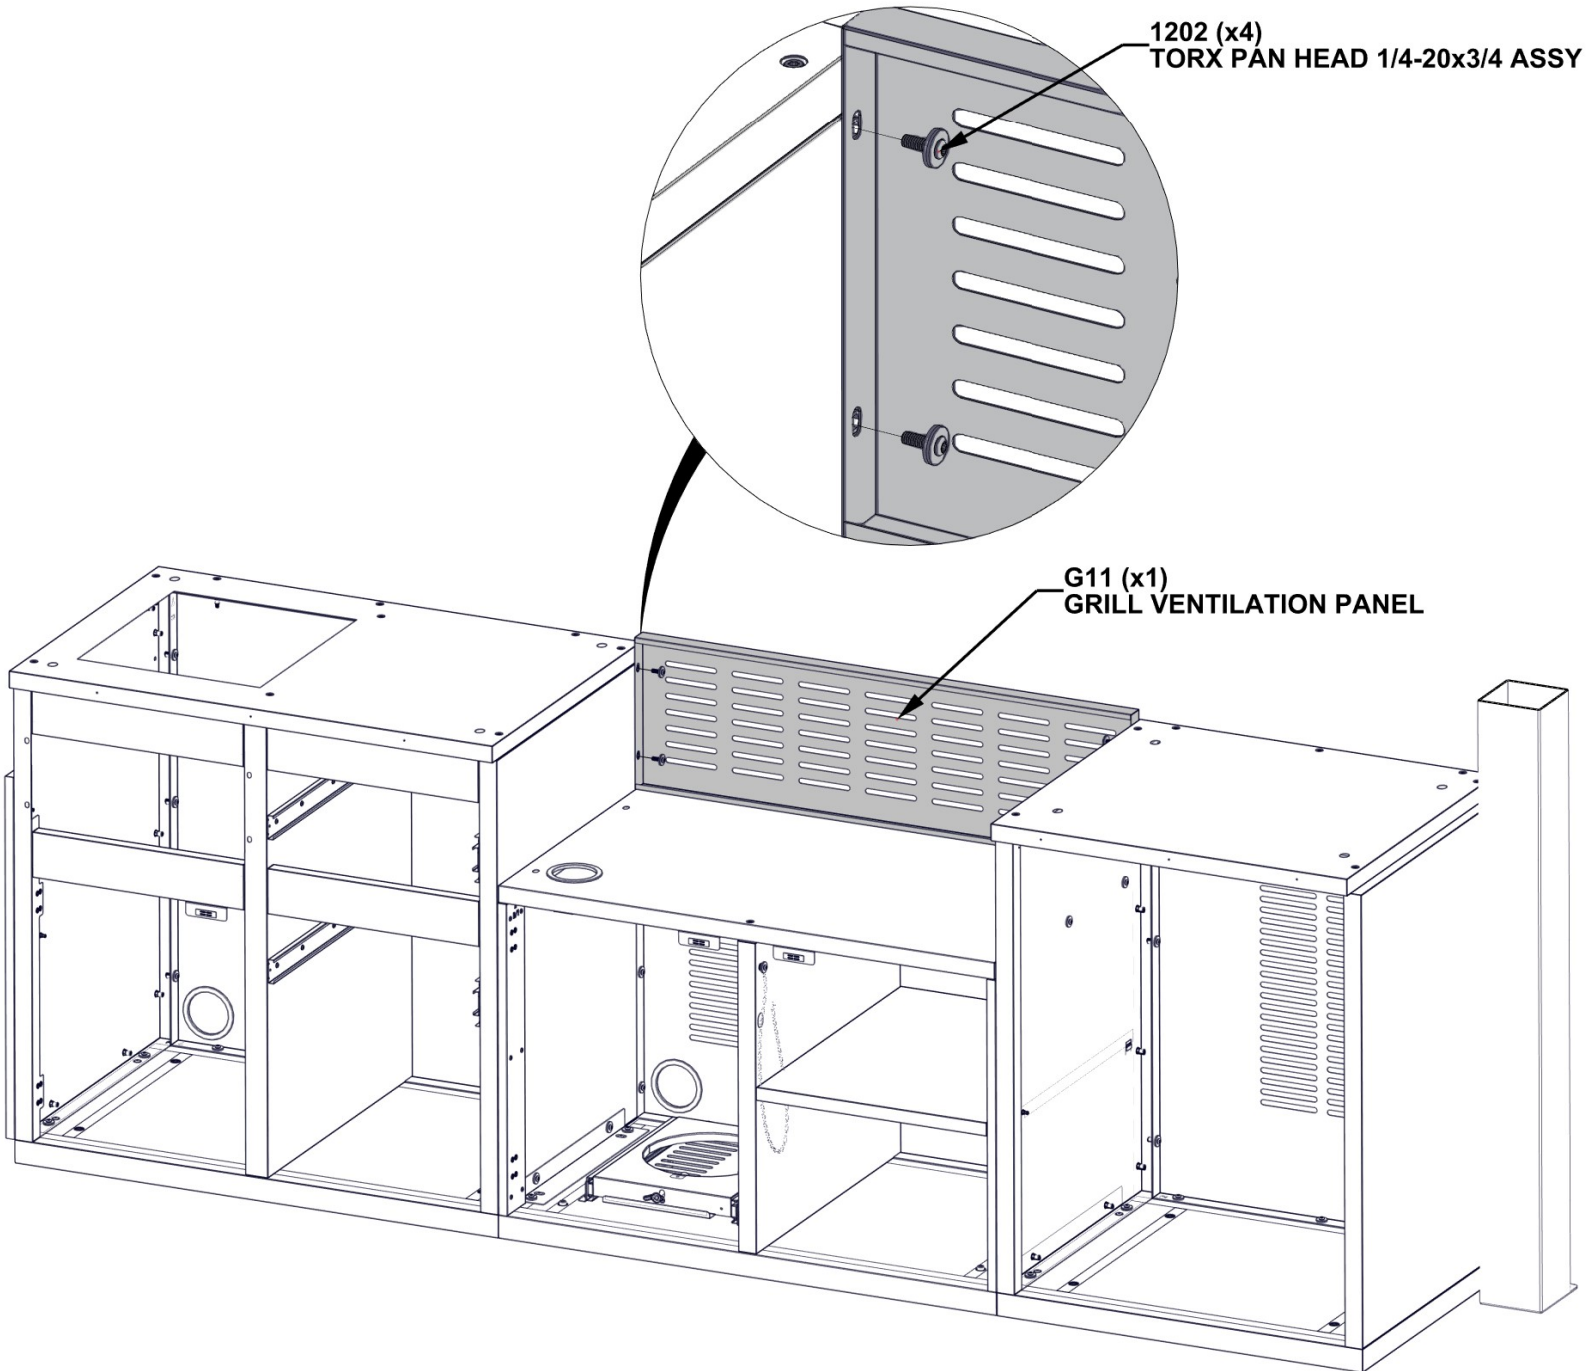


# STEP 77A - PIZZA OVEN CABINET ASSEMBLY

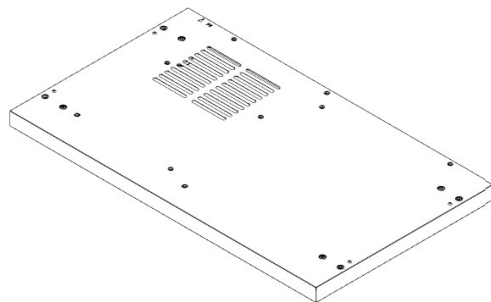


F1 PIZZA OVEN CABINET FLOOR PANEL ASSEMBLY - A4M03538  
(x1) 40 3/16"x23 3/8"x2 5/8" (66x594x1020)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- **LOOKING AT THE FRONT SIDE OF THE CABINETS, SLIDE FLOOR PANEL IN BETWEEN P03 POST AND SINK CABINET.**

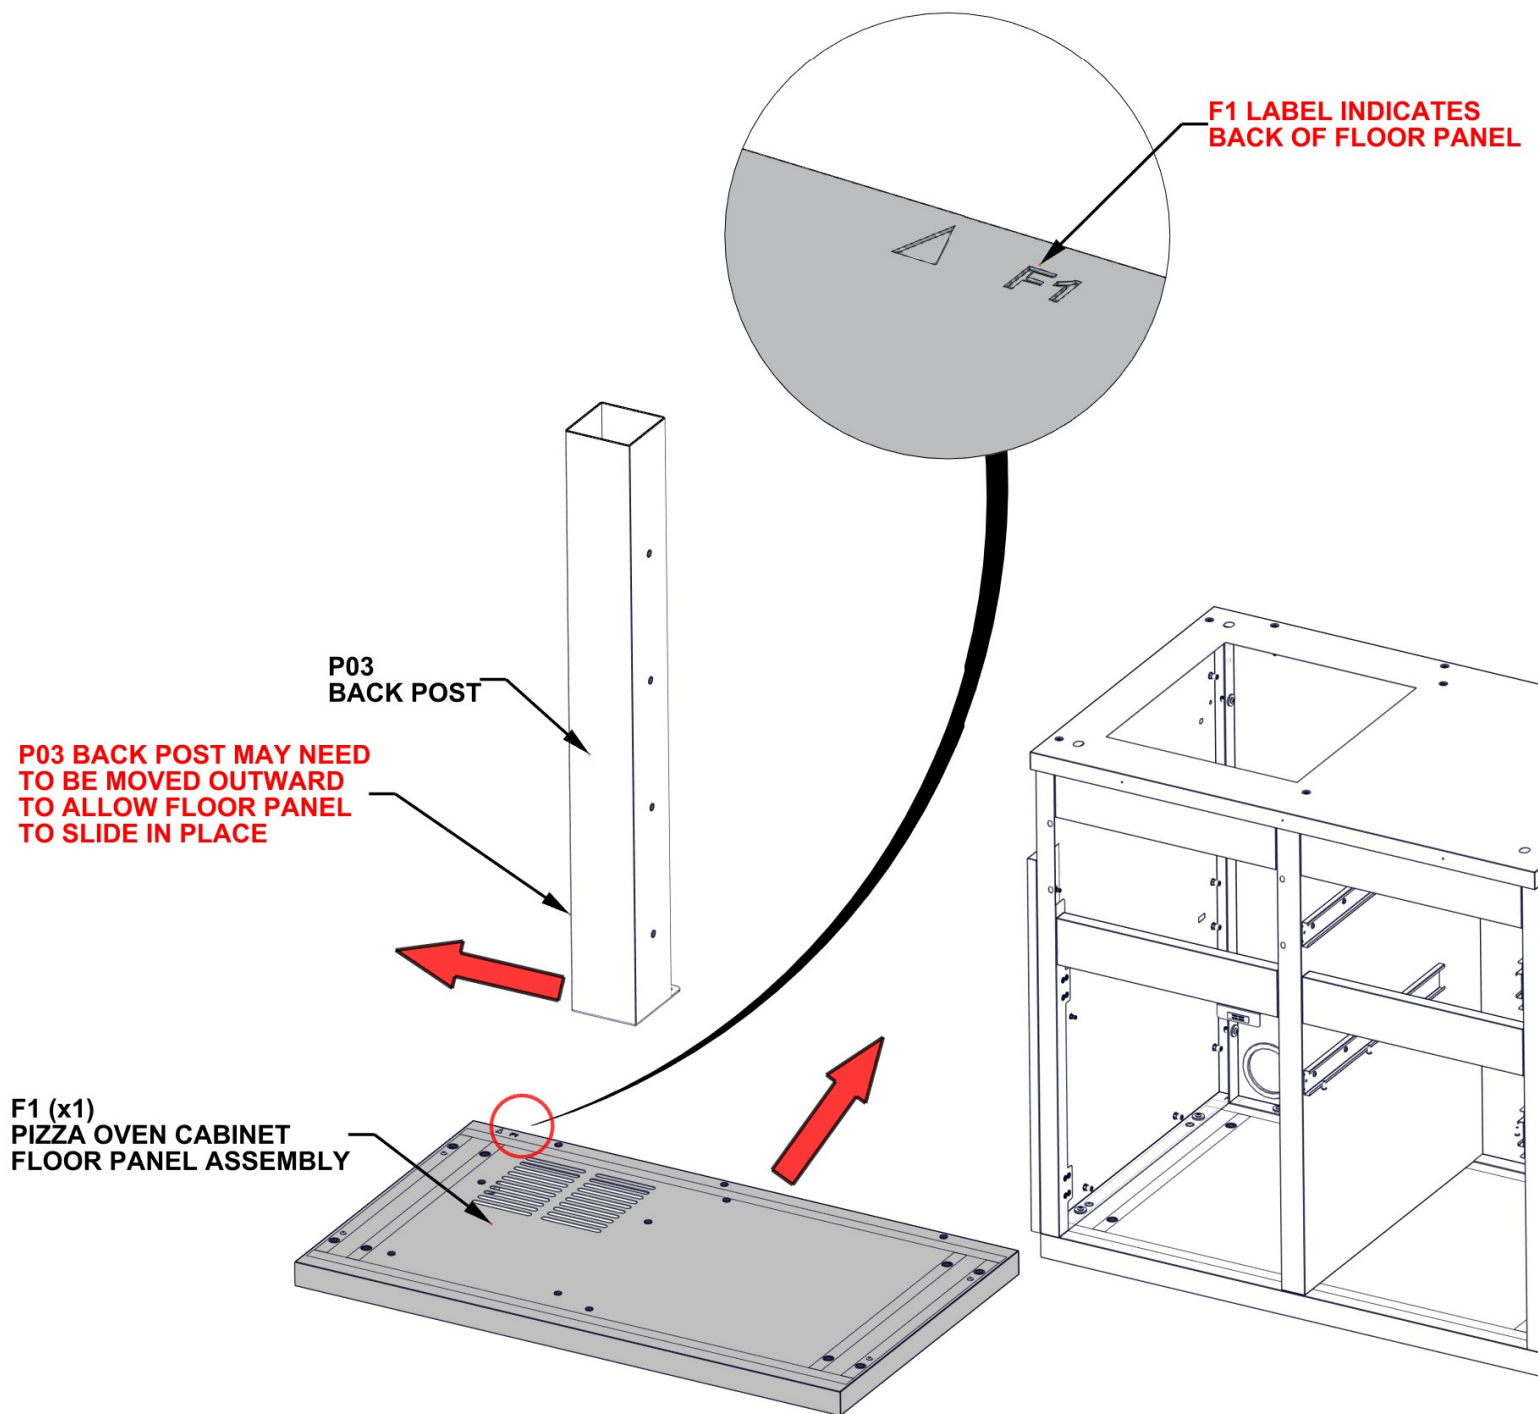


# STEP 77B - GRILL CABINET ASSEMBLY

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- POSITION FLOOR PANEL AS SHOWN BELOW.
- EACH FLOOR PANEL HAS FACTORY INSTALLED ADJUSTABLE FEET. USE PROVIDED HEX DRIVER TO ADJUST EACH FOOT UNTIL PANEL IS LEVEL.
- ADJUST LEFT AND RIGHT CORNER CABINET TO ELIMINATE ANY GAPS BETWEEN FLOOR PANEL AND CABINETS.

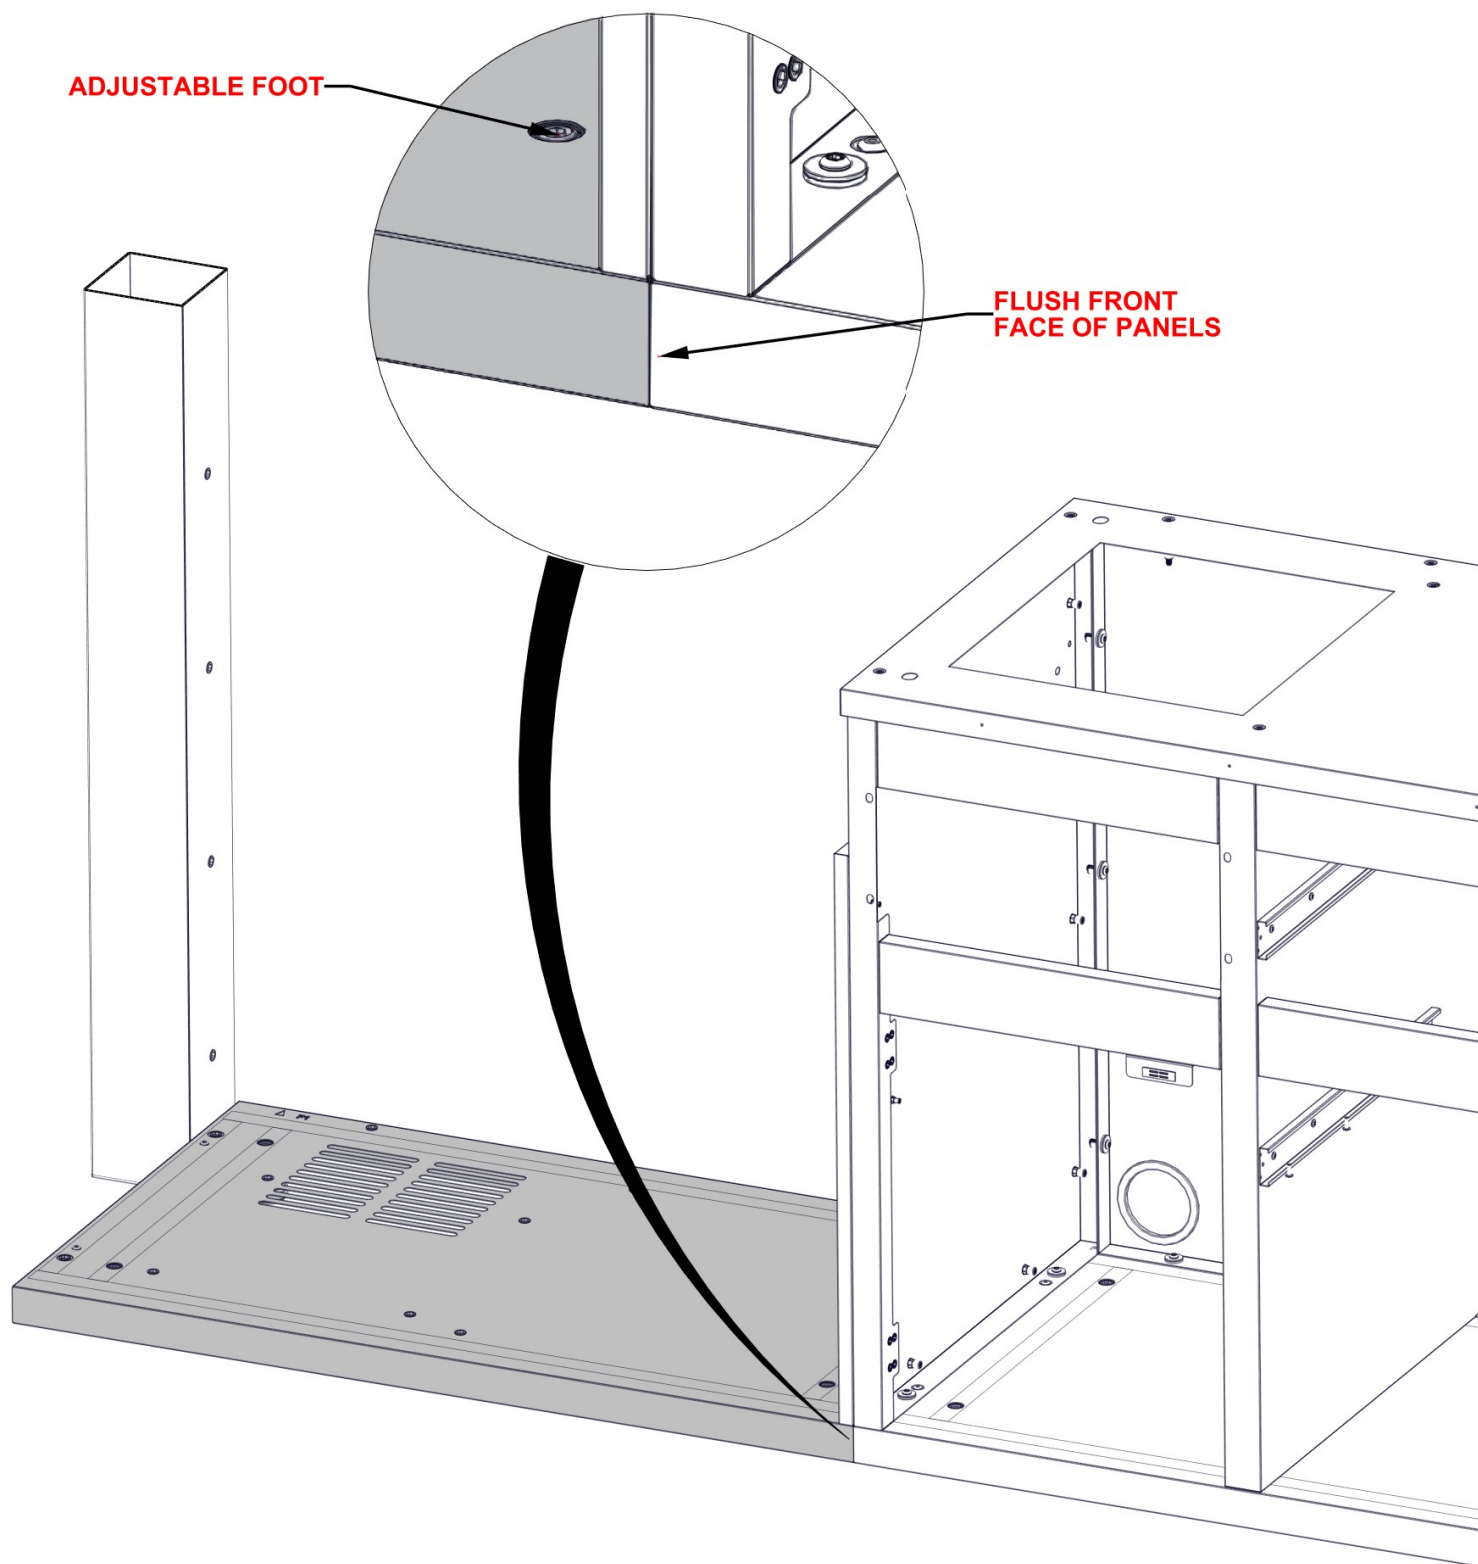


# STEP 78 - PIZZA OVEN CABINET ASSEMBLY

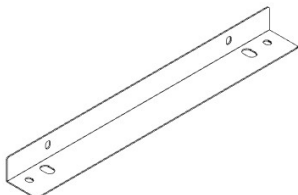


Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

**A6 ANGLED BRACKET - A4M03053**  
(x1) 1 3/8"x1 15/16"x17 1/8" (35x50x435)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

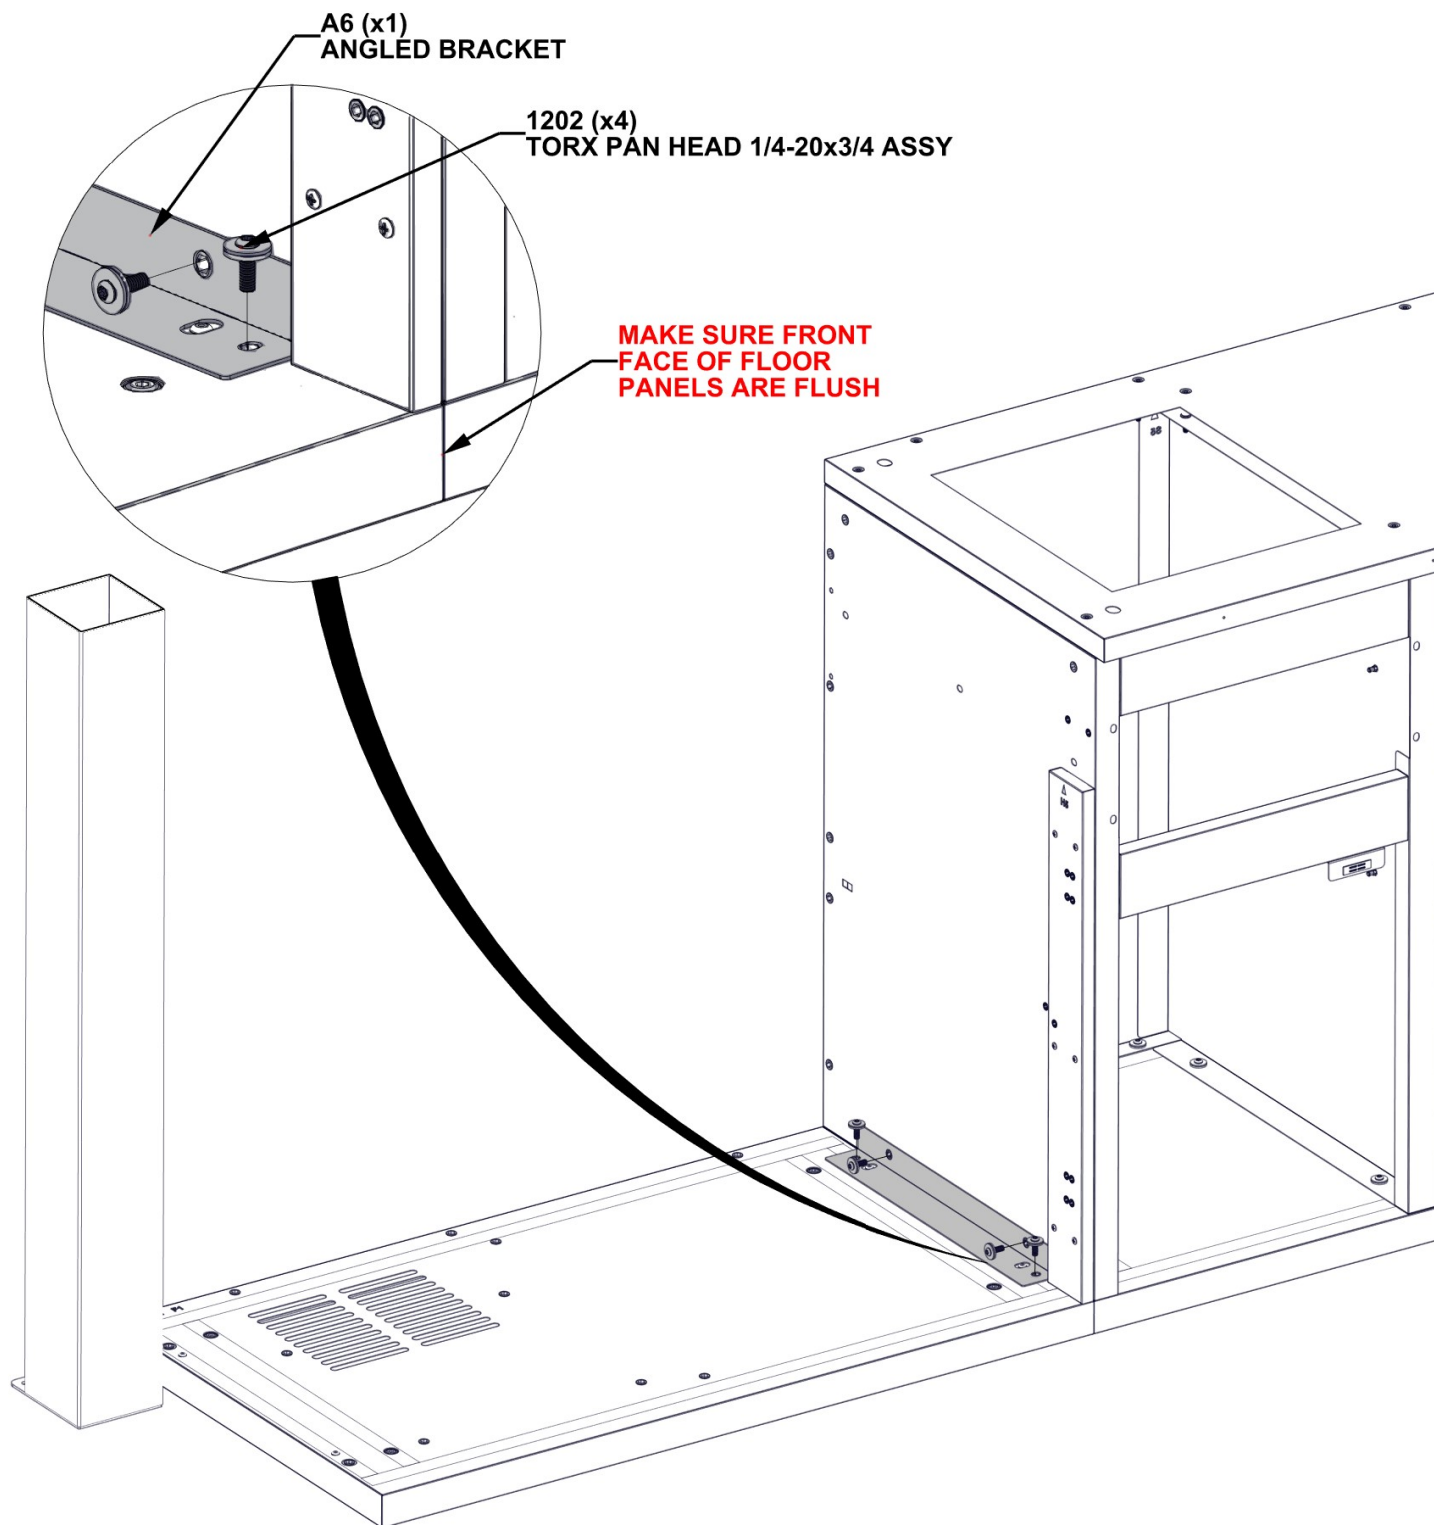


# STEP 79 - PIZZA OVEN CABINET ASSEMBLY

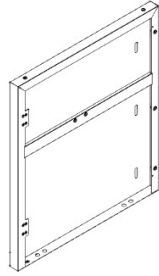


Qty	PartNo	Description
5	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

S1 PIZZA OVEN CABINET SIDE PANEL ASSEMBLY - A4M03540  
 (x1) 26 9/16"x23 3/8"x1 3/8" (35x594x675)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

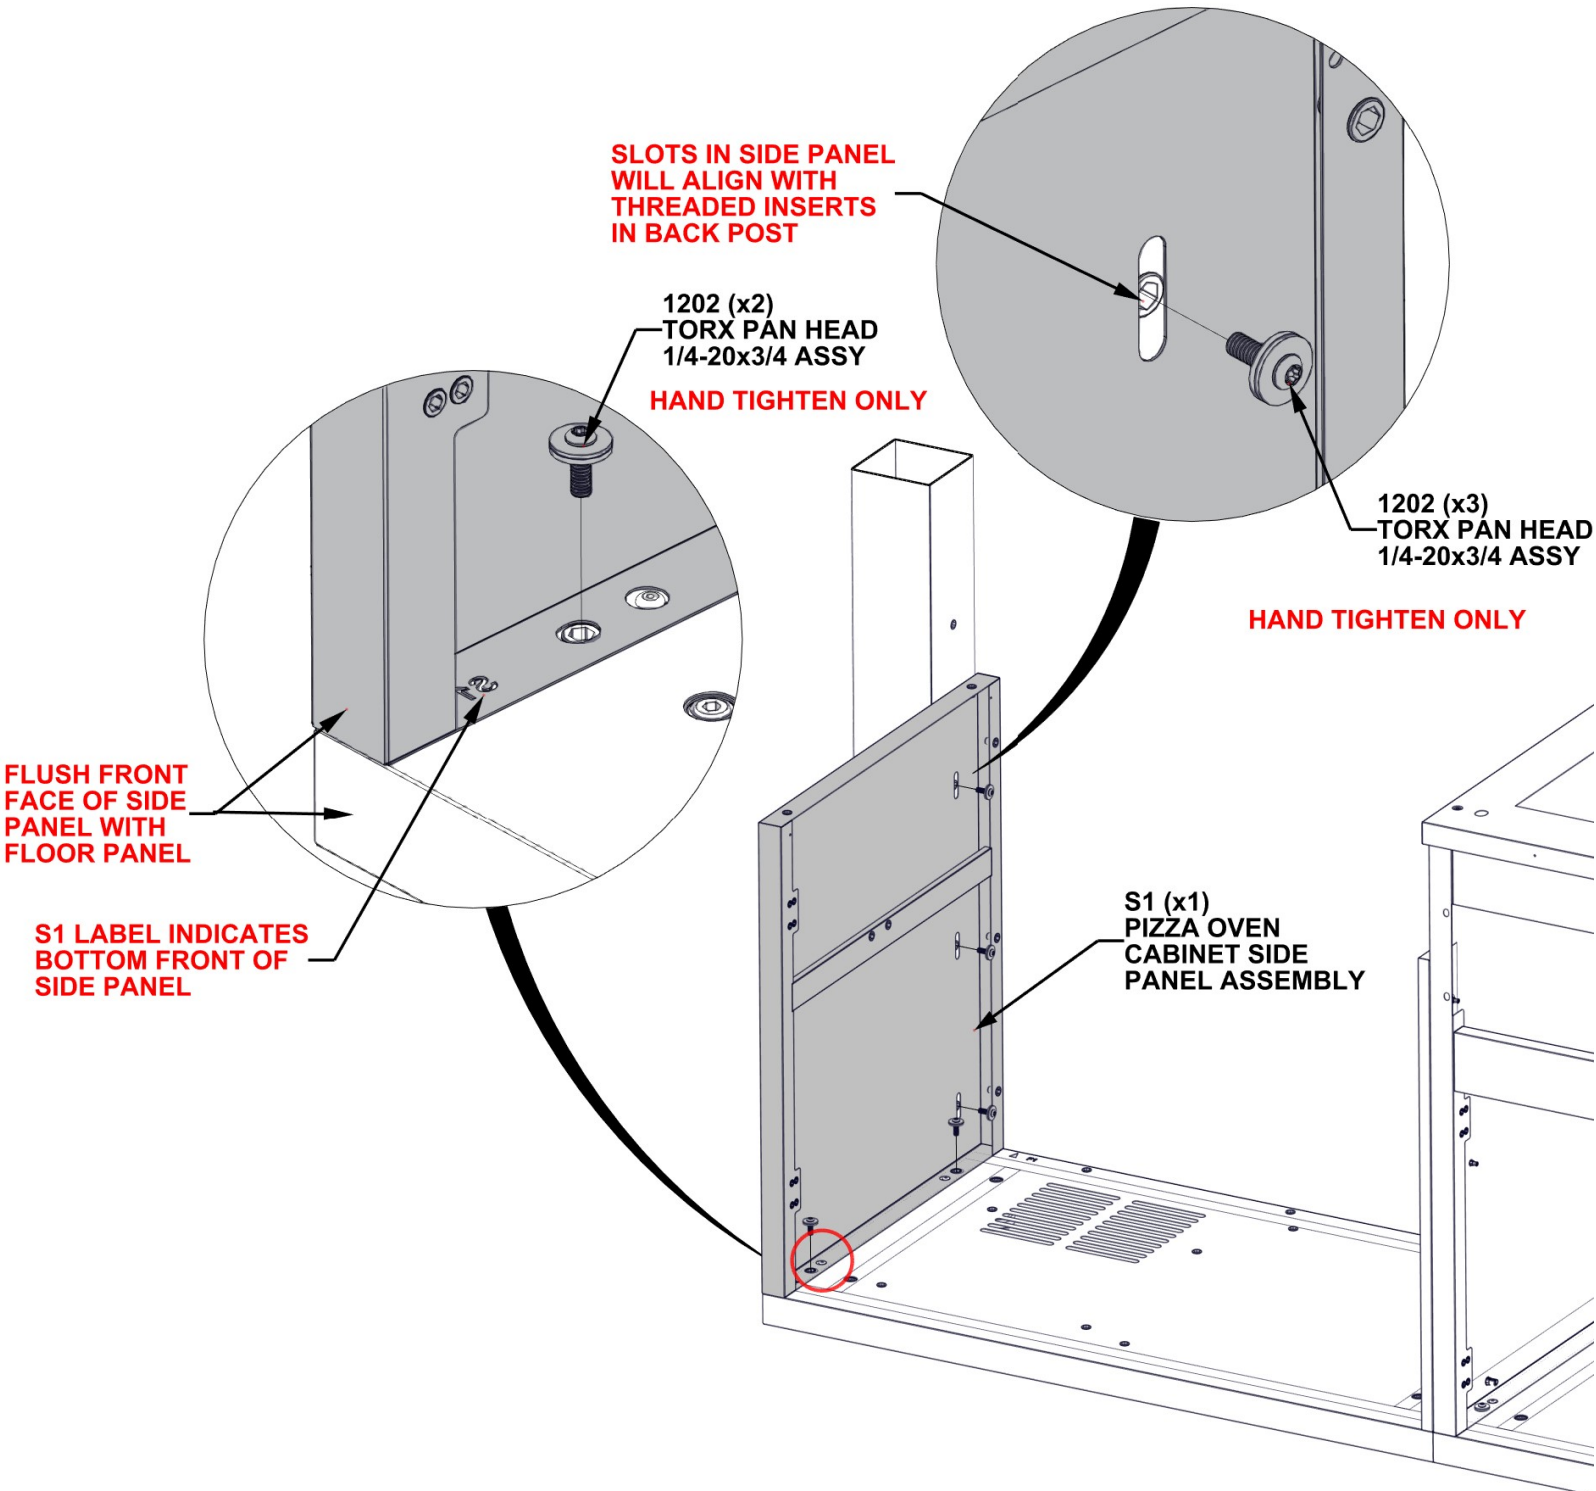


# STEP 80 - PIZZA OVEN CABINET BACK PANEL ASSEMBLY

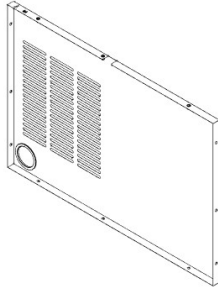


Qty	PartNo	Description
9	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

G1 PIZZA OVEN CABINET BACK PANEL ASSEMBLY - A4M03542  
(x1) 38 3/4"x26 1/2"x1 3/16" (30x673.5x984)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

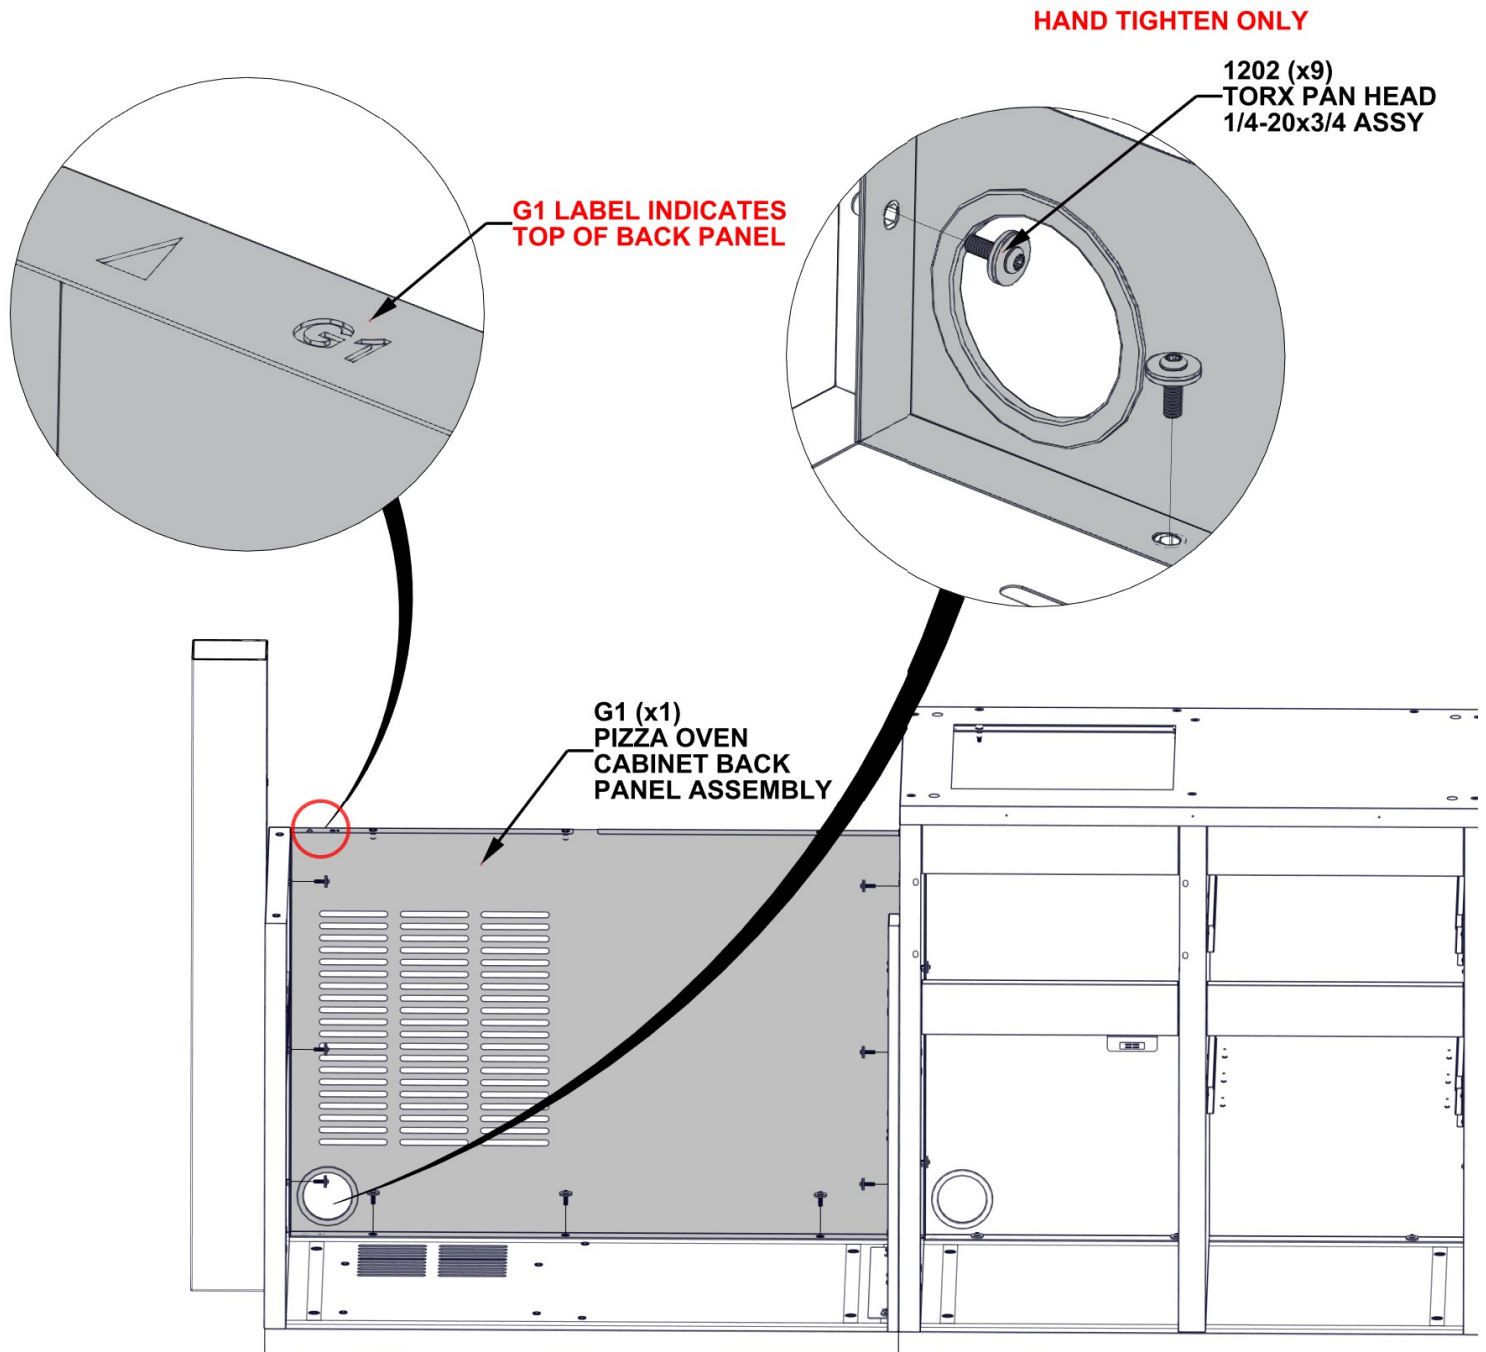


# STEP 81 - PIZZA OVEN CABINET ASSEMBLY

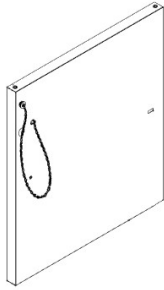


Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

S2 PIZZA OVEN CABINET SIDE PANEL ASSEMBLY M - A4M03545  
 (x1) 26 1/2"x23 3/8"x1 3/8" (35x593x673.5)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

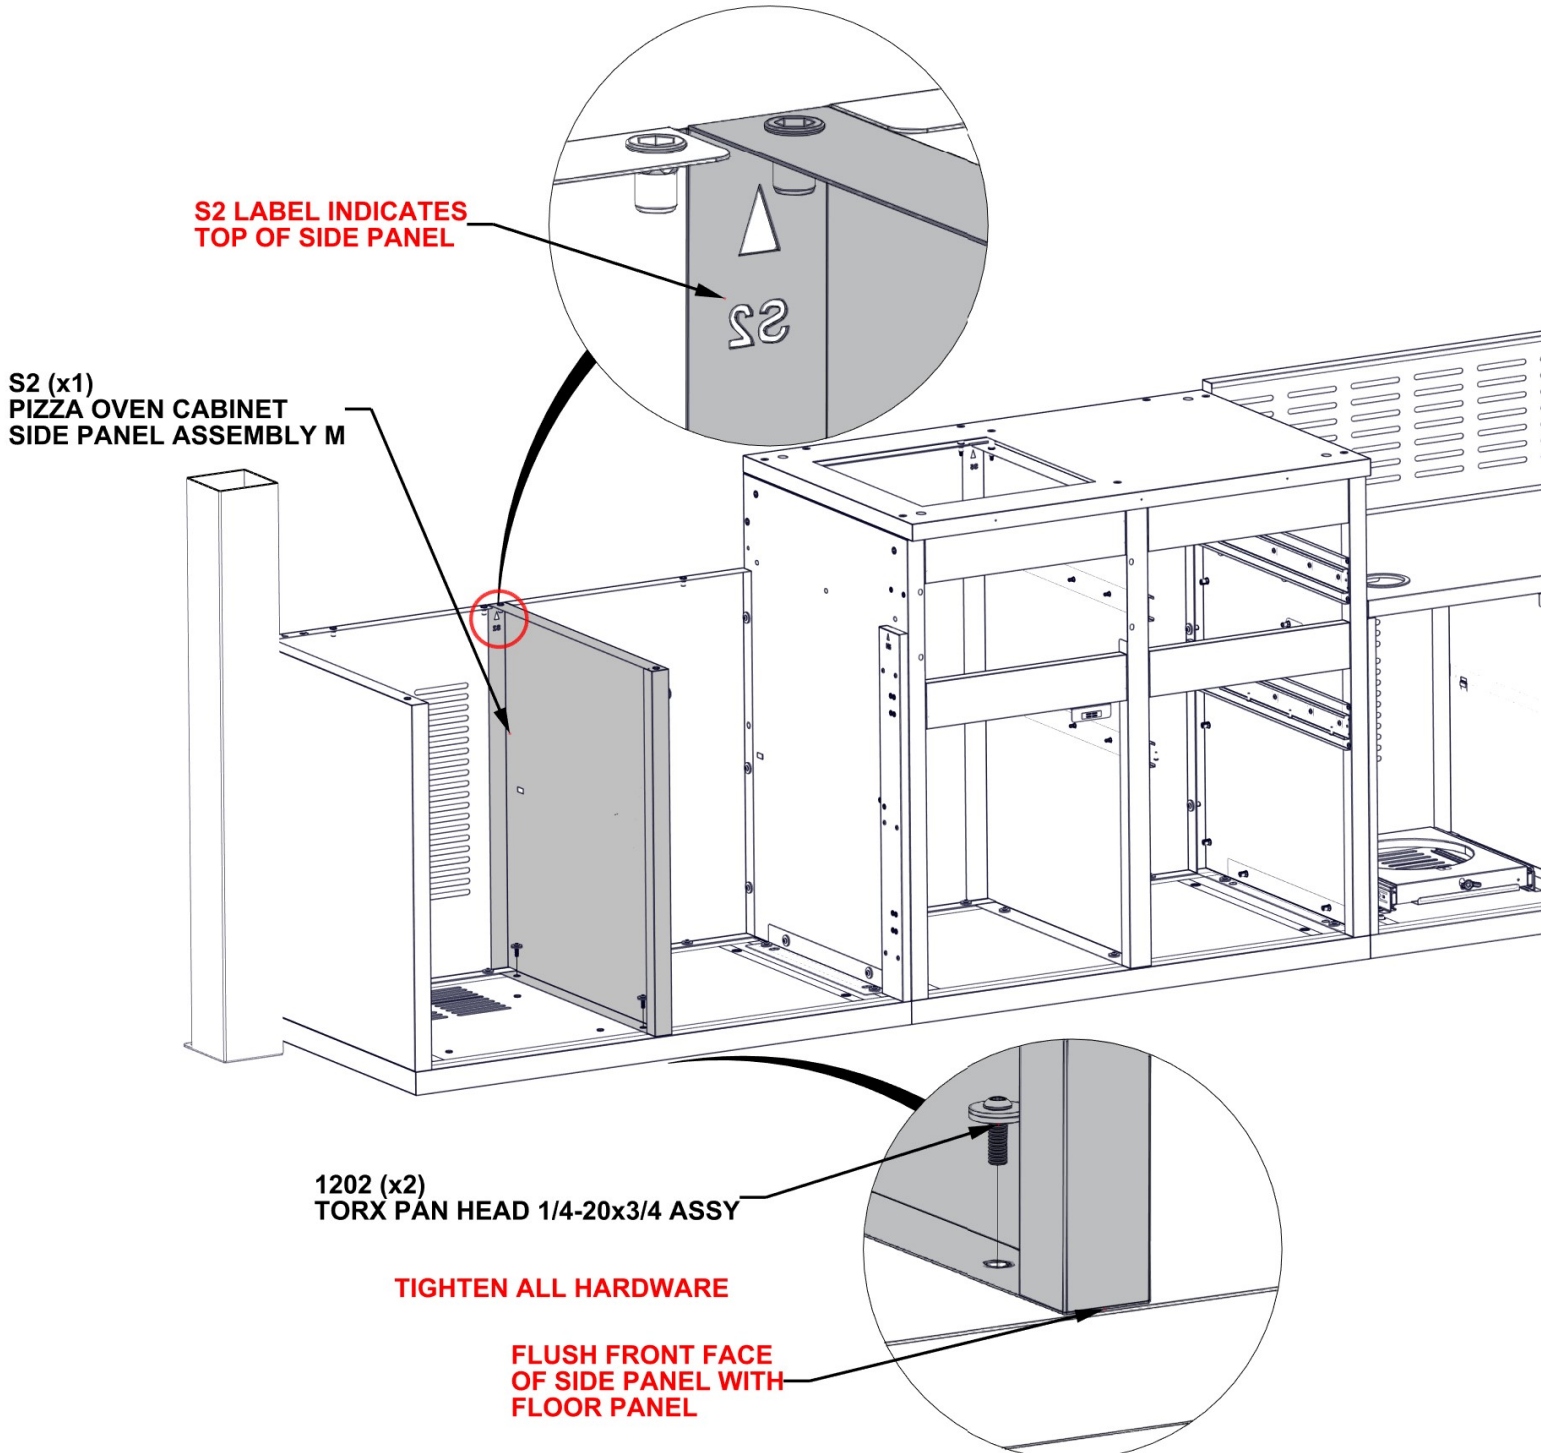


# STEP 82A - PIZZA OVEN CABINET ASSEMBLY

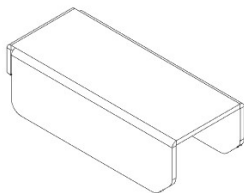


**A5 SHELF BRACKET - A4M03141**  
(x2) 5/8"x7/8"x2 1/16" (16x22x53)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- ATTACH SHELF BRACKETS ON BOTH SIDES OF CENTER PIZZA OVEN CABINET.

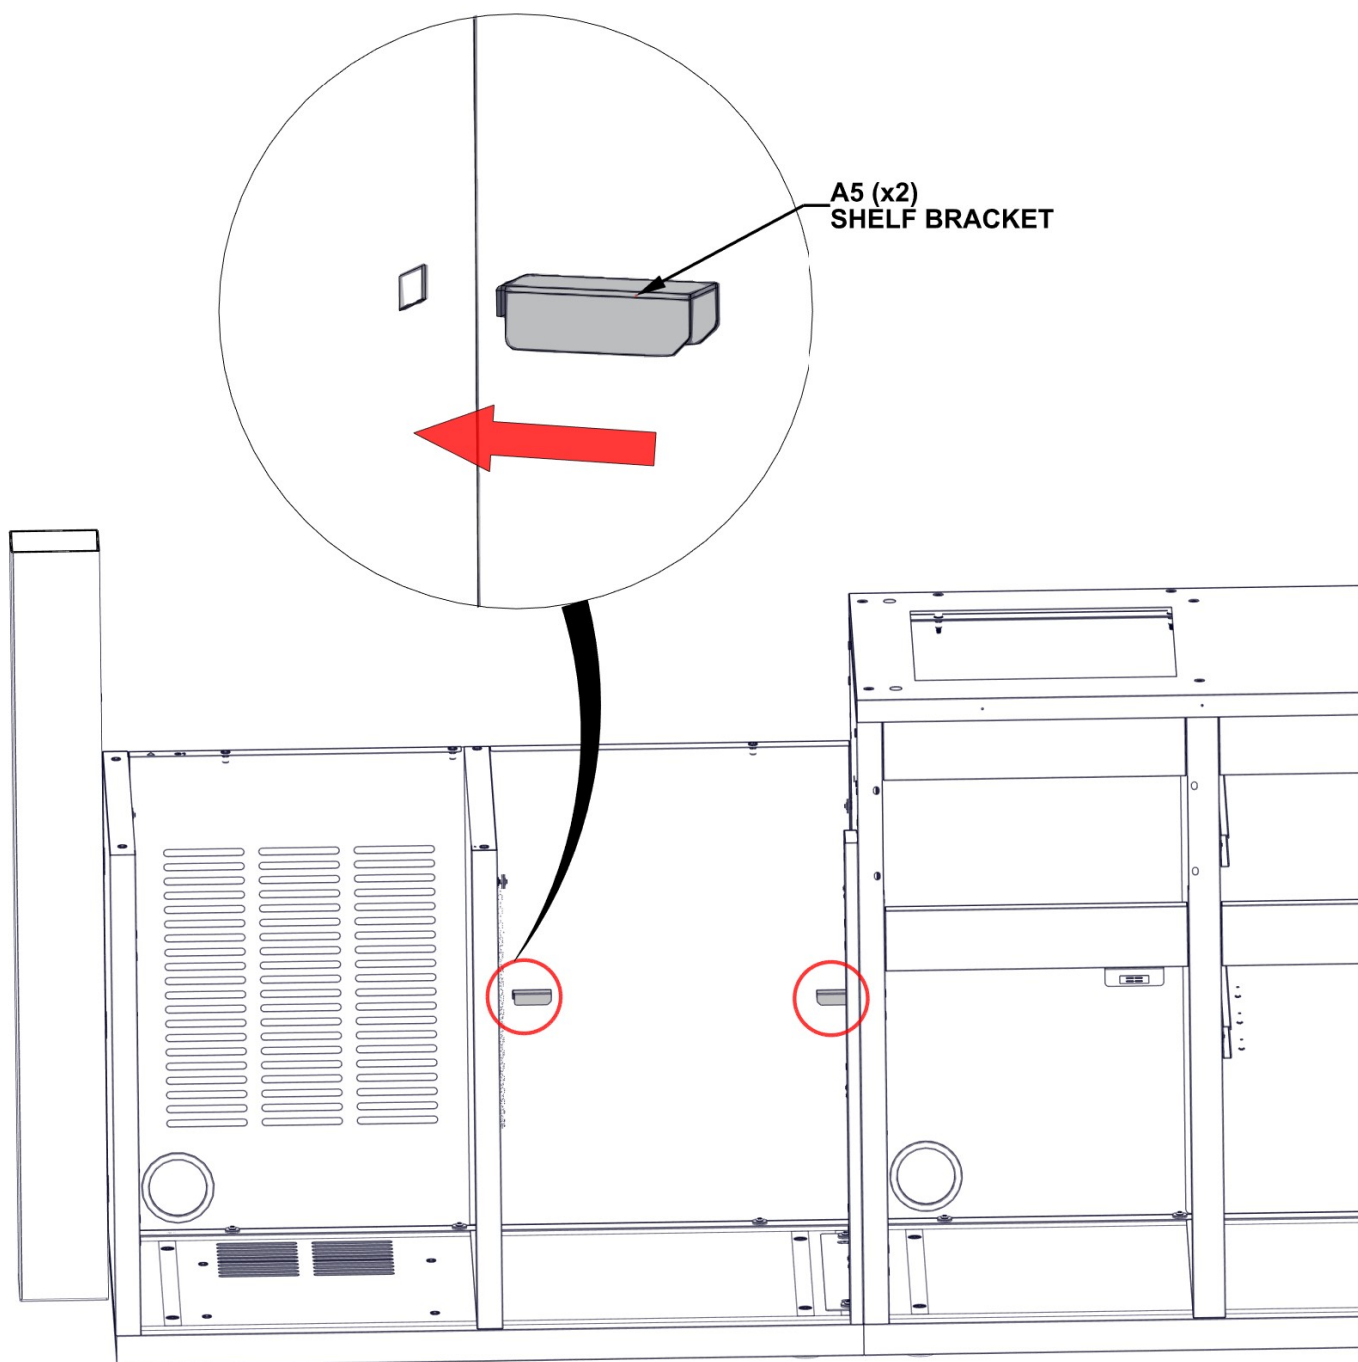


# STEP 82B - PIZZA OVEN CABINET ASSEMBLY

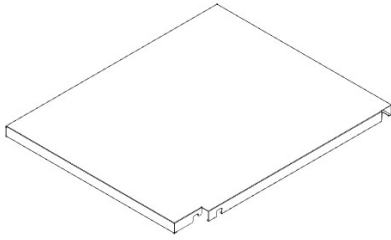


Qty	PartNo	Description
3	H101289	PAN HEAD SCREW 8-32x1/2" SS

L1 PIZZA OVEN CABINET SHELF - A4M03548  
(x1) 23 1/4"x19 5/16"x1" (25.00x490.50x591.00)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- ALIGN SHELF WITH THREADED INSERTS AND ATTACH HARDWARE TO FASTEN IN PLACE.

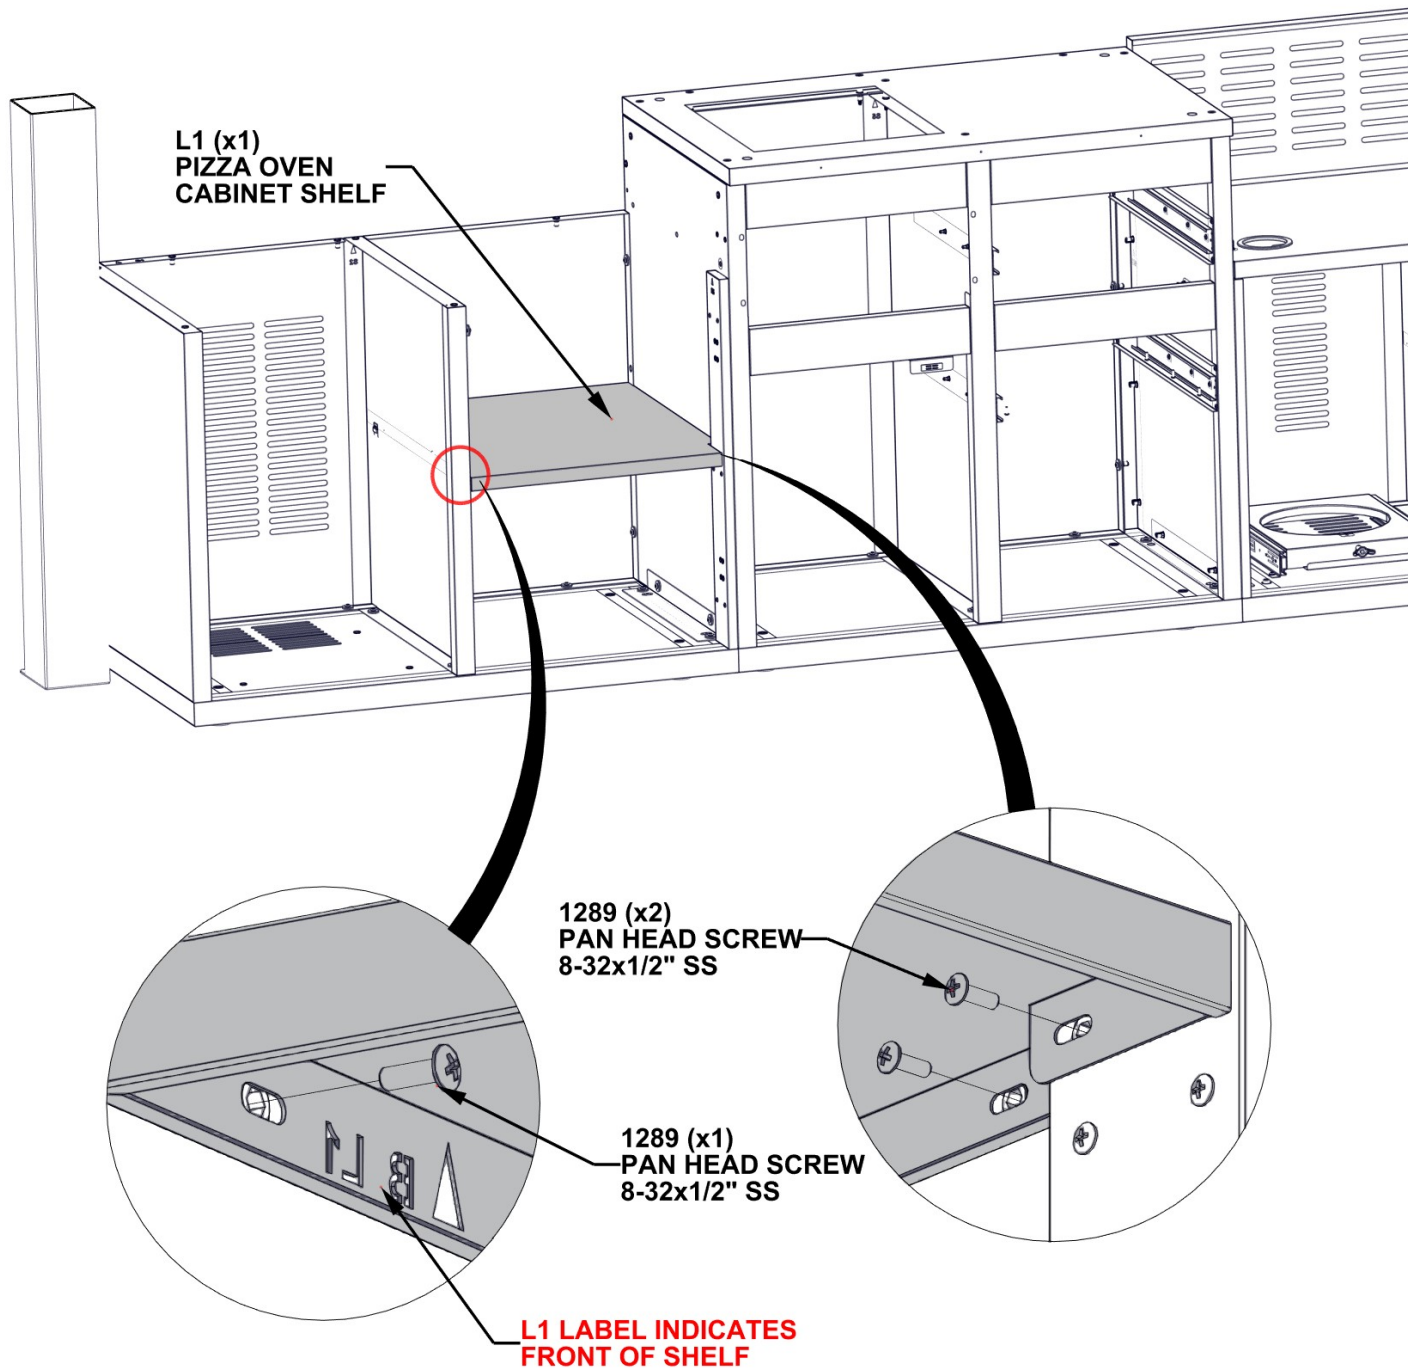


# STEP 83 - PIZZA OVEN CABINET ASSEMBLY

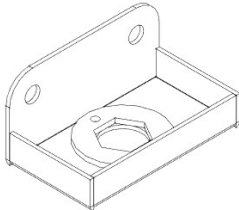


**A9 HOSE BRACKET ASSEMBLY - A4M03060**  
 (x1) 1 1/4"x1 7/16"x2 9/16" (31.5x36.5x65)

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

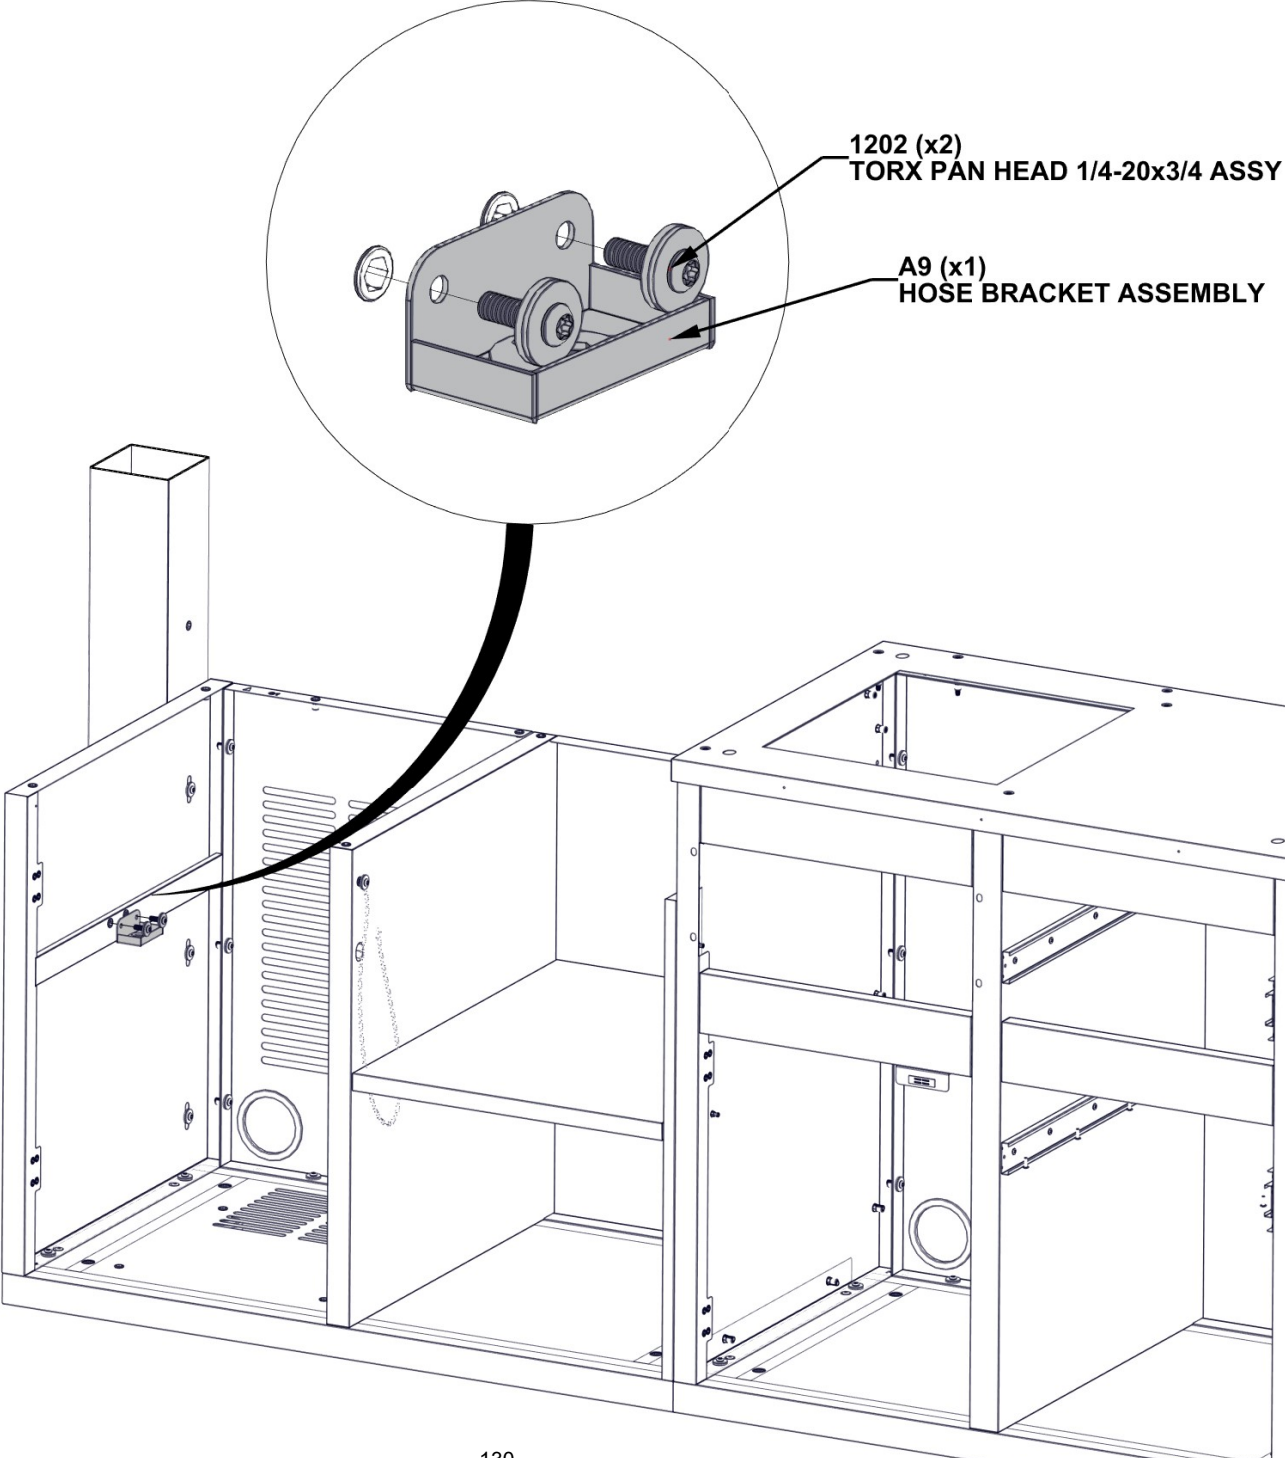


# STEP 84 - GRILL CABINET ASSEMBLY

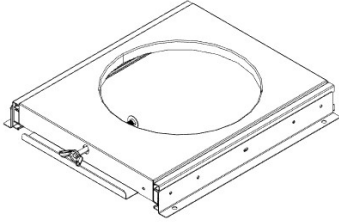


Qty	PartNo	Description
4	H101292	TORX PAN HEAD 1/4-20x13/32"

**A13 GAS TANK HOLDER ASSEMBLY - A4M03047**  
 (x1) 1 15/16"x12 7/8"x14 3/4" (49x327x374)


- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

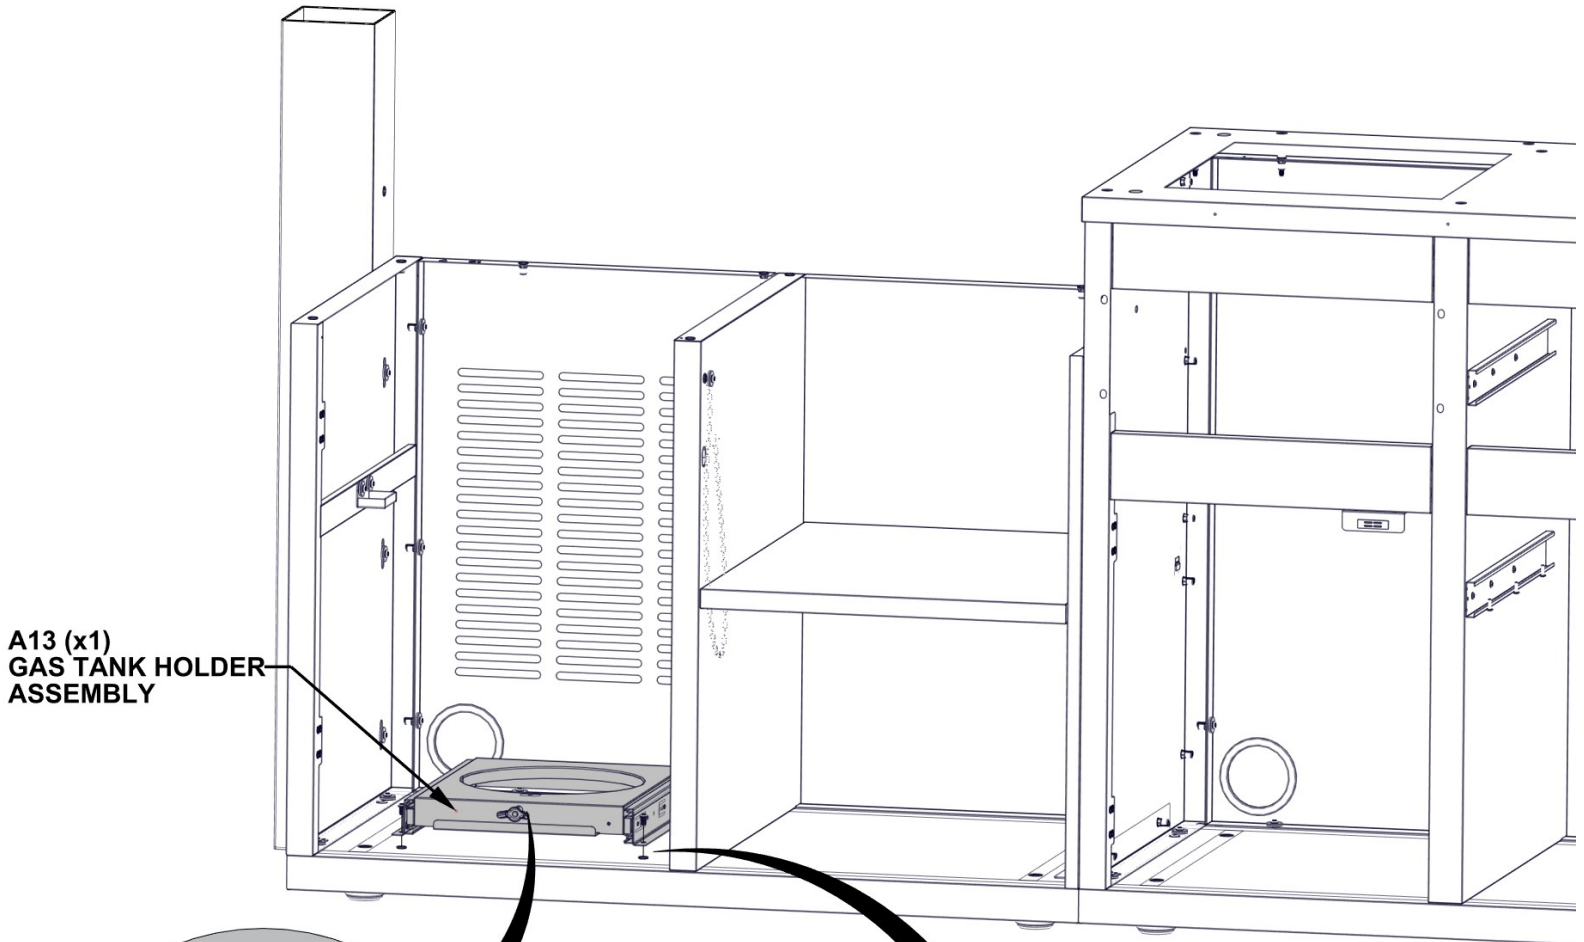

**A13 (x1)  
 GAS TANK HOLDER  
 ASSEMBLY**

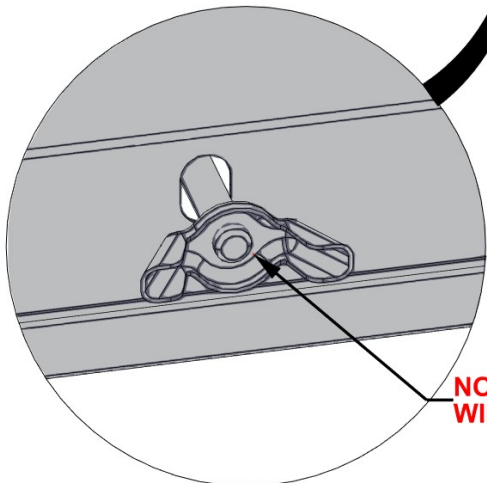


**NOTE ORIENTATION OF  
 WING NUT TOWARDS FRONT**

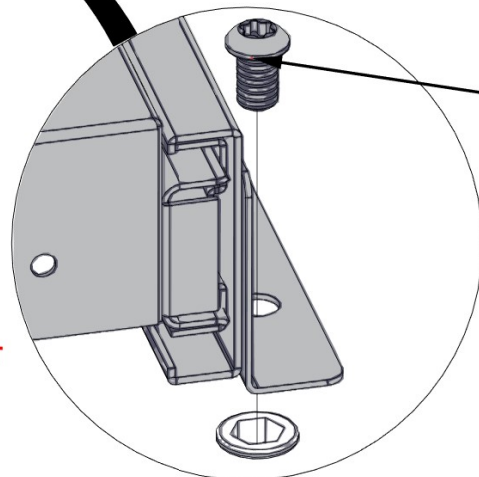


**1292 (x4)  
 TORX PAN HEAD  
 1/4-20x13/32"**

# STEP 85 - PIZZA OVEN CABINET ASSEMBLY


Qty	PartNo	Description
4	H101289	PAN HEAD SCREW 8-32x1/2" SS

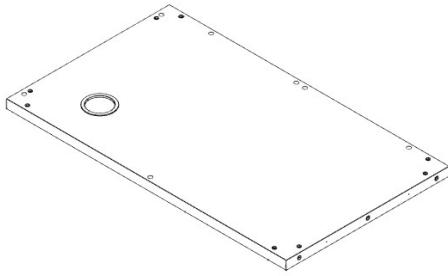


**T1 PIZZA OVEN CABINET TABLETOP ASSEMBLY - A4M03543**  
 (x1) 40 3/16"x23 3/8"x1 1/4" (32x594x1020)

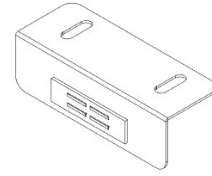

**A2 MAGNET BRACKET - A4M03026**  
 (x2) 1"x1 1/4"x3 1/8" (25x31x80)

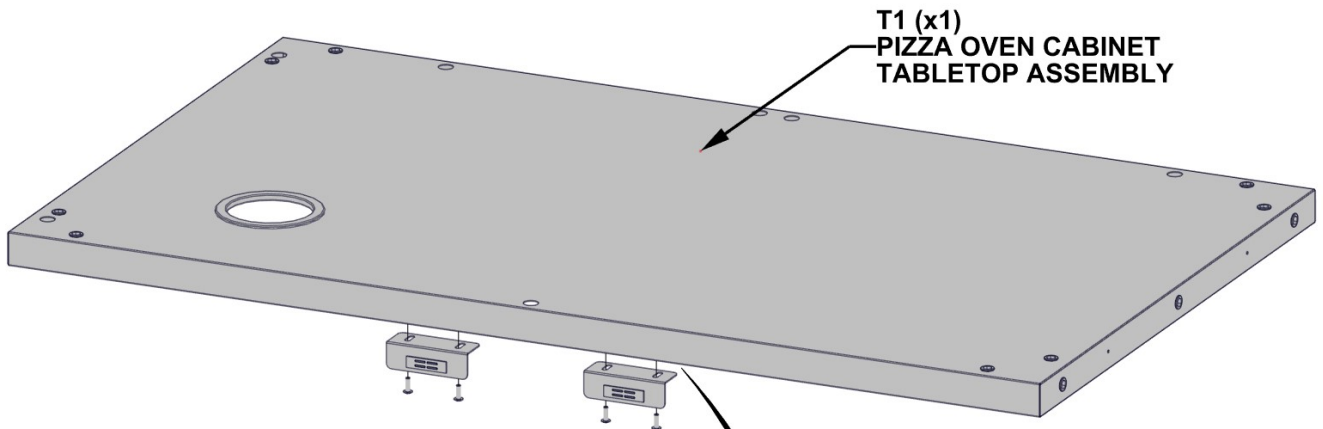


**T1 (x1)**  
**PIZZA OVEN CABINET**  
**TABLETOP ASSEMBLY**

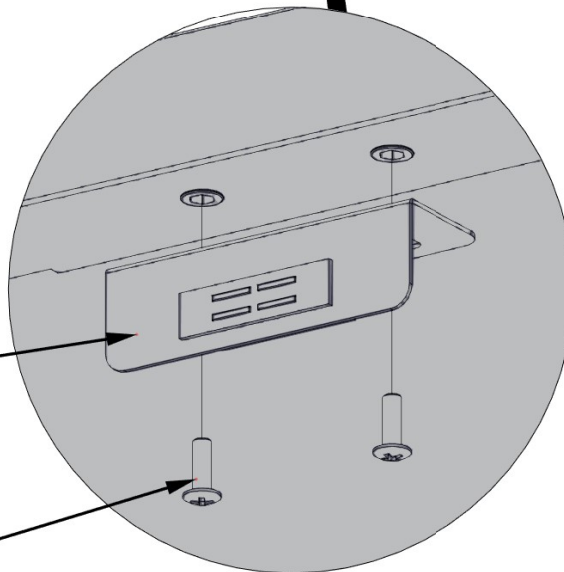

**A2 (x2)**  
**MAGNET BRACKET**

**1289 (x4)**  
**PAN HEAD SCREW 8-32x1/2" SS**


# STEP 86A - PIZZA OVEN CABINET ASSEMBLY

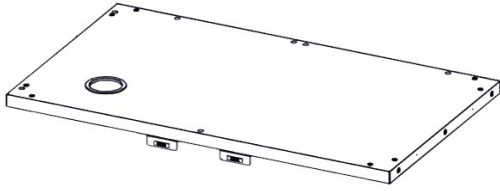


PIZZA OVEN TABLETOP  
ASSEMBLY FROM STEP 85

Qty	PartNo	Description
3	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- **HARDWARE ATTACHES ON INSIDE OF CABINET**

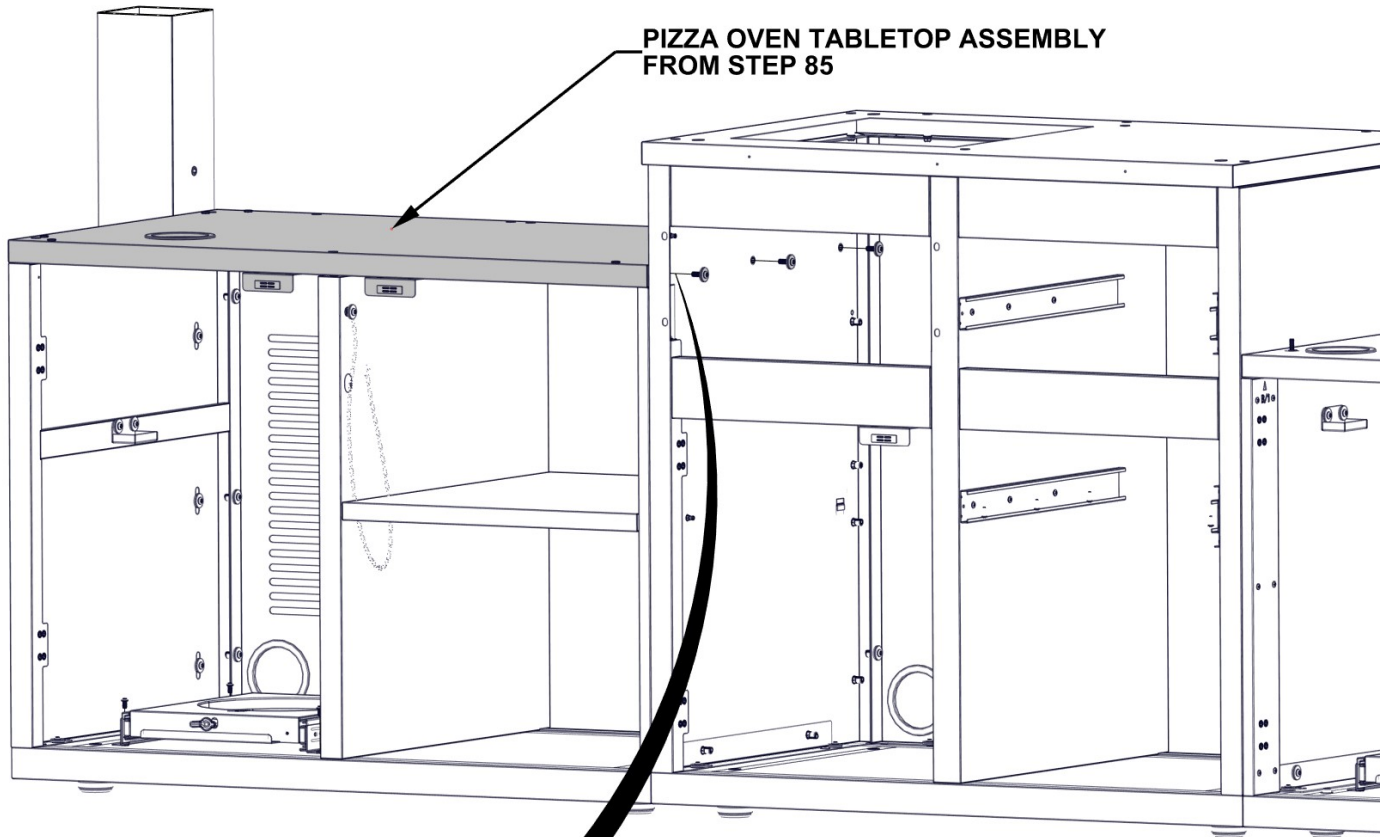

PIZZA OVEN TABLETOP ASSEMBLY  
FROM STEP 85

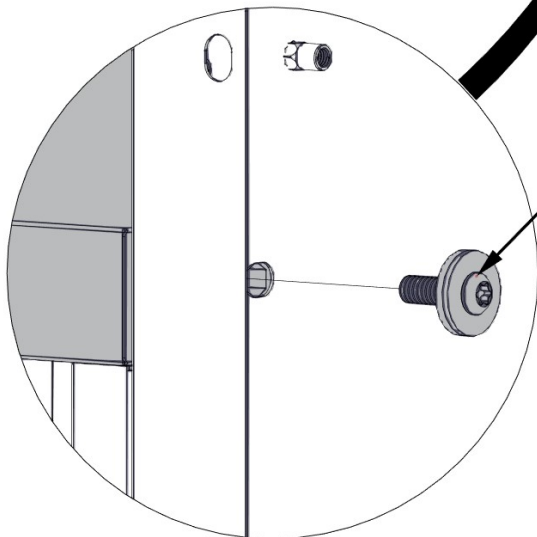


1202 (x3)  
TORX PAN HEAD 1/4-20x3/4 ASSY

**HAND TIGHTEN ONLY**


# STEP 86B - PIZZA OVEN CABINET ASSEMBLY

Qty	PartNo	Description
7	H101103	TORX SOCKET SCREW 1/4-20

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

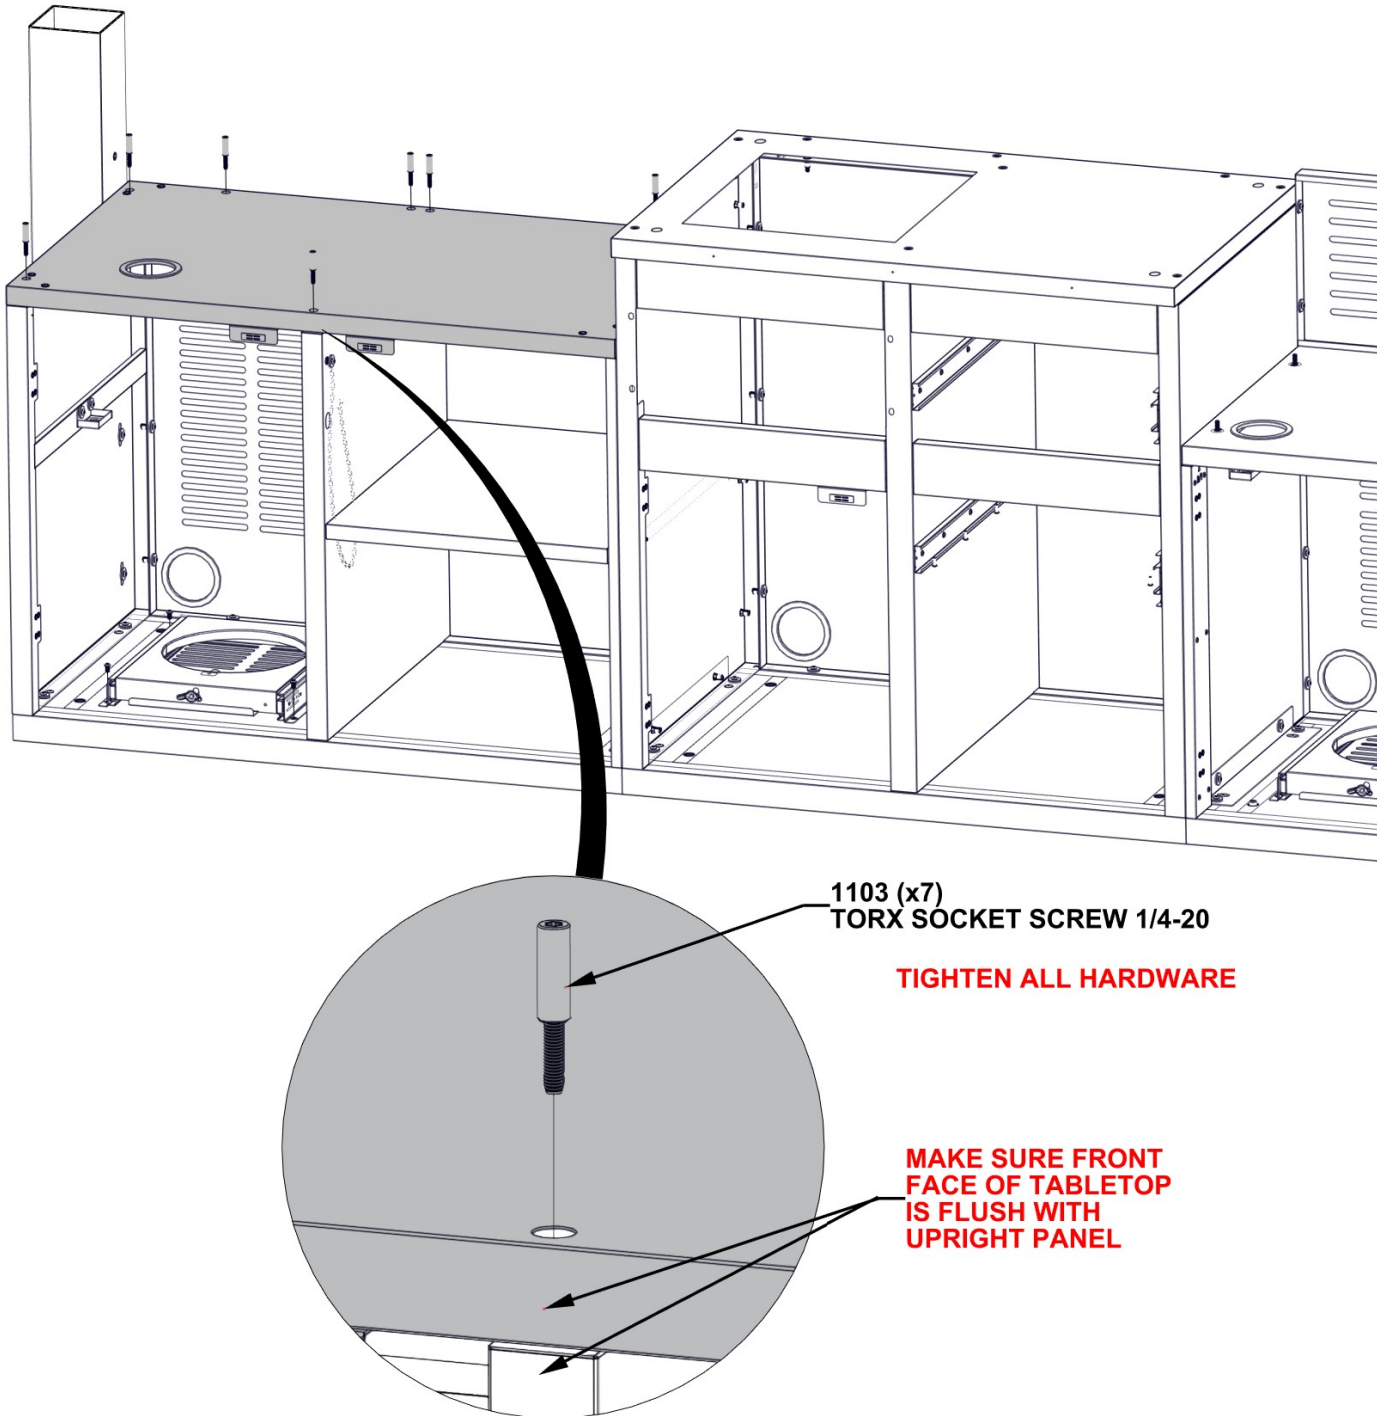


# STEP 87 - PIZZA OVEN CABINET ASSEMBLY

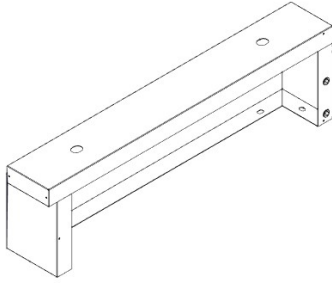


Qty	PartNo	Description
5	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

**T5 PIZZA OVEN CABINET MARBLE PANEL ASSEMBLY L - A4M03549**  
 (x1) 24 1/8"x4 5/16"x6 3/4" (109x172.2x612)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

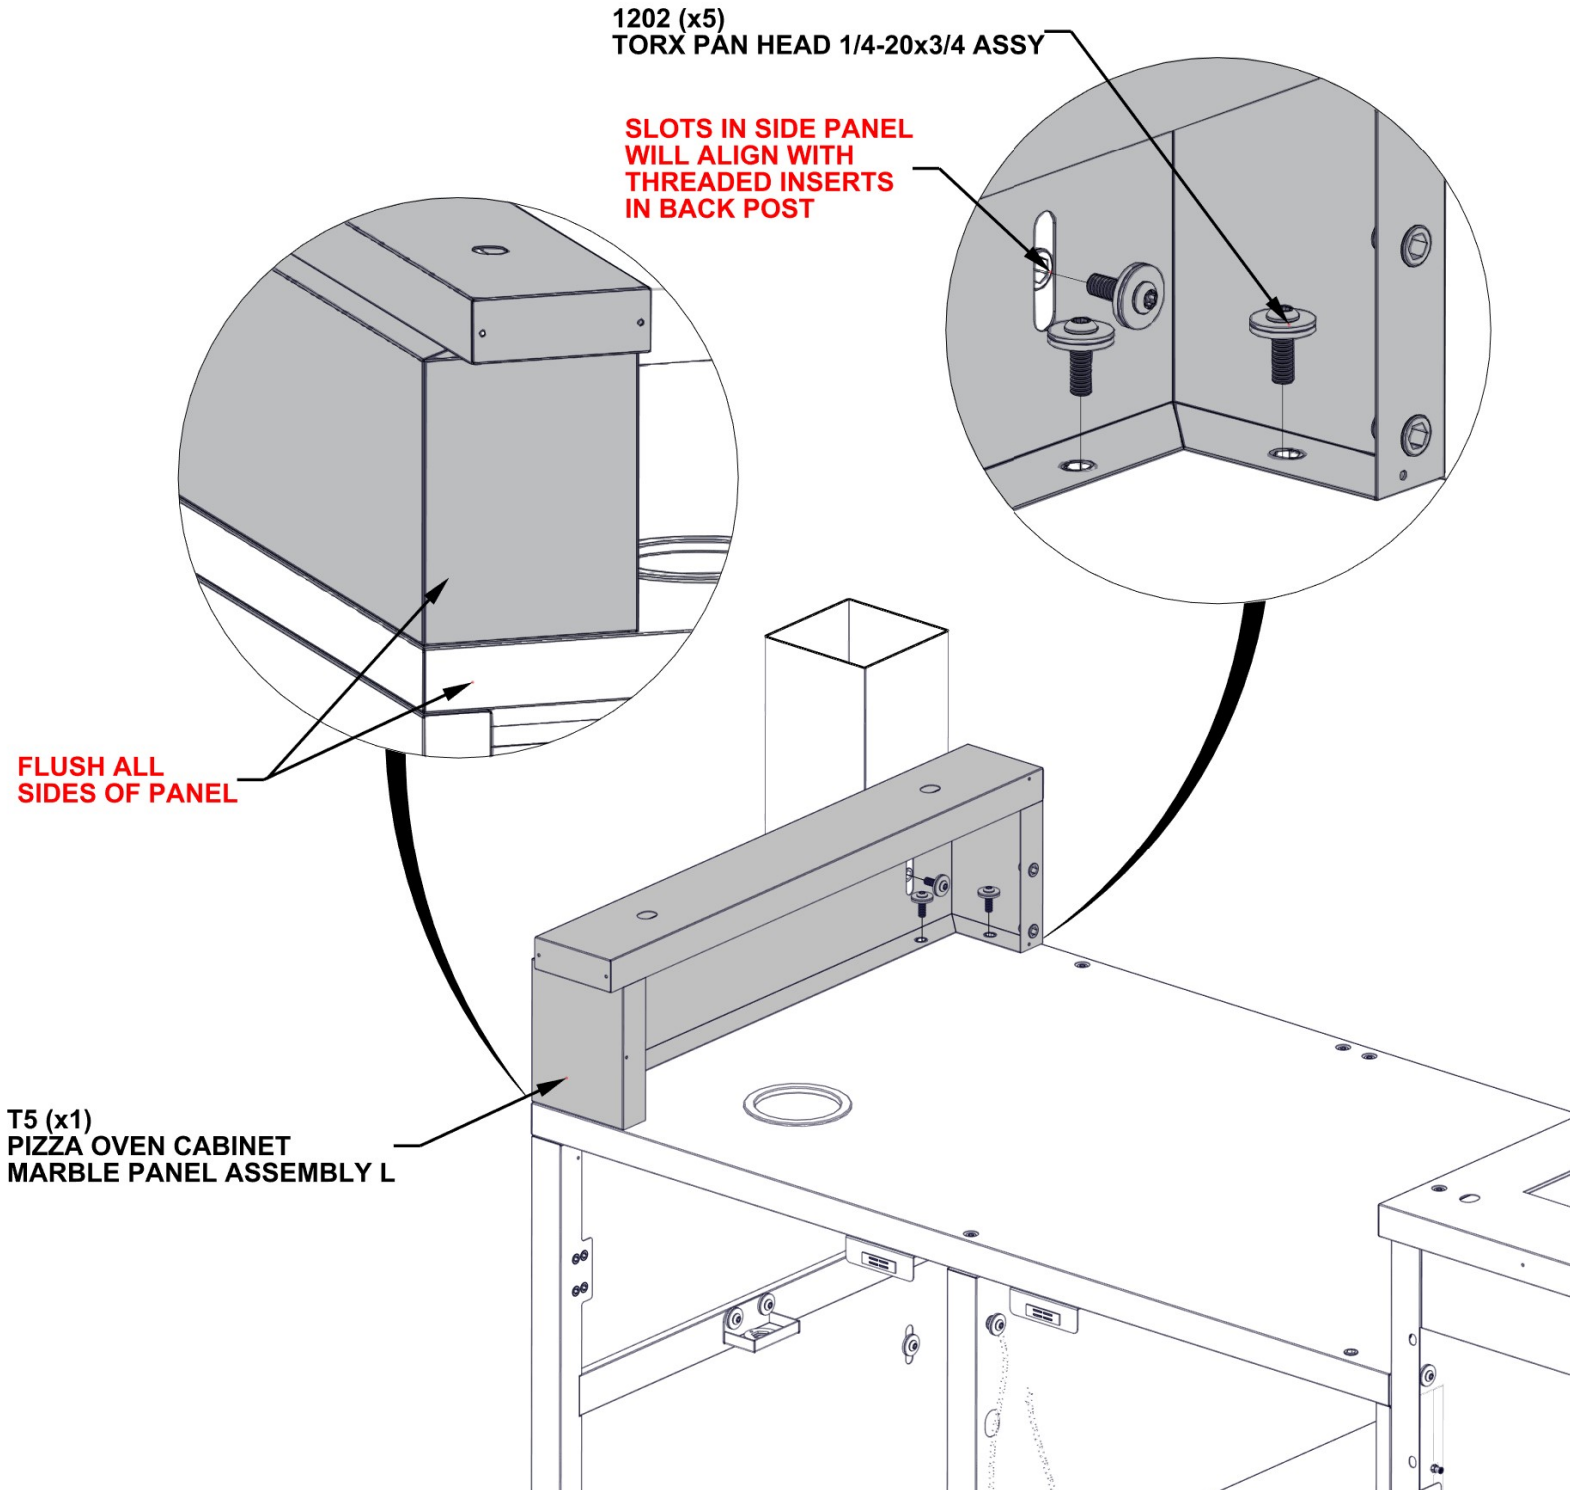


# STEP 88 - PIZZA OVEN CABINET ASSEMBLY

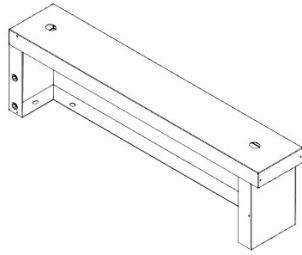


Qty	PartNo	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

T3 PIZZA OVEN CABINET MARBLE PANEL ASSEMBLY R - A4M03551  
(x1) 612x4 5/16"x6 3/4" (109x172.2x612)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

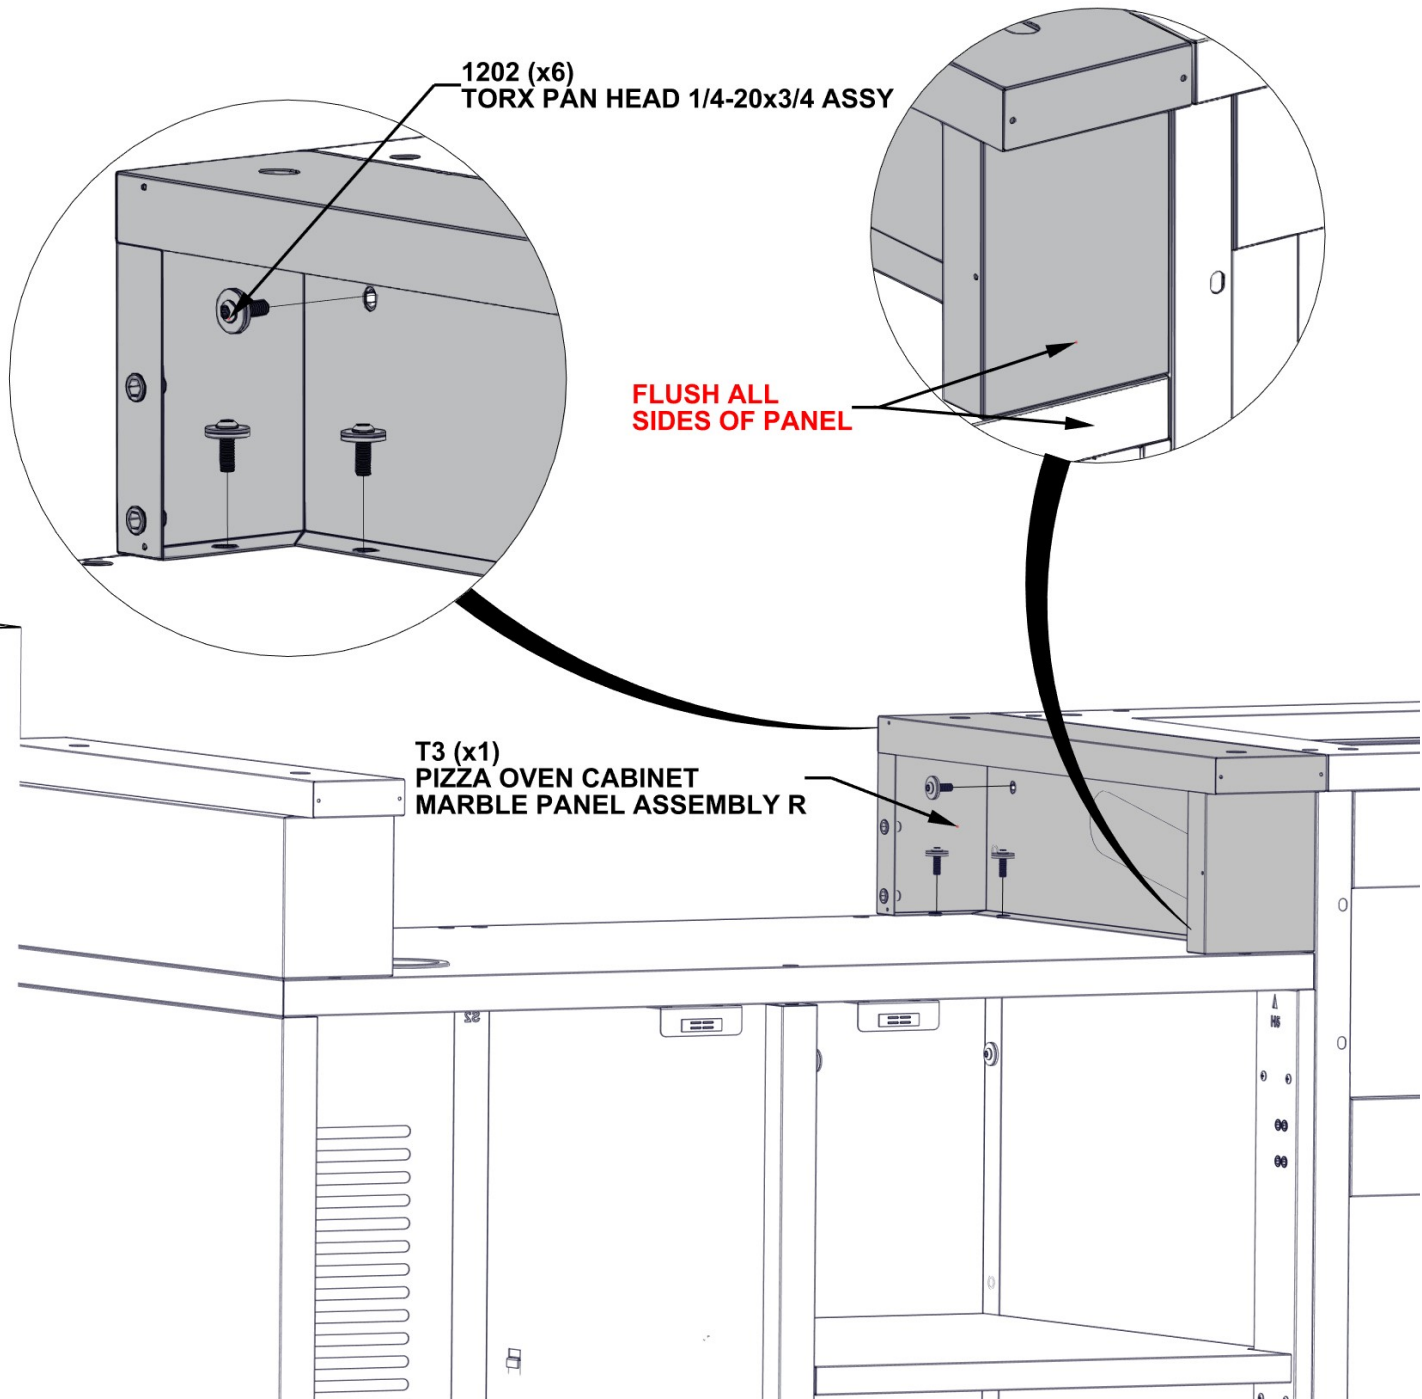


# STEP 89 - PIZZA OVEN CABINET ASSEMBLY

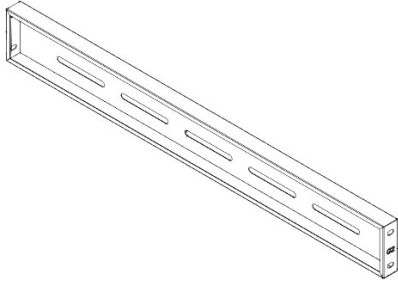

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY


O8 PIZZA OVEN VENTILATION PANEL - A4M03078  
(x1) 1 3/16"x3 3/4"x31 7/16" (30x95x798)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

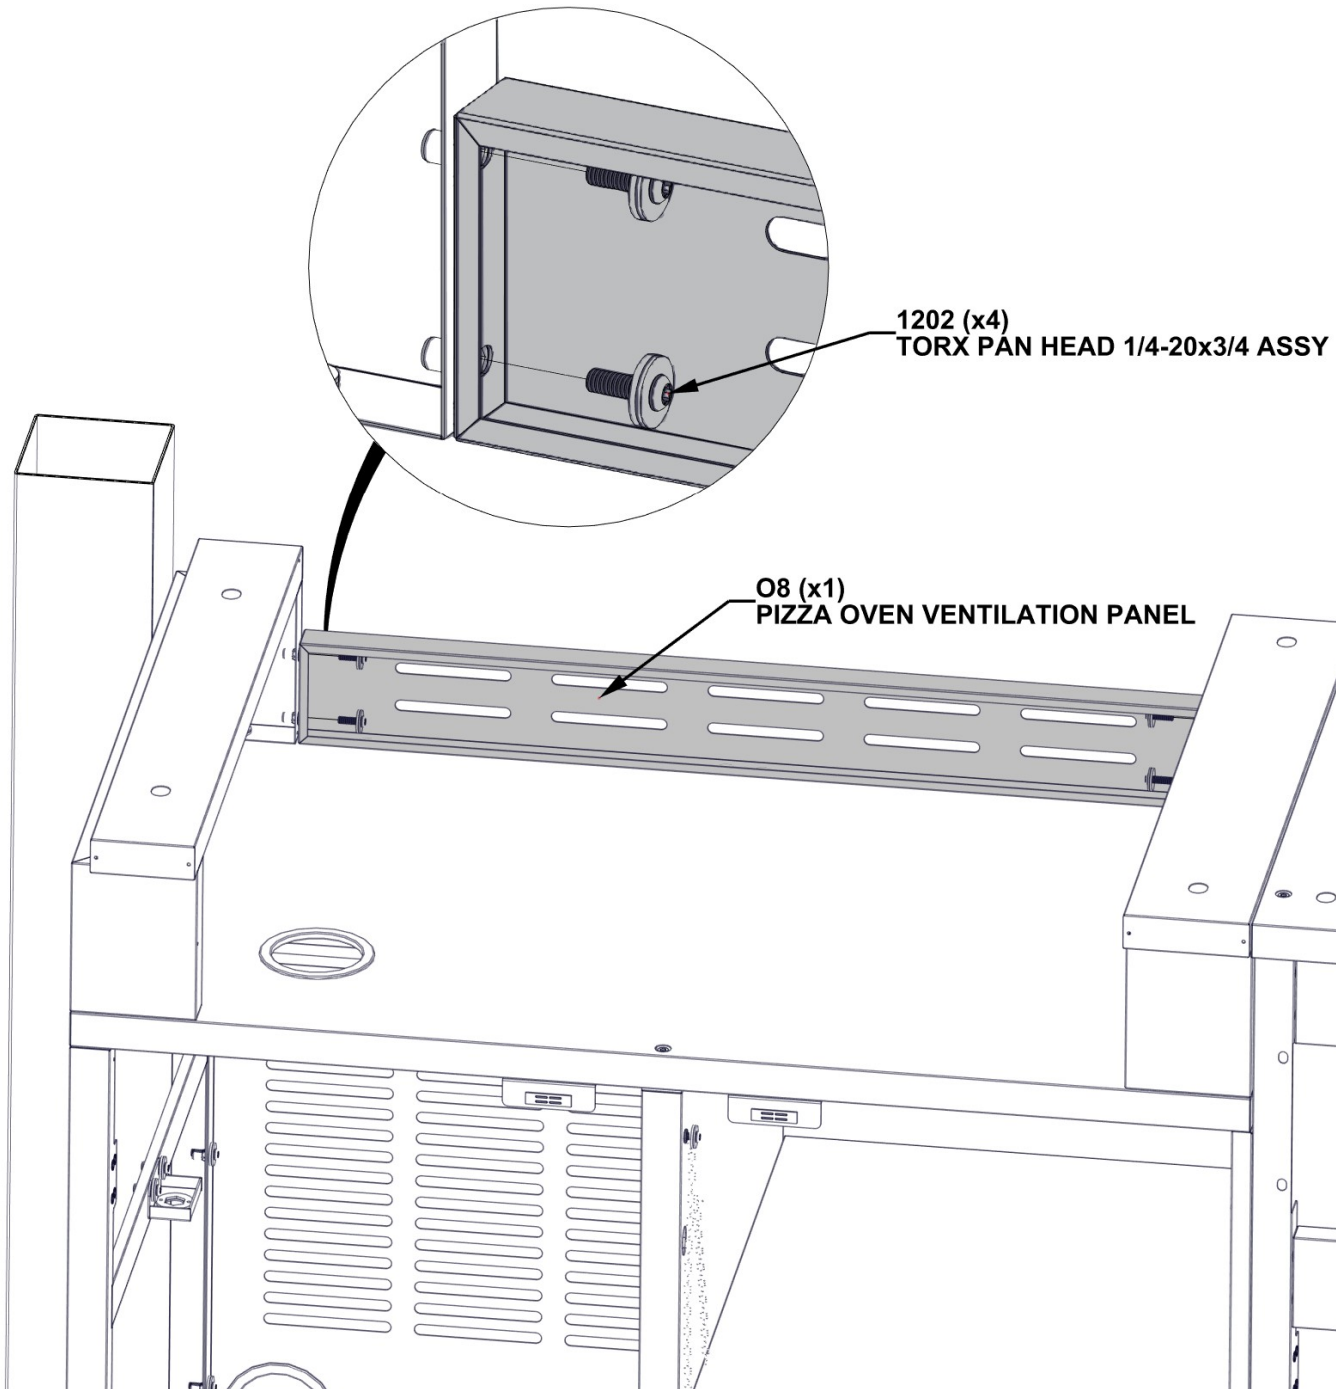


# STEP 90 - SINK CABINET FALSE PANEL ASSEMBLY


Qty	PartNo	Description
2	H101289	PAN HEAD SCREW 8-32x1/2" SS

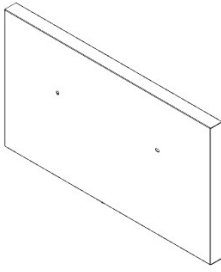


**D5 SINK CABINET TRIM PANEL - A4M03576**  
 (x1) 17 13/16"x10 1/4"x1" (26x260x452)

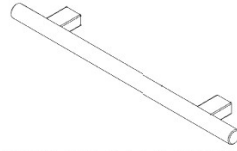

**H2 STAINLESS STEEL HANDLE - A4M03024**  
 (x1) 5/8"x1 9/16"x11 13/16" (16x40x300)

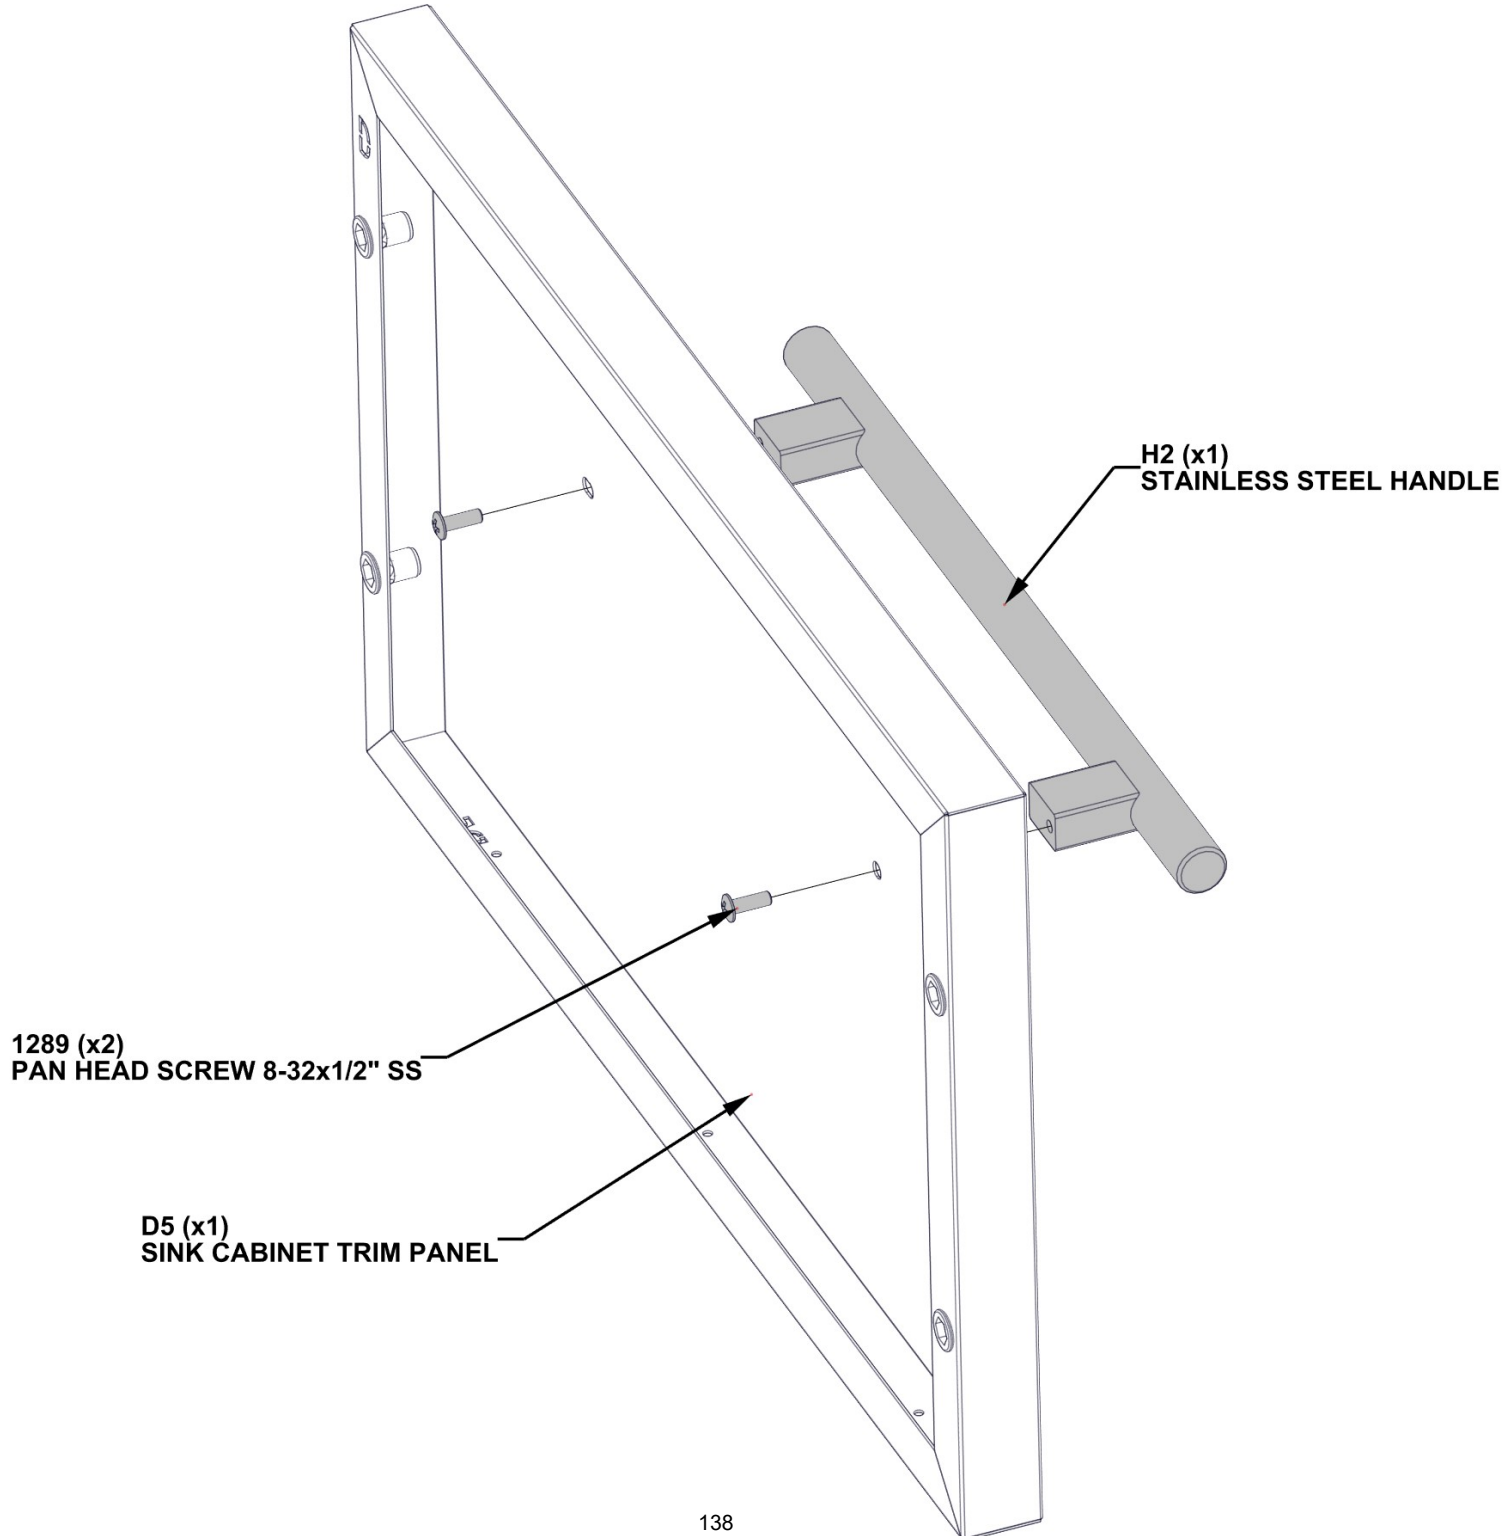


# STEP 91 - SINK CABINET FALSE PANEL ATTACHMENT

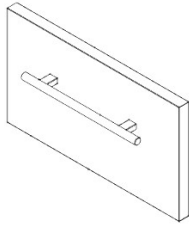

FALSE PANEL ASSEMBLY  
FROM STEP 90


Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- **HARDWARE ATTACHES ON INSIDE OF CABINET.**

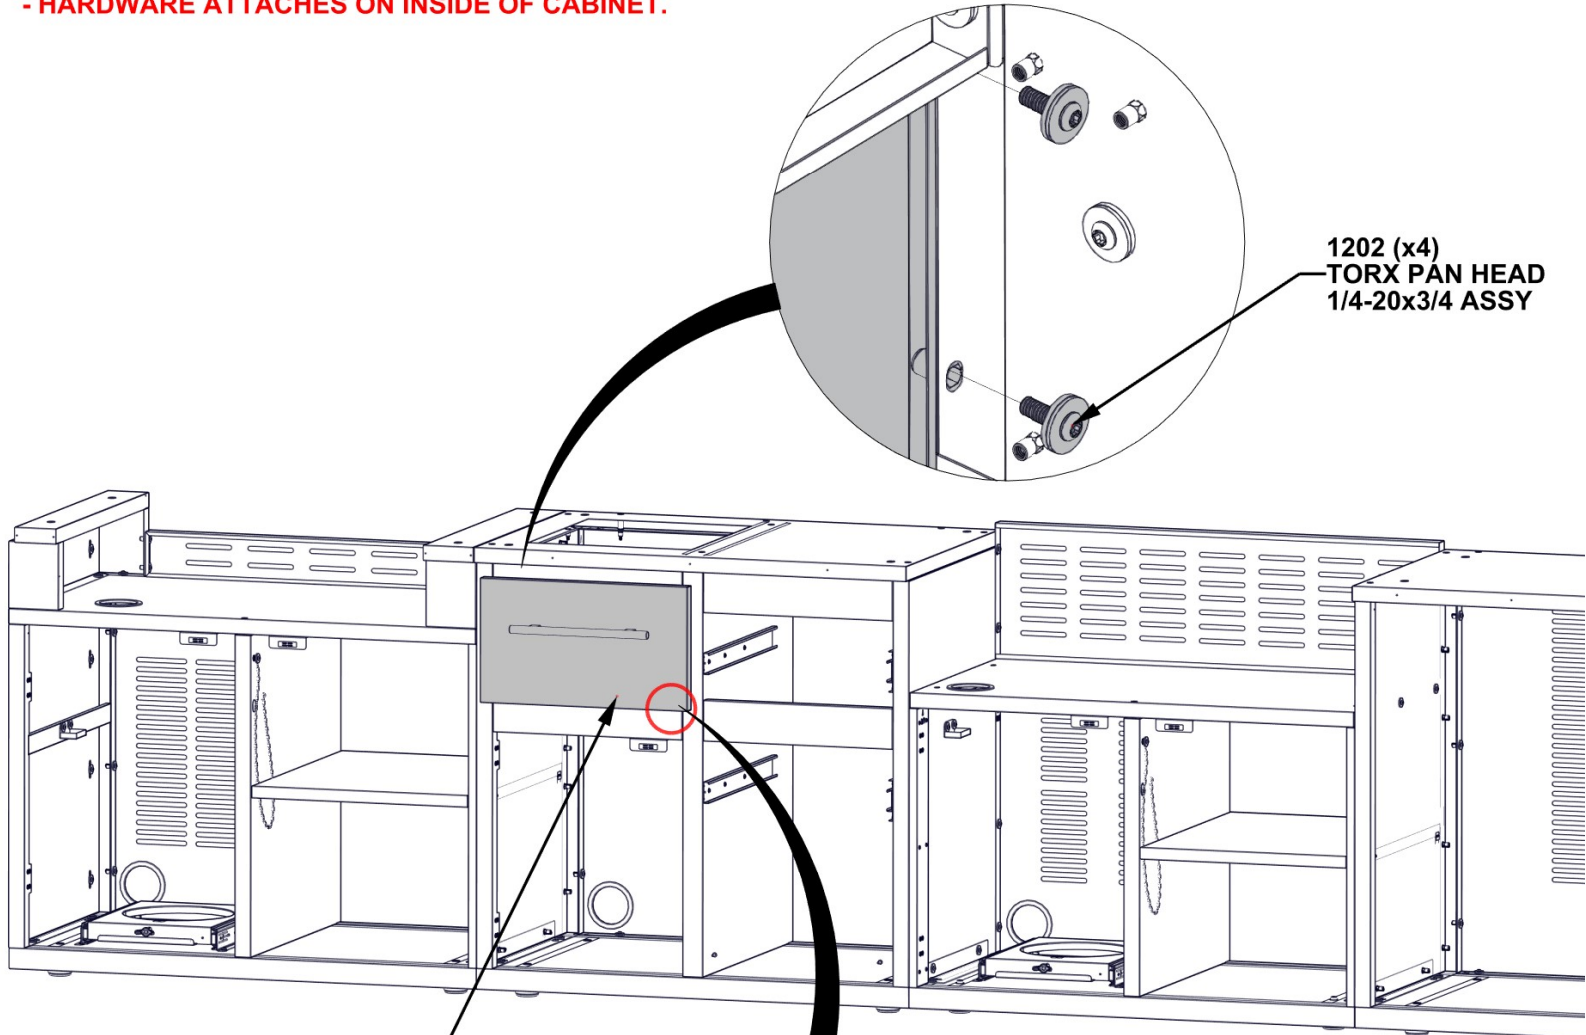


1202 (x4)  
TORX PAN HEAD  
1/4-20x3/4 ASSY

FALSE PANEL ASSEMBLY  
FROM STEP 90

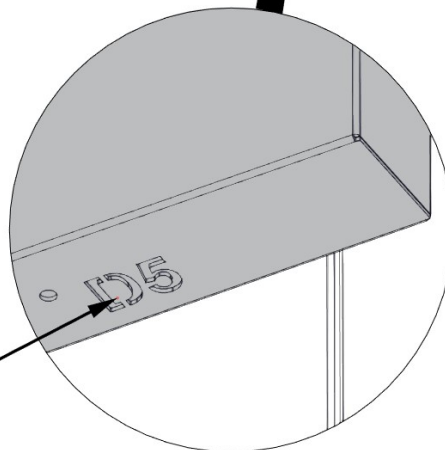

**D5 LABEL INDICATES  
BOTTOM OF PANEL**


# STEP 92A - SINK PRE-ASSEMBLY

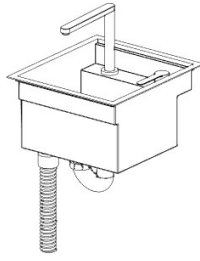

A16 SINK ASSEMBLY - A4M03143  
(x1) 15 1/8"x15 5/16"x16 7/8" (384x389x429)


## 1. INSTALLING THE SINK DRAIN

- SET DRAIN INSIDE OF SINK BODY, PLACING FOAM GASKET BETWEEN SURFACES.
- FASTEN IN PLACE USING RUBBER GASKET AND DRAIN NUT FROM BOTTOM SIDE.

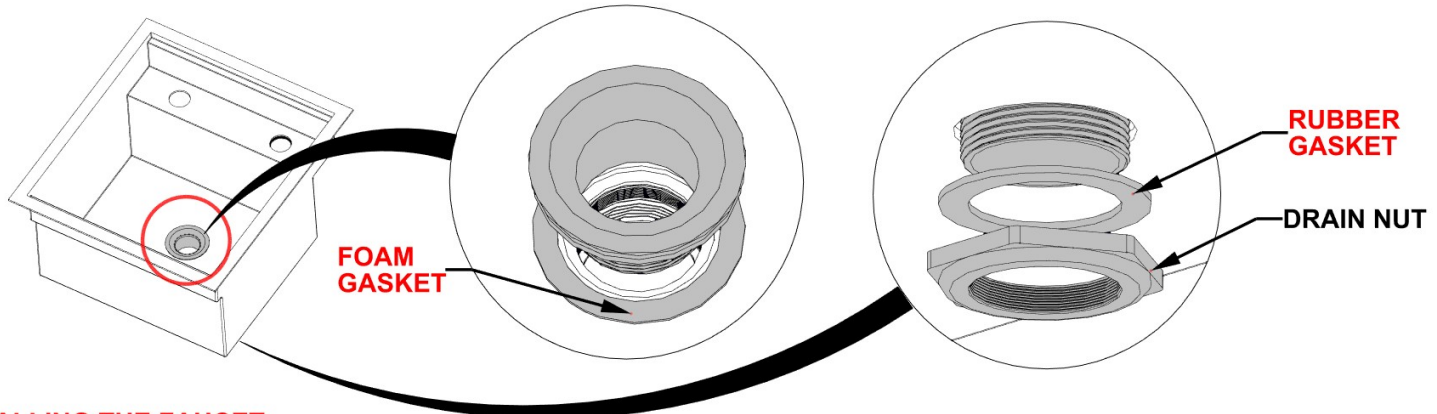


## 2. INSTALLING THE FAUCET

- INSTALL FAUCET BY PLACING HANDLE AND SPOUT INTO SINK OPENINGS AND SECURING IN PLACE VIA NUT.
- INSERT SCREWS TO LOCK.
- CONNECT WATER FAUCET LINES TOGETHER.

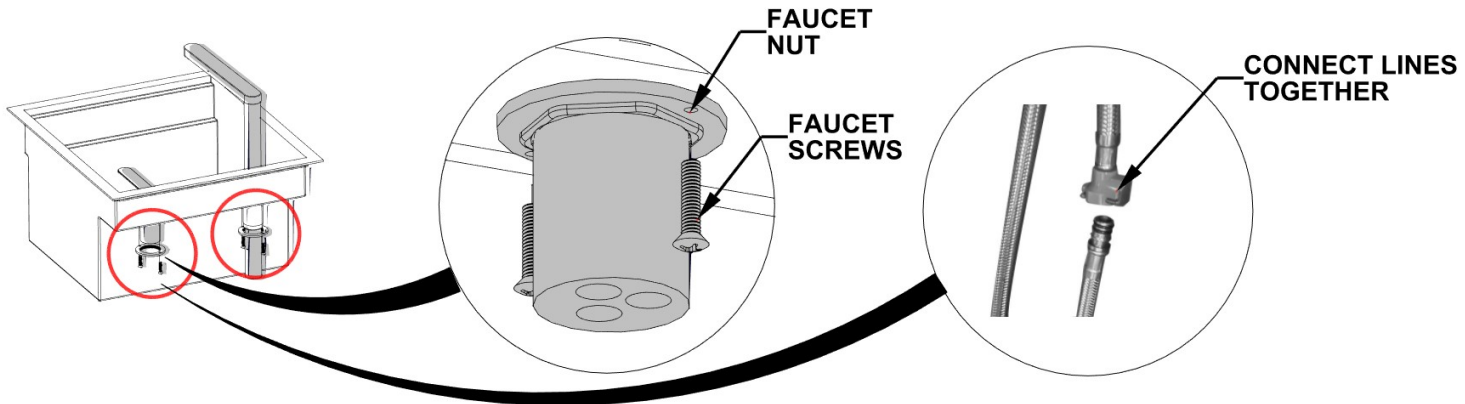


## 3. INSTALLING THE DRAIN FITTING

- ATTACH DRAIN FITTING TO SINK DRAIN.

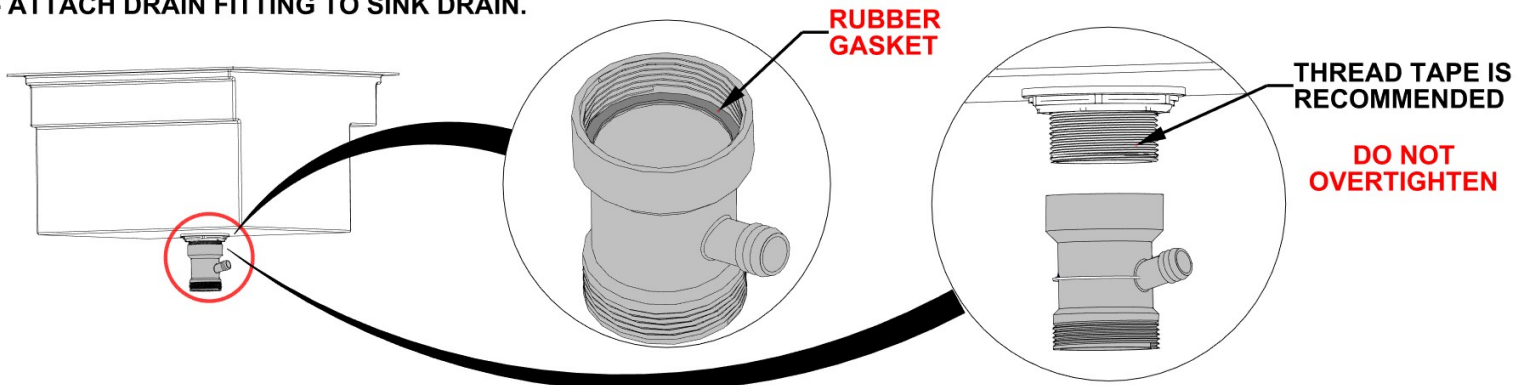


# STEP 92B - SINK PRE-ASSEMBLY

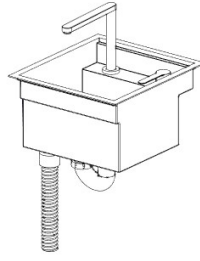

A16 SINK ASSEMBLY - A4M03143  
(x1) 15 1/8"x15 5/16"x16 7/8" (384x389x429)


## 4. INSTALLING THE OVERFLOW DRAIN

- MAKE SURE RUBBER GASKET IS INSTALLED IN OVERFLOW DRAIN.
- INSERT DRAIN SCREW TO HOLD IN PLACE.

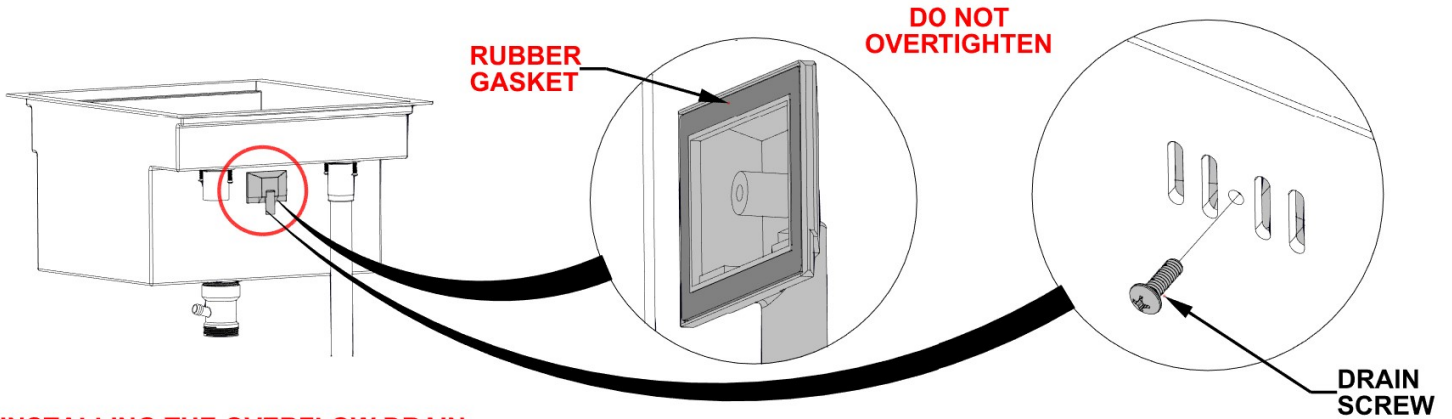


## 5. INSTALLING THE OVERFLOW DRAIN

- ATTACH OVERFLOW DRAIN BY CONNECTING EACH END AS SHOWN.

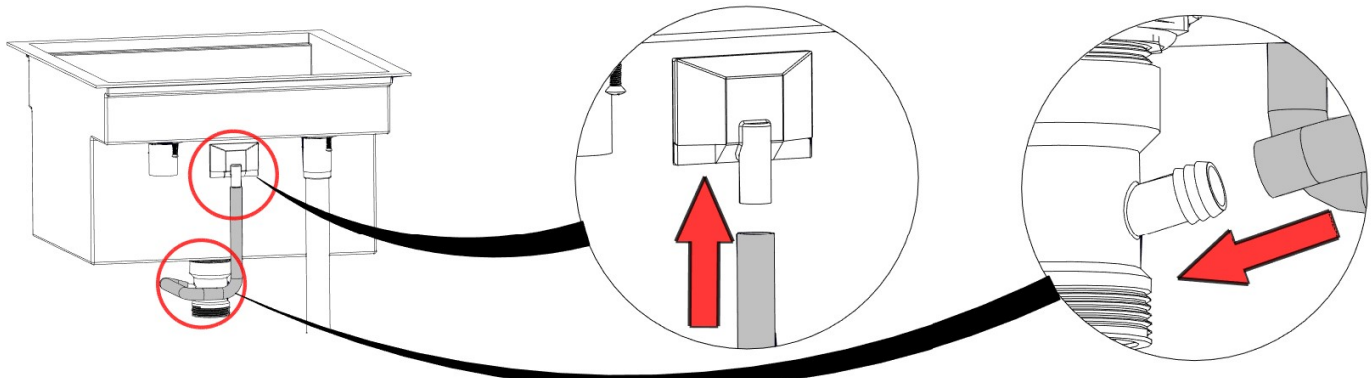


## 6. INSTALLING THE MAIN DRAIN AND TRAP

- ATTACH TRAP AND CORRUGATED DRAIN HOSE TO DRAIN FITTING.

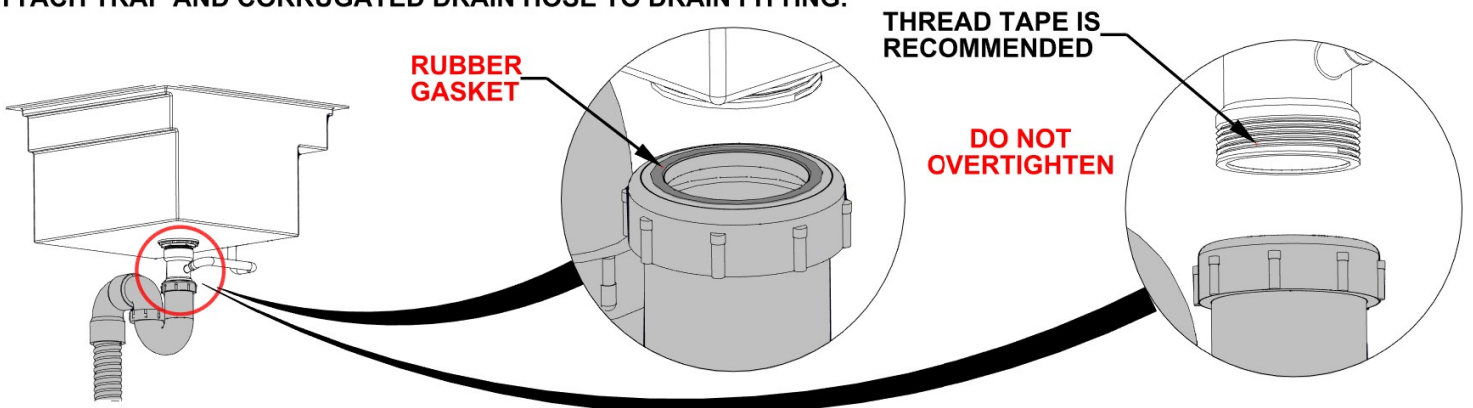

# STEP 92C - SINK INSTALLATION

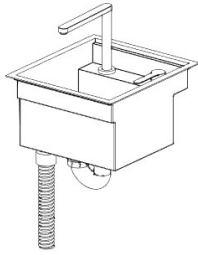

A16 SINK ASSEMBLY - A4M03143  
(x1) 15 1/8"x15 5/16"x16 7/8" (384x389x429)



A4M03151 GARDEN HOSE ADAPTER  
(x1)

- DRAIN STRAINER MUST BE USED WHEN DISCARDING FOOD INSIDE OF SINK.
- DO NOT LET SOLID MATERIAL ENTER SINK BASIN.

## OPTIONS FOR WATER INLET SUPPLY HOOKUP:

- GARDEN HOSE ATTACHMENT USING PROVIDED ADAPTER
- WATER INLET SUPPLY LINE

ATTACH ADAPTER  
TO INLET LINE AND  
TIGHTEN WITH WRENCH

## OPTIONS FOR DRAIN DISCHARGE:


- BUCKET OR GREY WATER CONTAINER
- FRENCH DRAIN OR DRY BASIN
- INTEGRATED SEWER SYSTEM
- CHECK YOUR LOCAL REQUIREMENTS.

3151 (x1)  
GARDEN HOSE  
ADAPTER

IT IS RECOMMENDED TO  
APPLY A FINE BEAD OF  
SILICONE, TO UNDERNEATH  
SIDE OF ALL SINK FLANGES  
BEFORE INSTALLING


A16 (x1)  
SINK ASSEMBLY

# STEP 93A - FRIDGE CABINET MARBLE INSTALLATION

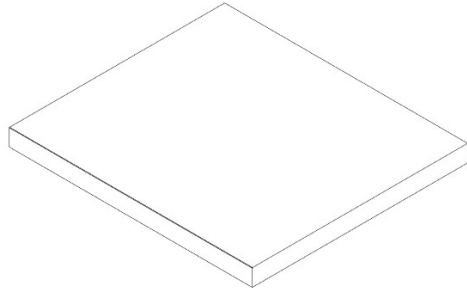


M3 FRIDGE CABINET MARBLE - A4M03602  
(x1) 28 1/8"x24 15/16"x1 15/16" (50x634x715)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- IT IS RECOMMENDED TO HAVE AT LEAST TWO PEOPLE SET MARBLE COUNTERTOP IN PLACE.
- SLIDE IN PLACE UNTIL MARBLE IS TIGHT AGAINST POST AND SIDES ARE FLUSH WITH PANEL.
- **WHEN SETTING MARBLE IN PLACE, MAKE SURE YOUR FINGERS ARE CLEAR AND NOT UNDERNEATH MARBLE.**

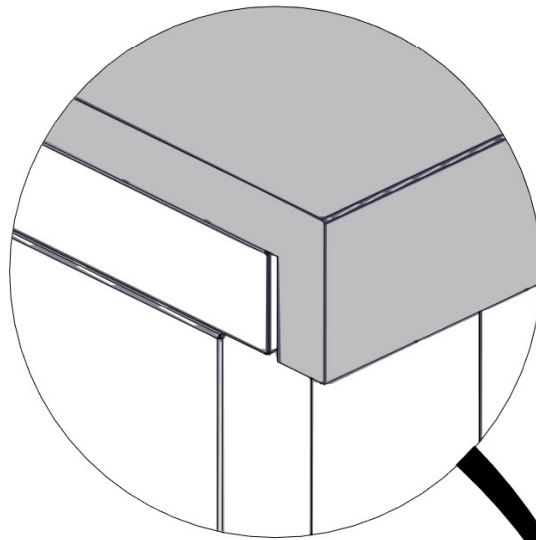


M3 (x1)  
FRIDGE CABINET  
MARBLE

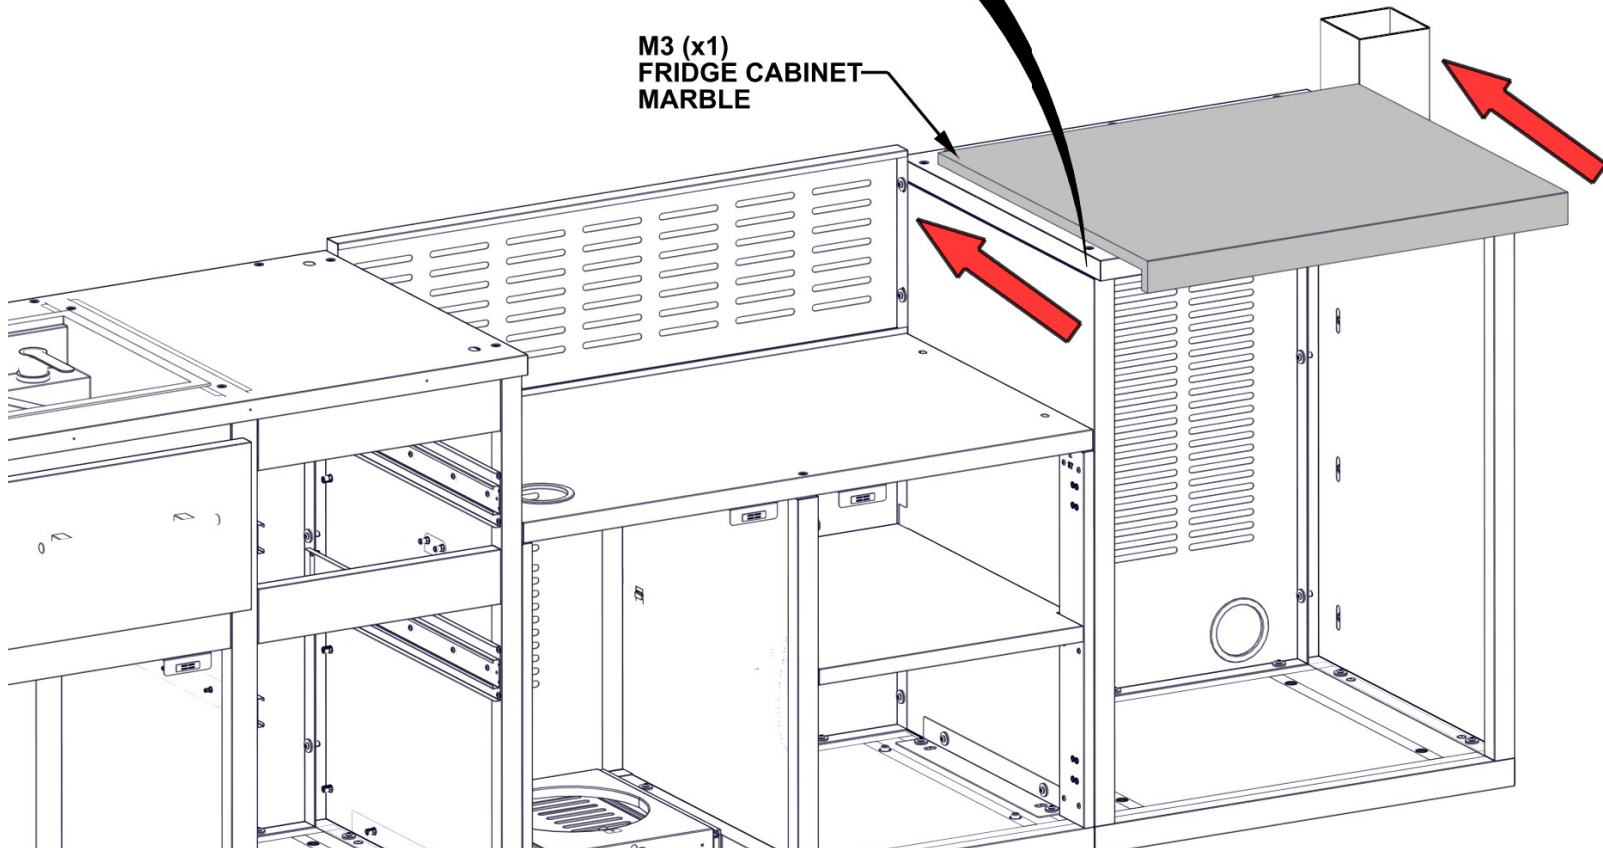


# STEP 93B - FRIDGE CABINET MARBLE INSTALLATION

Qty	PartNo	Description
4	H101292	TORX PAN HEAD 1/4-20x13/32"
4	H101053	STEEL WASHER 6x20
4	H101054	SEALANT WASHER

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- MAKE SURE YOU ARE USING THE CORRECT HARDWARE FOR THIS STEP.
- ONCE MARBLE IS IN PLACE, IT IS RECOMMENDED TO COVER WITH A PIECE OF CARDBOARD OR FOAM UNTIL ASSEMBLY IS FINISHED TO PREVENT DAMAGE.
- DO NOT USE MARBLE SURFACE AS A WORK BENCH.

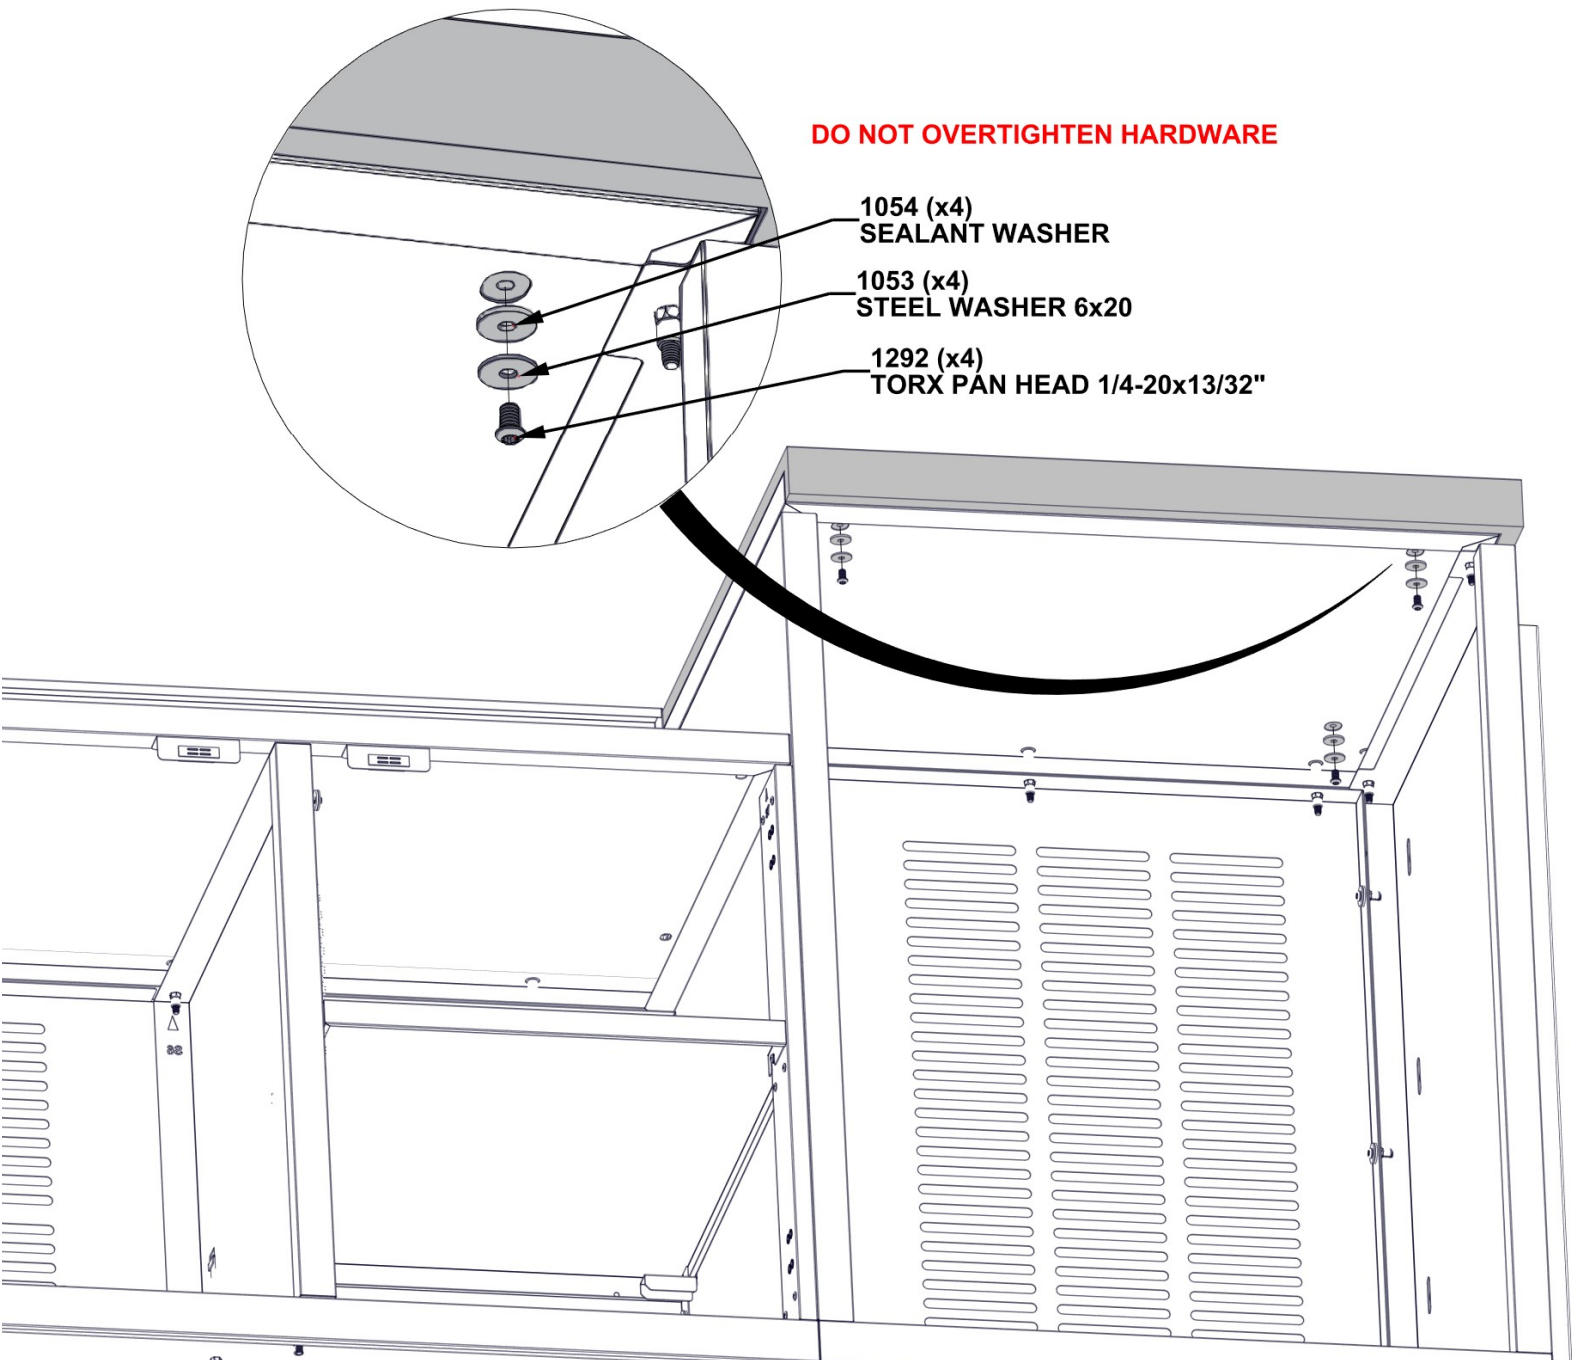


# STEP 94A - SINK CABINET MARBLE INSTALLATION

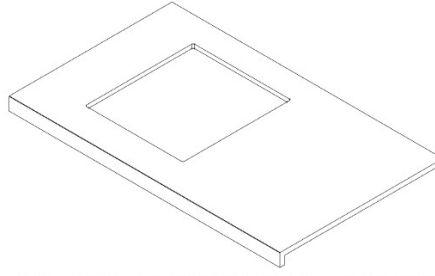

M2 SINK CABINET MARBLE - A4M03568  
(x1) 41 1/2"x24 15/16"x1 15/16" (49x633x1054)


- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- IT IS RECOMMENDED TO HAVE AT LEAST TWO PEOPLE SET MARBLE COUNTERTOP IN PLACE.
- SLIDE IN PLACE UNTIL MARBLE IS TIGHT AGAINST POST AND SIDES ARE FLUSH WITH PANEL.
- **WHEN SETTING MARBLE IN PLACE, MAKE SURE YOUR FINGERS ARE CLEAR AND NOT UNDERNEATH MARBLE.**

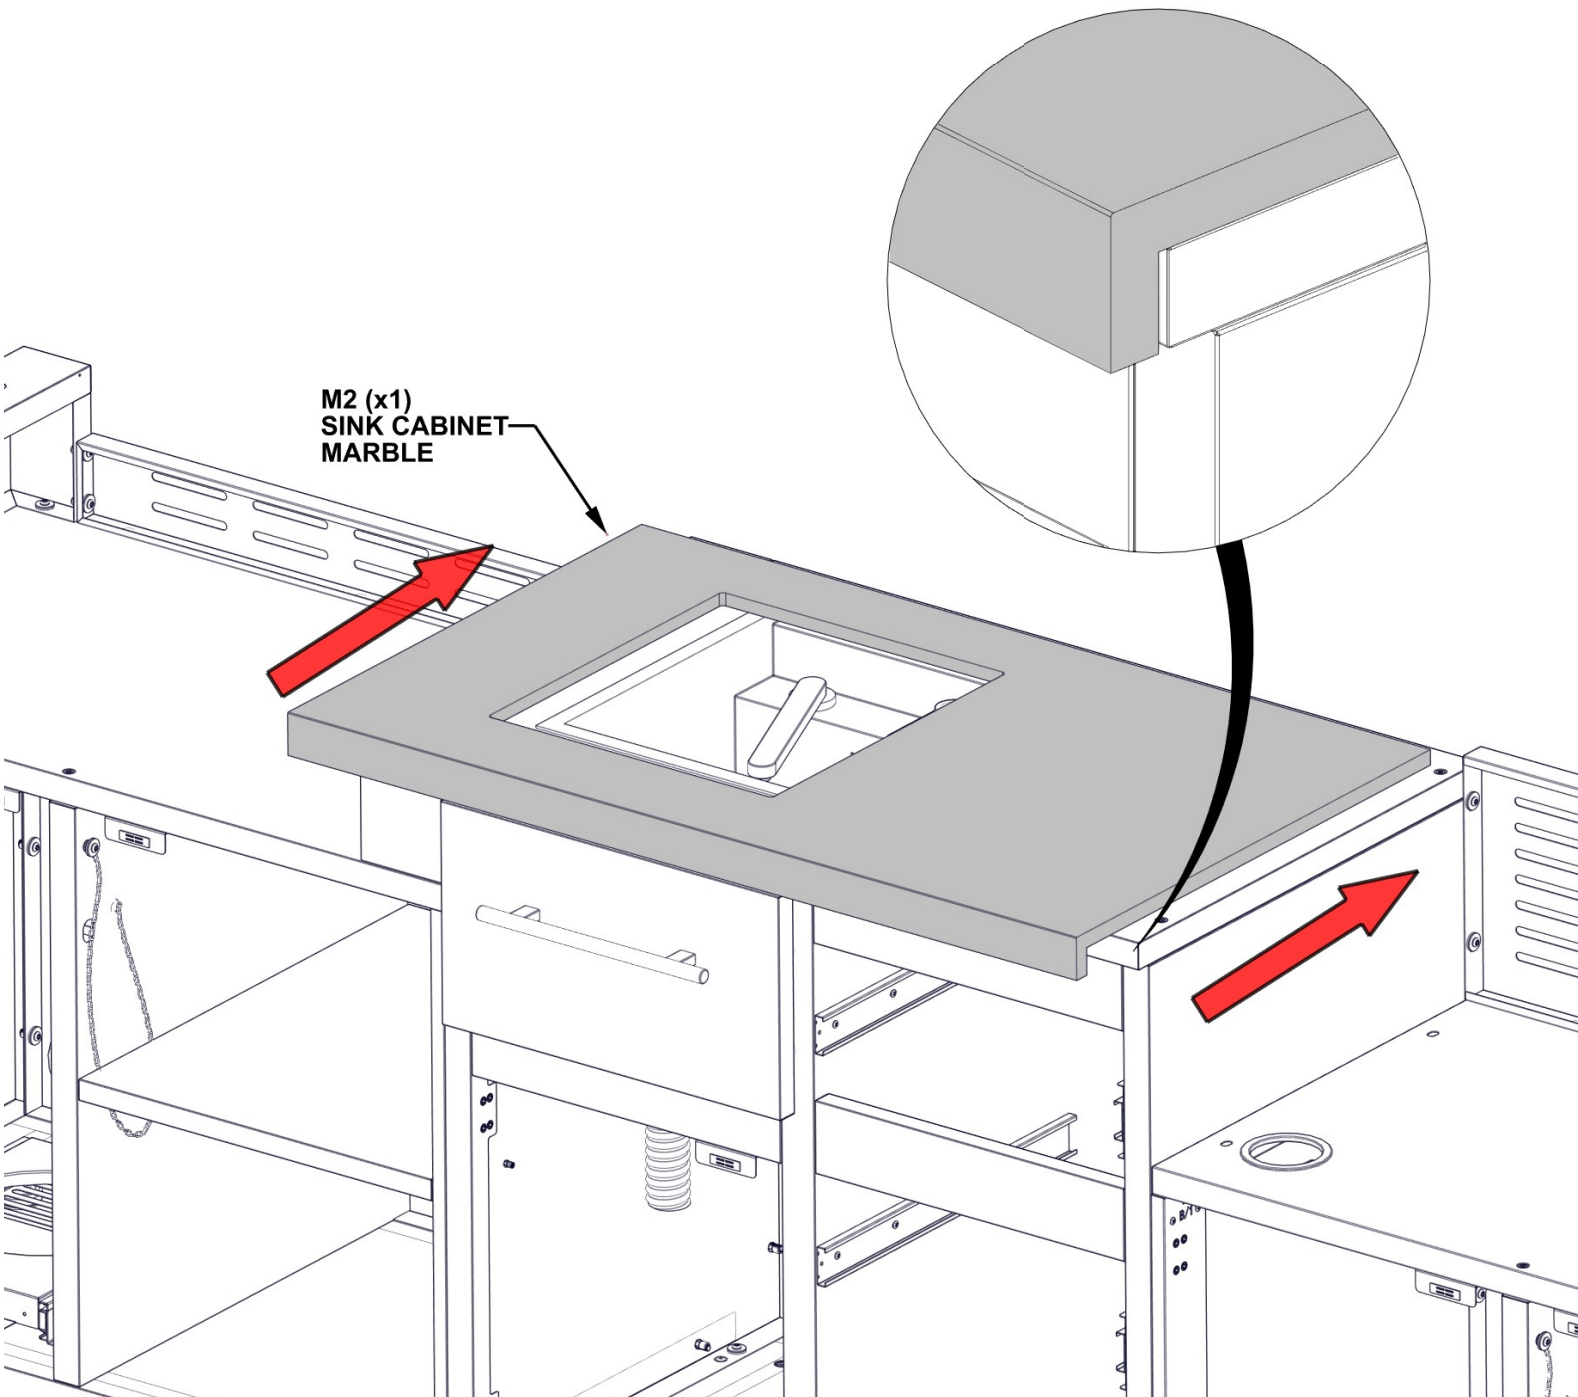


# STEP 94B - SINK CABINET MARBLE INSTALLATION

Qty	PartNo	Description
4	H101292	TORX PAN HEAD 1/4-20x13/32"
4	H101053	STEEL WASHER 6x20
4	H101054	SEALANT WASHER


- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- MAKE SURE YOU ARE USING THE CORRECT HARDWARE FOR THIS STEP.
- ONCE MARBLE IS IN PLACE, IT IS RECOMMENDED TO COVER WITH A PIECE OF CARDBOARD OR FOAM UNTIL ASSEMBLY IS FINISHED TO PREVENT DAMAGE.
- DO NOT USE MARBLE SURFACE AS A WORK BENCH.

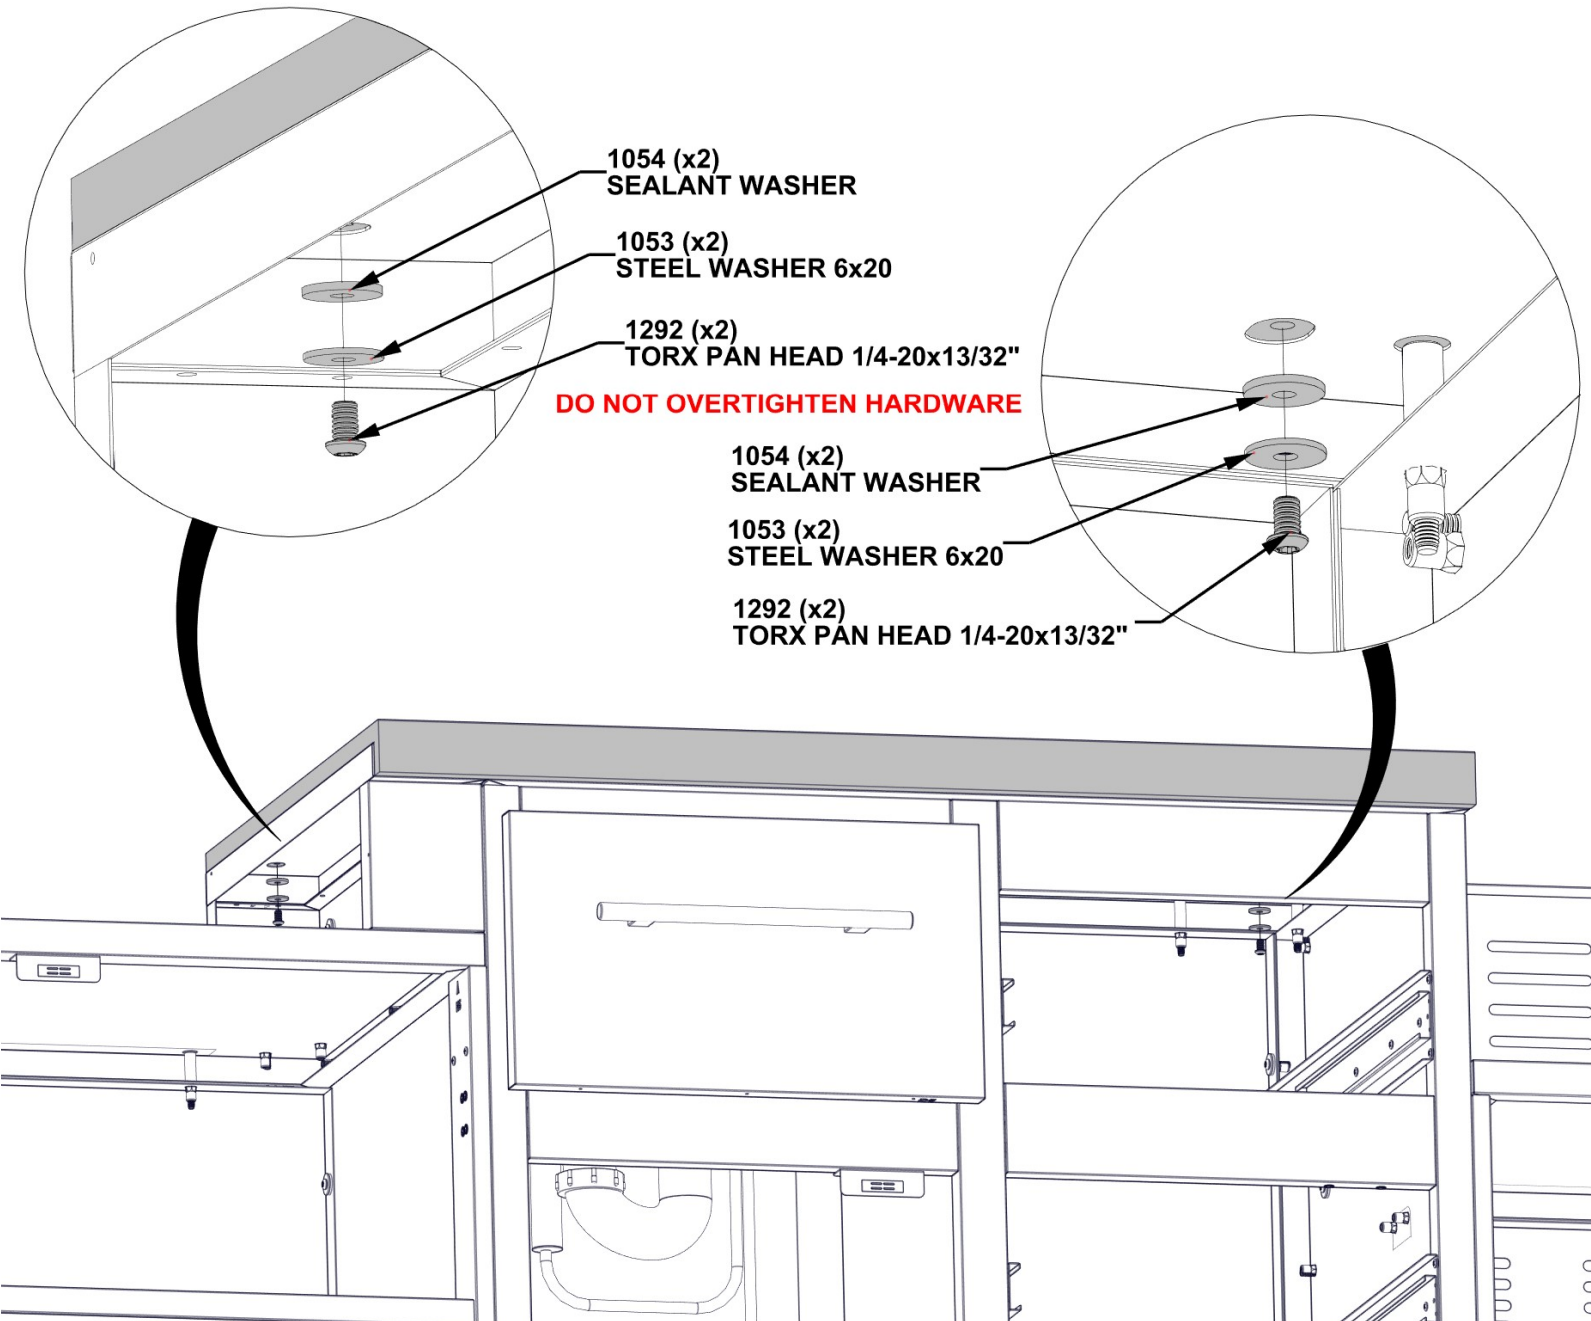


# STEP 95 - SINK CABINET MARBLE INSTALLATION

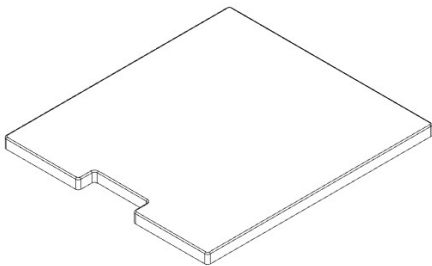

**M5 SINK COVER MARBLE - A4M03147**  
**(x1) 11/16"x14 3/4"x16 5/16" (18x375x415)**

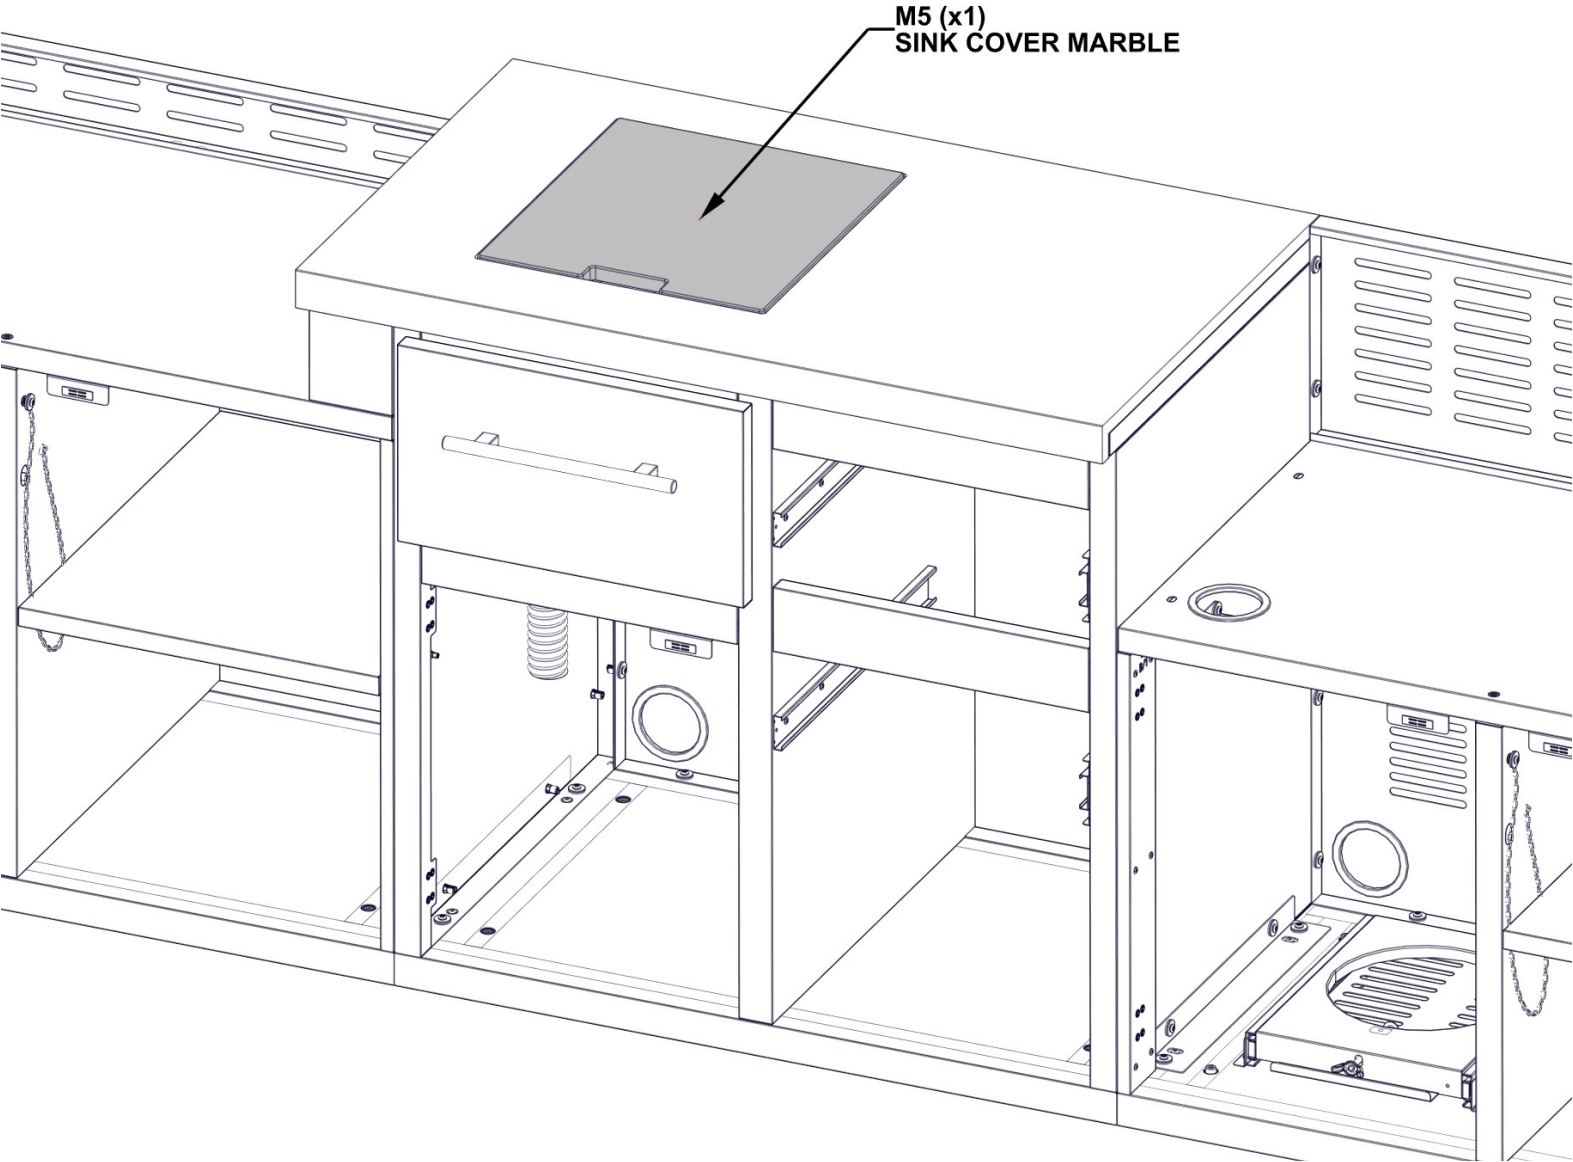


# STEP 96A - PIZZA OVEN CABINET MARBLE INSTALLATION

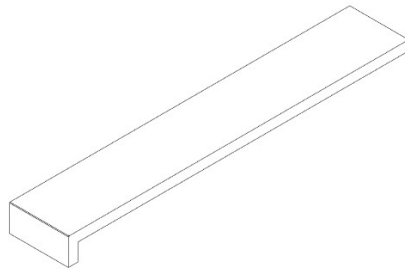

M1 PIZZA OVEN CABINET MARBLE - A4M03553  
(x1) 24 13/16"x4 5/16"x1 15/16" (50x109x630)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- IT IS RECOMMENDED TO HAVE AT LEAST TWO PEOPLE SET MARBLE COUNTERTOP IN PLACE.
- SLIDE IN PLACE UNTIL MARBLE IS TIGHT AGAINST POST AND SIDES ARE FLUSH WITH PANEL.
- **WHEN SETTING MARBLE IN PLACE, MAKE SURE YOUR FINGERS ARE CLEAR AND NOT UNDERNEATH MARBLE.**

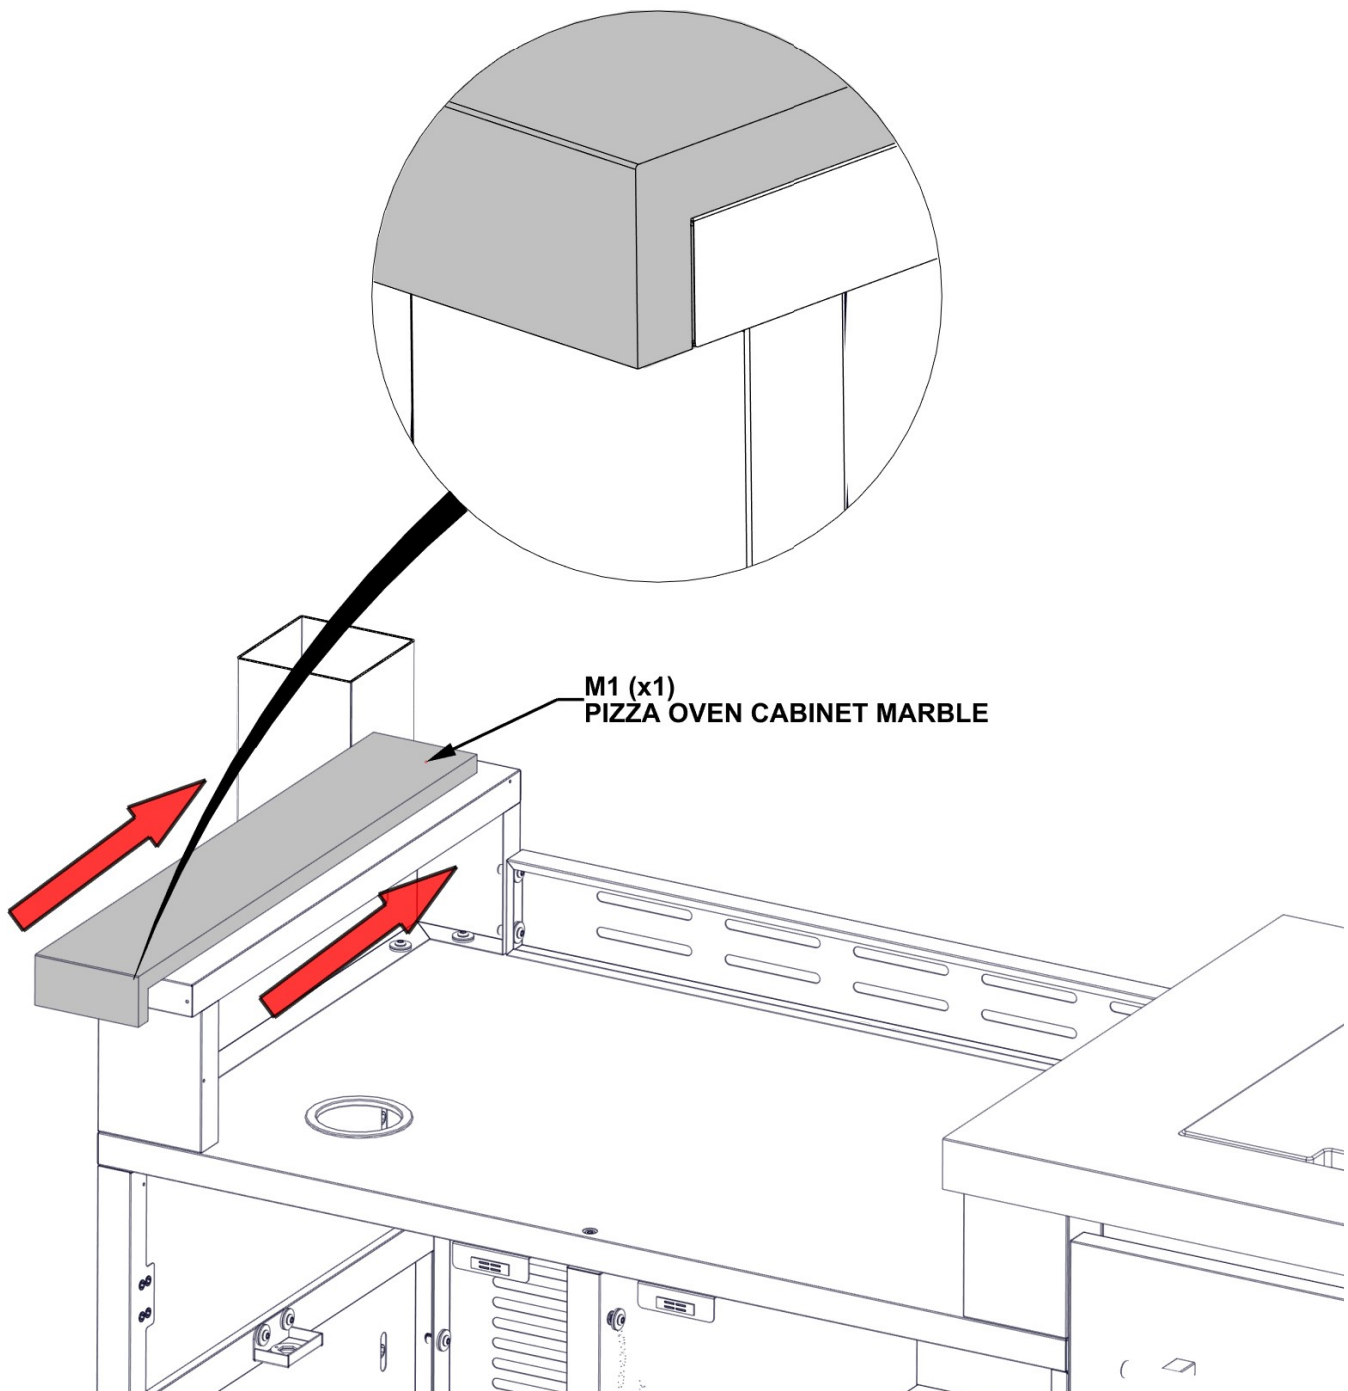

# STEP 96B - SINK CABINET MARBLE INSTALLATION

Qty	PartNo	Description
2	H101292	TORX PAN HEAD 1/4-20x13/32"
2	H101053	STEEL WASHER 6x20
2	H101054	SEALANT WASHER


- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- MAKE SURE YOU ARE USING THE CORRECT HARDWARE FOR THIS STEP.
- ONCE MARBLE IS IN PLACE, IT IS RECOMMENDED TO COVER WITH A PIECE OF CARDBOARD OR FOAM UNTIL ASSEMBLY IS FINISHED TO PREVENT DAMAGE.
- DO NOT USE MARBLE SURFACE AS A WORK BENCH.

**DO NOT OVERTIGHTEN HARDWARE**

1054 (x2)  
SEALANT WASHER


1053 (x2)  
STEEL WASHER 6x20

1292 (x2)  
TORX PAN HEAD 1/4-20x13/32"

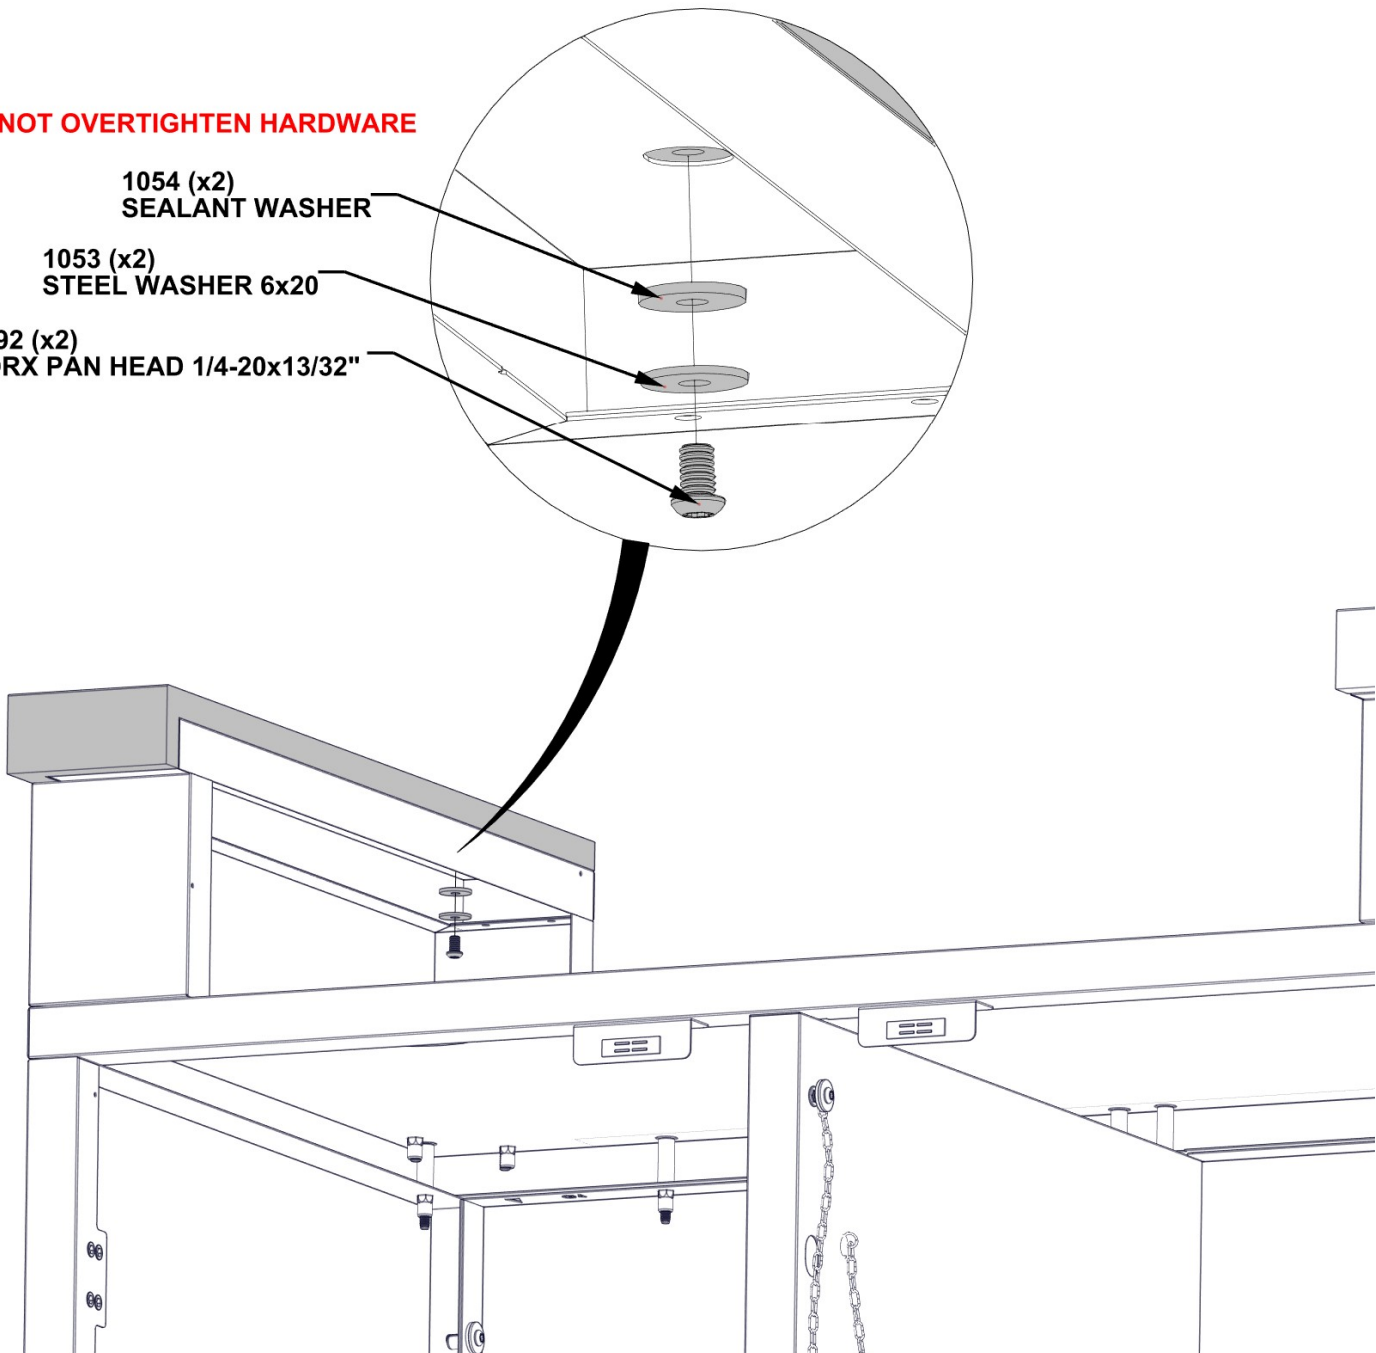

# STEP 97A - KITCHEN TRASH CAN ASSEMBLY


Qty	PartNo	Description
6	H101289	PAN HEAD SCREW 8-32x1/2" SS

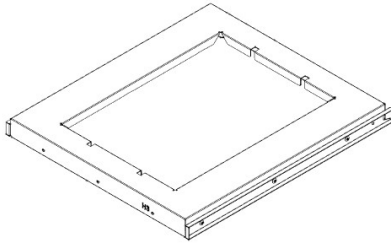


**H3 TRASH CAN BRACKET ASSEMBLY - A4M03610**  
(x1) 18 1/16"x15 13/16"x (35x401.60x458)



**A11 TRIANGLE PANEL - A4M03086**  
(x2) 13/16"x13 3/4"x13 3/4" (20x350x350)

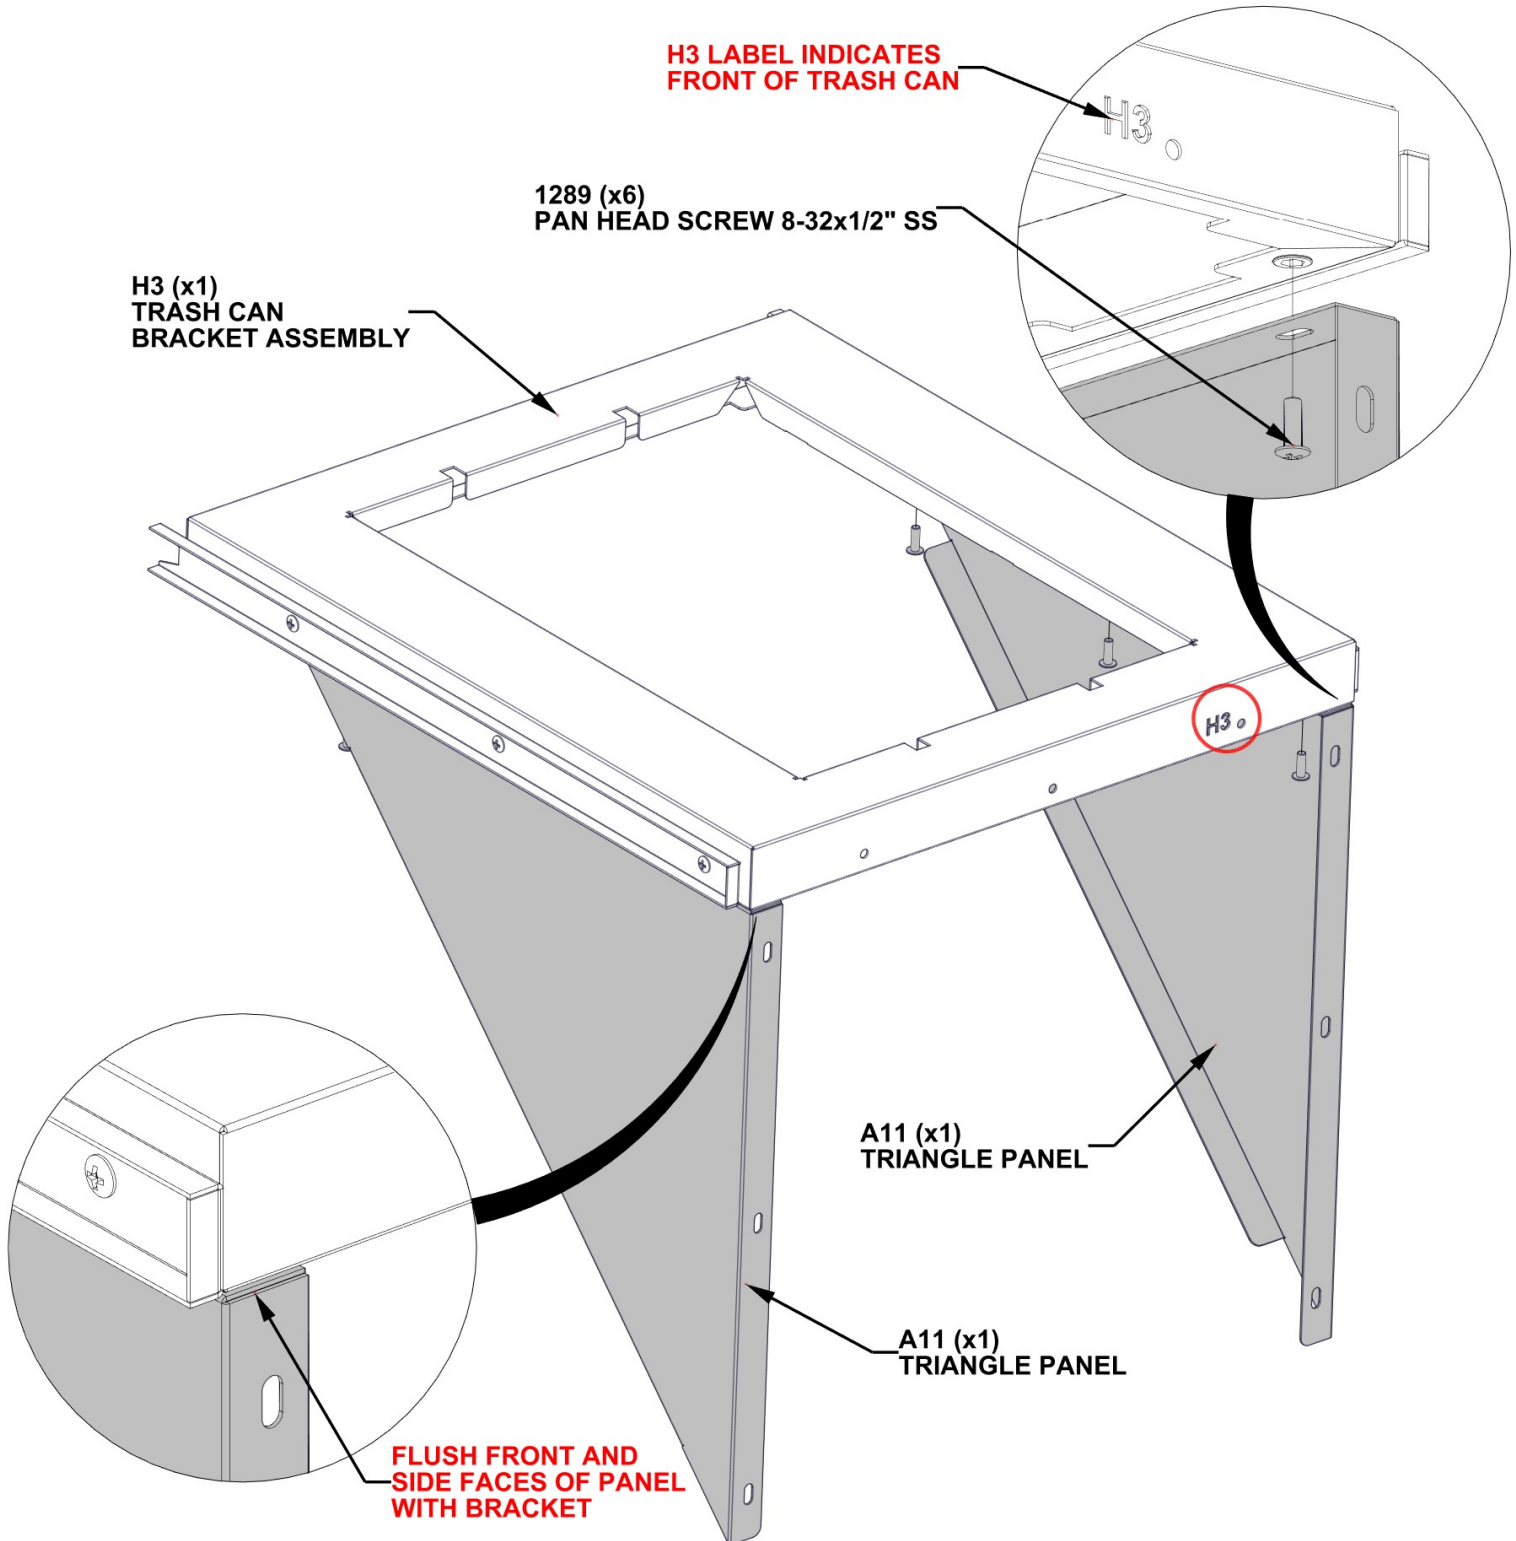


# STEP 97B - KITCHEN TRASH CAN ASSEMBLY

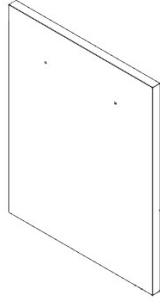


Qty	PartNo	Description
9	H101289	PAN HEAD SCREW 8-32x1/2" SS

D9 TRASH CAN PANEL ASSEMBLY - A4M03608  
(x1) 22 1/4"x17 3/4"x15/16" (24.00x451.00x565.00)

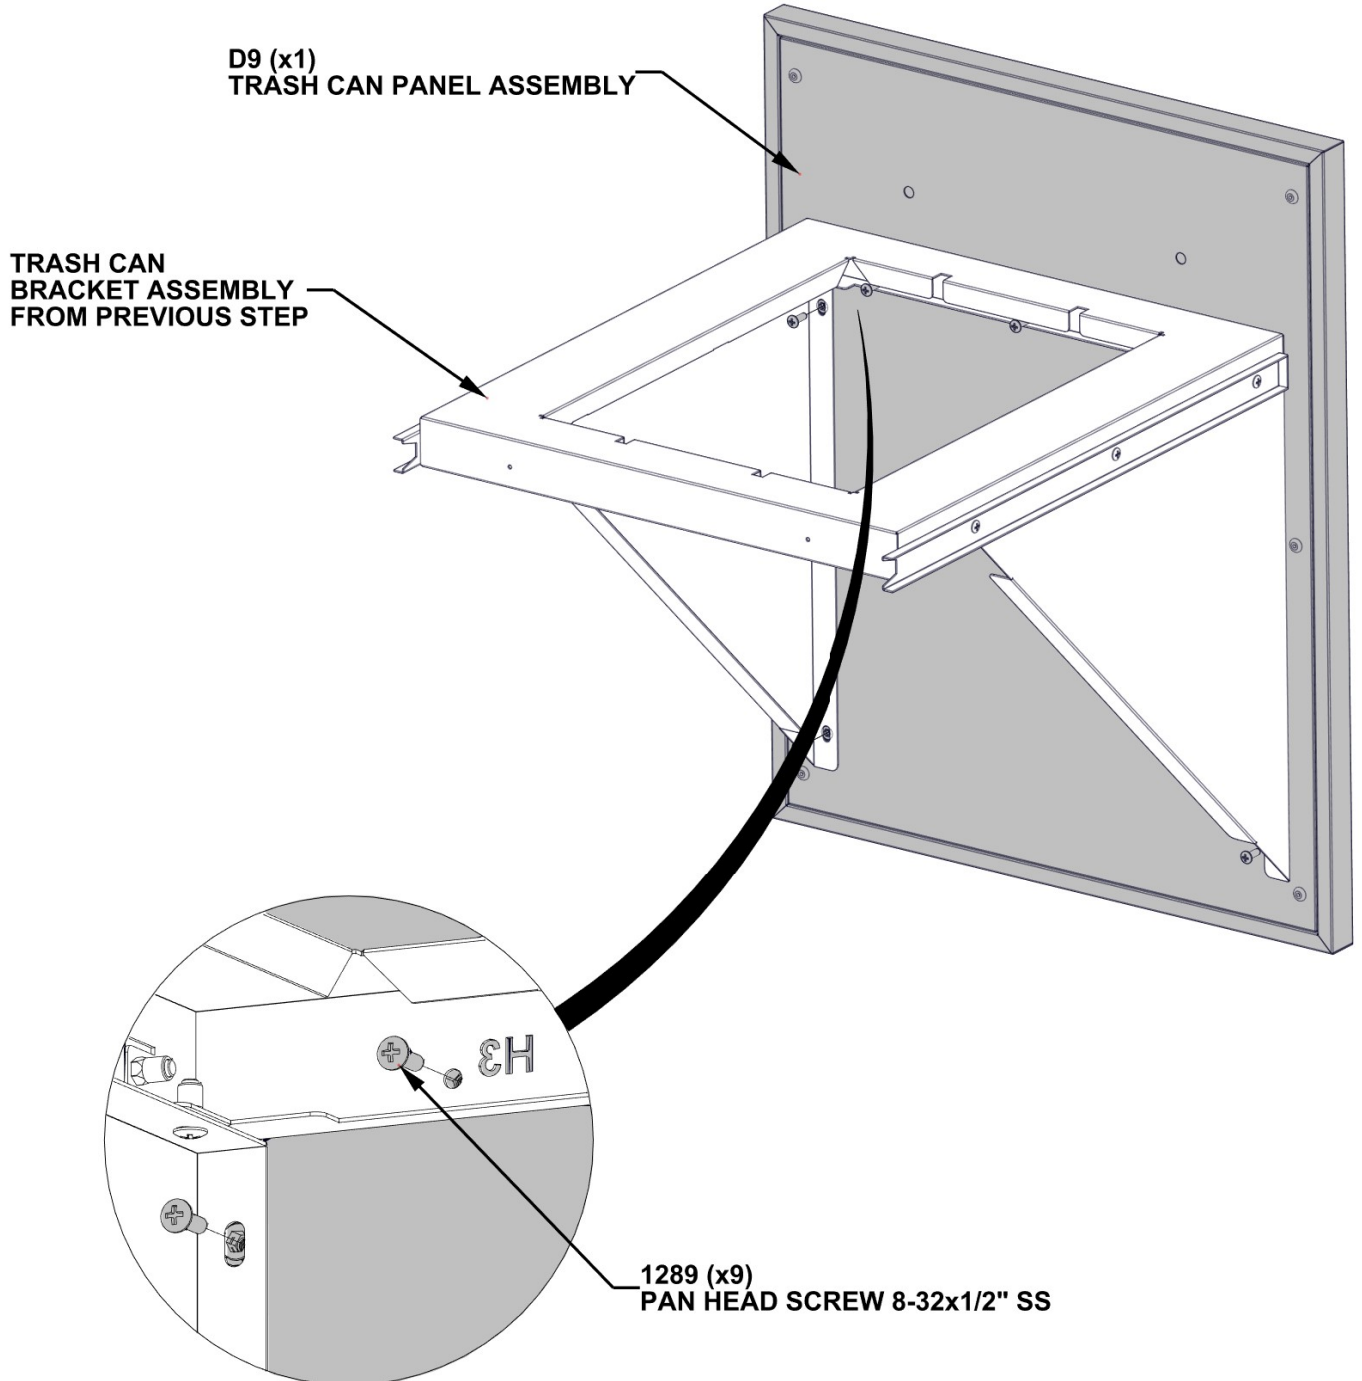


# STEP 97C - KITCHEN TRASH CAN ASSEMBLY

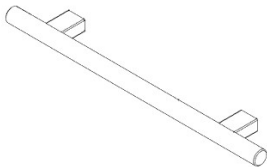


Qty	PartNo	Description
2	H101307	SHOULDER BOLT 8-32x30mm SS

**H2 STAINLESS STEEL HANDLE - A4M03024**  
 (x1) 5/8"x1 9/16"x11 13/16" (16x40x300)

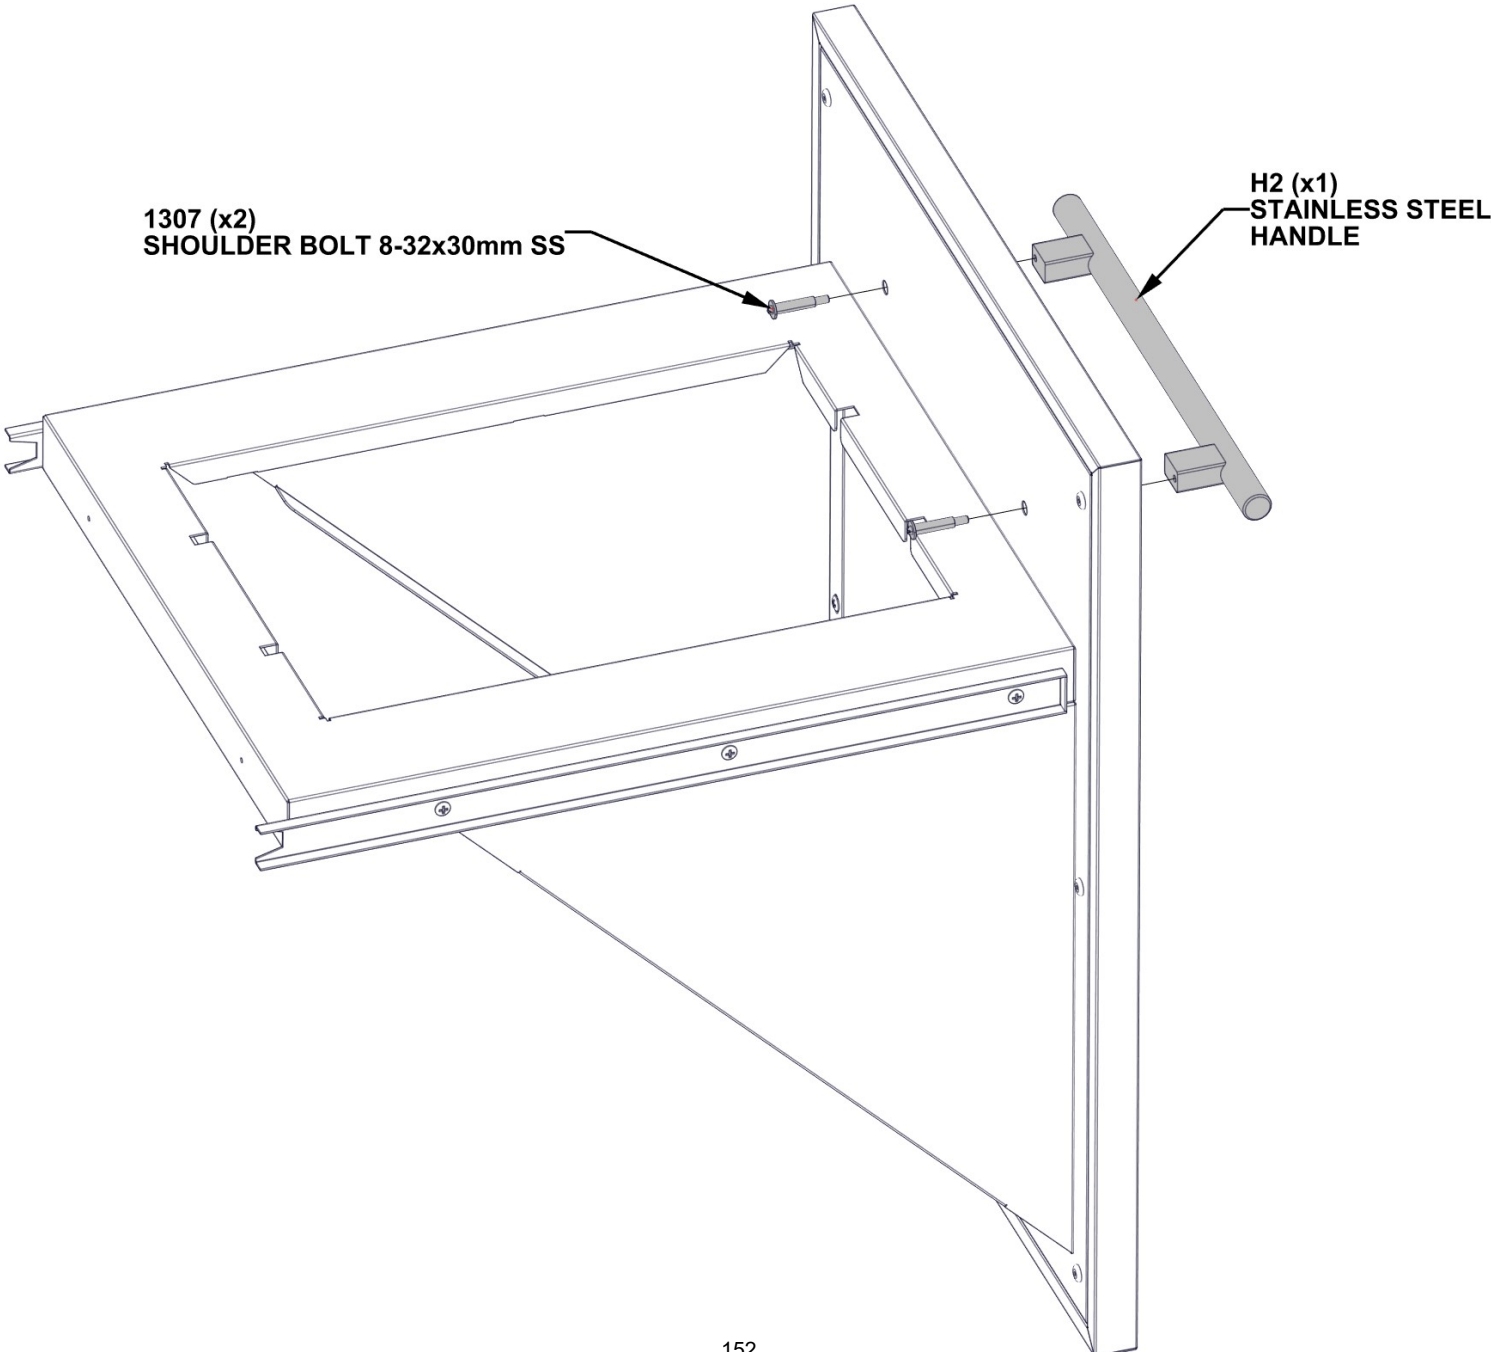


# STEP 98 - KITCHEN TRASH CAN INSTALLATION

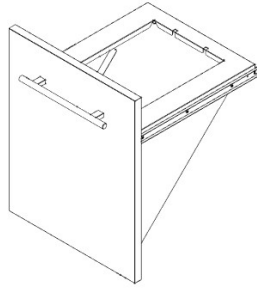


TRASH CAN ASSEMBLY  
FROM STEP 97

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- ATTACH TRASH CAN ASSEMBLY BY ALIGNING BOTH ENDS OF FACTORY ASSEMBLED DRAWER SLIDES WITH ONE ANOTHER.
- PRESS TOGETHER UNTIL DRAWER SLIDES CONNECT.

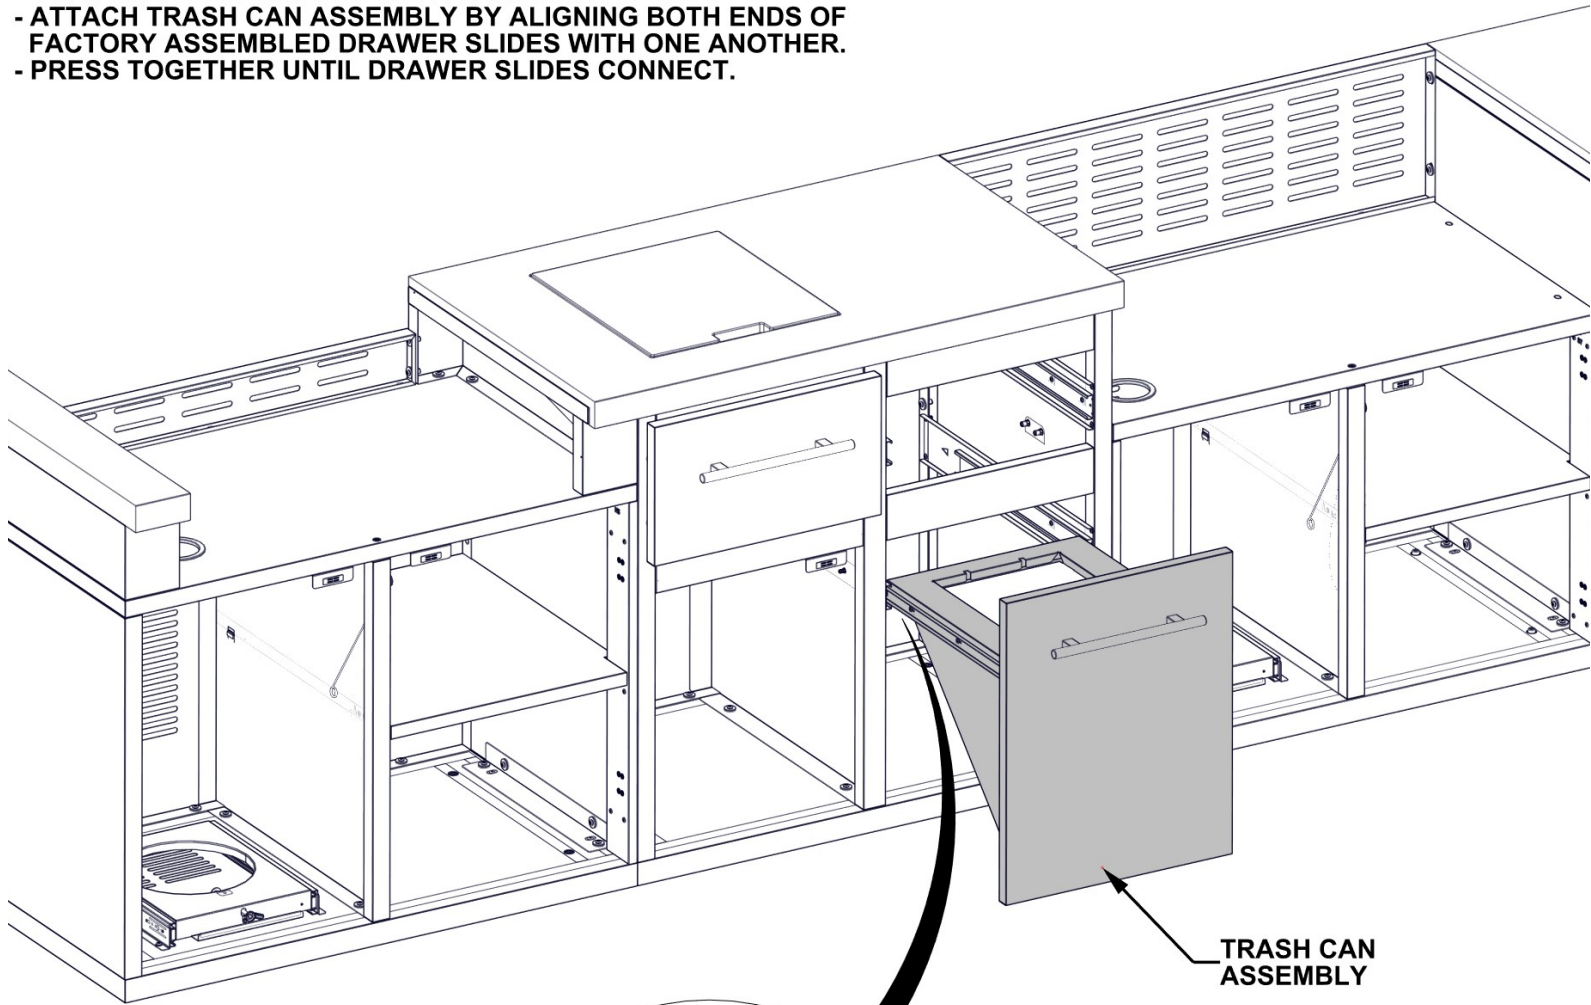

TRASH CAN  
ASSEMBLY

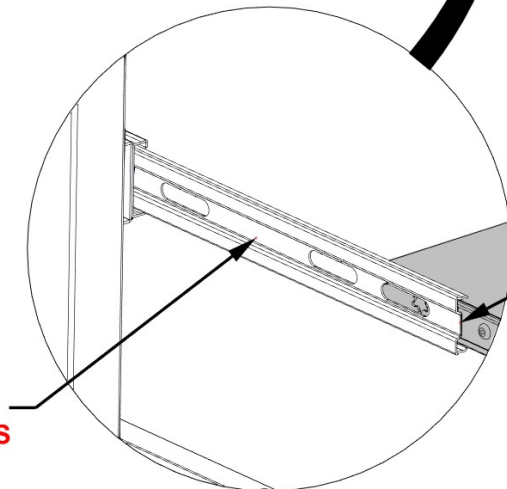


SLIDE INNER RACE  
OF DRAWER SLIDE OUT  
BEFORE ATTACHING SLIDES


ALIGN DRAWER SLIDES  
ON BOTH SIDES OF TRASH  
CAN HOLDER

# STEP 99A - KITCHEN DRAWER ASSEMBLY


Qty	PartNo	Description
9	H101289	PAN HEAD SCREW 8-32x1/2" SS

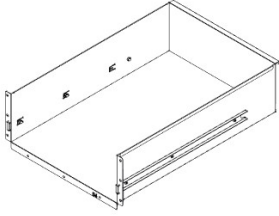

**D4 SINK CABINET DRAWER BODY ASSEMBLY - A4M03571**  
 (x1) 22 1/4"x16 1/16"x6 7/16" (164.2x408.4x565.4)

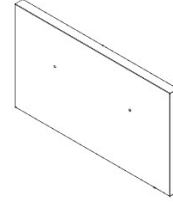


**D3 SINK CABINET DRAWER PANEL ASSEMBLY - A4M03569**  
 (x1) 17 3/4"x10 1/4"x15/16" (24x260x451)

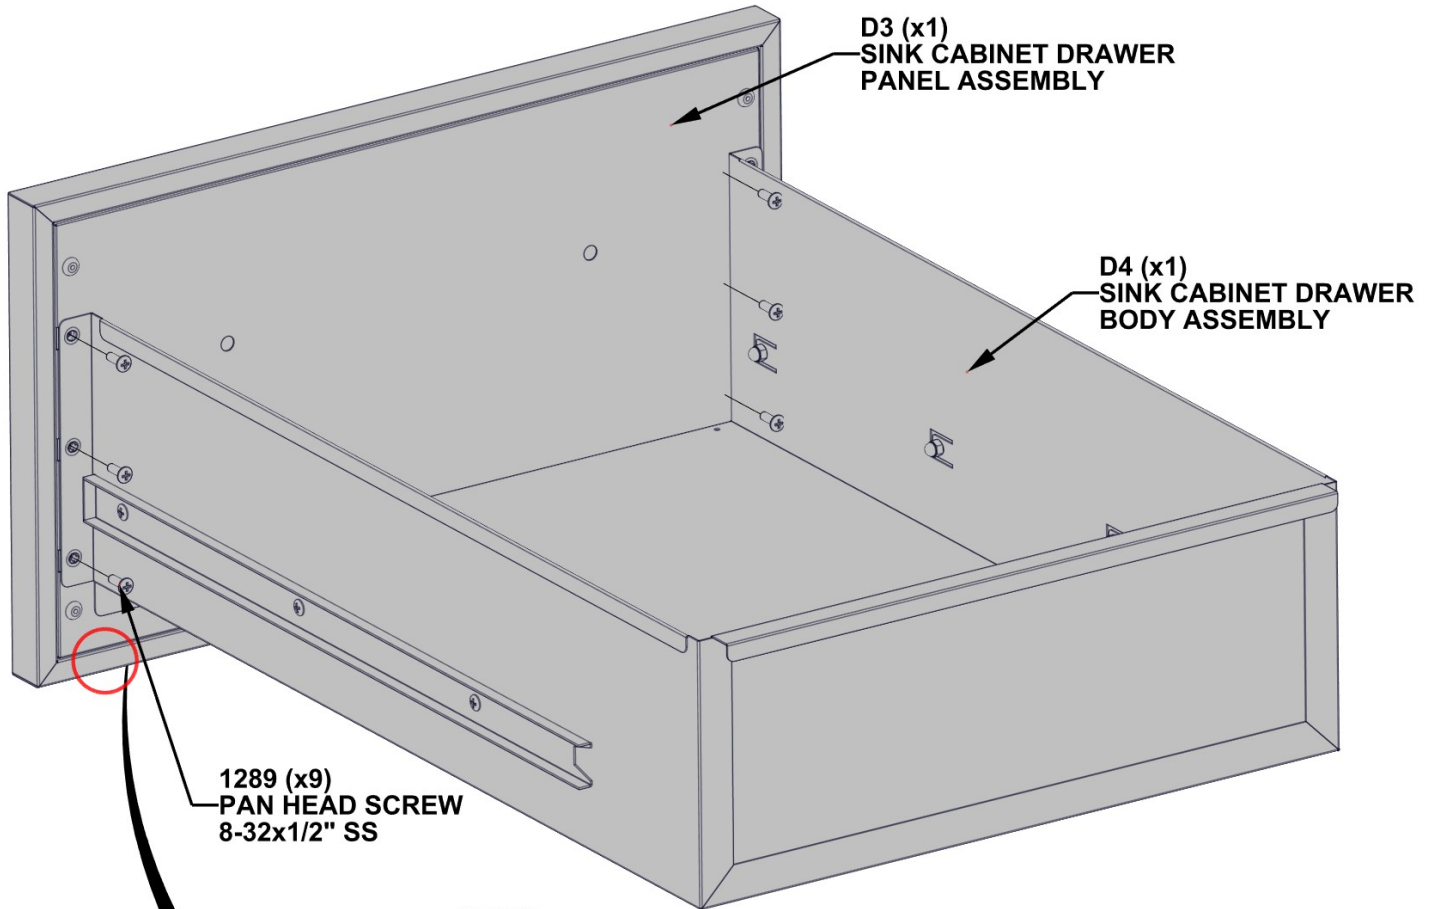

**D3 (x1)**  
**SINK CABINET DRAWER**  
**PANEL ASSEMBLY**


**D4 (x1)**  
**SINK CABINET DRAWER**  
**BODY ASSEMBLY**

**1289 (x9)**  
**PAN HEAD SCREW**  
**8-32x1/2" SS**

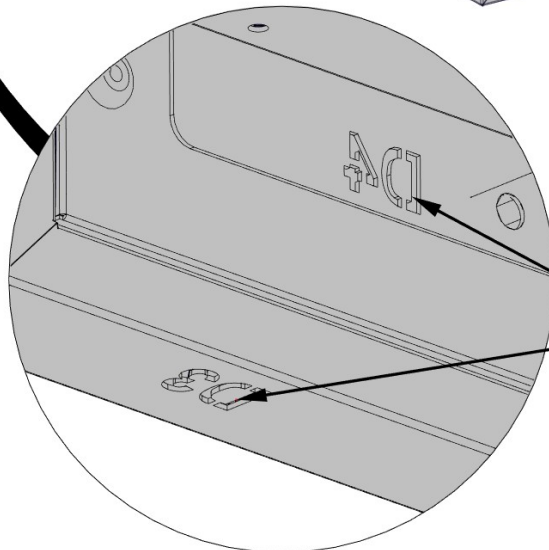

**D3 AND D4 LABELS INDICATE**  
**BOTTOM OF DRAWER**

# STEP 99B - KITCHEN DRAWER ASSEMBLY

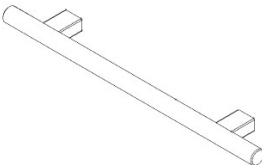


Qty	PartNo	Description
2	H101307	SHOULDER BOLT 8-32x30mm SS


H2 STAINLESS STEEL HANDLE - A4M03024  
(x1) 5/8"x1 9/16"x11 13/16" (16x40x300)

1307 (x2)  
SHOULDER BOLT 8-32x30mm SS

H2 (x1)  
STAINLESS STEEL  
HANDLE

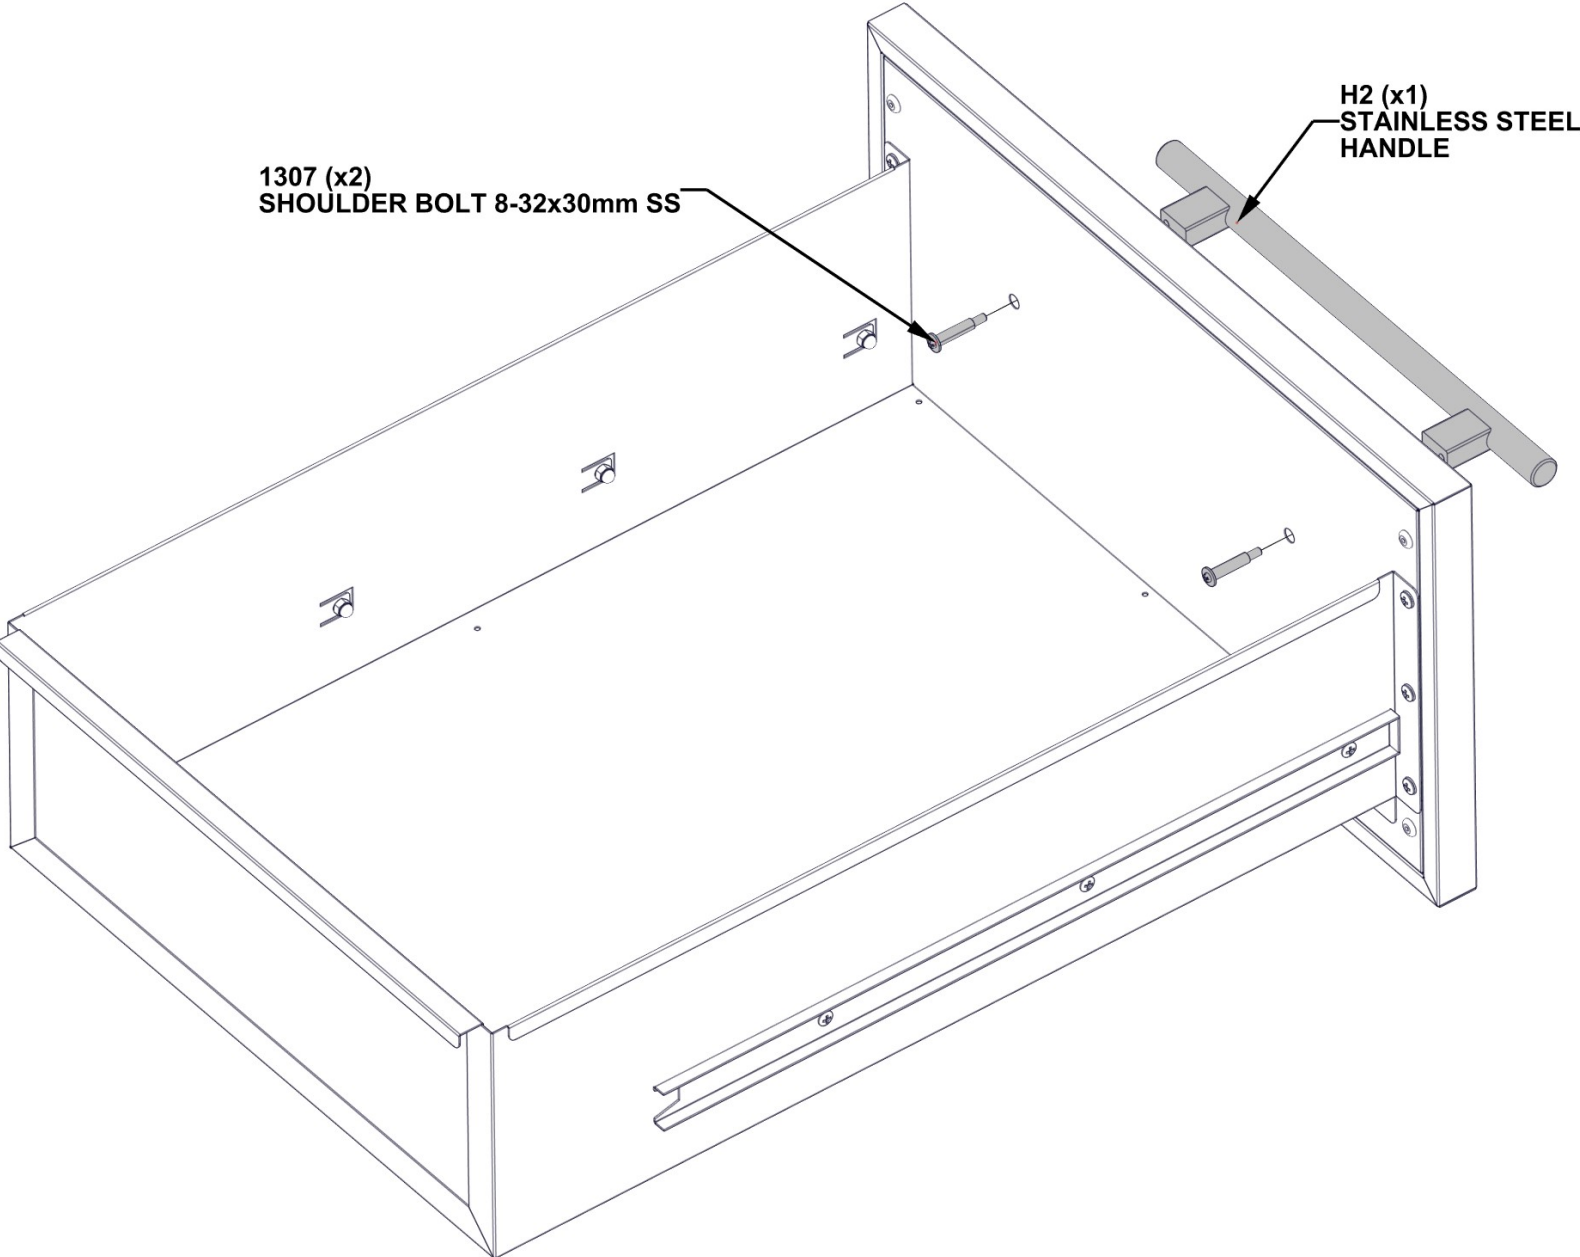


# STEP 100 - KITCHEN DRAWER INSTALLATION

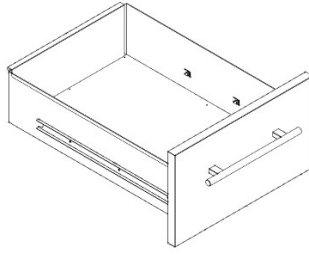


**DRAWER ASSEMBLY  
FROM STEP 99**

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- ATTACH DRAWER ASSEMBLY BY ALIGNING BOTH ENDS OF FACTORY ASSEMBLED DRAWER SLIDES WITH ONE ANOTHER.
- PRESS TOGETHER UNTIL DRAWER SLIDES CONNECT.

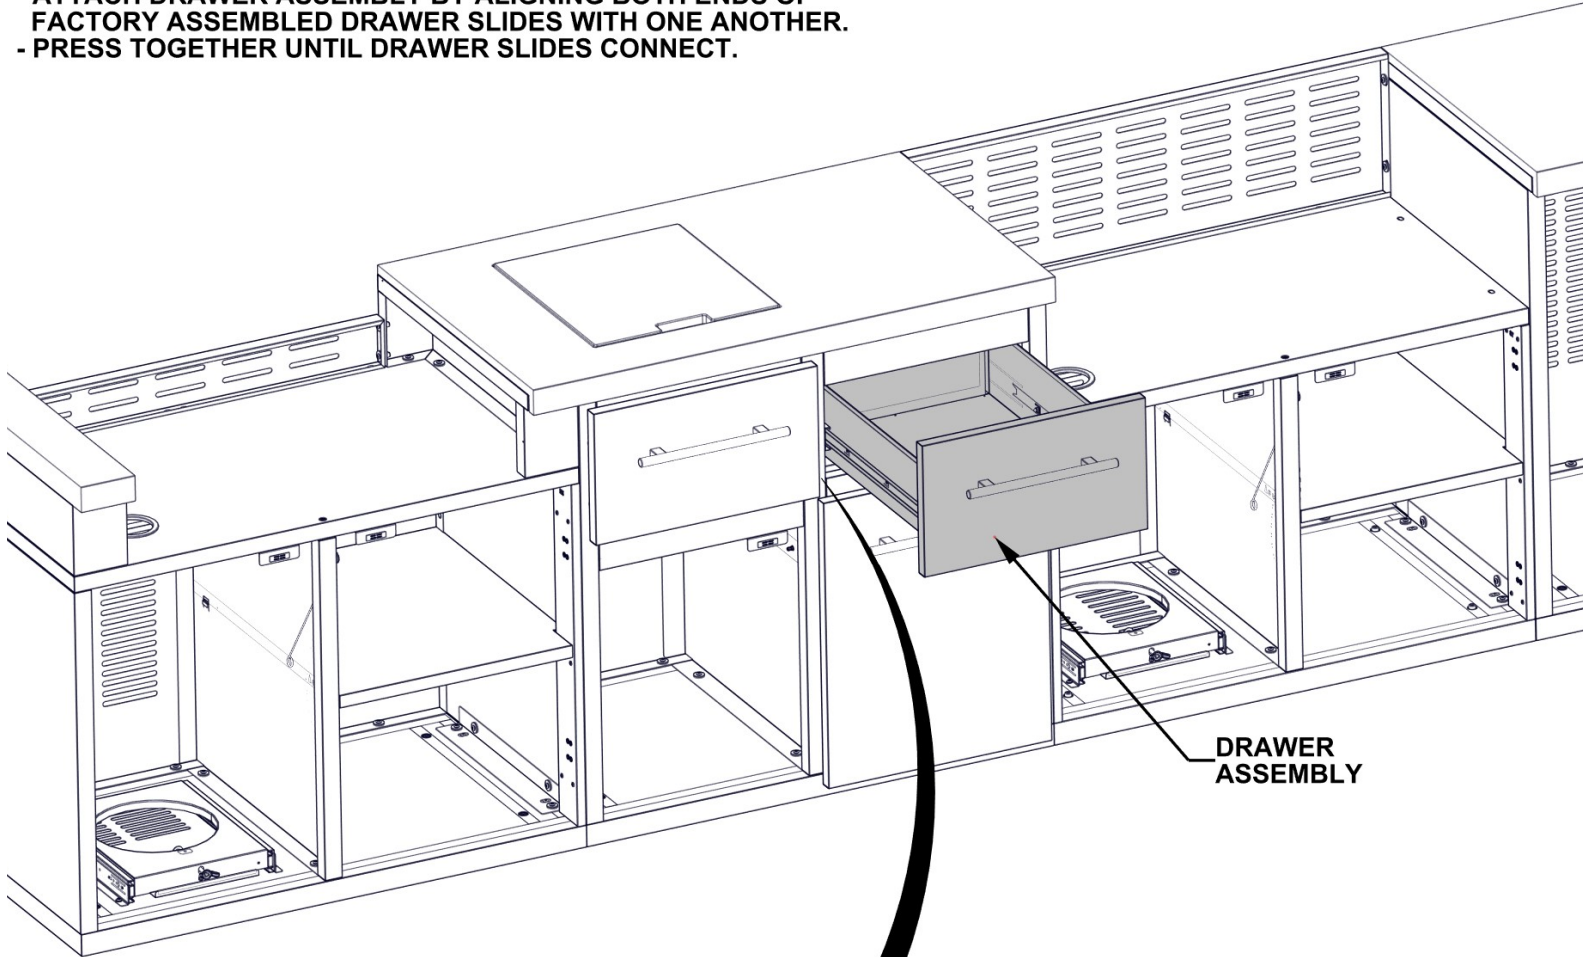

**DRAWER  
ASSEMBLY**

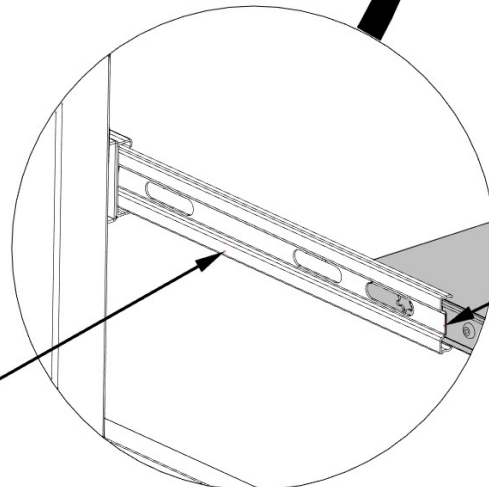


**SLIDE INNER RACE  
OF DRAWER SLIDE OUT  
BEFORE ATTACHING SLIDES**

**ALIGN DRAWER SLIDES  
ON BOTH SIDES OF DRAWER**

# STEP 101A - DOOR ASSEMBLY

Qty	PartNo	Description
20	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW



**D1 PIZZA OVEN CABINET DOOR ASSEMBLY L - A4M03546**  
(x1) 28 7/16"x19 5/8"x15/16" (24x498x722.5)



**D2 PIZZA OVEN CABINET DOOR ASSEMBLY R - A4M03555**  
(x1) 28 7/16"x19 5/8"x15/16" (24x498x722.5)



**D6 SINK CABINET DOOR ASSEMBLY L - A4M03577**  
(x1) 22 1/4"x17 13/16"x15/16" (24x452x565)



**D7 GRILL CABINET DOOR ASSEMBLY L - A4M03587**  
(x1) 24 13/16"x19 1/16"x15/16" (24x484.15x630)




**D8 GRILL CABINET DOOR ASSEMBLY R - A4M03590**  
(x1) 24 13/16"x19 1/16"x15/16" (24x484.15x630)



**A4M03025 FULL OVERLAY HINGE**  
(x10)


- INSTALL CABINET HINGES TO THE FIVE DOORS.

**DO NOT OVERTIGHTEN HARDWARE**

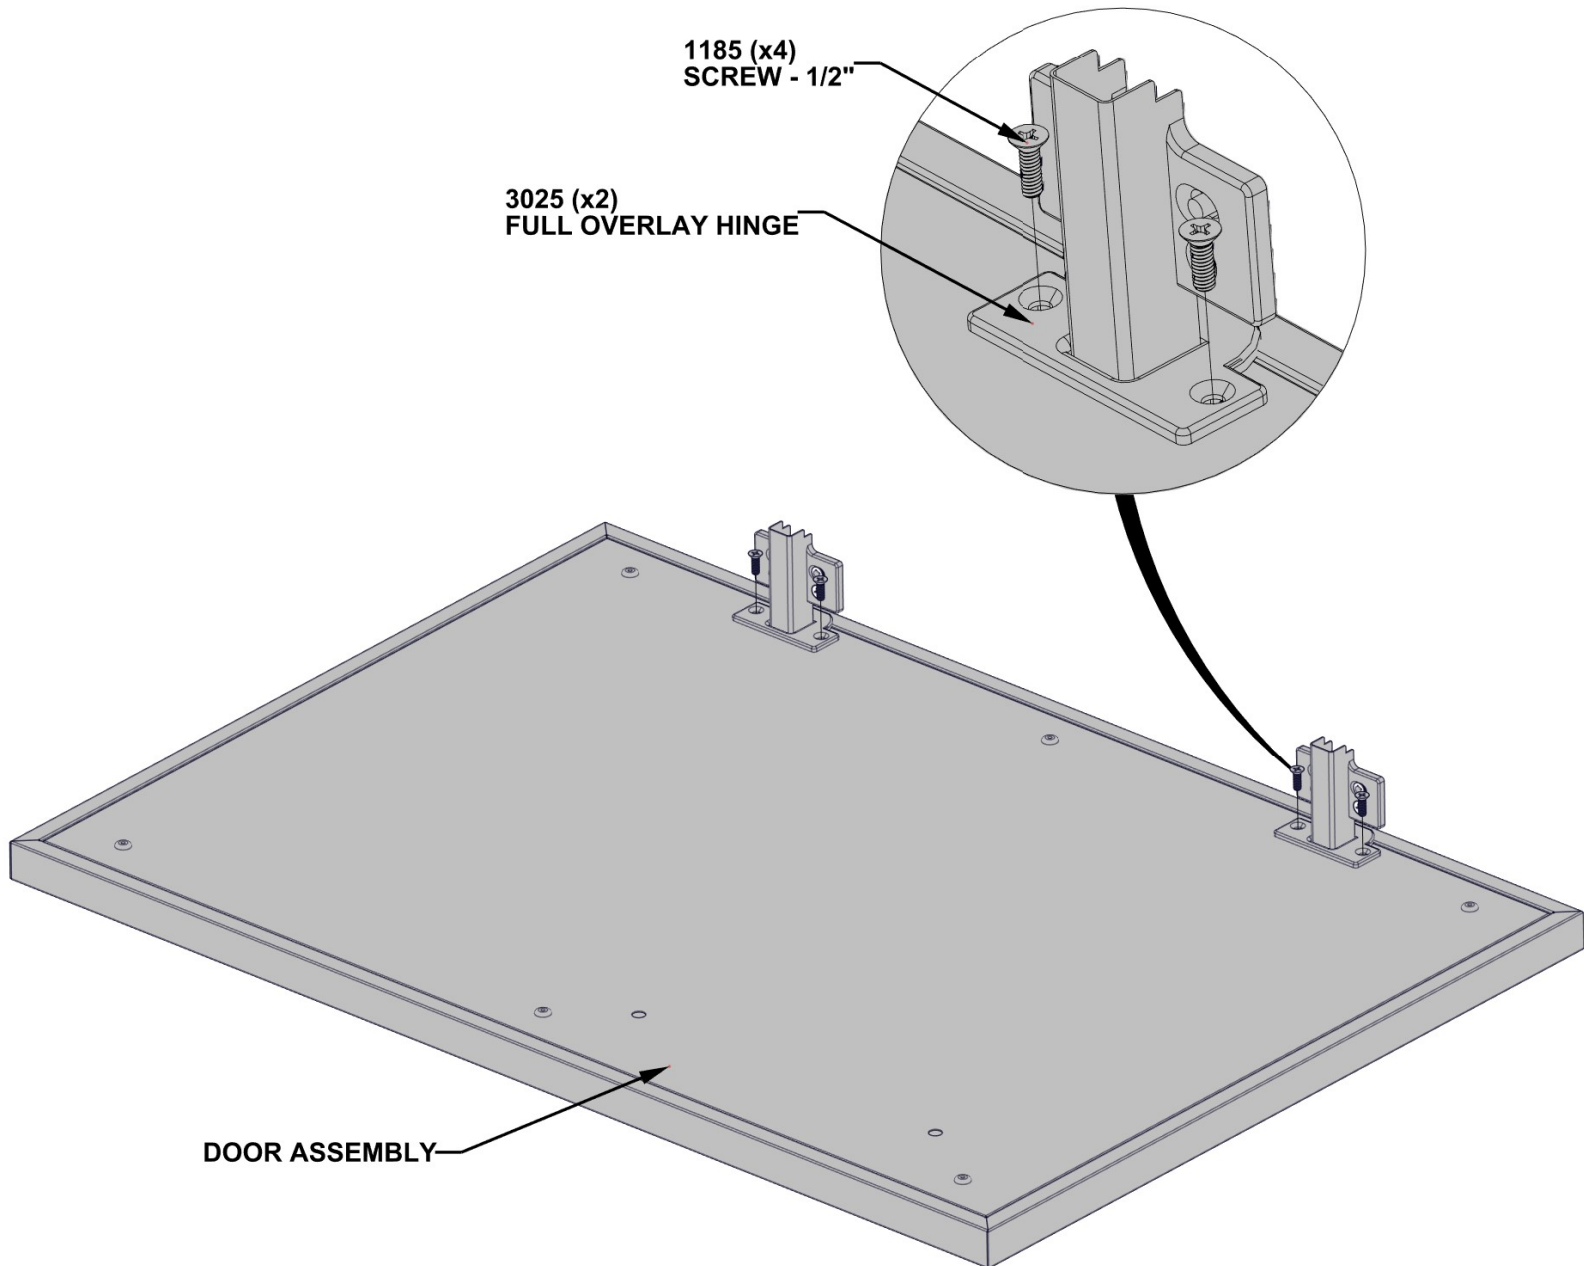


# STEP 101B - DOOR ASSEMBLY

Qty	PartNo	Description
10	H101307	SHOULDER BOLT 8-32x30mm SS

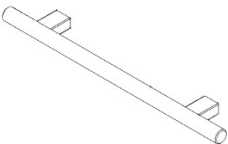


**H2 STAINLESS STEEL HANDLE - A4M03024**  
(x5) 5/8"x1 9/16"x11 13/16" (16x40x300)

- INSTALL CABINET HANDLES ON THE FIVE DOORS FROM PREVIOUS STEP.

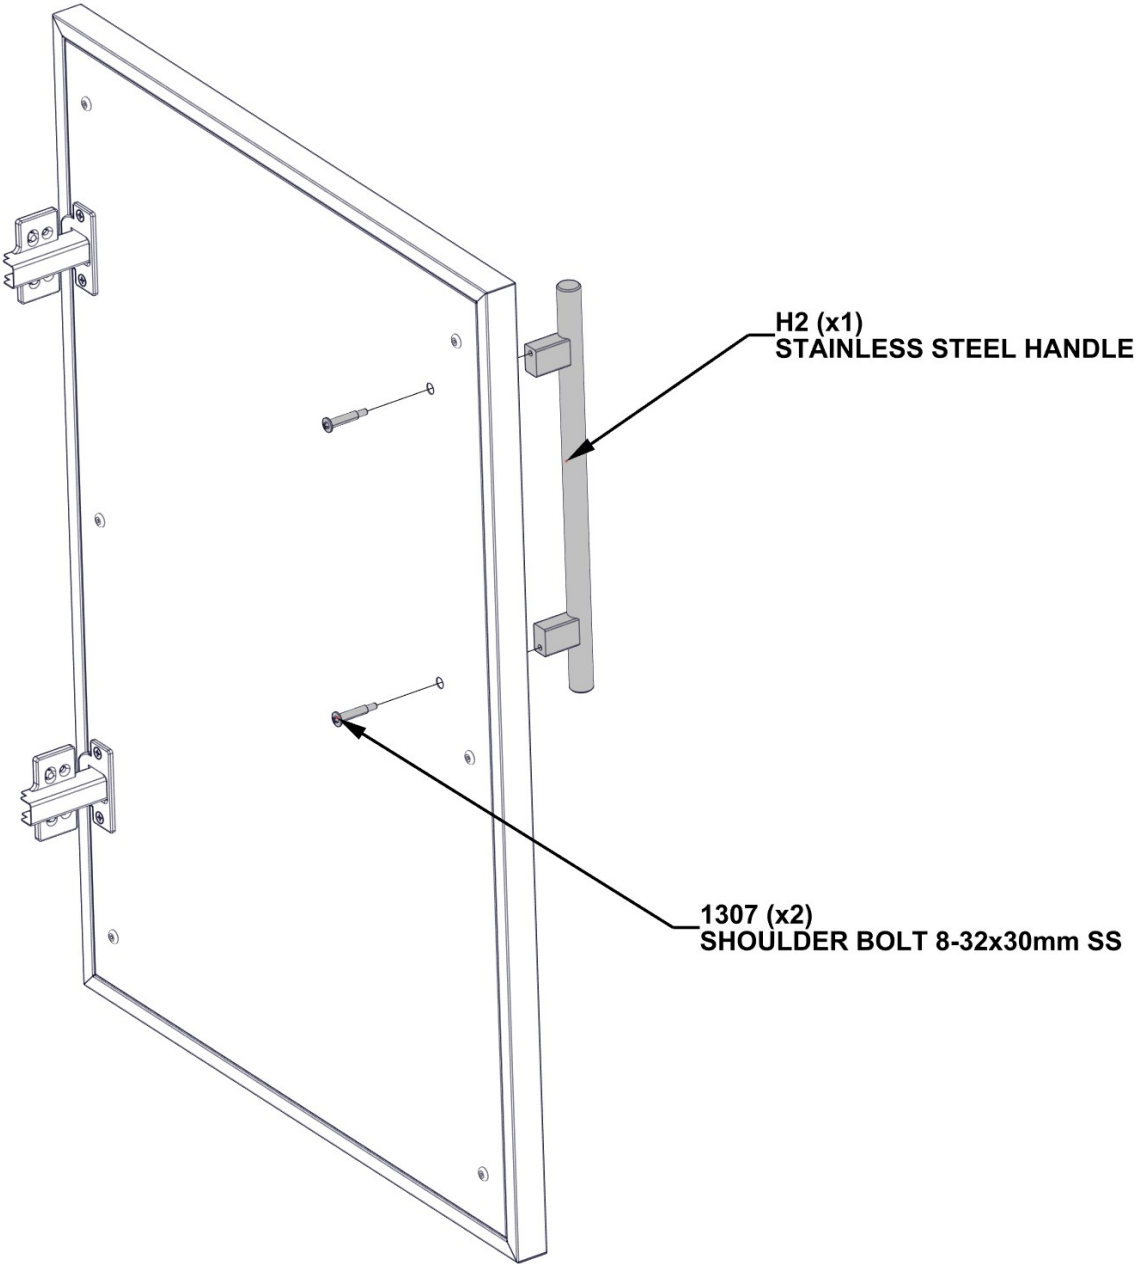


# STEP 102 - CABINET DOOR ATTACHMENT

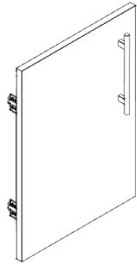


Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

D1 PIZZA OVEN CABINET DOOR ASSEMBLY L - A4M03546  
(x1) 28 7/16"x19 5/8"x15/16" (24x498x722.5)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

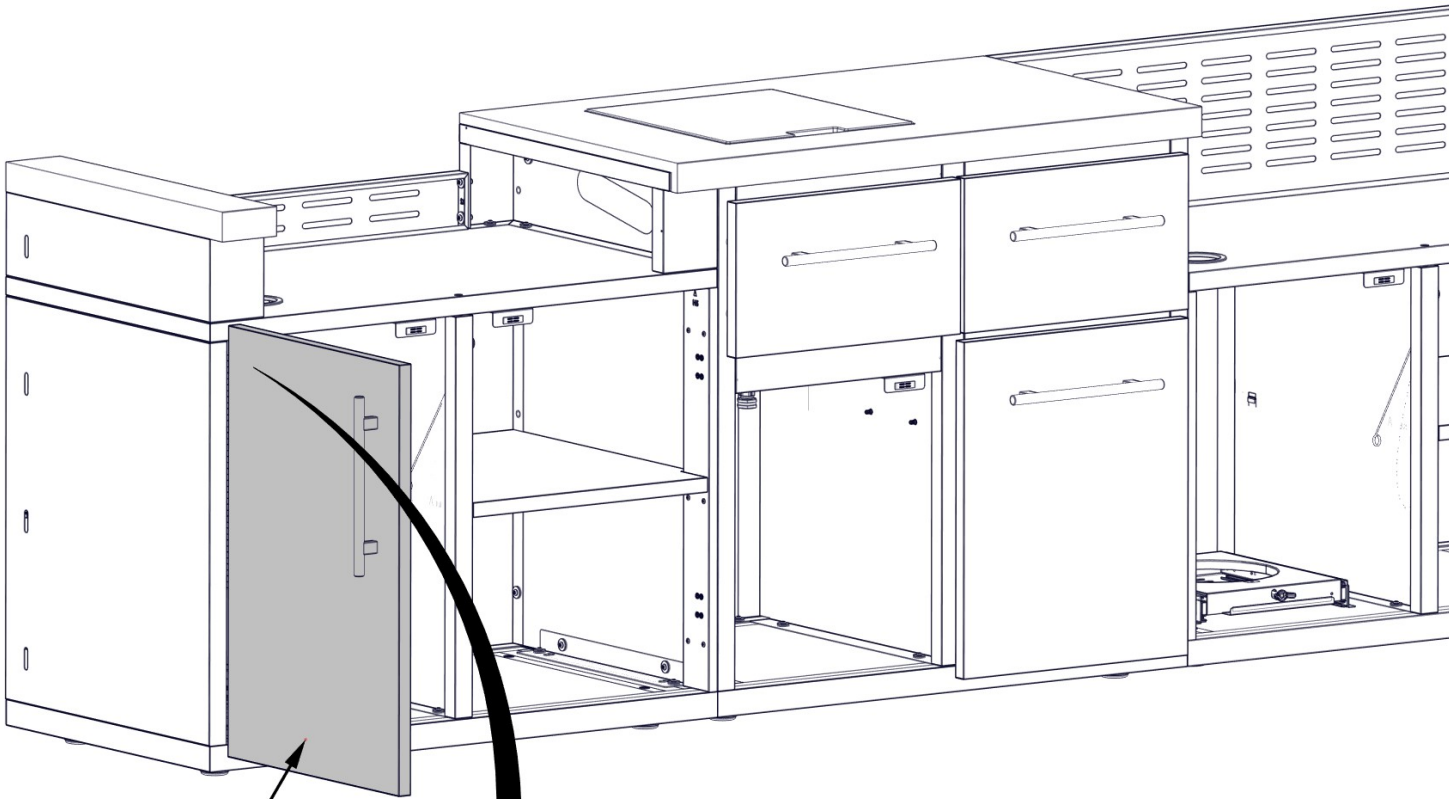

D1 (x1)  
PIZZA OVEN CABINET  
DOOR ASSEMBLY

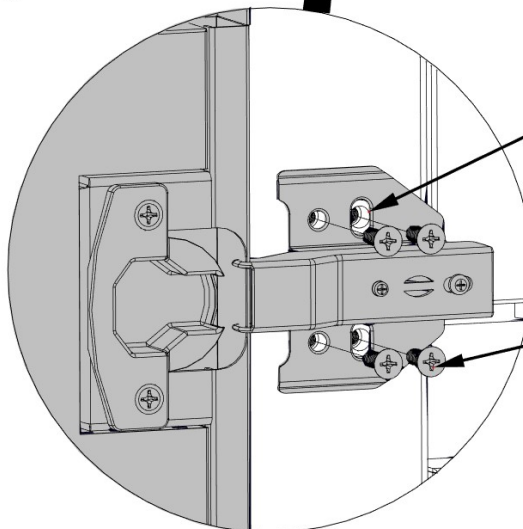


**ALIGN HINGE BRACKET WITH  
THREADED INSERTS IN PANEL**

**DO NOT OVERTIGHTEN HARDWARE**

**1185 (x8)  
SCREW - 1/2"**


# STEP 103 - CABINET DOOR ATTACHMENT

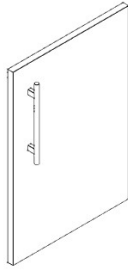

Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

D2 PIZZA OVEN CABINET DOOR ASSEMBLY R - A4M03555  
 (x1) 28 7/16"x19 5/8"x15/16" (24x498x722.5)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

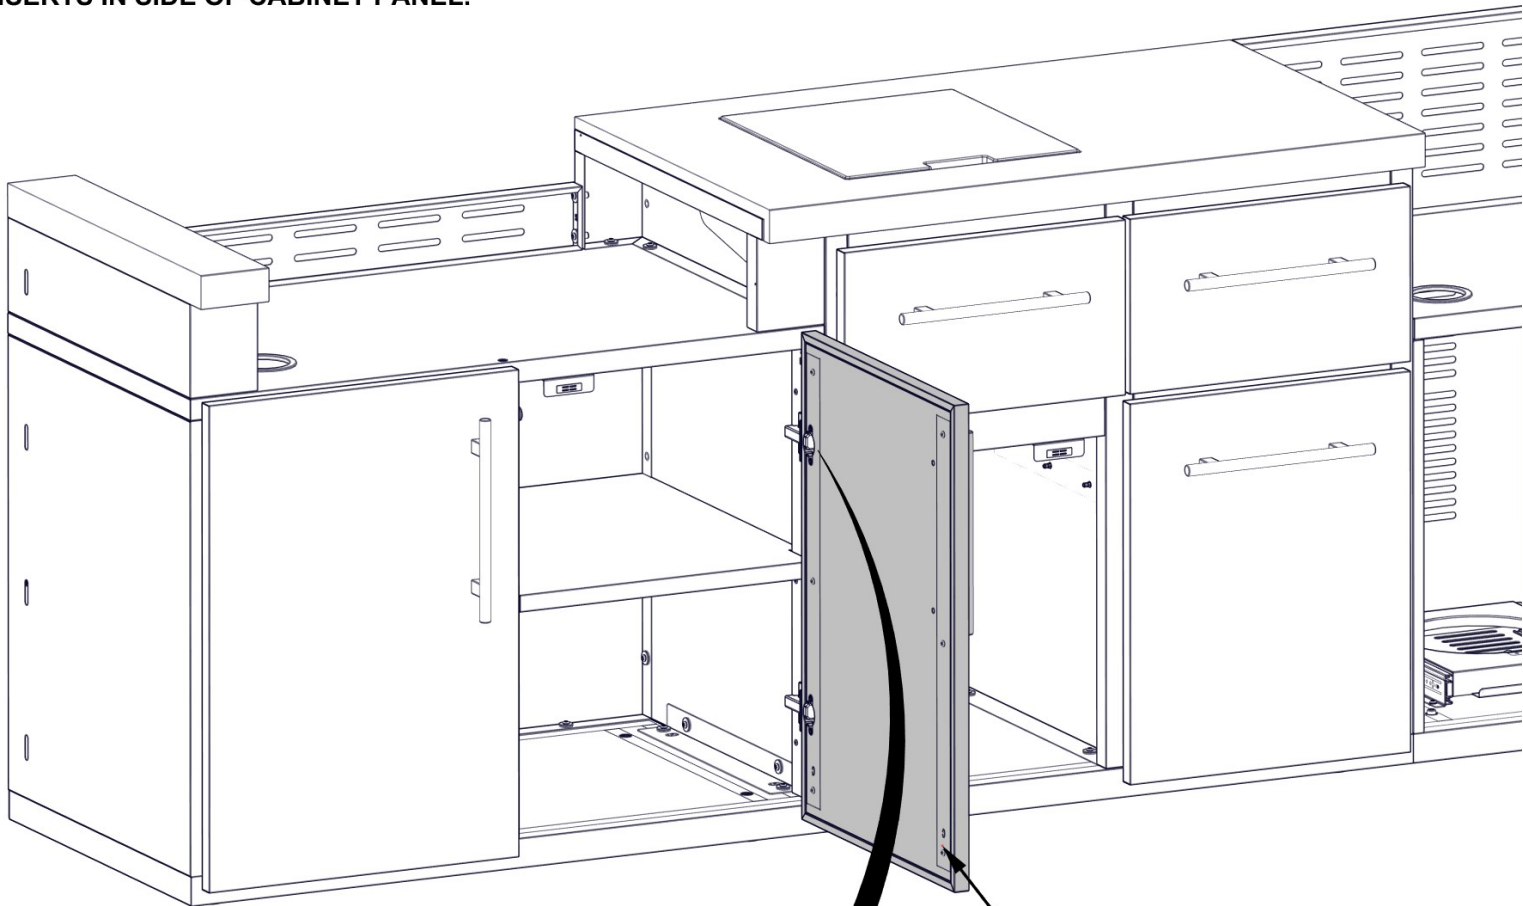


D2 (x1)  
 PIZZA OVEN CABINET  
 DOOR ASSEMBLY R


**ALIGN HINGE BRACKET WITH  
 THREADED INSERTS IN PANEL**

**DO NOT OVERTIGHTEN HARDWARE**

1185 (x8)  
 SCREW - 1/2"

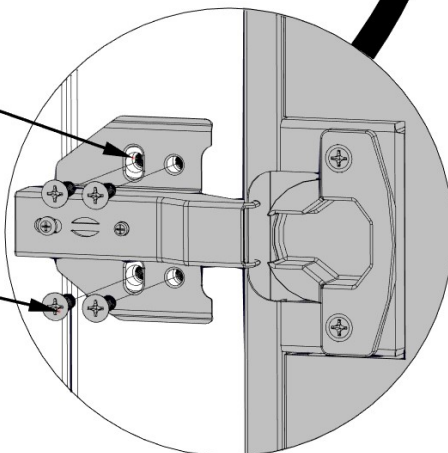


# STEP 104 - CABINET DOOR ATTACHMENT

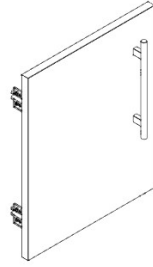


Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

D6 SINK CABINET DOOR ASSEMBLY L - A4M03577  
(x1) 22 1/4"x17 13/16"x15/16" (24x452x565)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

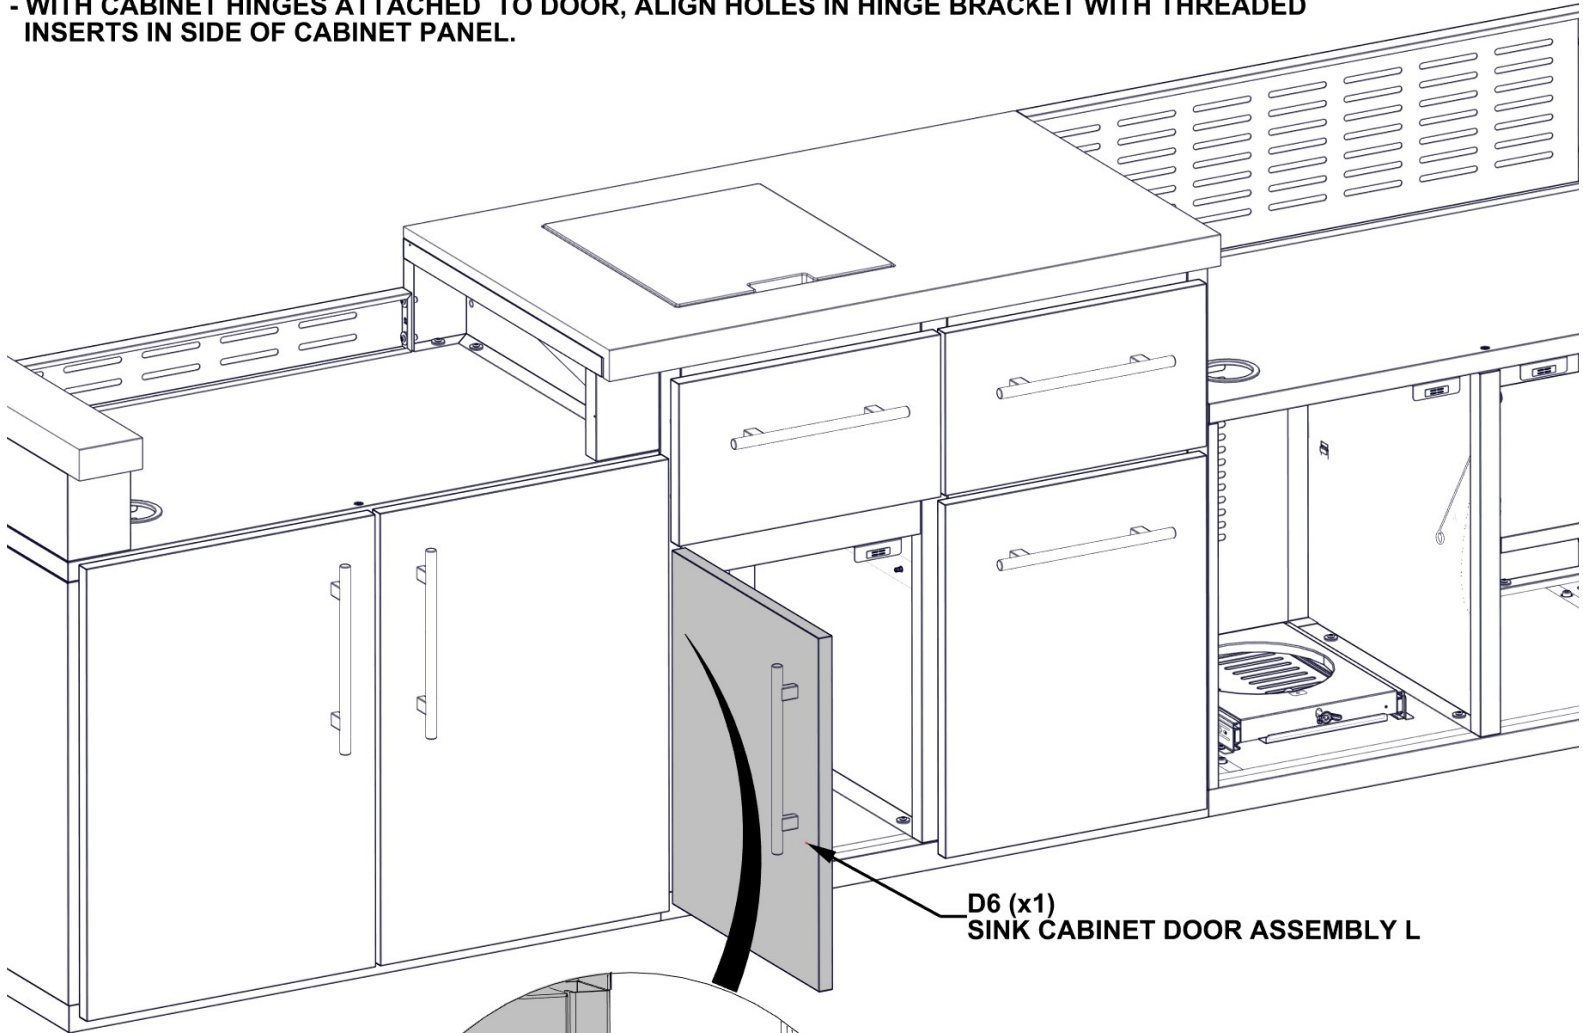

D6 (x1)  
SINK CABINET DOOR ASSEMBLY L

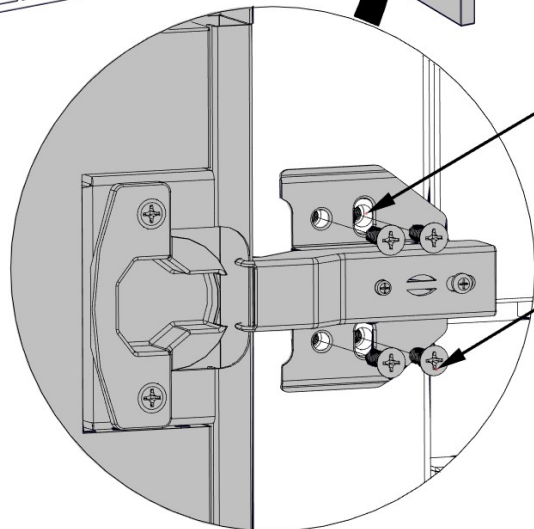


**ALIGN HINGE BRACKET WITH  
THREADED INSERTS IN PANEL**

**DO NOT OVERTIGHTEN HARDWARE**

1185 (x8)  
SCREW - 1/2"


# STEP 105 - CABINET DOOR ATTACHMENT

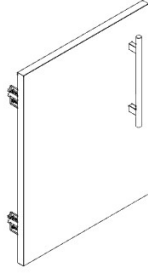


Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

D7 GRILL CABINET DOOR ASSEMBLY L - A4M03587  
(x1) 24 13/16"x19 1/16"x15/16" (24x484.15x630)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

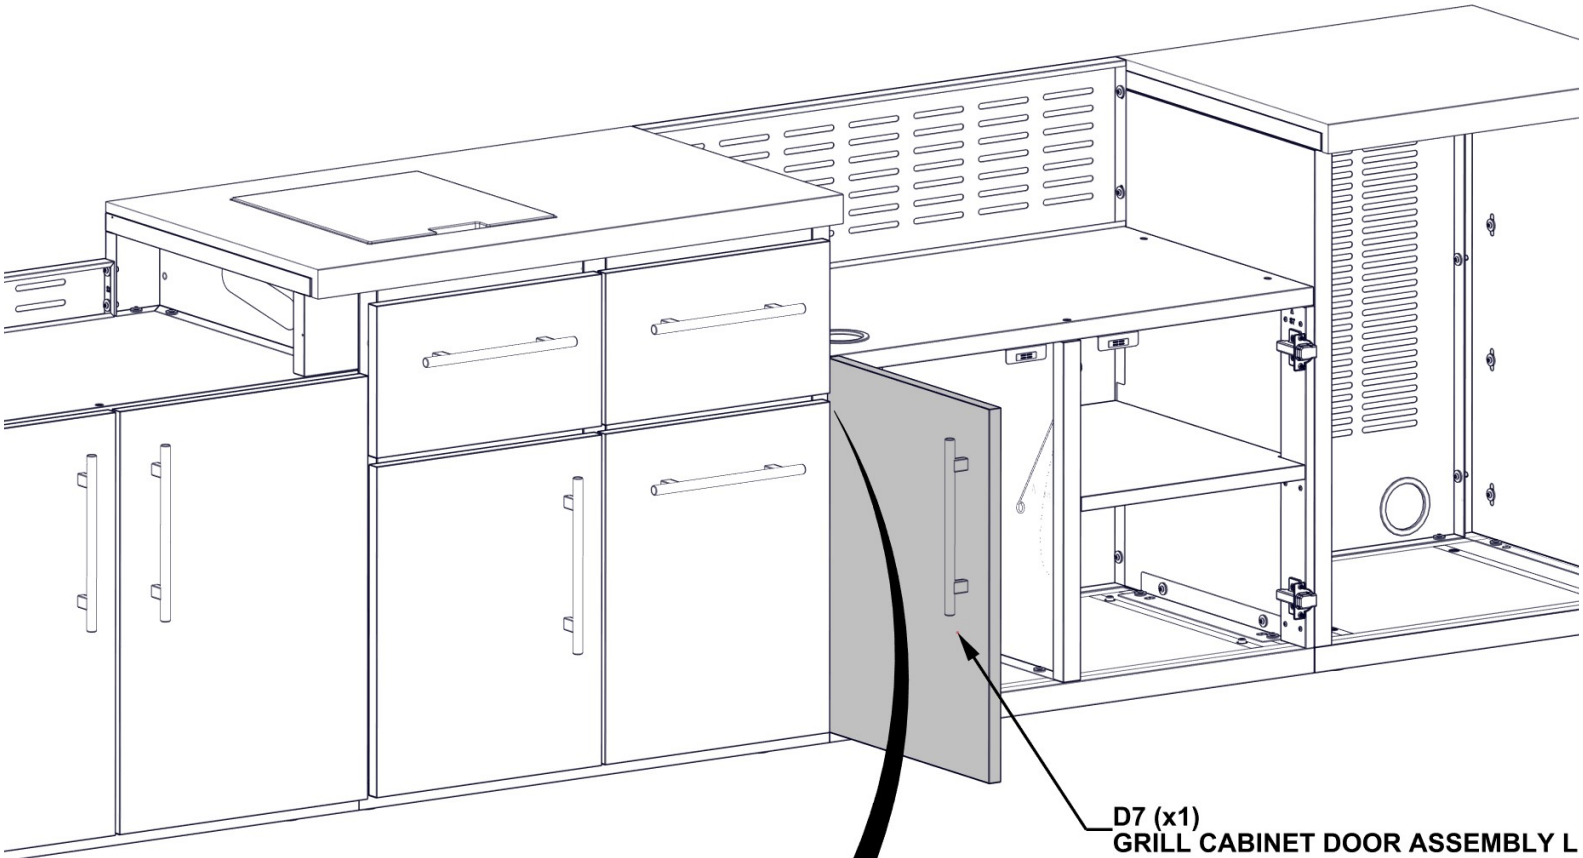

D7 (x1)  
GRILL CABINET DOOR ASSEMBLY L

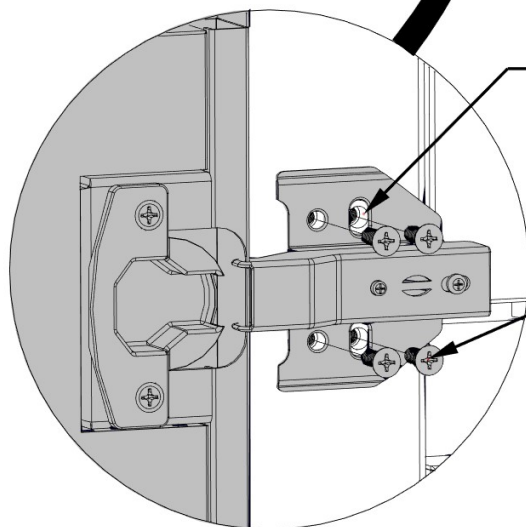


**ALIGN HINGE BRACKET WITH  
THREADED INSERTS IN PANEL**

**DO NOT OVERTIGHTEN HARDWARE**

1185 (x8)  
SCREW - 1/2"


# STEP 106 - CABINET DOOR ATTACHMENT

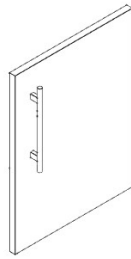

Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

**D8 GRILL CABINET DOOR ASSEMBLY R - A4M03590**  
 (x1) 24 13/16"x19 1/16"x15/16" (24x484.15x630)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

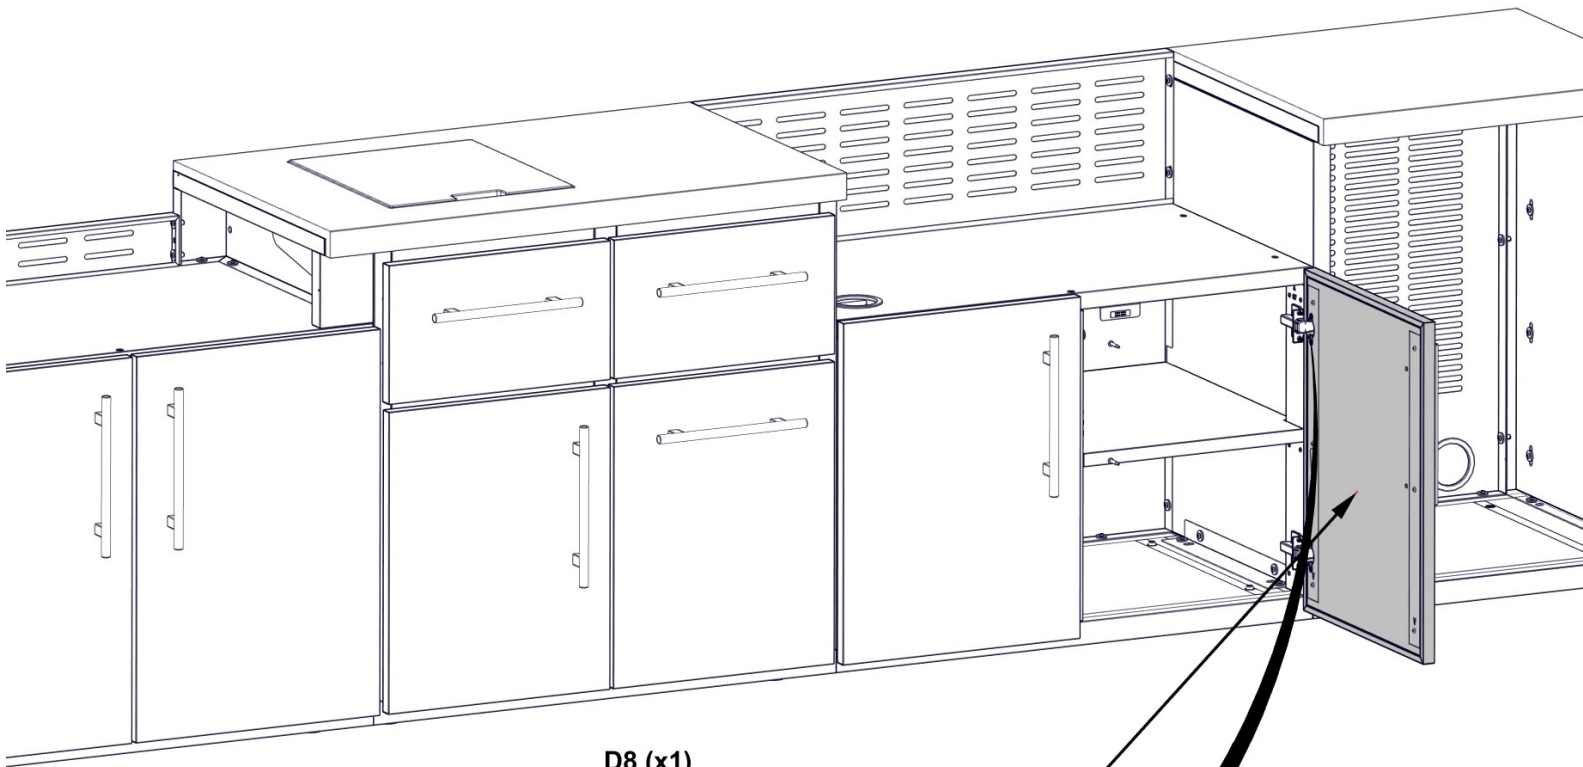


**D8 (x1)**  
**GRILL CABINET DOOR ASSEMBLY R**


**ALIGN HINGE BRACKET WITH  
 THREADED INSERTS IN PANEL**

**DO NOT OVERTIGHTEN HARDWARE**

**1185 (x8)**  
**SCREW - 1/2"**

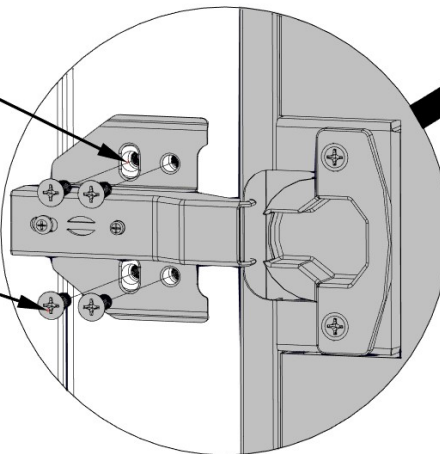


# STEP 107 - BAR CABINET ASSEMBLY

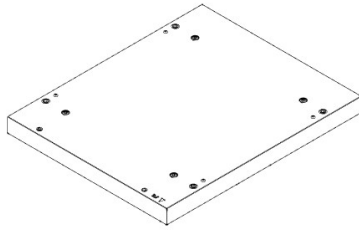


**F5 FLOOR PANEL ASSEMBLY - A4M03611**  
(x1) 23 3/8"x19 1/8"x2 5/8" (66x486x594)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- POSITION FLOOR PANEL AS SHOWN BELOW.
- EACH FLOOR PANEL HAS FACTORY INSTALLED ADJUSTABLE FEET. USE PROVIDED HEX DRIVER TO ADJUST EACH FOOT UNTIL PANEL IS LEVEL.

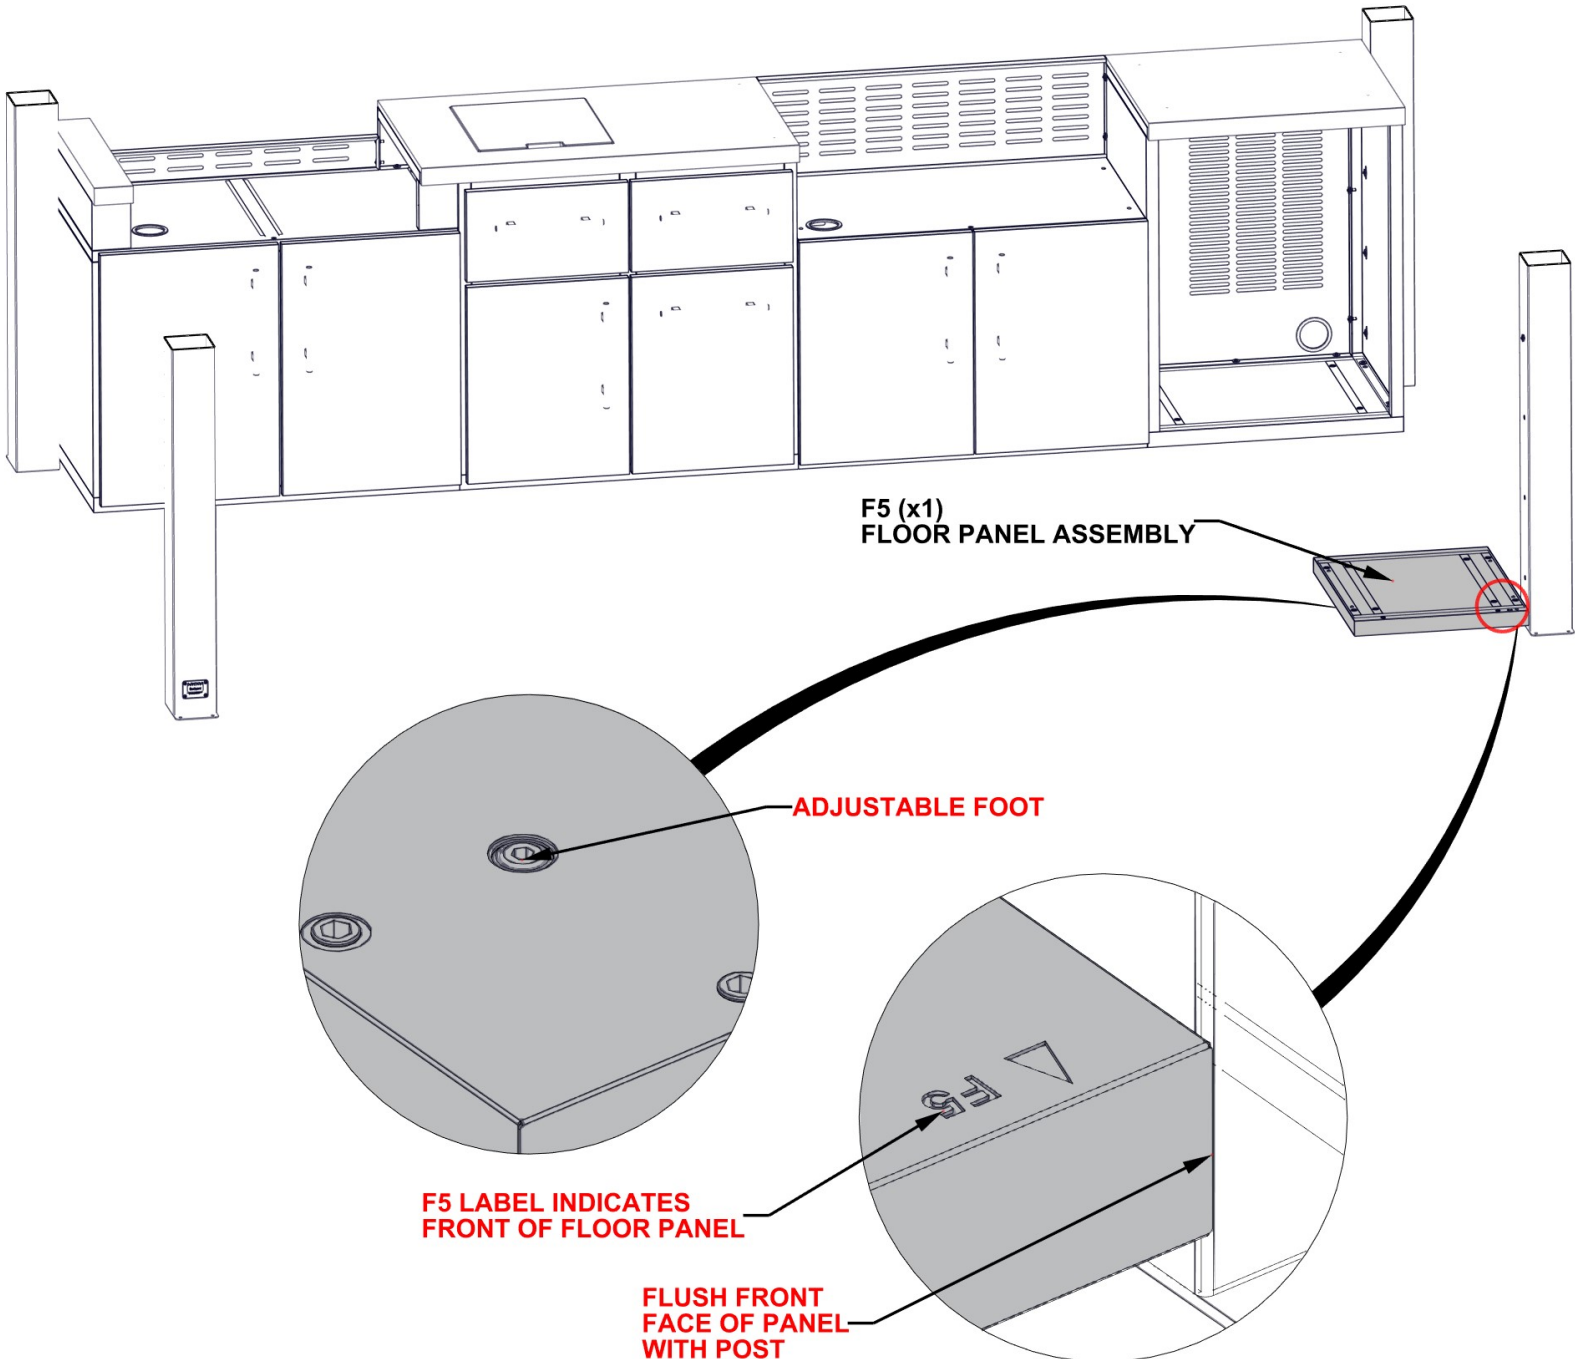


# STEP 108A - BAR CABINET ASSEMBLY

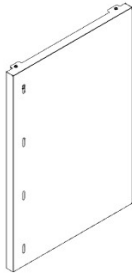

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

S10 SIDE PANEL ASSEMBLY - A4M03613  
 (x1) 33 3/8"x23 3/8"x1 15/16" (50x594x848.2)


- ONLY BAR CABINET IS SHOWN FOR DETAIL.

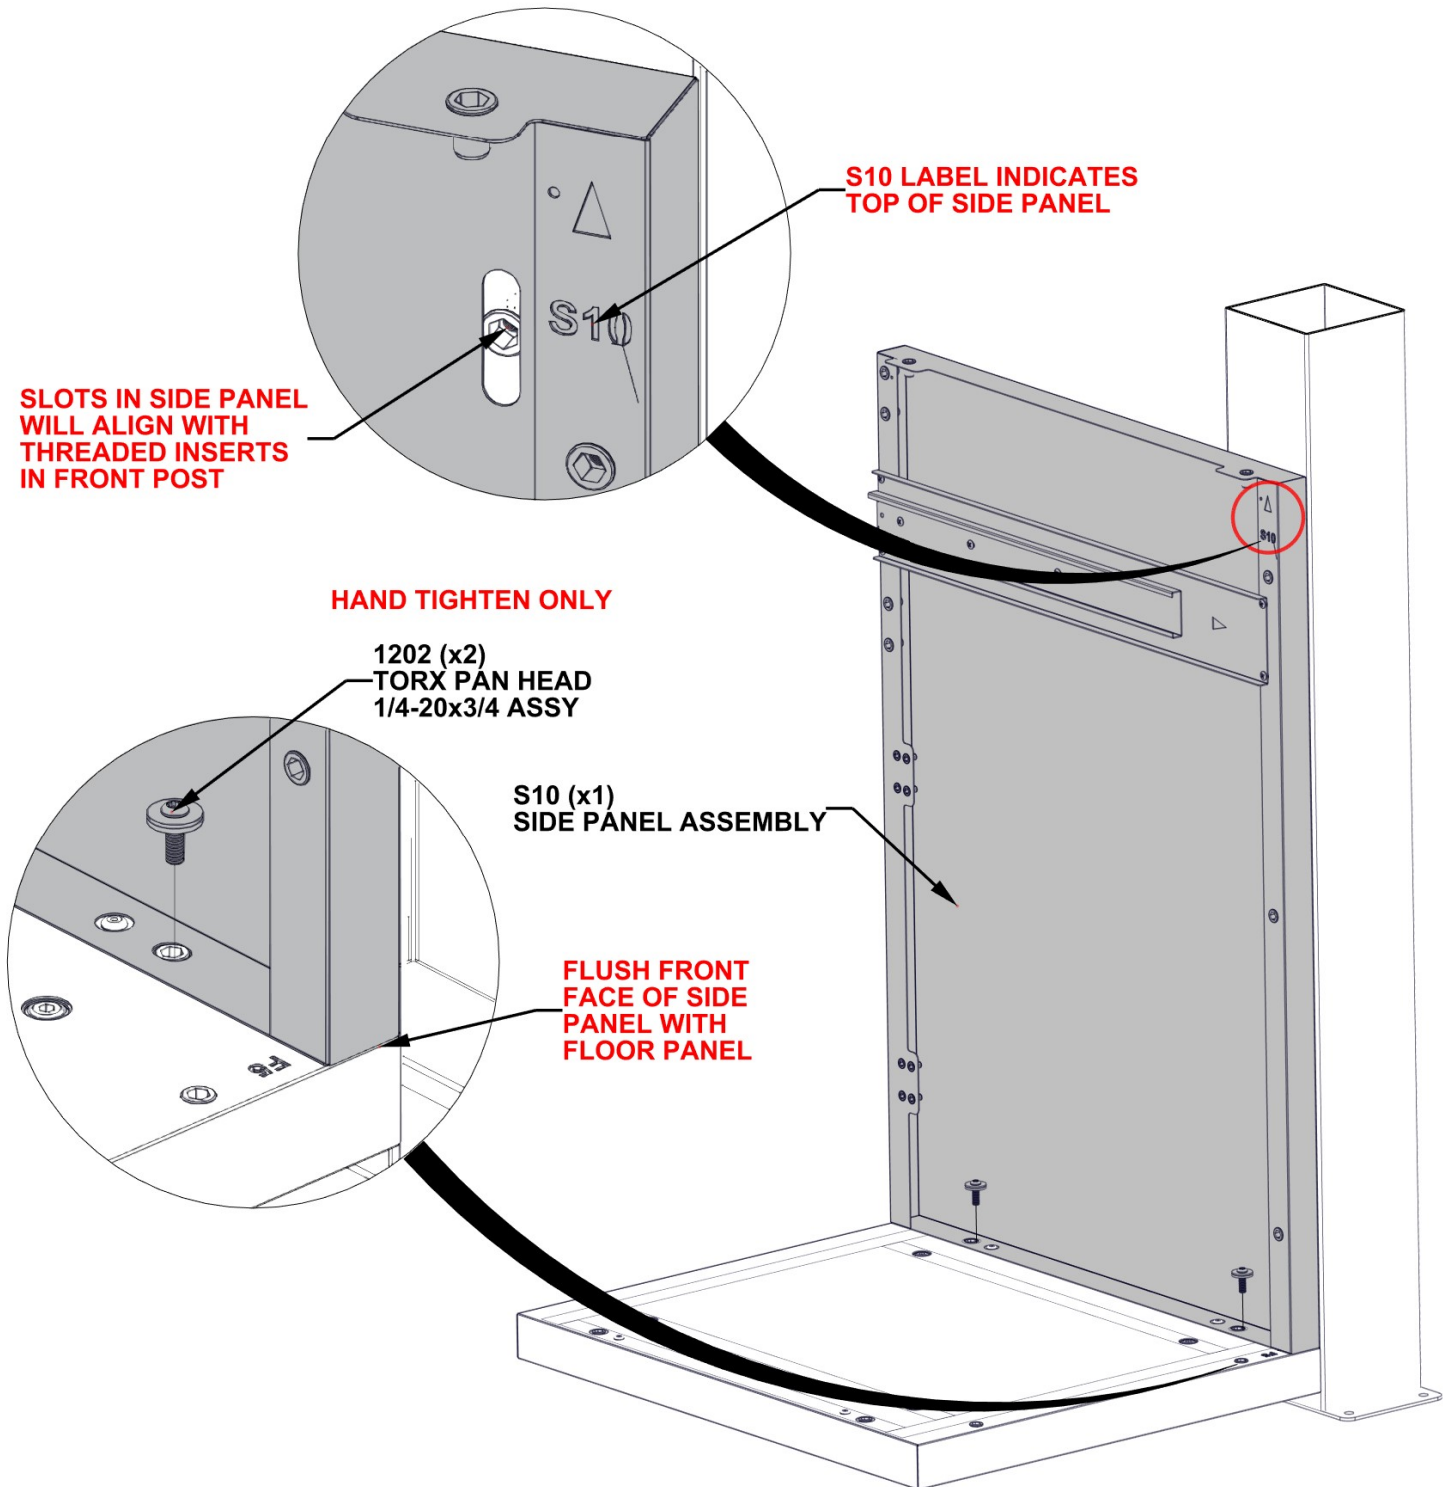

# STEP 108B - BAR CABINET ASSEMBLY

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY


- ONLY BAR CABINET IS SHOWN FOR DETAIL.

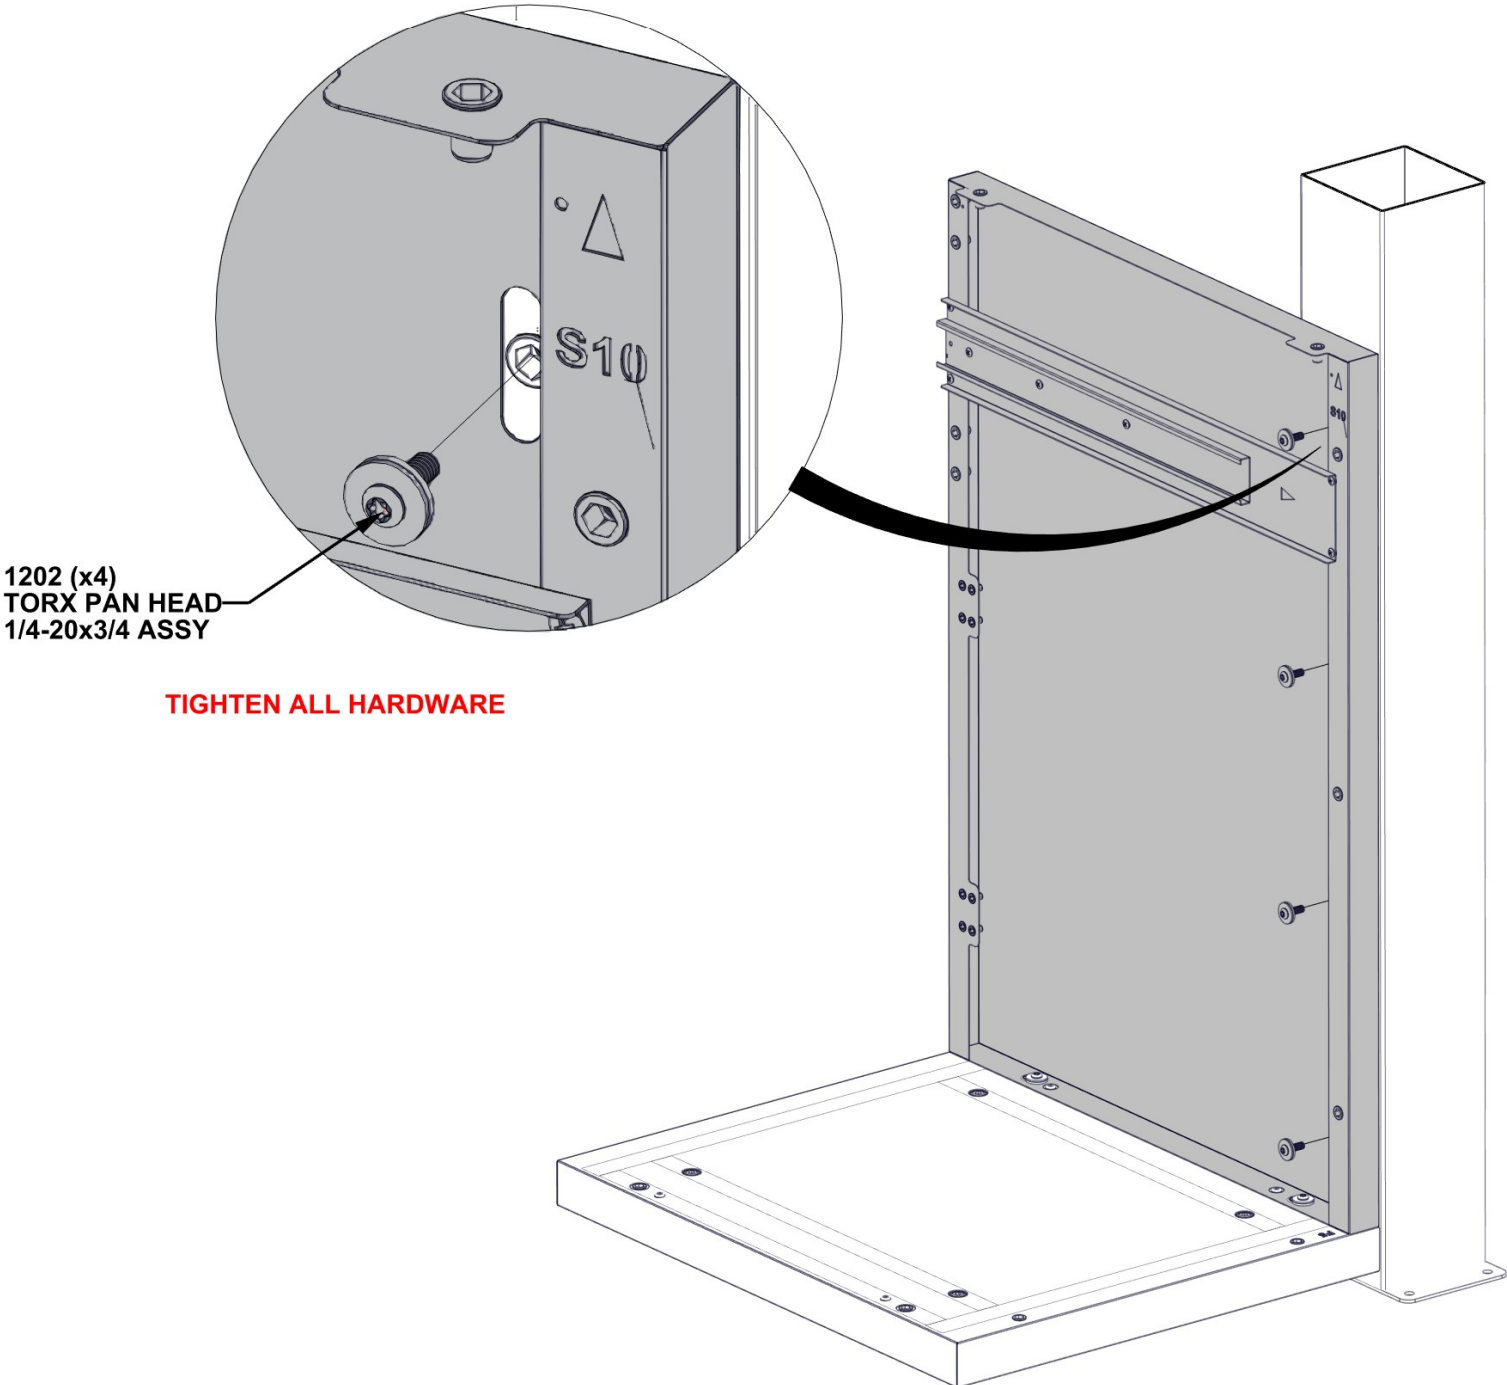

1202 (x4)  
TORX PAN HEAD  
1/4-20x3/4 ASSY

**TIGHTEN ALL HARDWARE**


# STEP 109 - BAR CABINET ASSEMBLY




Qty	PartNo	Description
5	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

G5 BACK PANEL ASSEMBLY - A4M03624  
(x1) 33 3/8"x16 5/16"x1 3/4" (45x414x847.2)

- ONLY BAR CABINET IS SHOWN FOR DETAIL.

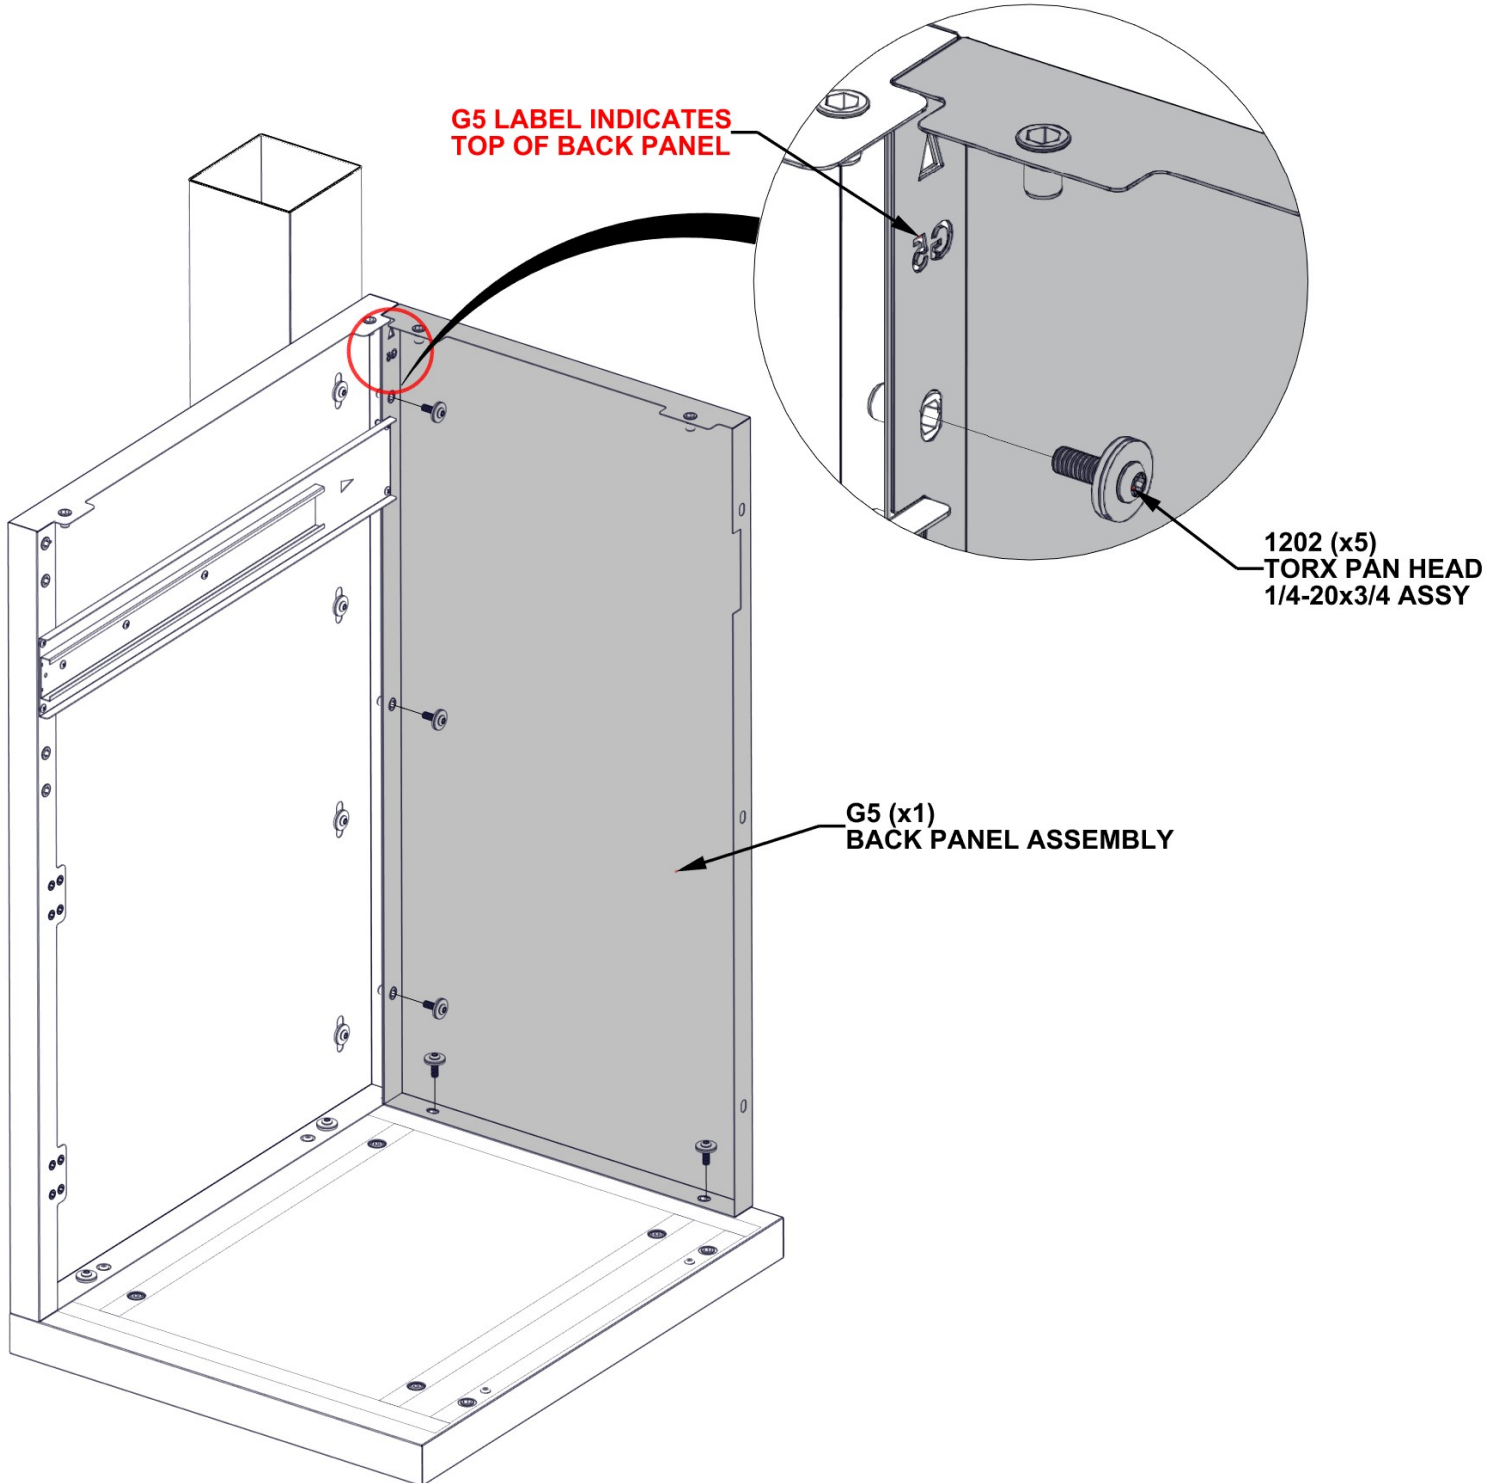


# STEP 110 - BAR CABINET ASSEMBLY

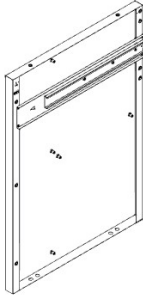


Qty	PartNo	Description
5	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

**S11 SIDE PANEL ASSEMBLY - A4M03614**  
**(x1) 33 3/8"x23 3/8"x1 15/16" (49.2x594x848.2)**

**- ONLY BAR CABINET IS SHOWN FOR DETAIL.**

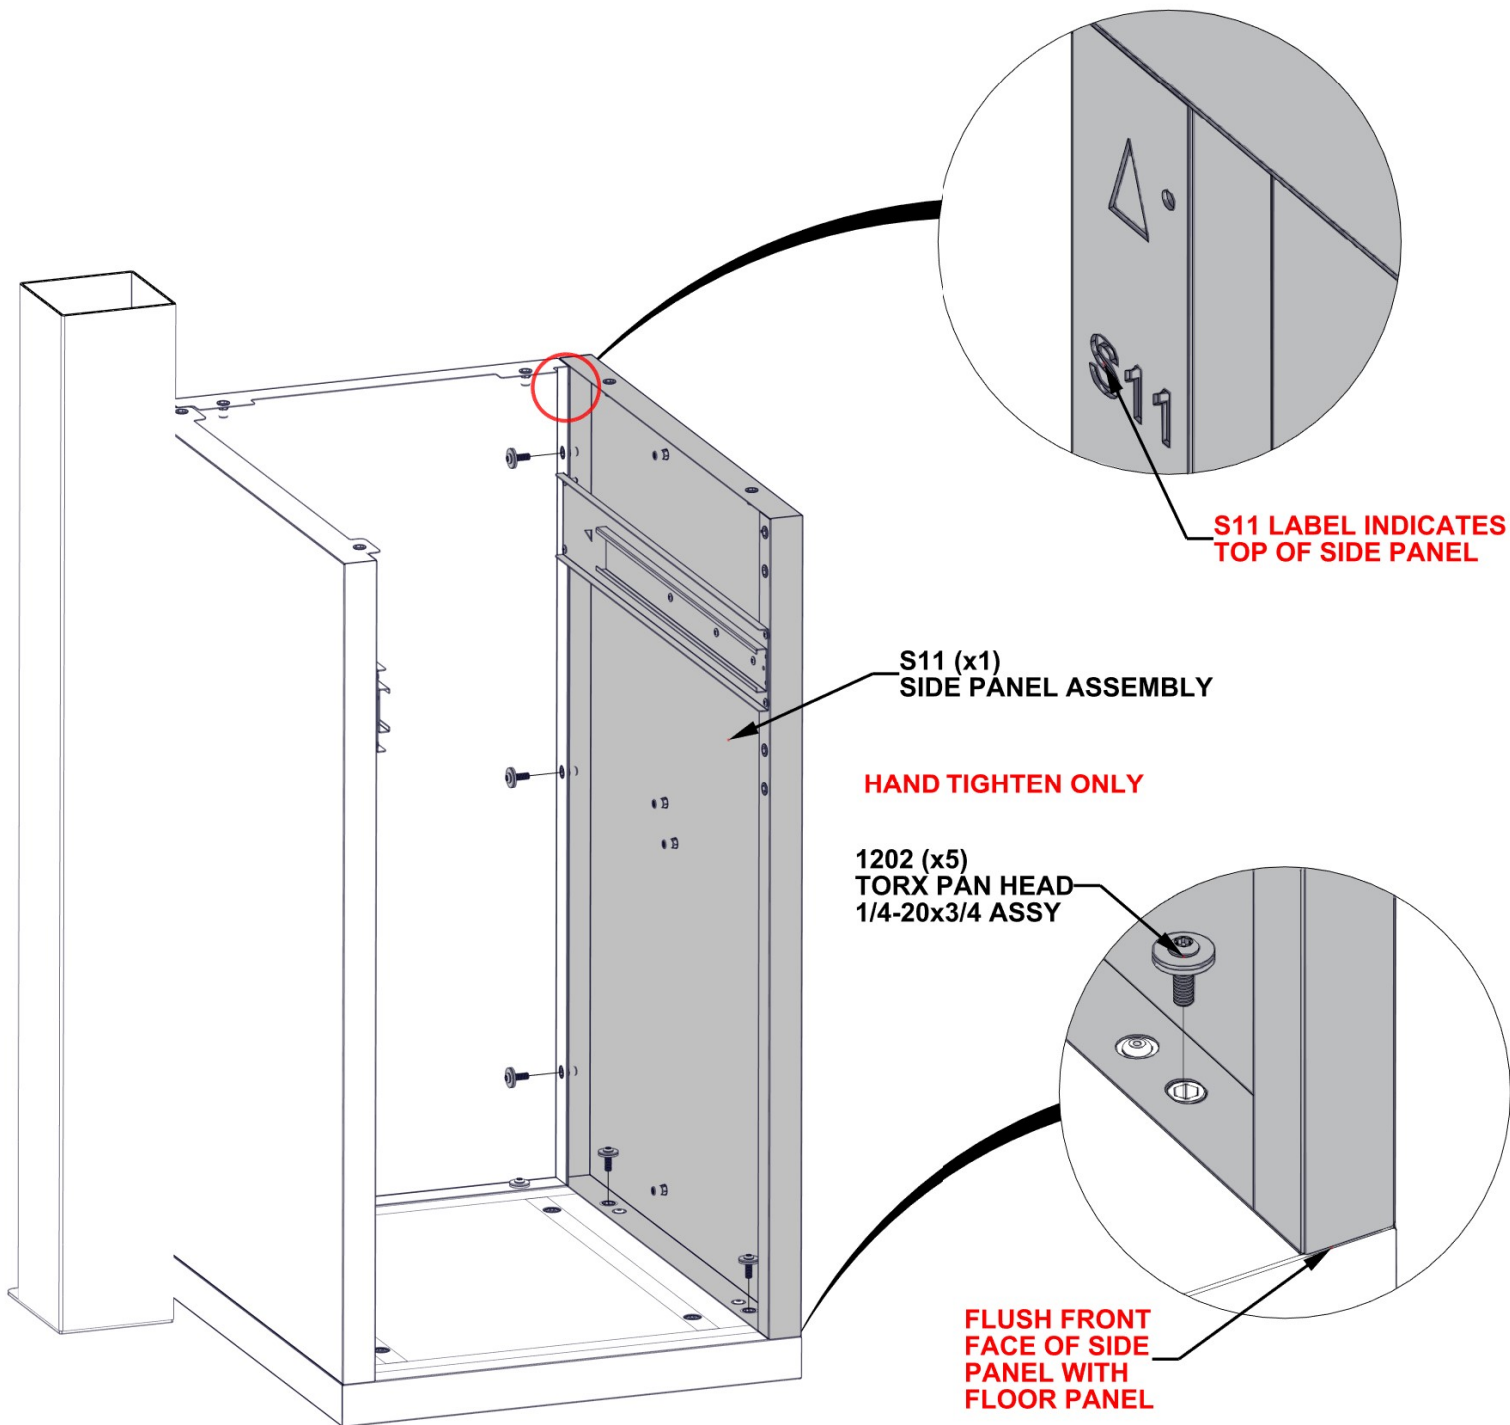


# STEP 111 - BAR CABINET ASSEMBLY

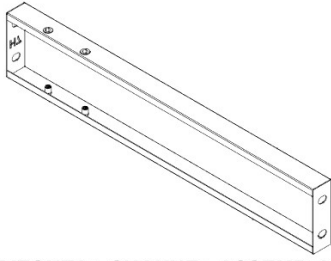


Qty	PartNo	Description
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

H7 HORIZONTAL CHANNEL ASSEMBLY - A4M03623  
(x2) 16 5/16"x2 15/16"x1" (25x75x414)

- ONLY BAR CABINET IS SHOWN FOR DETAIL.
- **HARDWARE ATTACHES ON INSIDE OF CABINET**

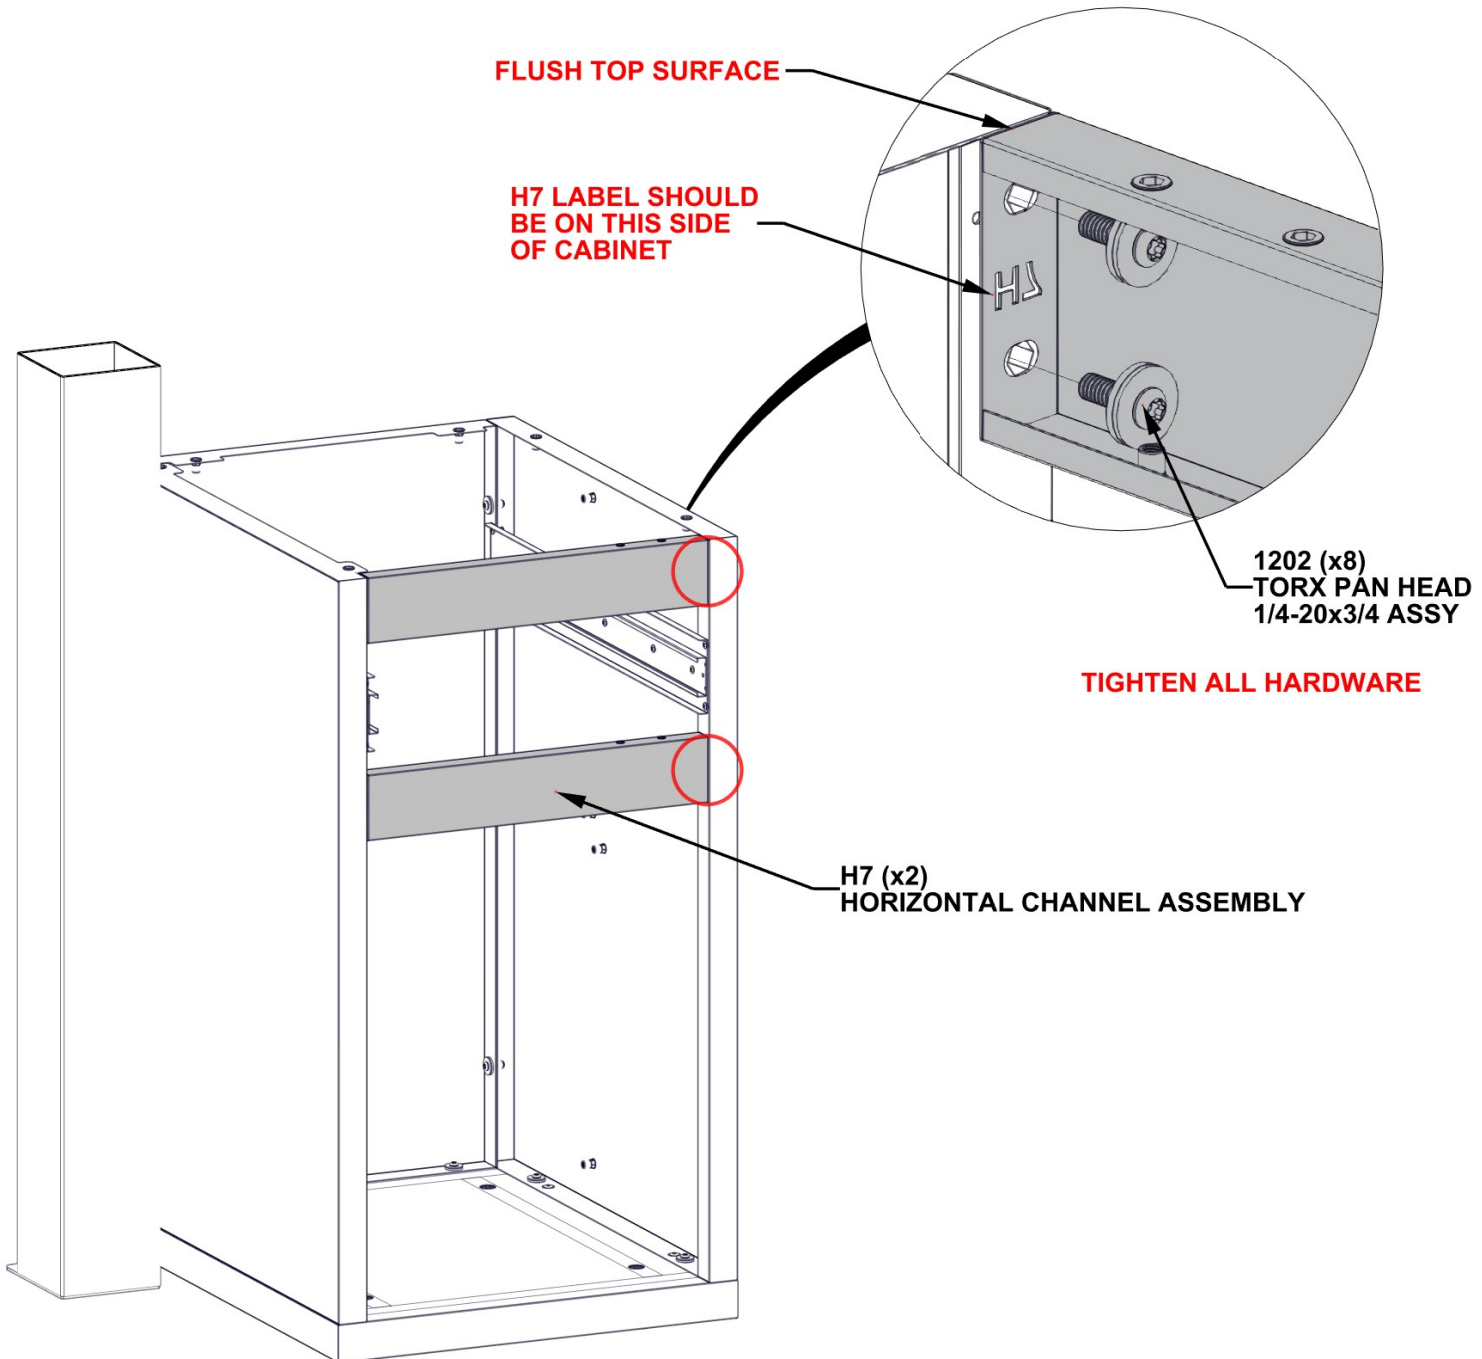


# STEP 112 - BAR CABINET ASSEMBLY

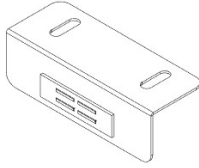


**A2 MAGNET BRACKET - A4M03026**  
(x1) 1"x1 1/4"x3 1/8" (25x31x80)

Qty	PartNo	Description
2	H101289	PAN HEAD SCREW 8-32x1/2" SS

- ONLY BAR CABINET IS SHOWN FOR DETAIL.

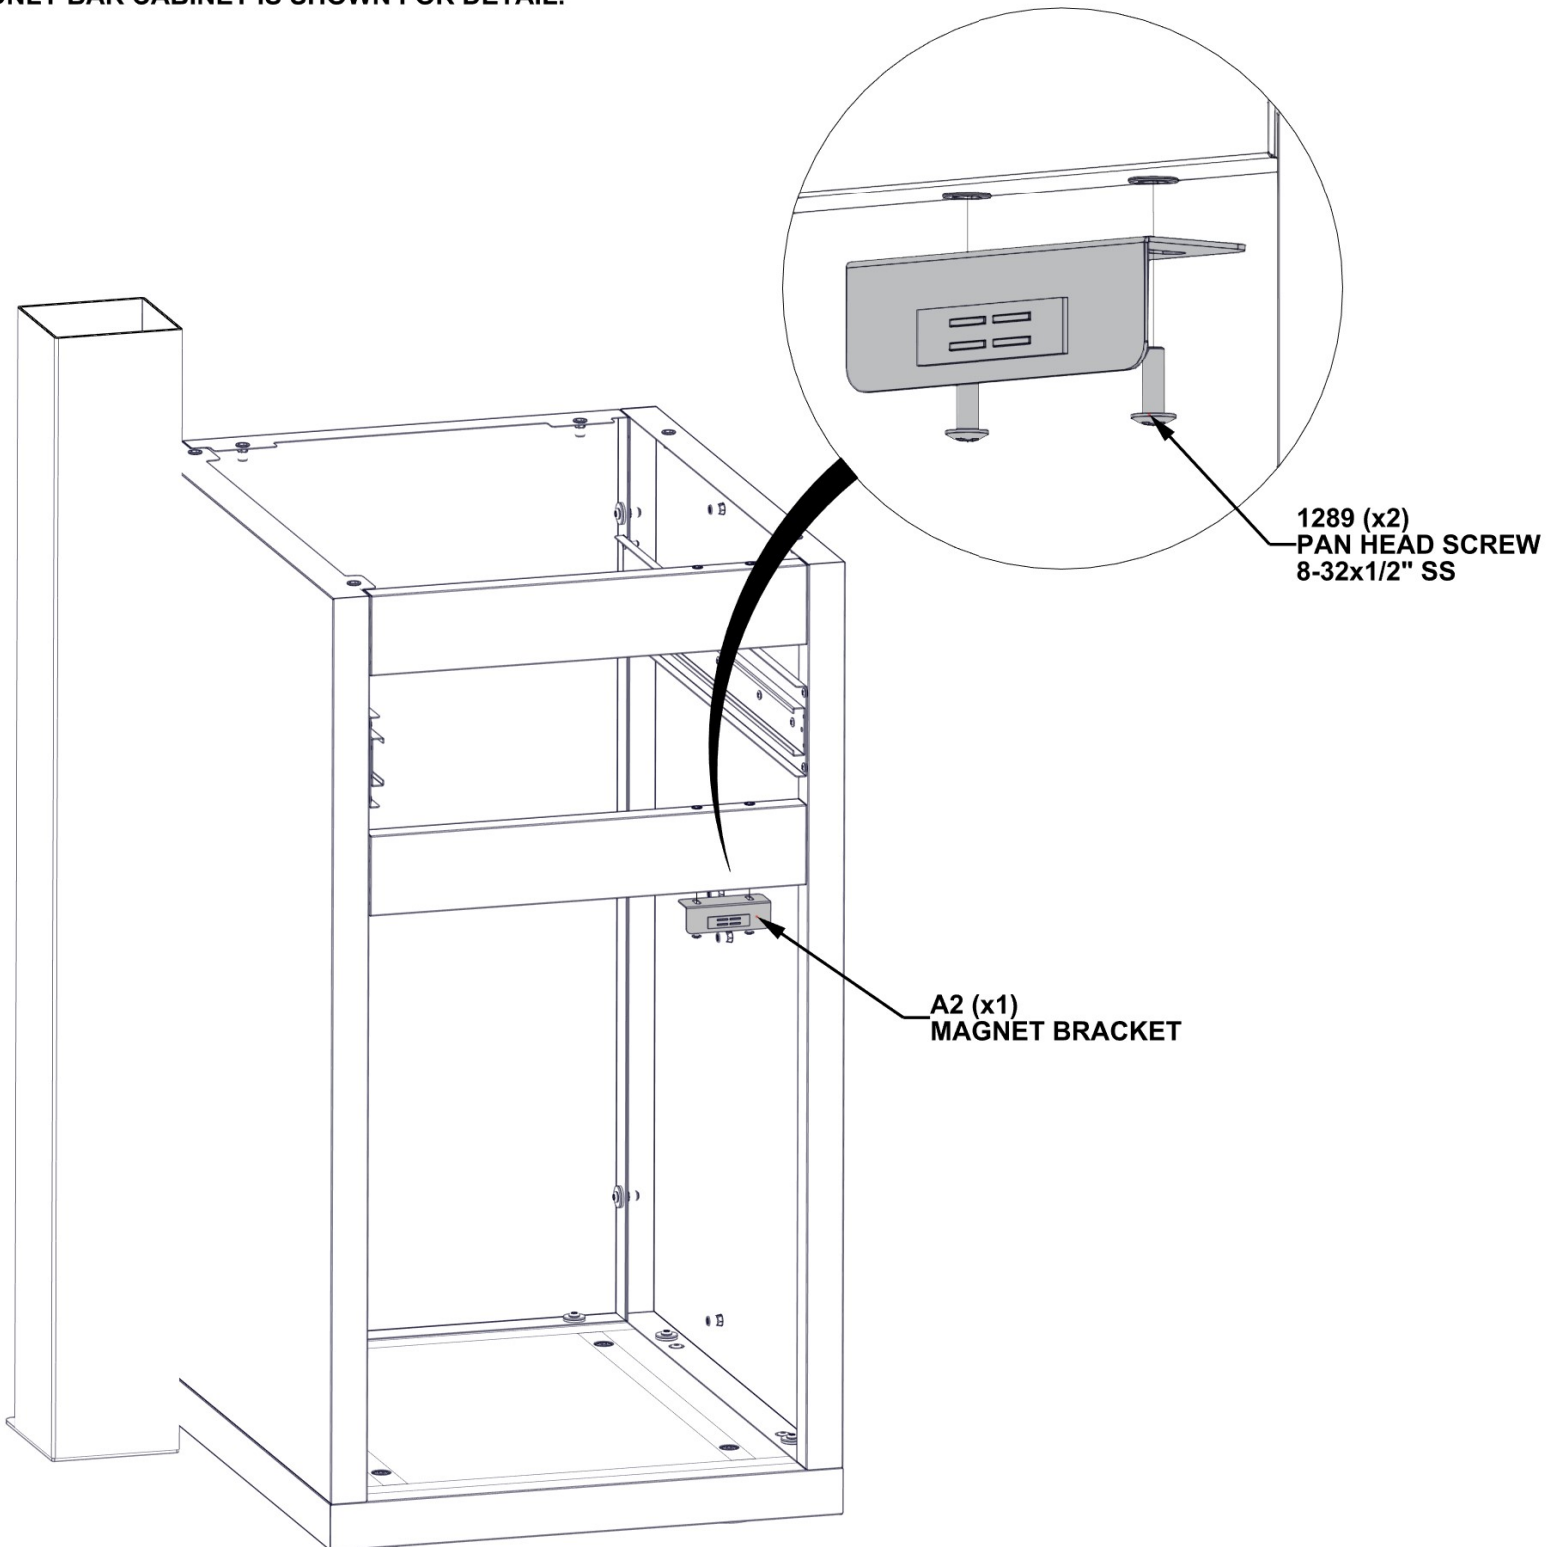


# STEP 113 - BAR CABINET ASSEMBLY

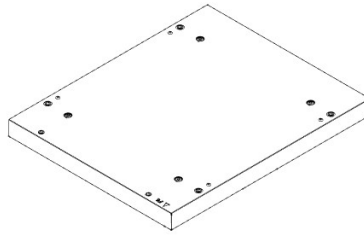


F5 FLOOR PANEL ASSEMBLY - A4M03611  
(x1) 23 3/8"x19 1/8"x2 5/8" (66x486x594)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- POSITION FLOOR PANEL AS SHOWN BELOW.
- EACH FLOOR PANEL HAS FACTORY INSTALLED ADJUSTABLE FEET. USE PROVIDED HEX DRIVER TO ADJUST EACH FOOT UNTIL PANEL IS LEVEL.

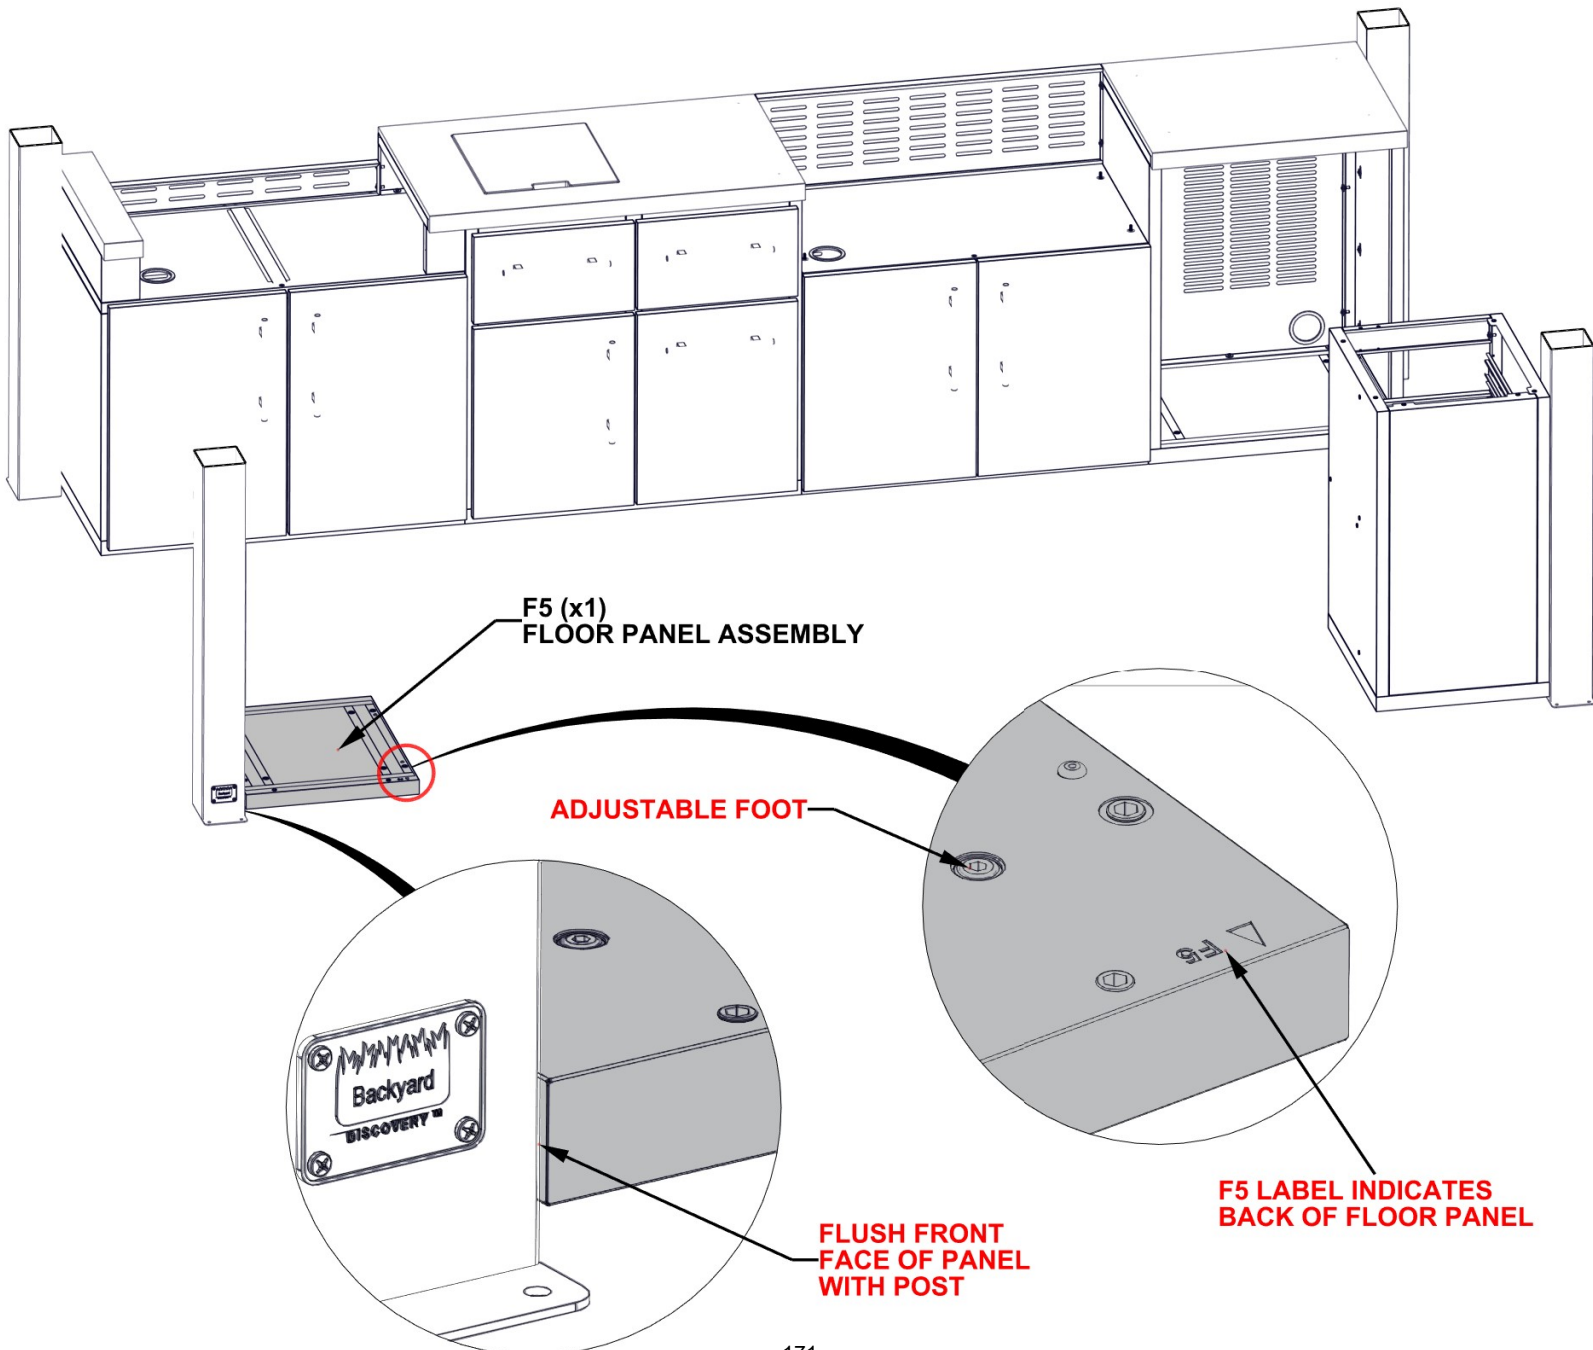


# STEP 114A - BAR CABINET ASSEMBLY

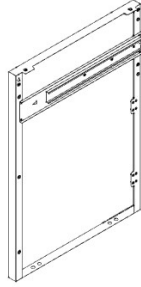

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

**S9 SIDE PANEL ASSEMBLY - A4M03638**  
 (x1) 33 3/8"x23 3/8"x1 15/16" (50x594x848.2)


- ONLY BAR CABINET IS SHOWN FOR DETAIL.

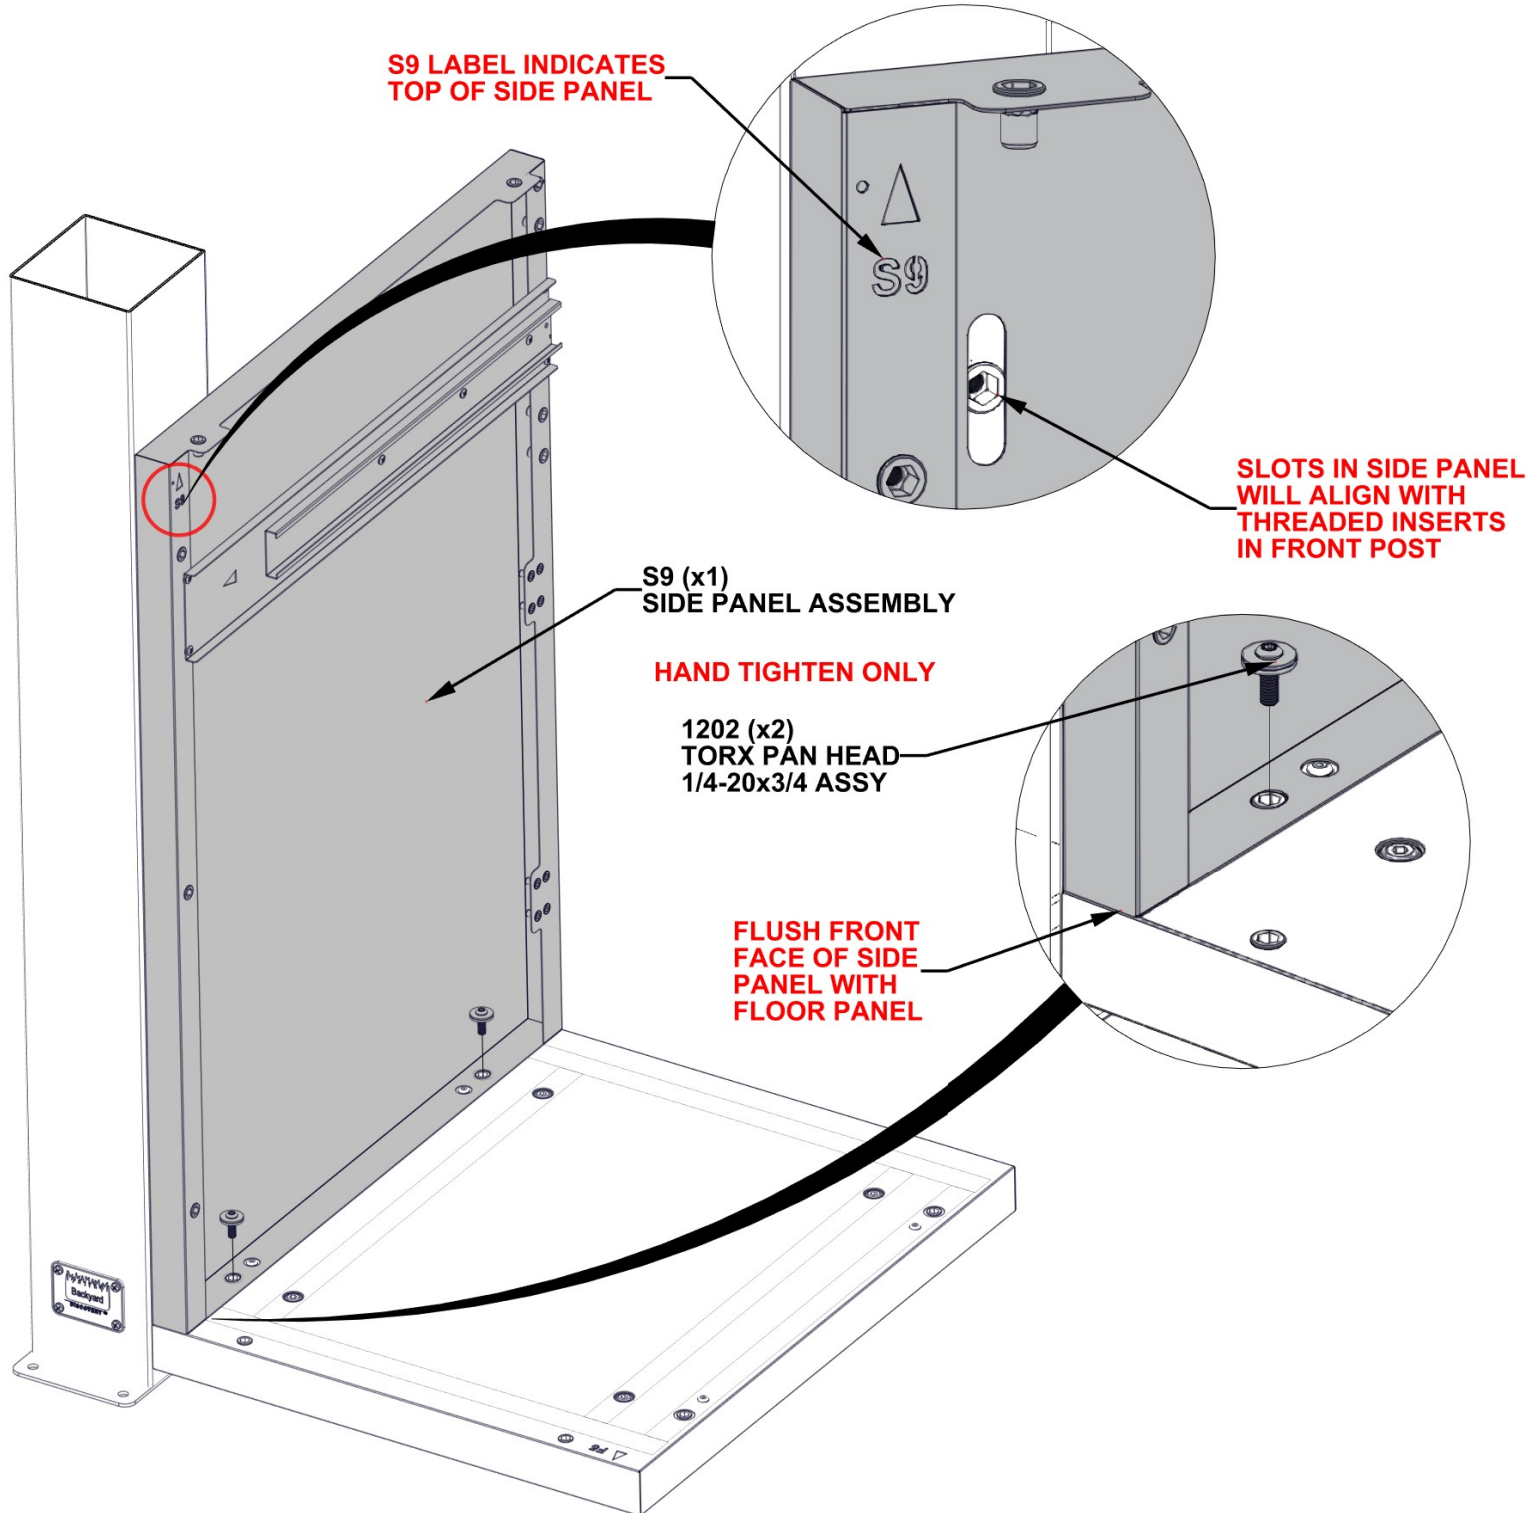

# STEP 114B - BAR CABINET ASSEMBLY

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- ONLY BAR CABINET IS SHOWN FOR DETAIL.

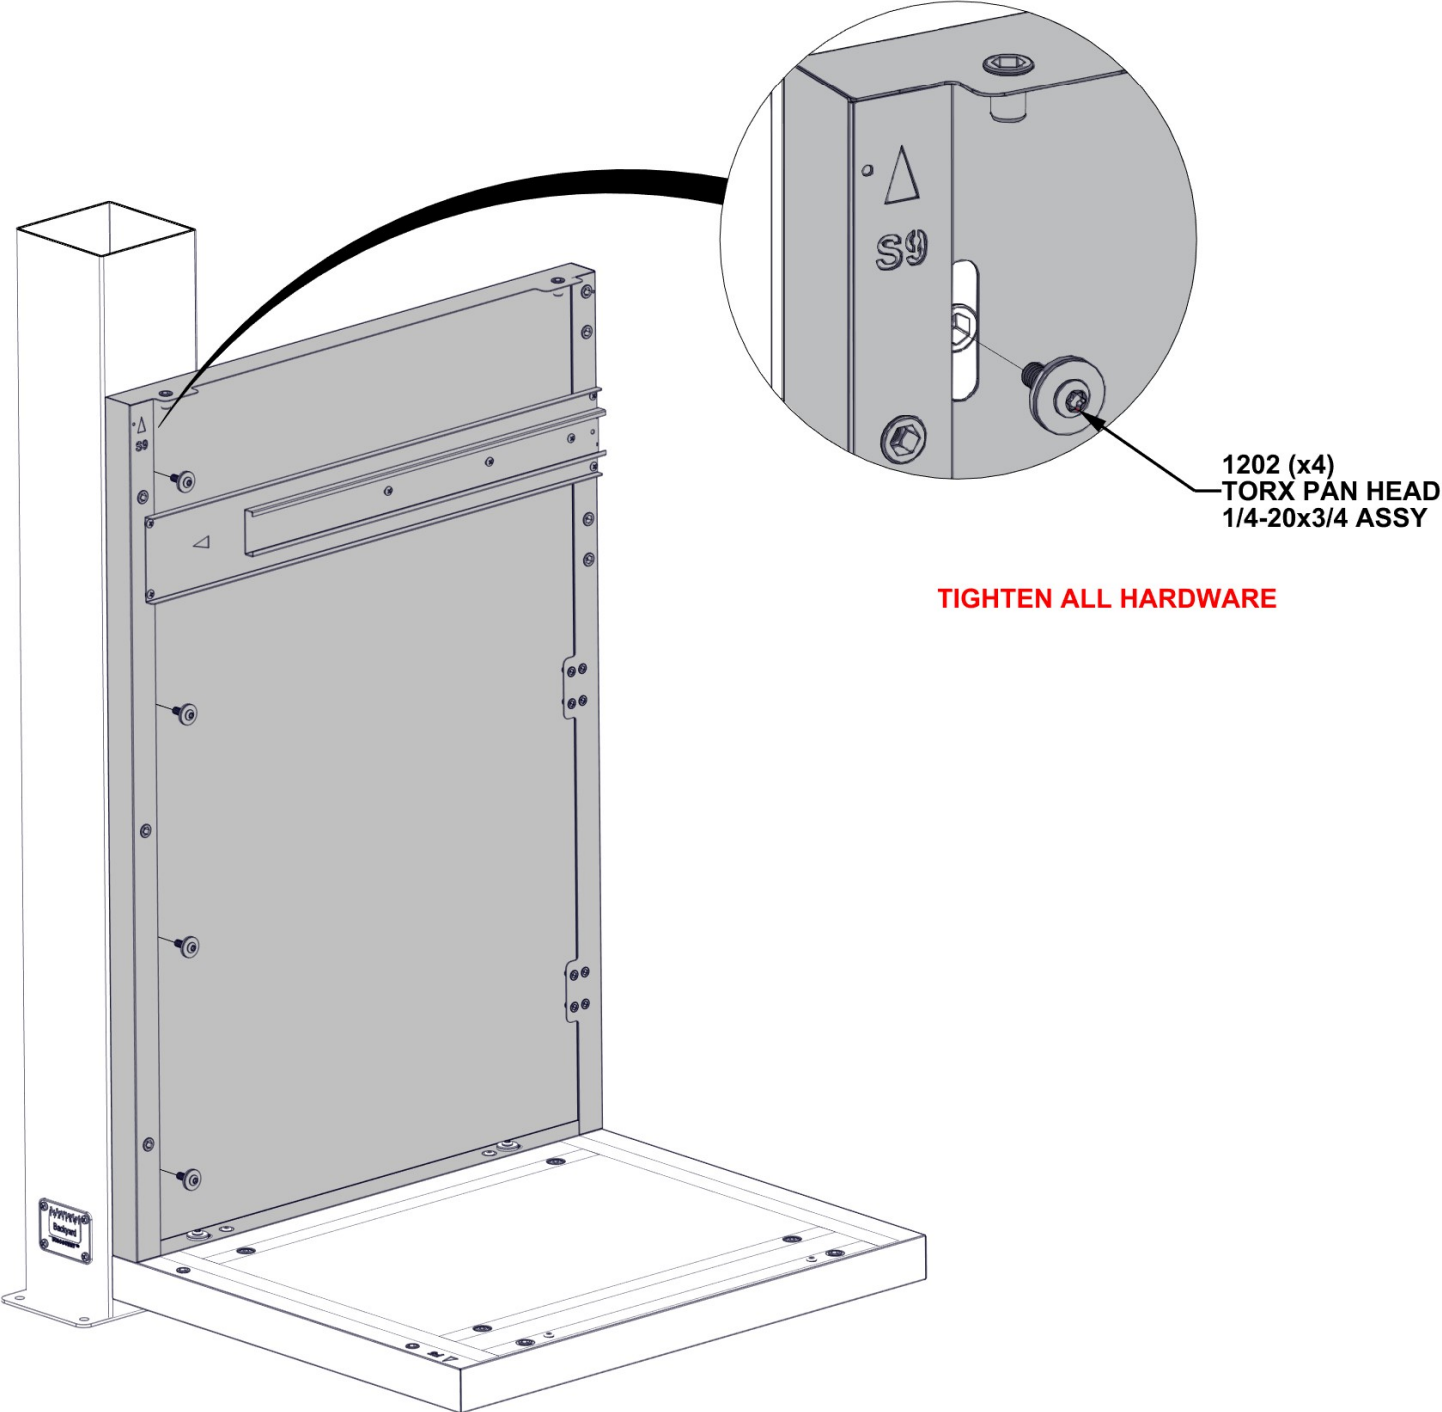


# STEP 115 - BAR CABINET ASSEMBLY




Qty	PartNo	Description
5	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

G5 BACK PANEL ASSEMBLY - A4M03624  
(x1) 33 3/8"x16 5/16"x1 3/4" (45x414x847.2)

- ONLY BAR CABINET IS SHOWN FOR DETAIL.

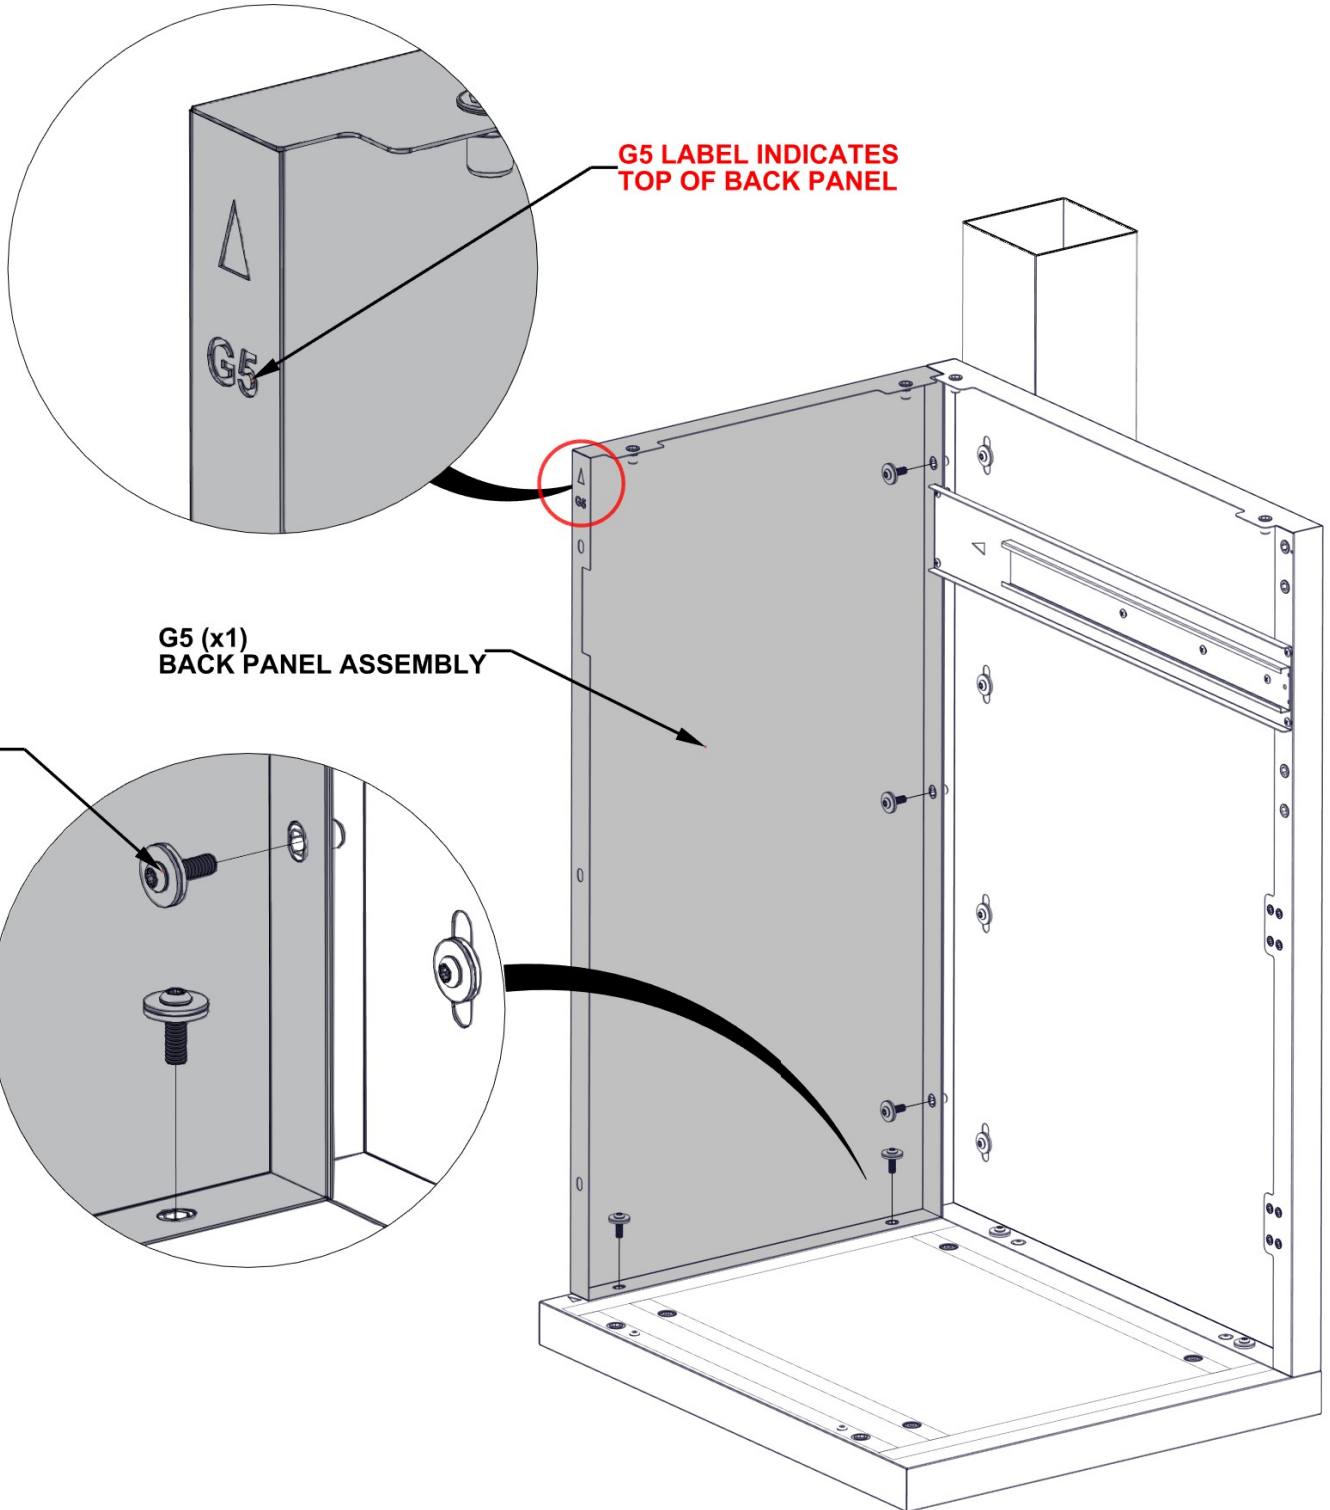


# STEP 116 - BAR CABINET ASSEMBLY

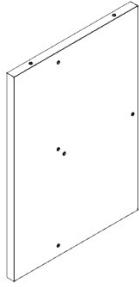


Qty	PartNo	Description
5	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

S12 SIDE PANEL ASSEMBLY - A4M03637  
 (x1) 33 3/8"x23 3/8"x1 15/16" (49.2x594x848.2)

- ONLY BAR CABINET IS SHOWN FOR DETAIL.

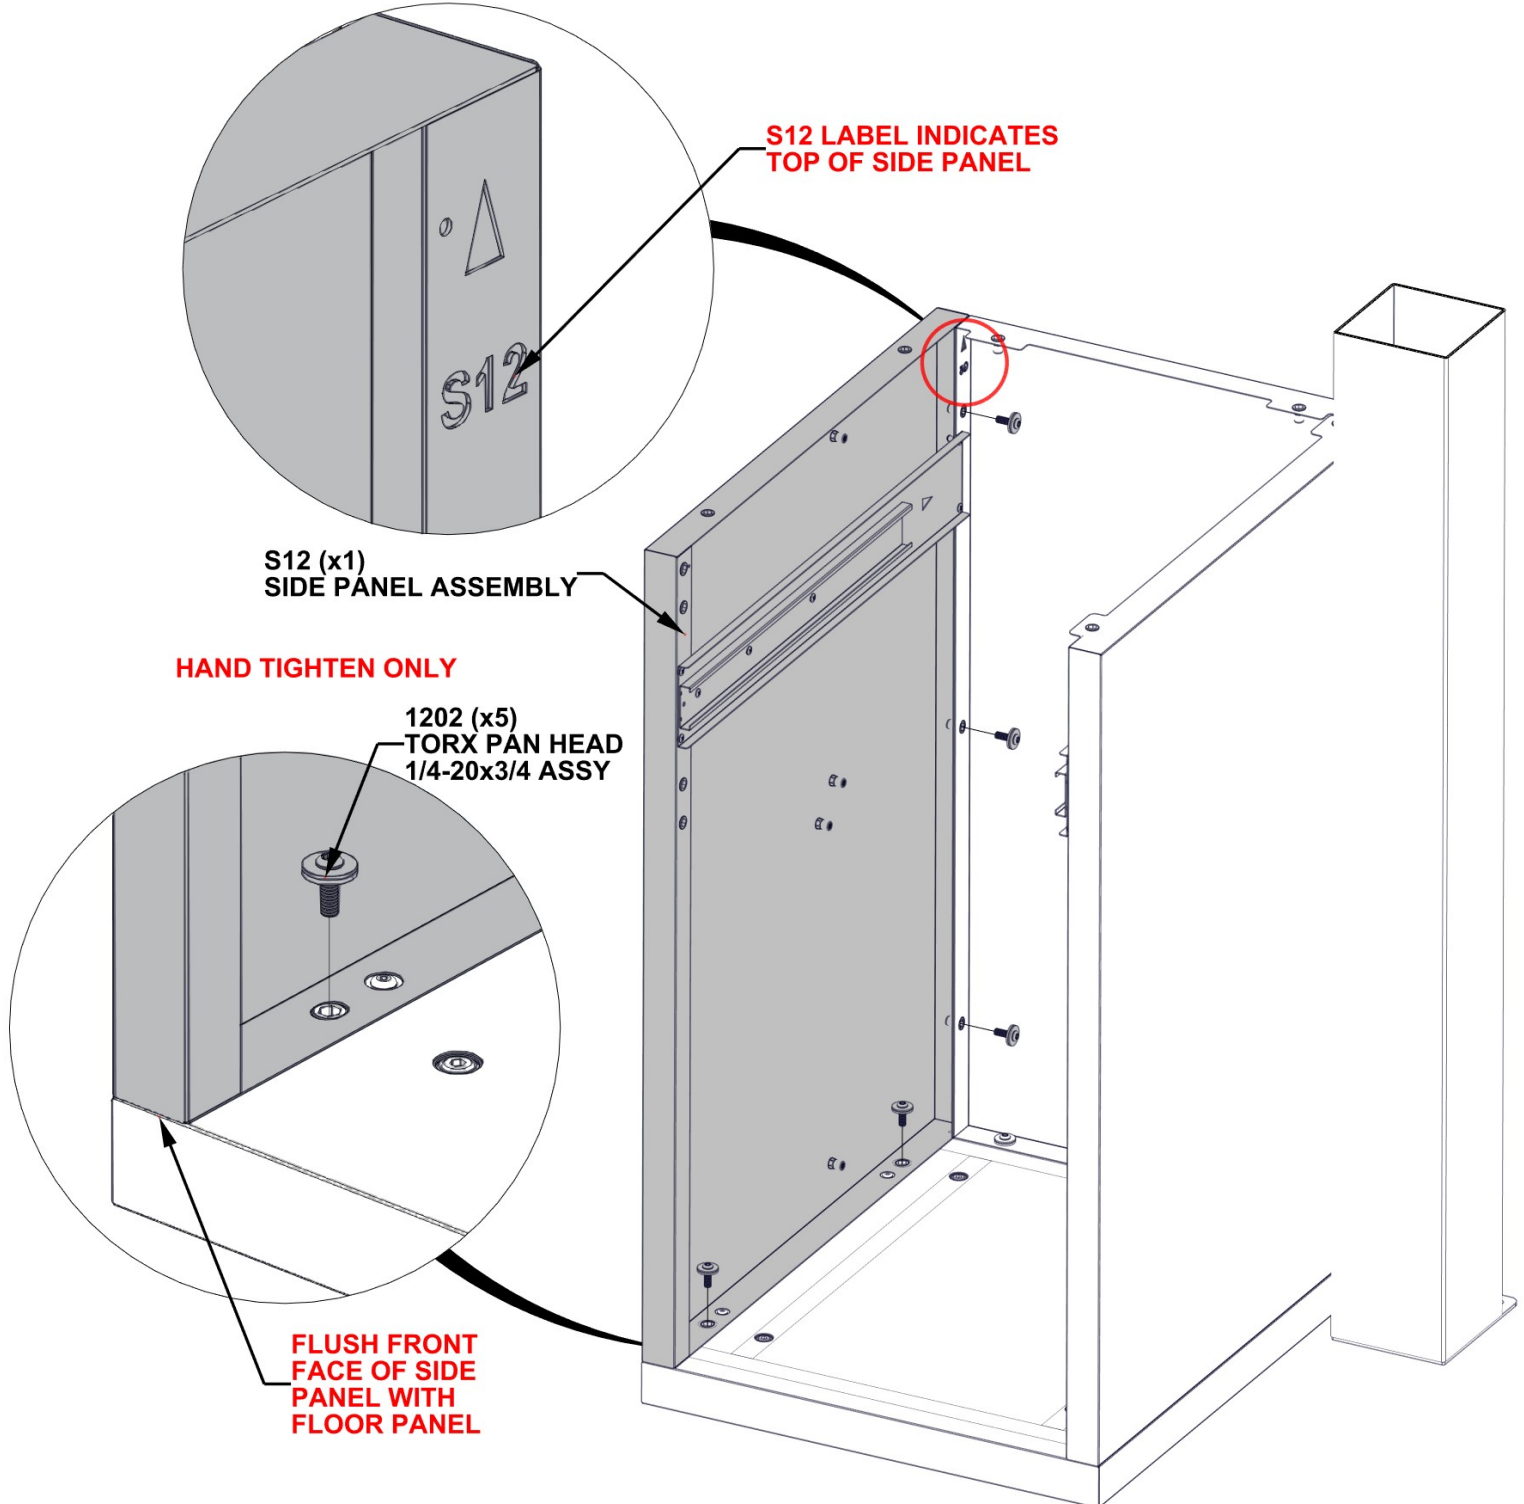


# STEP 117 - BAR CABINET ASSEMBLY

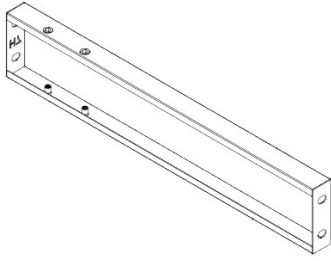

Qty	PartNo	Description
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

H7 HORIZONTAL CHANNEL ASSEMBLY - A4M03623  
(x2) 16 5/16"x2 15/16"x1" (25x75x414)

- ONLY BAR CABINET IS SHOWN FOR DETAIL.
- **HARDWARE ATTACHES ON INSIDE OF CABINET**

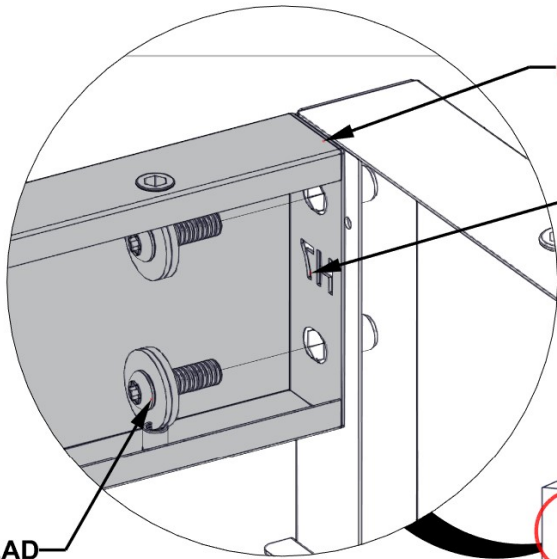


**FLUSH TOP SURFACE**

**H7 LABEL SHOULD BE ON THIS SIDE OF CABINET**


1202 (x8)  
TORX PAN HEAD  
1/4-20x3/4 ASSY

**TIGHTEN ALL HARDWARE**

H7 (x2)  
HORIZONTAL CHANNEL ASSEMBLY

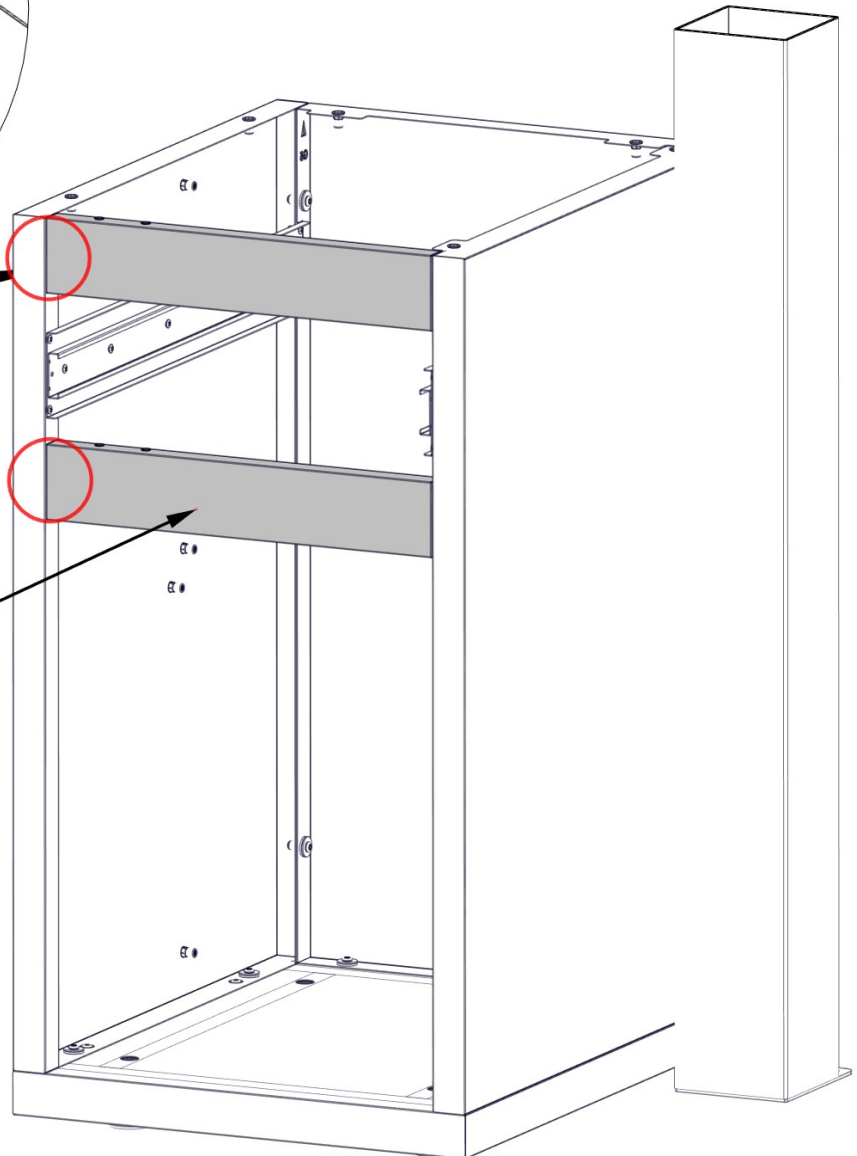


# STEP 118 - BAR CABINET ASSEMBLY

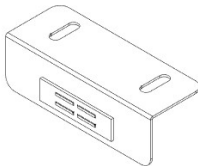

**A2 MAGNET BRACKET - A4M03026**  
(x1) 1"x1 1/4"x3 1/8" (25x31x80)

Qty	PartNo	Description
2	H101289	PAN HEAD SCREW 8-32x1/2" SS

- ONLY BAR CABINET IS SHOWN FOR DETAIL.

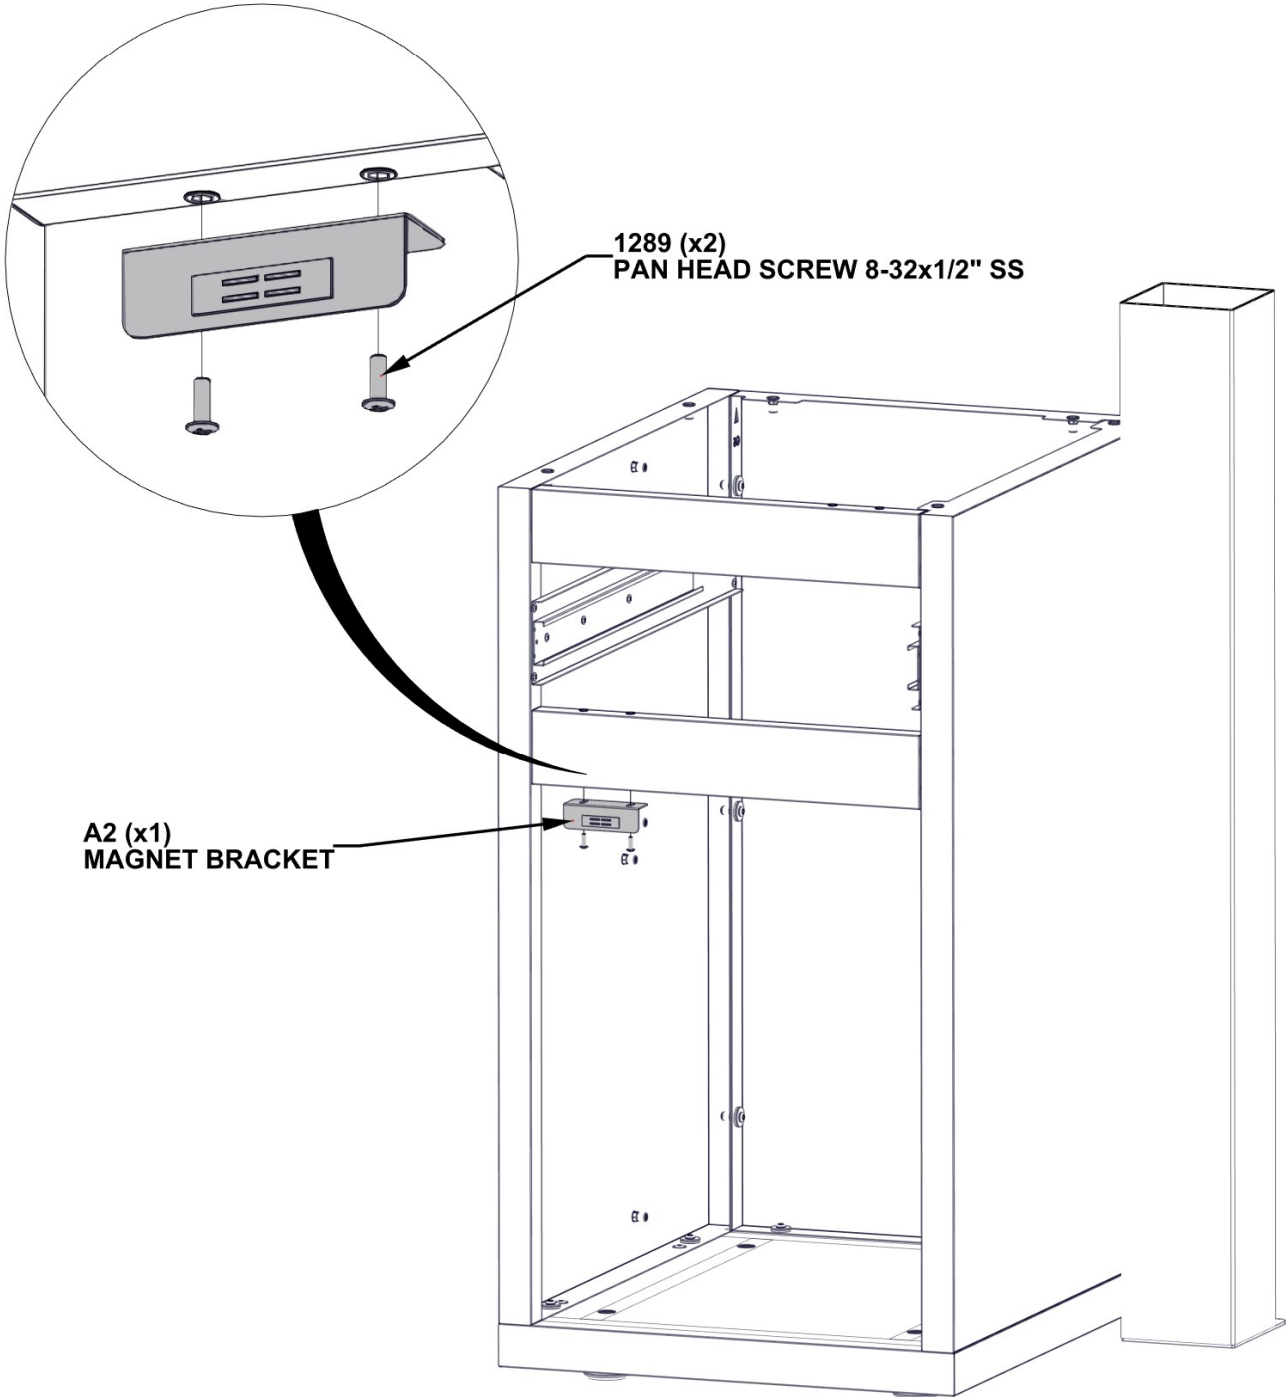


**1289 (x2)**  
**PAN HEAD SCREW 8-32x1/2" SS**


**A2 (x1)**  
**MAGNET BRACKET**

# STEP 119 - BAR CABINET ASSEMBLY

Qty	PartNo	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



**H6 TUBE FRAME SUPPORT - A4M03627**  
(x1) 35 15/16"x15 9/16"x1 15/16" (50x394.5x912.5)

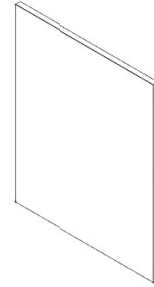

**G6 BACK PANEL - A4M03631**  
(x1) 34"x27 3/4"x1" (25x705x864)


- ONLY BAR CABINET IS SHOWN FOR DETAIL.
- EACH TUBE FRAME SUPPORT HAS FACTORY INSTALLED ADJUSTABLE FEET.
- ADJUST EACH FOOT UNTIL FRAME IS LEVEL.
- **MAKE SURE THE TUBE FRAME IS ORIENTED CORRECTLY BASED ON THE TWO THREADED INSERTS ON BACKSIDE OF TUBE.**

**FLUSH TOP OF BACK PANEL WITH TUBE FRAME**

**1202 (x6) TORX PAN HEAD 1/4-20x3/4 ASSY**

**G6 LABEL INDICATES TOP OF BACK PANEL**

**THE TWO THREADED INSERTS SHOULD BE POSITIONED TOWARD THE BACK**

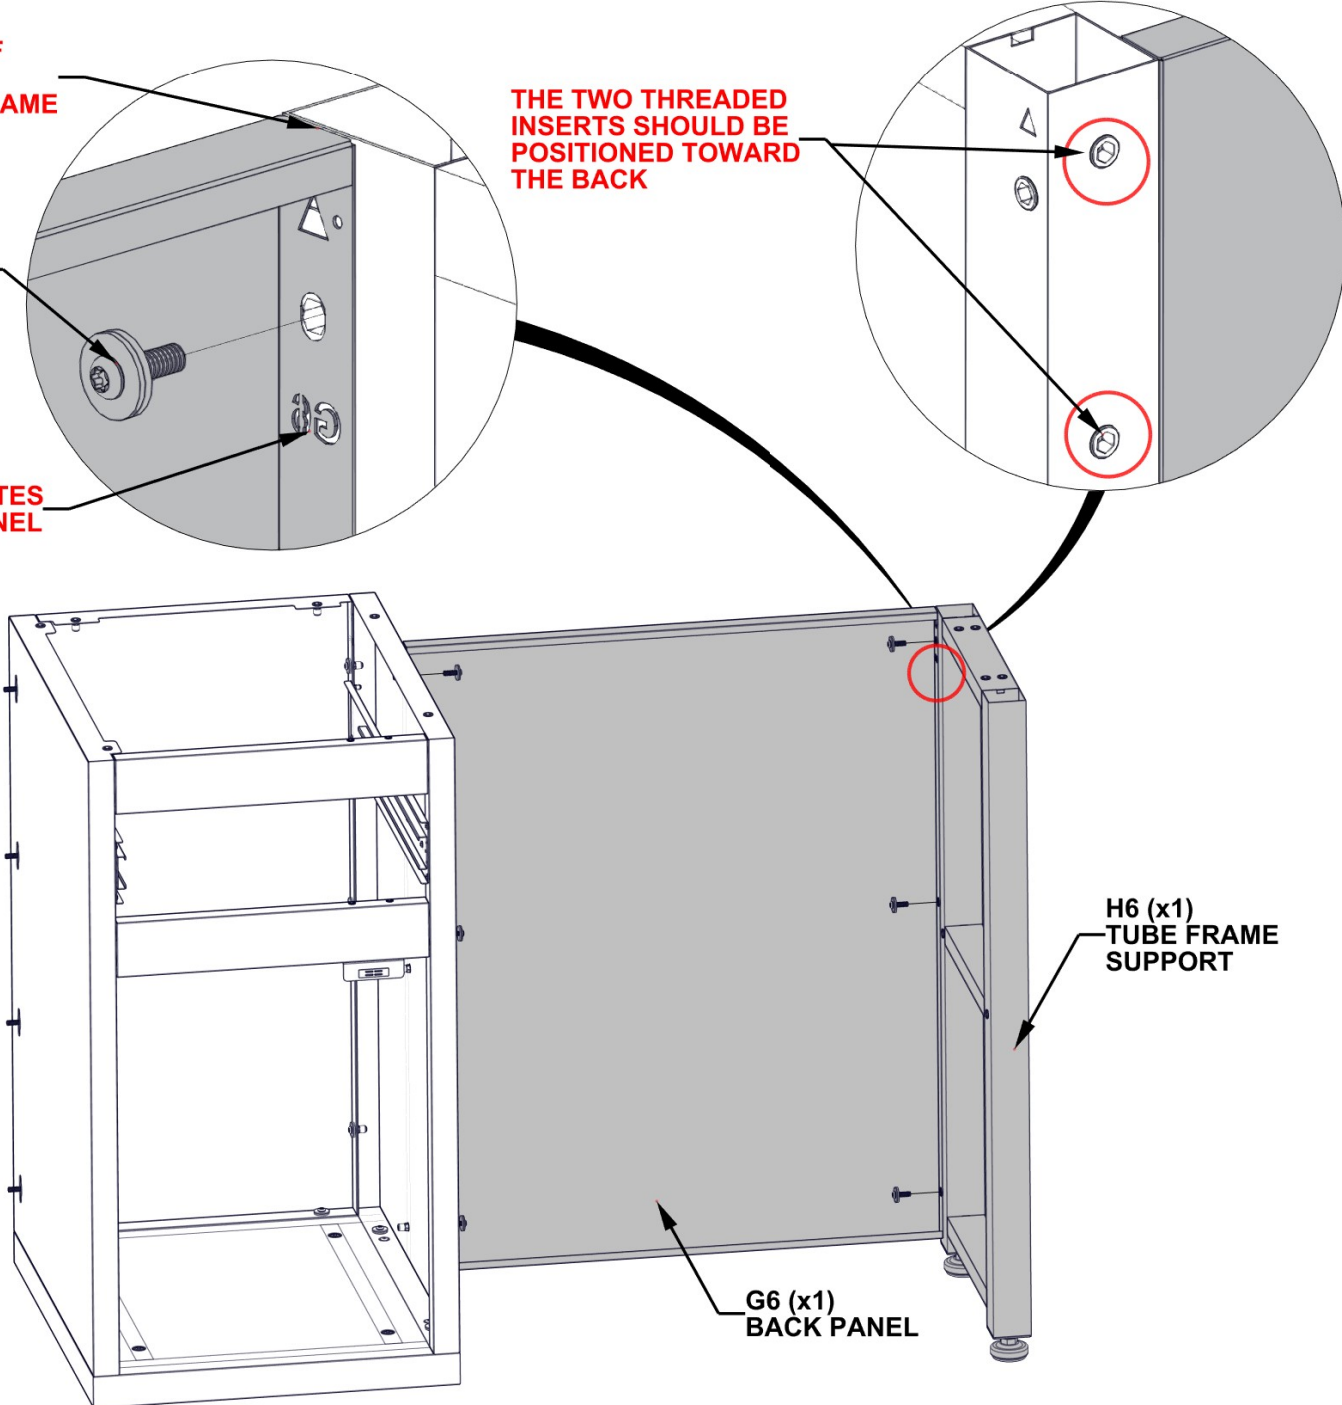


**H6 (x1) TUBE FRAME SUPPORT**

**G6 (x1) BACK PANEL**

# STEP 120 - BAR CABINET ASSEMBLY

Qty	PartNo	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




**H6 TUBE FRAME SUPPORT - A4M03627**  
(x1) 35 15/16"x15 9/16"x1 15/16" (50x394.5x912.5)




**G6 BACK PANEL - A4M03631**  
(x1) 34"x27 3/4"x1" (25x705x864)

- ONLY BAR CABINET IS SHOWN FOR DETAIL.
- EACH TUBE FRAME SUPPORT HAS FACTORY INSTALLED ADJUSTABLE FEET.
- ADJUST EACH FOOT UNTIL FRAME IS LEVEL.

**- MAKE SURE THE TUBE FRAME IS ORIENTED CORRECTLY BASED ON THE TWO THREADED INSERTS ON BACKSIDE OF TUBE.**

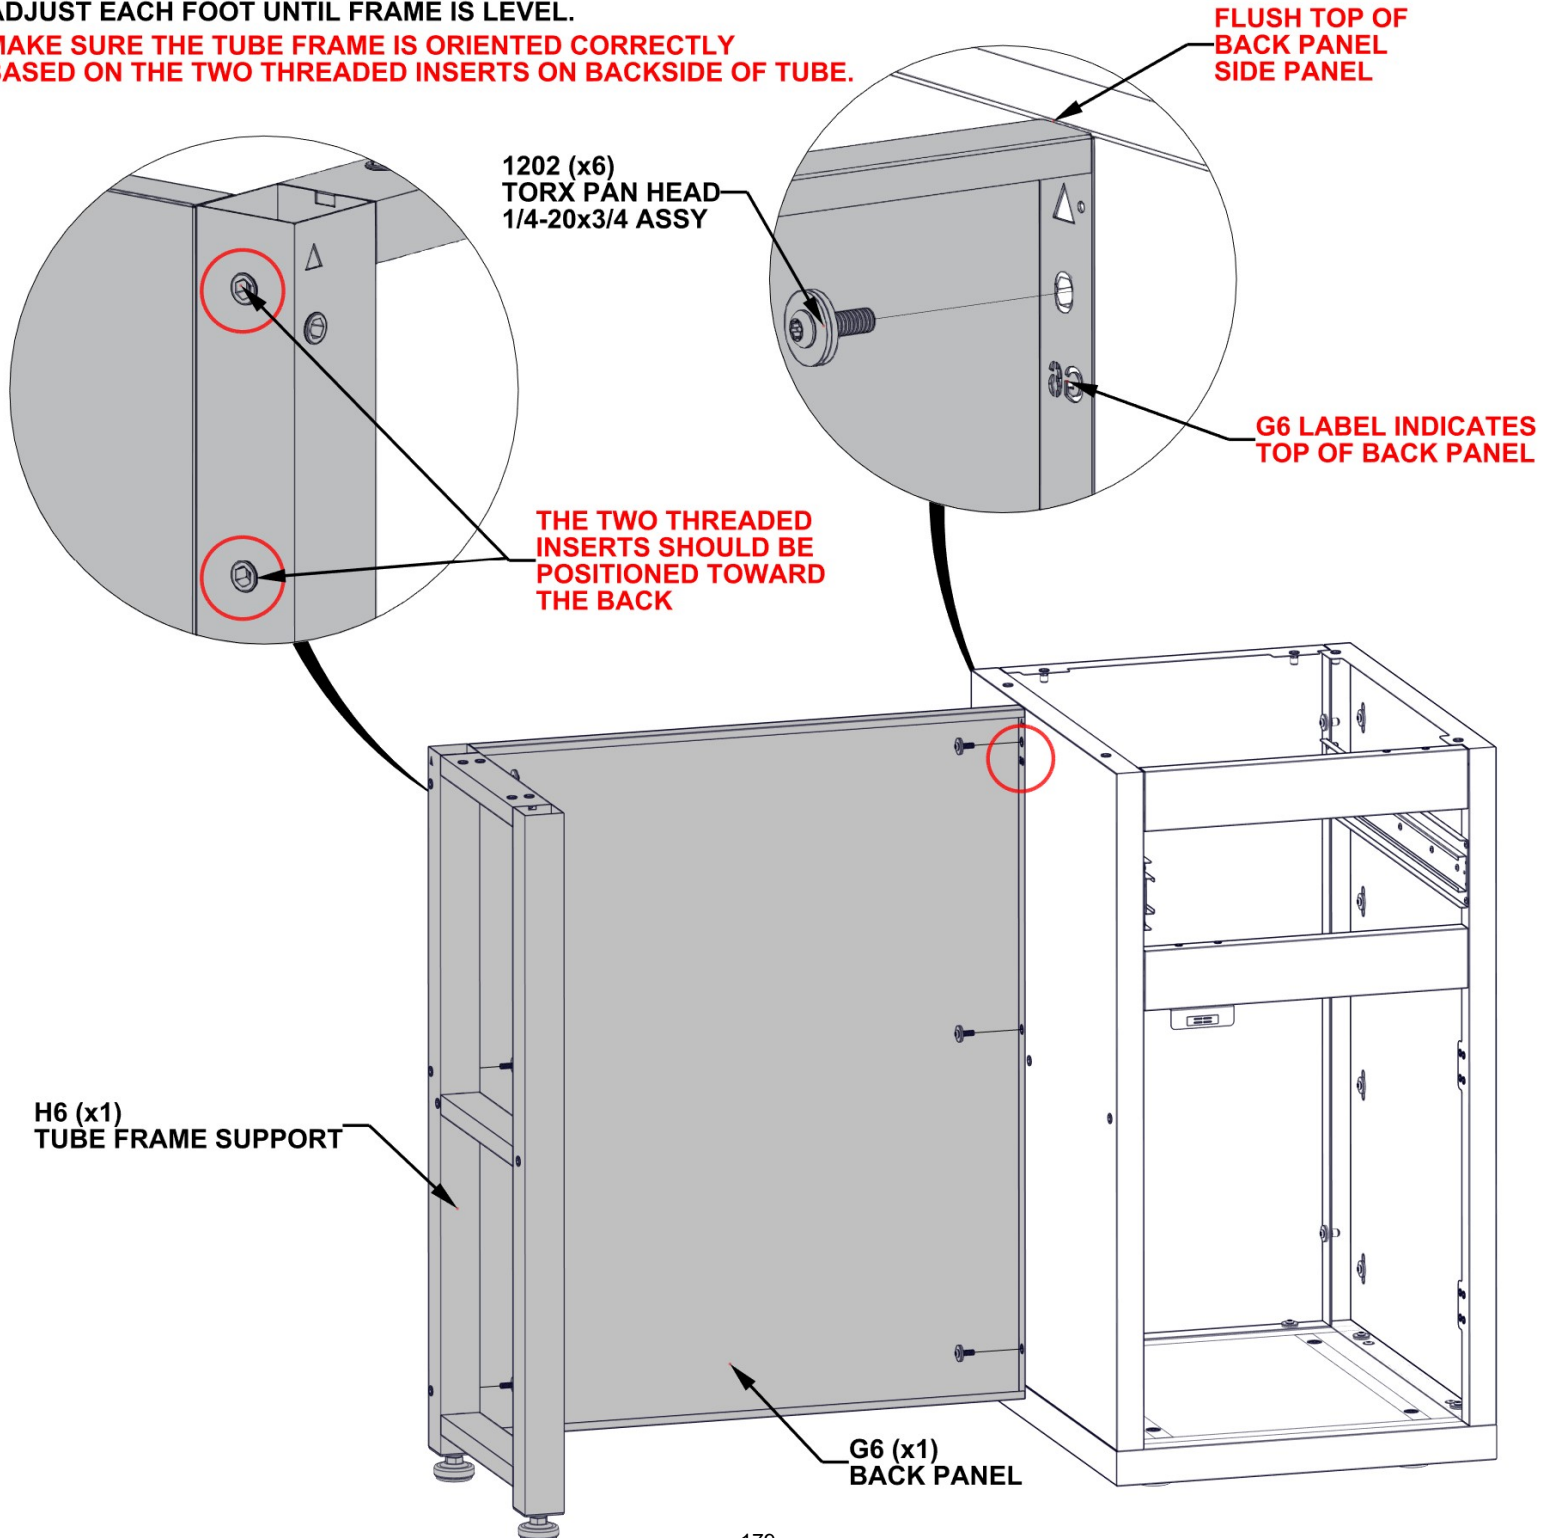


# STEP 121 - BAR CABINET ASSEMBLY

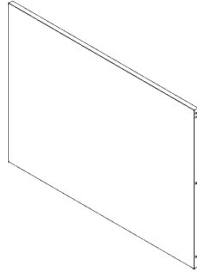

Qty	PartNo	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY


G7 BACK PANEL - A4M03629  
 (x1) 45 7/8"x34"x1" (25x864x1166)

- ONLY BAR CABINET IS SHOWN FOR DETAIL.

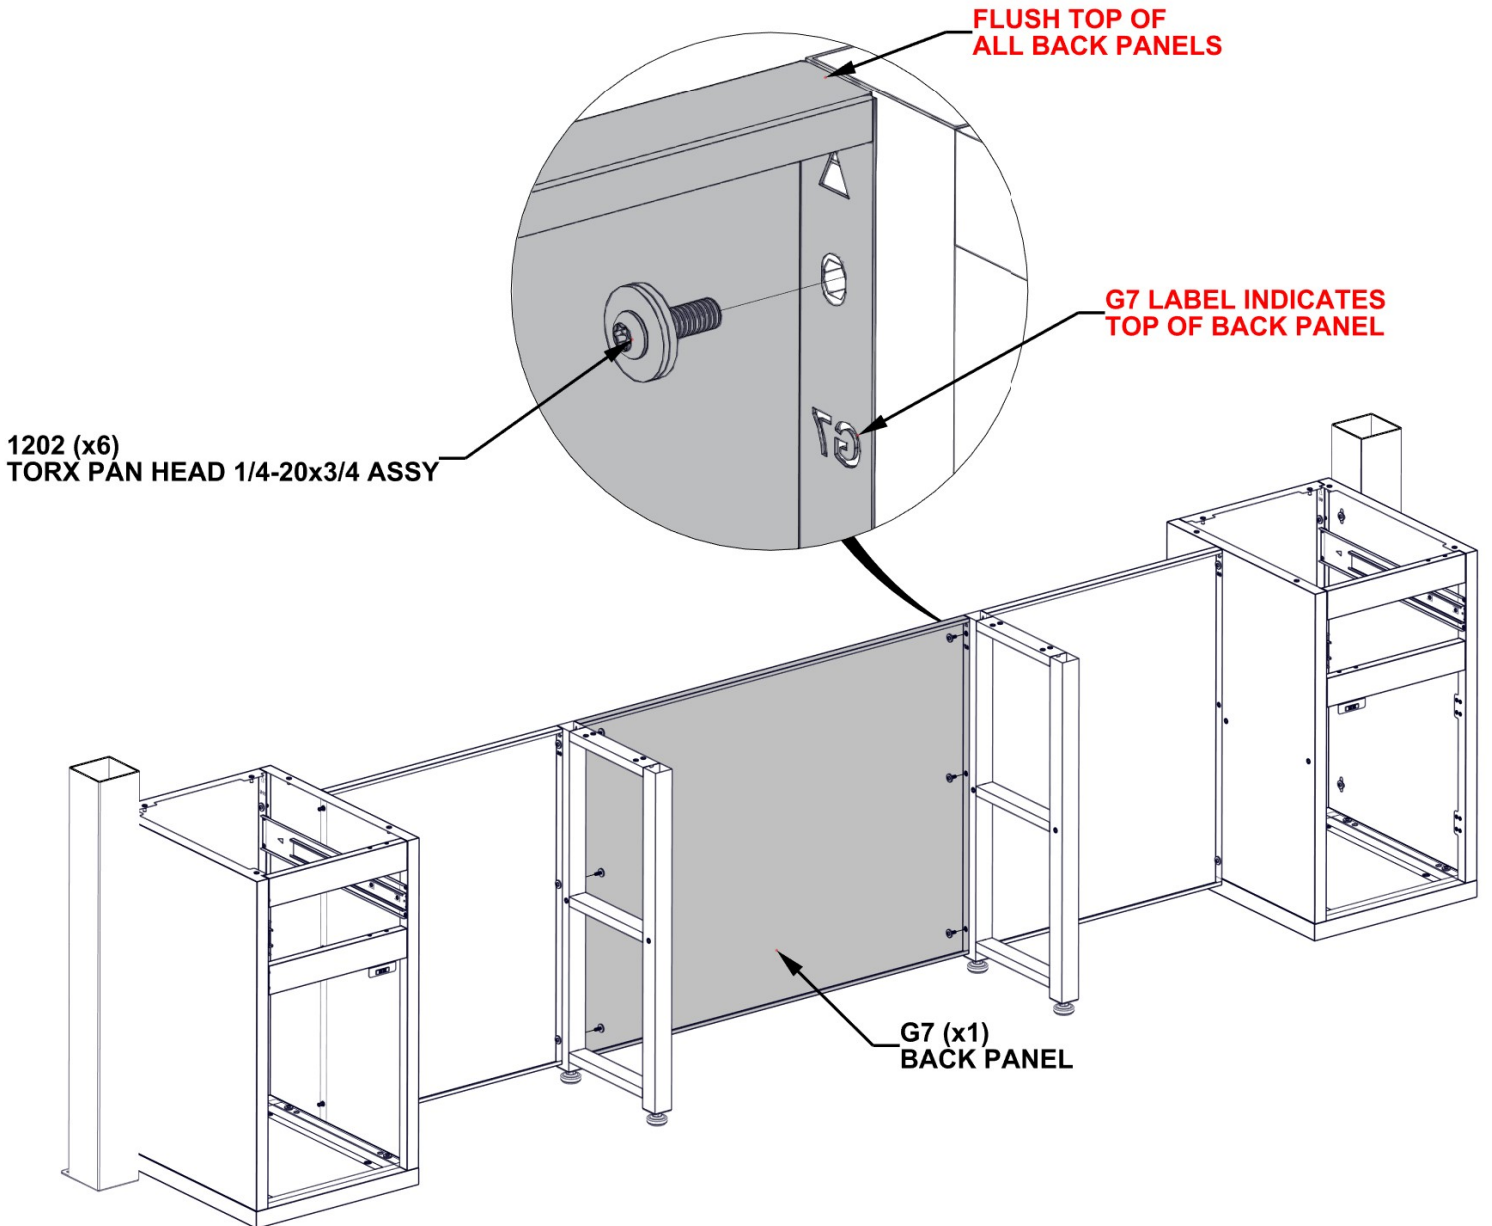


# STEP 122 - BAR CABINET ASSEMBLY

Qty	PartNo	Description
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

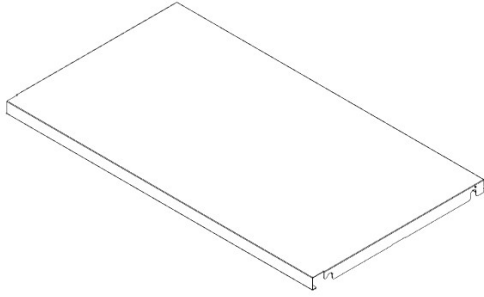


L4 SHELF ASSEMBLY - A4M03644  
(x2) 27 3/4"x15 7/16"1" (25x392.2x705)

- ONLY BAR CABINET IS SHOWN FOR DETAIL.

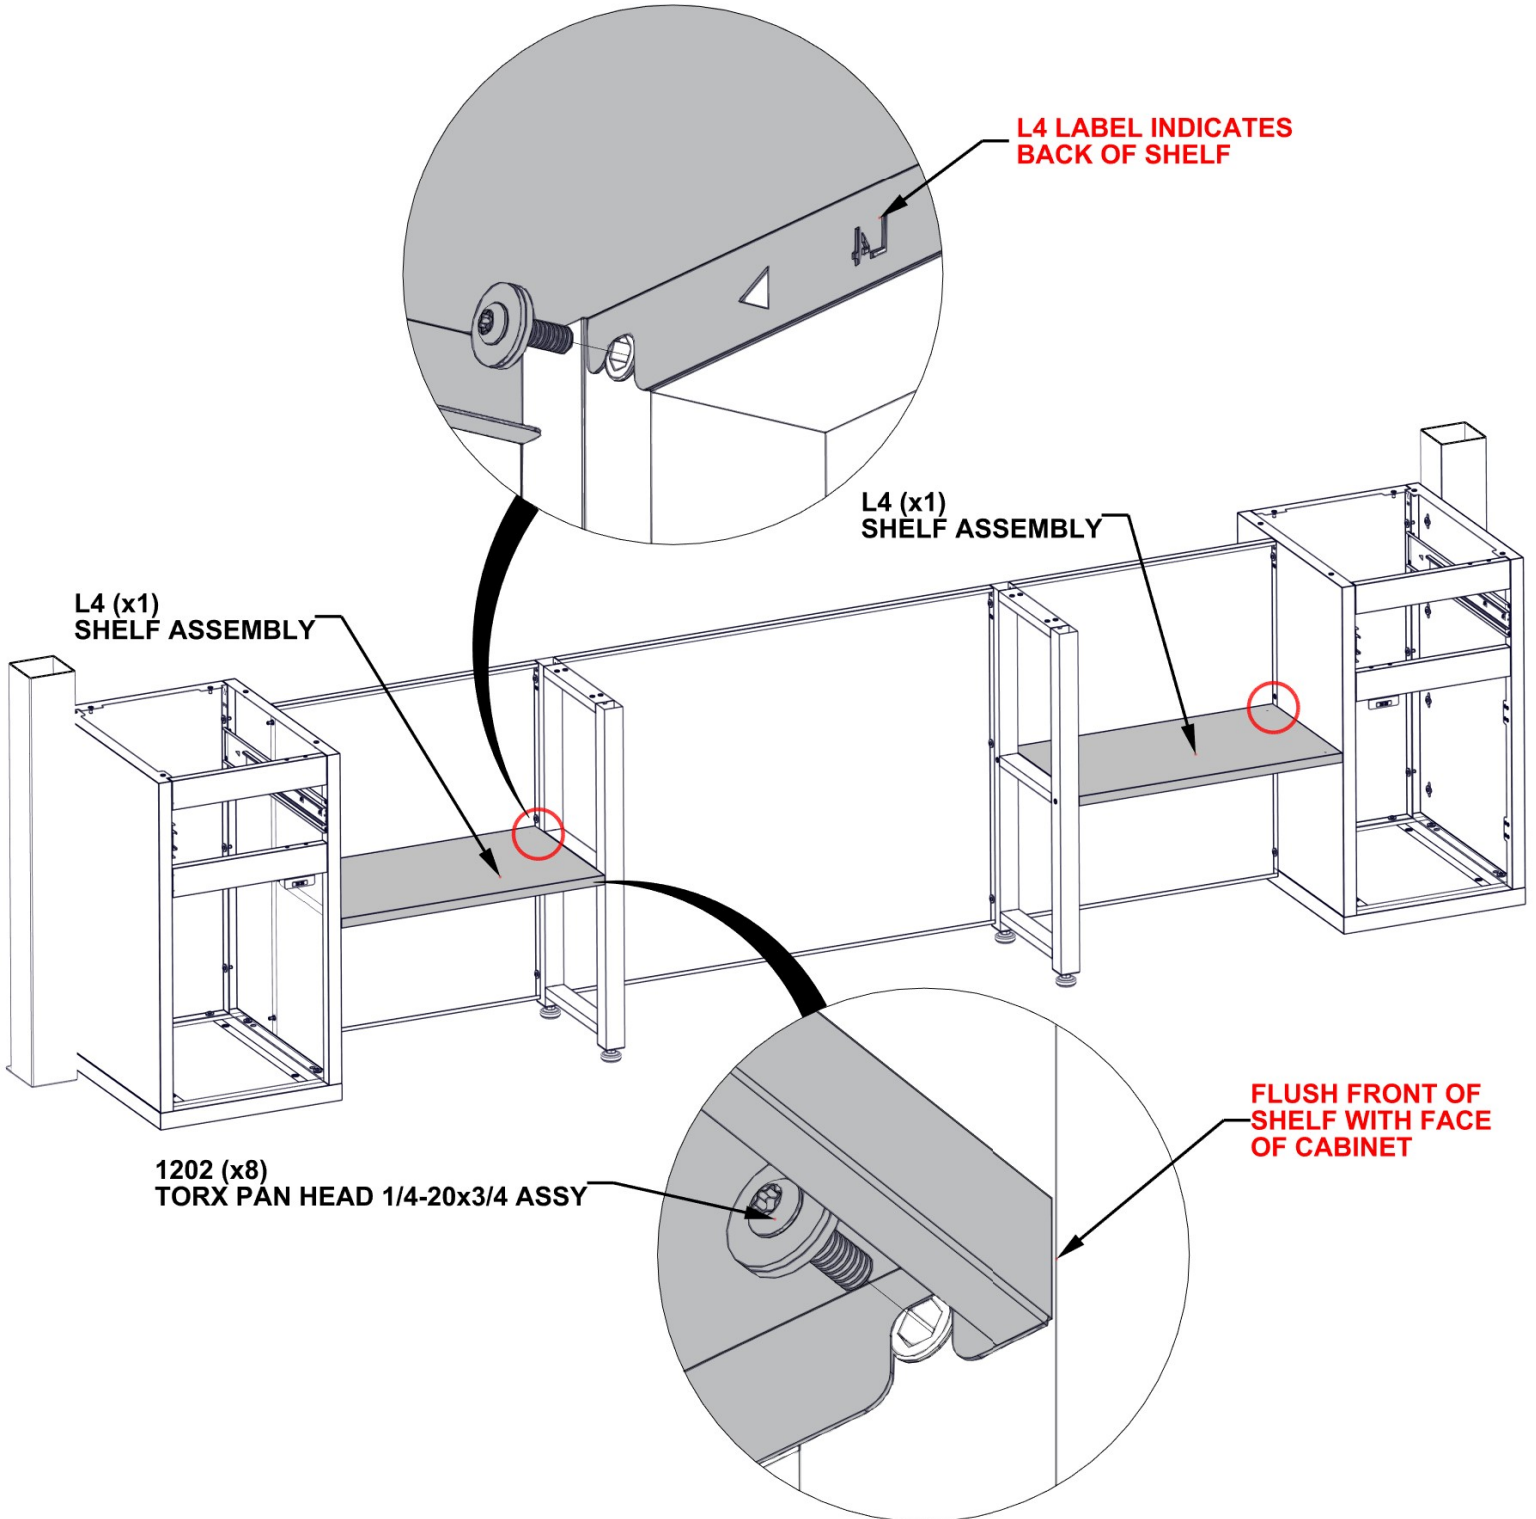


# STEP 123 - BAR CABINET ASSEMBLY

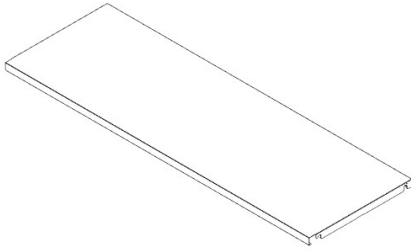


Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

L3 SHELF ASSEMBLY M - A4M03645  
 (x1) 45 7/8"x15 7/16"x1" (25x392.2x1166)

- ONLY BAR CABINET IS SHOWN FOR DETAIL.

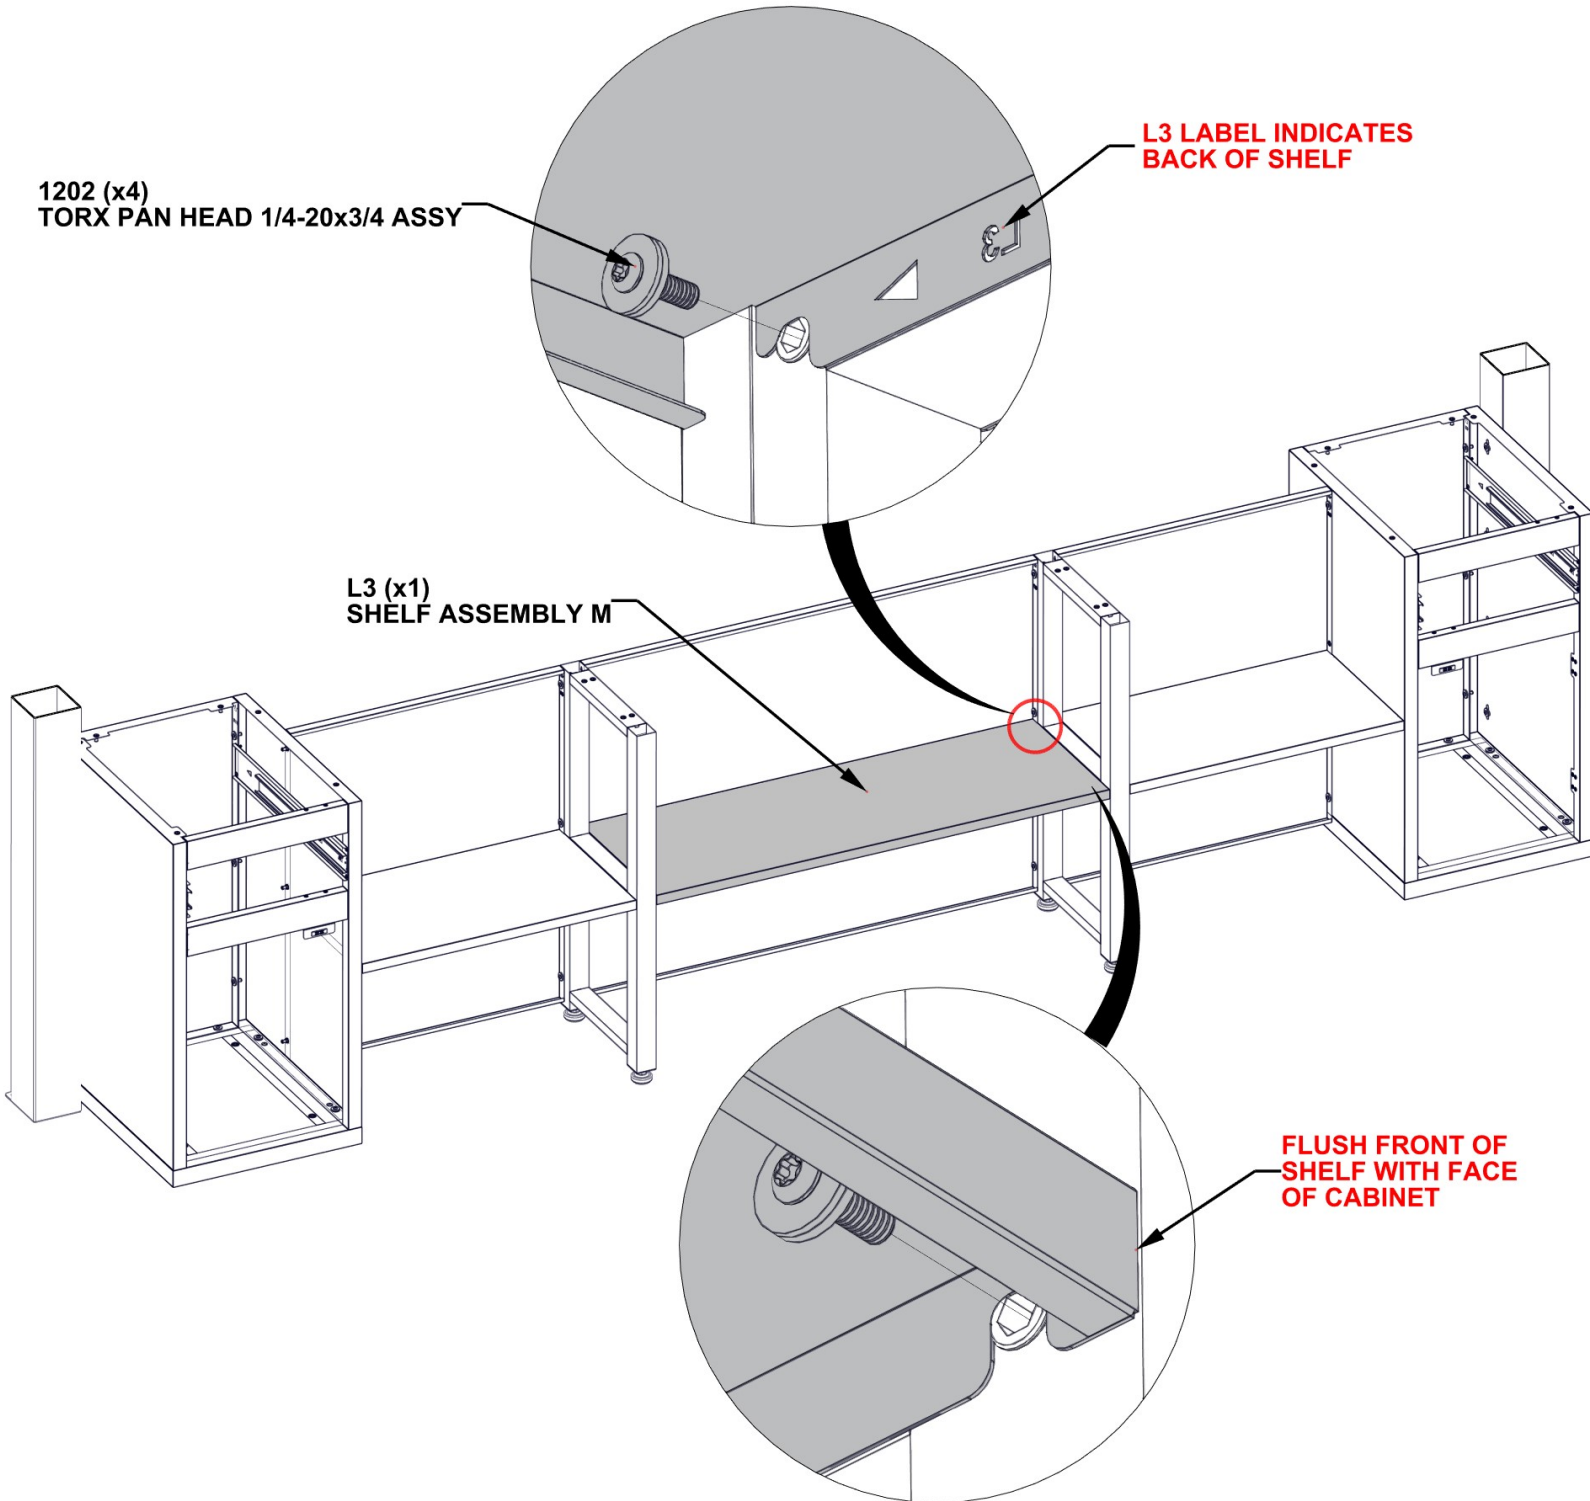


# STEP 124 - BAR CABINET ASSEMBLY

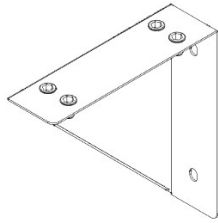


Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

**A1 TABLE BRACKET ASSEMBLY - A4M03634**  
(x2) 6 15/16"x6 15/16"x1 15/16" (50x176x176)

- ONLY BAR CABINET IS SHOWN FOR DETAIL.

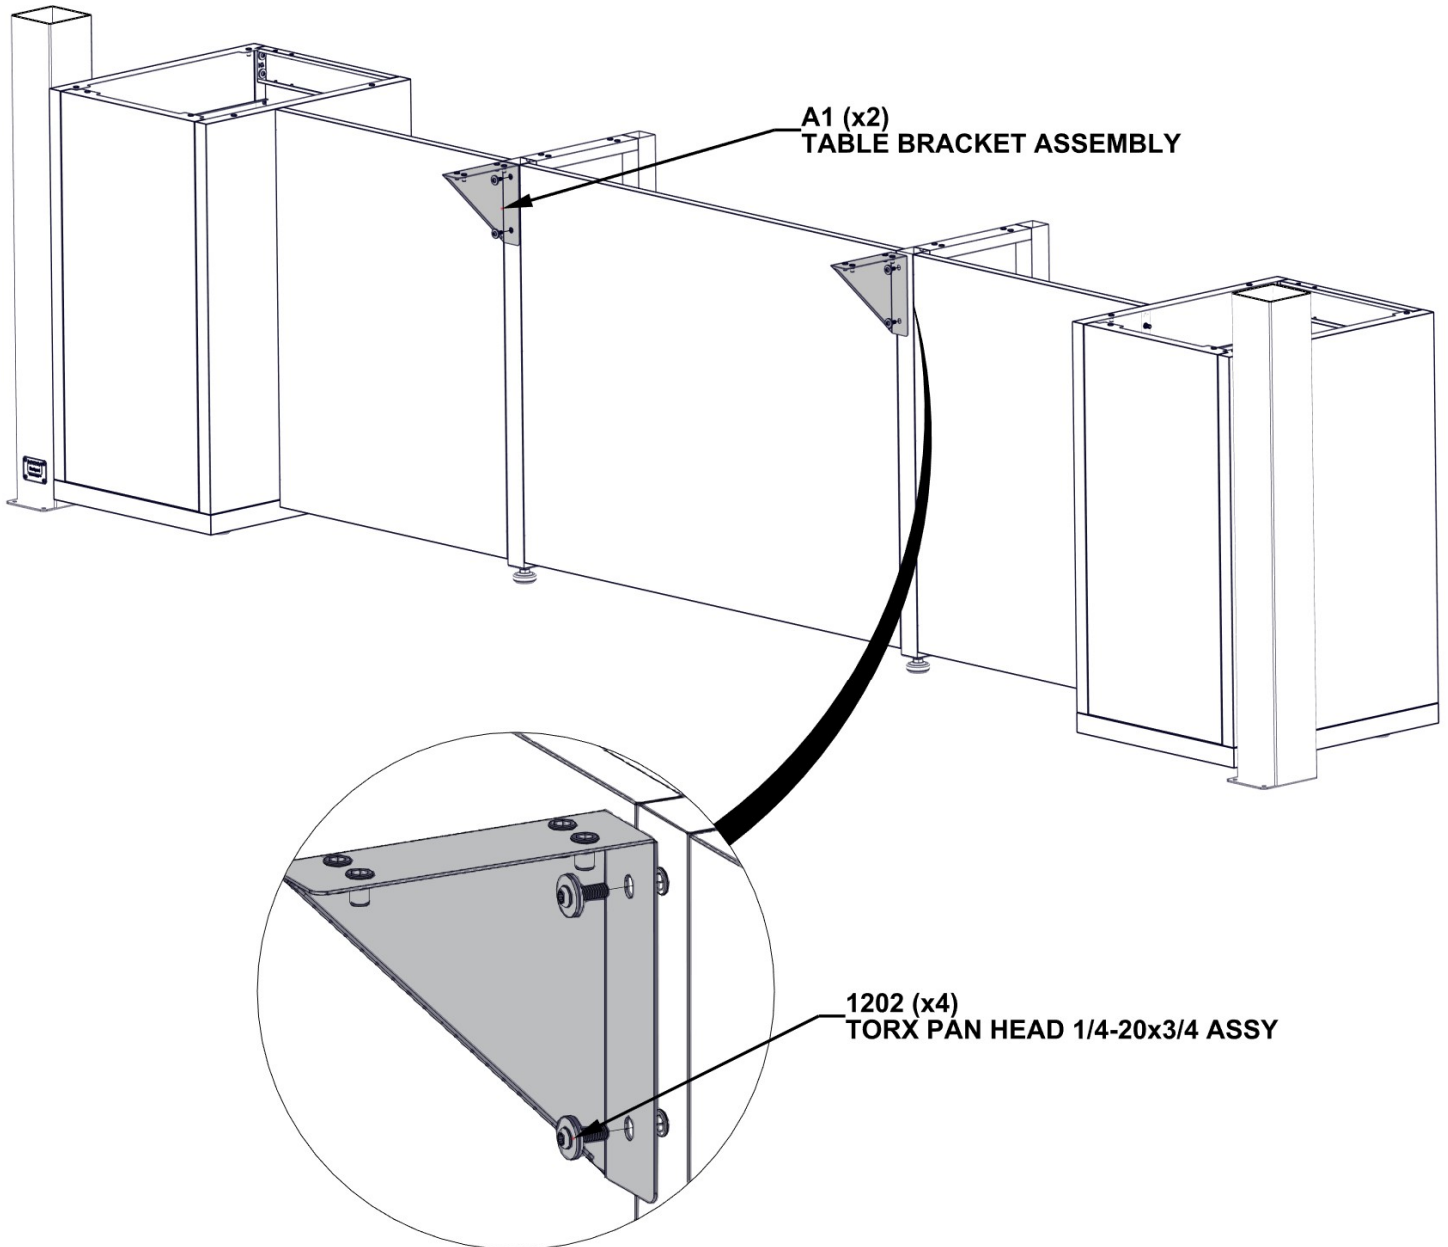


# STEP 125 - BAR CABINET ASSEMBLY

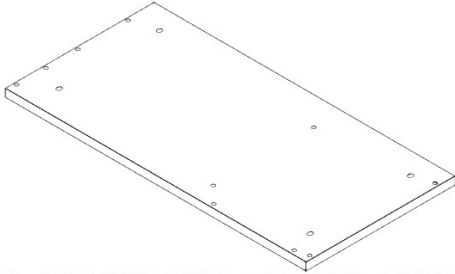


T6 TABLETOP PANEL ASSEMBLY - A4M03615  
(x1) 47 3/16"x23 3/8"x1 1/4" (32x593x1199)

Qty	PartNo	Description
10	H101103	TORX SOCKET SCREW 1/4-20

- ONLY BAR CABINET IS SHOWN FOR DETAIL.
- SQUARE ALL SIDES OF CABINET BEFORE TIGHTENING HARDWARE.

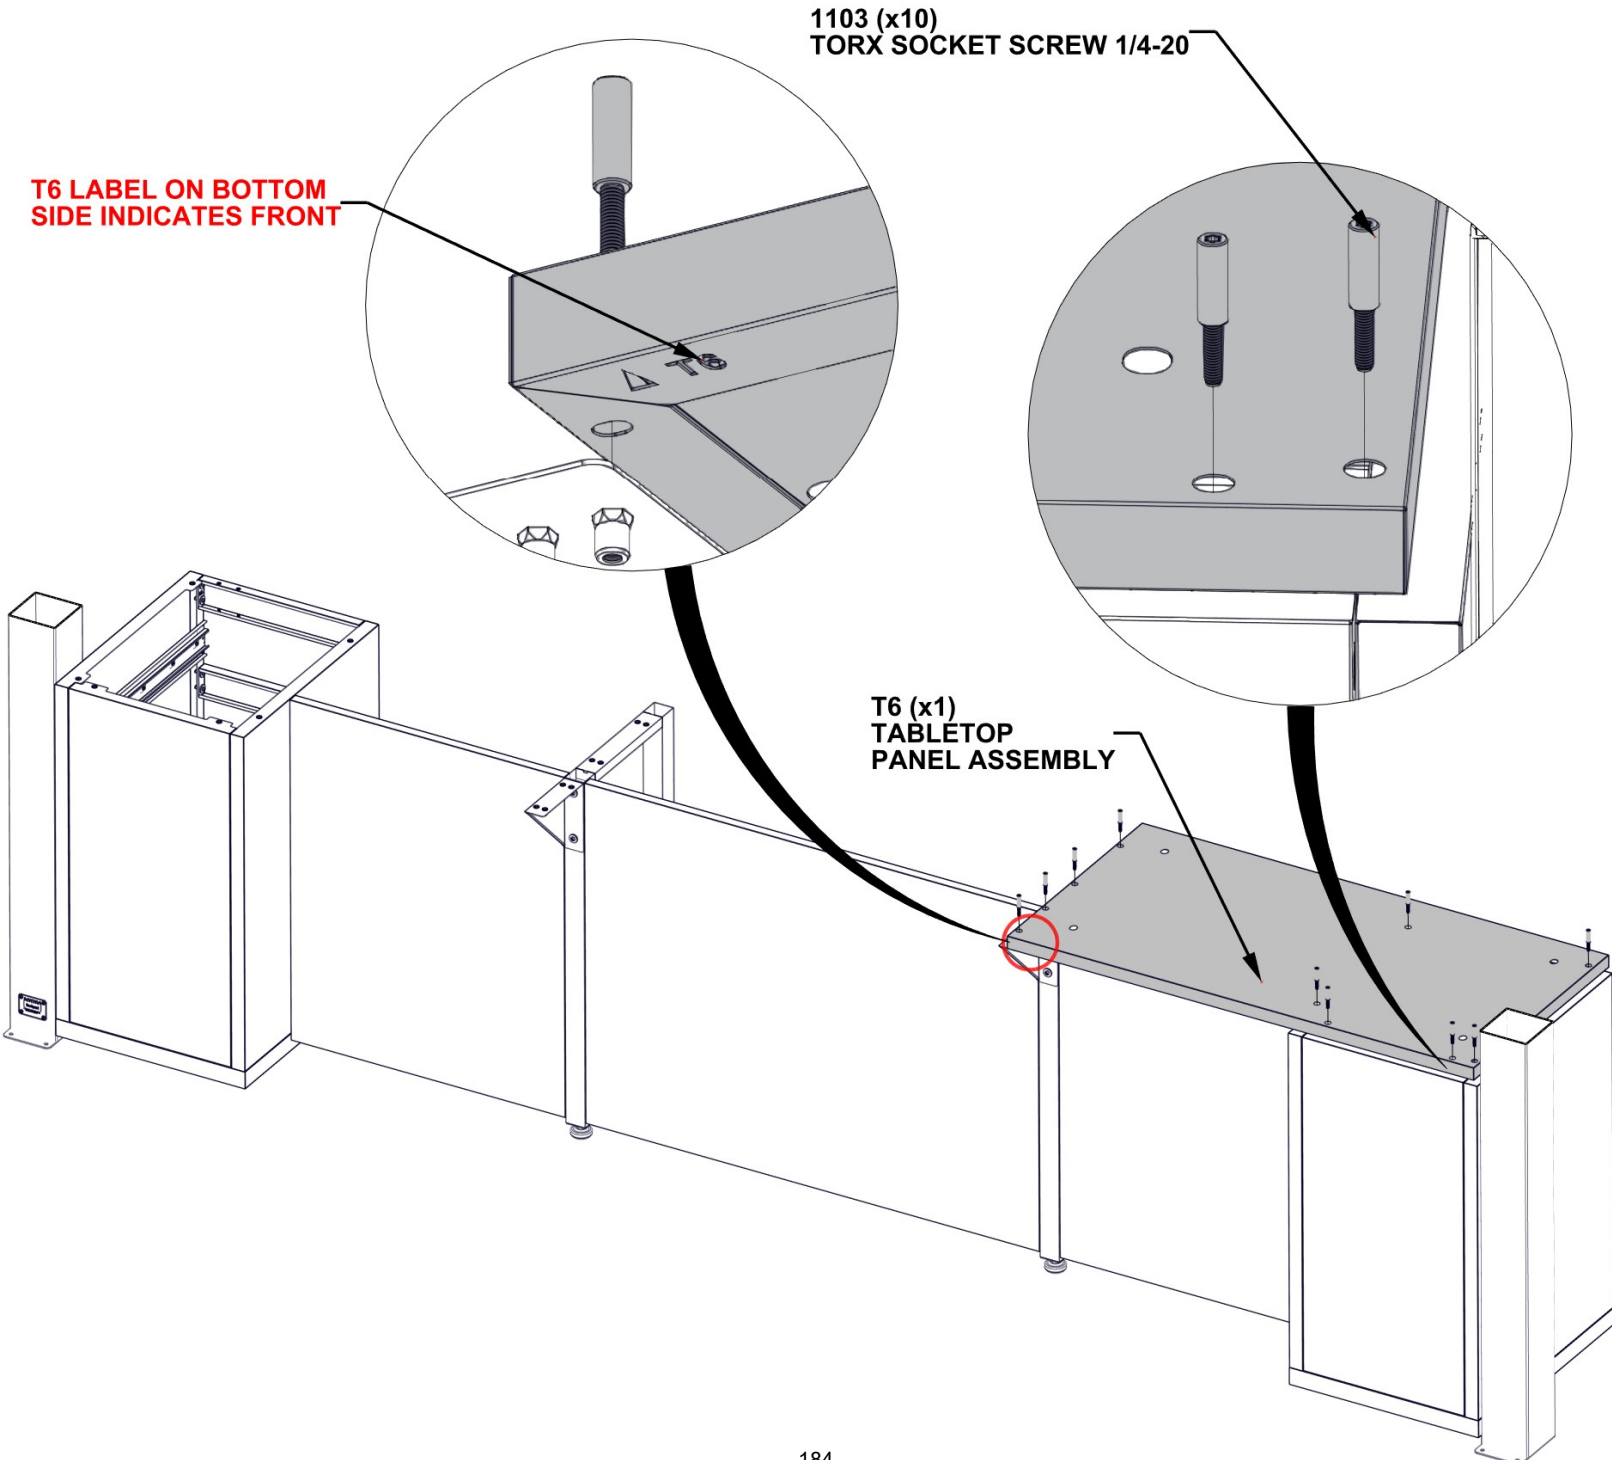

# STEP 126 - BAR CABINET ASSEMBLY

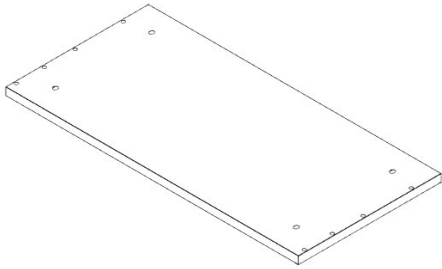

T8 TABLETOP PANEL - A4M03625  
(x1) 47 7/8"x23 3/8"x1 1/4" (32x593x1216)

Qty	PartNo	Description
8	H101103	TORX SOCKET SCREW 1/4-20


- ONLY BAR CABINET IS SHOWN FOR DETAIL.
- SQUARE ALL SIDES OF CABINET BEFORE TIGHTENING HARDWARE.

1103 (x8)  
TORX SOCKET SCREW 1/4-20


T8 LABEL ON BOTTOM  
SIDE INDICATES FRONT

FLUSH FRONT  
AND BACK OF PANEL

T8 (x1)  
TABLETOP  
PANEL

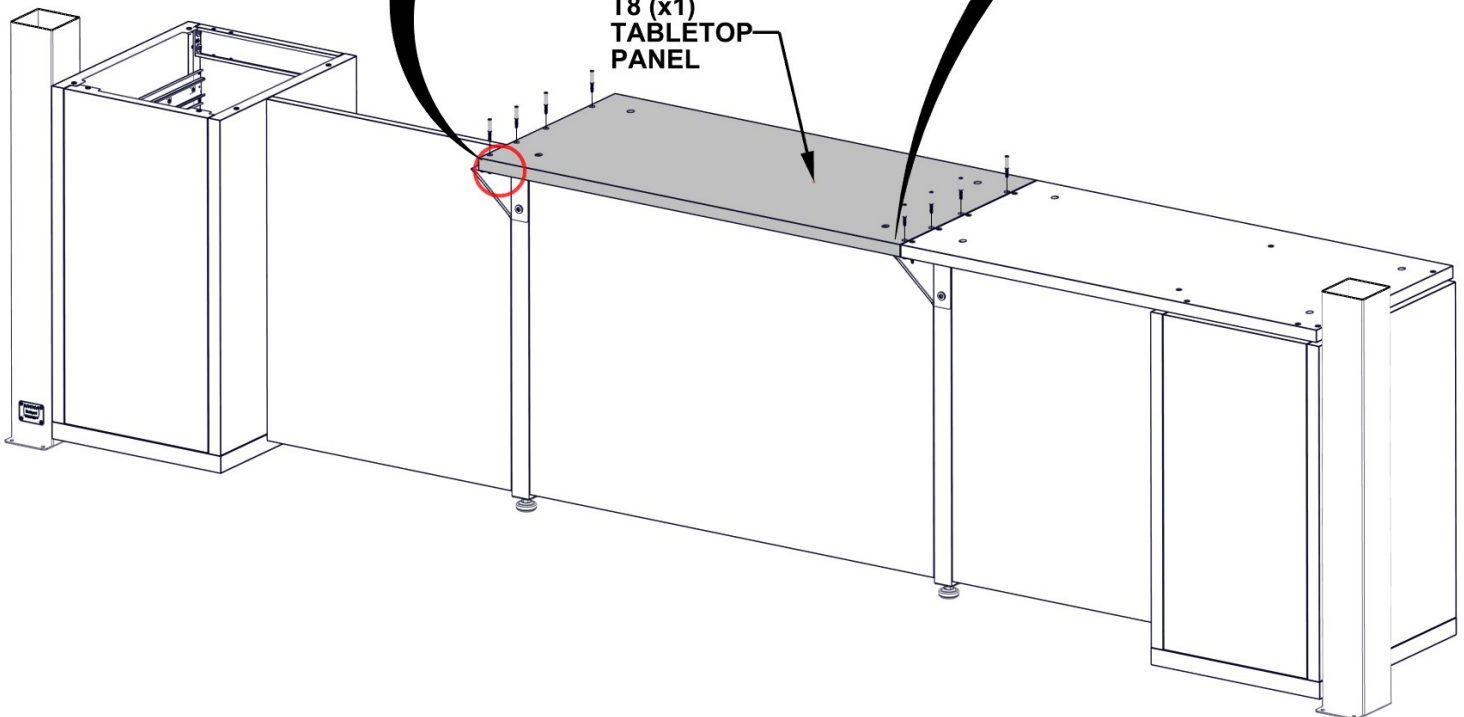


# STEP 127 - BAR CABINET ASSEMBLY

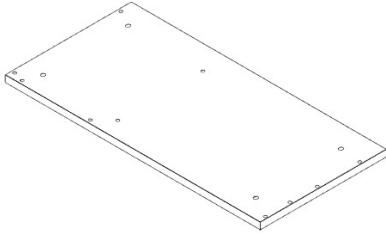


Qty	PartNo	Description
10	H101103	TORX SOCKET SCREW 1/4-20

**T9 TABLETOP PANEL ASSEMBLY - A4M03639**  
 (x1) 47 3/16"x23 3/8"x1 1/4" 1 1/4" (32x593x1199)

- ONLY BAR CABINET IS SHOWN FOR DETAIL.
- SQUARE ALL SIDES OF CABINET BEFORE TIGHTENING HARDWARE.

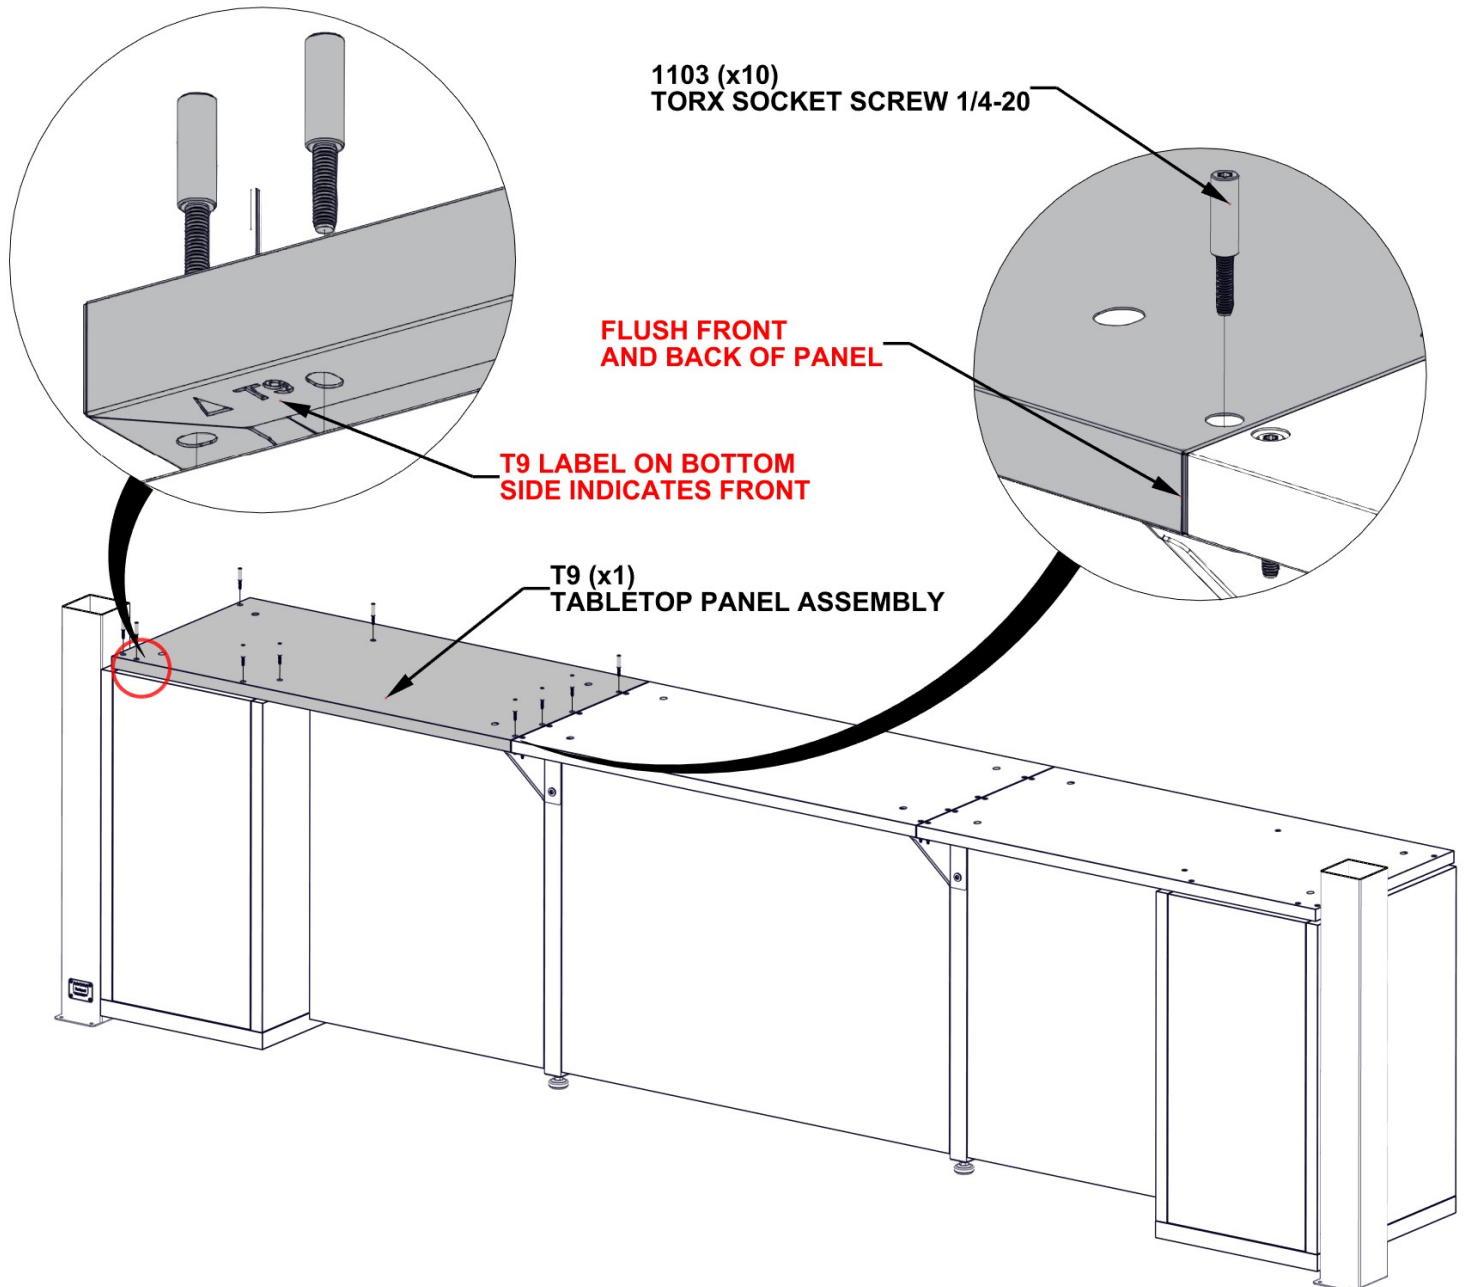


# STEP 128A - BAR CABINET MARBLE INSTALLATION

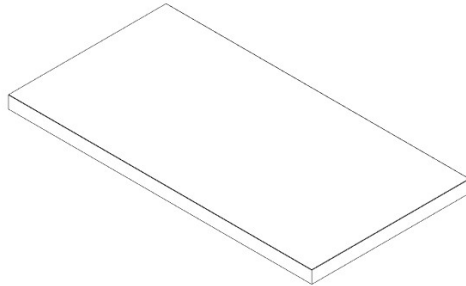

M4 BAR TABLE MARBLE - A4M03616  
(x1) 47 15/16"x24 15/16"x1 15/16" (50x634x1218)

- ONLY BAR CABINETS ARE SHOWN FOR DETAIL.
- IT IS RECOMMENDED TO HAVE AT LEAST TWO PEOPLE SET MARBLE COUNTERTOP IN PLACE.
- SLIDE IN PLACE UNTIL MARBLE IS TIGHT AGAINST POST AND SIDES ARE FLUSH WITH PANEL.
- **WHEN SETTING MARBLE IN PLACE, MAKE SURE YOUR FINGERS ARE CLEAR AND NOT UNDERNEATH MARBLE.**

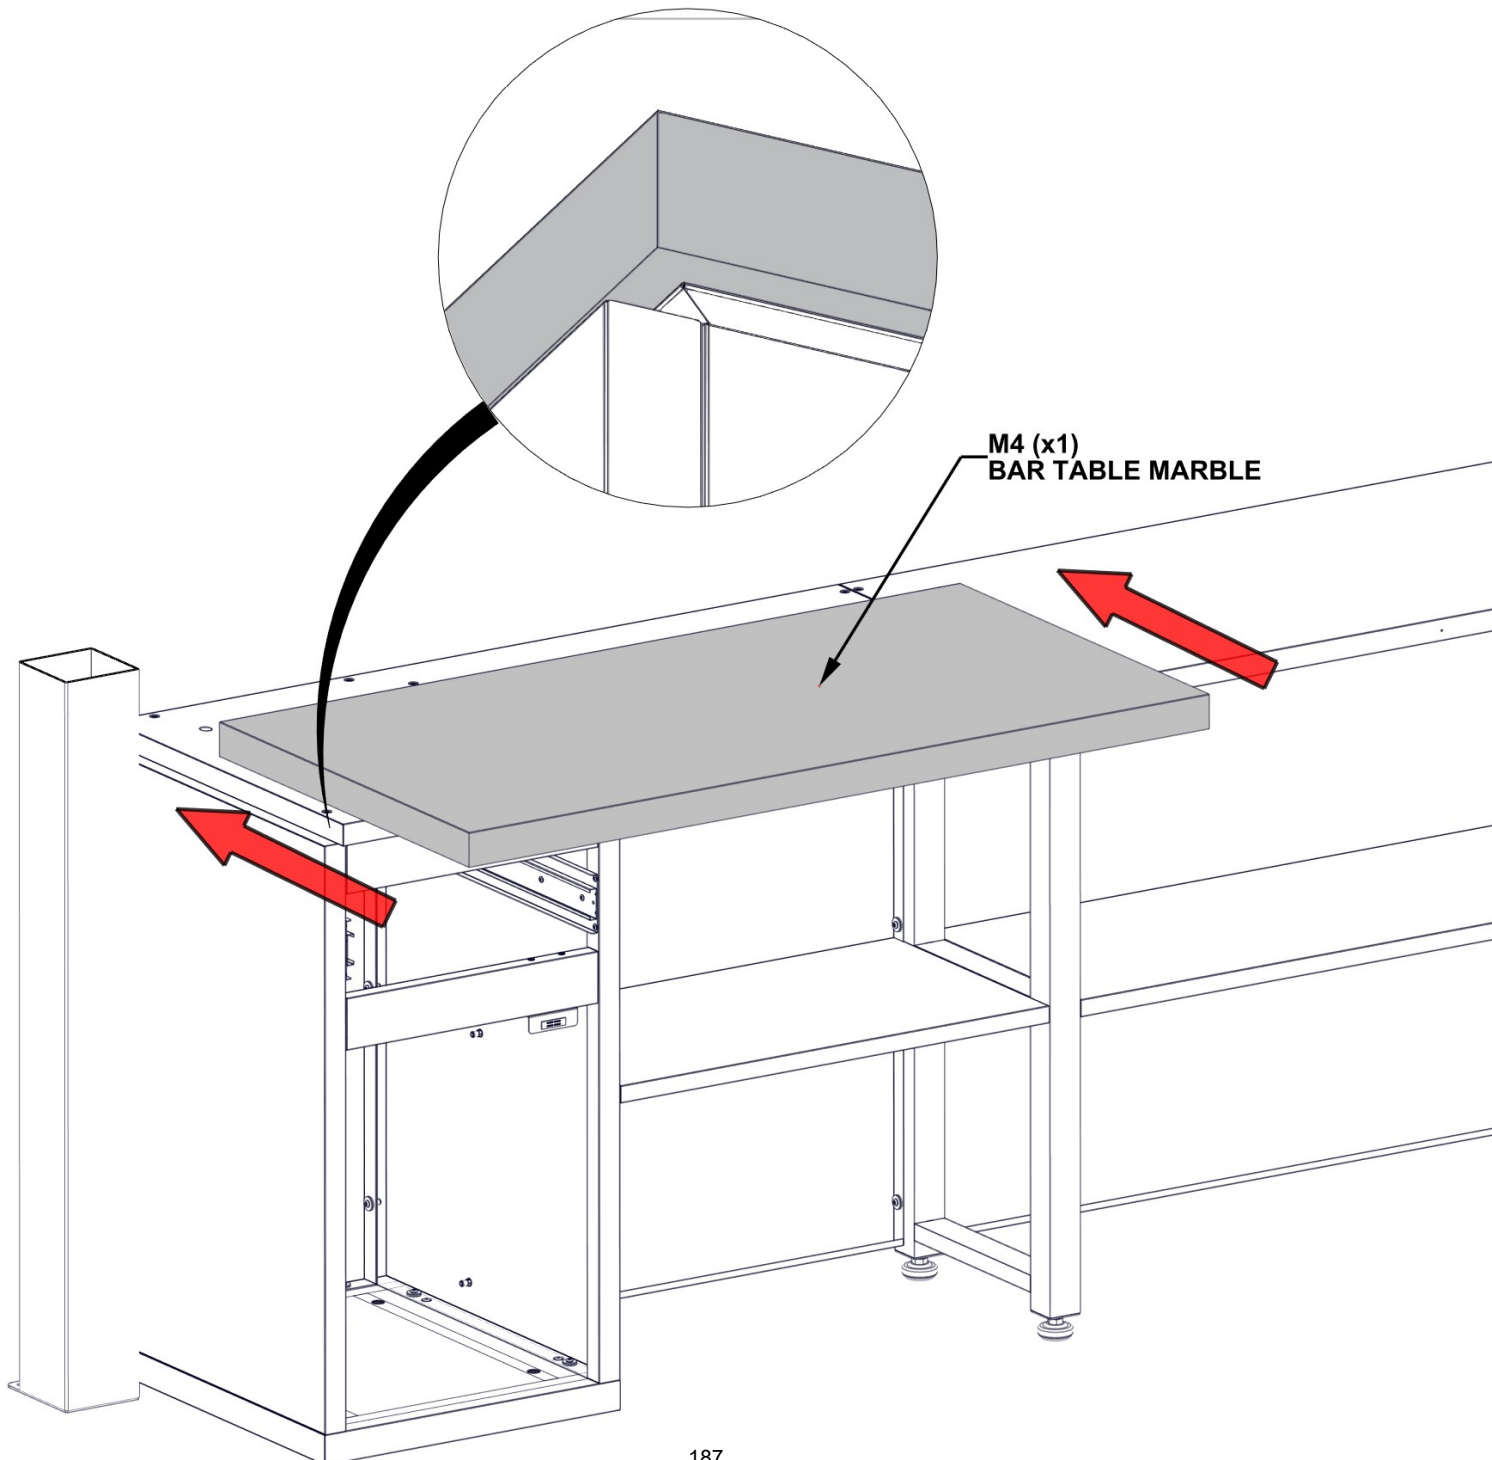

# STEP 128B - BAR CABINET MARBLE INSTALLATION


Qty	PartNo	Description
4	H101292	TORX PAN HEAD 1/4-20x13/32"
4	H101053	STEEL WASHER 6x20
4	H101054	SEALANT WASHER

- ONLY BAR CABINETS ARE SHOWN FOR DETAIL.


- MAKE SURE YOU ARE USING THE CORRECT HARDWARE FOR THIS STEP.

- ONCE MARBLE IS IN PLACE, IT IS RECOMMENDED TO COVER WITH A PIECE OF CARDBOARD OR FOAM UNTIL ASSEMBLY IS FINISHED TO PREVENT DAMAGE.

- DO NOT USE MARBLE SURFACE AS A WORK BENCH.

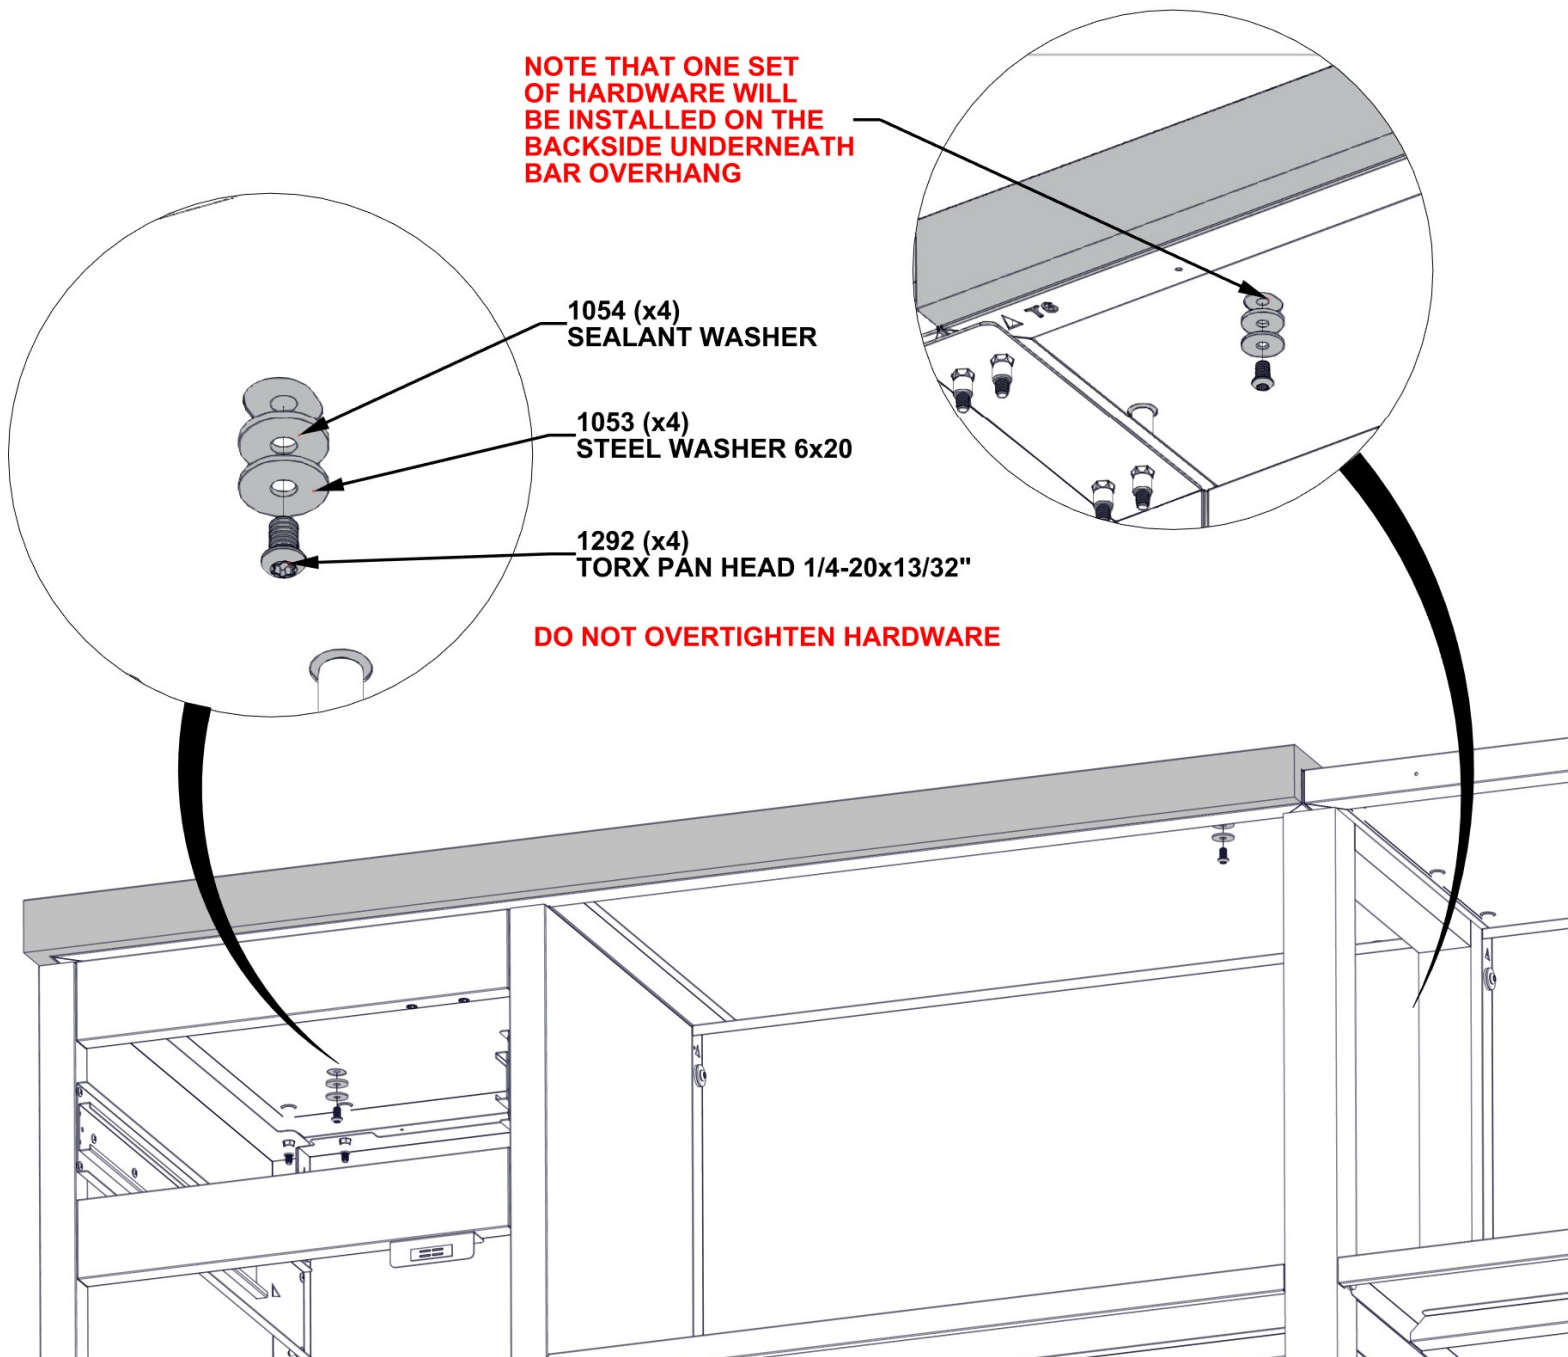


# STEP 129A - BAR CABINET MARBLE INSTALLATION

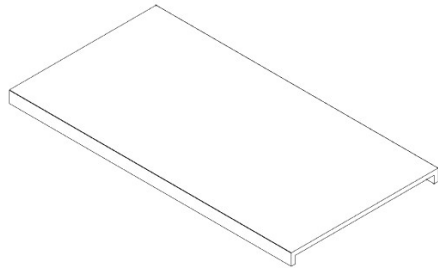

M6 BAR TABLE MARBLE - A4M03633  
(x1) 47 7/8"x24 7/8"x1 15/16" (49x632x1216)

- ONLY BAR CABINETS ARE SHOWN FOR DETAIL.
- IT IS RECOMMENDED TO HAVE AT LEAST TWO PEOPLE SET MARBLE COUNTERTOP IN PLACE.
- SLIDE IN PLACE UNTIL MARBLE PIECES ARE TIGHT AGAINST ONE ANOTHER.
- **WHEN SETTING MARBLE IN PLACE, MAKE SURE YOUR FINGERS ARE CLEAR AND NOT UNDERNEATH MARBLE.**

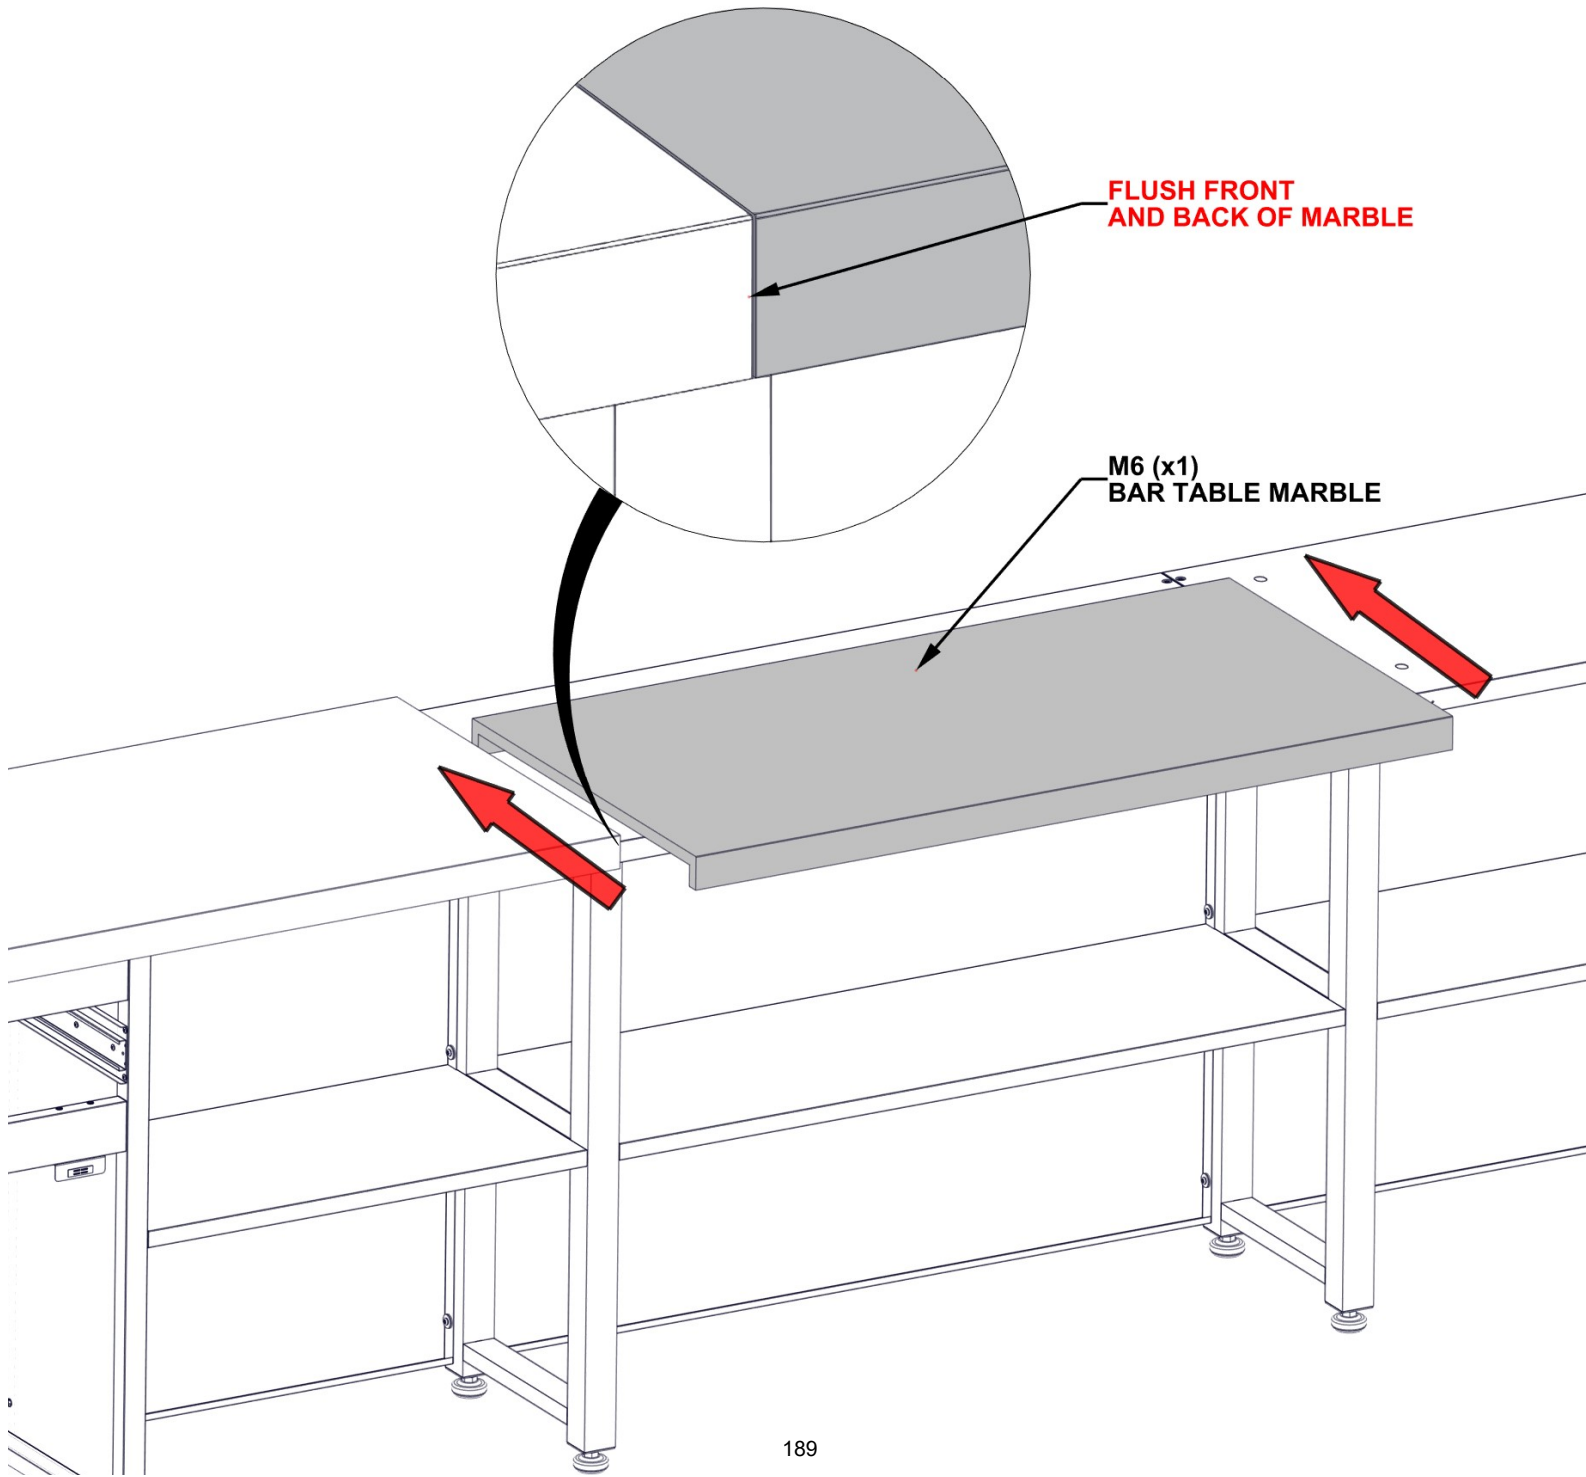


# STEP 129B - BAR CABINET MARBLE INSTALLATION

Qty	PartNo	Description
4	H101292	TORX PAN HEAD 1/4-20x13/32"
4	H101053	STEEL WASHER 6x20
4	H101054	SEALANT WASHER

- ONLY BAR CABINETS ARE SHOWN FOR DETAIL.
- MAKE SURE YOU ARE USING THE CORRECT HARDWARE FOR THIS STEP.
- ONCE MARBLE IS IN PLACE, IT IS RECOMMENDED TO COVER WITH A PIECE OF CARDBOARD OR FOAM UNTIL ASSEMBLY IS FINISHED TO PREVENT DAMAGE.
- DO NOT USE MARBLE SURFACE AS A WORK BENCH.

NOTE THAT TWO SETS OF HARDWARE WILL BE INSTALLED ON THE BACKSIDE UNDERNEATH BAR OVERHANG

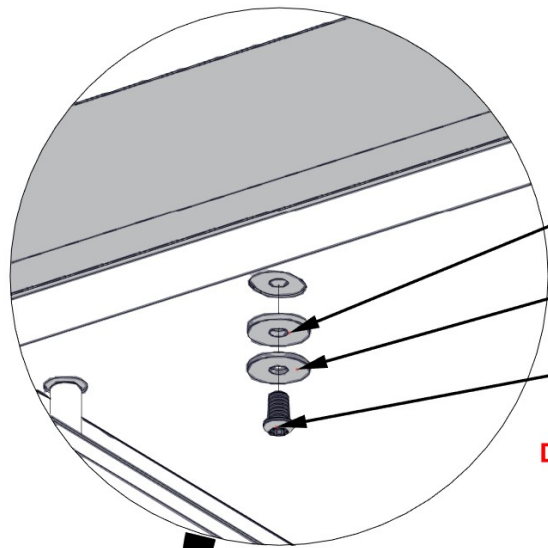


1054 (x4)  
SEALANT WASHER


1053 (x4)  
STEEL WASHER 6x20

1292 (x4)  
TORX PAN HEAD 1/4-20x13/32"

DO NOT OVERTIGHTEN HARDWARE

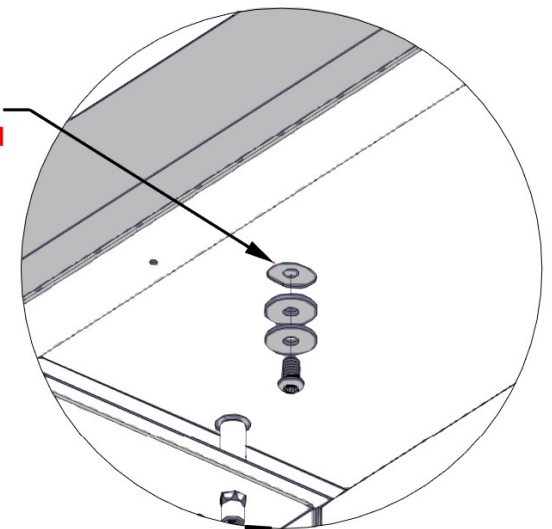


# STEP 130A - BAR CABINET MARBLE INSTALLATION

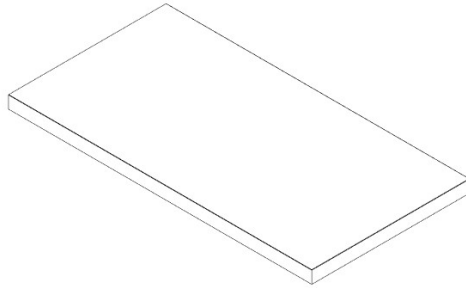

M4 BAR TABLE MARBLE - A4M03616  
(x1) 47 15/16"x24 15/16"x1 15/16" (50x634x1218)

- ONLY BAR CABINETS ARE SHOWN FOR DETAIL.
- IT IS RECOMMENDED TO HAVE AT LEAST TWO PEOPLE SET MARBLE COUNTERTOP IN PLACE.
- SLIDE IN PLACE UNTIL MARBLE PIECES ARE TIGHT AGAINST ONE ANOTHER AND AGAINST POST.
- **WHEN SETTING MARBLE IN PLACE, MAKE SURE YOUR FINGERS ARE CLEAR AND NOT UNDERNEATH MARBLE.**

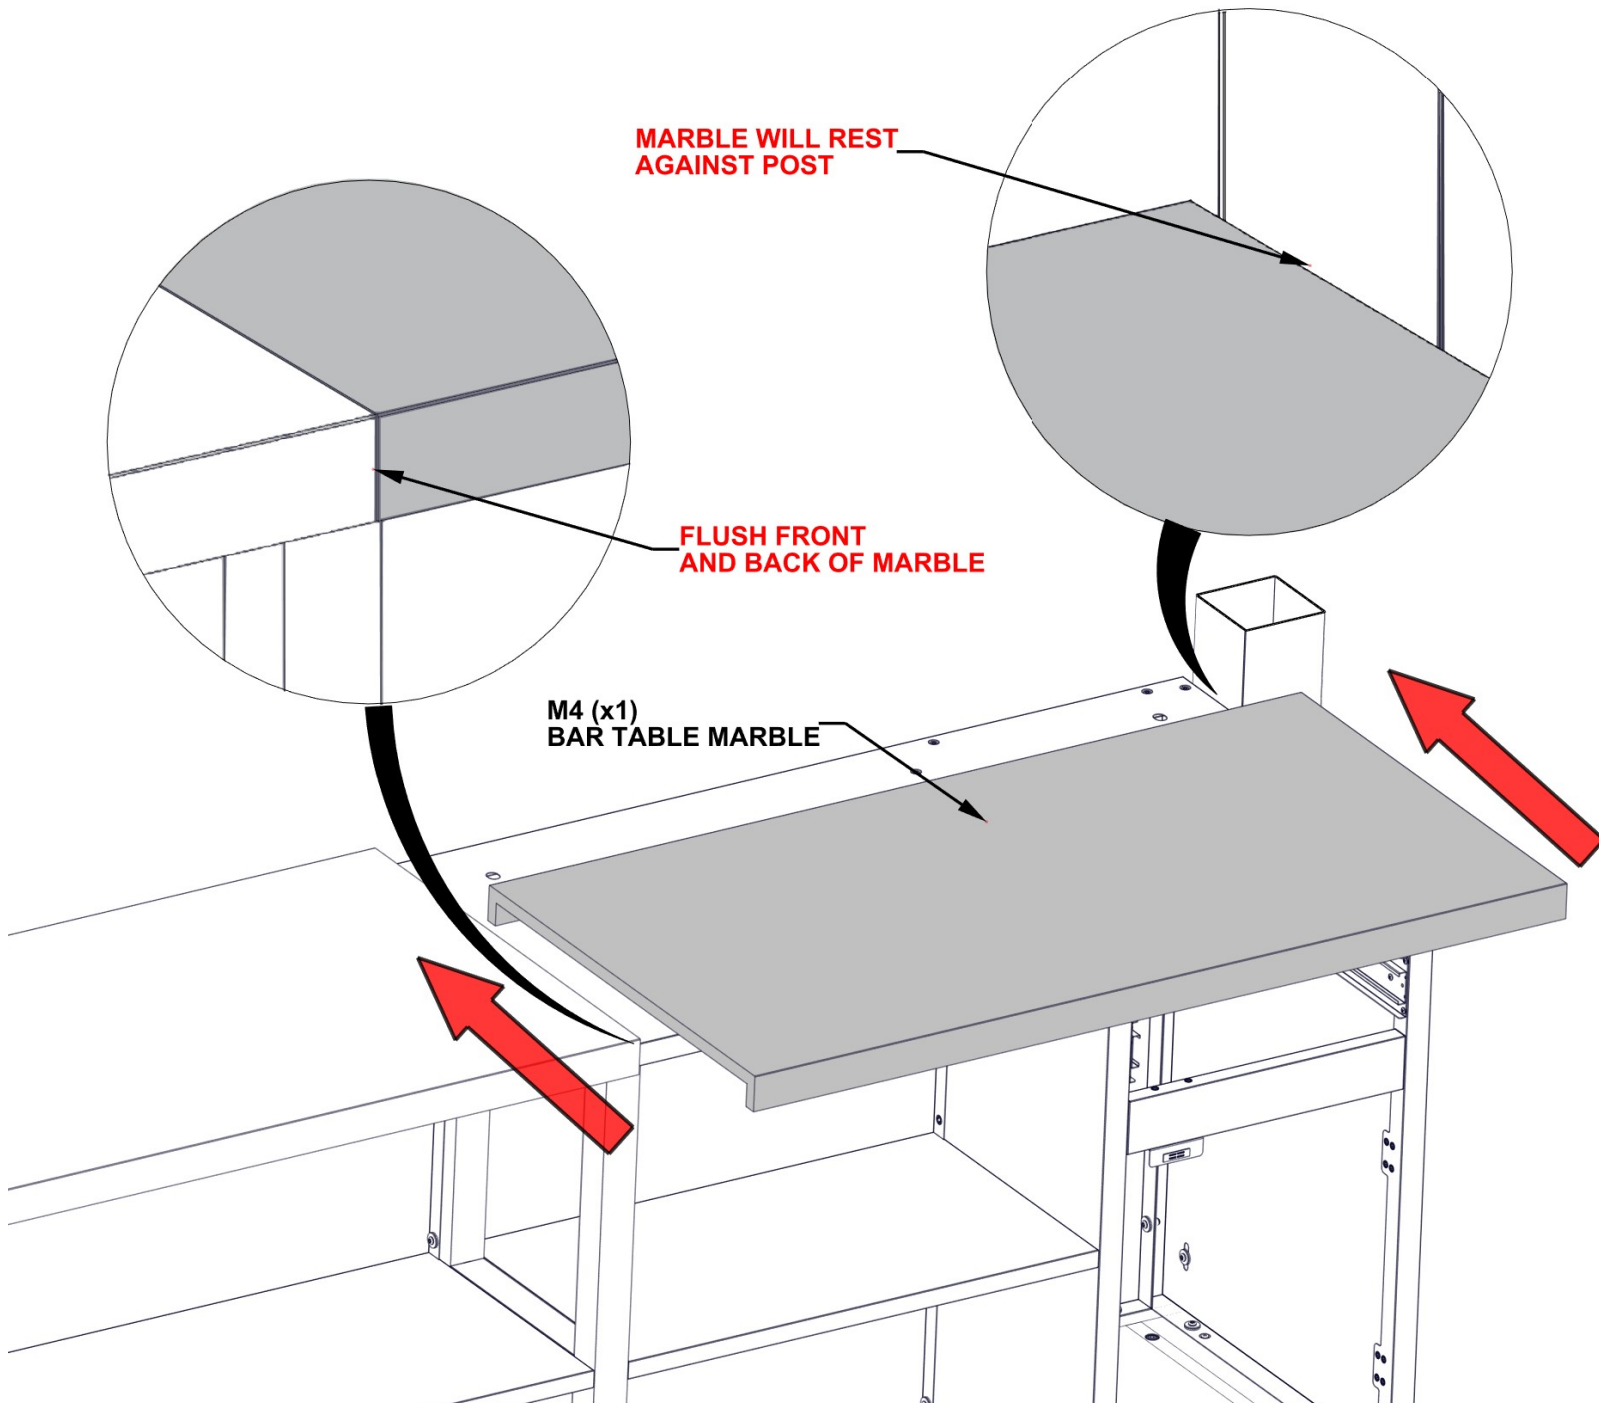

# STEP 130B - BAR CABINET MARBLE INSTALLATION


Qty	PartNo	Description
4	H101292	TORX PAN HEAD 1/4-20x13/32"
4	H101053	STEEL WASHER 6x20
4	H101054	SEALANT WASHER

- ONLY BAR CABINETS ARE SHOWN FOR DETAIL.

- MAKE SURE YOU ARE USING THE CORRECT HARDWARE FOR THIS STEP.


- ONCE MARBLE IS IN PLACE, IT IS RECOMMENDED TO COVER WITH A PIECE OF CARDBOARD OR FOAM UNTIL ASSEMBLY IS FINISHED TO PREVENT DAMAGE.

- DO NOT USE MARBLE SURFACE AS A WORK BENCH.

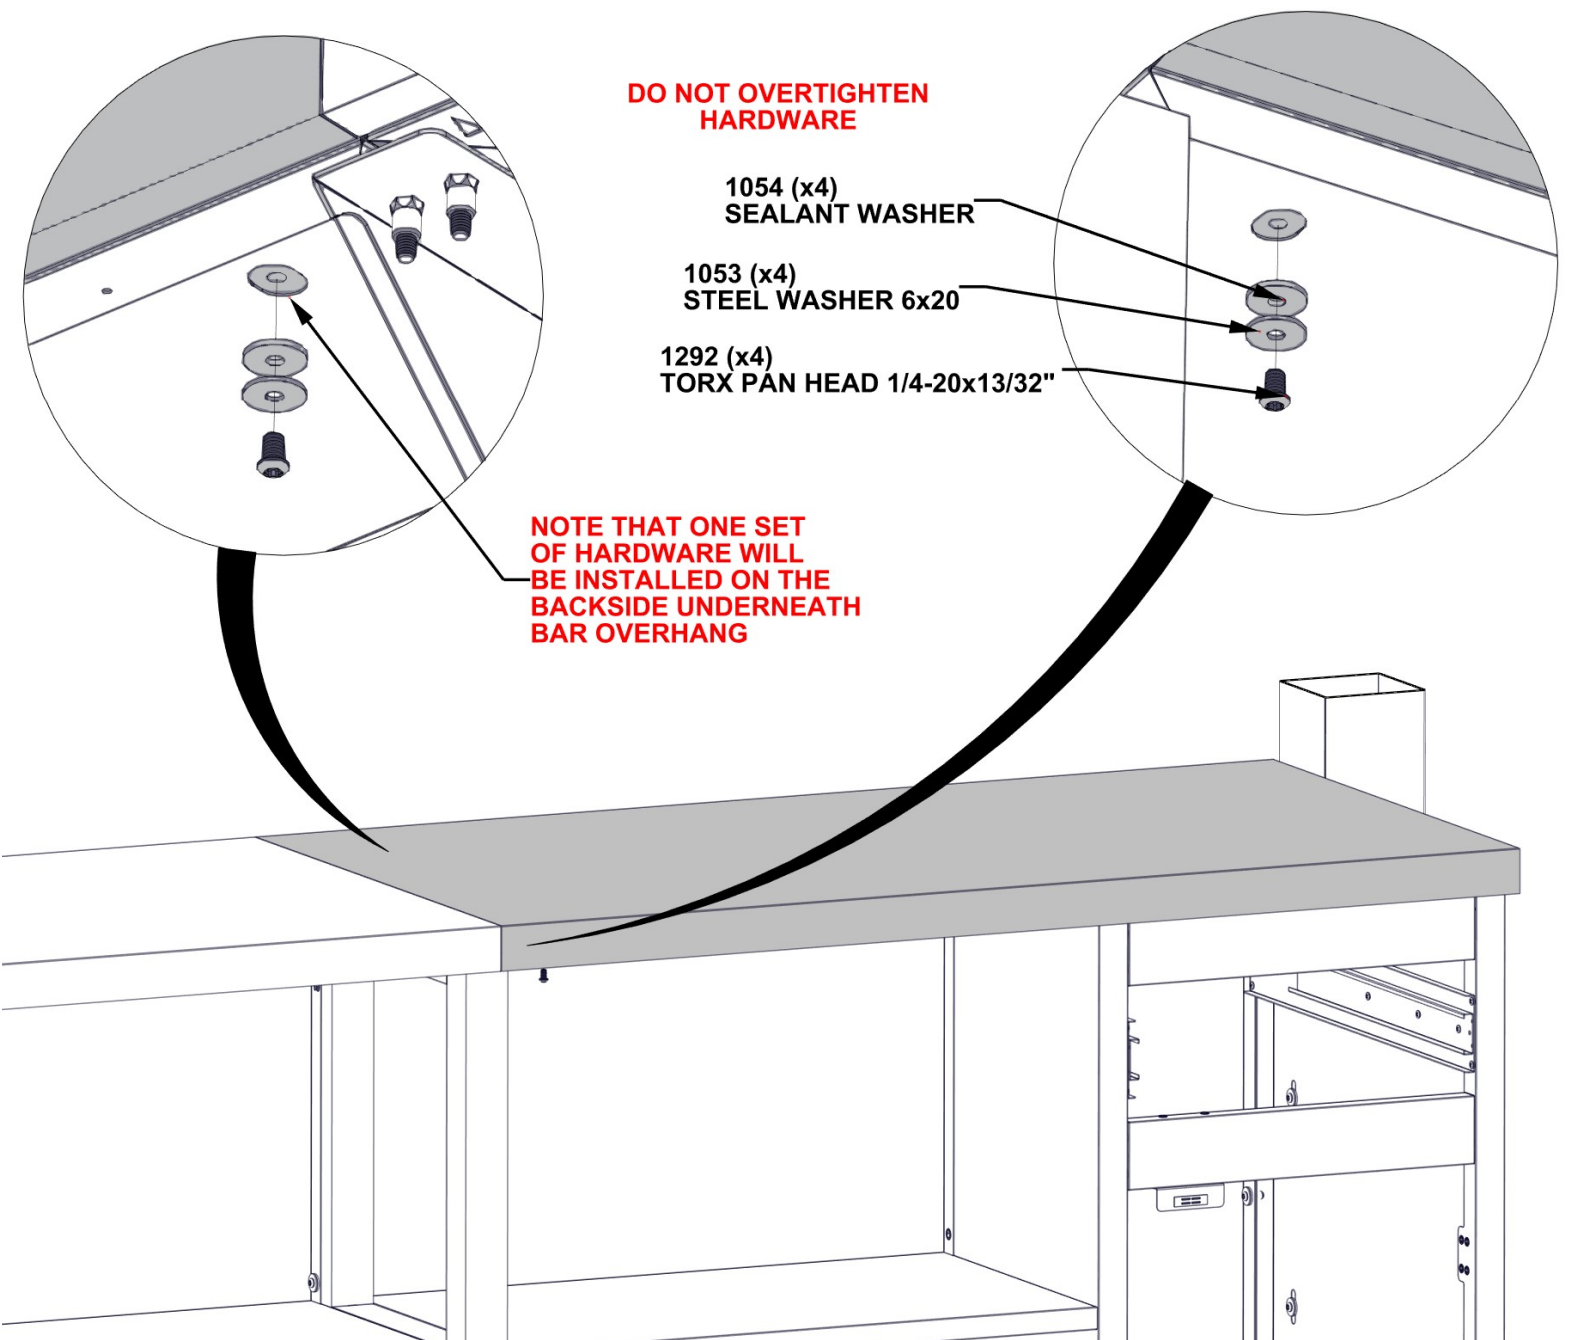


# STEP 131A - BAR DRAWER ASSEMBLY

Qty	PartNo	Description
18	H101289	PAN HEAD SCREW 8-32x1/2" SS

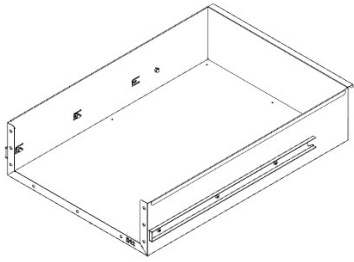


**D12 DRAWER BODY ASSEMBLY - A4M03621**  
(x2) 22 1/4"x15 13/16"x4 15/16" (126x402x565)

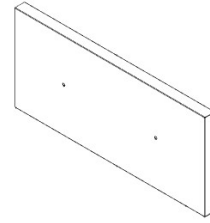

**D11 DRAWER PANEL ASSEMBLY - A4M03619**  
(x2) 17 13/16"x8 1/16"x15/16" (24x205x452)


**- REPEAT THIS STEP TWICE**

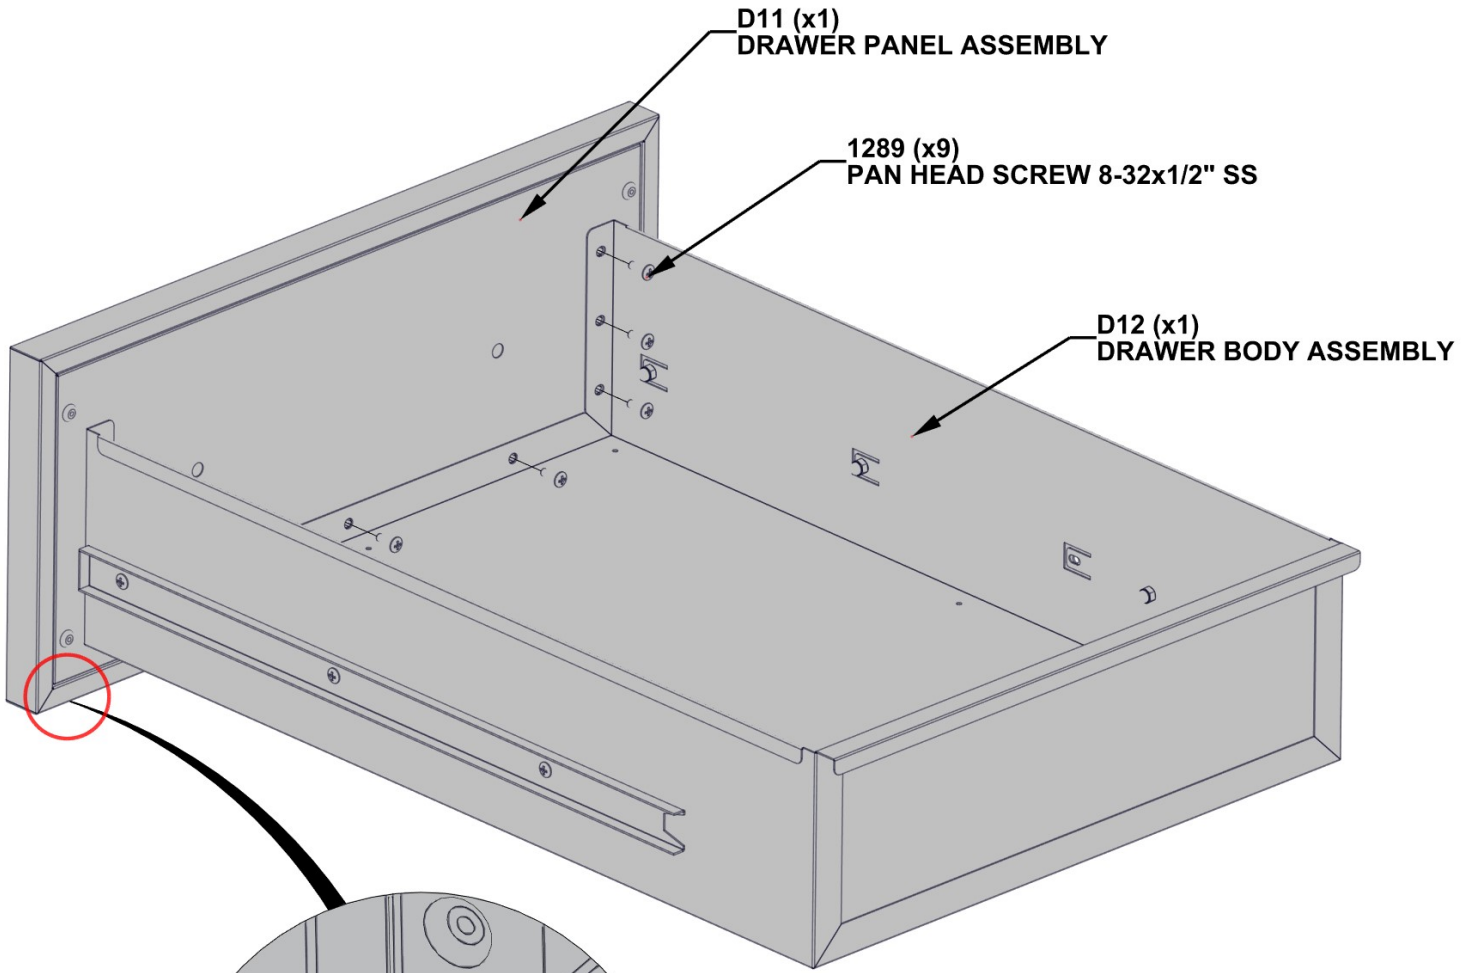

**D11 (x1)**  
**DRAWER PANEL ASSEMBLY**


**1289 (x9)**  
**PAN HEAD SCREW 8-32x1/2" SS**

**D12 (x1)**  
**DRAWER BODY ASSEMBLY**

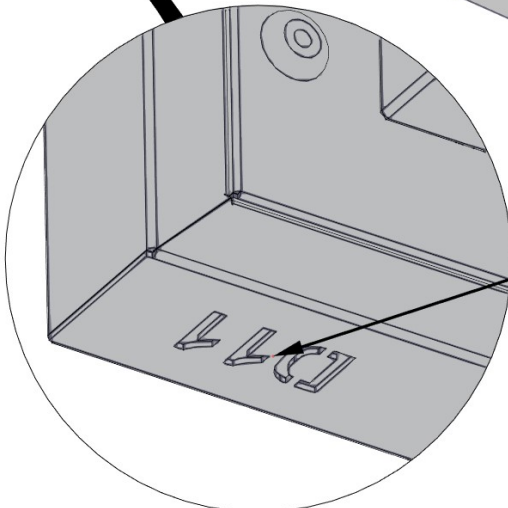

**D11 LABEL INDICATES**  
**BOTTOM OF DRAWER**


# STEP 131B - BAR DRAWER ASSEMBLY

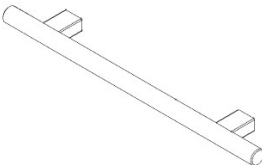


Qty	PartNo	Description
4	H101307	SHOULDER BOLT 8-32x30mm SS

H2 STAINLESS STEEL HANDLE - A4M03024  
(x2) 5/8"x1 9/16"x11 13/16" (16x40x300)

**- REPEAT THIS STEP TWICE**


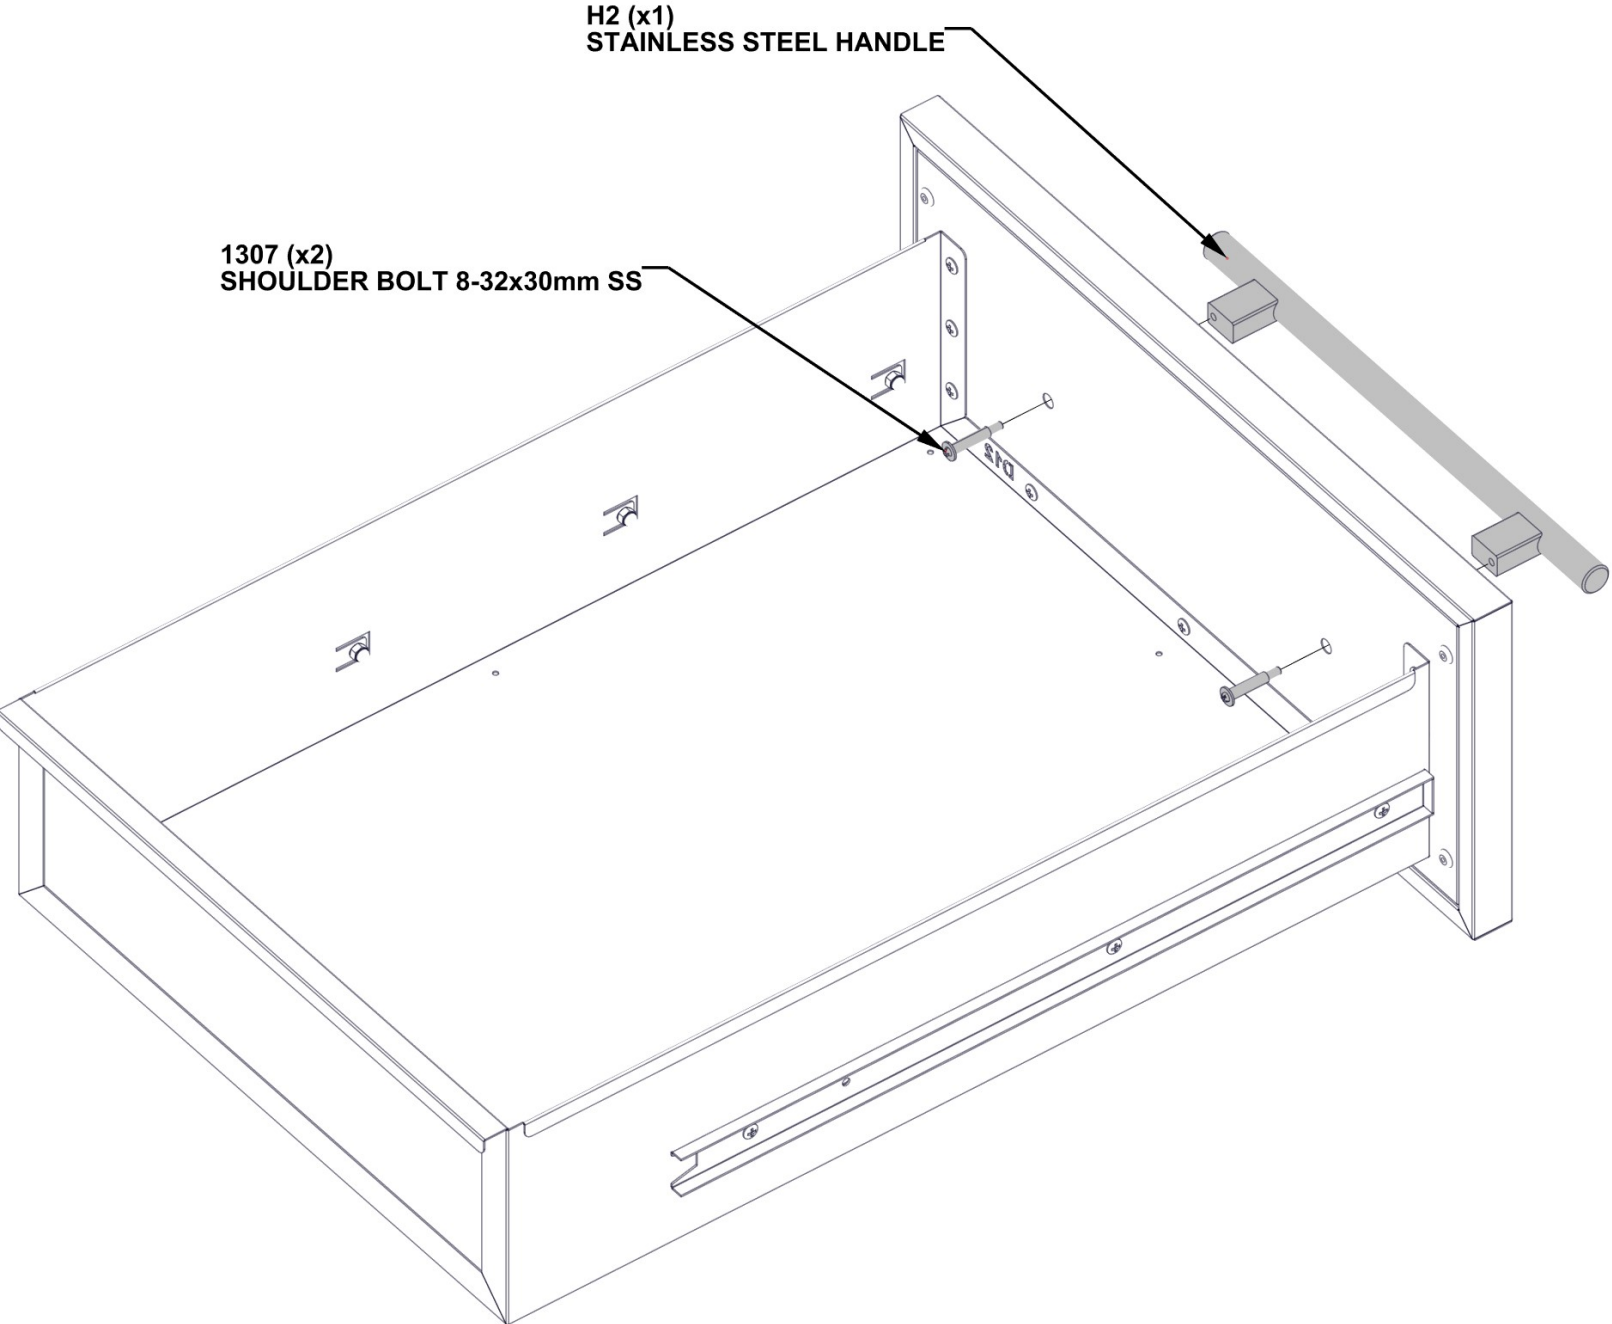


# STEP 132 - BAR CABINET ASSEMBLY

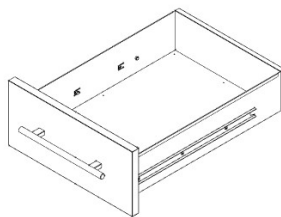

DRAWER ASSEMBLY  
FROM STEP 131


- ONLY BAR CABINET IS SHOWN FOR DETAIL.
- ATTACH DRAWER ASSEMBLY BY ALIGNING BOTH ENDS OF FACTORY ASSEMBLED DRAWER SLIDES WITH ONE ANOTHER.
- PRESS TOGETHER UNTIL DRAWER SLIDES CONNECT.

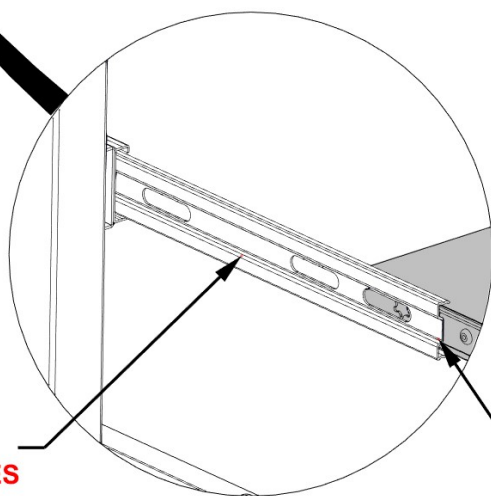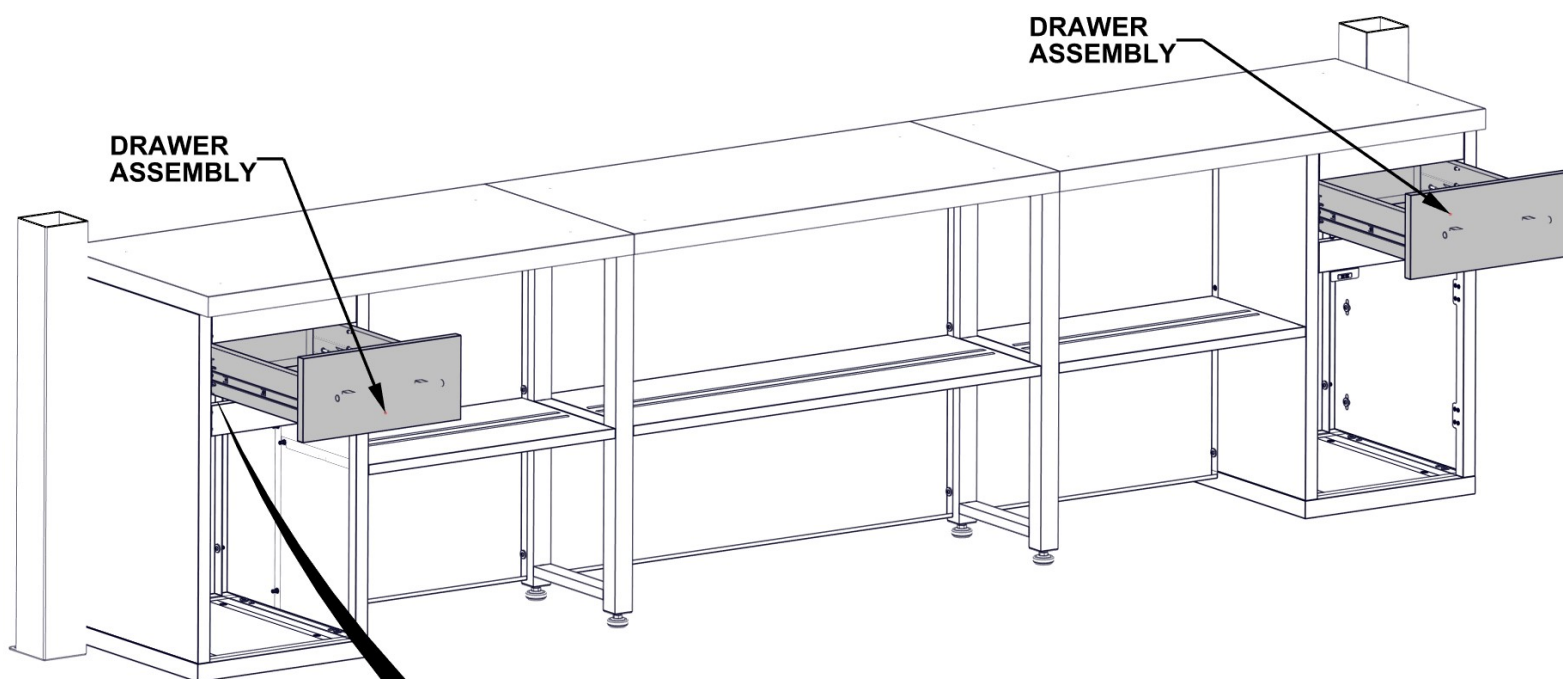

**SLIDE INNER RACE  
OF DRAWER SLIDE OUT  
BEFORE ATTACHING SLIDES**


**ALIGN DRAWER SLIDES  
ON BOTH SIDES OF TRASH  
CAN HOLDER**

# STEP 133A - DOOR ASSEMBLY



D10 DOOR PANEL ASSEMBLY - A4M03617  
(x1) 24 3/4"x17 13/16"x15/16" (24x452x628)

Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW




D13 DOOR PANEL ASSEMBLY - A4M03643  
(x1) 24 3/4"x17 13/16"x15/16" (24x452x628)



A4M03025 FULL OVERLAY HINGE  
(x4)


- INSTALL CABINET HINGES TO THE REMAINING TWO DOORS.

**DO NOT OVERTIGHTEN HARDWARE**

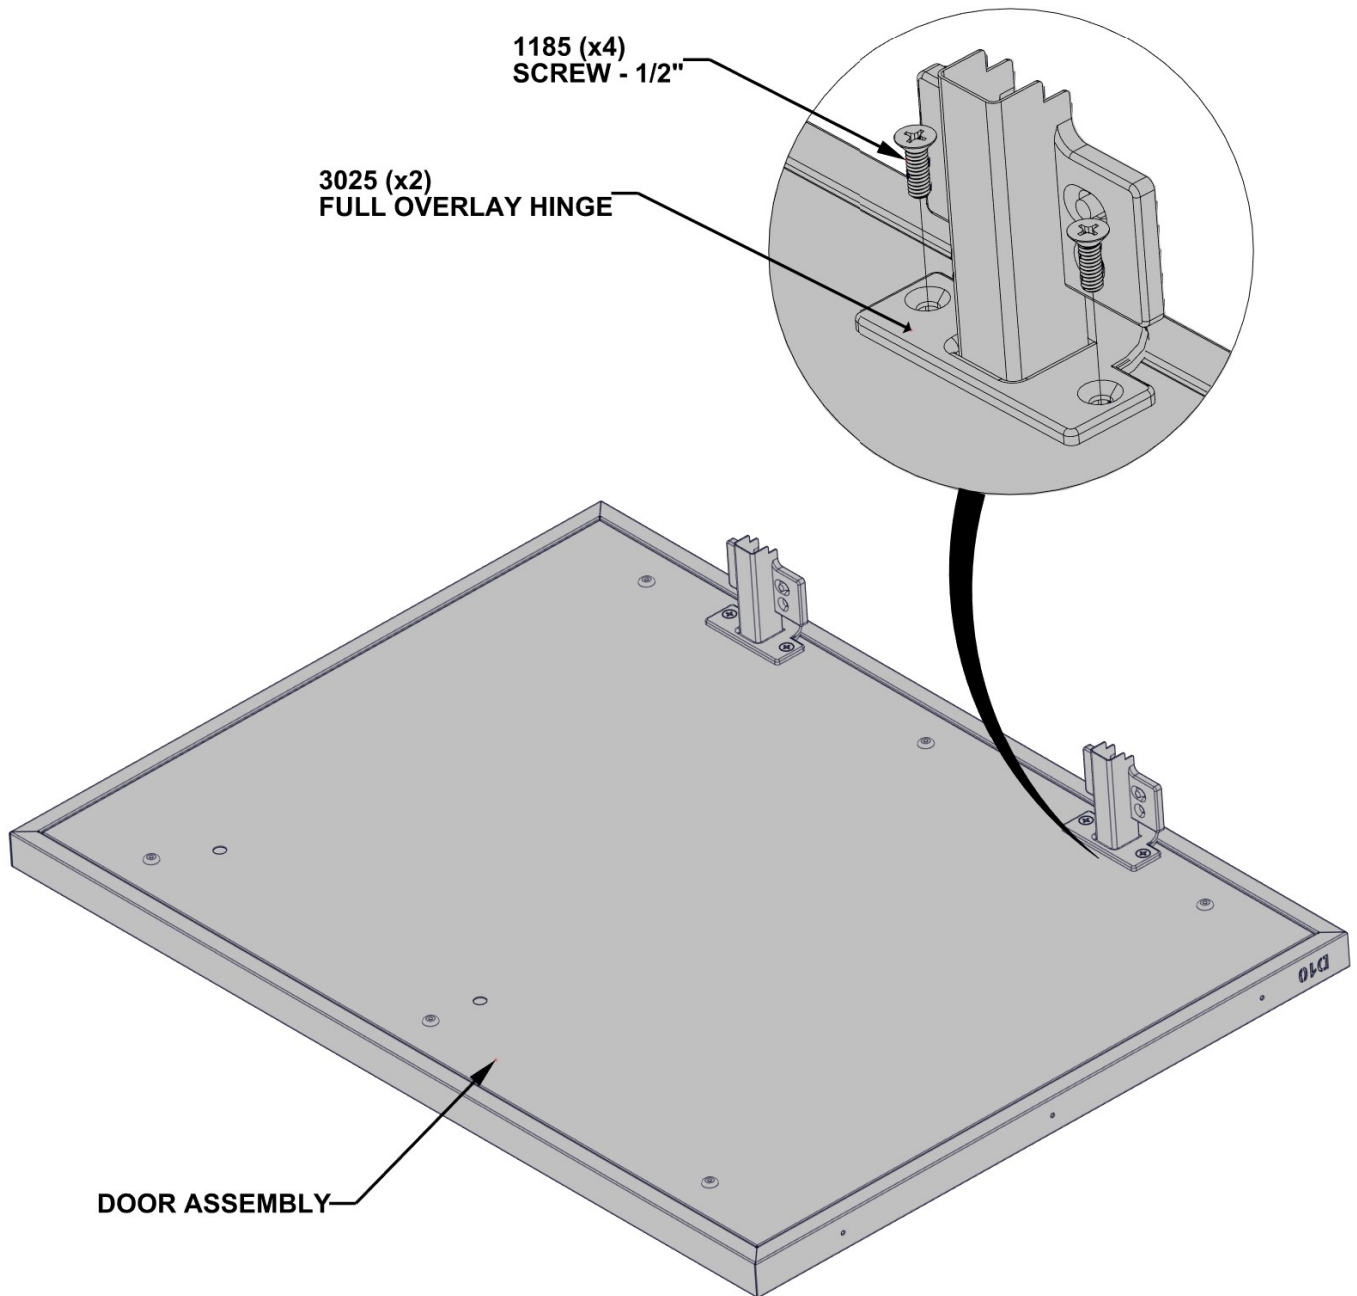


# STEP 133B - DOOR ASSEMBLY

Qty	PartNo	Description
4	H101307	SHOULDER BOLT 8-32x30mm SS

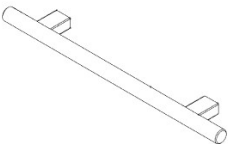


H2 STAINLESS STEEL HANDLE - A4M03024  
(x2) 5/8"x1 9/16"x11 13/16" (16x40x300)

- INSTALL CABINET HANDLES ON THE TWO DOORS FROM PREVIOUS STEP.

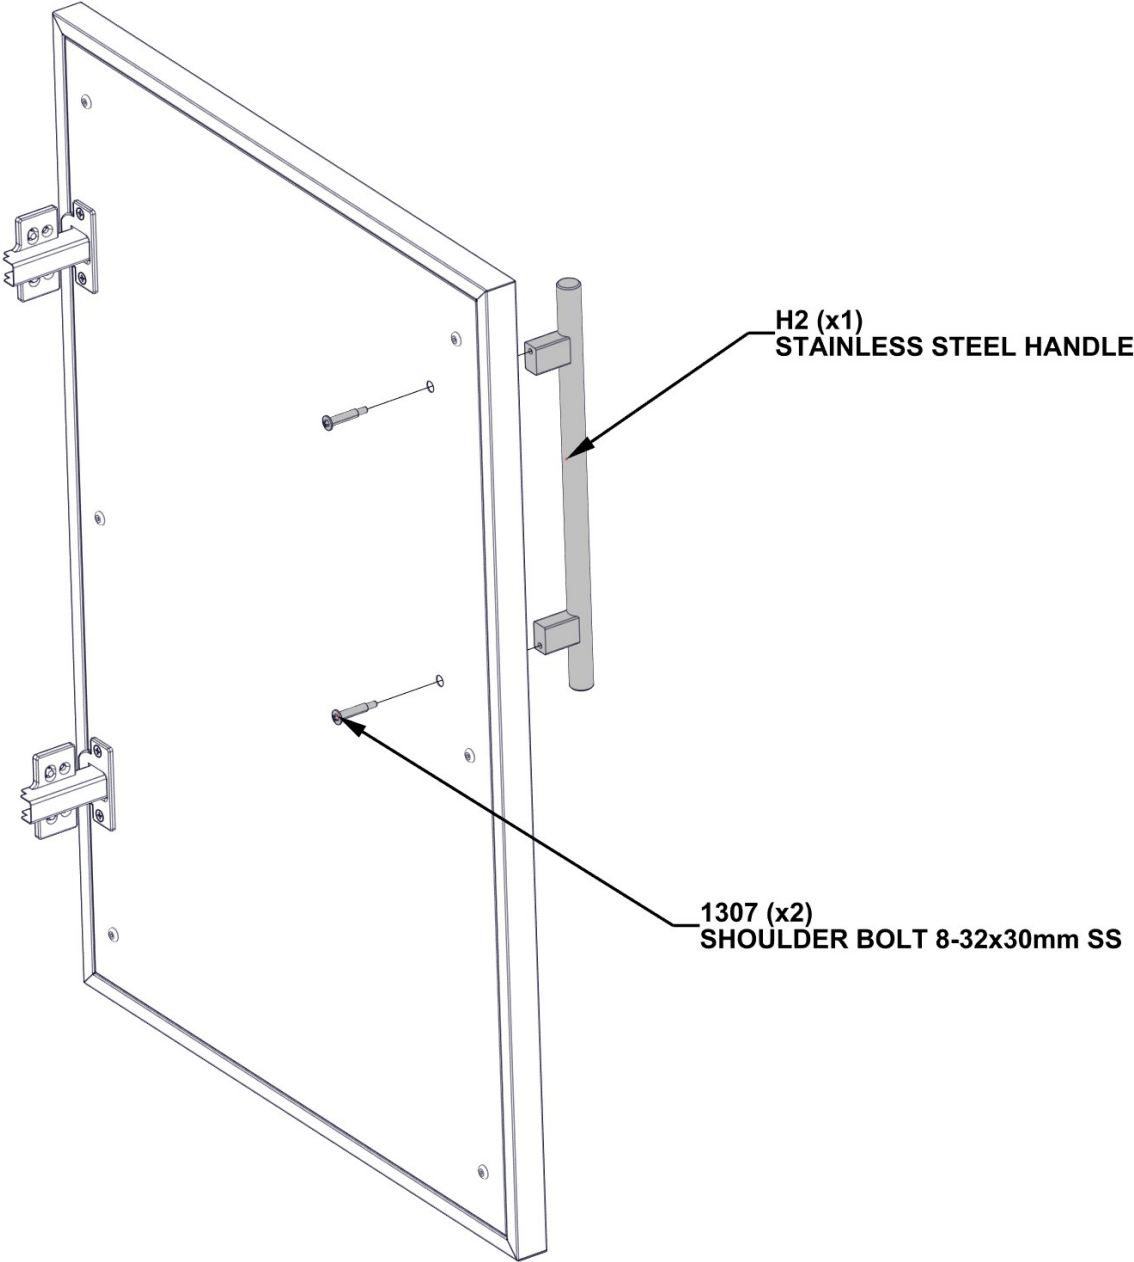


# STEP 134 - CABINET DOOR ATTACHMENT

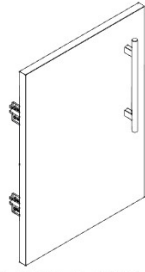

Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

D10 DOOR PANEL ASSEMBLY - A4M03617  
(x1) 24 3/4"x17 13/16"x15/16" (24x452x628)

- ONLY BAR CABINET IS SHOWN FOR DETAIL.
- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

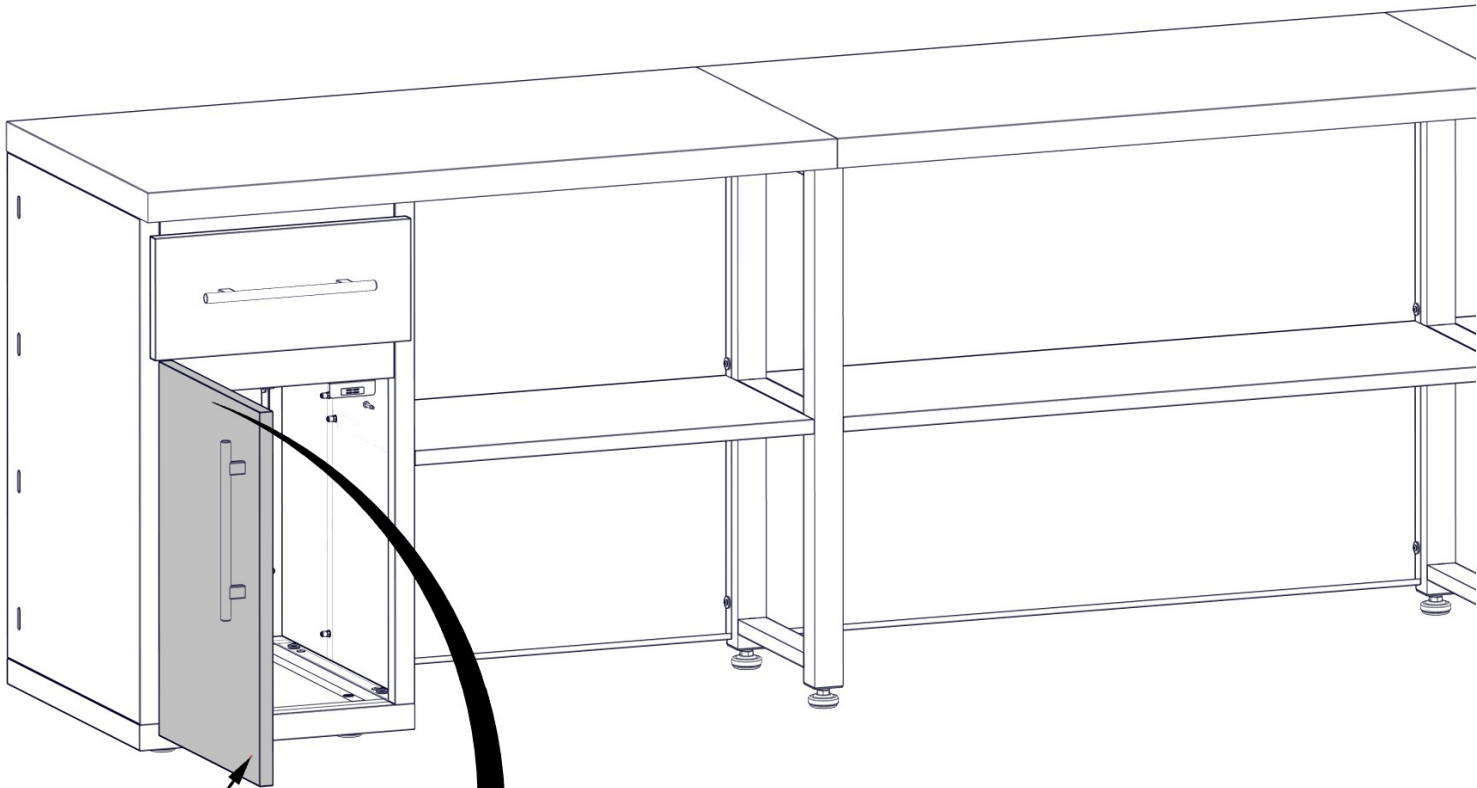


D10 (x1)  
DOOR PANEL  
ASSEMBLY

**ALIGN HINGE BRACKET WITH  
THREADED INSERTS IN PANEL**

**DO NOT OVERTIGHTEN HARDWARE**

1185 (x8)  
SCREW - 1/2"


# STEP 135 - CABINET DOOR ATTACHMENT

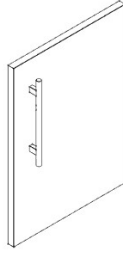

Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

D13 DOOR PANEL ASSEMBLY - A4M03643  
(x1) 24 3/4"x17 13/16"x15/16" (24x452x628)


- ONLY BAR CABINET IS SHOWN FOR DETAIL.
- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

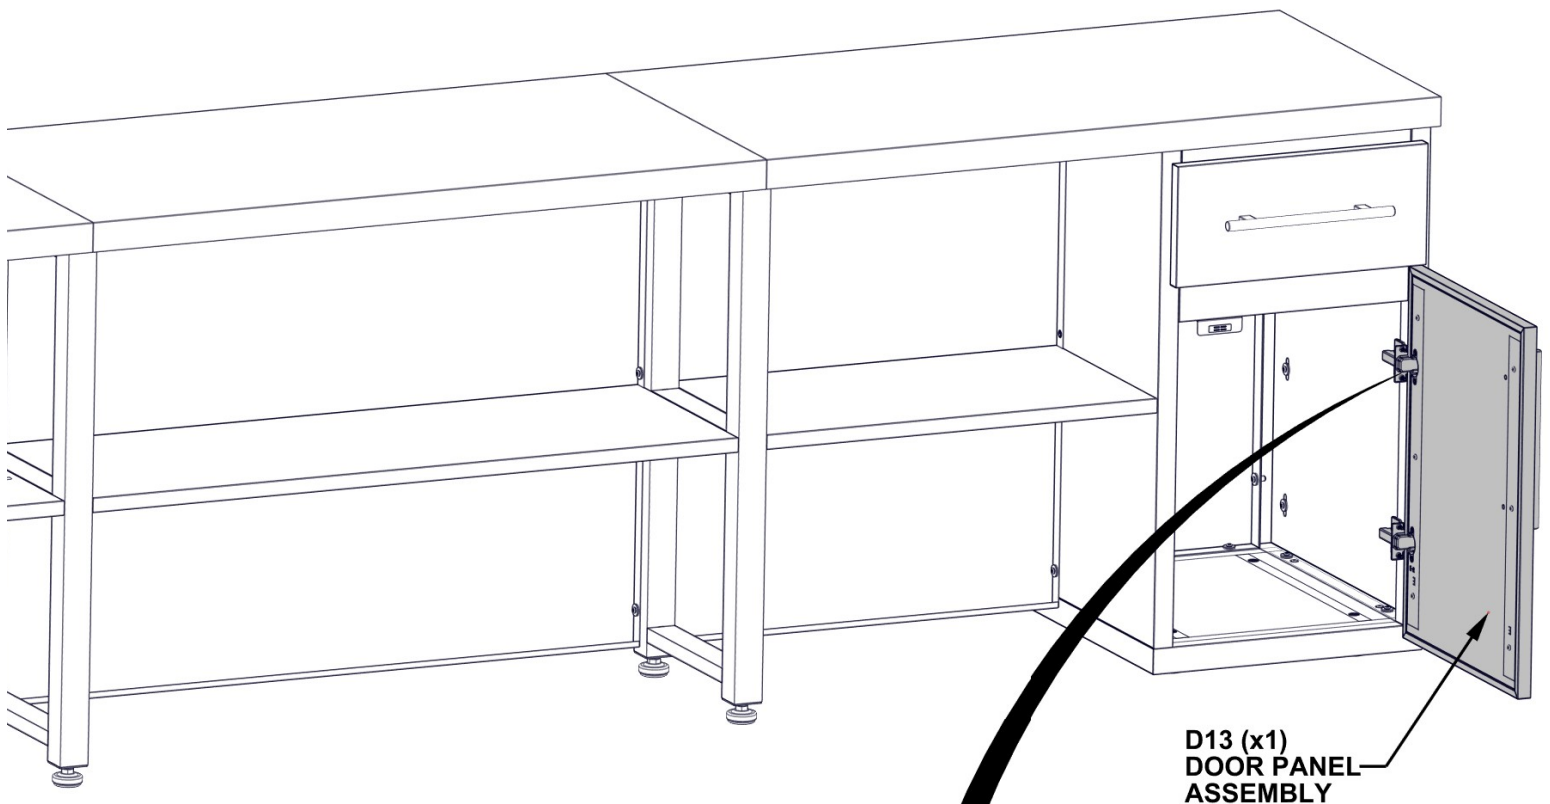

**ALIGN HINGE BRACKET WITH  
THREADED INSERTS IN PANEL**

**DO NOT OVERTIGHTEN HARDWARE**


1185 (x8)  
SCREW - 1/2"

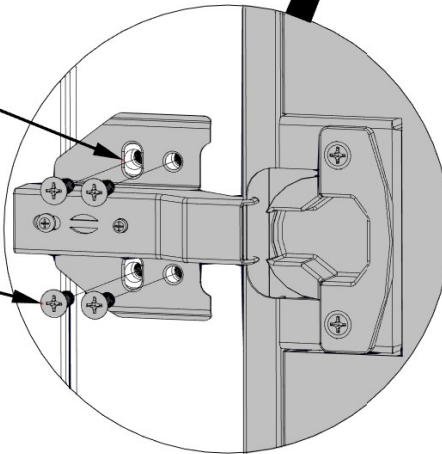

# STEP 136 - CABINET DOOR ADJUSTMENT (AS NEEDED)


- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- ADJUST HINGES (AS NEEDED) SO THAT THE GAP AROUND ALL DOORS IS THE SAME AND THERE IS NO INTERFERENCE BETWEEN DOORS AND CABINETS.
- ADJUST MAGNET CATCH BRACKETS AS NEEDED.

**LOOSEN SCREWS TO ADJUST  
MAGNET BRACKET, UNTIL IT  
COMES IN CONTACT WITH  
DOOR IN THE SHUT POSITION**

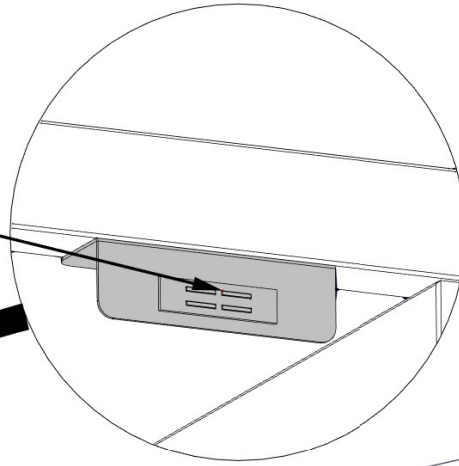


**SCREW #1:  
SCREW CLOCKWISE TO BRING EDGE OF DOOR AWAY FROM  
CABINET. SCREW COUNTER CLOCKWISE TO BRING EDGE OF DOOR  
CLOSER TO CABINET**

**SCREW #2:  
LOOSEN THESE SCREWS TO SLIDE DOOR TOWARD CABINET OR  
AWAY FROM CABINET**

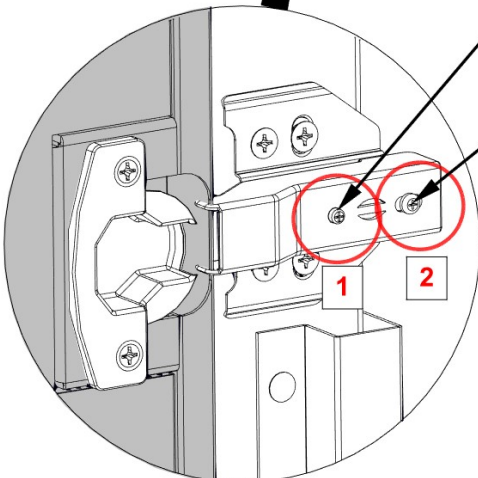


# STEP 137 - KITCHEN ACCESSORY

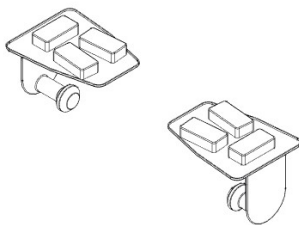

A4M02290 MAGNETIC PAPER TOWEL HOLDER  
(x1)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- MAGNETIC PAPER TOWEL HOLDER CAN BE ATTACHED TO ANY METAL SURFACE ON KITCHEN.
- WE RECOMMEND ATTACHING TO THE INSIDE OF GRILL CABINET DOORS OR UNDERNEATH BAR.
- **MAKE SURE TO KEEP PAPER TOWEL HOLDER AT A SAFE DISTANCE FROM GRILLING SURFACE.**

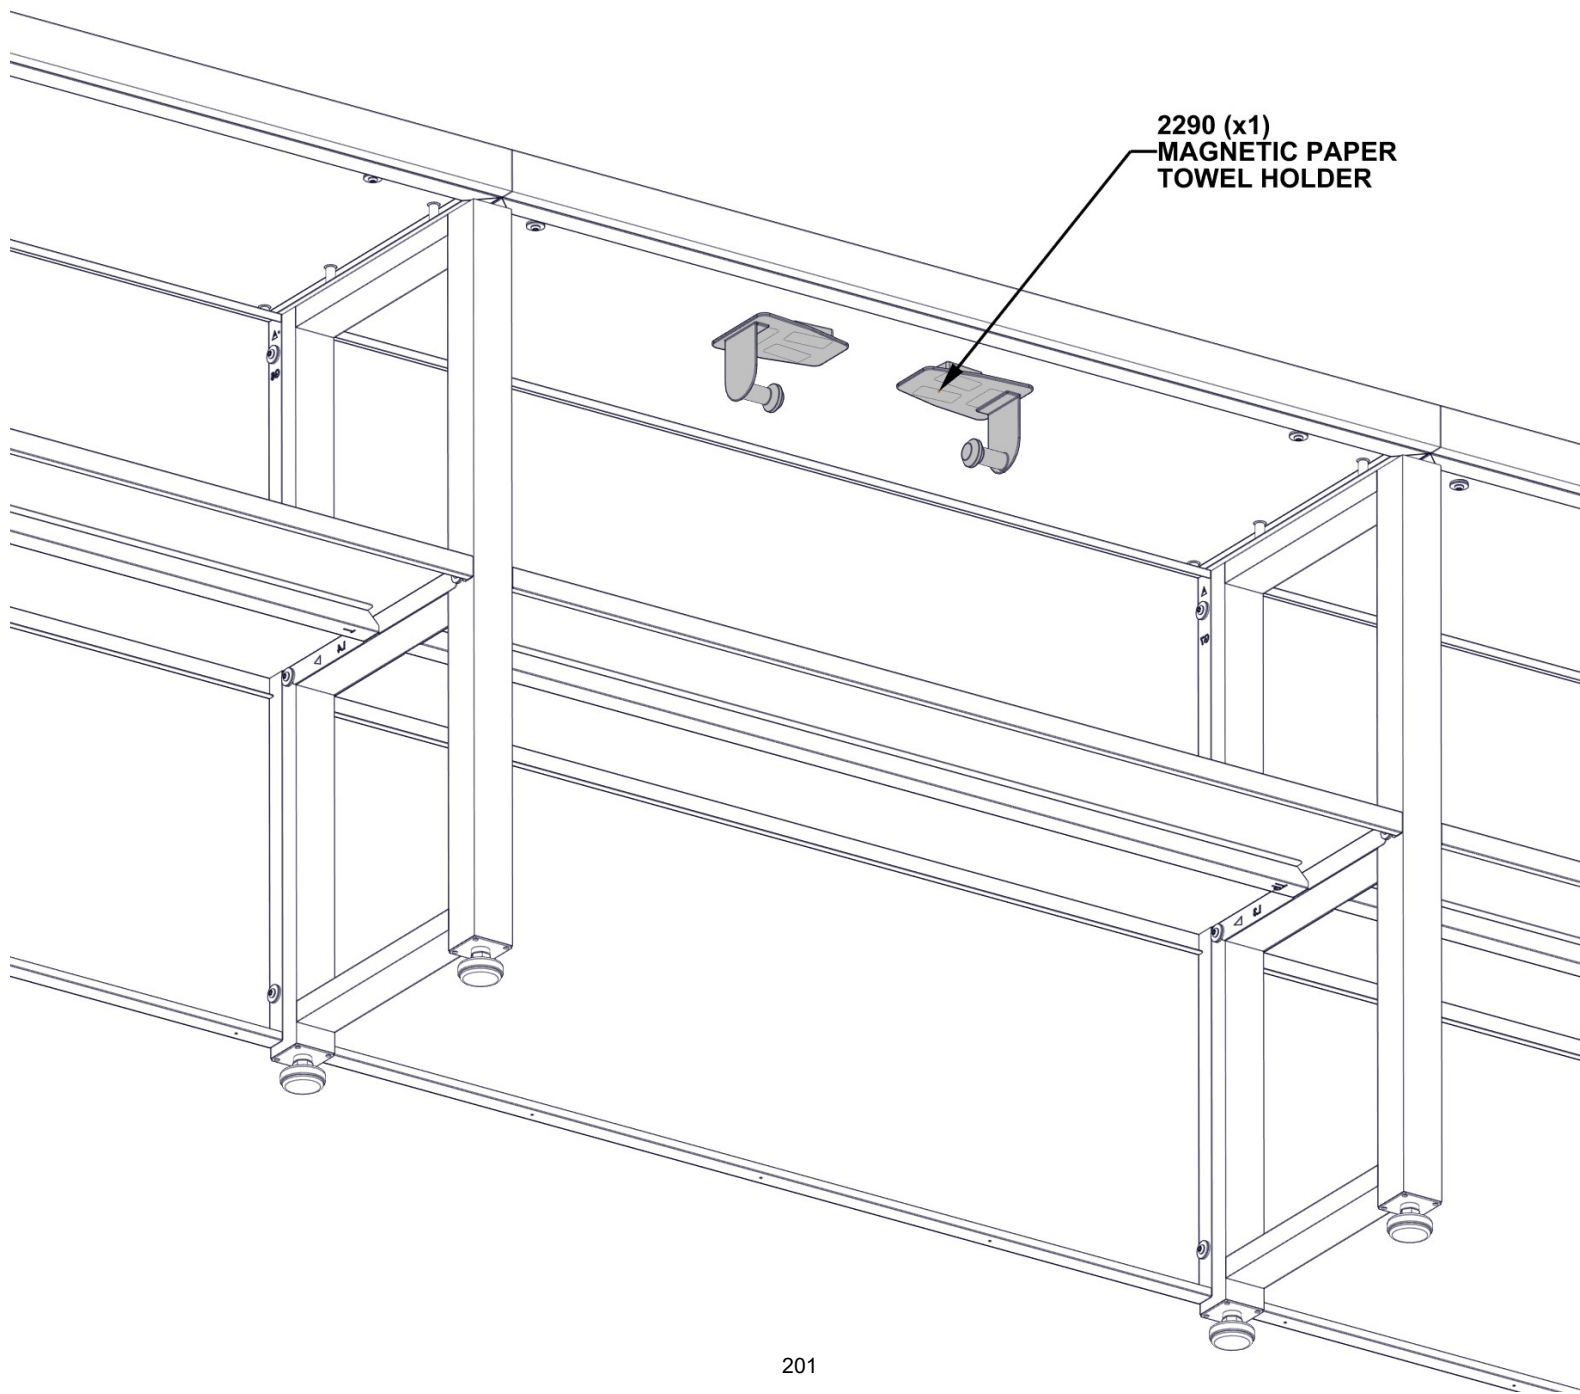


2290 (x1)  
MAGNETIC PAPER  
TOWEL HOLDER

# STEP 138 - KITCHEN ANCHORING

Qty	PartNo	Description
8	H100630	WASHER FLAT 8x19 BLK
8	H100120	CONCRETE ANCHOR 1/4"x2"

- MANUFACTURER RECOMMENDS INSTALLATION ON CONCRETE SURFACE OR CONCRETE POST PADS AS SHOWN BELOW.
- FOR INSTALLATION ON WOOD DECK, YOU MUST ENSURE THERE IS AMPLE STRUCTURAL SUPPORT UNDER THE DECK. HARDWARE NOT INCLUDED FOR DECK ATTACHMENT.

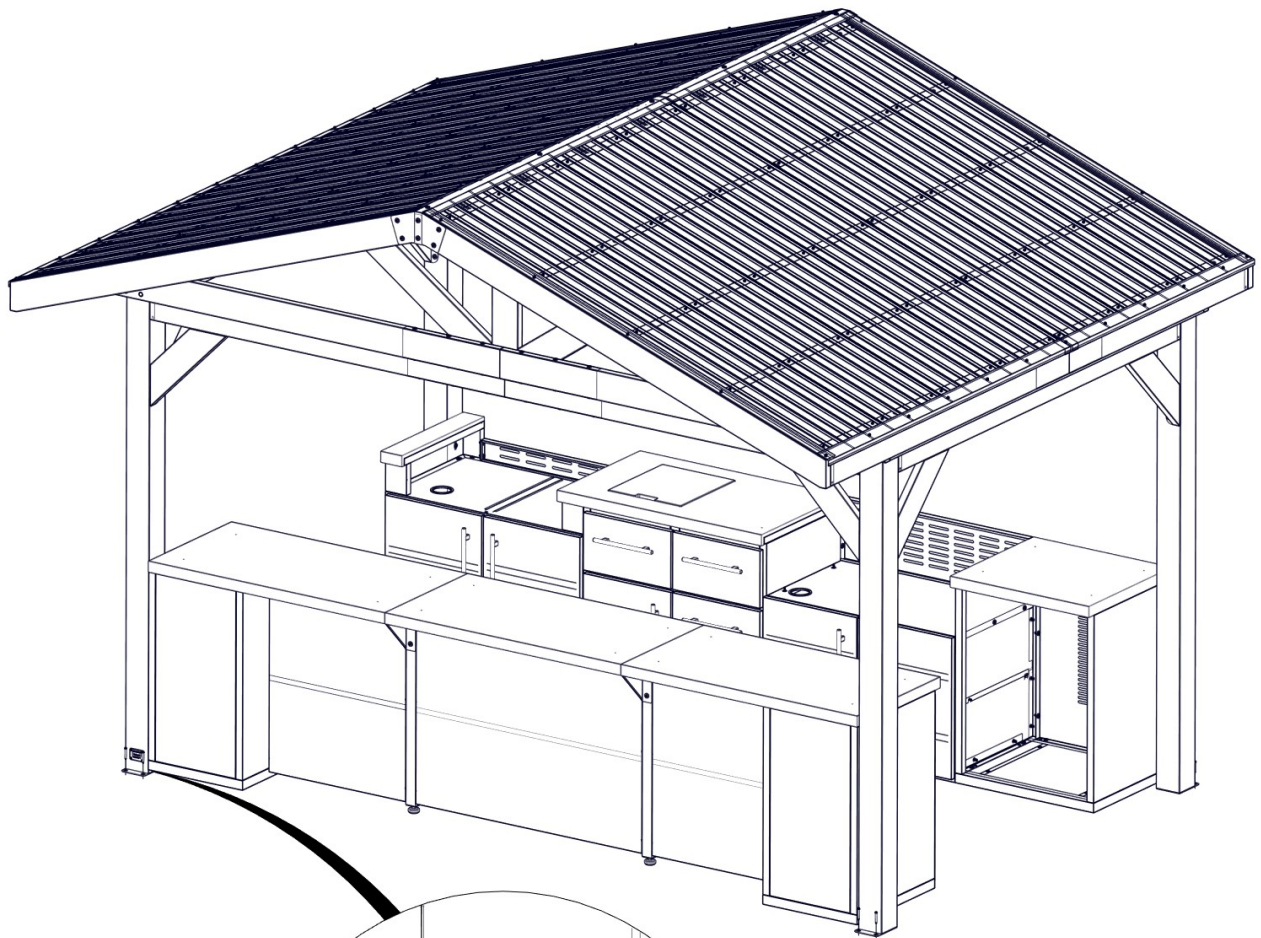


120 (x8)  
CONCRETE SCREW - 2"

630 (x8)  
WASHER - 8x19


**PRE-DRILL HOLES FOR  
CONCRETE ANCHORS USING  
A 3/16" (5mm) CONCRETE DRILL BIT**

# OUTDOOR KITCHEN GRILL KIT

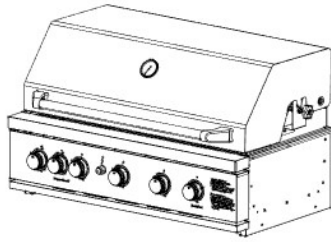


9240025 OUTDOOR KITCHEN GRILL KIT  
(x1)

- 
- FOR INSTALLATION AND DETAILED INFORMATION OF OUTDOOR KITCHEN GRILL KIT, REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE OUTDOOR KITCHEN GRILL KIT.
  - FOLLOW DIRECTIONS FOR PROPER CARE AND USE.

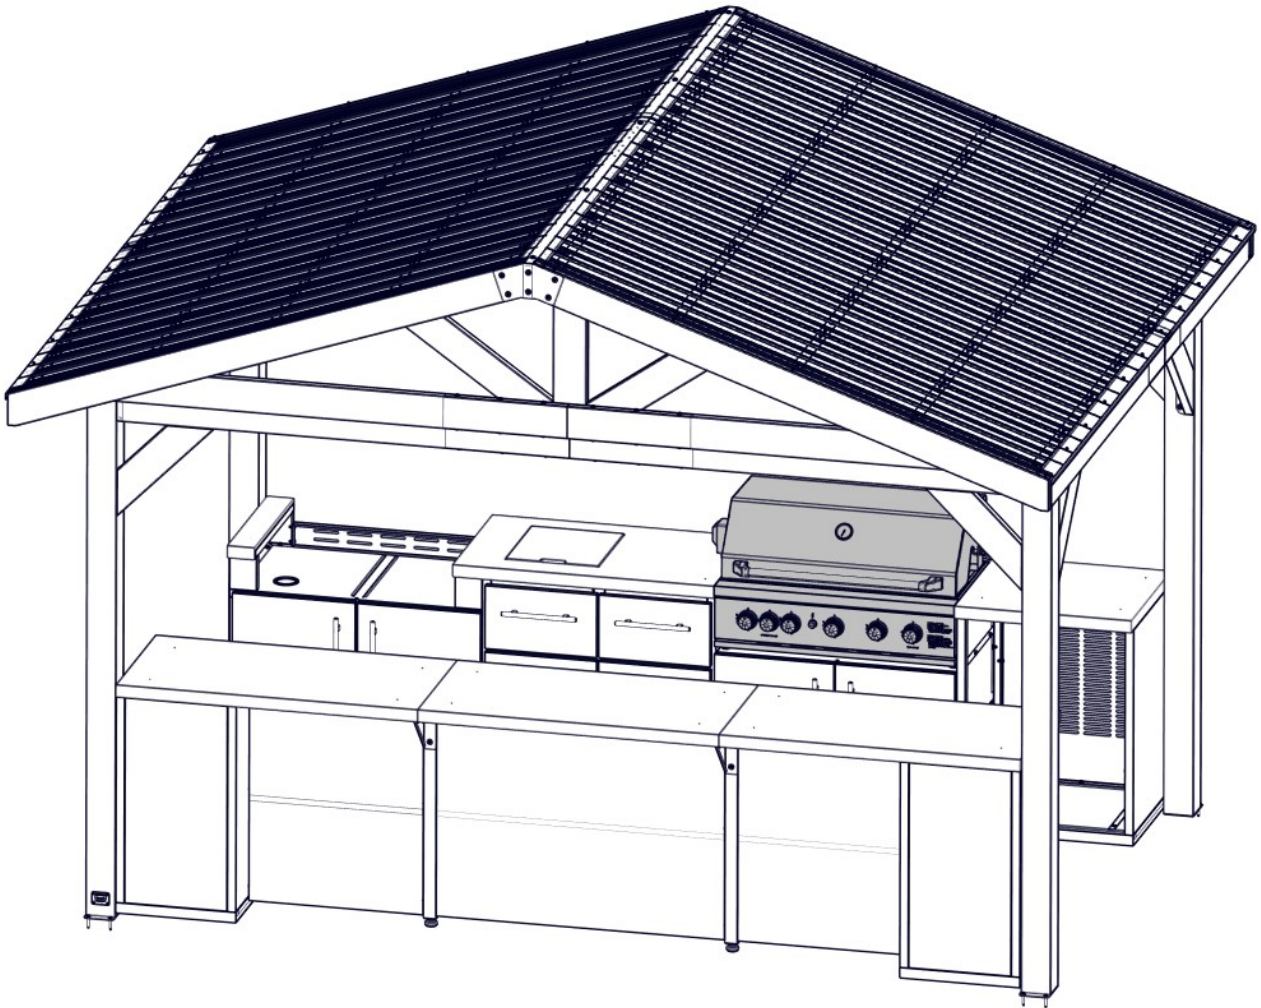


**NATURAL GAS CONVERSION KIT AVAILABLE BY CONTACTING BACKYARD DISCOVERY AT  
[www.backyarddiscovery.com](http://www.backyarddiscovery.com) 1-800-856-4445**

# OUTDOOR KITCHEN PIZZA OVEN

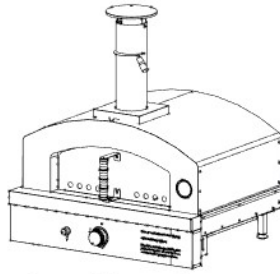


9240018 OUTDOOR KITCHEN PIZZA OVEN  
(x1)

- FOR INSTALLATION AND DETAILED INFORMATION OF OUTDOOR KITCHEN PIZZA OVEN, REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE OUTDOOR KITCHEN PIZZA OVEN.
- FOLLOW DIRECTIONS FOR PROPER CARE AND USE.

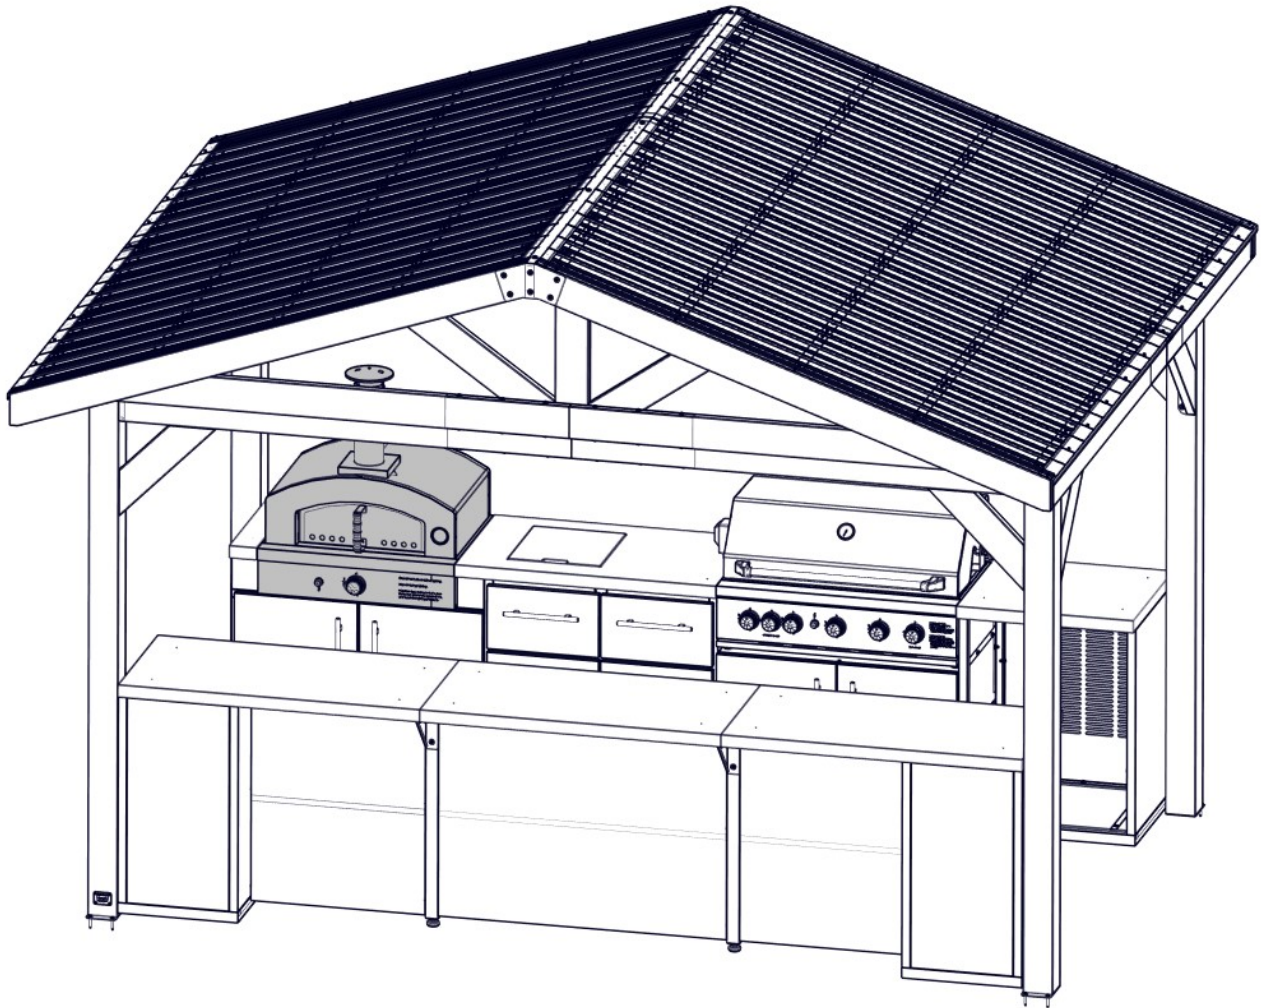


**NATURAL GAS CONVERSION KIT AVAILABLE BY CONTACTING BACKYARD DISCOVERY AT  
[www.backyarddiscovery.com](http://www.backyarddiscovery.com) 1-800-856-4445**

# OUTDOOR KITCHEN FRIDGE

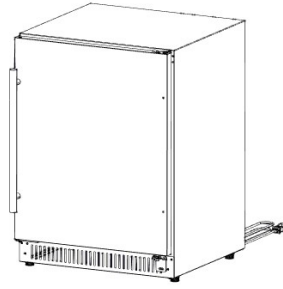

9240162 OUTDOOR KITCHEN FRIDGE - RIGHT OPEN  
(x1)




- FOR INSTALLATION OF OUTDOOR KITCHEN FRIDGE, REFER TO PAGES IN THIS INSTRUCTION MANUAL.
- FOR DETAILED INFORMATION OF OUTDOOR KITCHEN FRIDGE, REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE OUTDOOR KITCHEN FRIDGE.
- FOLLOW DIRECTIONS FOR PROPER CARE AND USE.

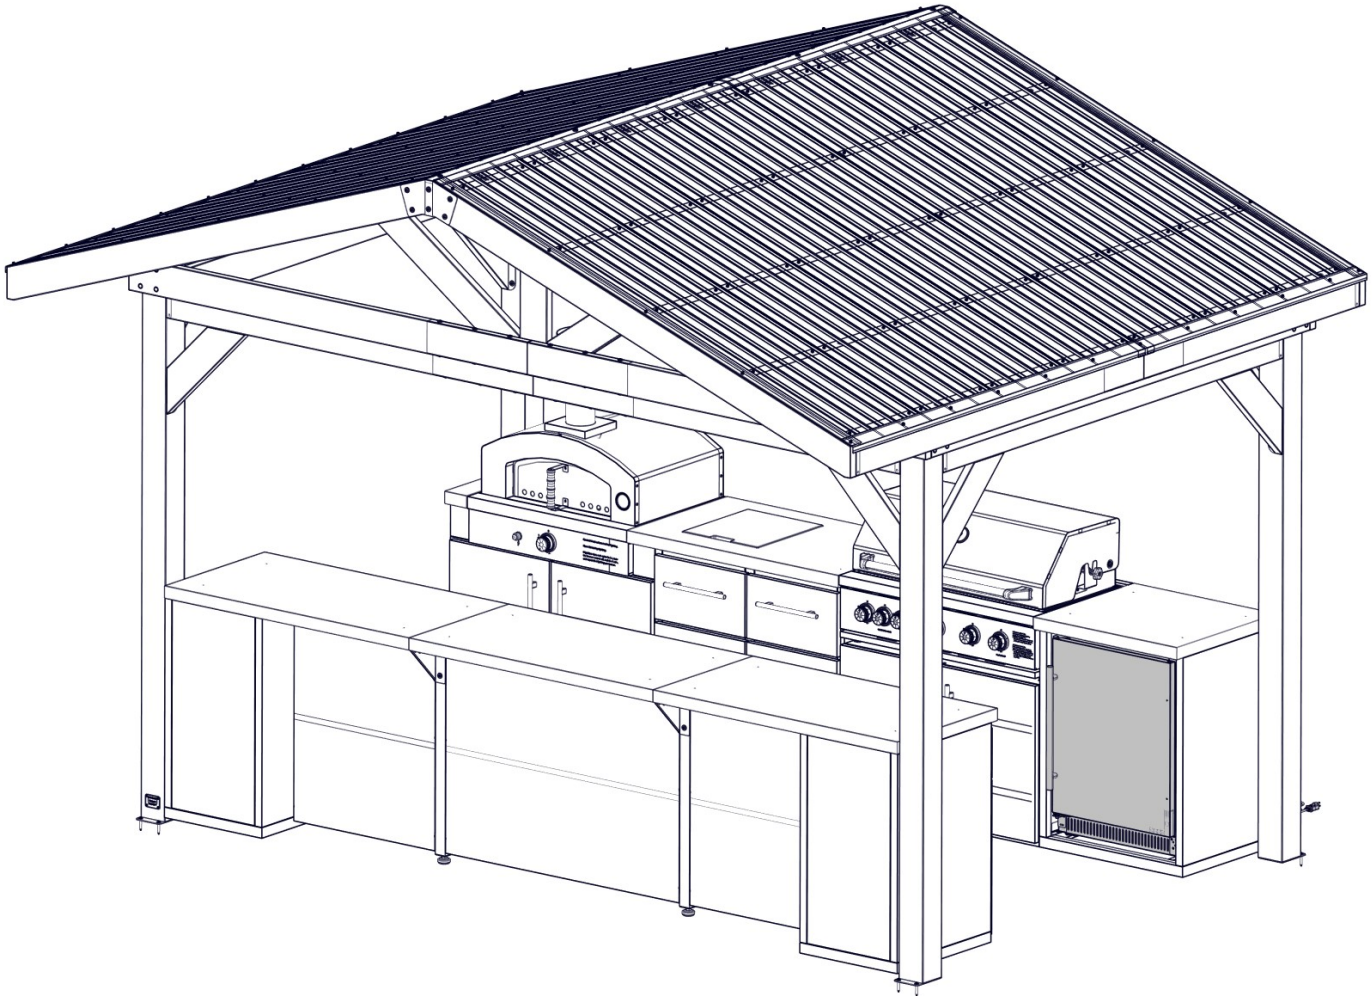

# OUTDOOR KITCHEN FRIDGE



- CAREFULLY SLIDE FRIDGE INTO CABINET OPENING MAKING SURE THAT THE ELECTRICAL CORD IS ROUTED THROUGH THE HOLES IN THE BACK PANEL OF THE CABINET.


- IF FRIDGE IS NOT IN UPRIGHT POSITION, PLEASE LET SIT FOR 24 HRS BEFORE PLUGGING INTO RECEPTACLE.
- FRIDGE CANNOT BE CONNECTED TO ELECTRICAL ENCLOSURE ATTACHED TO OUTDOOR STRUCTURE.

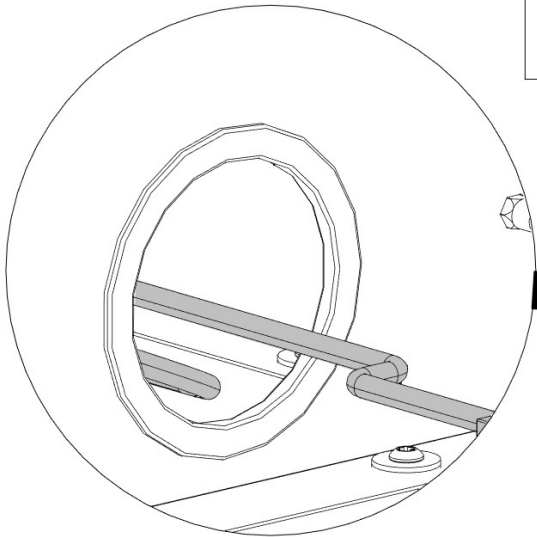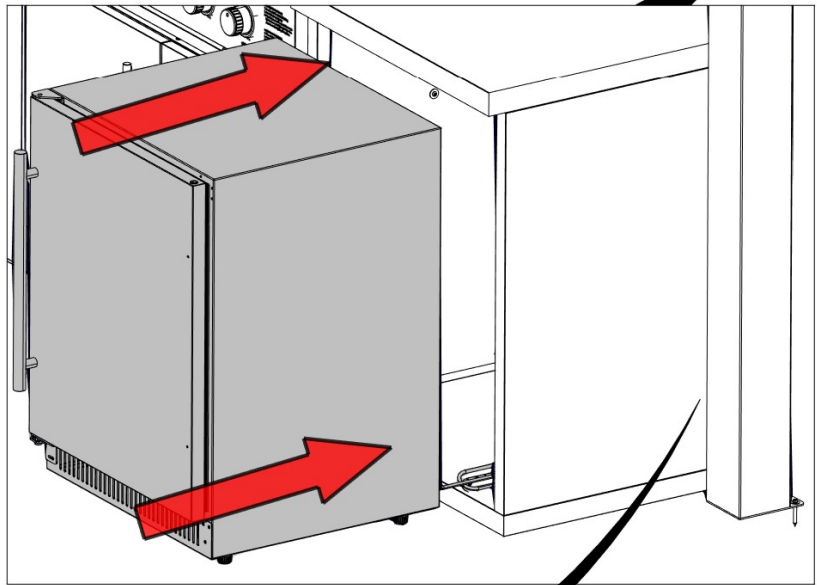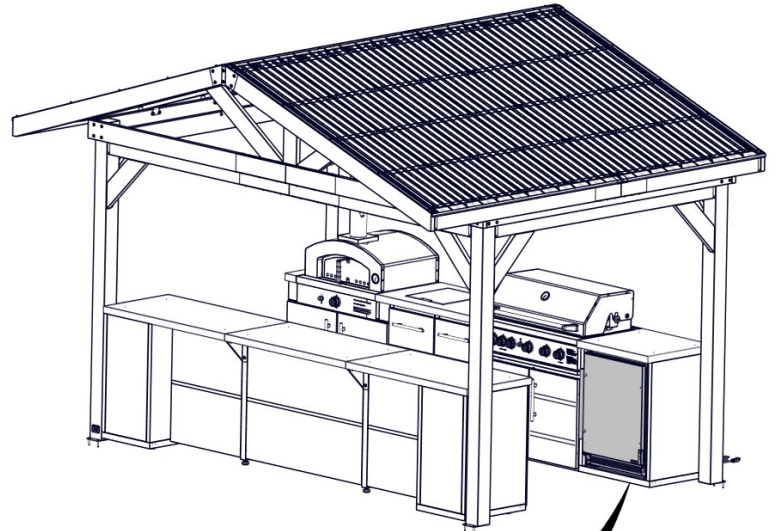

# OUTDOOR KITCHEN FRIDGE

- ALIGN FEET ON FRIDGE UNIT SO THAT IT IS LEVEL AND DOES NOT TILT.
- TURN FEET CLOCKWISE TO EXTEND THEM AND COUNTERCLOCKWISE TO SHORTEN. REPEAT THIS FOR ALL FOUR FRIDGE FEET AS NEEDED TO LEVEL.

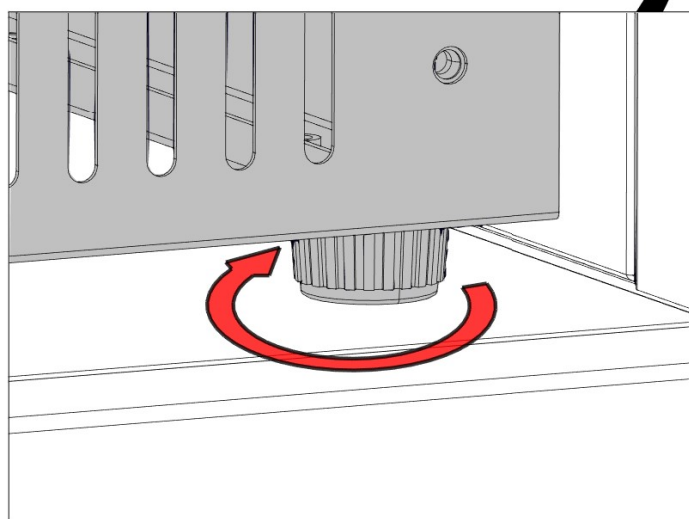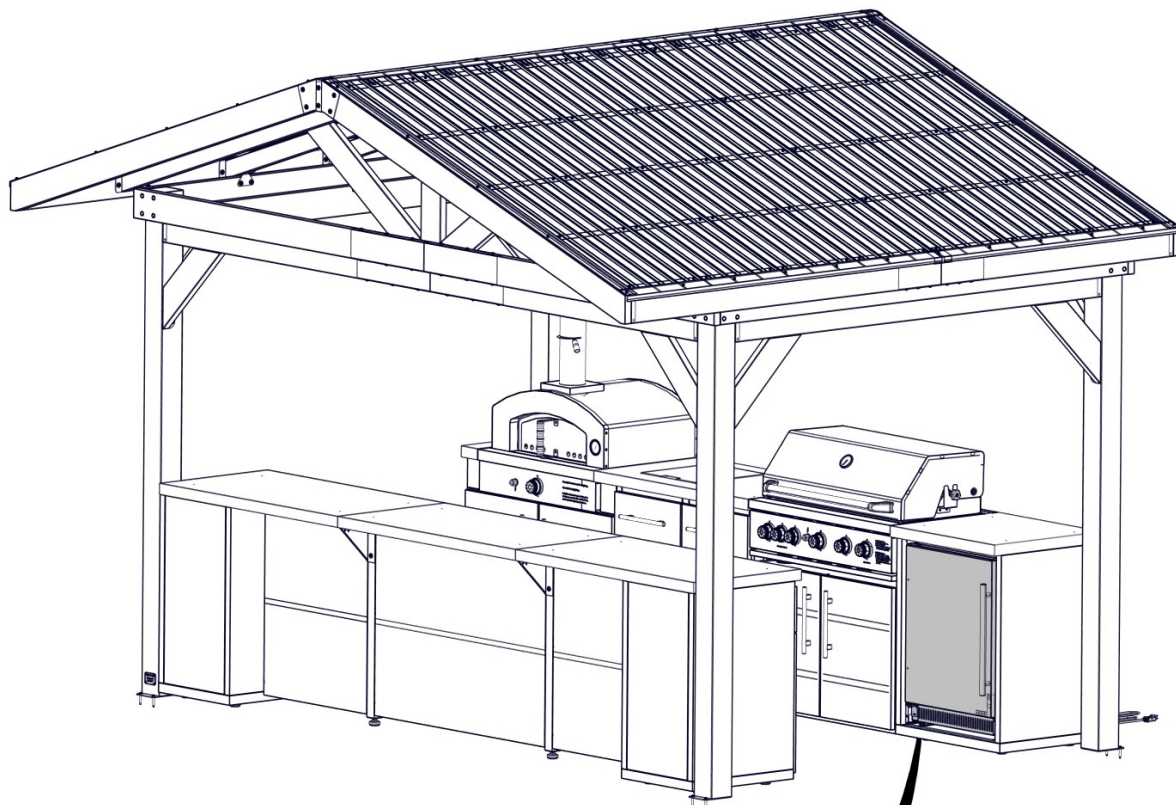

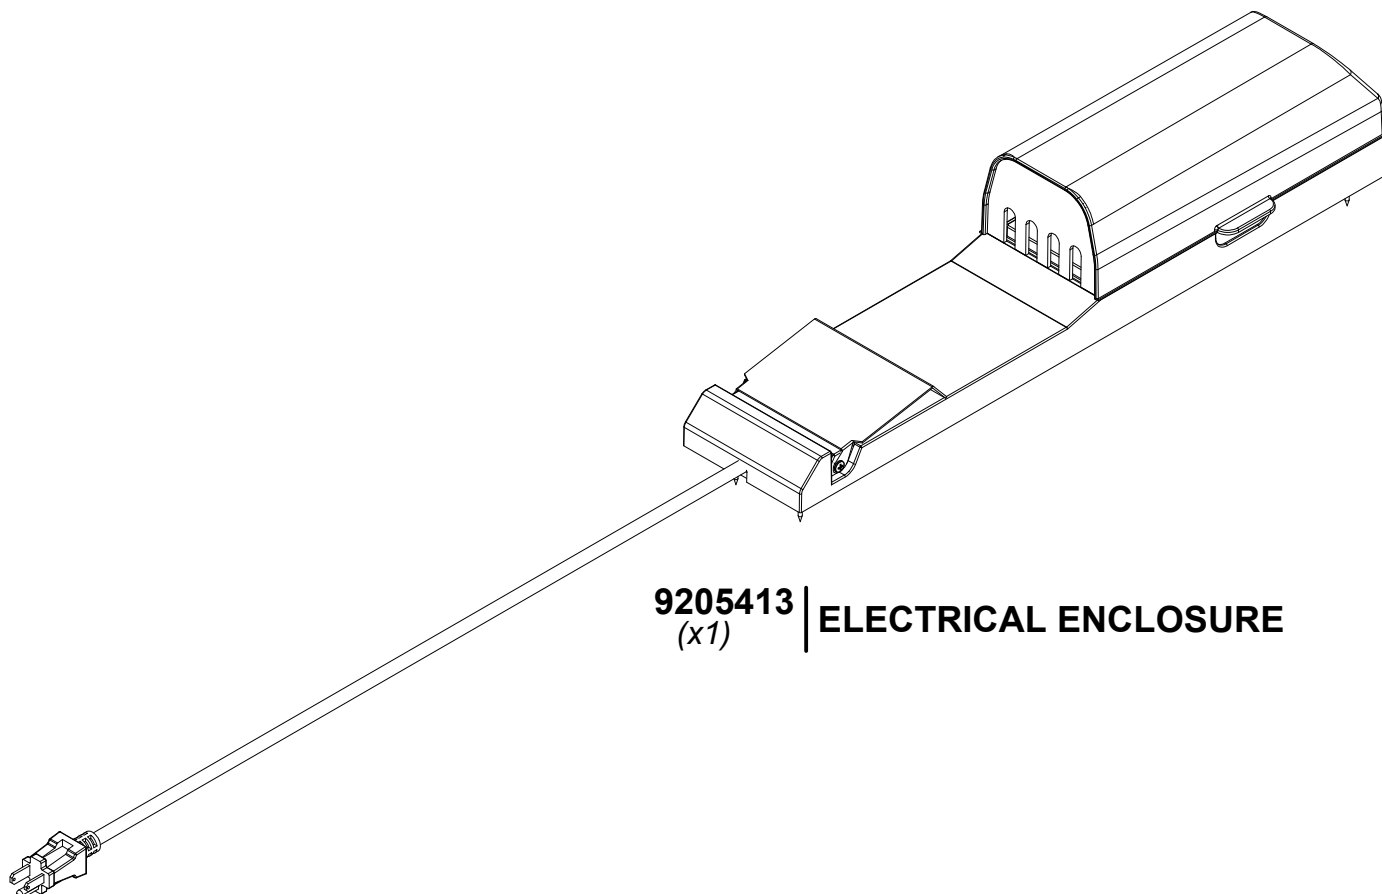

**9205413** | **ELECTRICAL ENCLOSURE**  
(x1)

FOR POWERPORT INSTALLATION REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE POWERPORT KIT. INSTALL ON ANY EXTERIOR POST THAT IS DESIRED. FOLLOW DIRECTIONS FOR PROPER INSTALLATION.

IT IS RECOMMENDED TO INSTALL POWERPORT ON BACK POST NEXT TO FRIDGE CABINET.

**DO NOT INSTALL POWERPORT ON POST NEXT TO PIZZA OVEN, AS THIS IS TOO CLOSE TO HIGH HEAT.**