


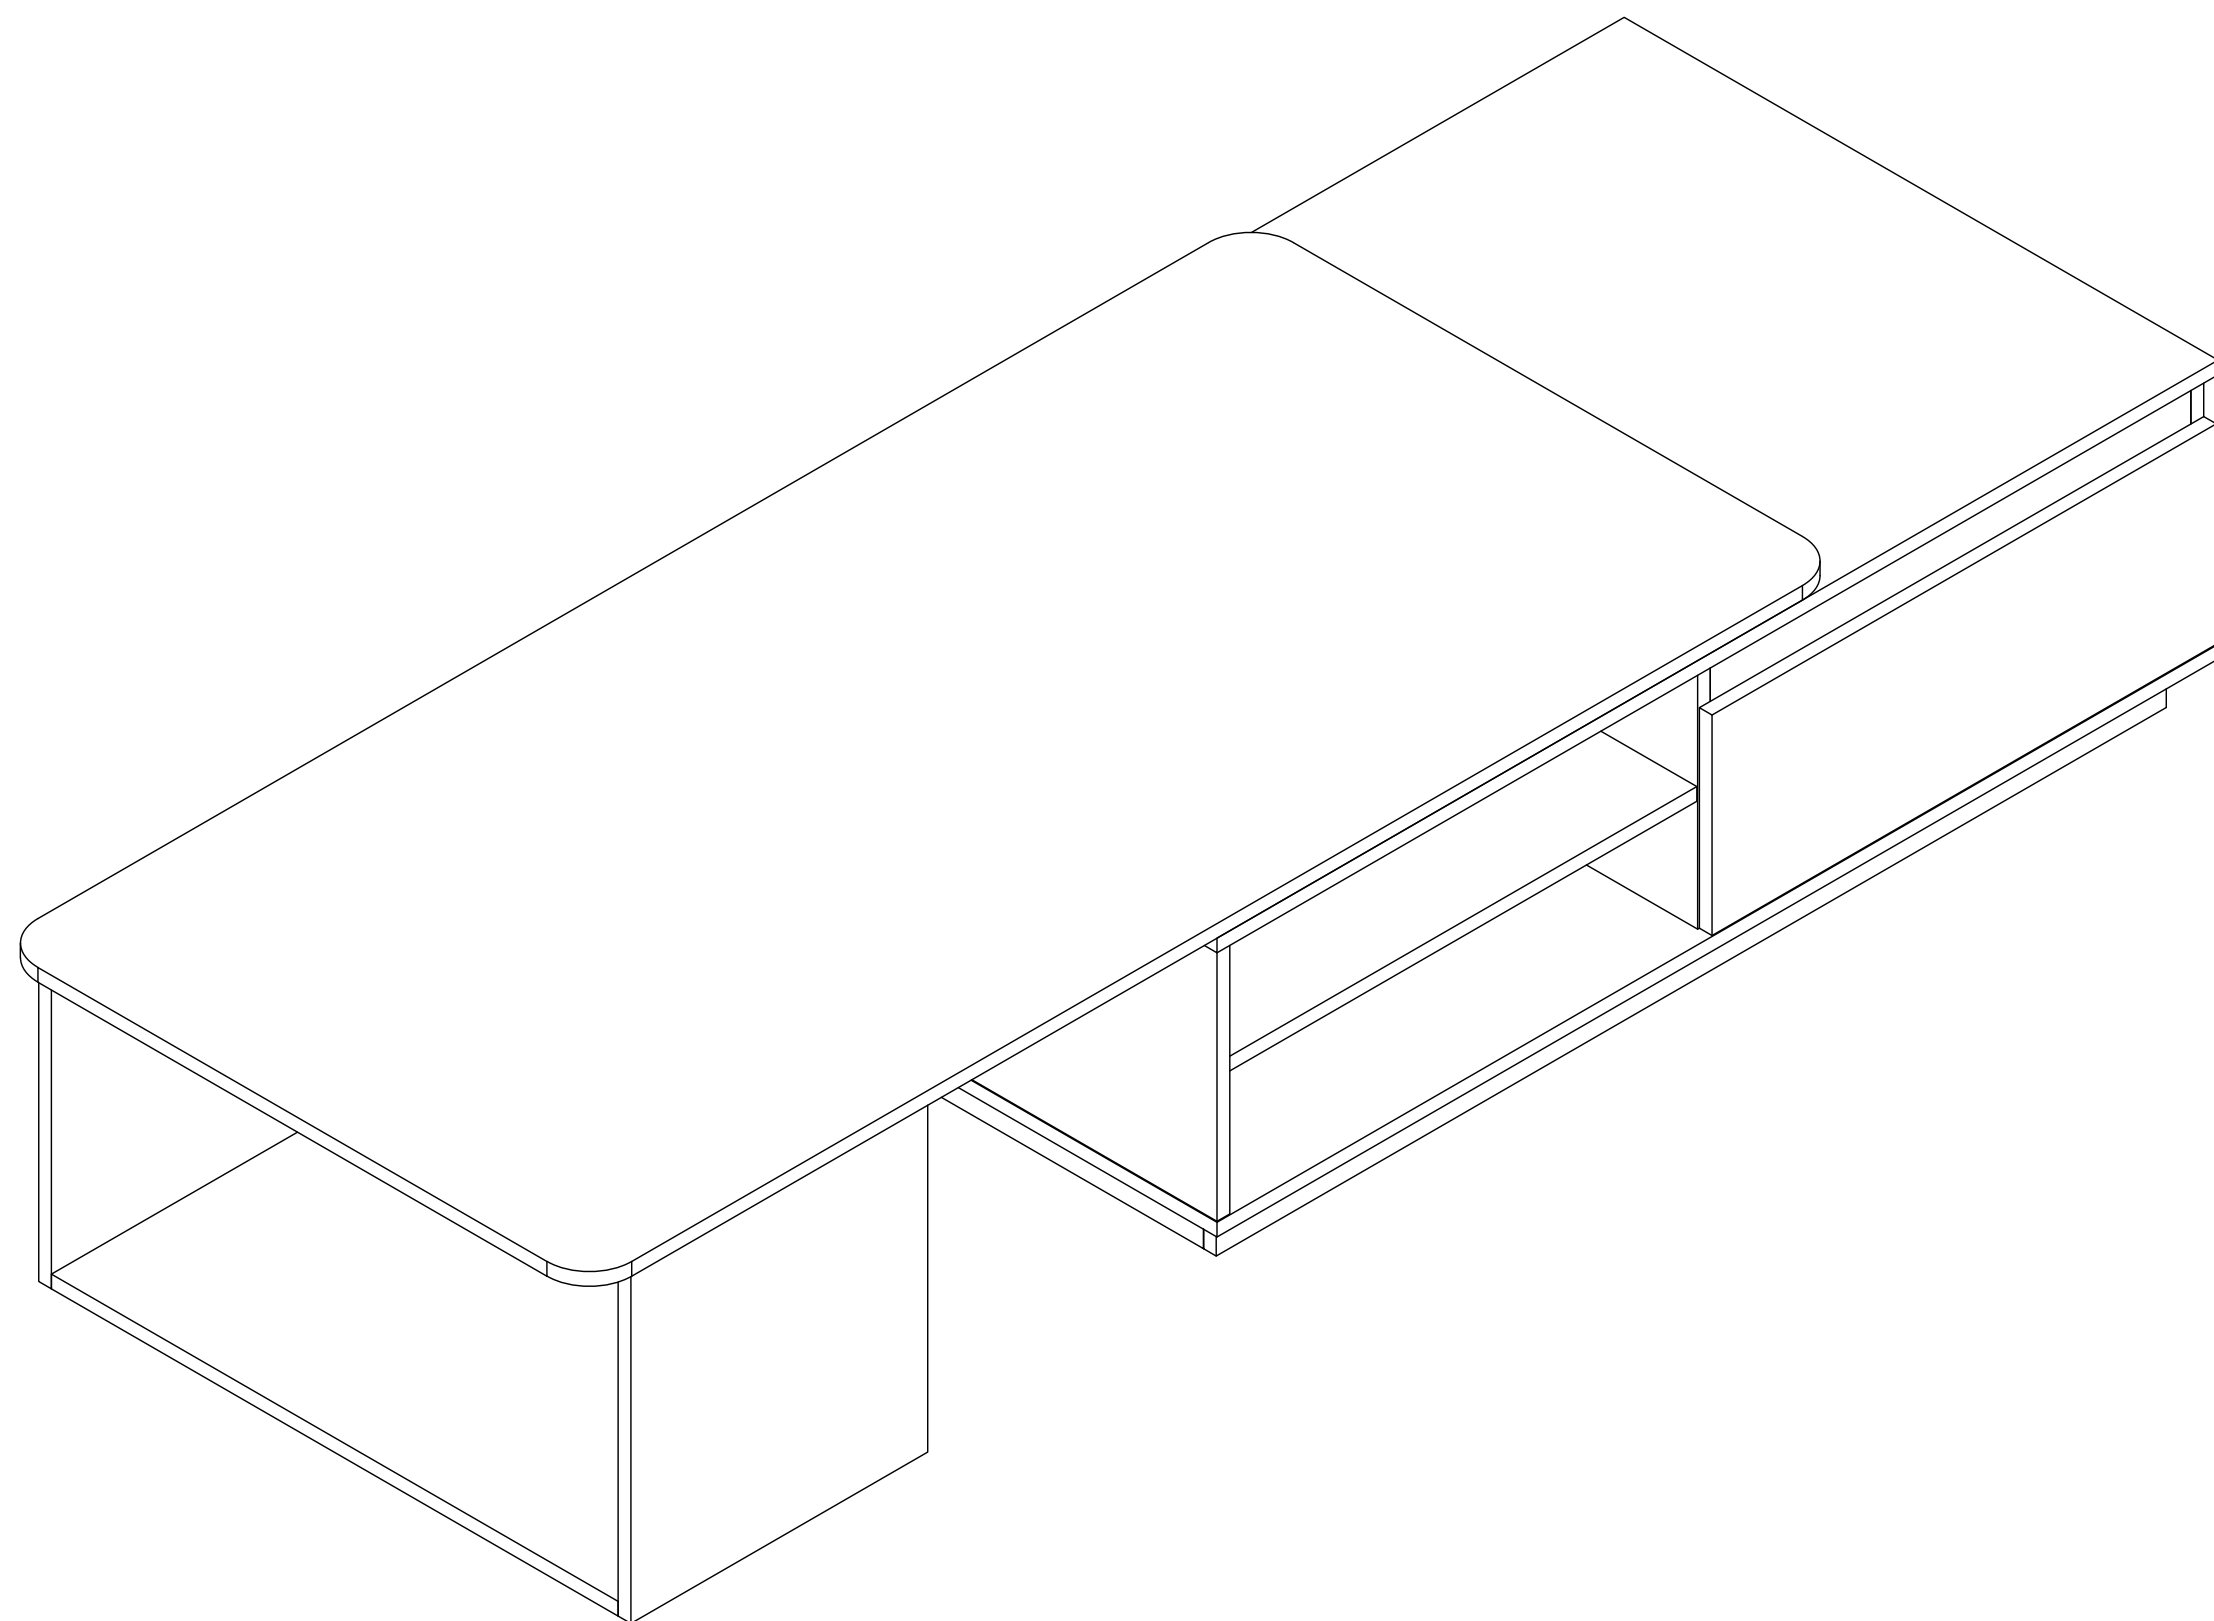





## Hardware installation demonstration

NOTE: Please make sure "A" hardware tightened and can't be pulled out!


I

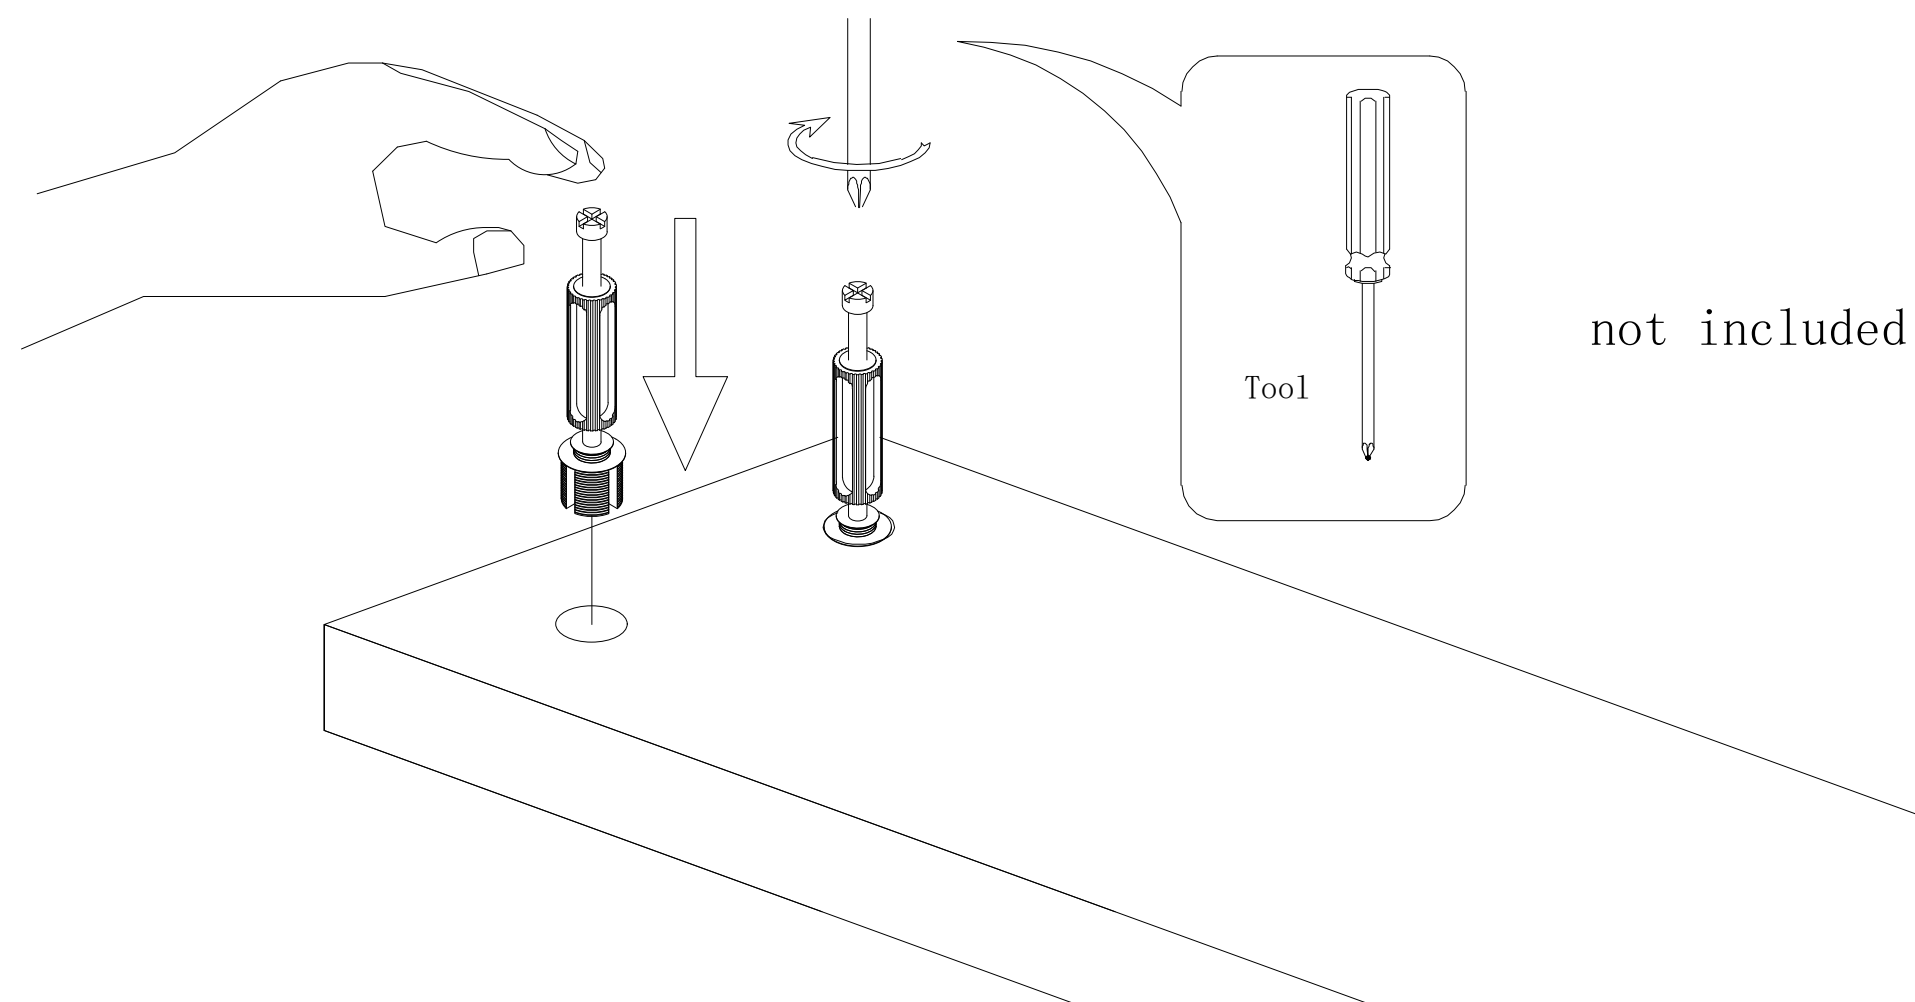

II

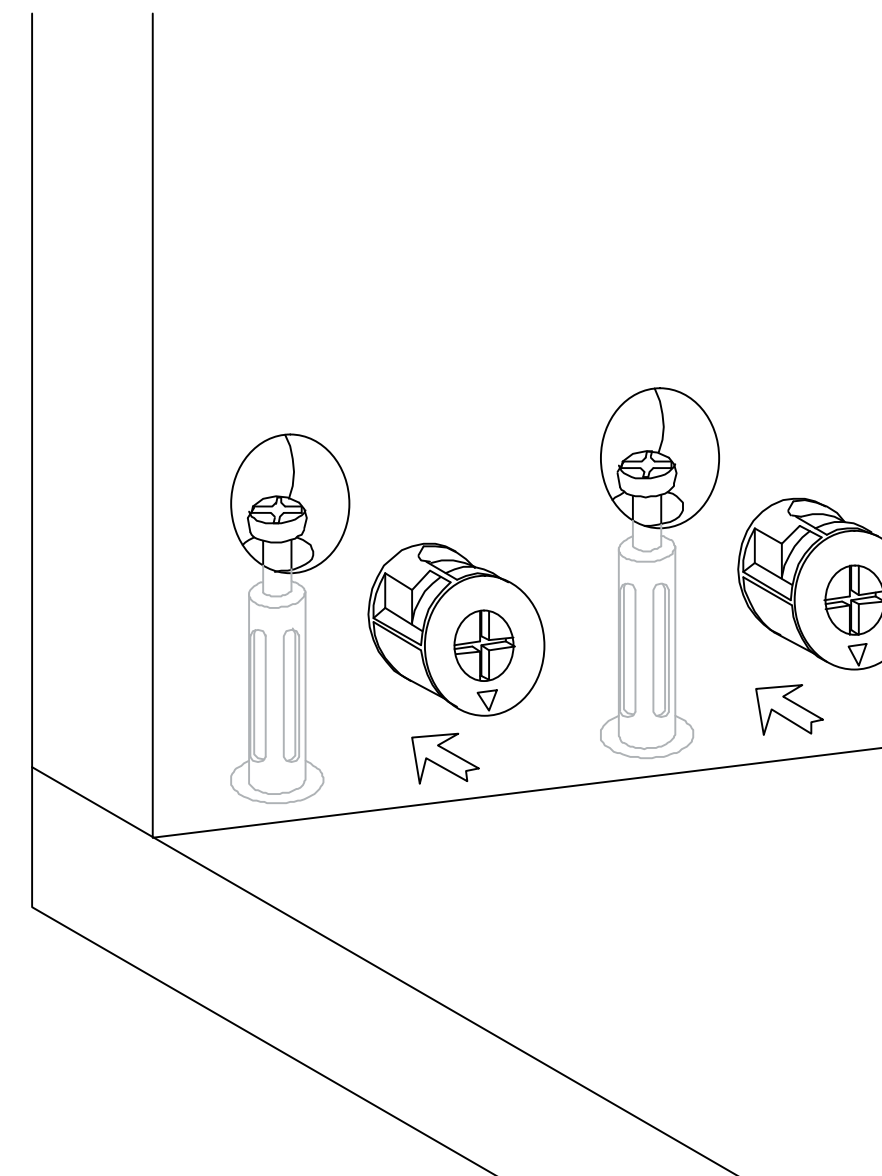

III

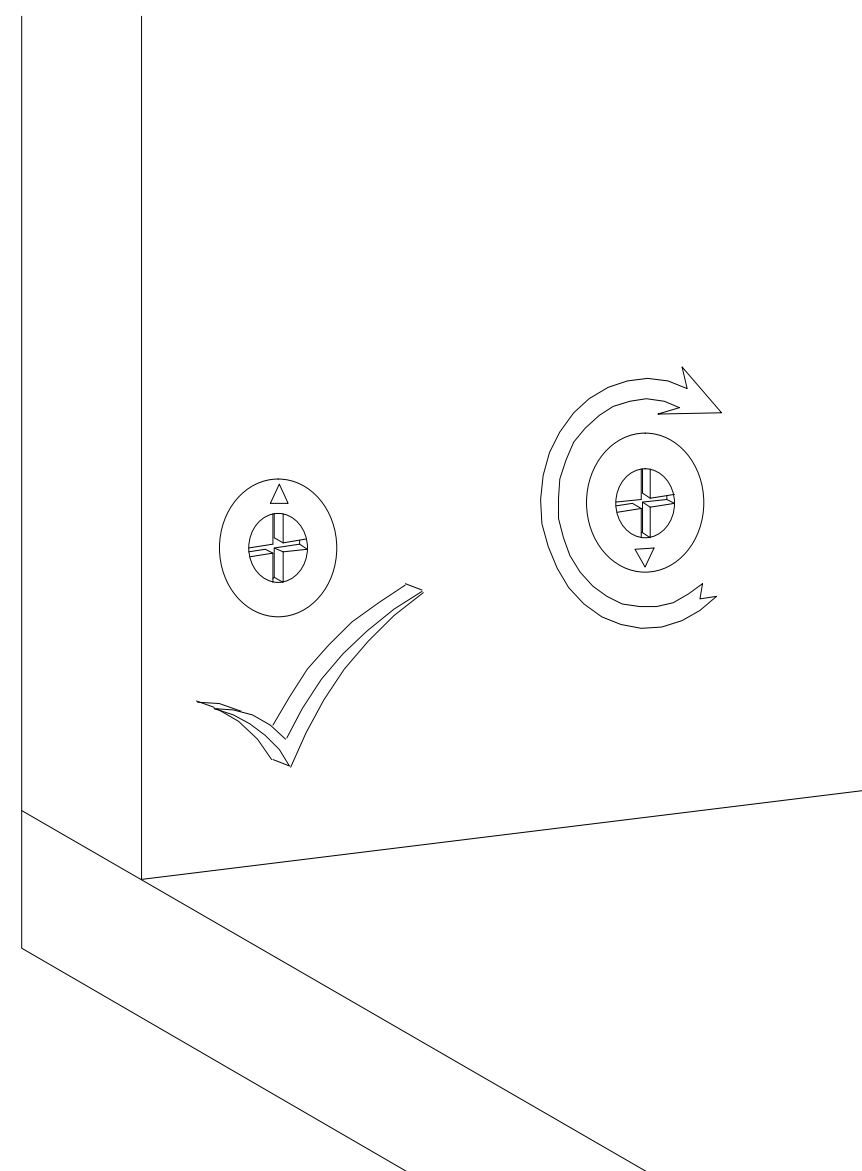


IV




Please scan QR code for assembly video.

Note:No. 15 board with protective film.Please tear it off after installation !

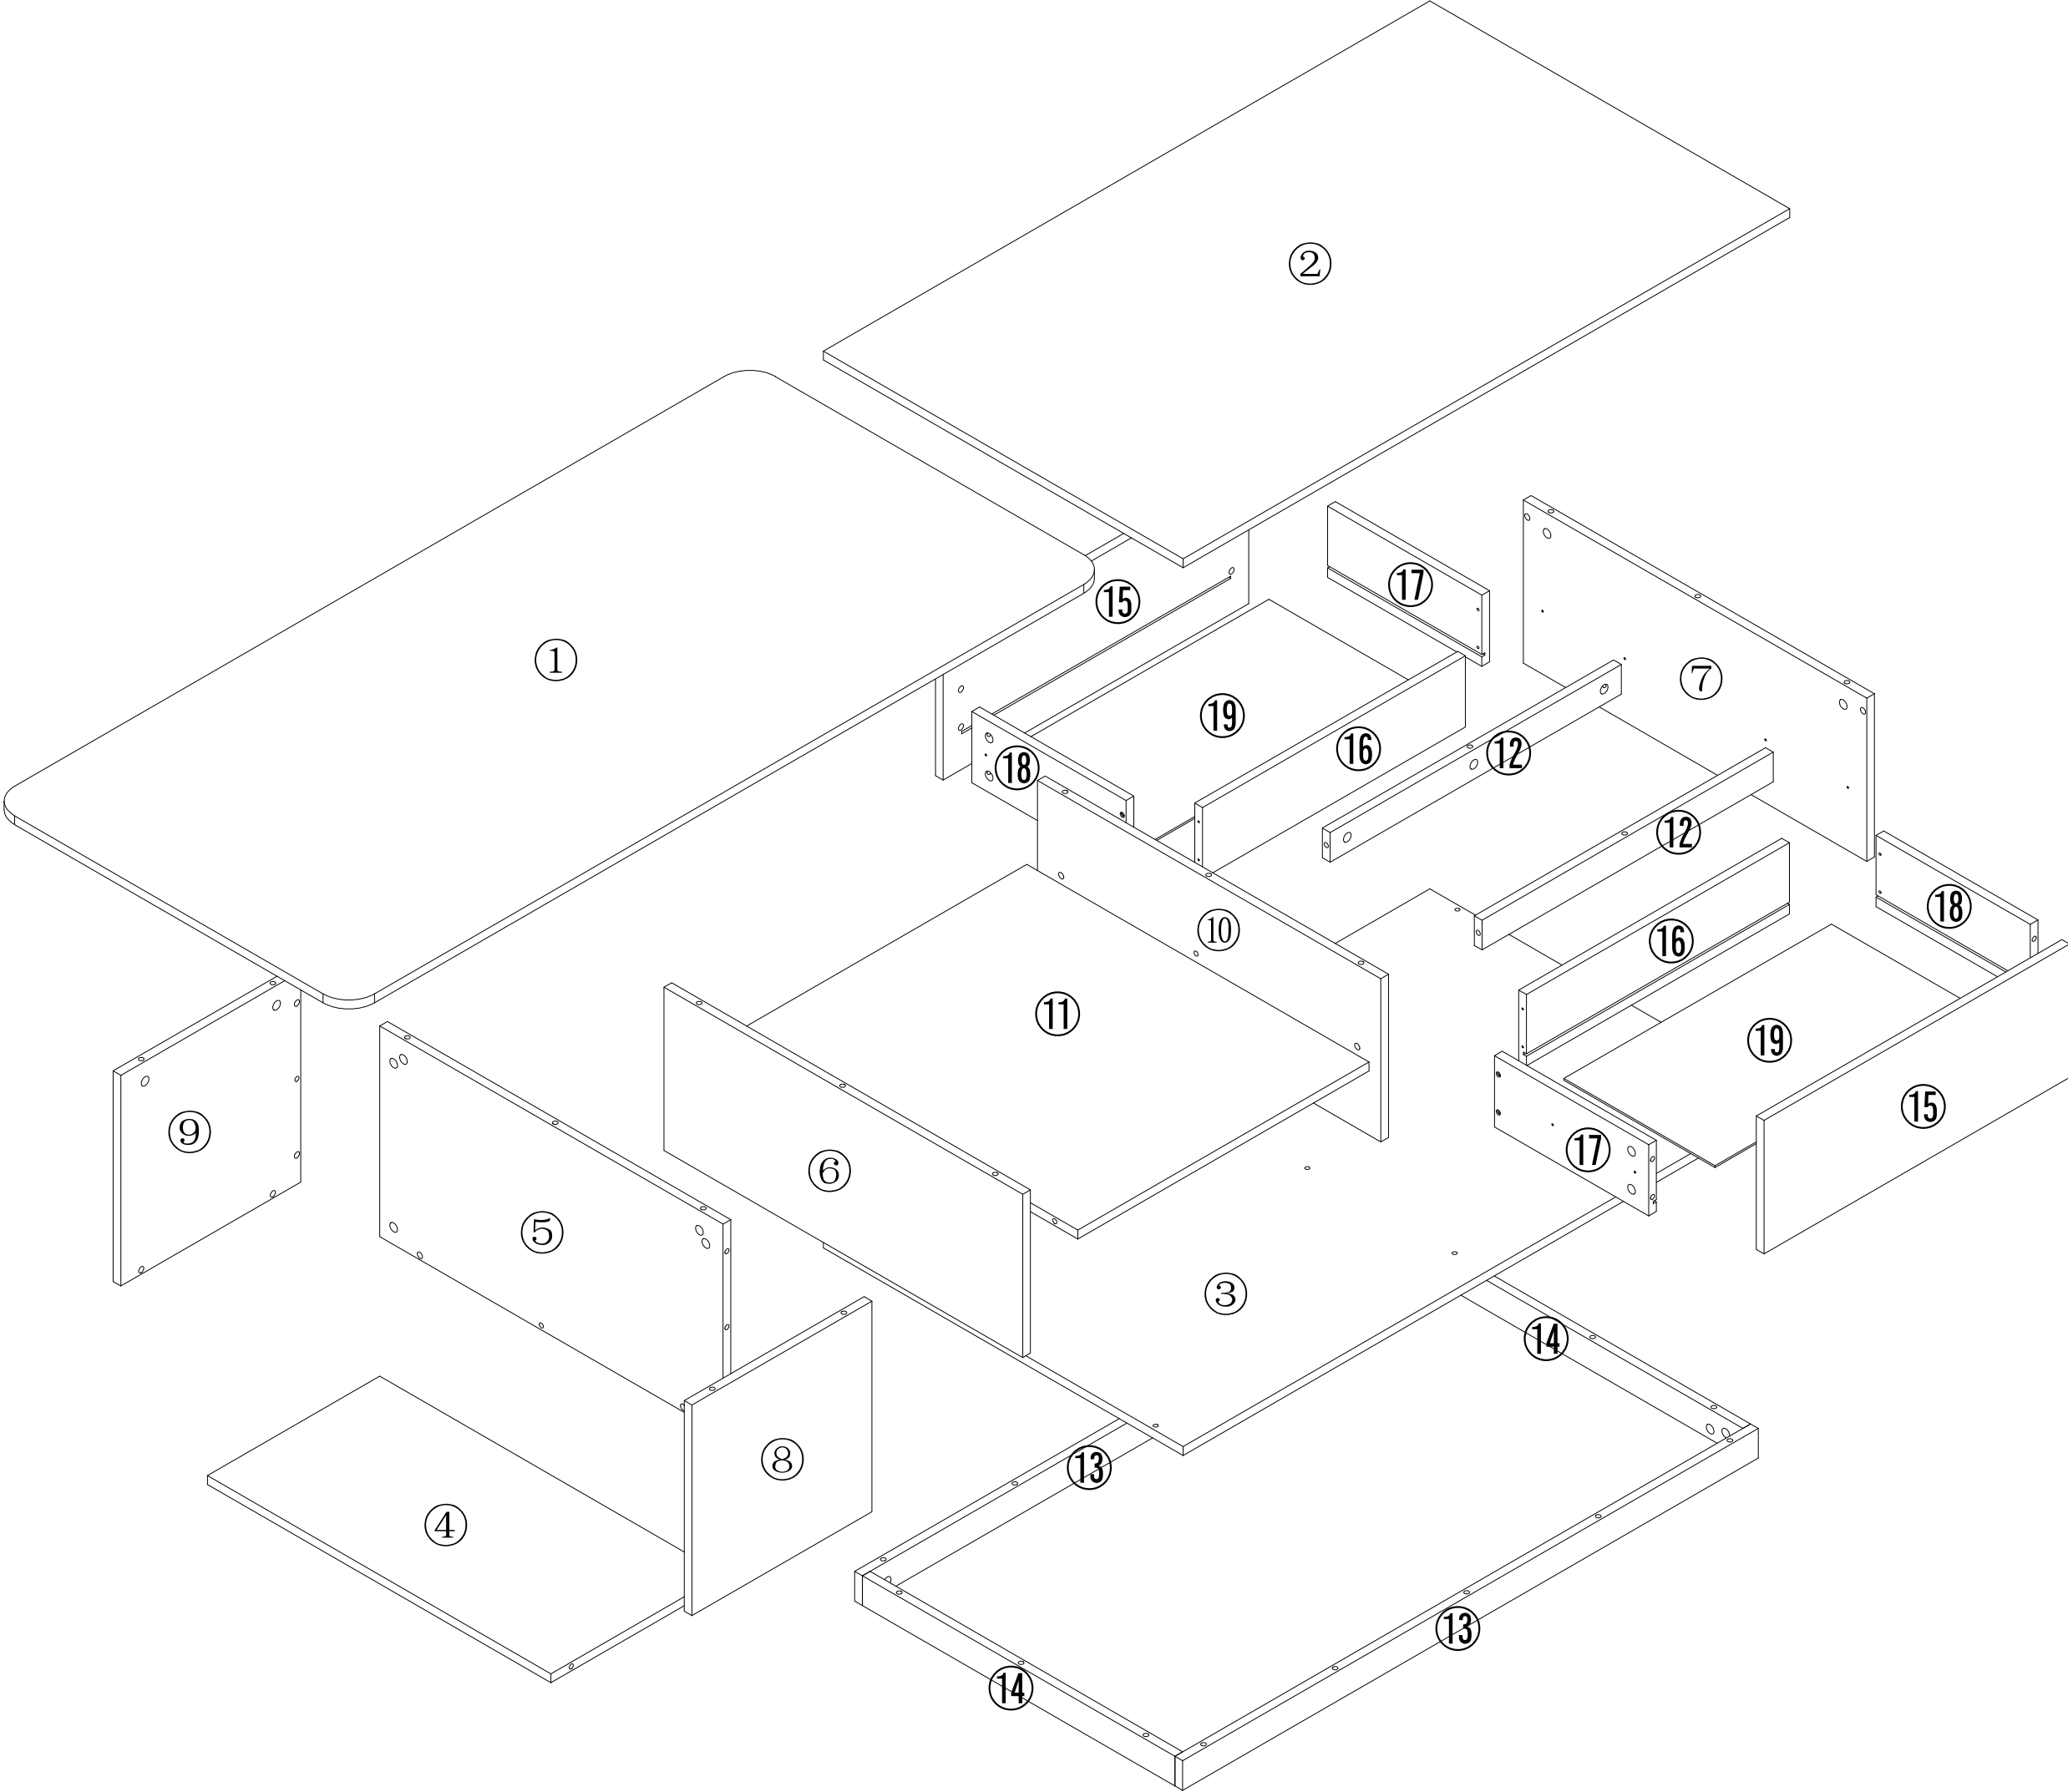


A

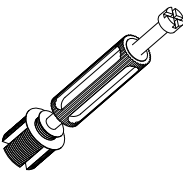

54PCS


B

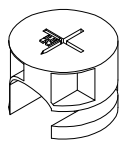

54PCS

C


8\*40

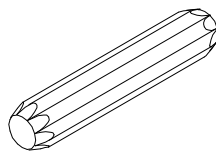

15PCS

D


7\*50

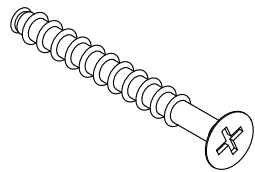

9PCS

E

250mm

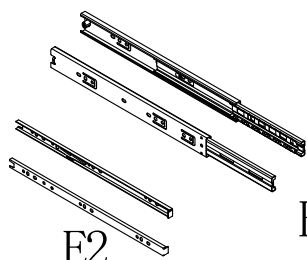


E1

E2

2PCS

F


3.5\*14



16PCS

G


3.5\*35



8PCS

H


Φ 20



10PCS




















I

30\*15












6PCS

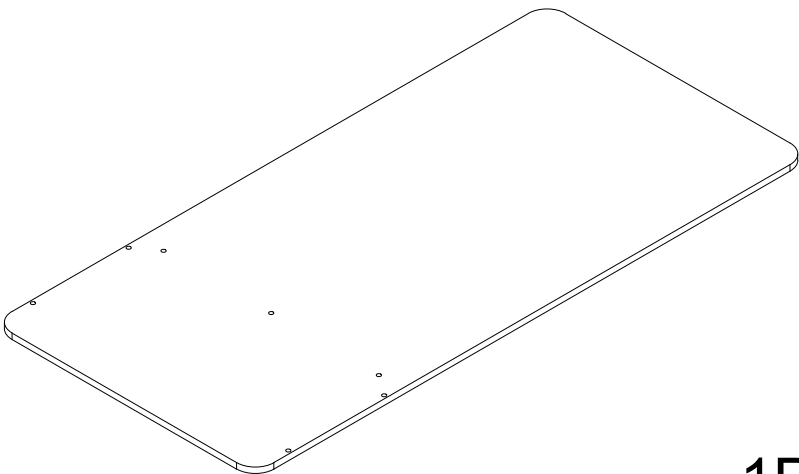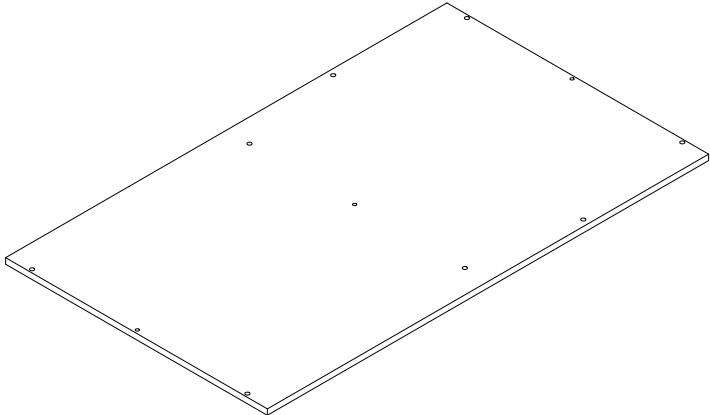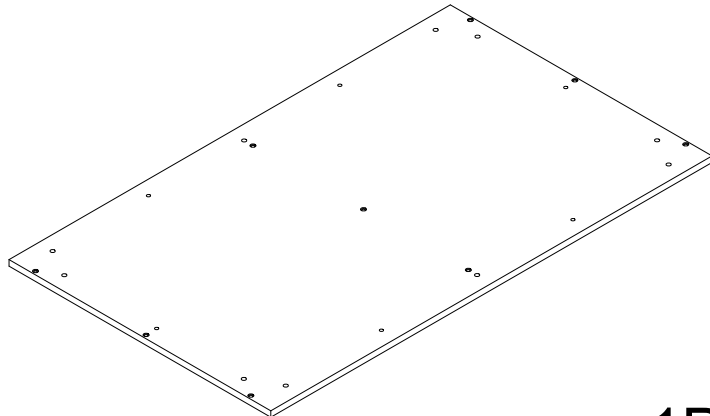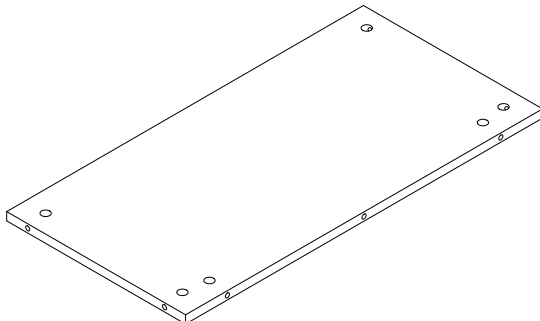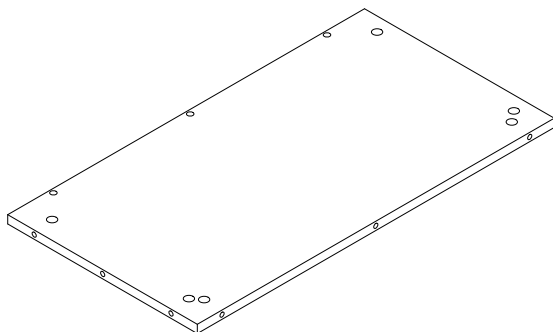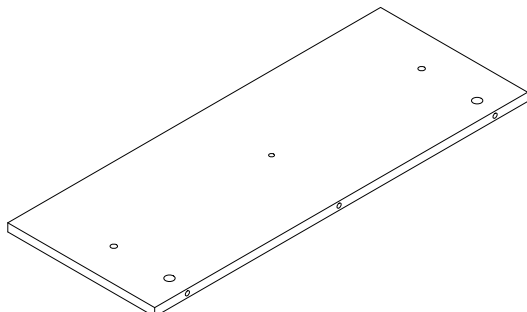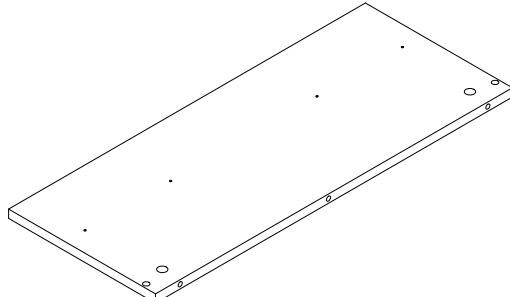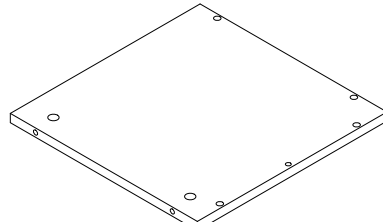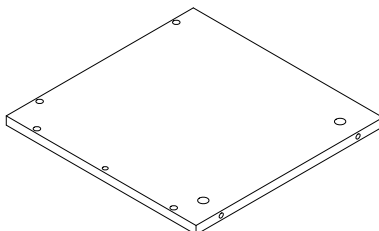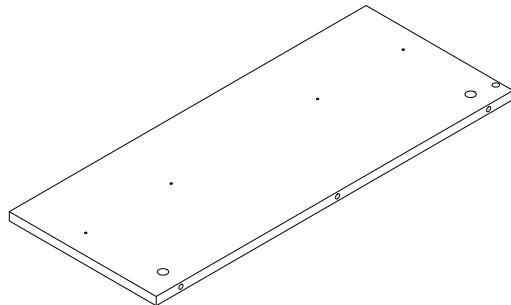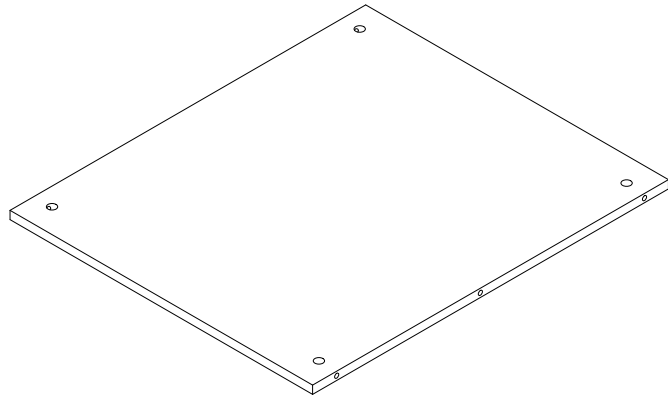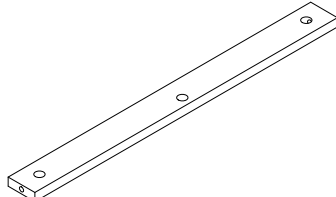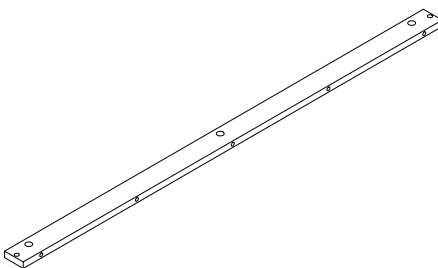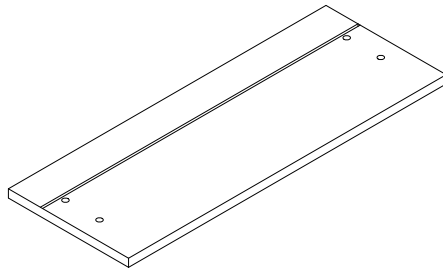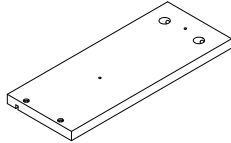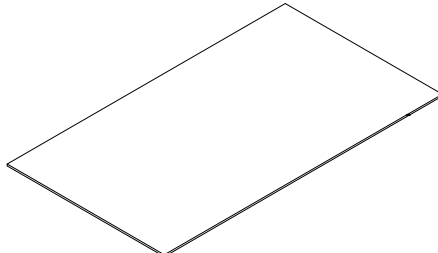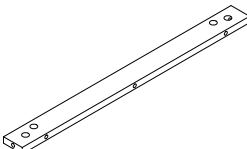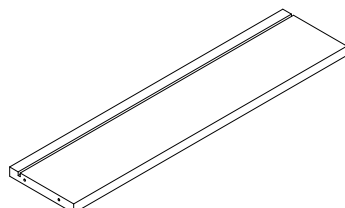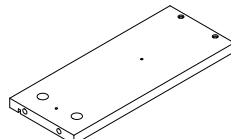


|                                                                                                                                       |                                                                                                                                         |                                                                                                                                         |                                                                                                                                          |
|---------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|
| 1<br><br>1100*550 (mm)<br>43.31*21.65 (inch)<br>1PC  | 2<br><br>910*550 (mm)<br>35.83*21.65 (inch)<br>1PC    | 3<br><br>910*550 (mm)<br>35.83*21.65 (inch)<br>1PC   | 4<br><br>518*225 (mm)<br>20.39*8.86 (inch)<br>1PC     |
| 5<br><br>518*355 (mm)<br>20.39*13.98 (inch)<br>1PC   | 6<br><br>548*275 (mm)<br>21.57*10.83 (inch)<br>1PC    | 7<br><br>518*275 (mm)<br>20.39*10.83 (inch)<br>1PC   | 8<br><br>355*240 (mm)<br>13.98*9.45 (inch)<br>1PC     |
| 9<br><br>355*240 (mm)<br>13.98*9.45 (inch)<br>1PC  | 10<br><br>518*275 (mm)<br>20.39*10.83 (inch)<br>1PC | 11<br><br>516*432 (mm)<br>20.31*17inch<br>1PC      | 12<br><br>431*50 (mm)<br>16.97*1.97 (inch)<br>2PCS  |
| 13<br><br>810*50 (mm)<br>31.89*1.97 (inch)<br>2PCS | 15<br><br>459*225 (mm)<br>18.07*8.86 (inch)<br>2PCS | 17<br><br>250*120 (mm)<br>9.84*4.72 (inch)<br>2PCS | 19<br><br>385*244 (mm)<br>15.16*9.61 (inch)<br>2PCS |
| 14<br><br>420*50 (mm)<br>16.54*1.97 (inch)<br>2PCS | 16<br><br>376*120 (mm)<br>14.8*4.72 (inch)<br>2PCS  | 18<br><br>250*120 (mm)<br>9.84*4.72 (inch)<br>2PCS |                                                                                                                                          |

1

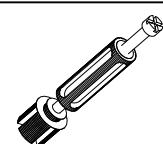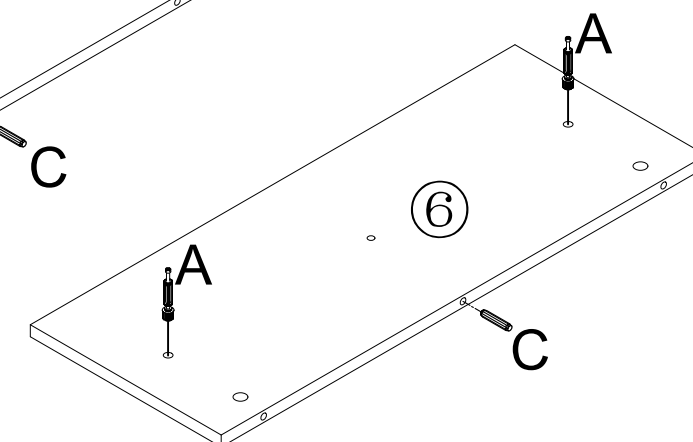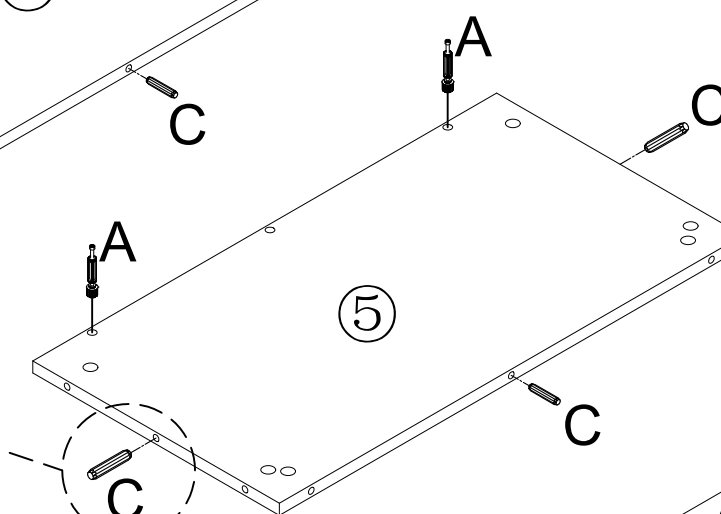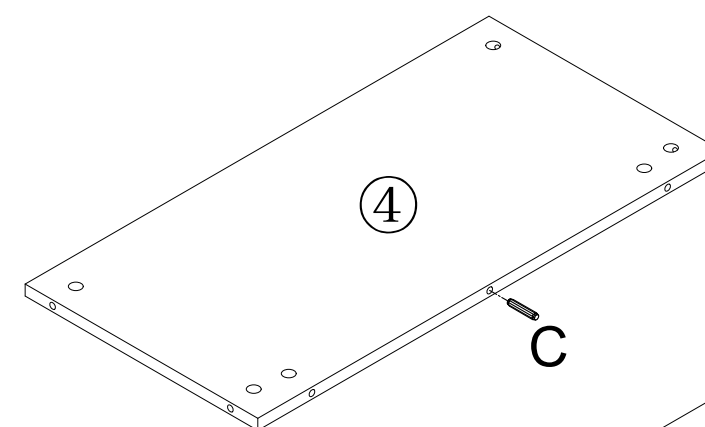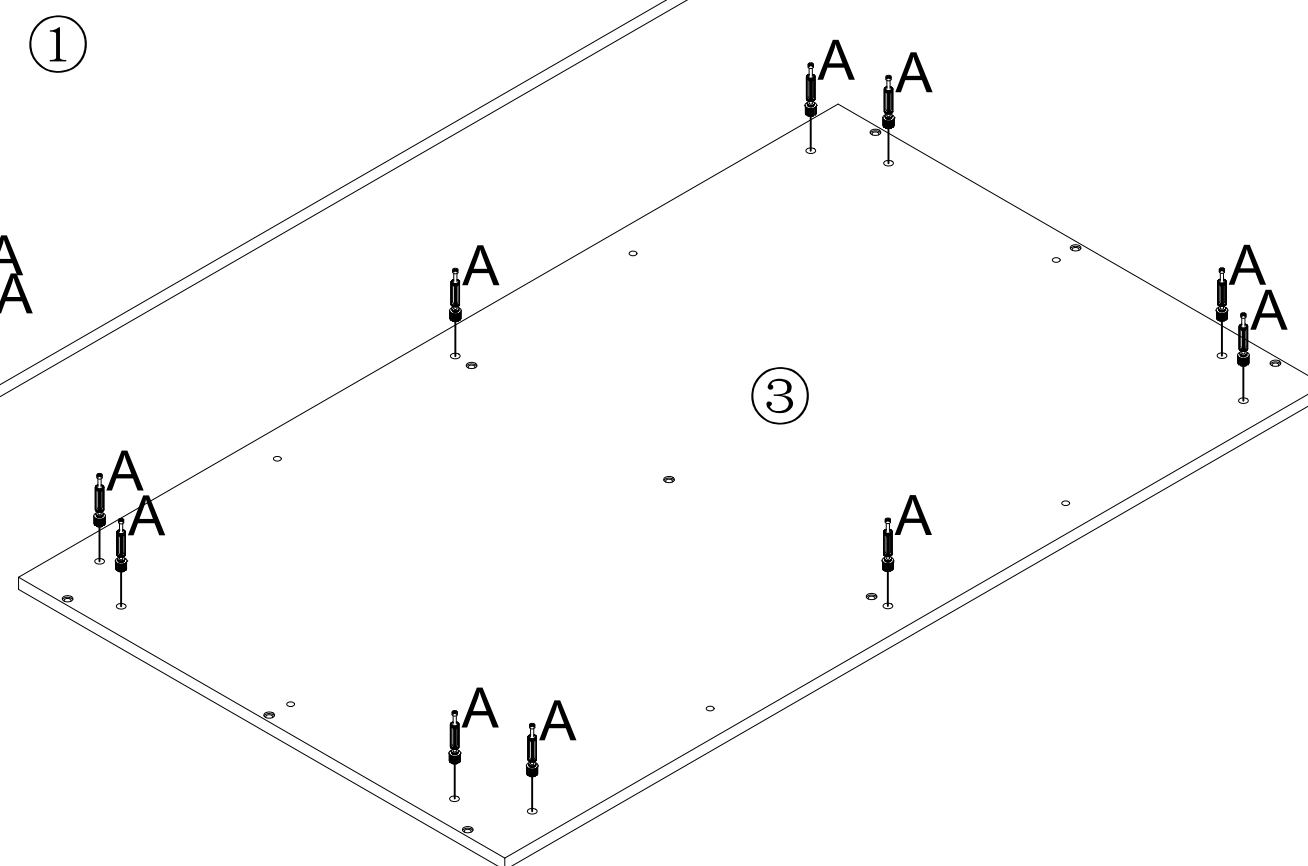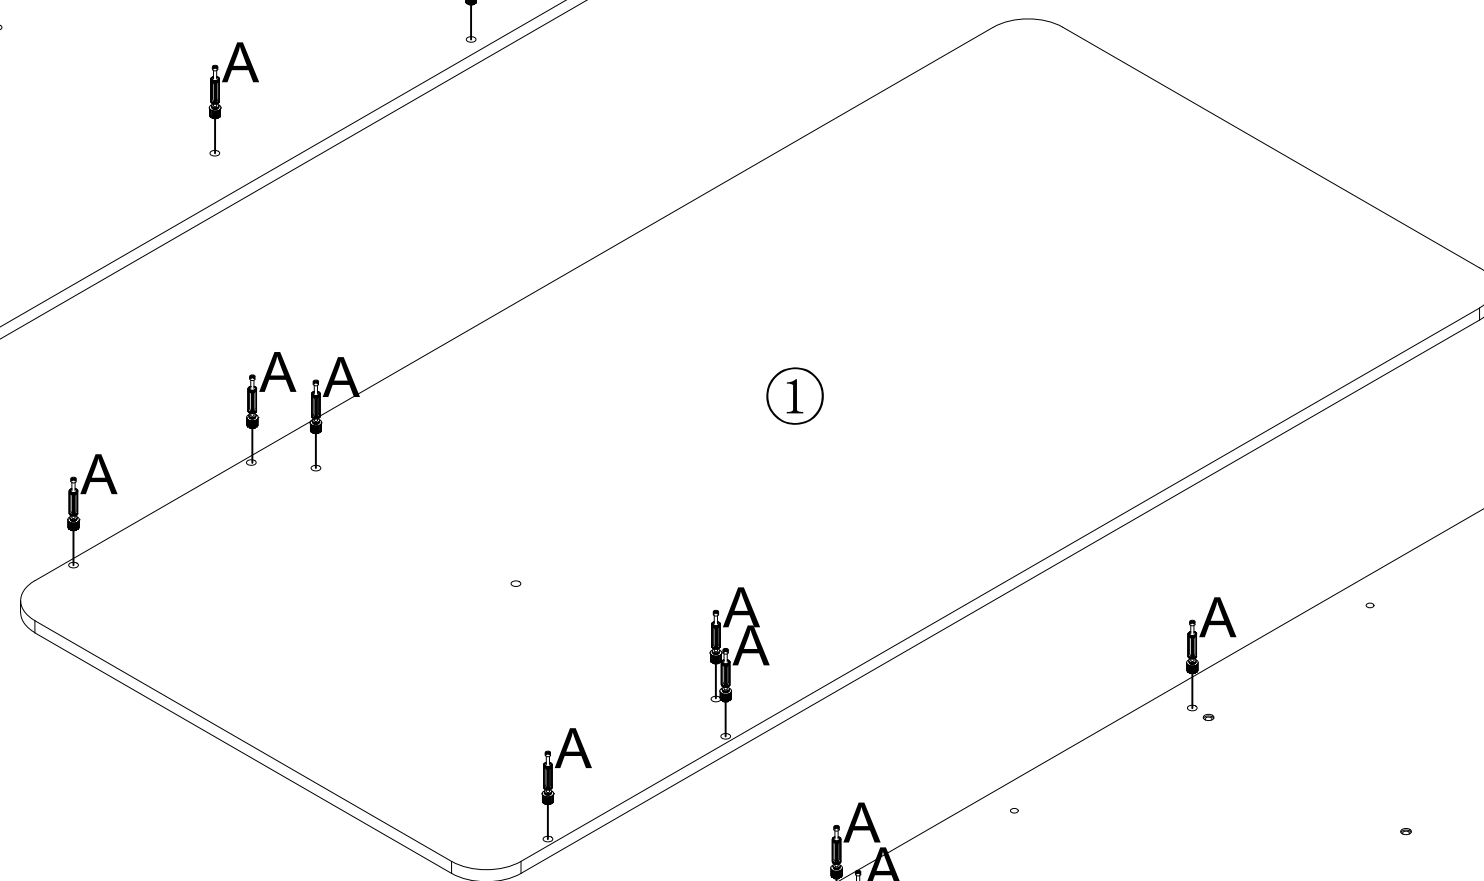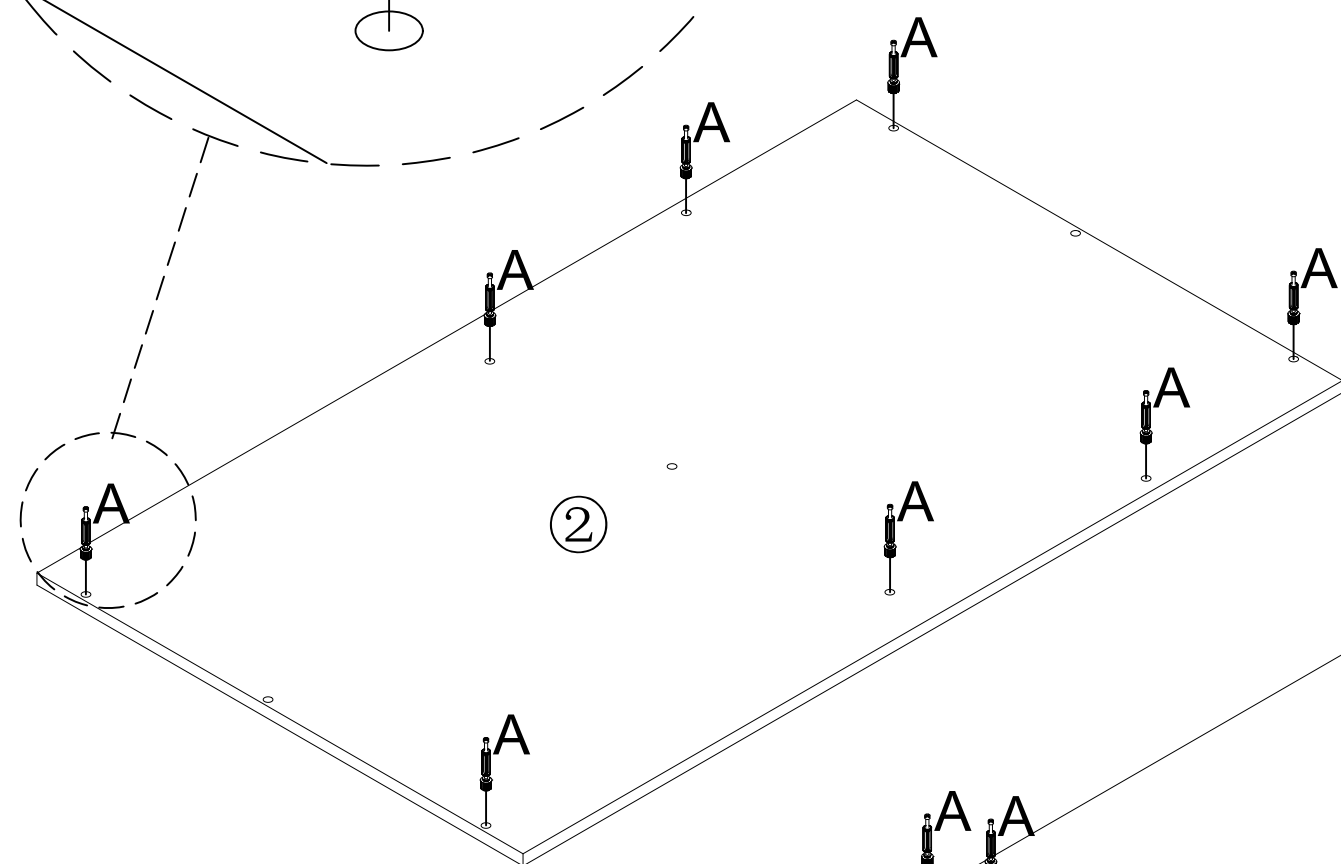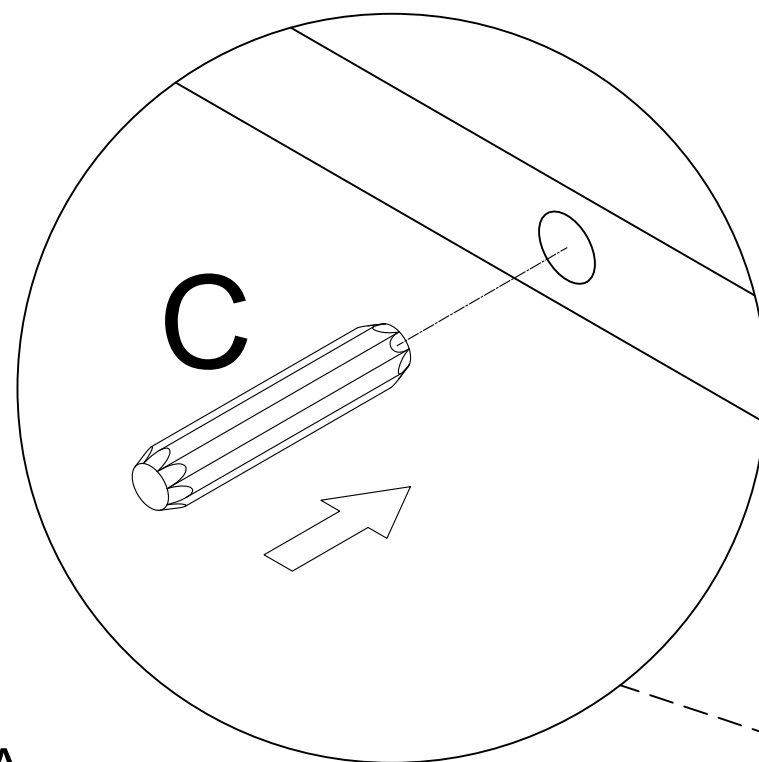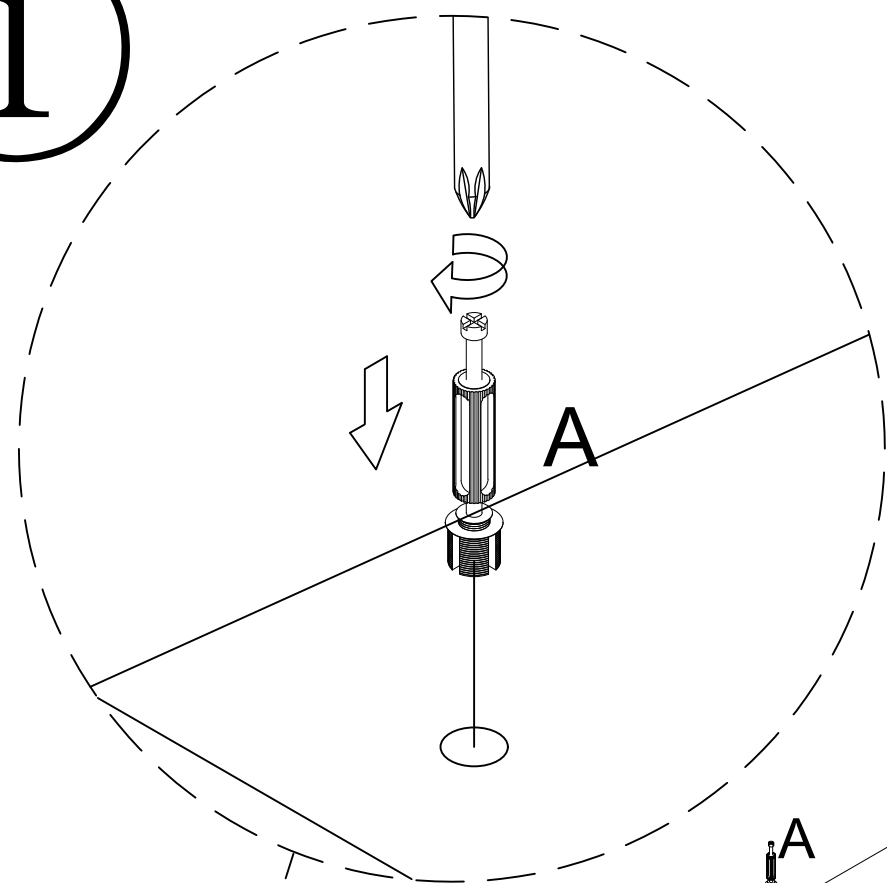

A\*28

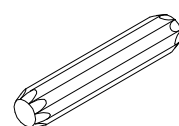





C\*5

put A on board ① ② ③ ⑤ ⑥

put C on board ④ ⑤ ⑥

2

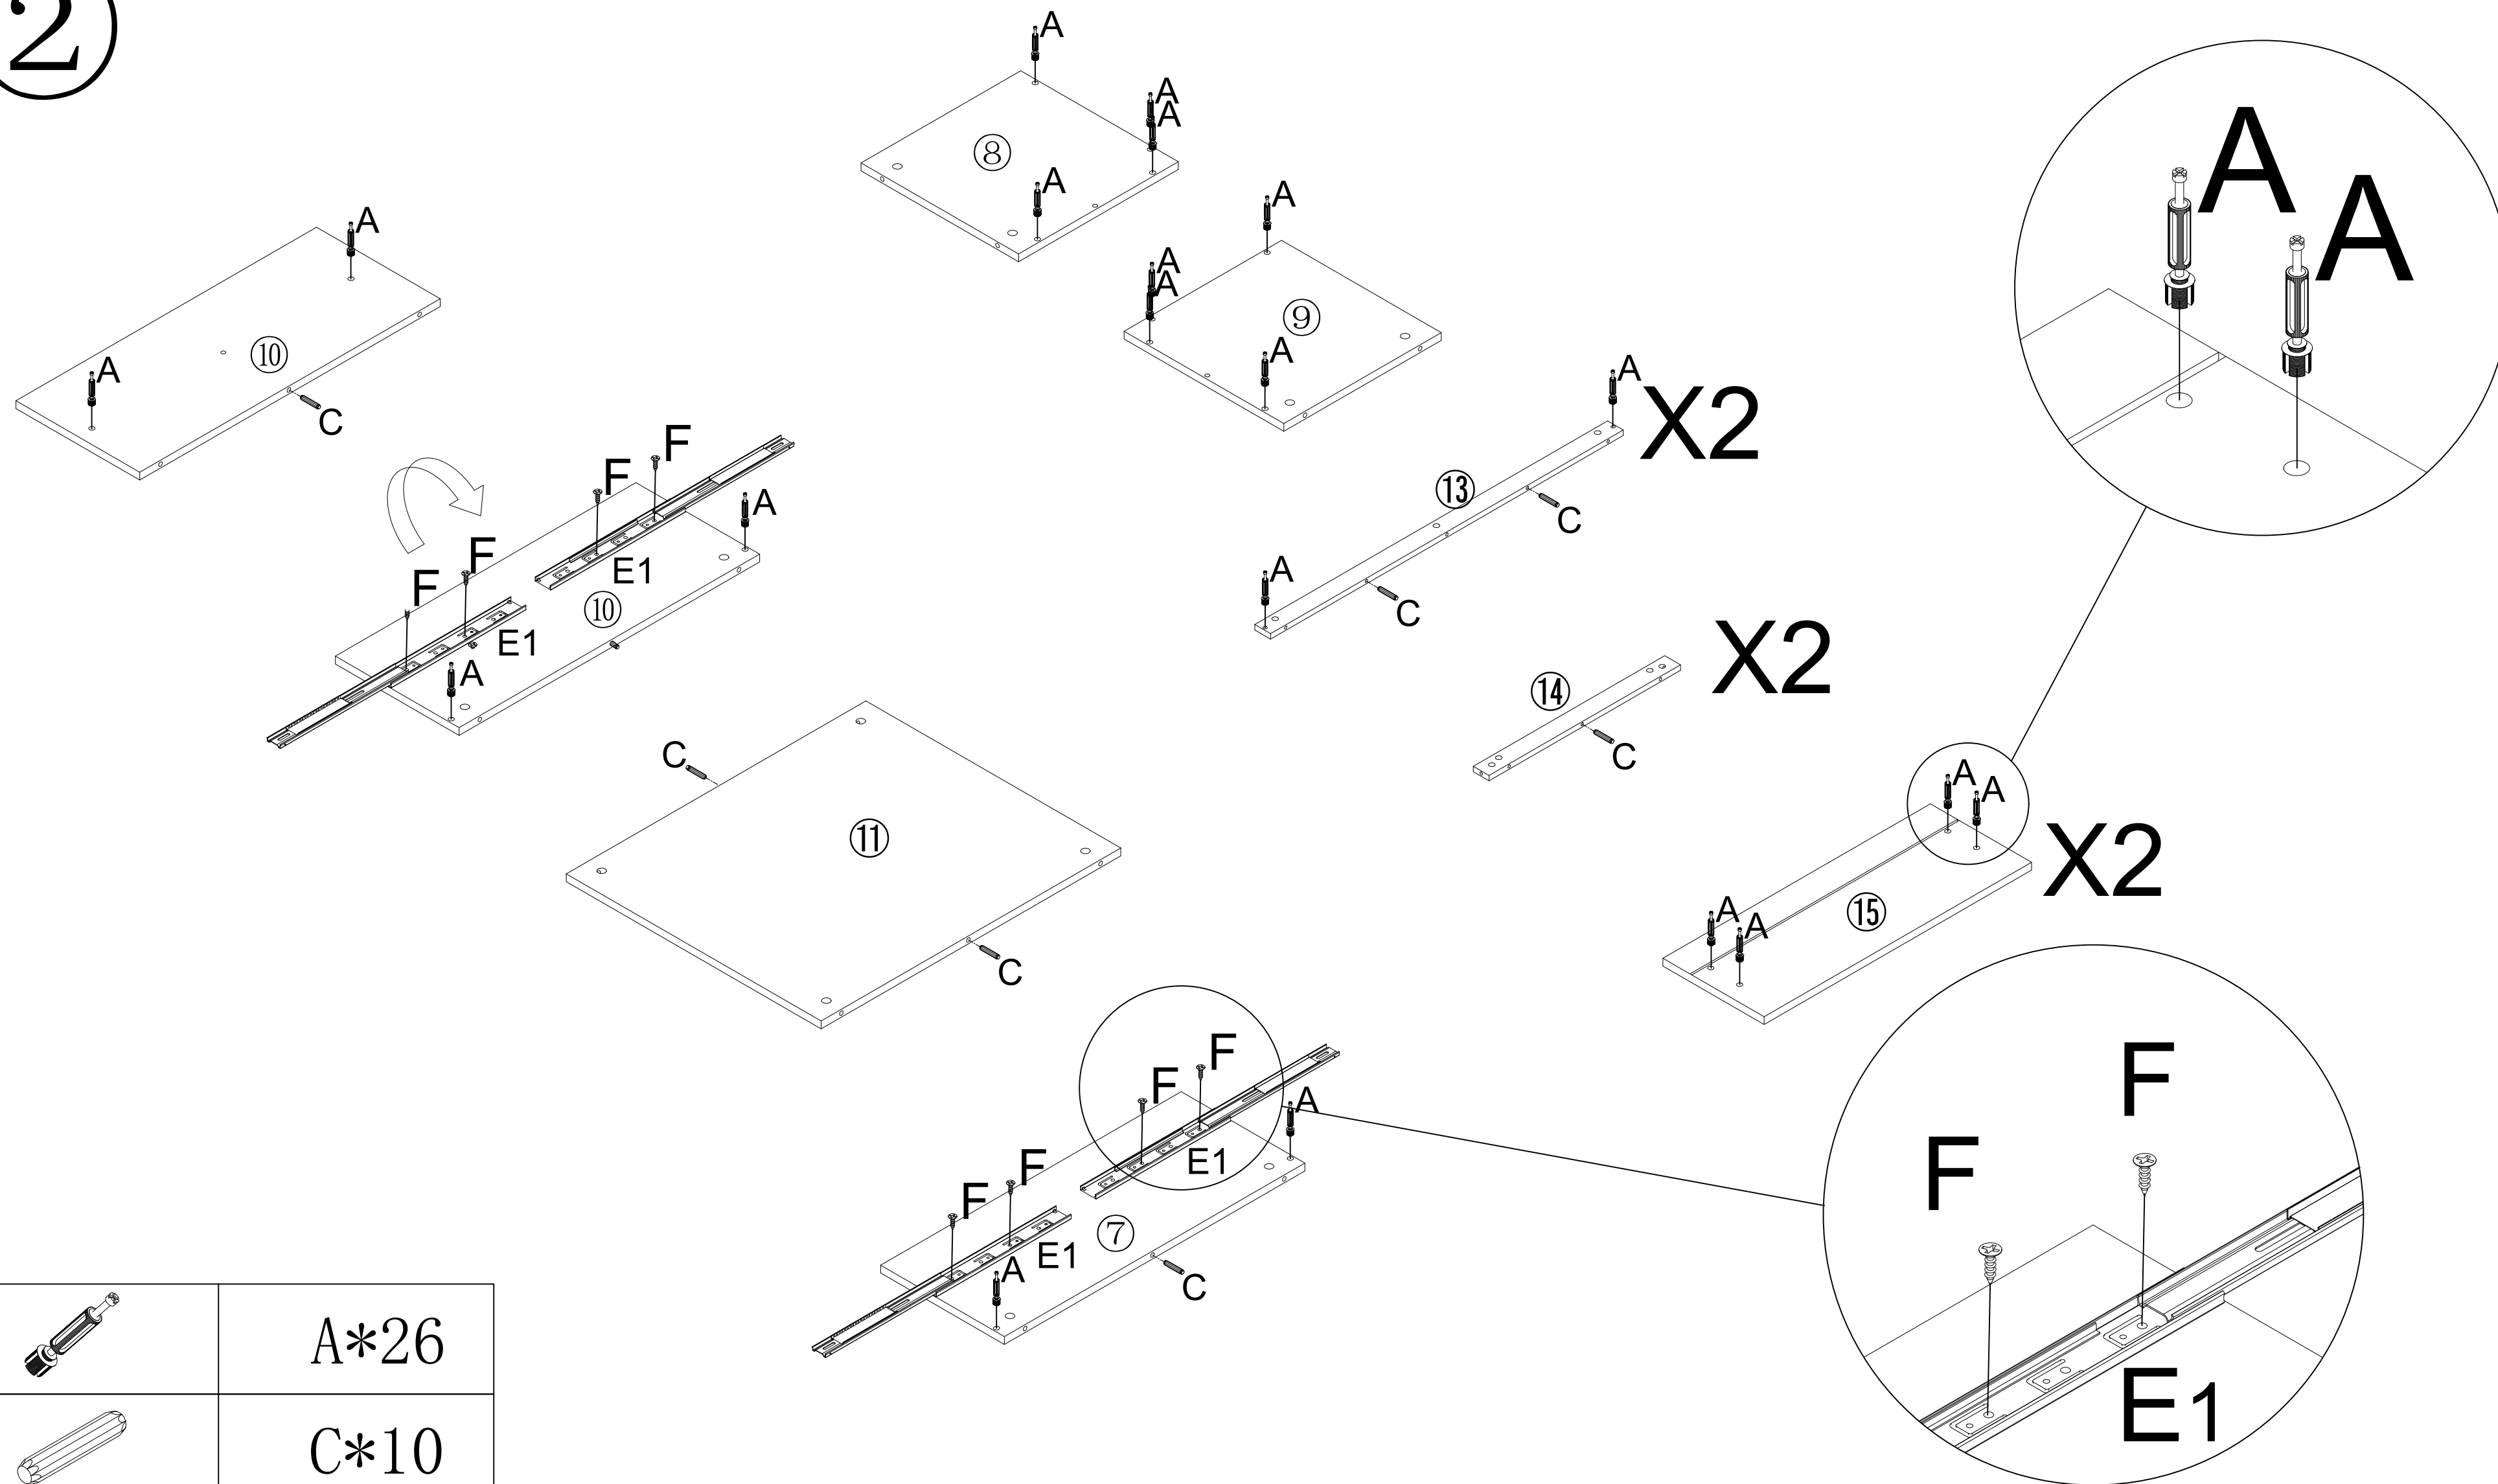
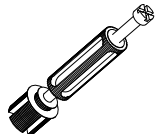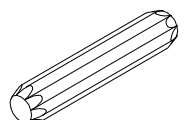
|                                                                                     |      |
|-------------------------------------------------------------------------------------|------|
|  | A*26 |
|  | C*10 |
|  | F*8  |
|  | E1*2 |



put A on board ⑦ ⑧ ⑨ ⑩ ⑬ ⑮

put C on board ⑦ ⑧ ⑨ ⑩ ⑪ ⑬ ⑭



3






Make sure the arrow on the screw align to the hole on the side.

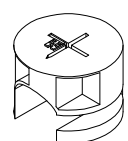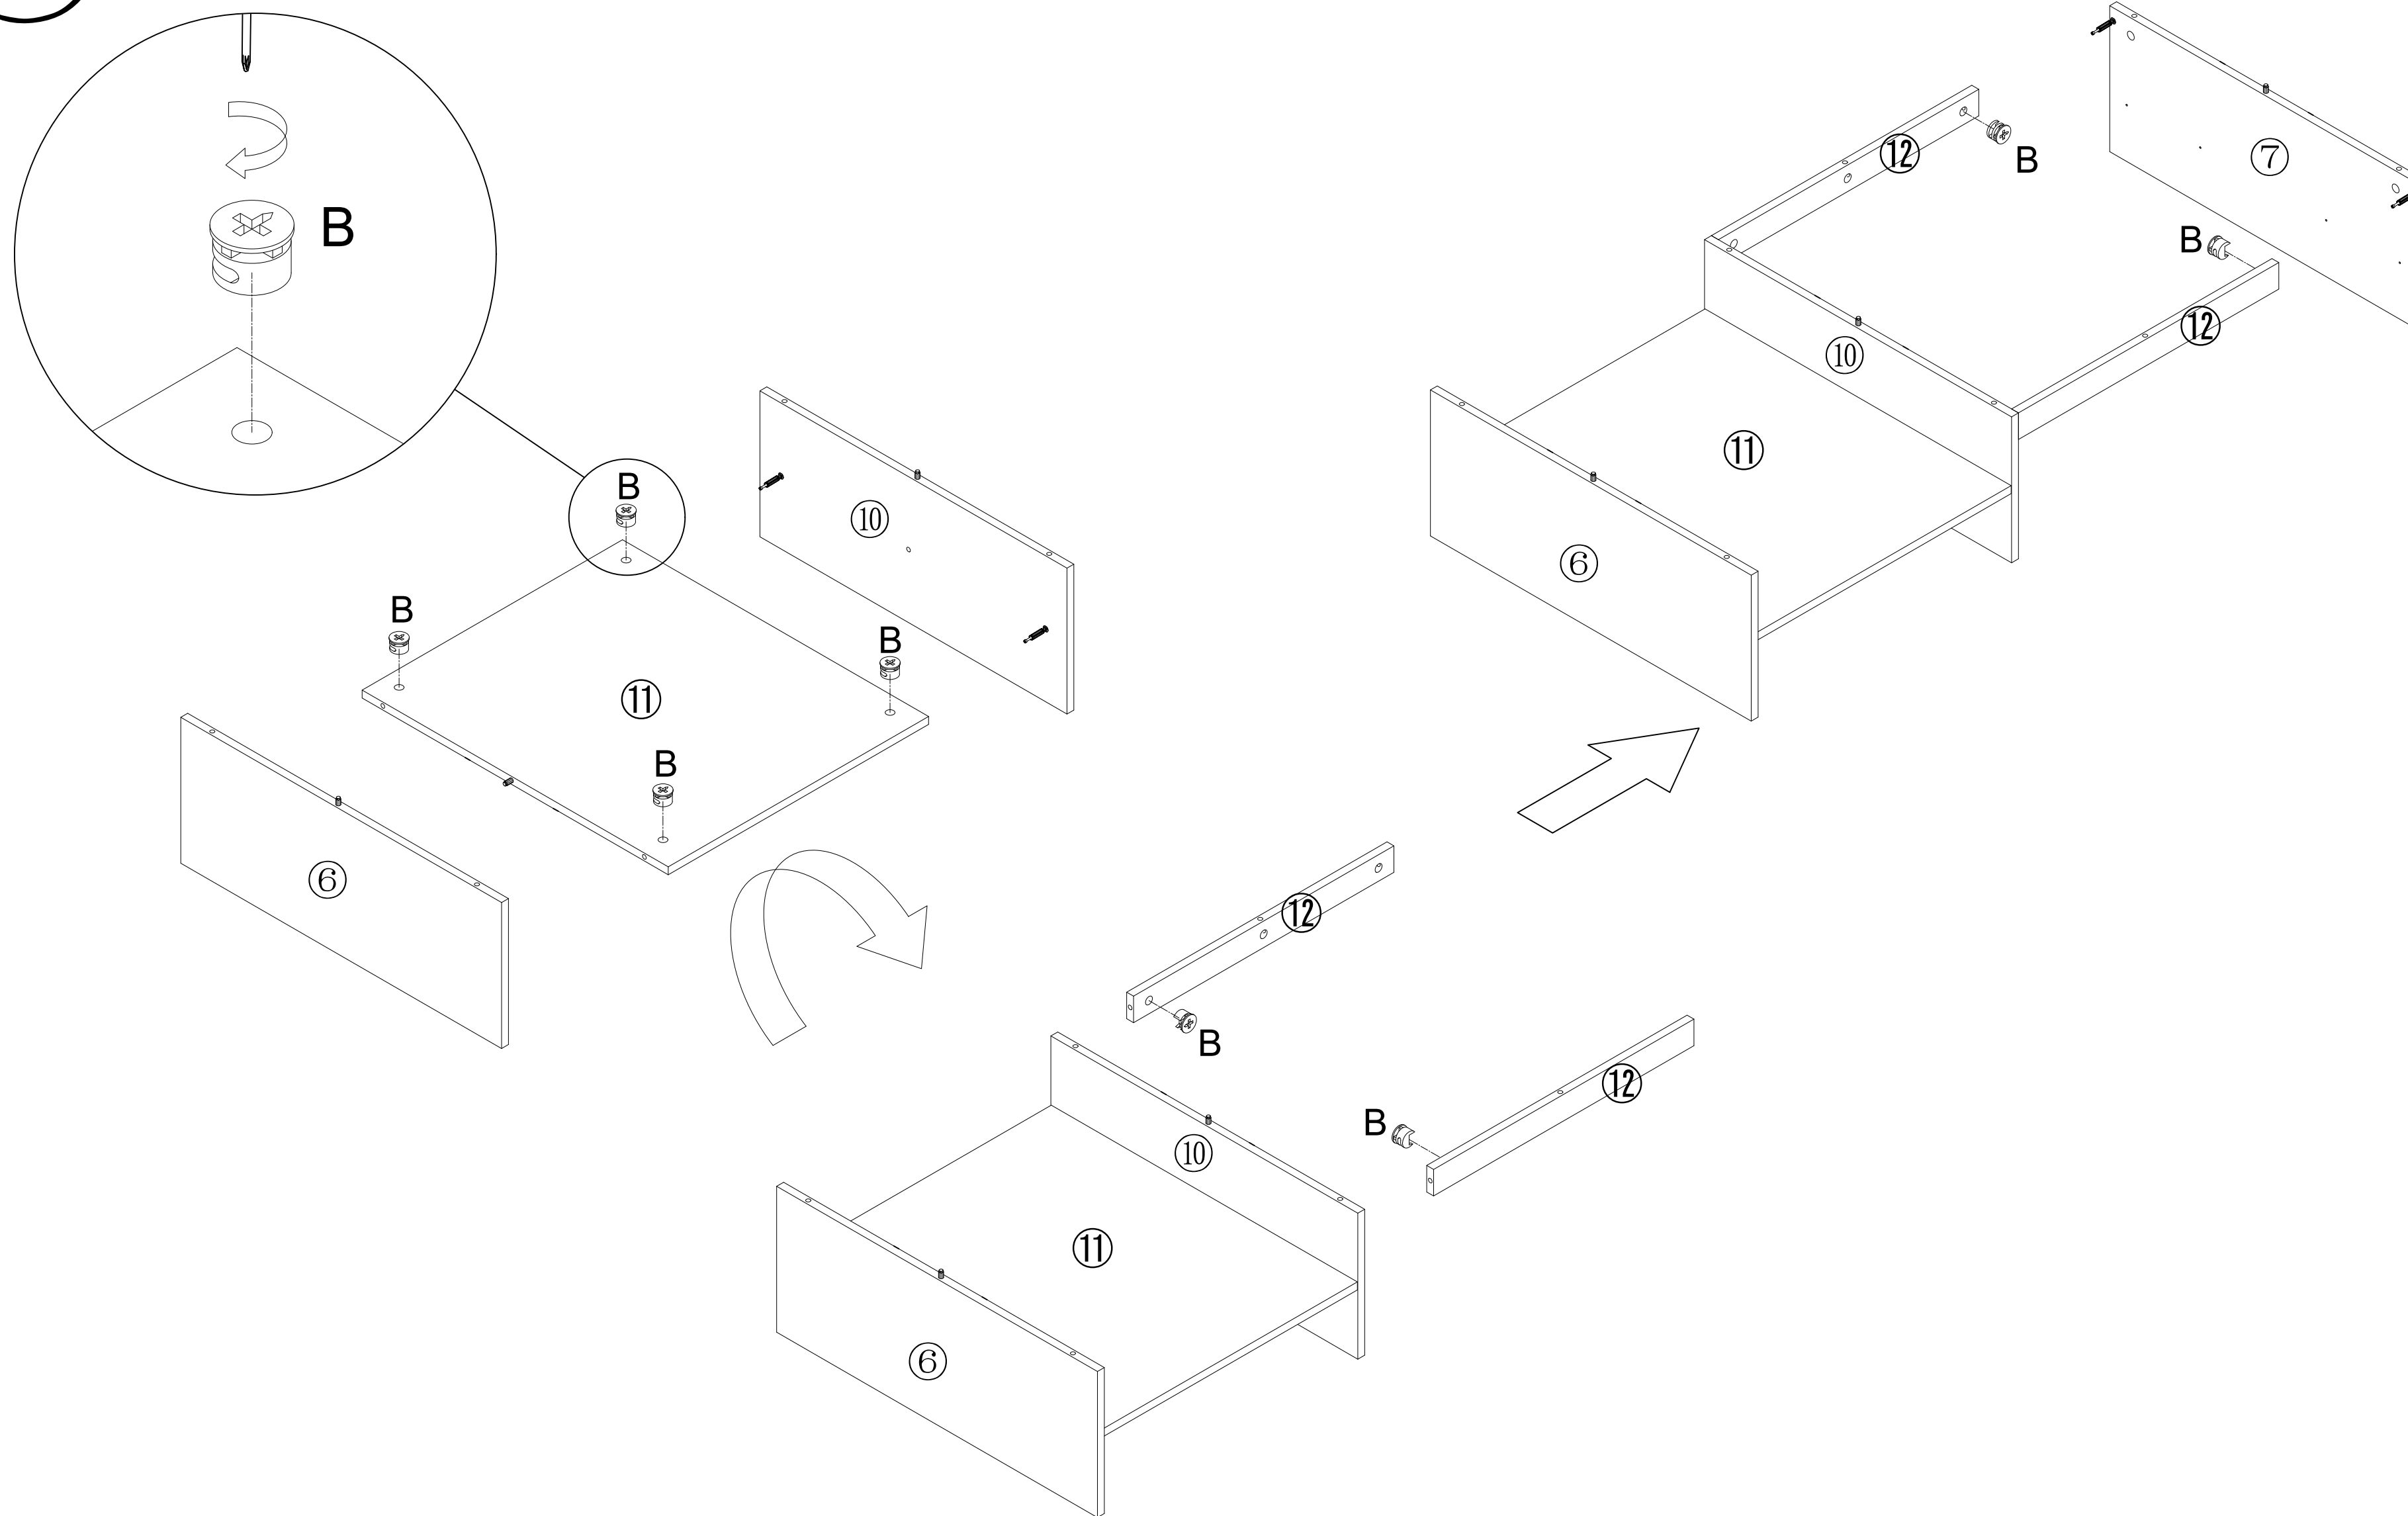

B\*8

put B on board ⑪ ⑫

4

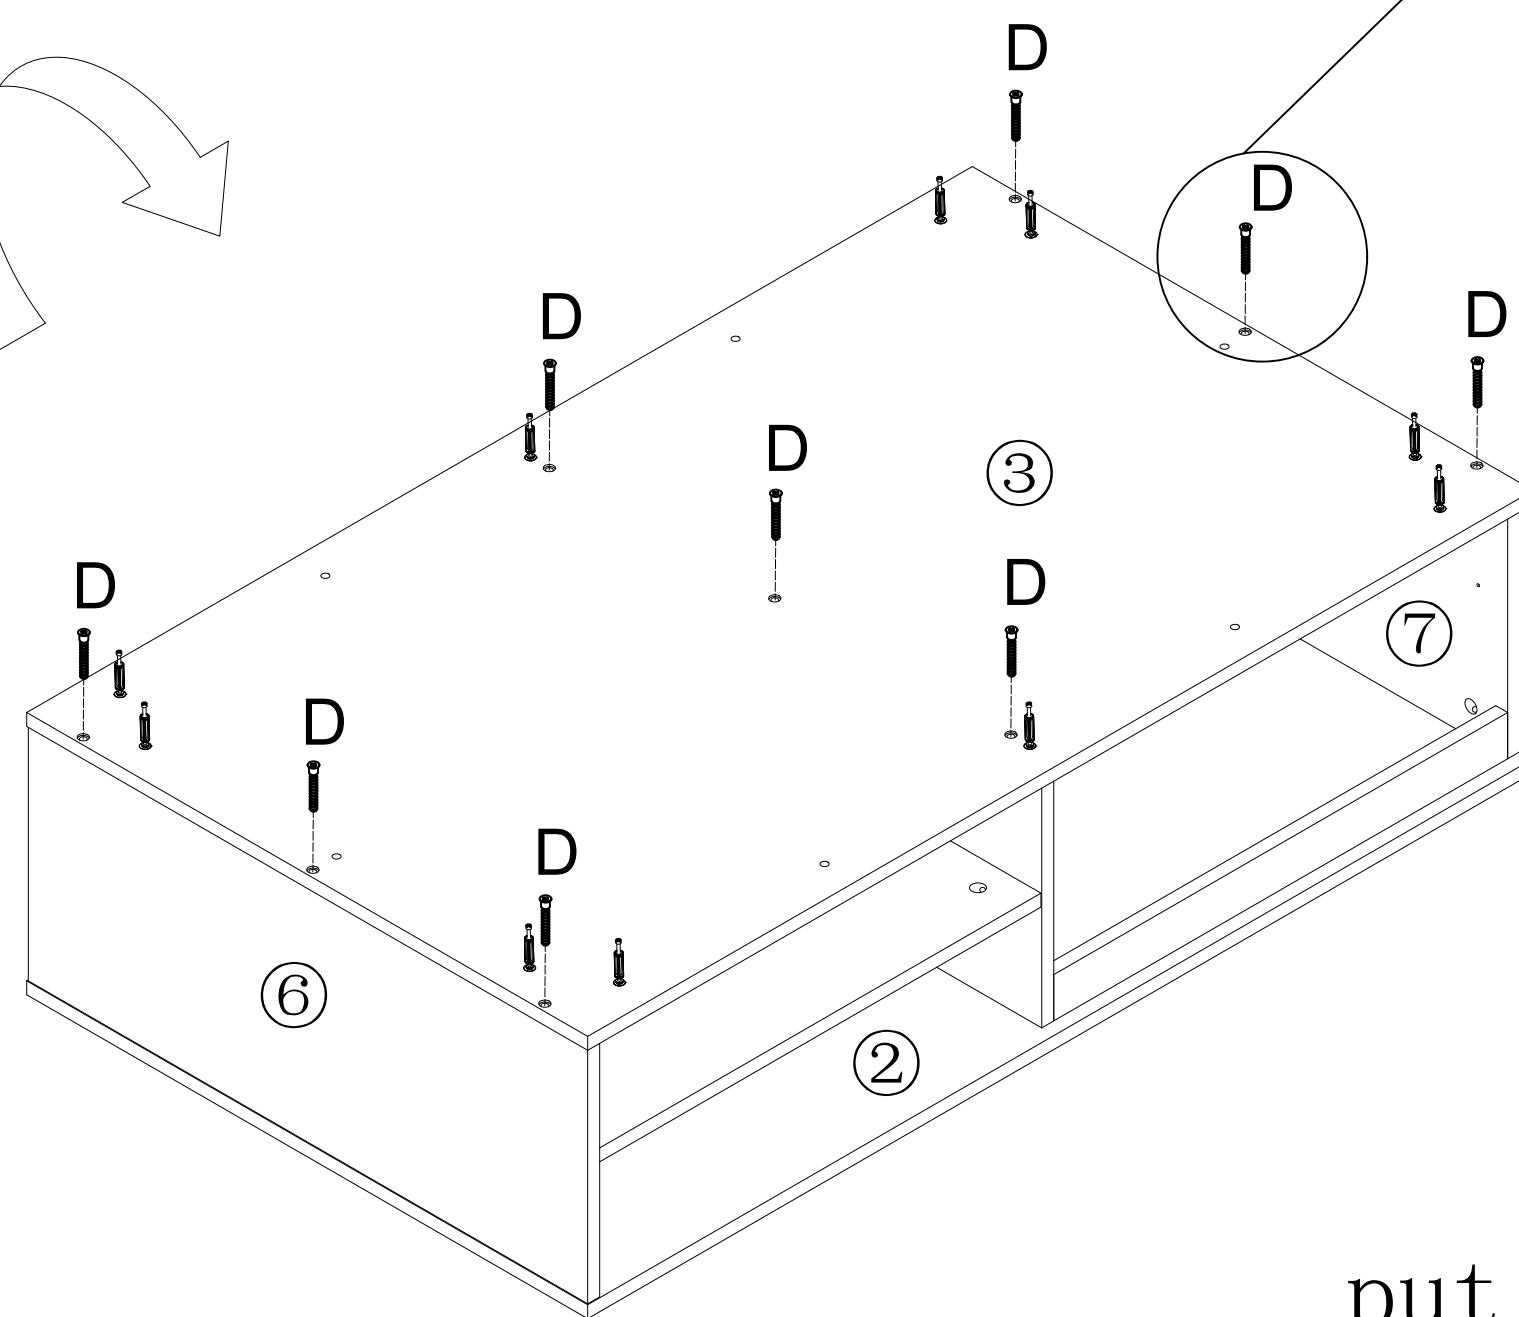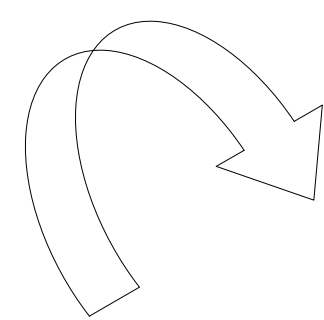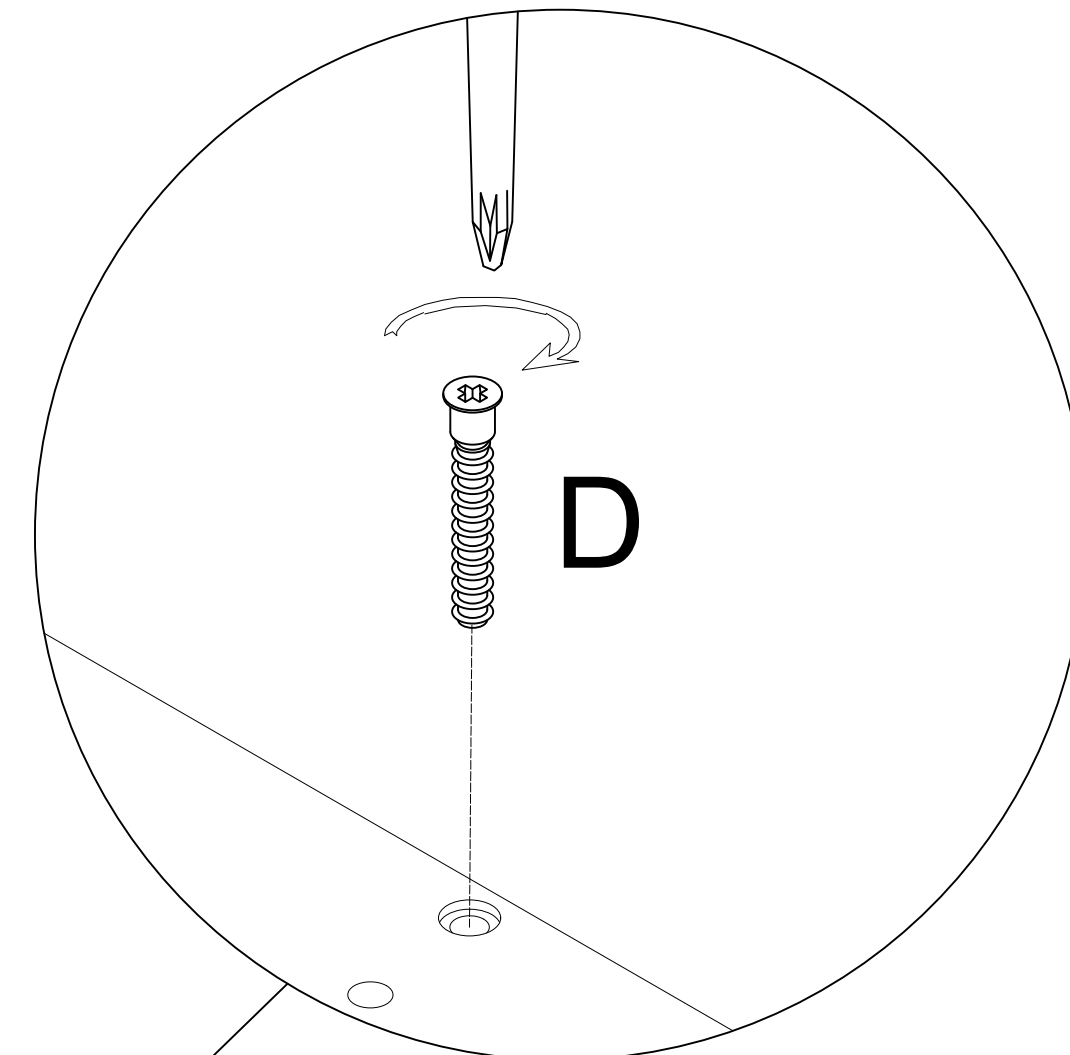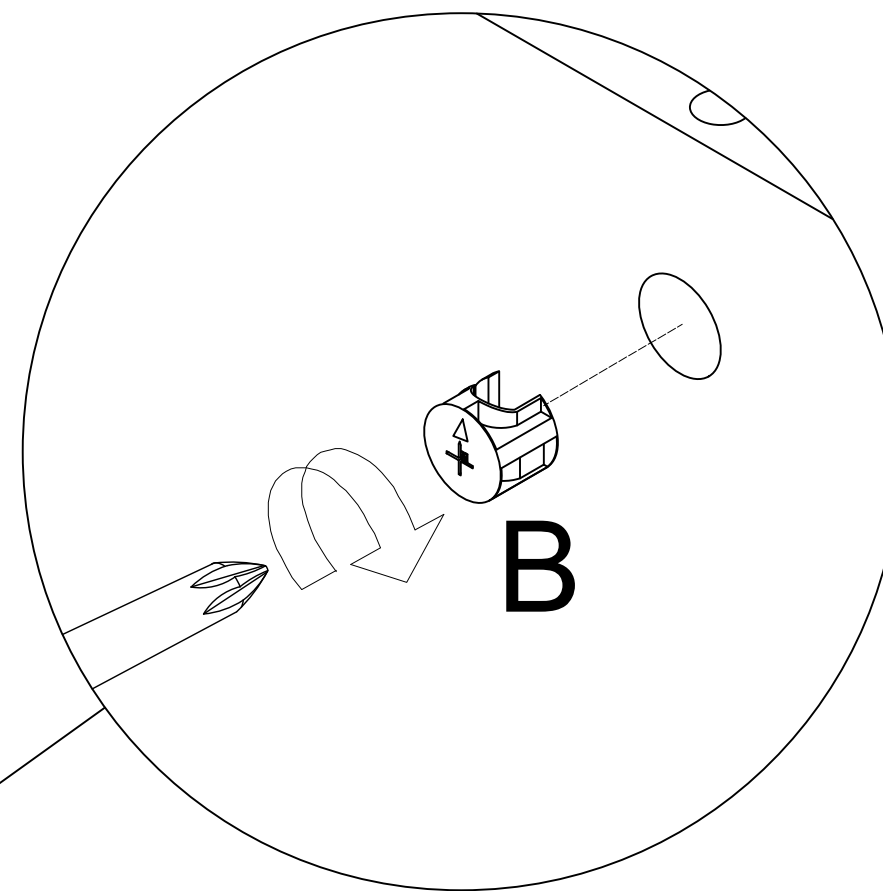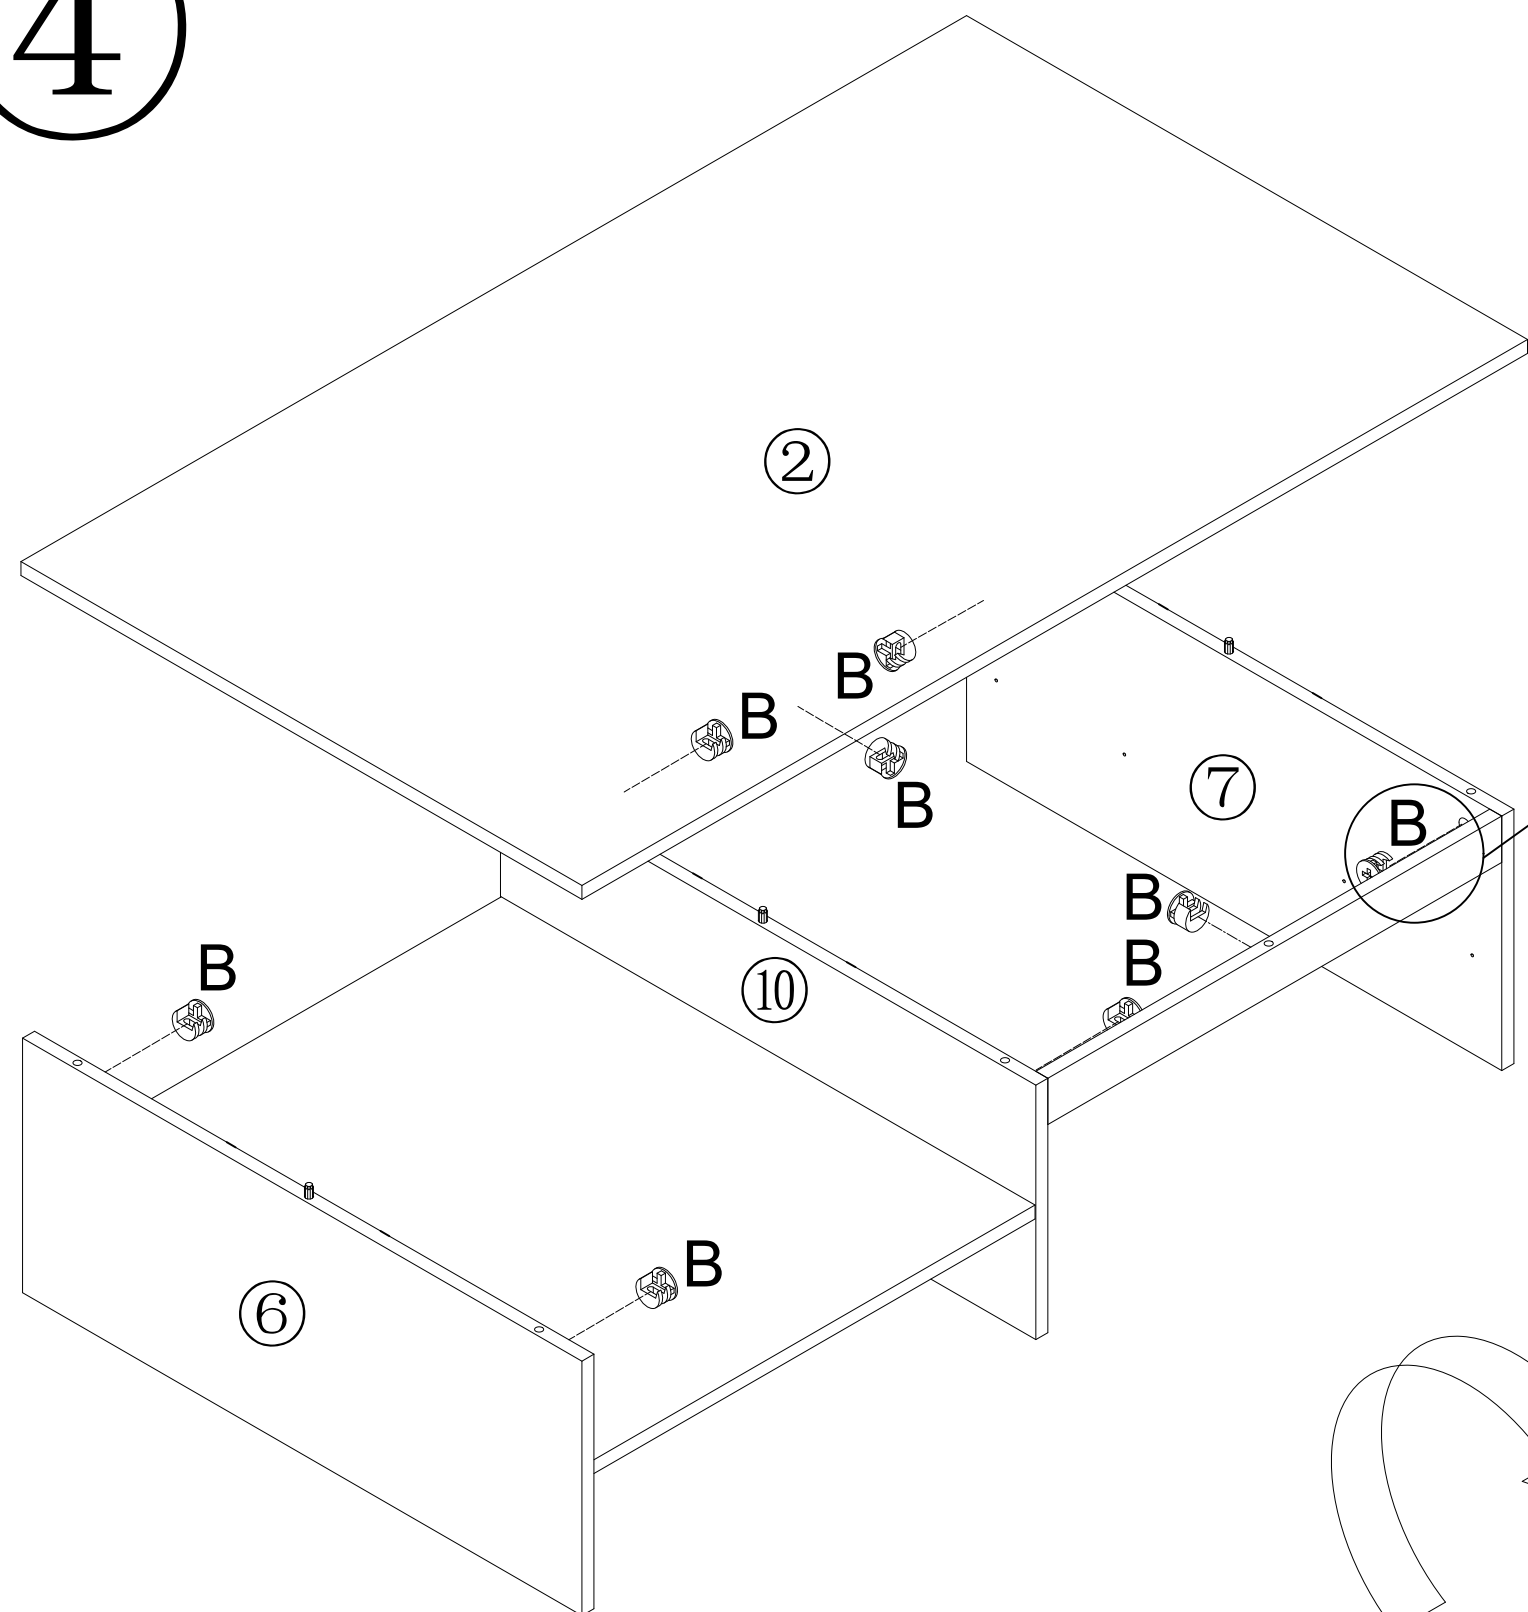



|  |     |
|--|-----|
|  | B*8 |
|  | D*9 |

put B on board ⑥ ⑦ ⑩



5

Make sure the arrow on the screw align to the hole on the side.

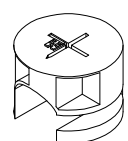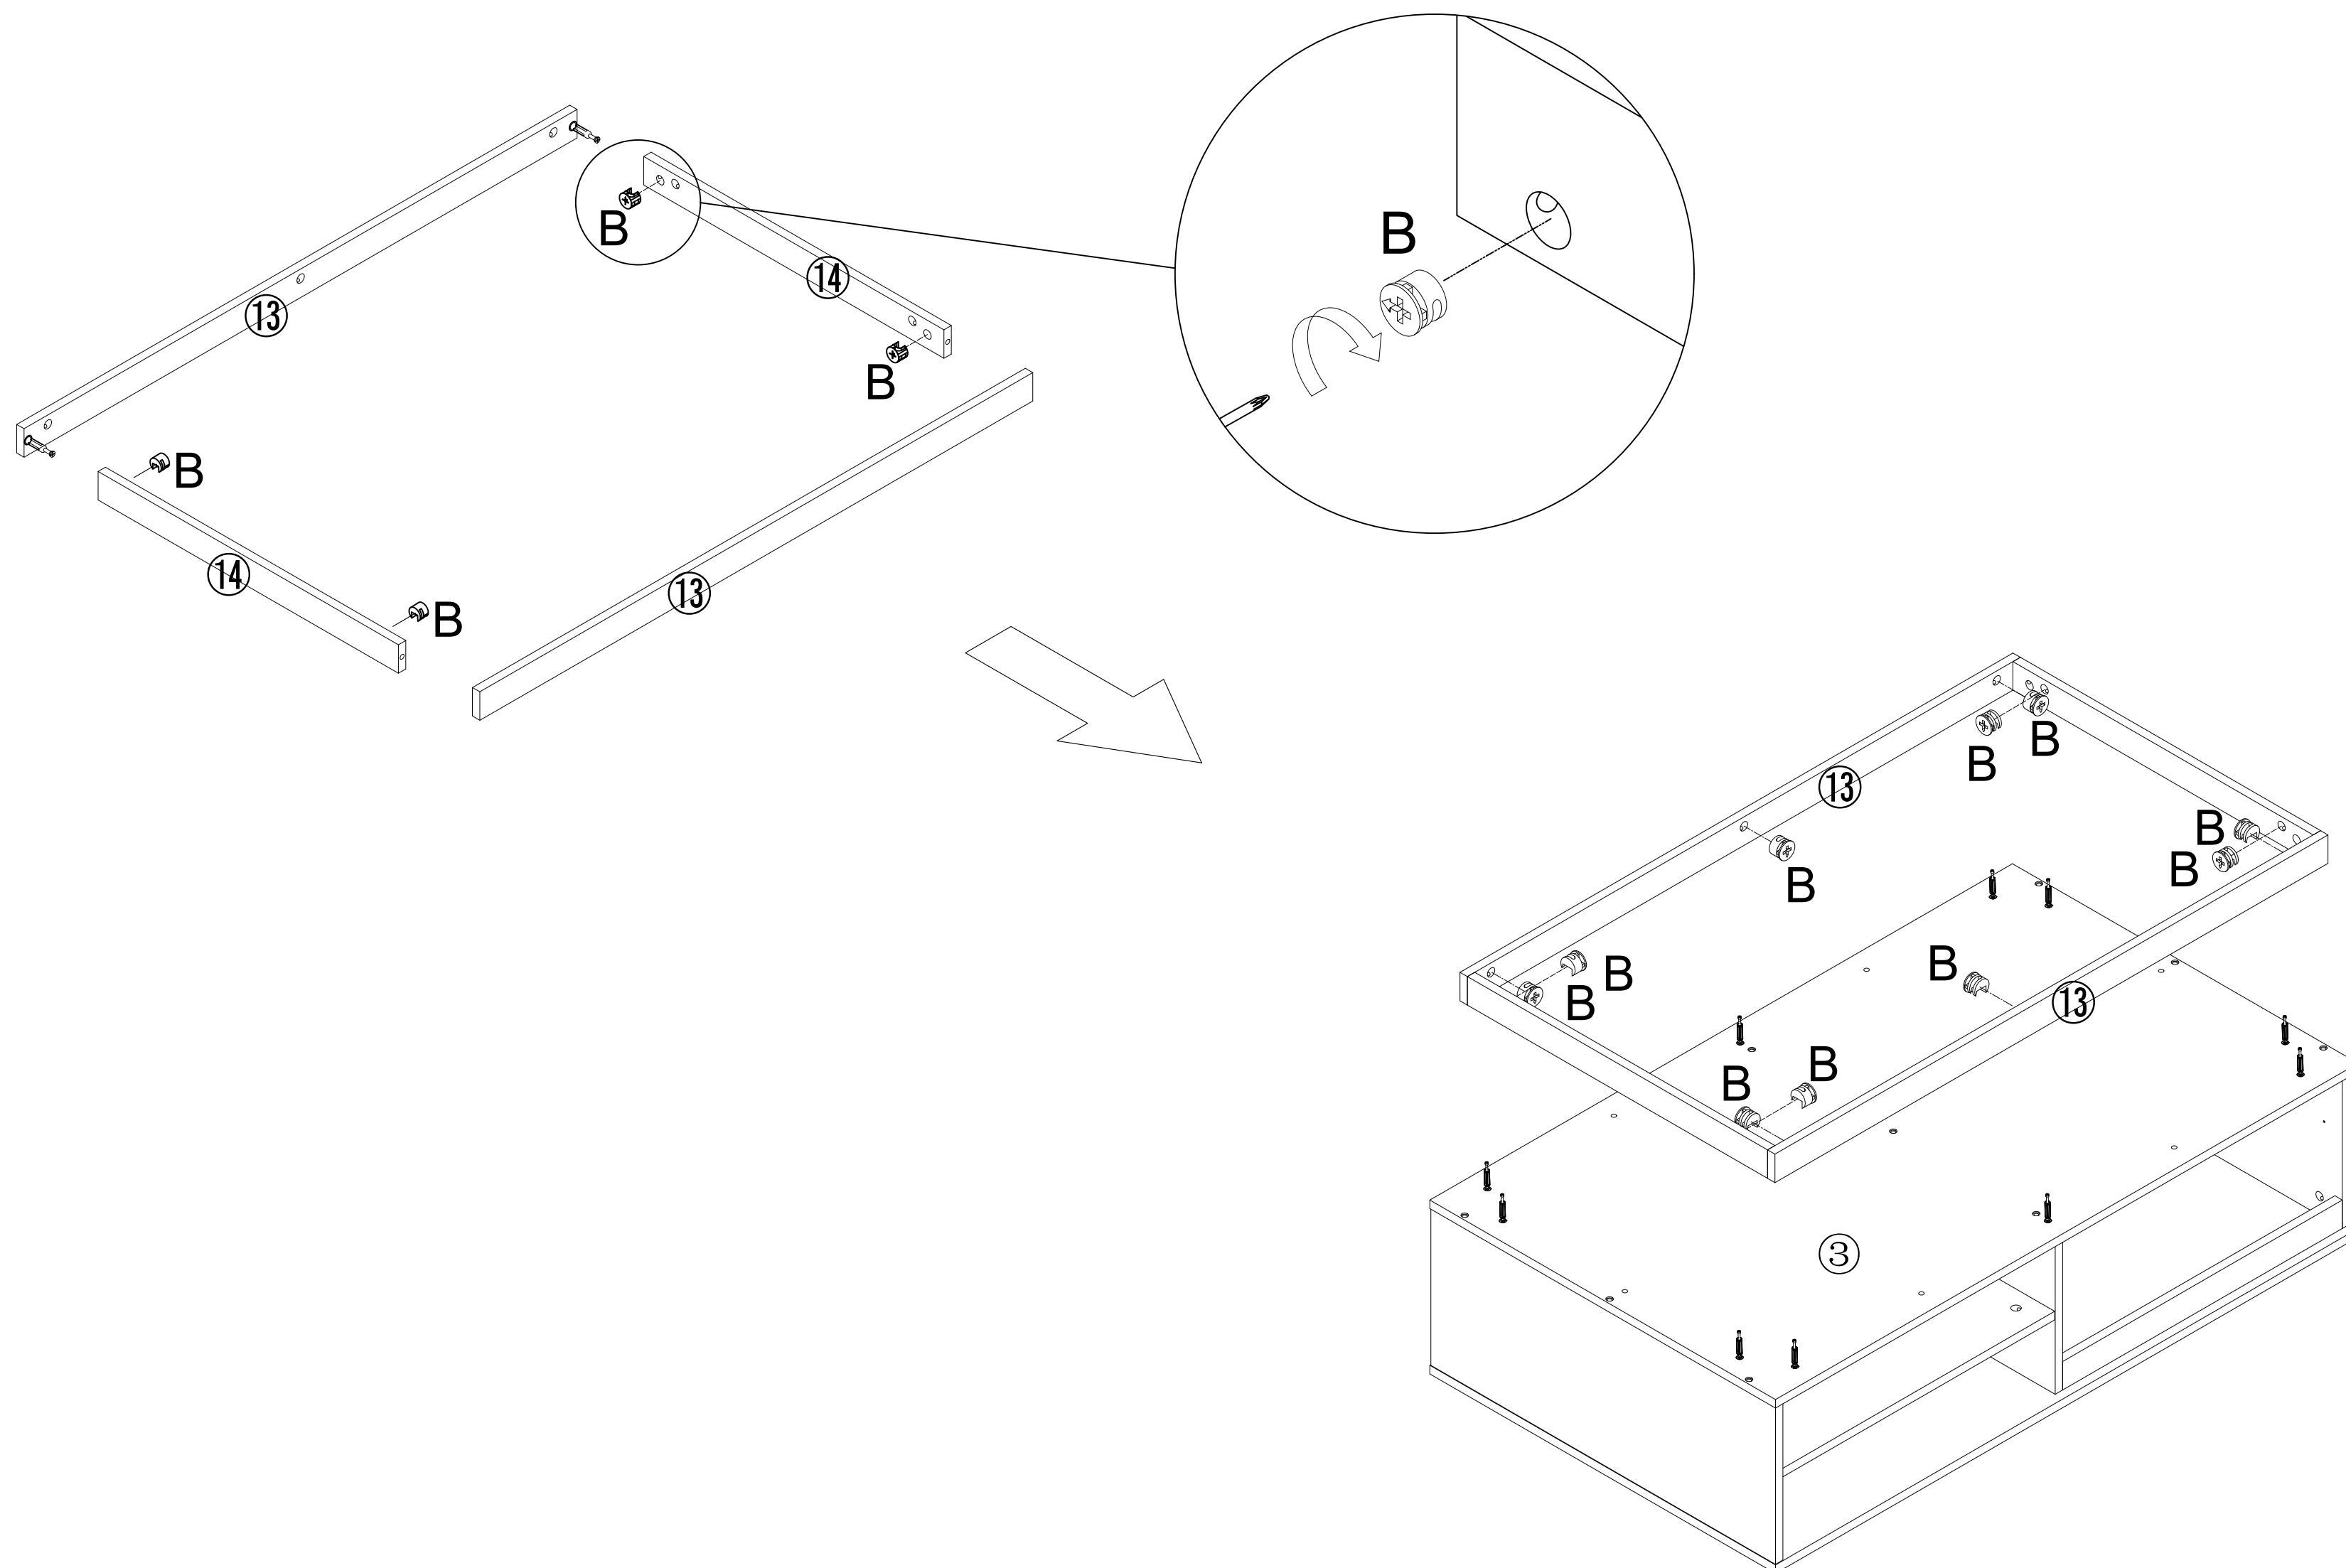


B\*14





put B on board 13 14

6

Make sure the arrow on the screw align to the hole on the side.

X2

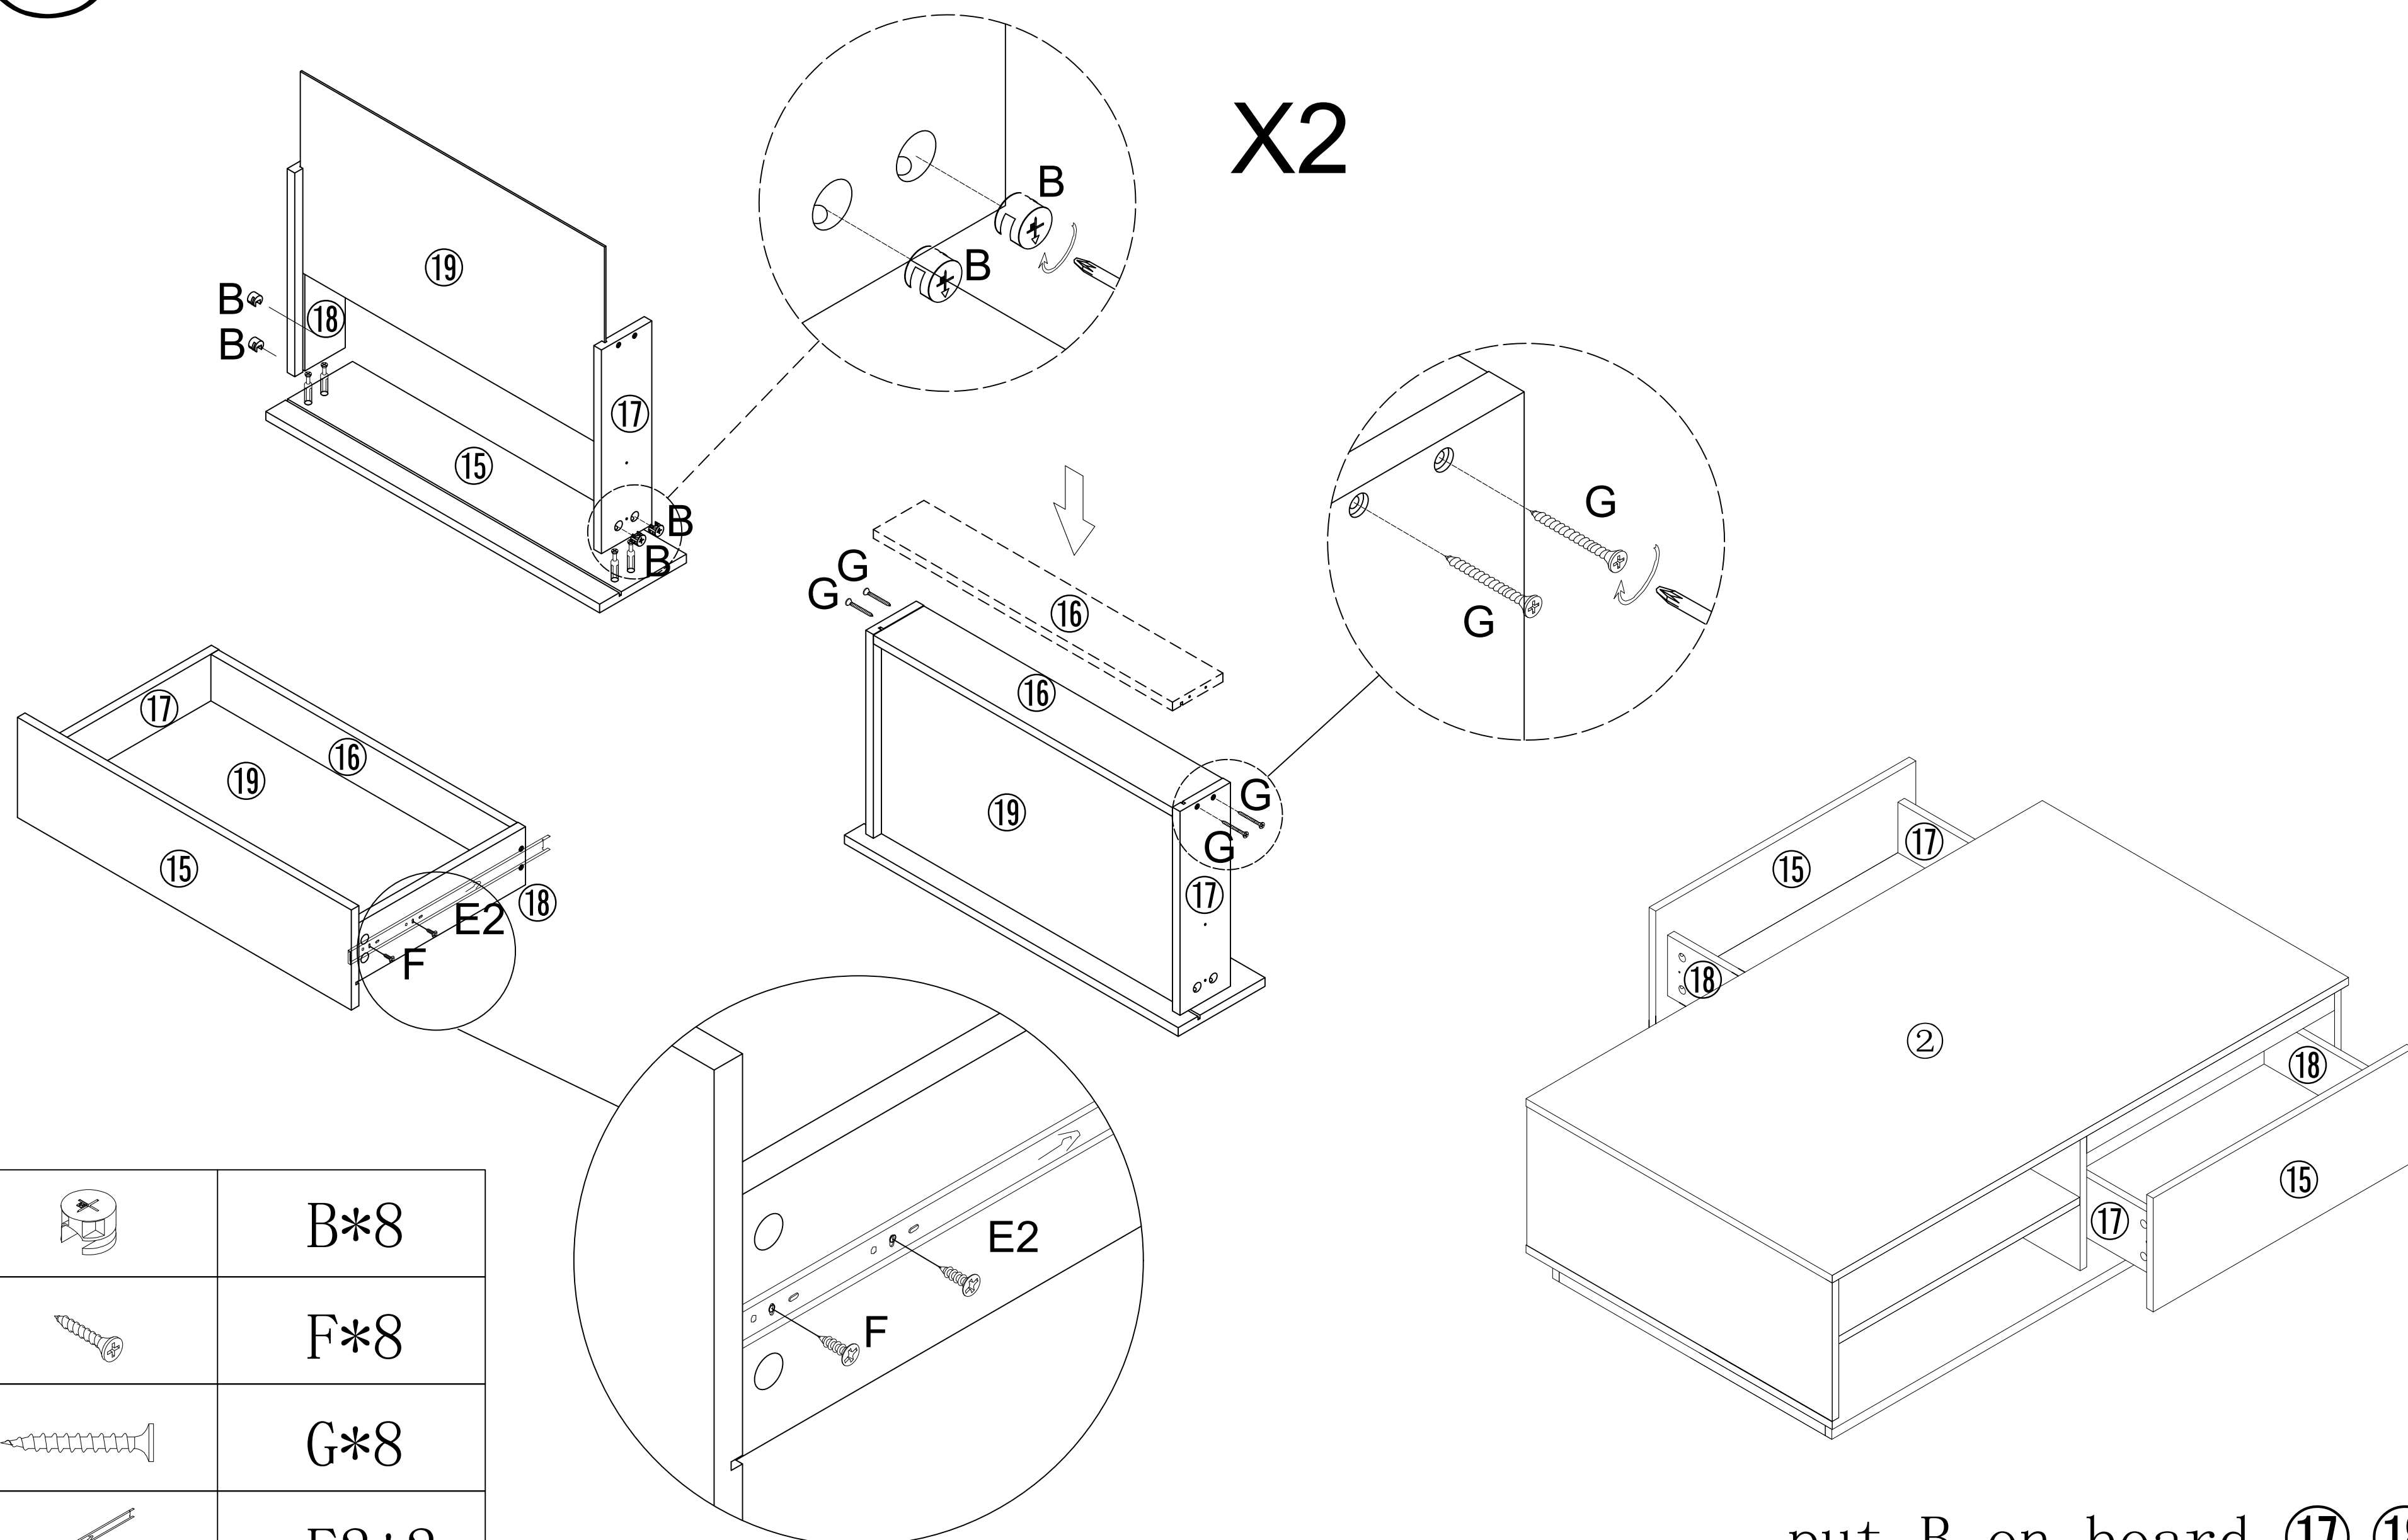


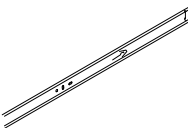
|                                                                                     |      |
|-------------------------------------------------------------------------------------|------|
|  | B*8  |
|  | F*8  |
|  | G*8  |
|  | E2*2 |

put B on board 17 18

7

Make sure the arrow on the screw align to the hole on the side.

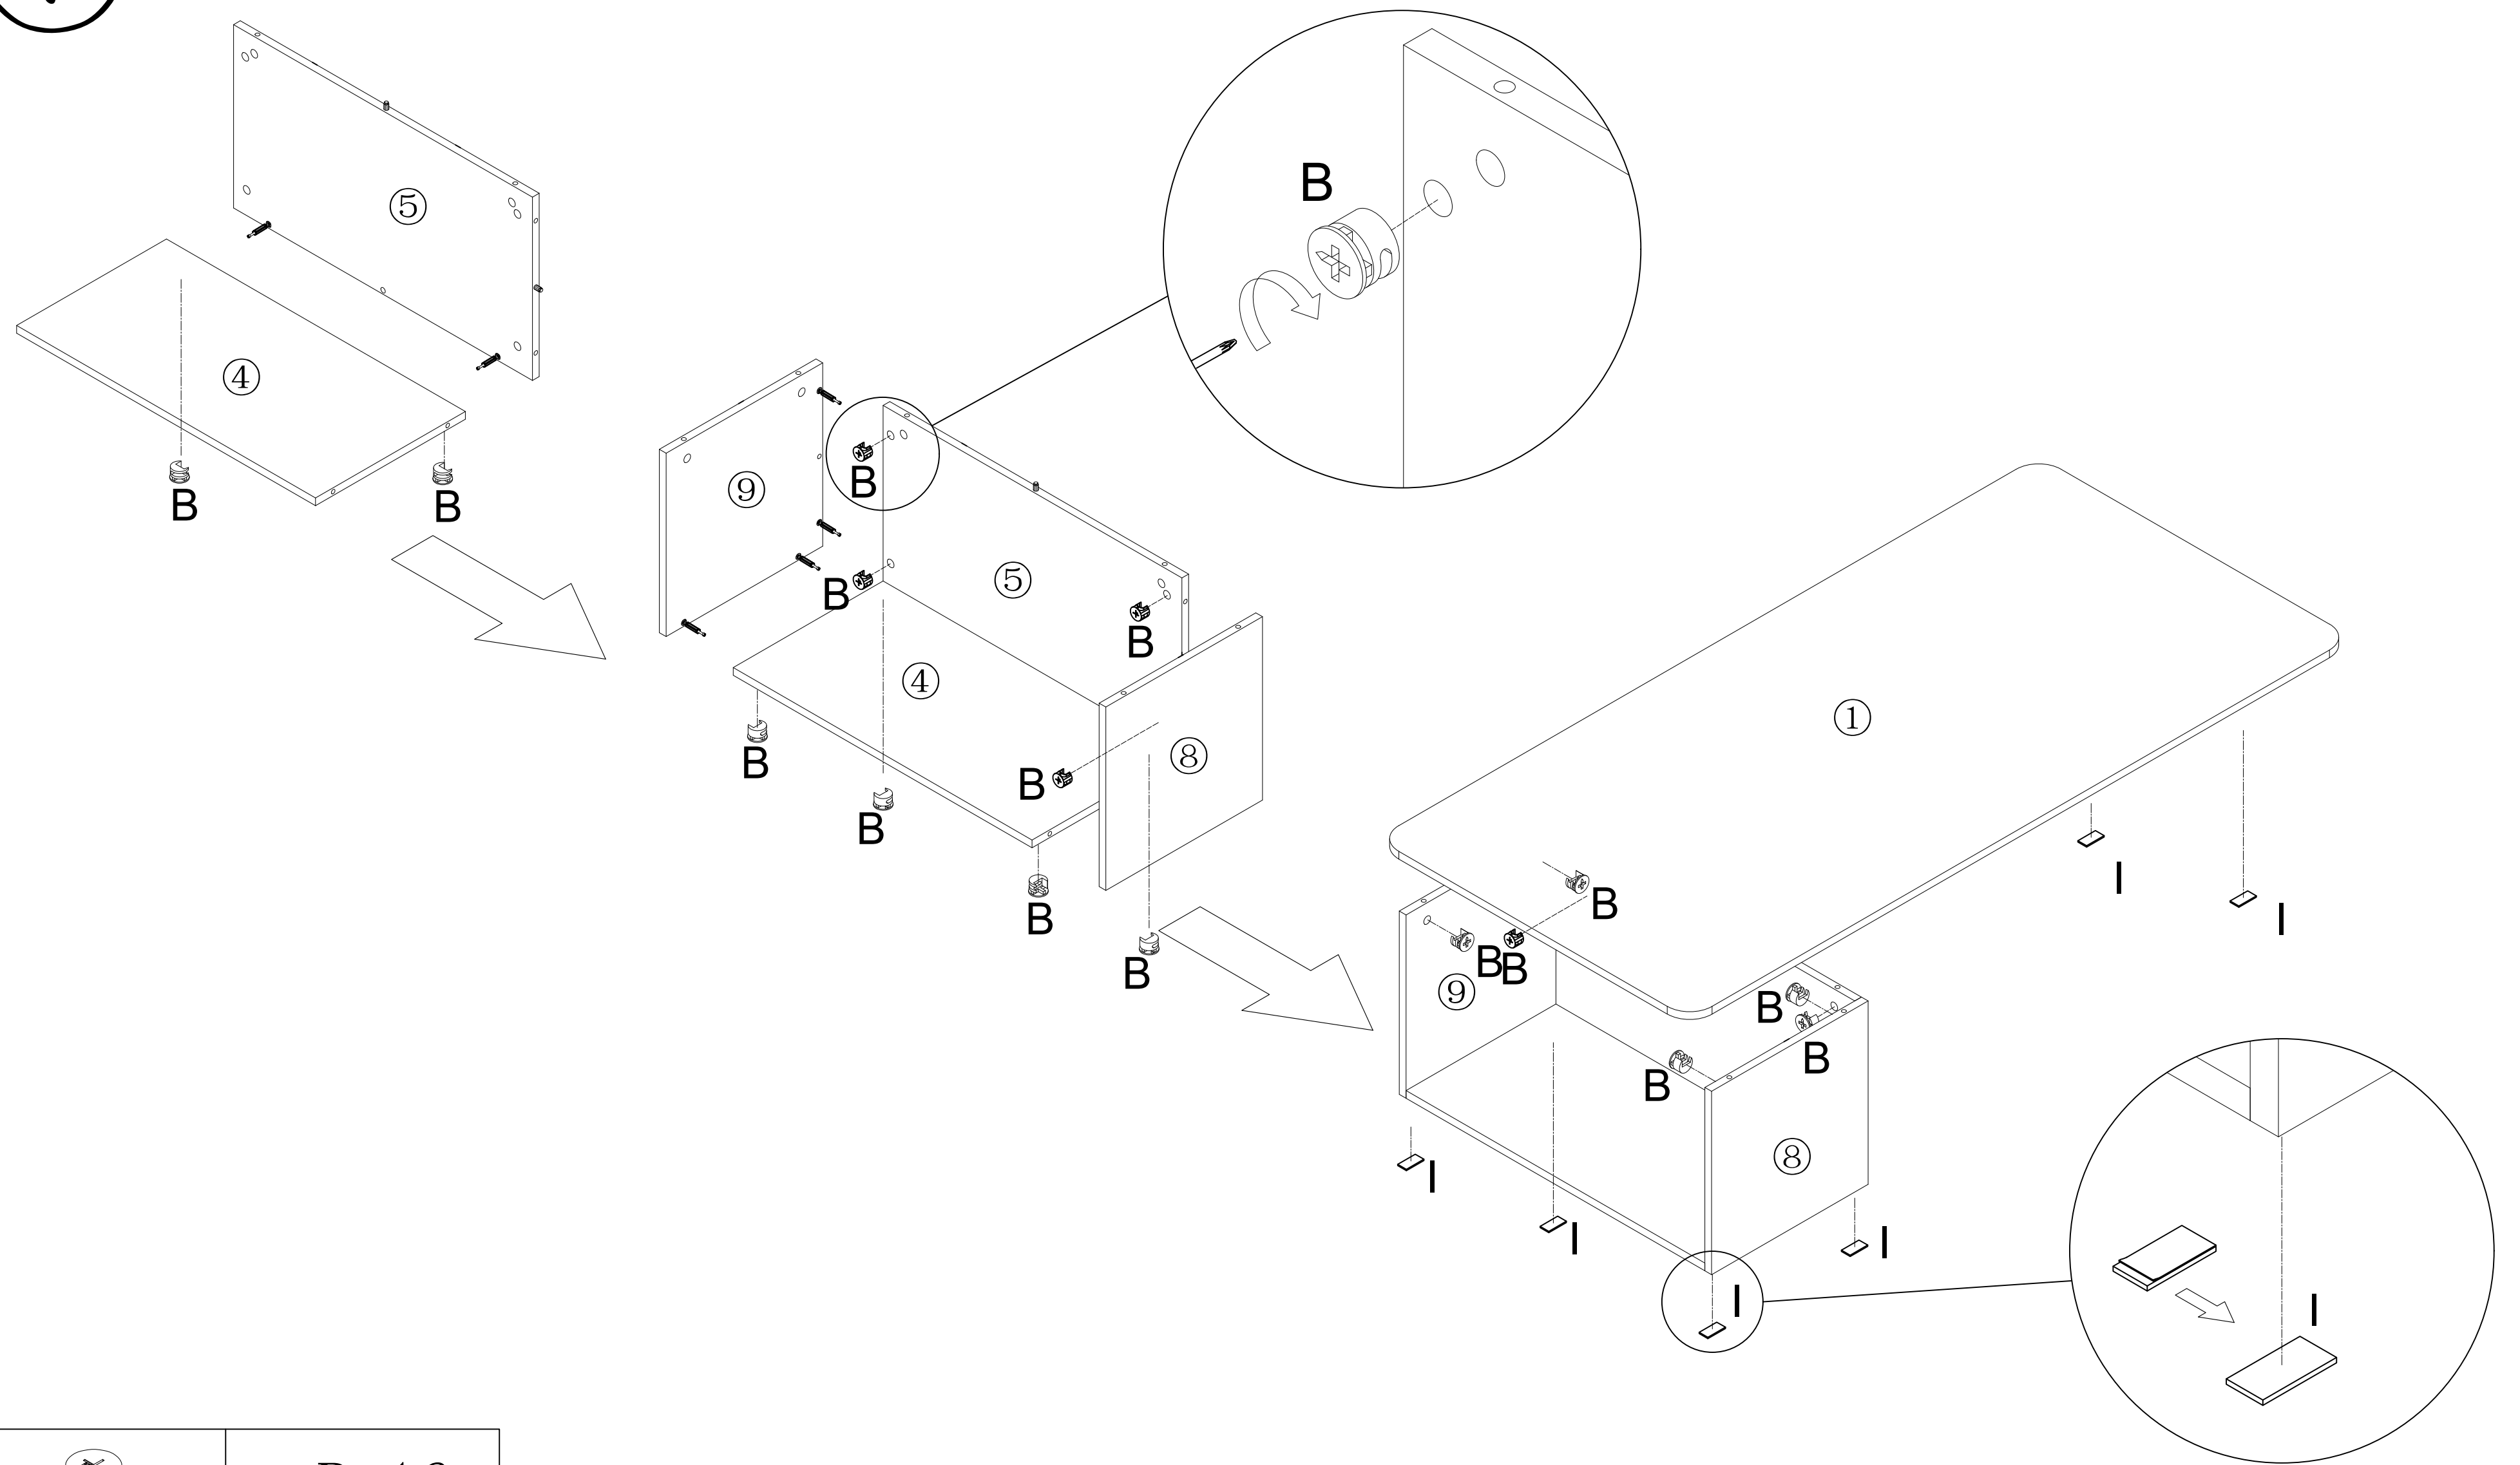


|                                                                                     |      |
|-------------------------------------------------------------------------------------|------|
|  | B*16 |
|  | I*6  |

put B on board ④ ⑤ ⑧ ⑨



8

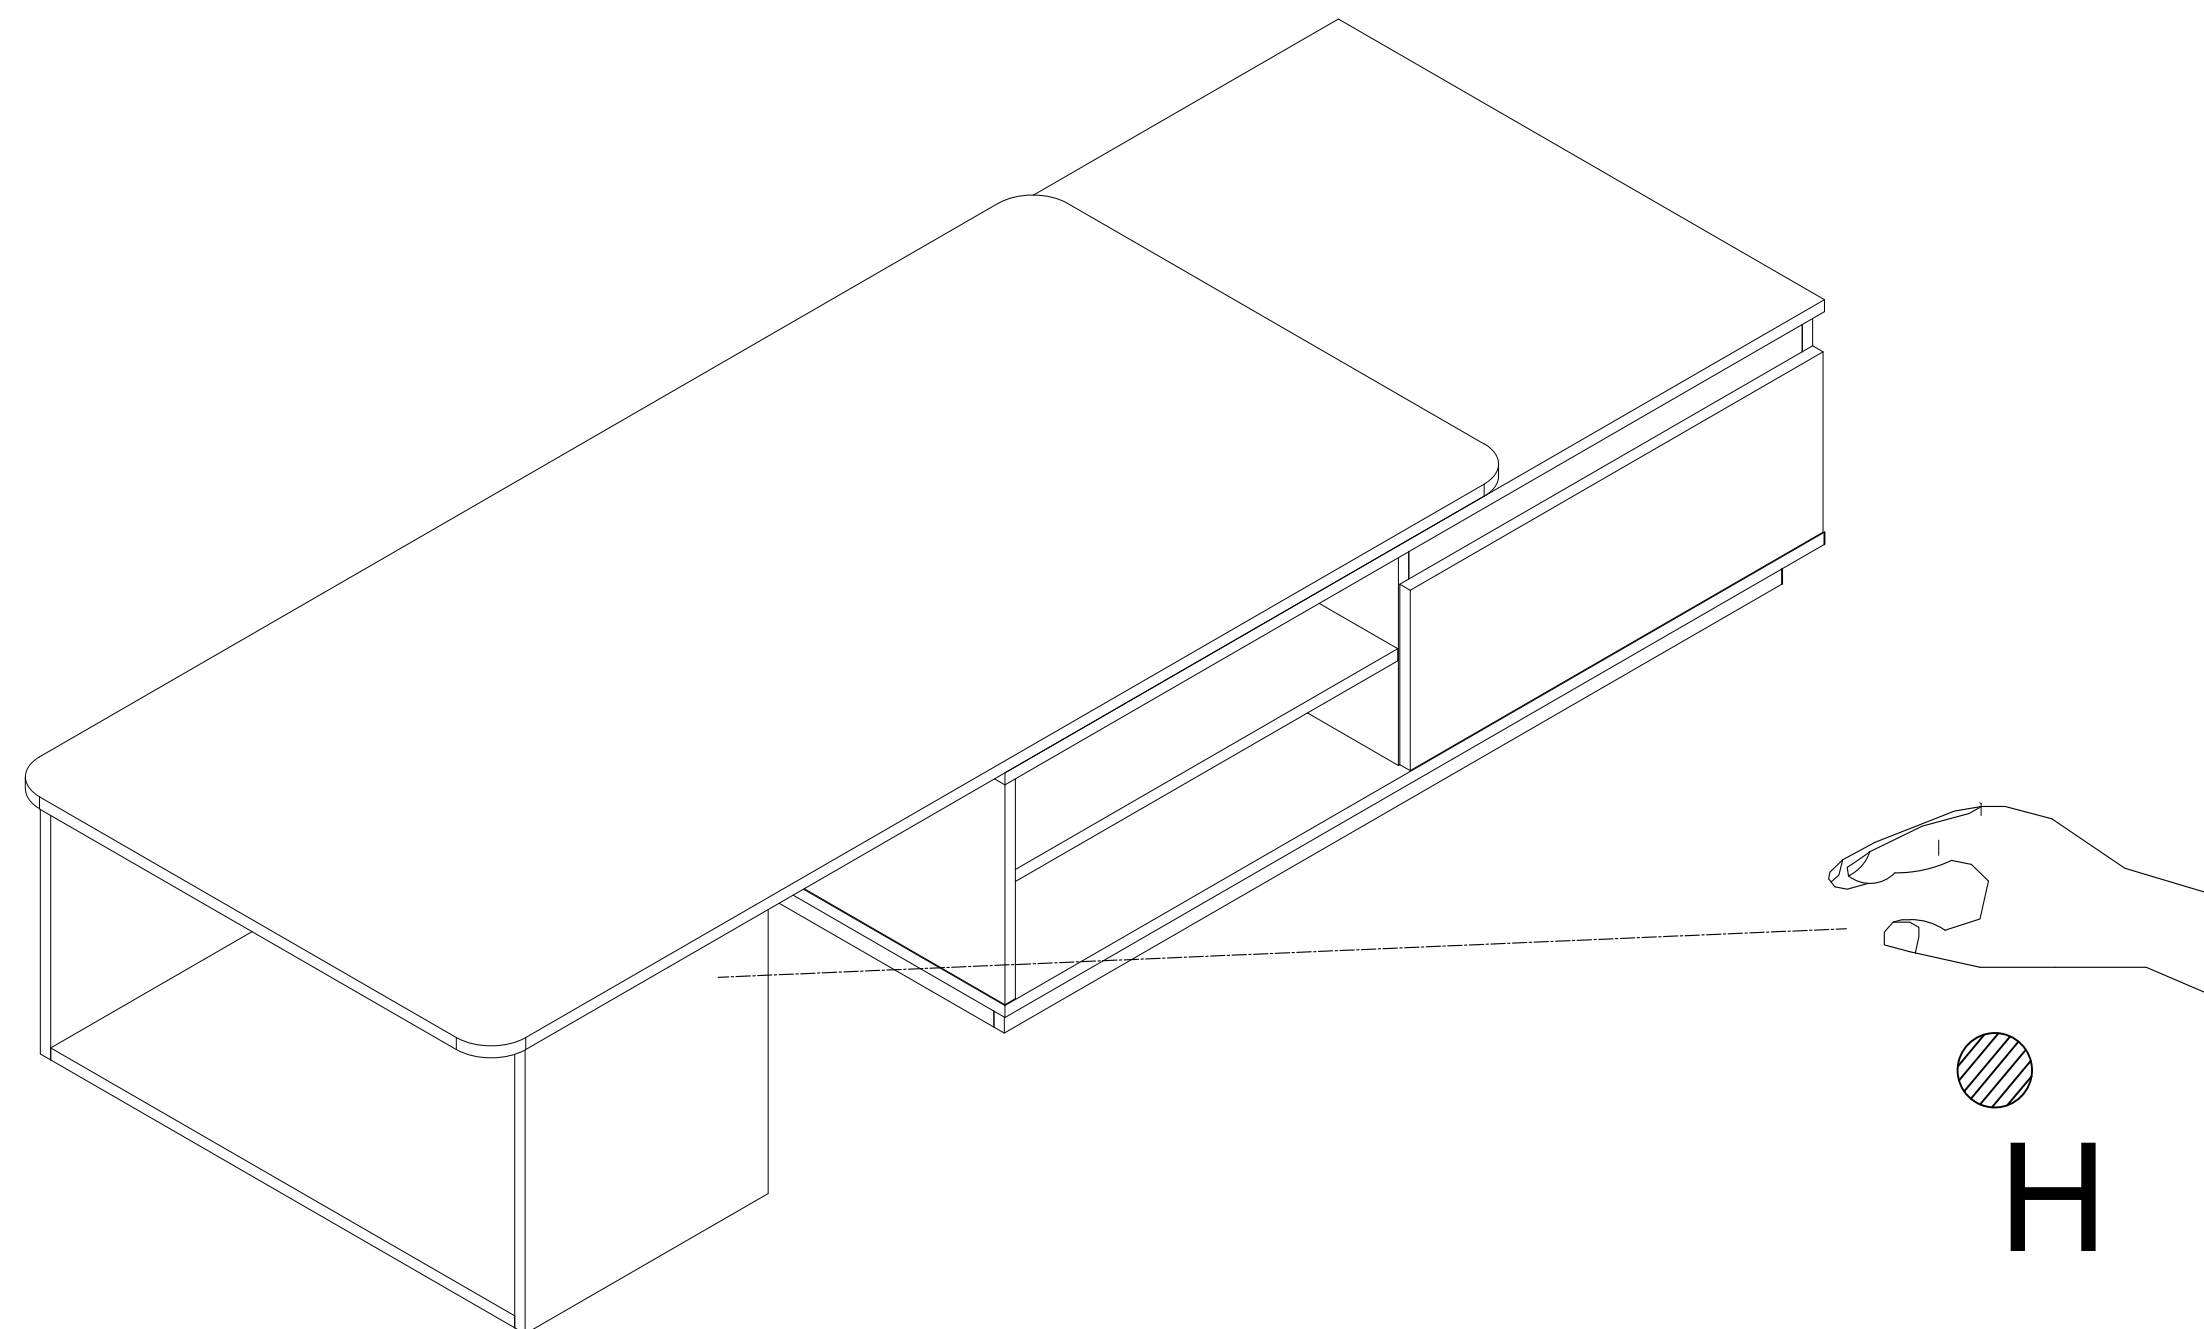

H\*10

9

