
Fixed Window Sash Installation Instructions

Replacement / New Construction application


Note: This window is decorative and the individual panes of glass are NOT weather sealed.

REQUIRED TOOLS

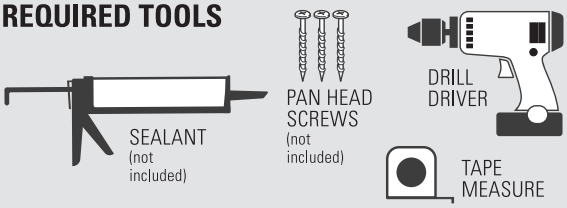


USING SUPPLIED INSTALLATION CLIPS

A

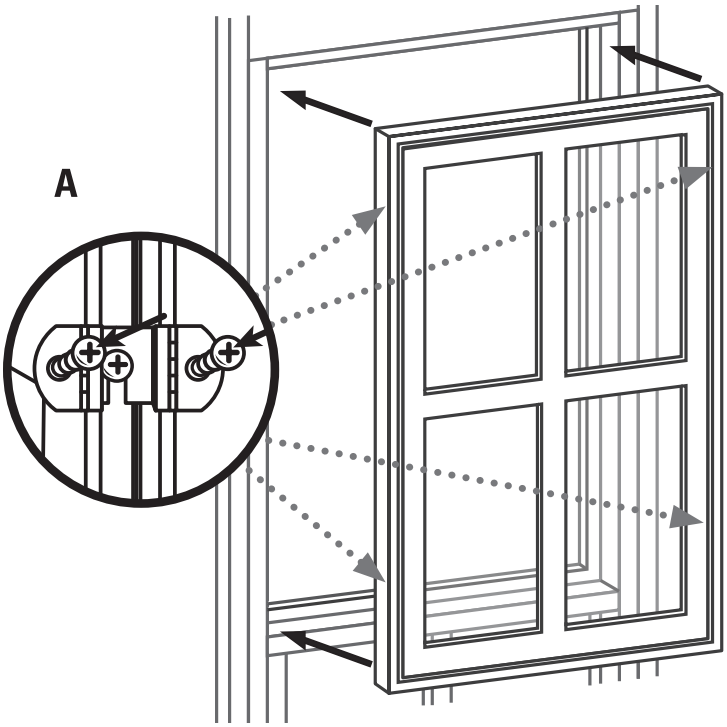

STEP 1. Place the fixed utility widow sash into the rough opening. Align the pre-drilled holes of the installation clip firmly against the rough opening and fasten the window with 8 pan head aluminum screws (not included) (See Fig A).

B

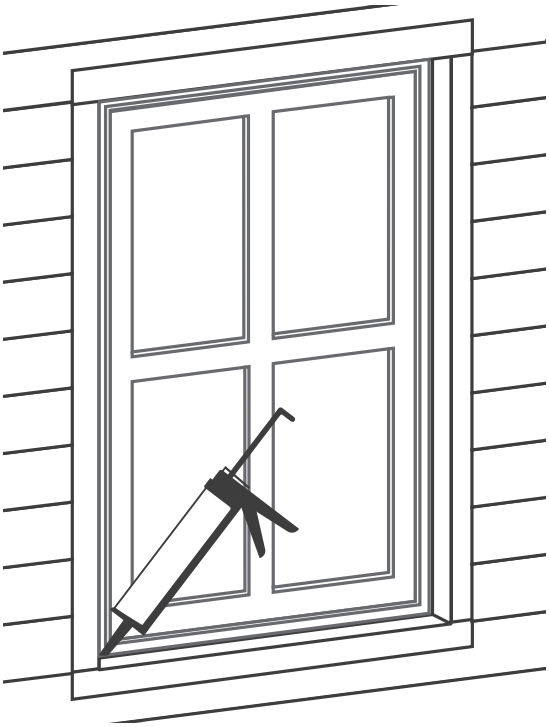

STEP 2. Finally, seal around the inside and the outside of the window with an approved polyurethane based sealant such as Vulkem® or 100% silicone window and door caulk. Trim the interior and the exterior of the window according to your specifications (See fig. B).