




**MANHATTAN  
COMFORT**

---

**NS007**

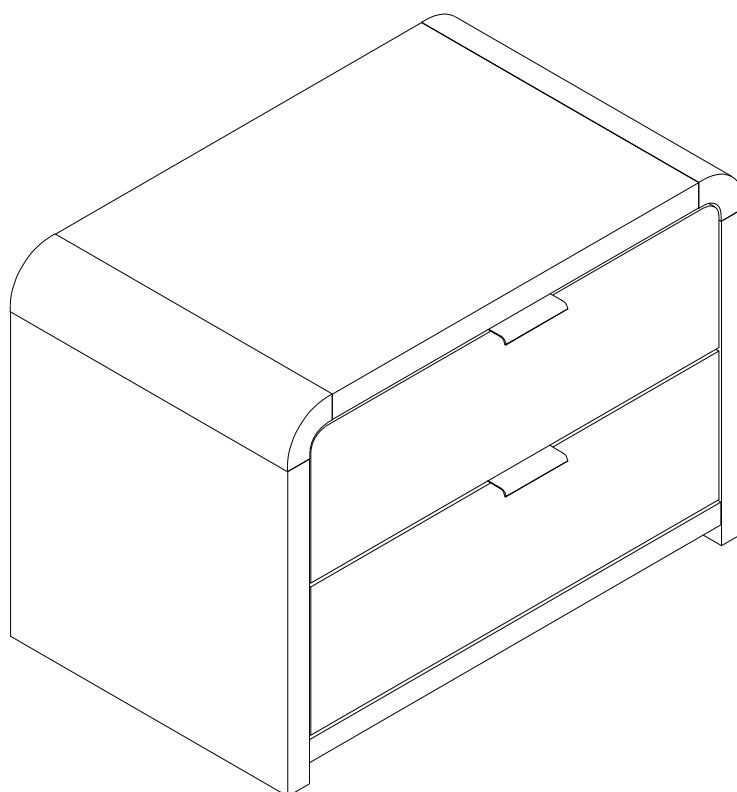




# STOP!


Before beginning the assembly process, ensure all boxes and parts have been delivered.

## FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

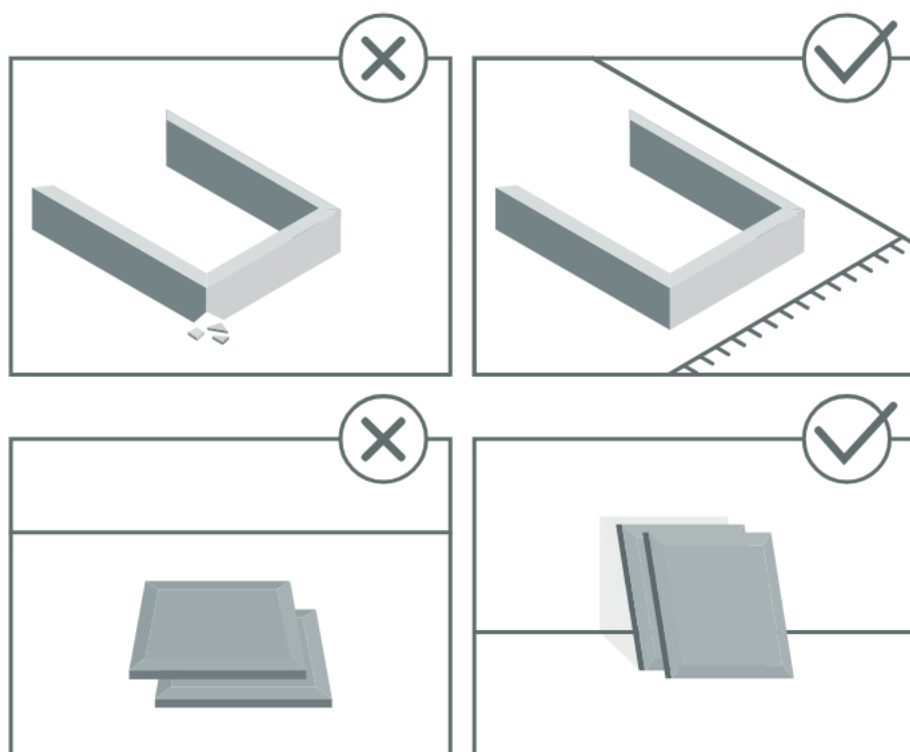

## TOOLS REQUIRED

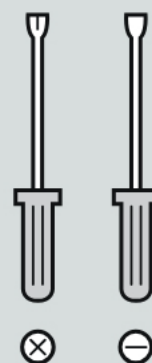

View our assembly video online:  
[WWW.MANHATTANCOMFORT.COM](http://WWW.MANHATTANCOMFORT.COM)



Stuck? Question? We are here to help.  
tel: **908-888-0818**  
e-mail:



Support Site



## Included in this package:

---

- A. TOP PANEL(1)
- B. LOWER HORIZONTAL PANEL(1)
- C. LEFT PANEL (1)
- D. RIGHT PANEL (1)
- E. UPPER BACK PANEL (1)
- F. CURVED PANEL (2)
- G. UPPER HORIZONTAL PANEL (1)
- H. DRAWER UPPER FRONT PANEL (1)
- I. DRAWER LOWER FRONT PANEL (1)
- J. DRAWER LEFT PANEL (2)
- K. DRAWER RIGHT PANEL (2)
- L. DRAWER BACK PANEL (2)
- M. DRAWER BOTTOM PANEL (2)
- N. DRAWER SUPPORT PANEL (2)
- O.LOWER BACK PANEL(1)

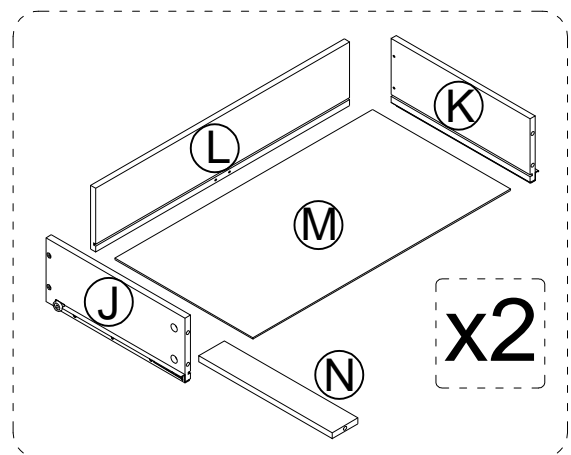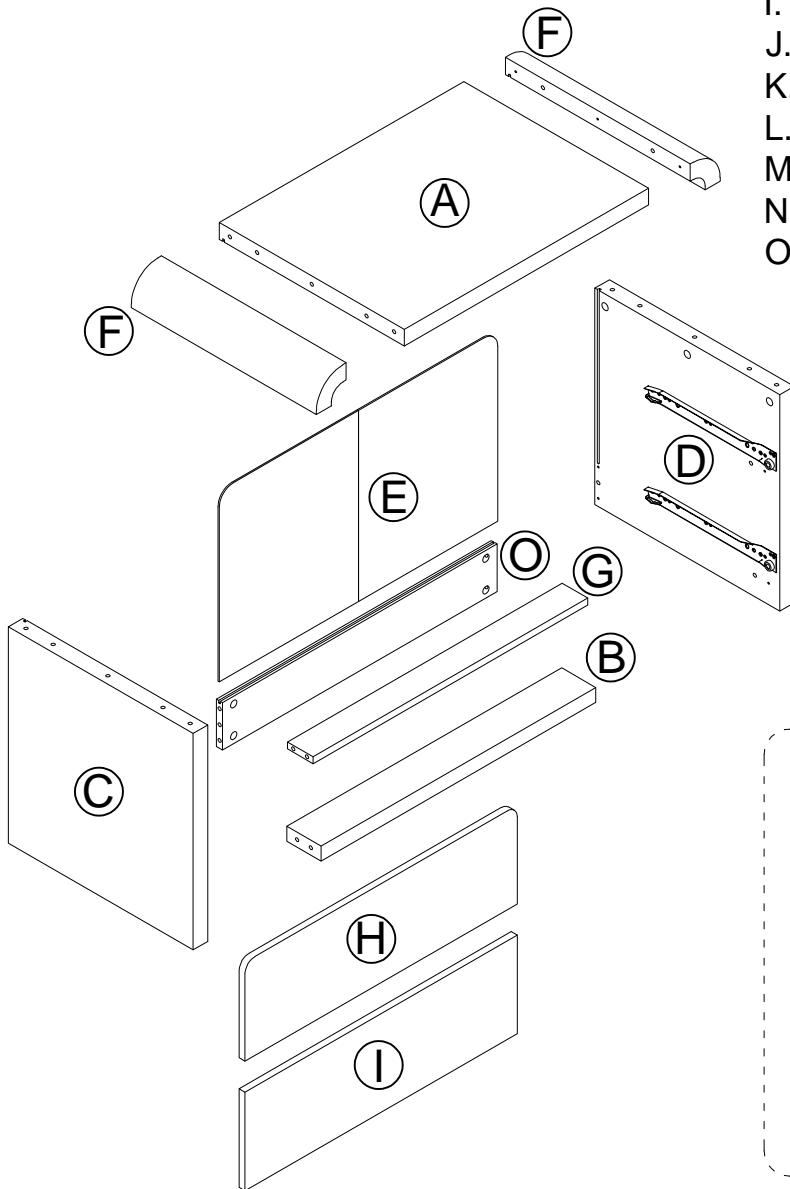


# Hardware Identification


- ① KD BOLT - 30pcs  
L=35mm




- ② KD LARGE CAM - 20pcs  
Ø15\*11mm



- ③ COVER CAP - 30pcs




- ④ WOOD DOWEL - 14pcs  
Ø8\*30mm




- ⑤ KD SMALL CAM - 10pcs  
Ø15\*9mm




- ⑥ SCREW - 12pcs  
Ø4\*38mm




- ⑦ BLACK HANDLE-2pcs




- ⑧ SCREW - 4pcs  
Ø3.5\*12mm




- ⑨ PLASTIC WEDGE - 6pcs




- ⑩ SCREW - 6pcs  
Ø3\*17mm




- ⑪ GOLD HANDLE-2pcs



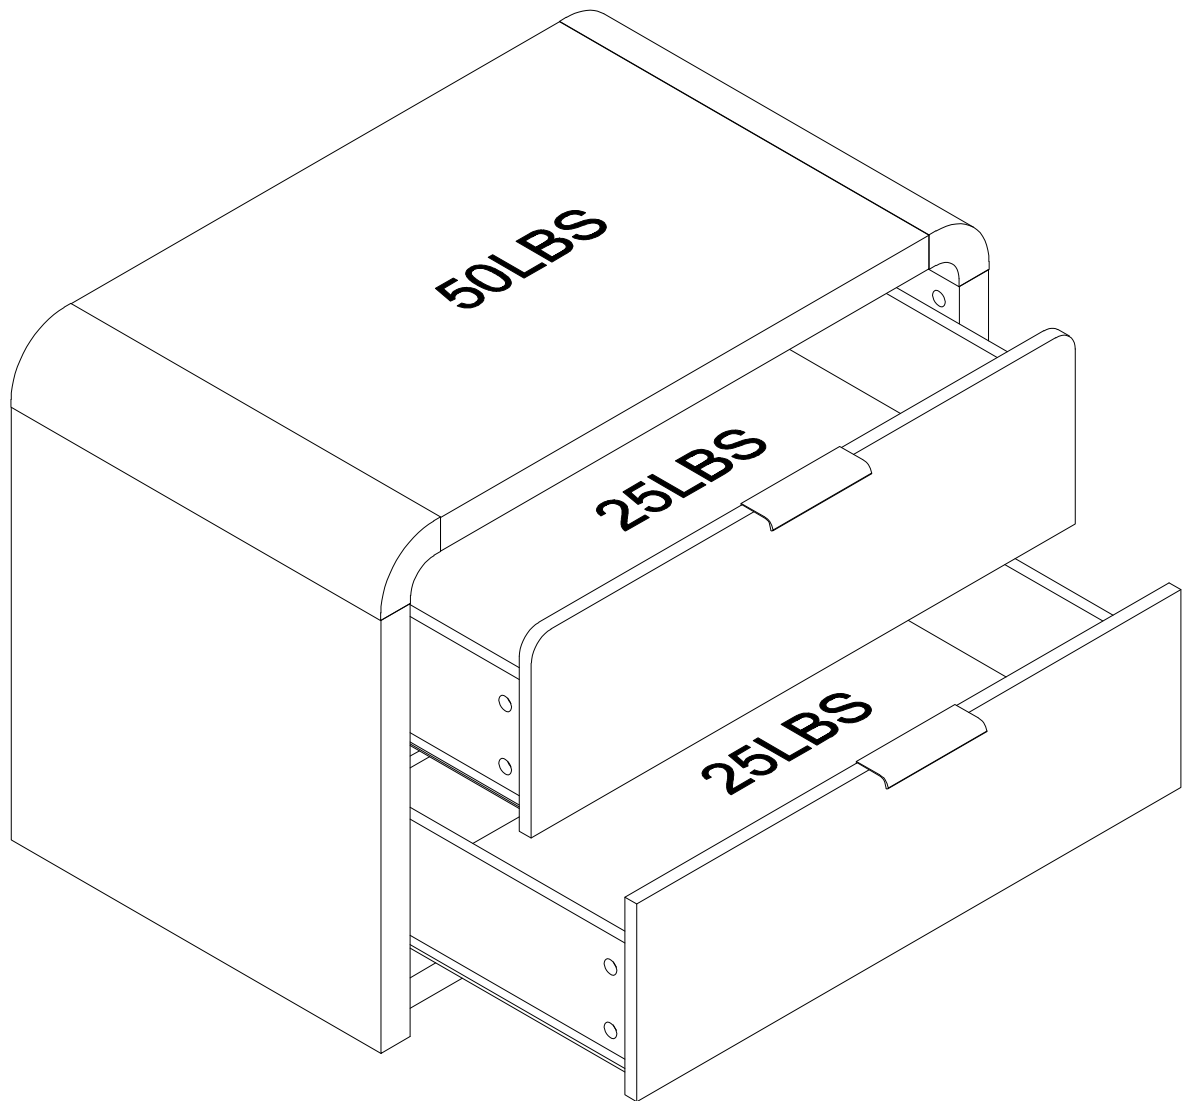


## Step 1:

\* Insert Twenty KD BOLT (1) to the LEFT PANEL (C), RIGHT PANEL(D) and Two CURVED PANEL(F)

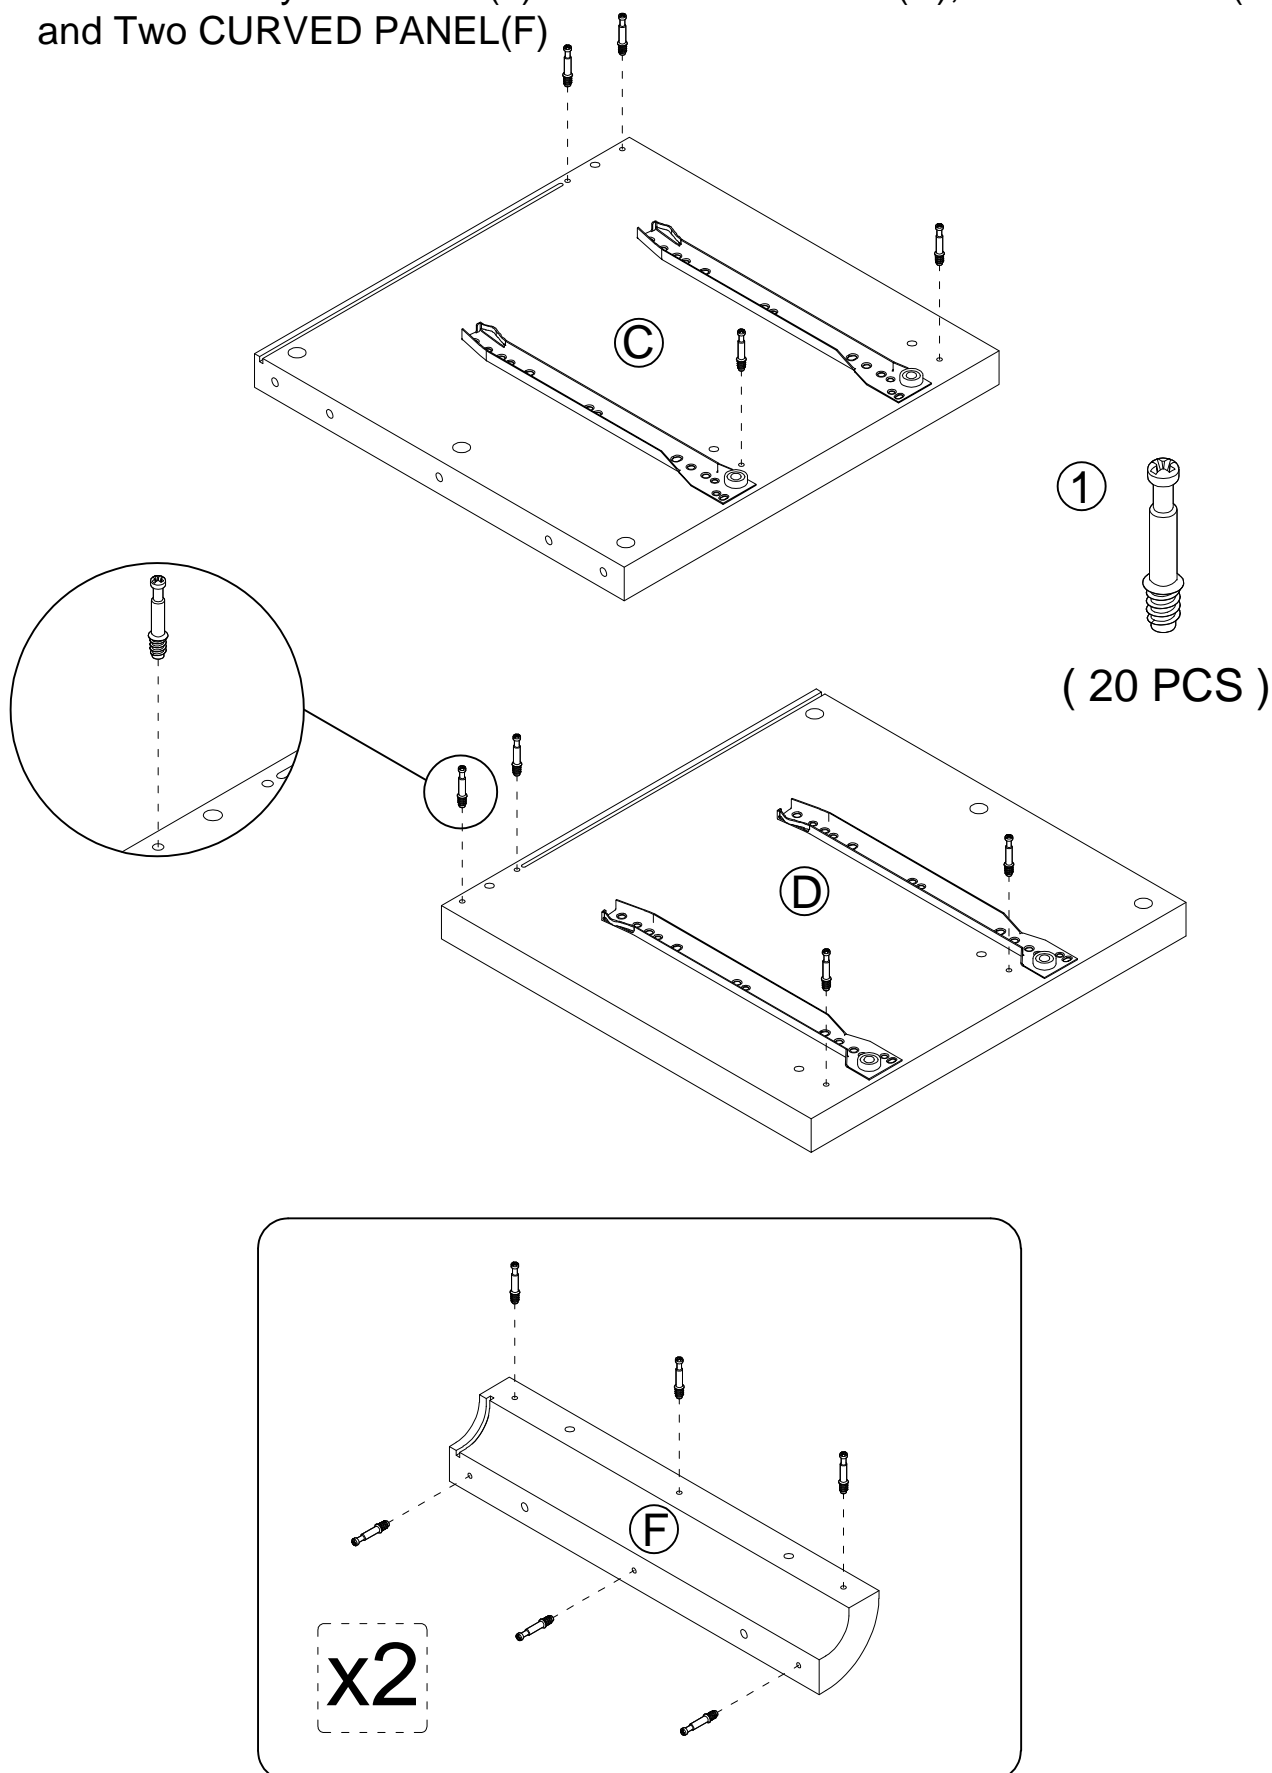


## Step 2:

\* Attach the LOWER HORIZONTAL PANEL(B) , UPPER HORIZONTAL PANEL(G) and LOWER BACK PANEL(O) to the LEFT PANEL(C) by the Four KD LARGE CAM (2) , Four COVER CAP (3) and Three WOOD DOWEL (4) .

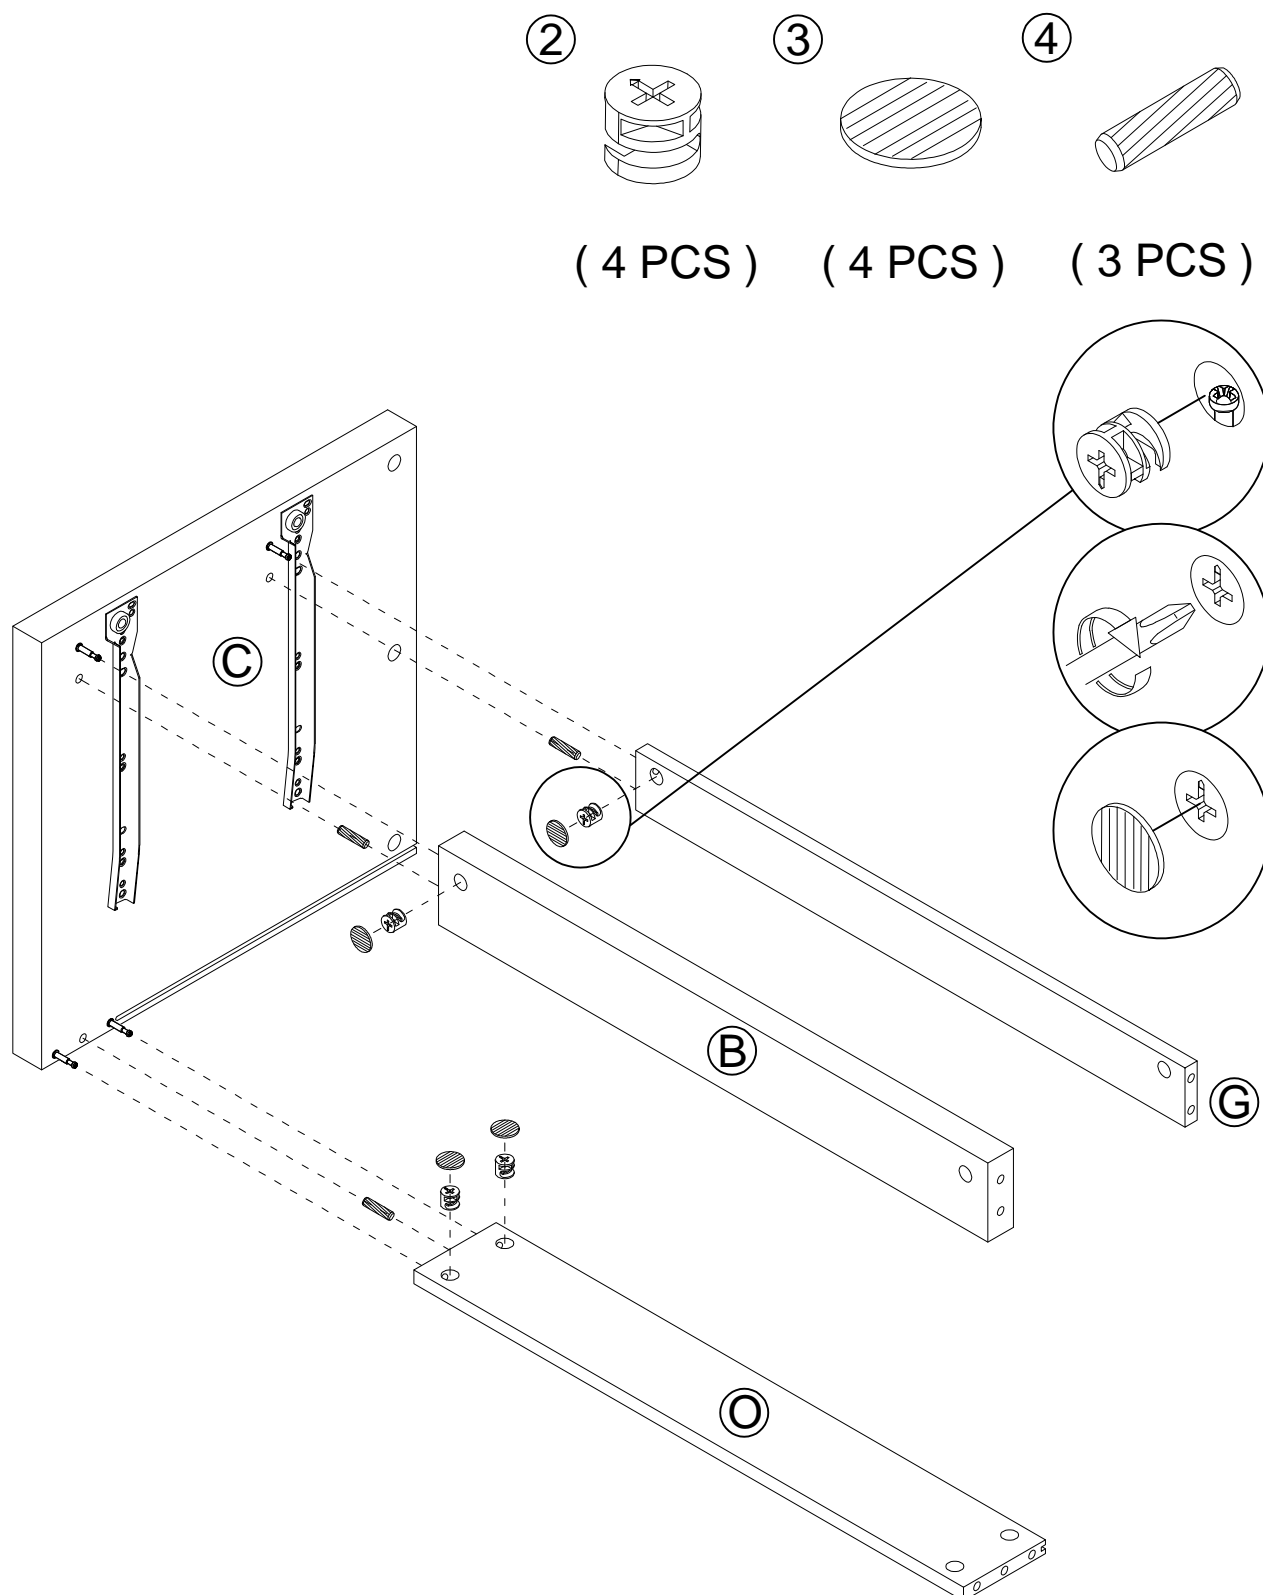

## Step 3:

\* Attach the RIGHT PANEL (D) to the LOWER HORIZONTAL PANEL(B), UPPER HORIZONTAL PANEL(G) and LOWER BACK PANEL(O) by the Four KD LARGE CAM (2) , Four COVER CAP (3) and Three WOOD DOWEL (4) .

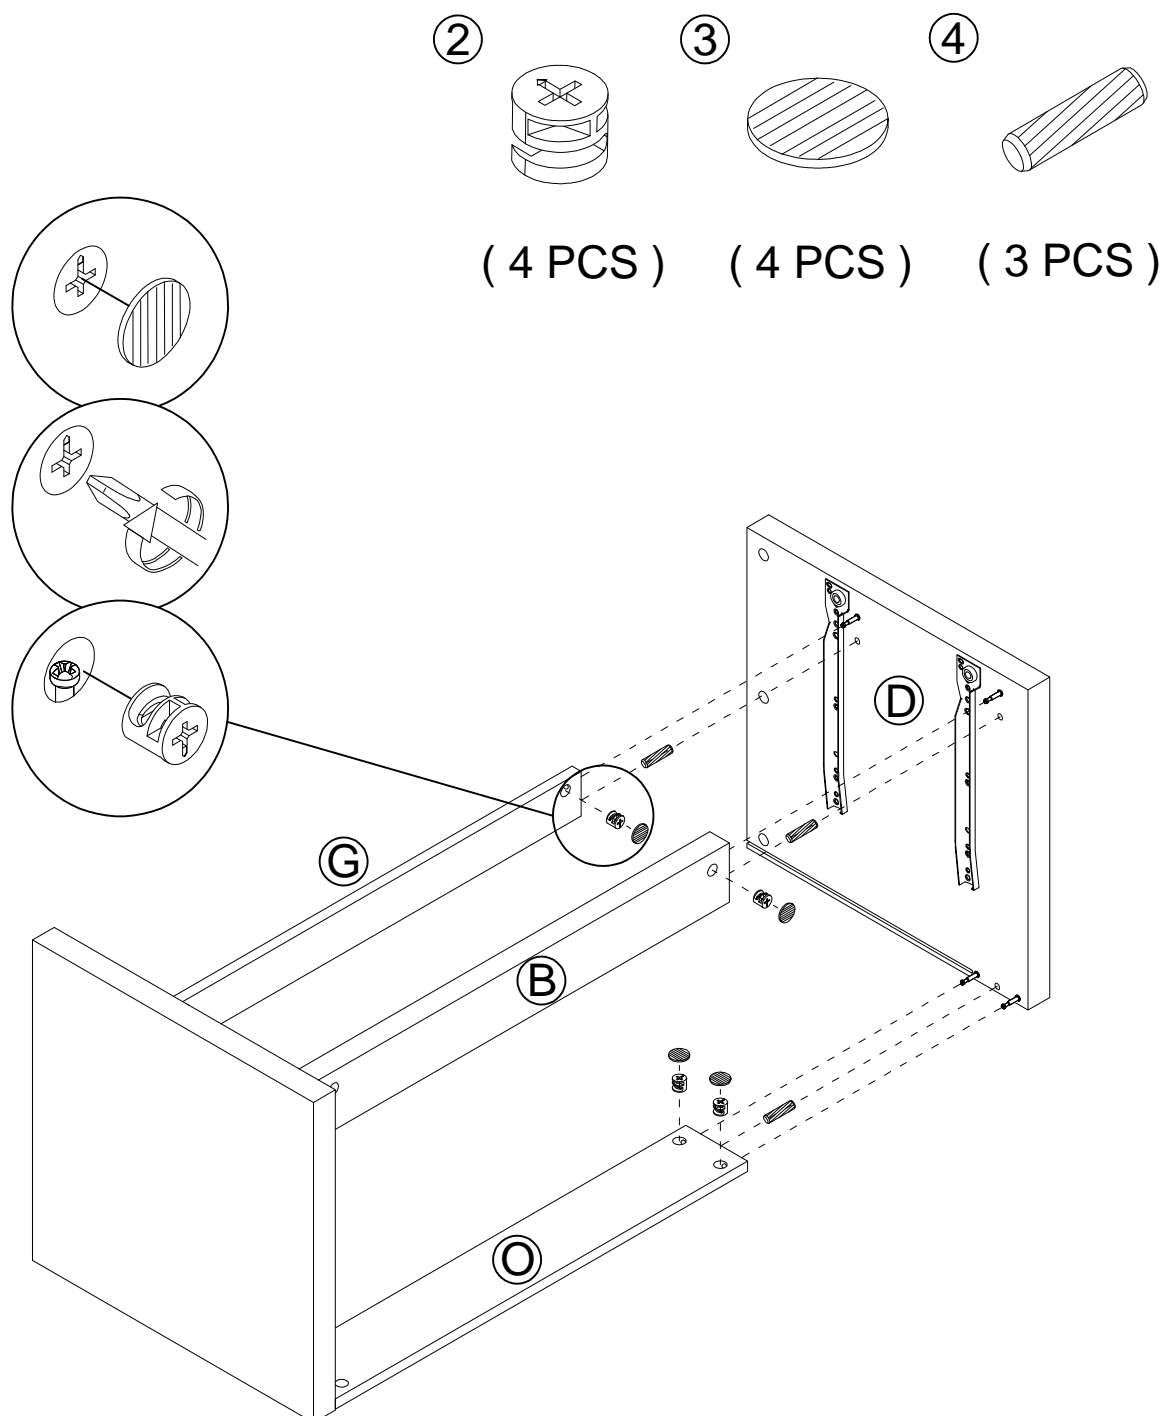




## Step 4:

---


\* Insert the UPPER BACK PANEL(E) to the stand.

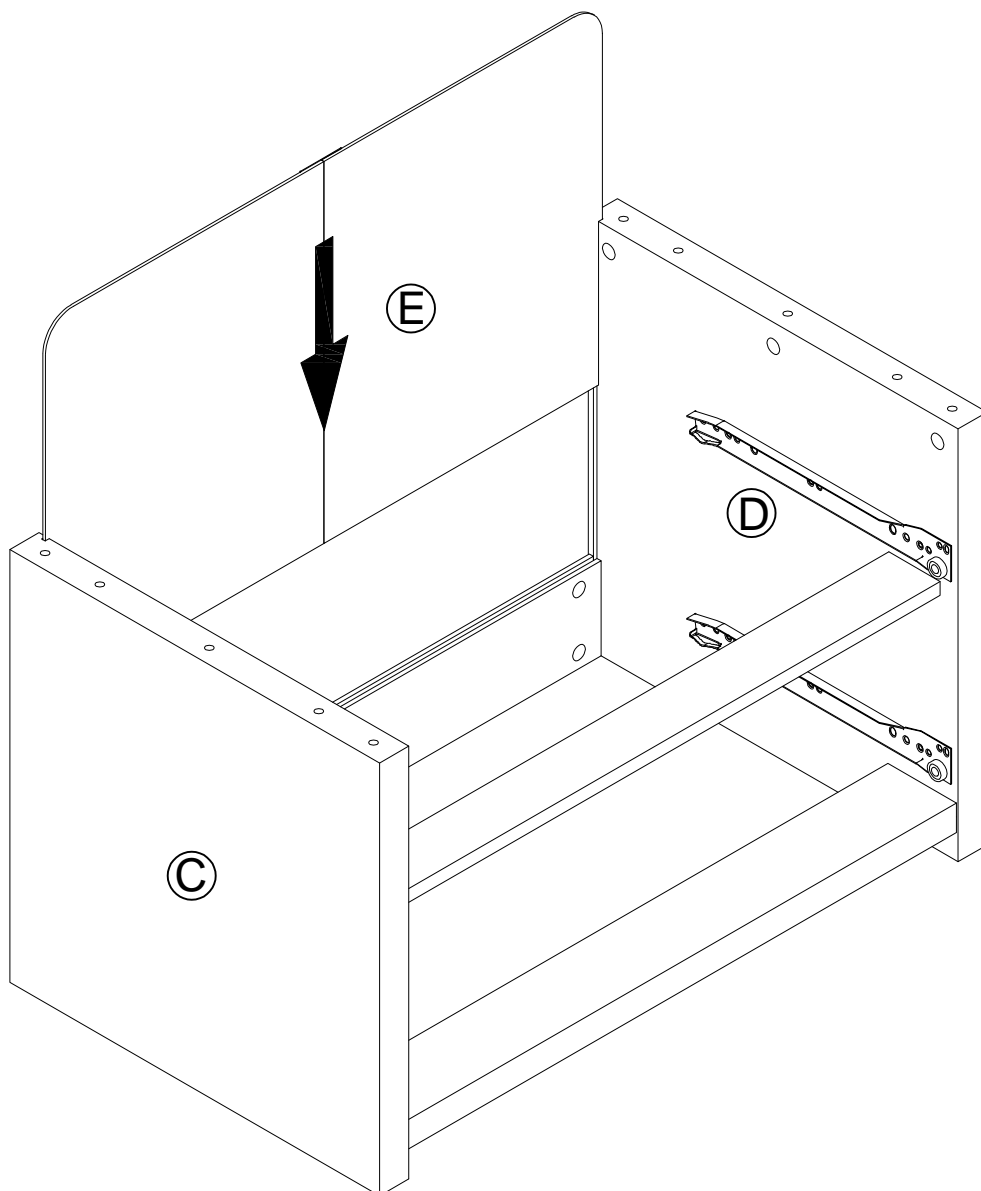

## Step 5:


\* Attach the Two CURVED PANEL(F) to the TOP PANEL(A) by the Six KD LARGE CAM (2) , Six COVER CAP (3) and Four WOOD DOWEL (4) .

②




( 6 PCS )

③




( 6 PCS )

④





( 4 PCS )

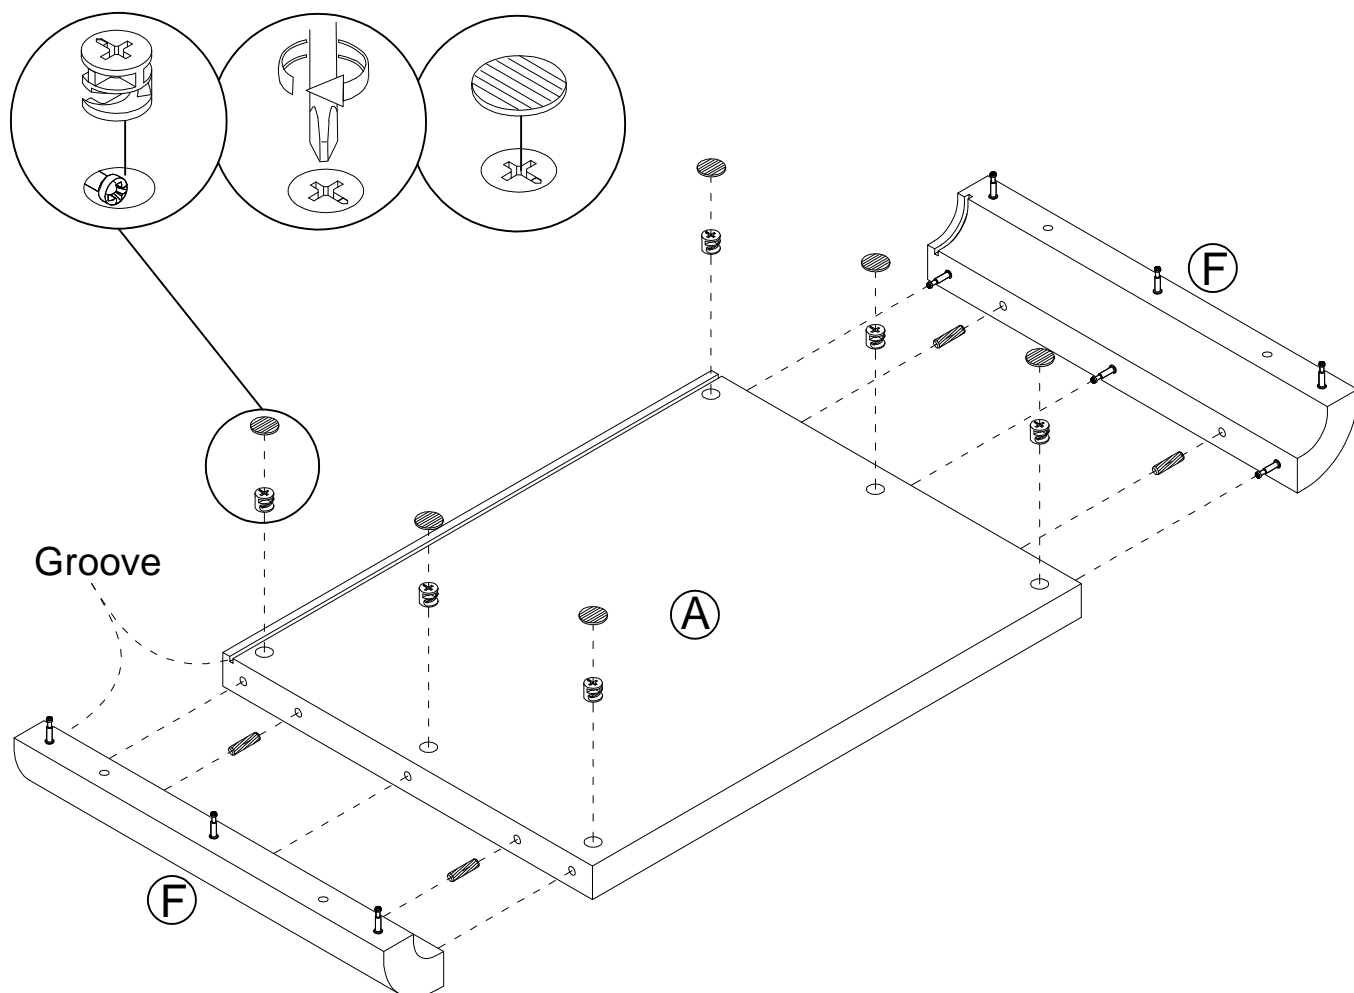


## Step 6:

\* Attach the Two CURVED PANEL(F) to the LEFT PANEL(C) and RIGHT PANEL(D) by the Six KD LARGE CAM (2) , Six COVER CAP (3) and Four WOOD DOWEL (4) .

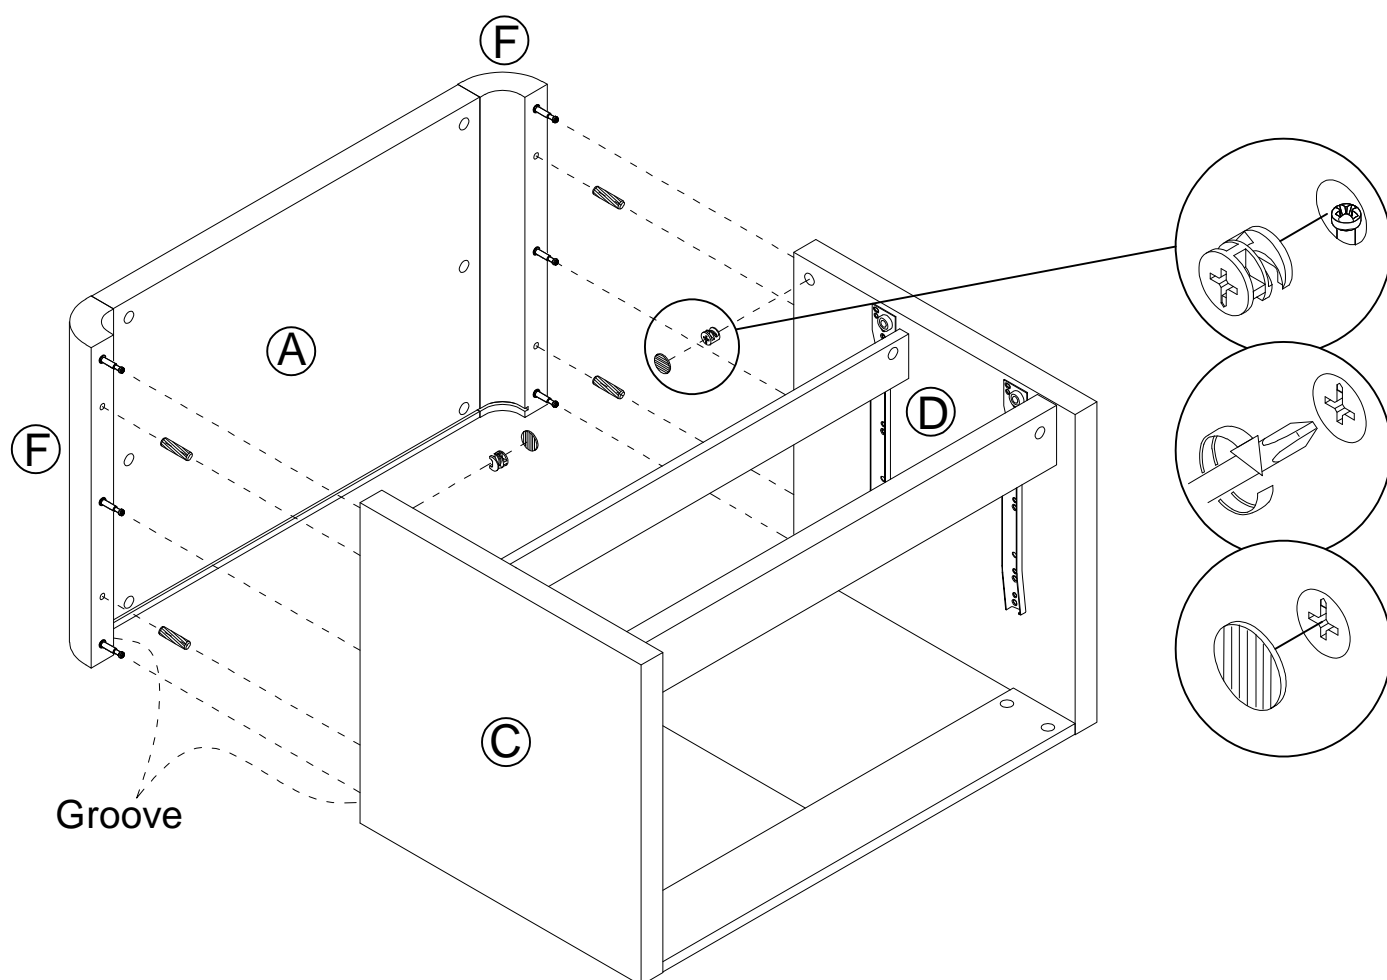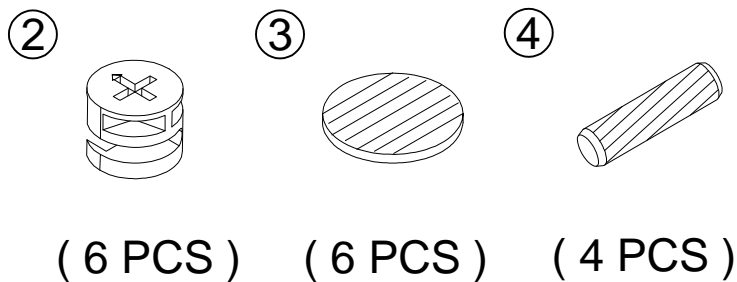

## Step 7:


\* Assemble the DRAWER BACK PANEL(L) to the DRAWER LEFT PANEL (J) and DRAWER RIGHT PANEL (K) by the SCREW (6) .

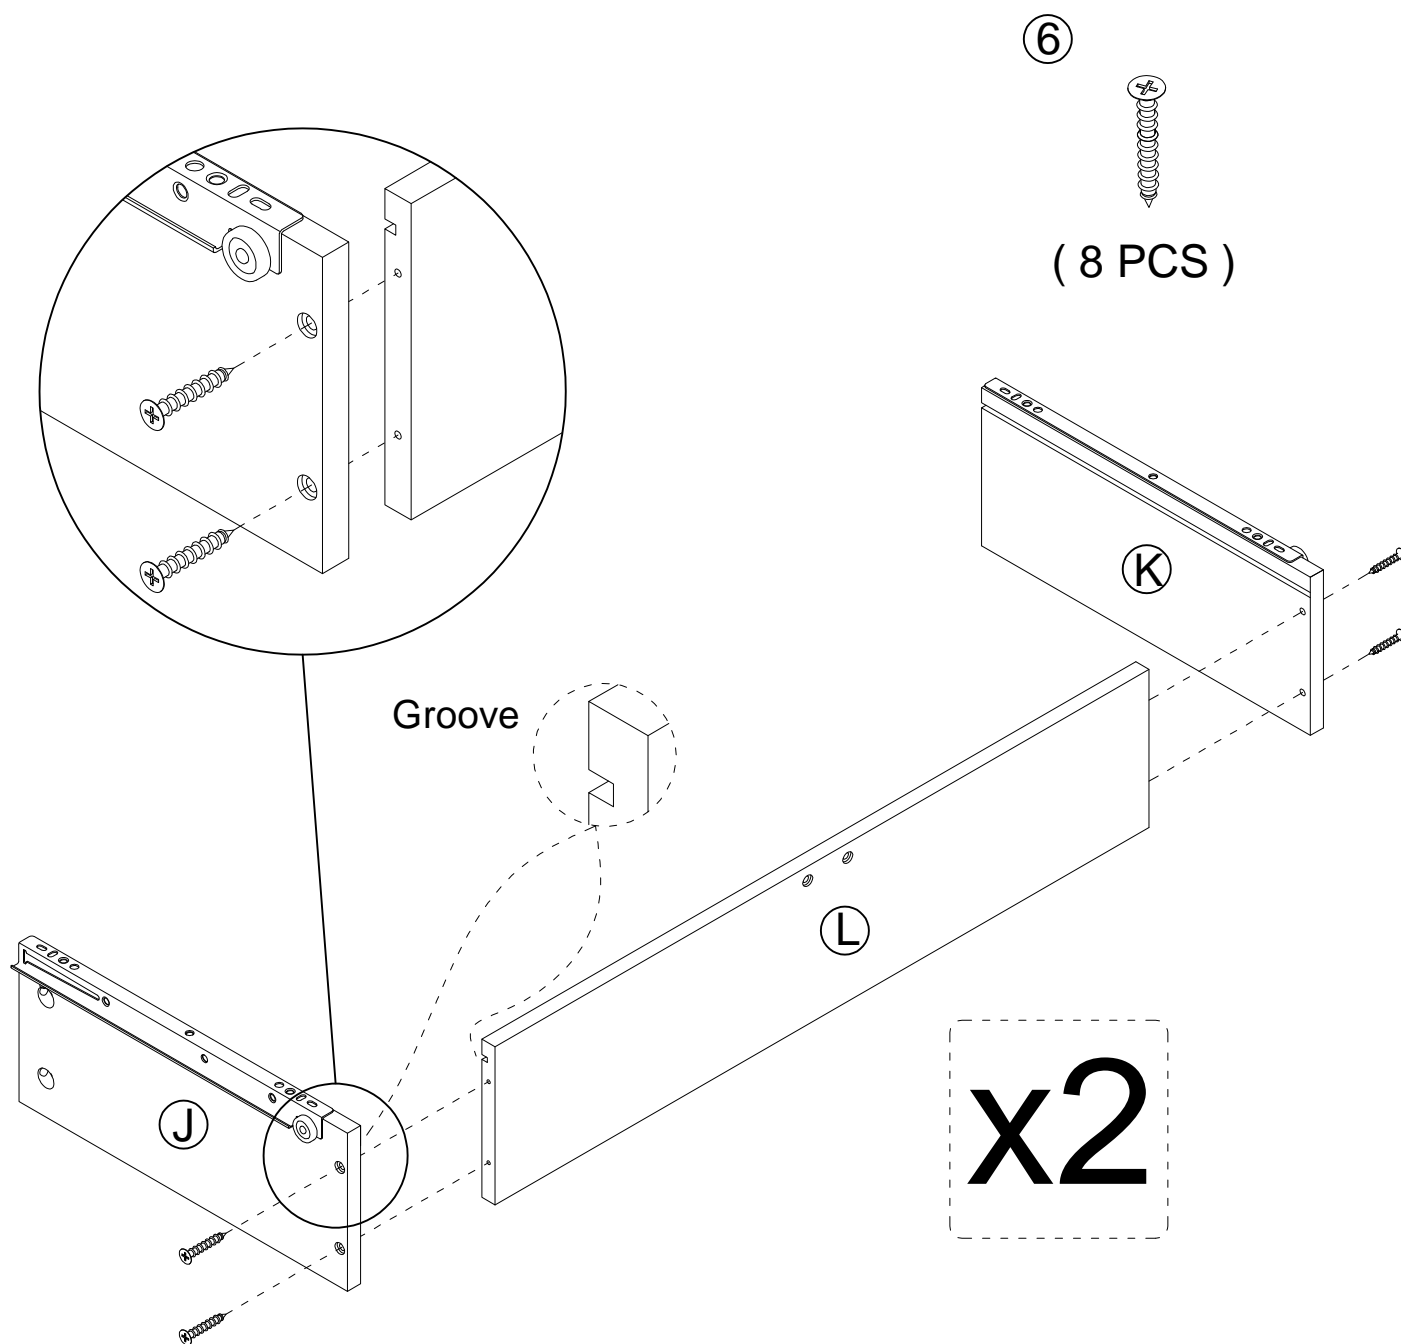

## Step 8:

---

- \* Slide in the DRAWER BOTTOM PANEL (M).

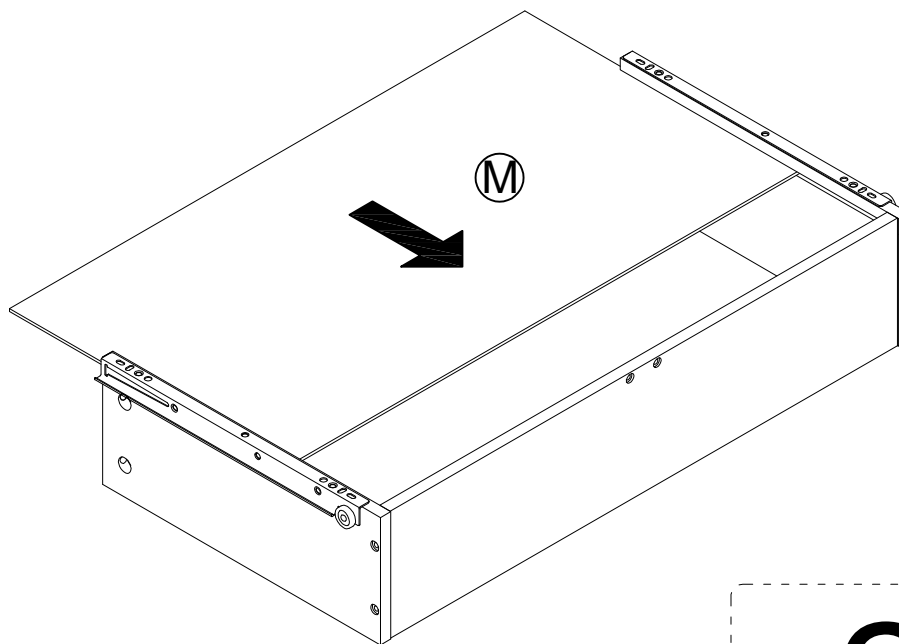


x2


## Step 9:

\* Assemble the DRAWER SUPPORT PANEL (N) to the DRAWER TRAY by the SCREW (6) .

⑥



( 4 PCS )

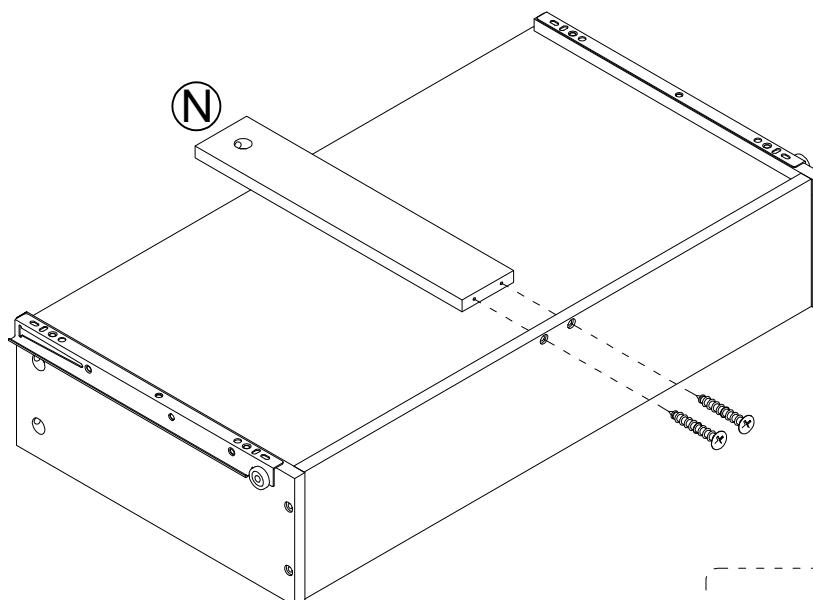


x2

## Step 10:


\* Insert Ten KD BOLT (1) to the DRAWER UPPER FRONT PANEL (H) and DRAWER LOWER FRONT PANEL (I).

\* Attach the Two BLACK HANDLE(7) or Two GOLD HANDLE(11) to the DRAWER UPPER FRONT PANEL (H) and DRAWER LOWER FRONT PANEL (I) by the SCREW (8).

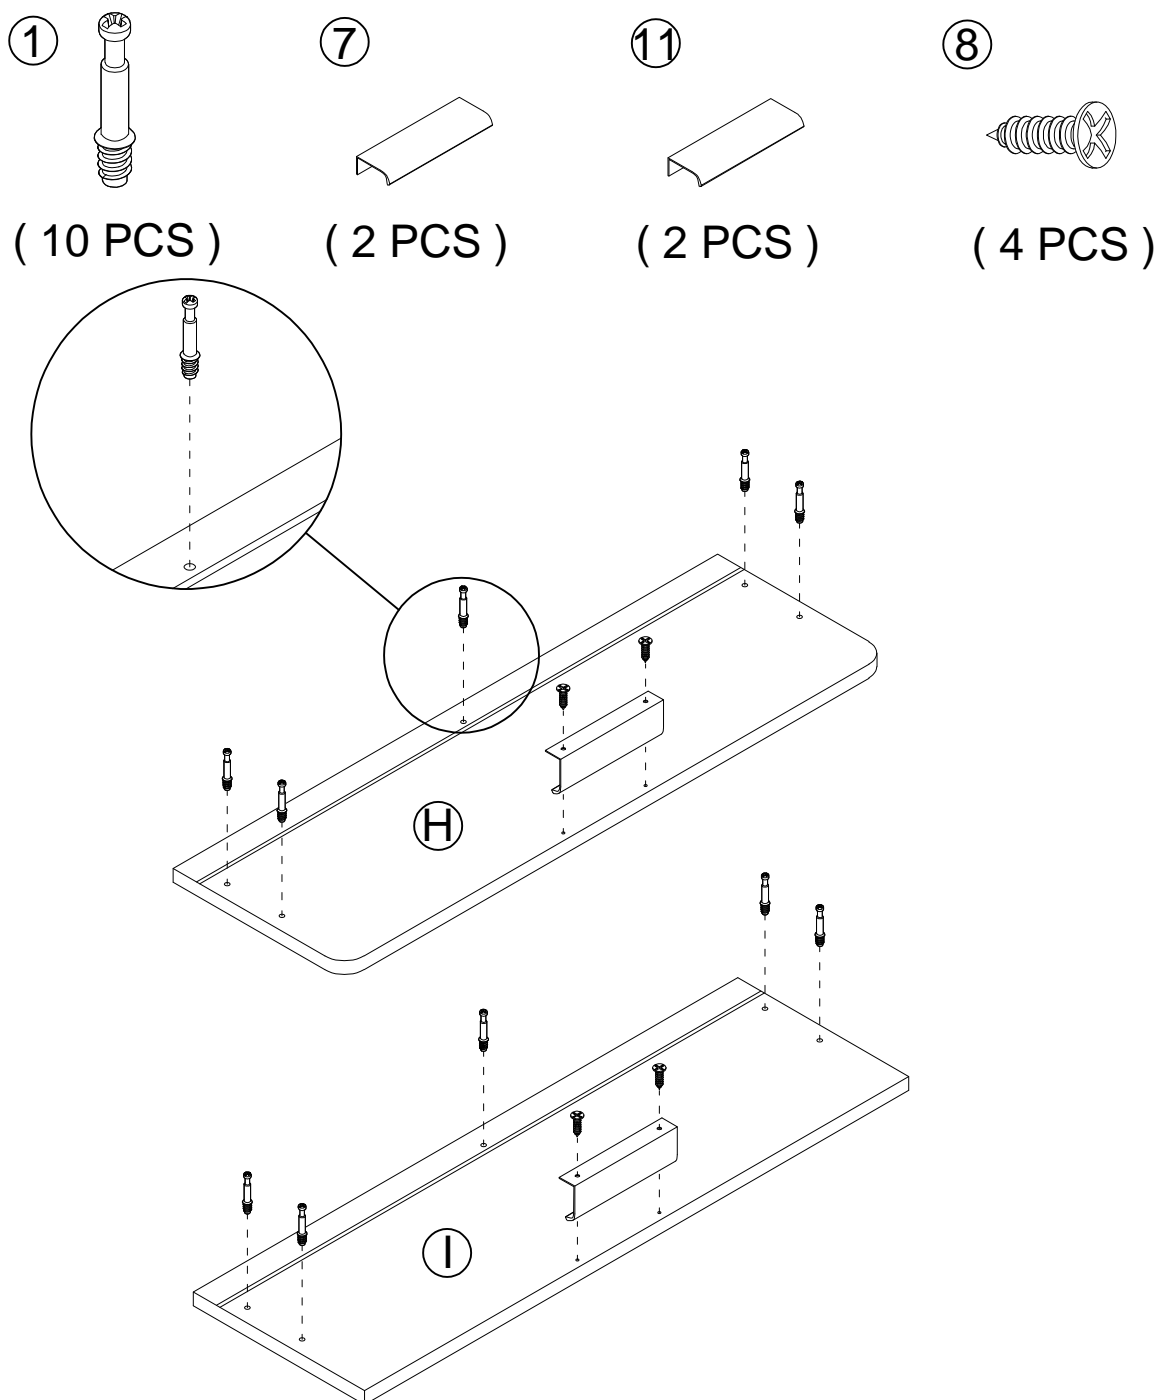

## Step 11:

\* Assemble the DRAWER UPPER FRONT PANEL (H) and DRAWER LOWER FRONT PANEL (I) to the DRAWER TRAY by the Ten KD SMALL CAM (5) and Ten COVER CAP (3).


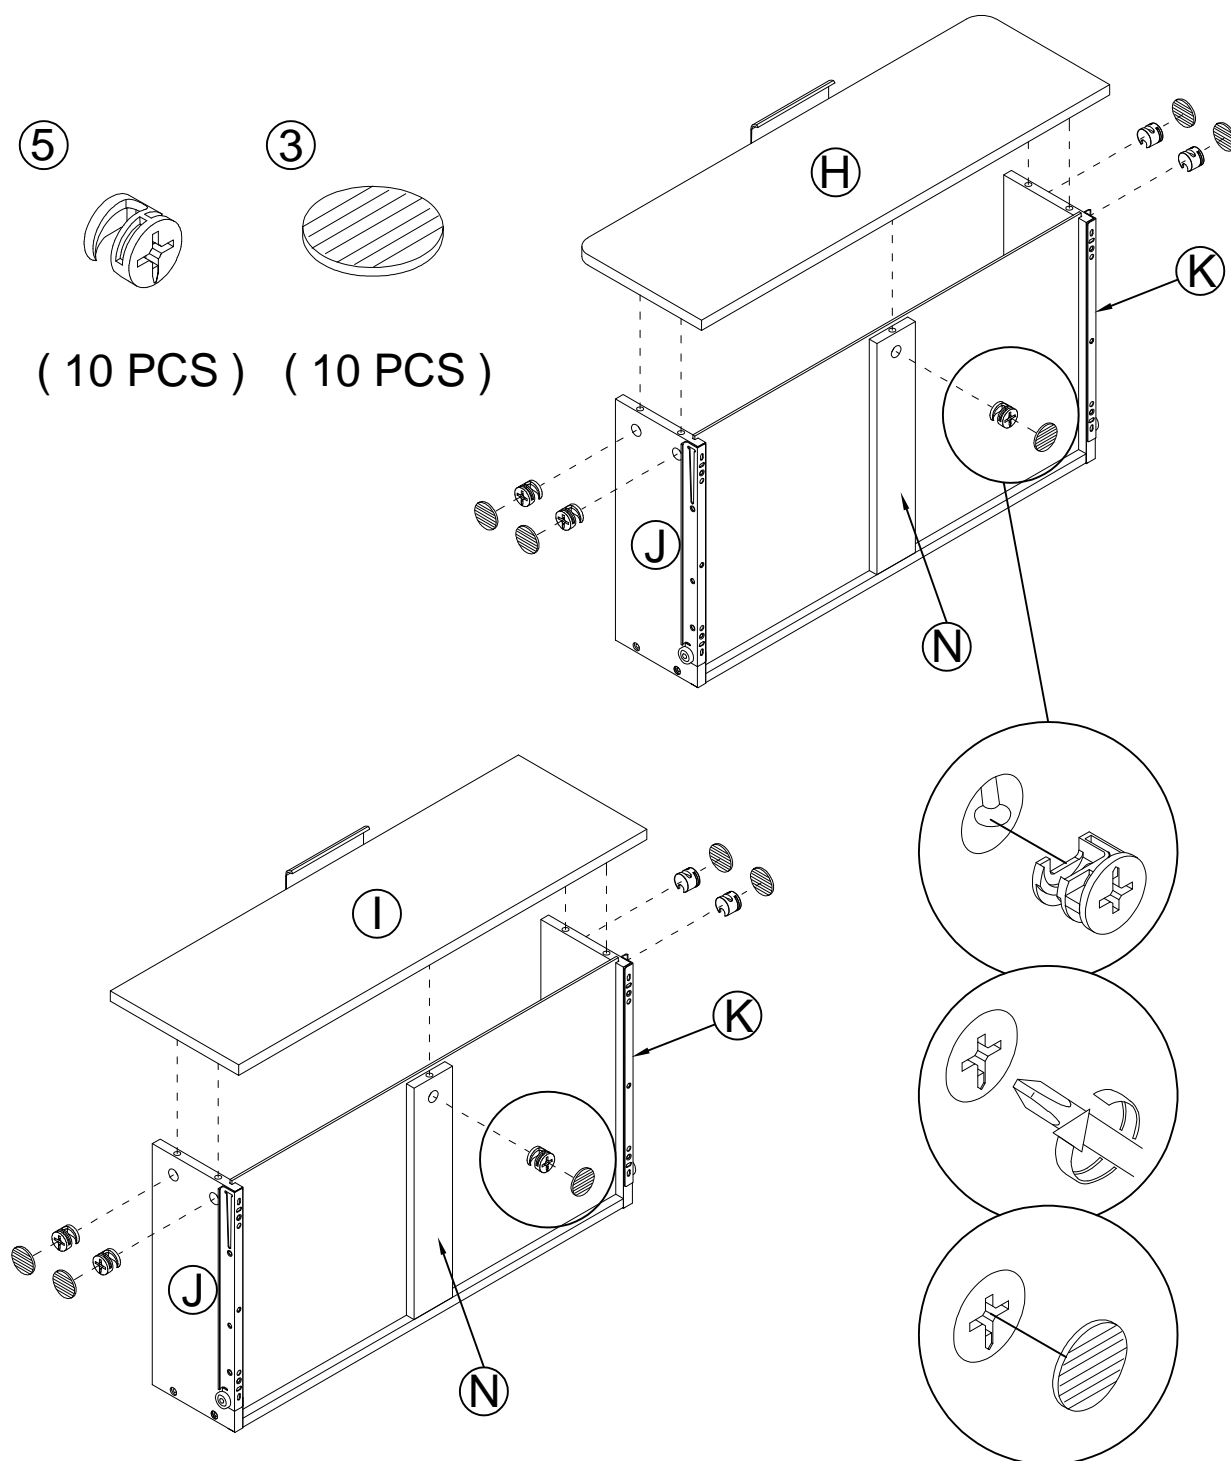




## Step 12:

---


\*Input Two Drawer tray to the stand.

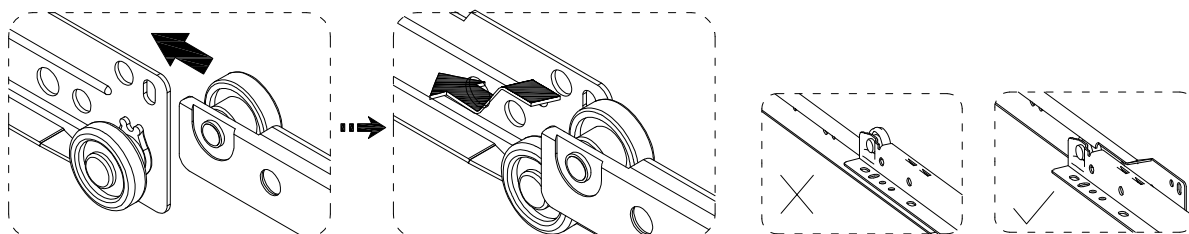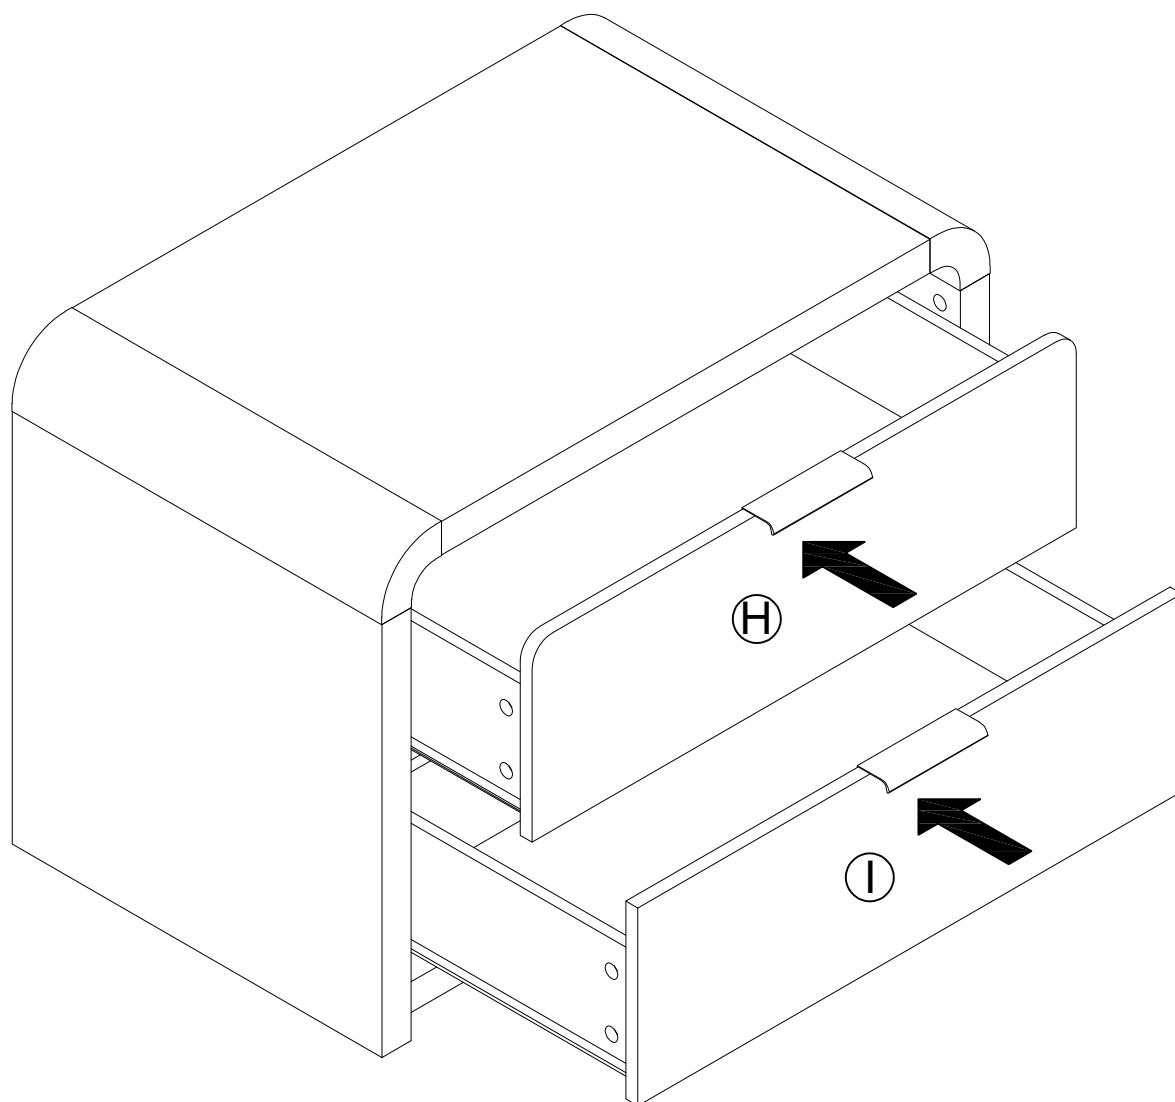

## Step 13:


\* Insert Six PLASTIC WEDGE(9) and Six SCREW(10) to the BACK PANEL (E).

⑨




( 6 PCS )

⑩



( 6 PCS )

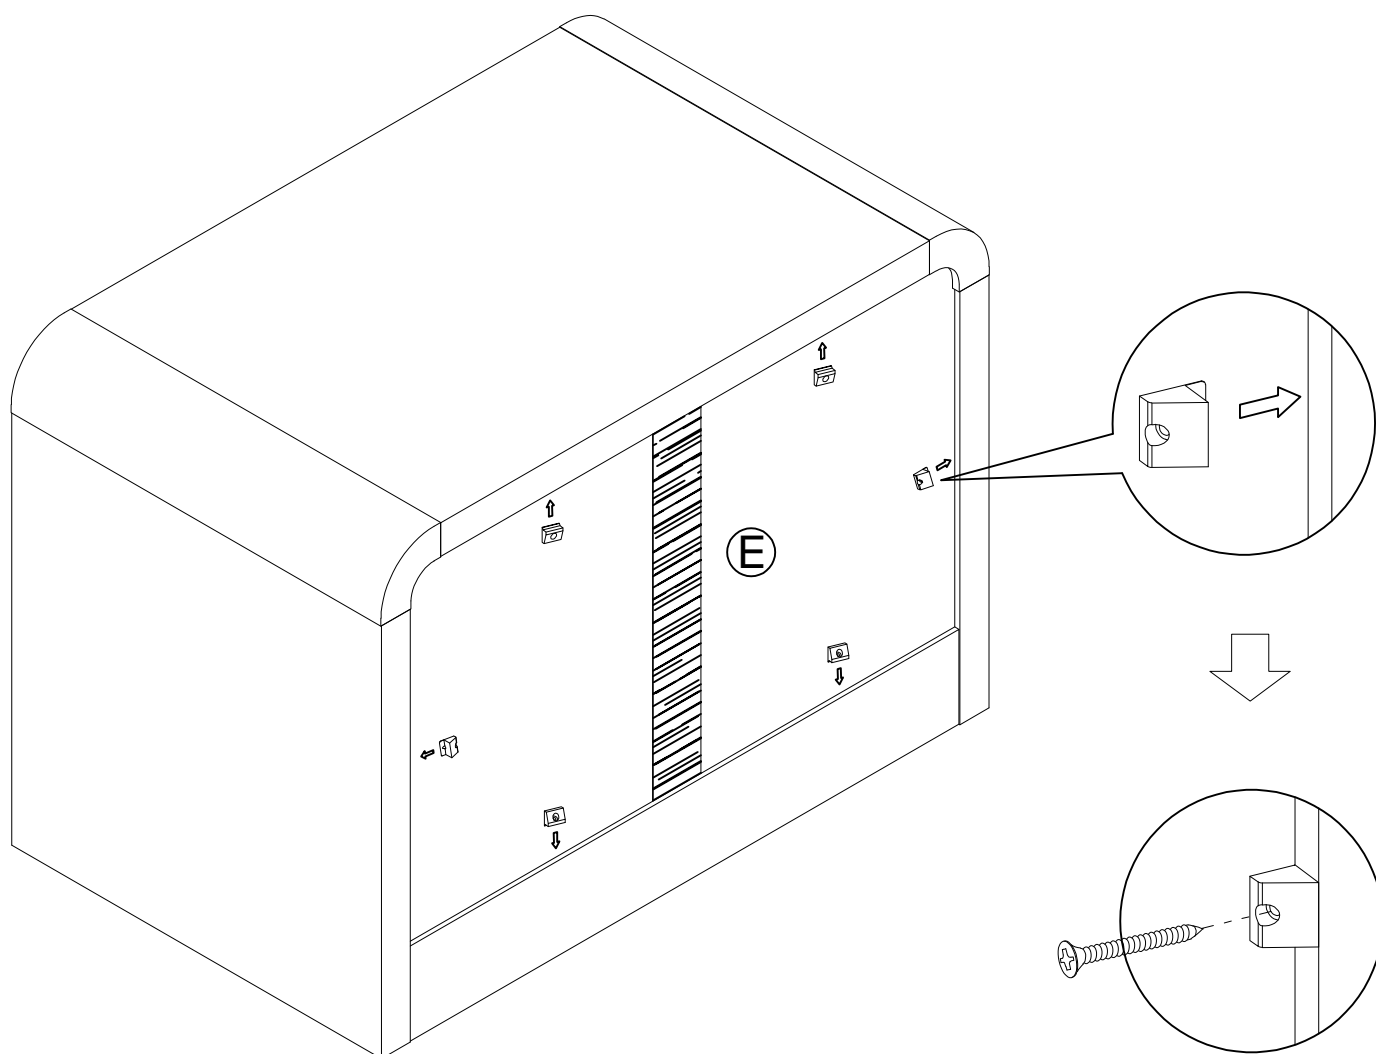



## WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

## THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.



319 Ridge Rd. Dayton, NJ 08810  
908-888-0818