

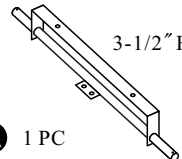
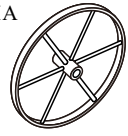
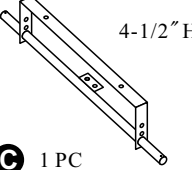


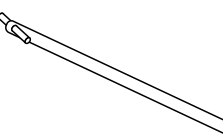

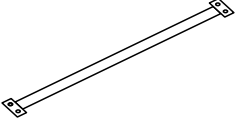
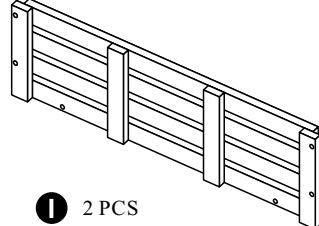
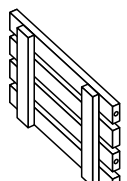
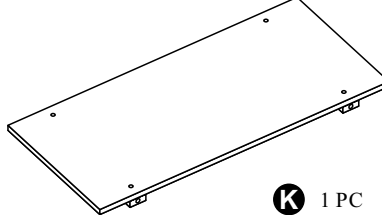





# ASSEMBLY INSTRUCTIONS

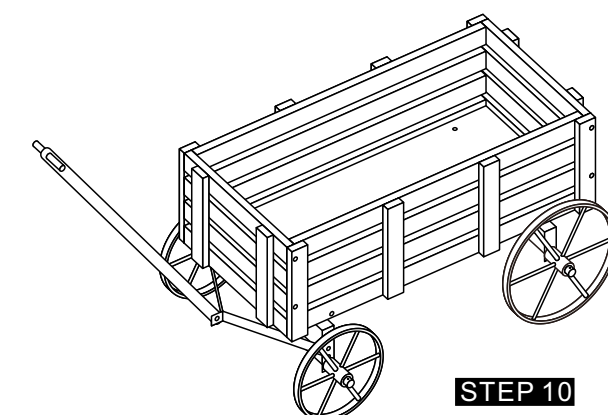
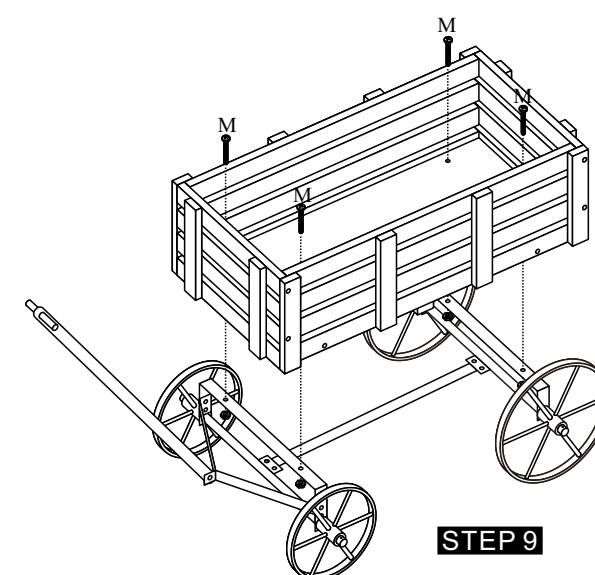
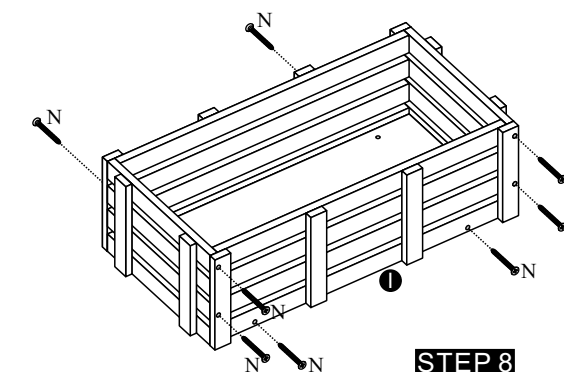
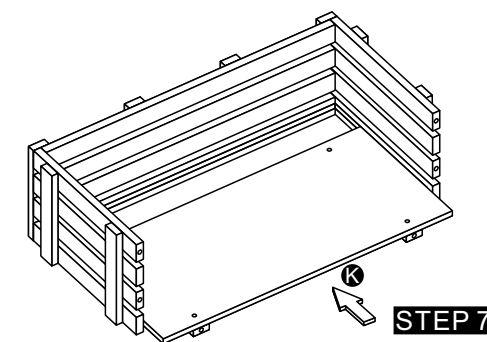
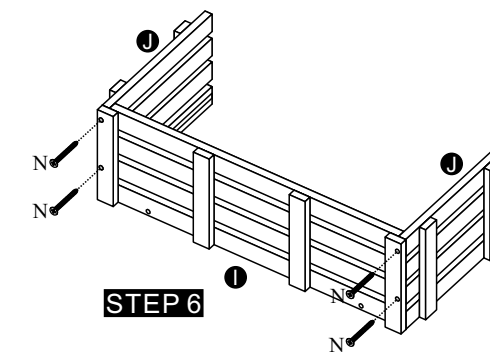
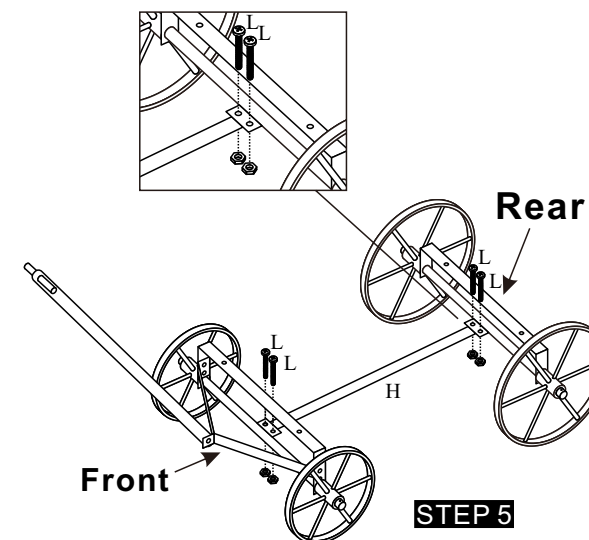
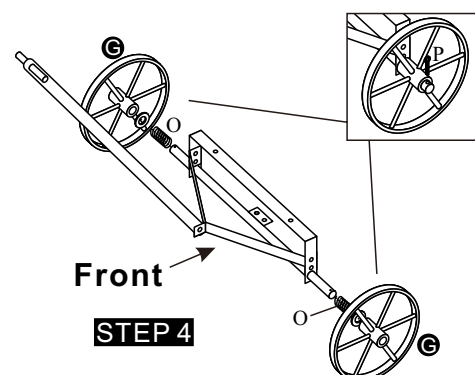
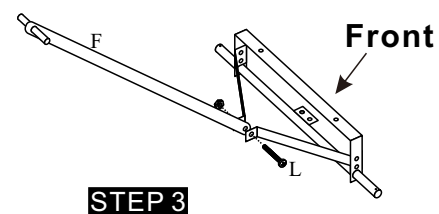
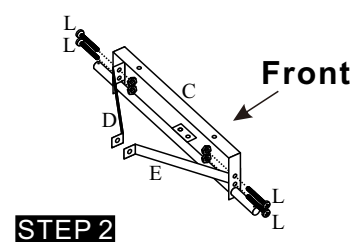
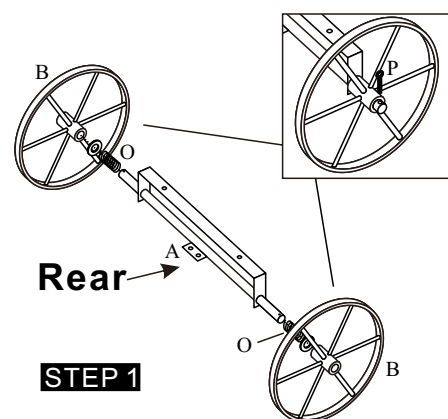
TOOLS NEEDED: Philips screwdriver, power drill optional

**CAUTION:** When assembling wagon, **DO NOT** completely tighten the nuts and bolts until all the parts & holes are properly aligned and positioned.

For missing hardware please contact [customerservice@shineco.com](mailto:customerservice@shineco.com)

## PARTS LIST

 <b>A</b> 1 PC	 <b>B</b> 2 PCS	 <b>C</b> 1 PC	 <b>D</b> 1 PC	 <b>E</b> 1 PC
 <b>F</b> 1 PC	 <b>G</b> 2 PCS	 <b>H</b> 1 PC	 <b>I</b> 2 PCS	
 <b>J</b> 2 PCS	 <b>K</b> 1 PC	 <b>L</b> 9 SETS	 <b>M</b> 4 SETS	 <b>N</b> 12 PCS
		 <b>O</b> 4 SETS	 <b>P</b> 4 PCS	



**STEP 11**  
**PHILLIPS HEAD SCREWDRIVER (NOT INCLUDED)**  
**WEIGHT LIMIT: 30 LBS**