


DESIGNED FOR LIFE

Assembly Instructions

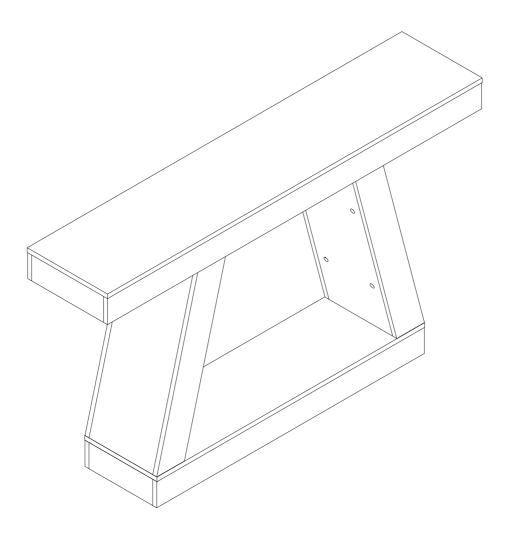

Porch Table

Model No. HOGA-HL0191 HOGA-NY294 HOGA-NY250



www.tribesigns.com

Contact Us We're here to help you.




Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

- 1. Carefully read these instructions and keep them for future reference.
- 2. Check the parts list and confirm everything's there before starting assembly.
- 3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
- 4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

How to Get the Assembly Video

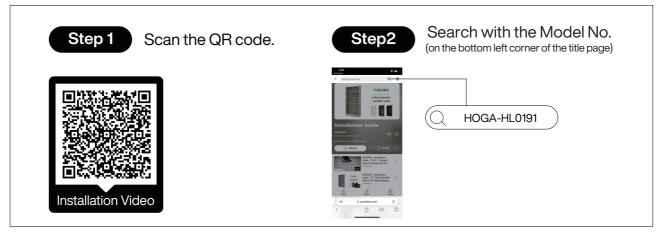


Note: If you can't find the assembly video, please contact us.

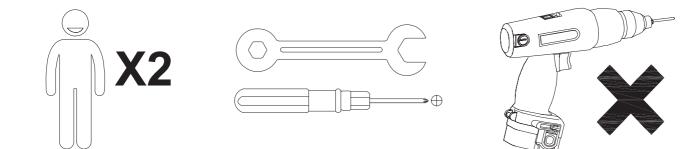


We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

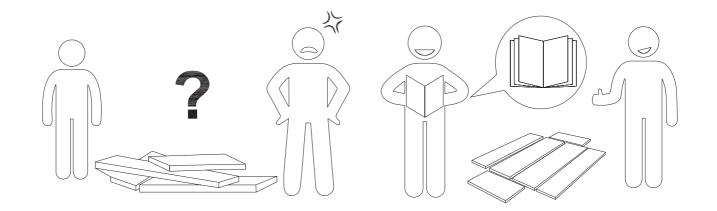

AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.

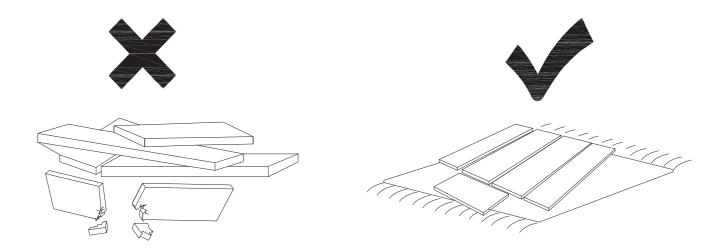

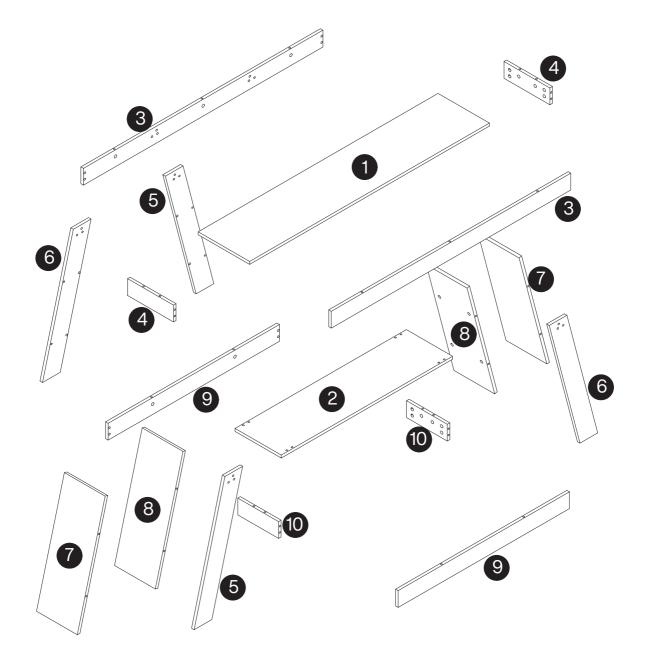




Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

Parts List

٢

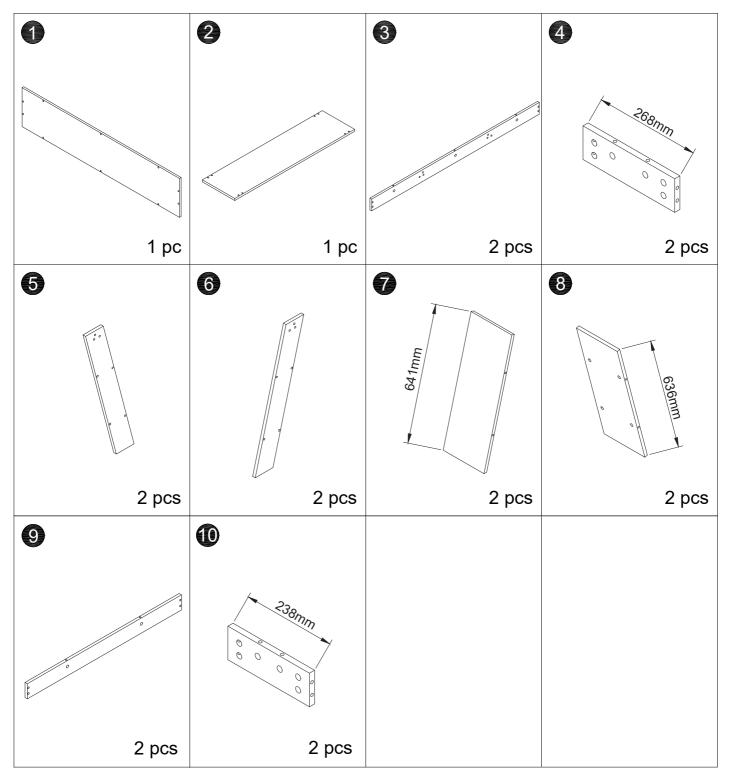


Hardware List


No.	PICTURE		SIZE	QTY	No.	PICTURE	SIZE	QTY
А	\mathbf{F} $\overline{\mathbf{V}}11$ \mathbf{E}		M6x40	42	E	<u> 68888</u> — 8		
В			Ø8x35	8	F	et to the and		2
С		\bigcirc	M6x20	12	Г	x2 x2 x2 x2 x1		
D	()_)))))))))))))))))))))))))))))))))))	\bigcirc	ST7x50	8		M4		


Installation of Cams and Pins


Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

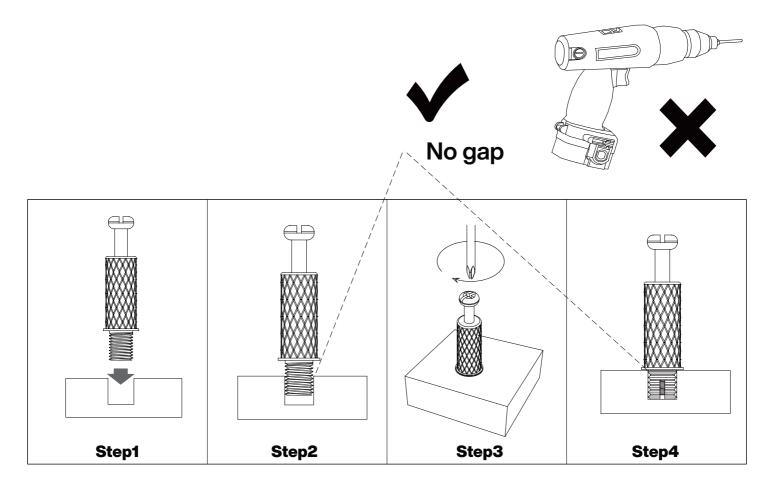



Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

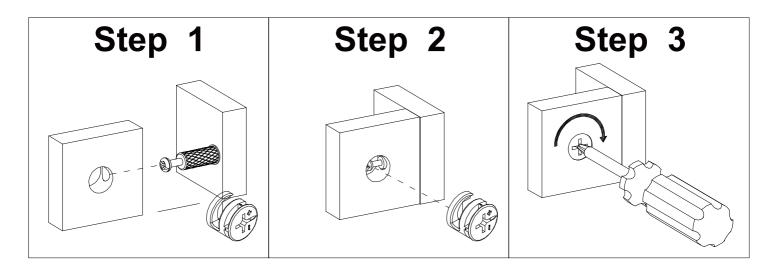


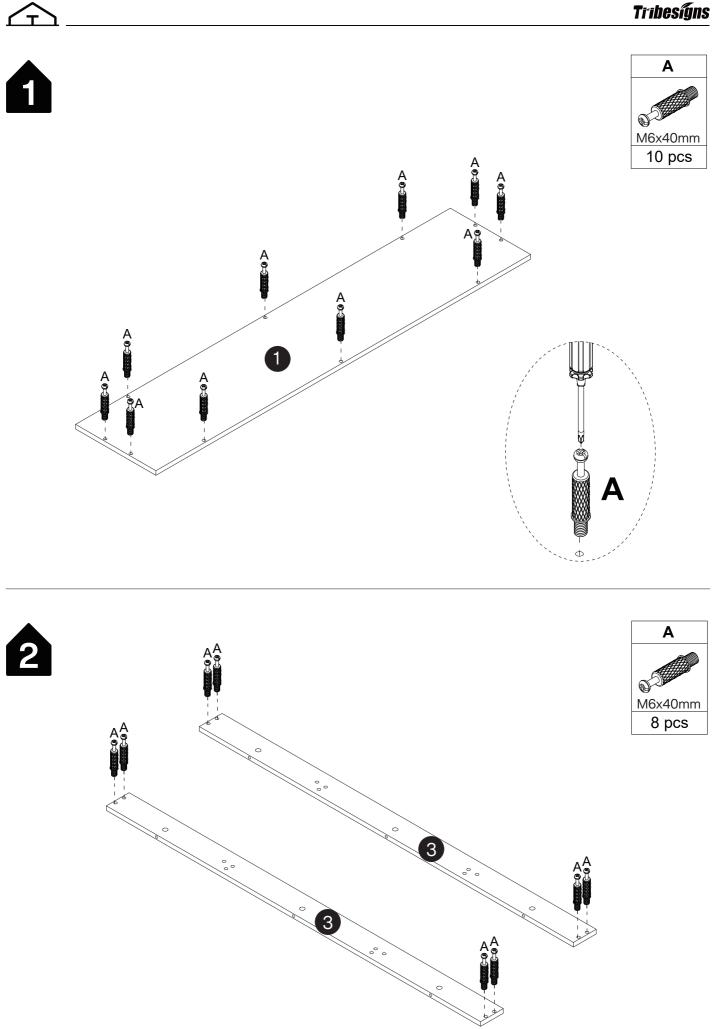

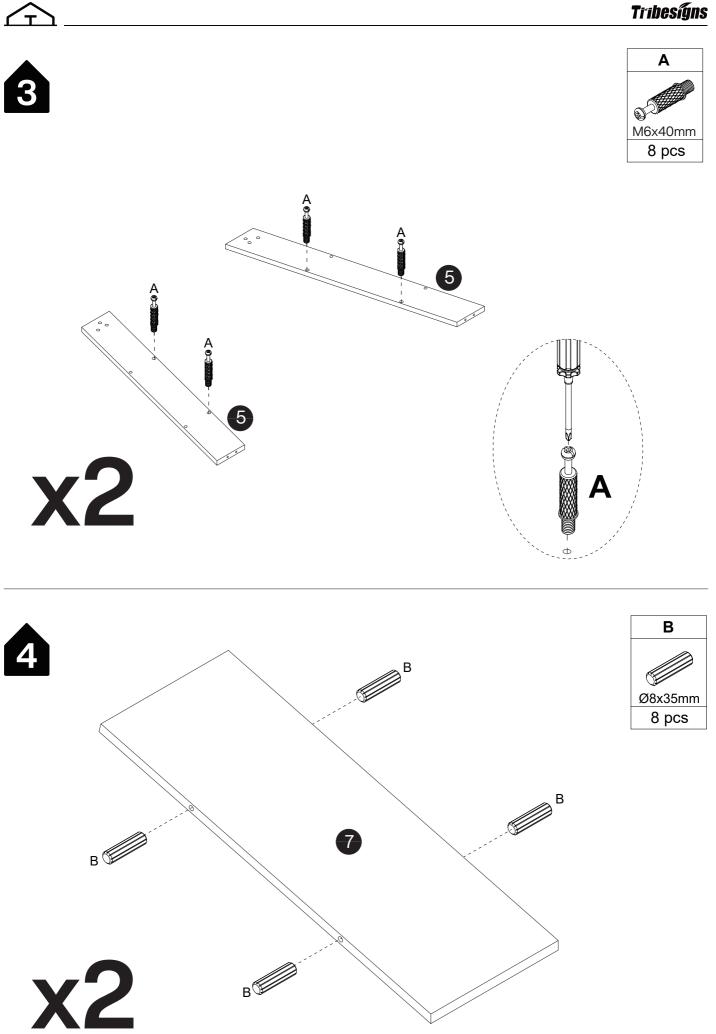


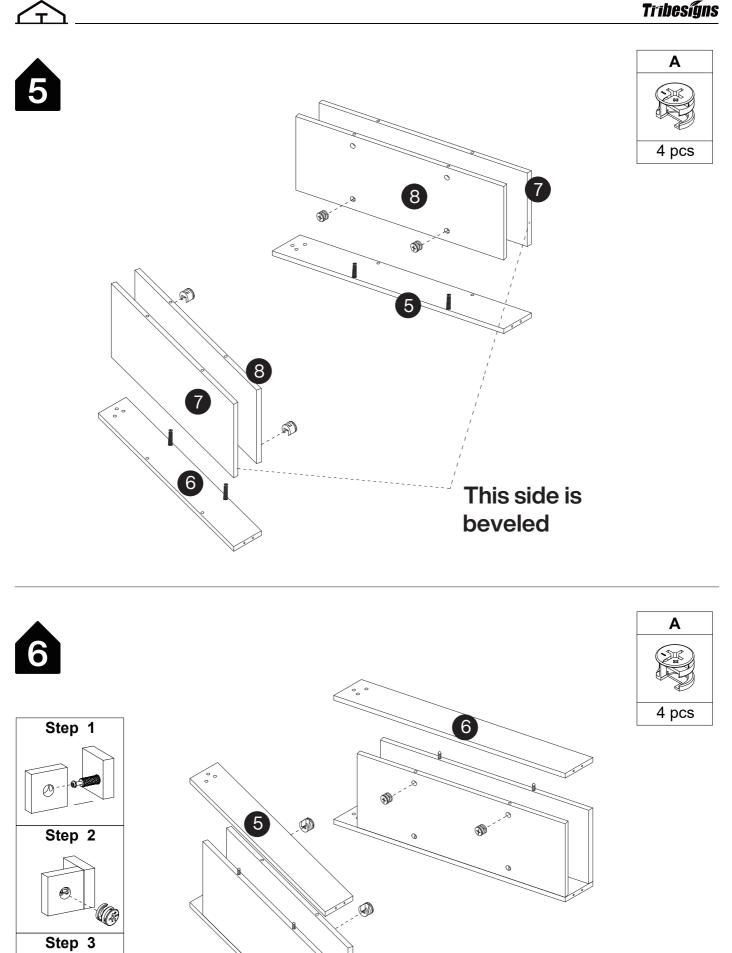

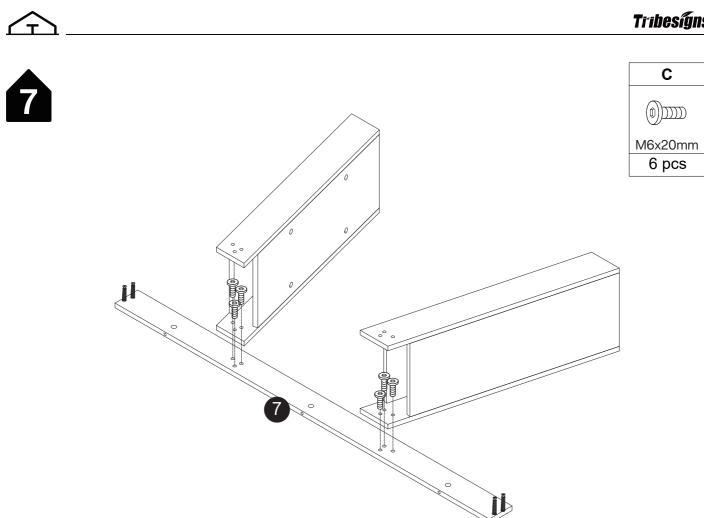


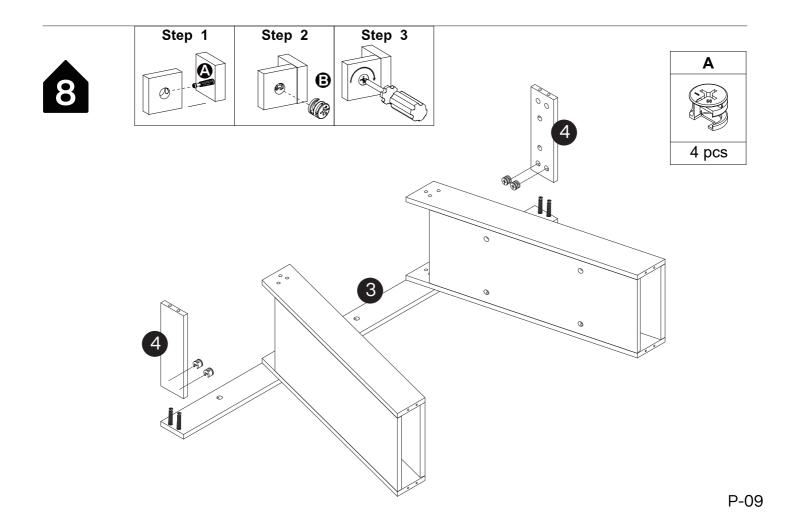




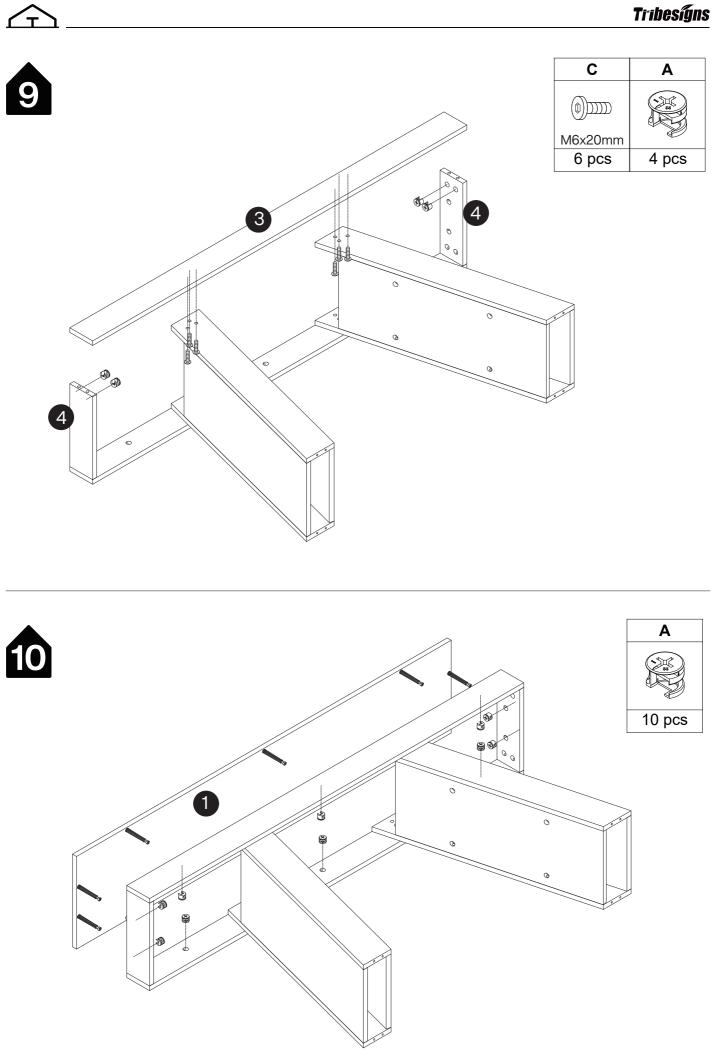

Tribesígns

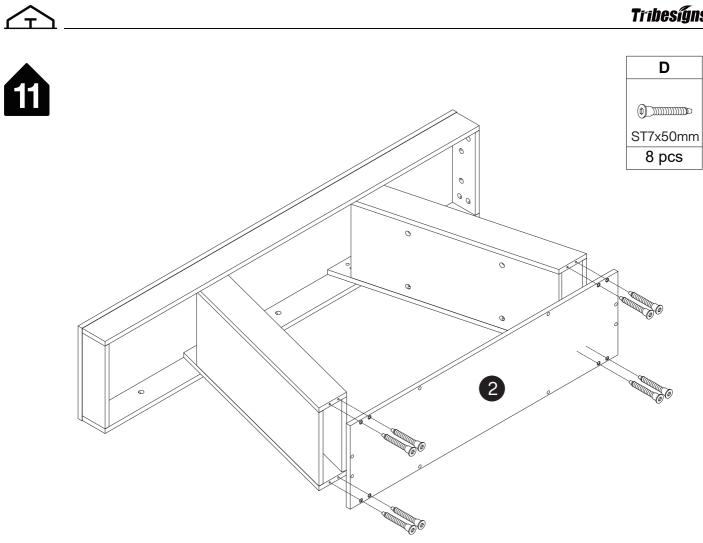


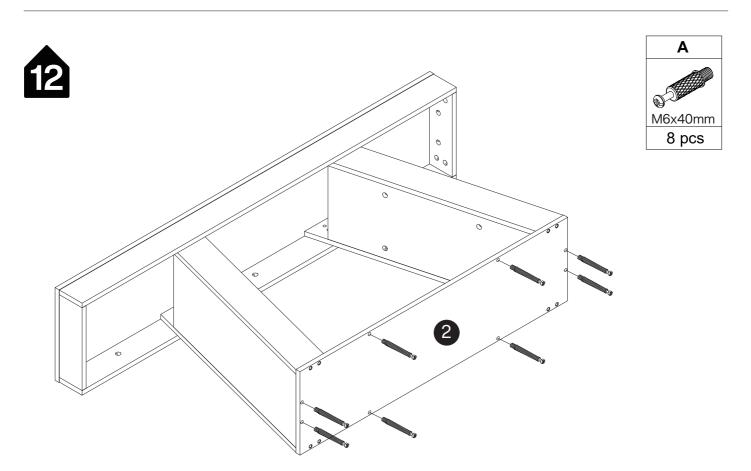


Α


8 pcs


Q.

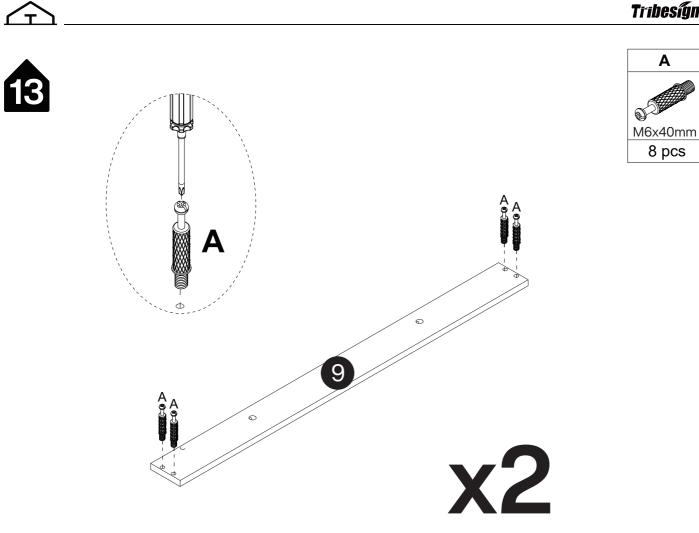


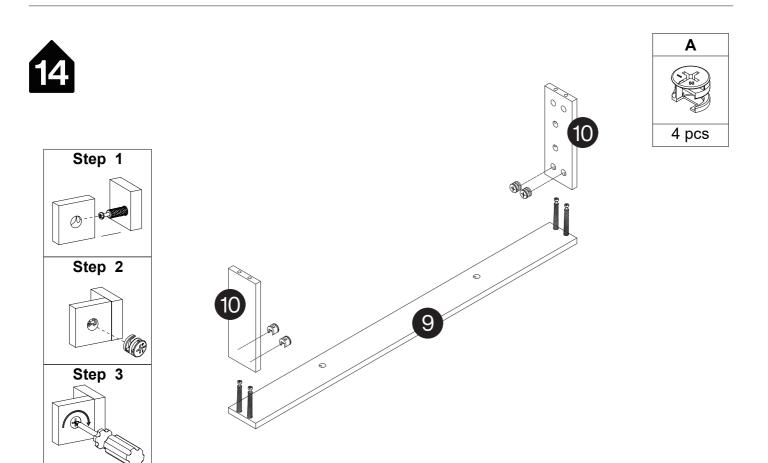




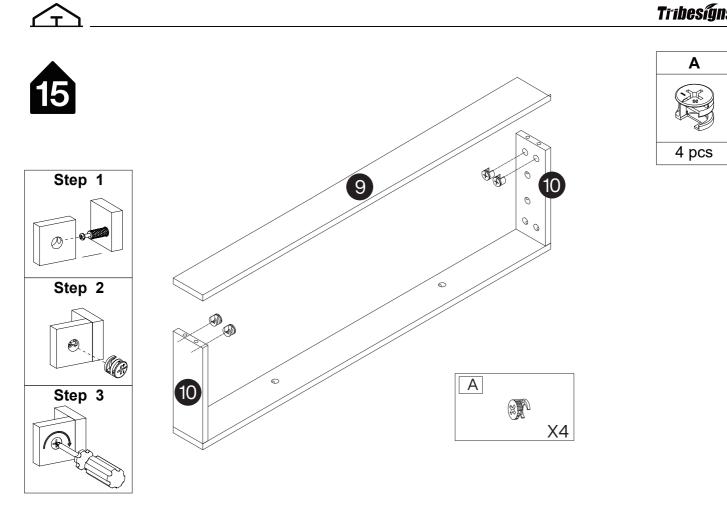


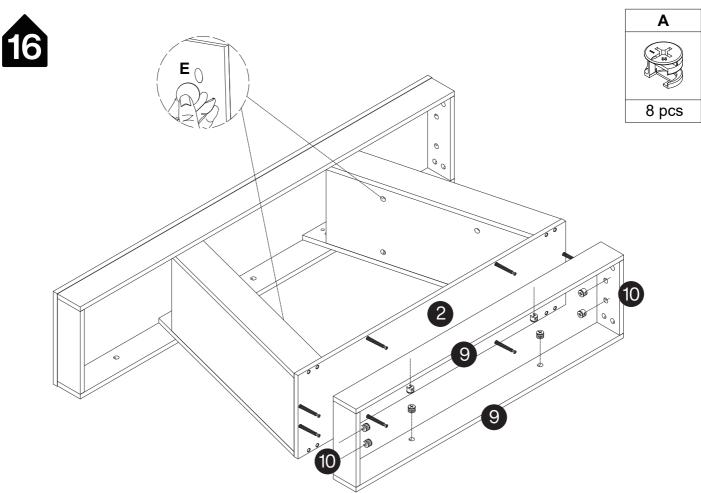

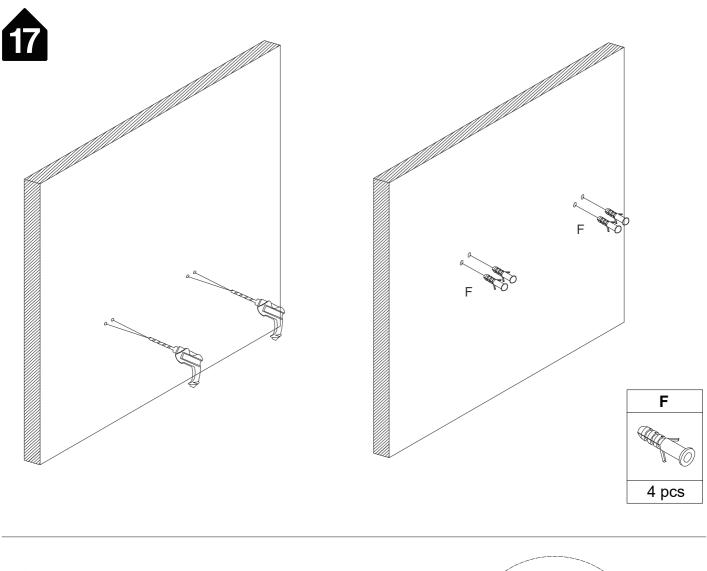



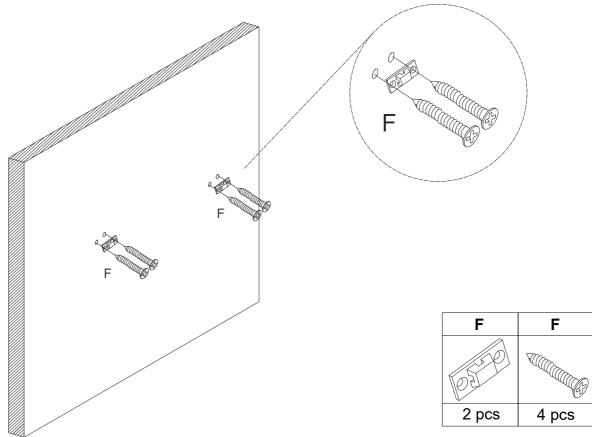


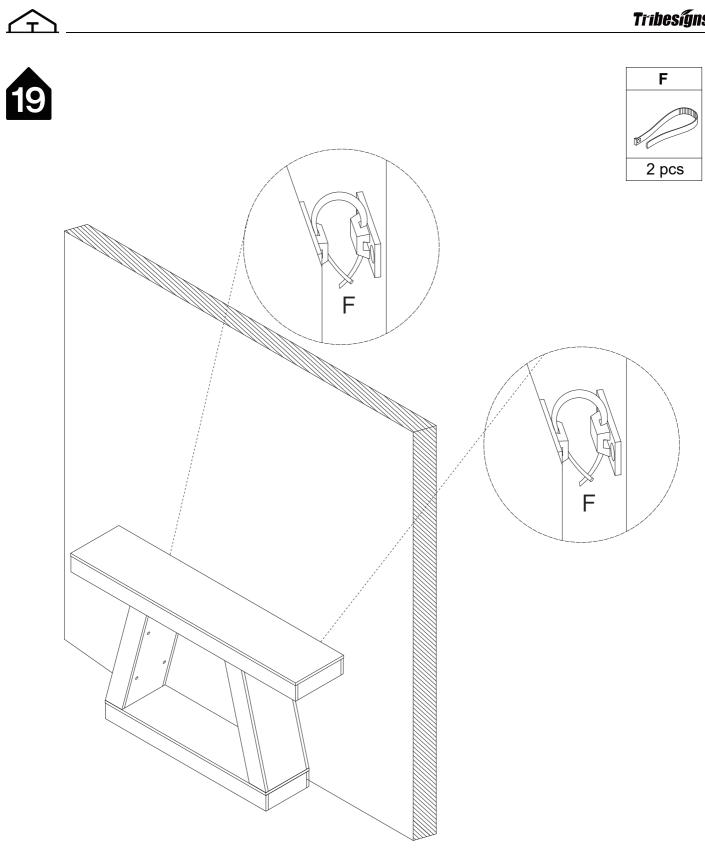



DESIGNED FOR LIFE

Thank you for your support!

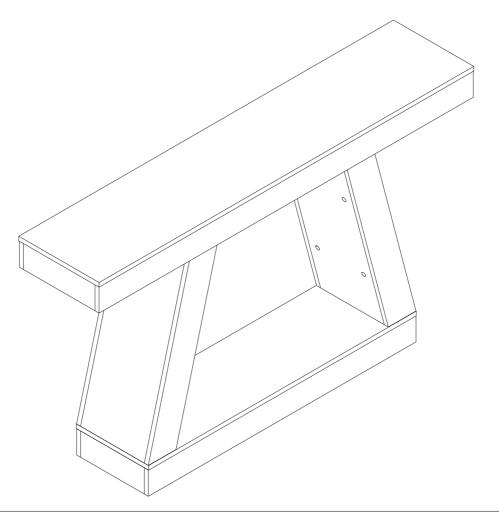

Contact our customer service team



support@tribesigns.com www.tribesigns.com



1-424-220-6888

7 AM to 8 PM EST, Monday to Friday

Follow Tribesigns





Instagram









TikTok



Facebook

Pir

Pinterest

Twitter

YouTube

WhatsApp