


Hampton Solid Wood Bed

King Size

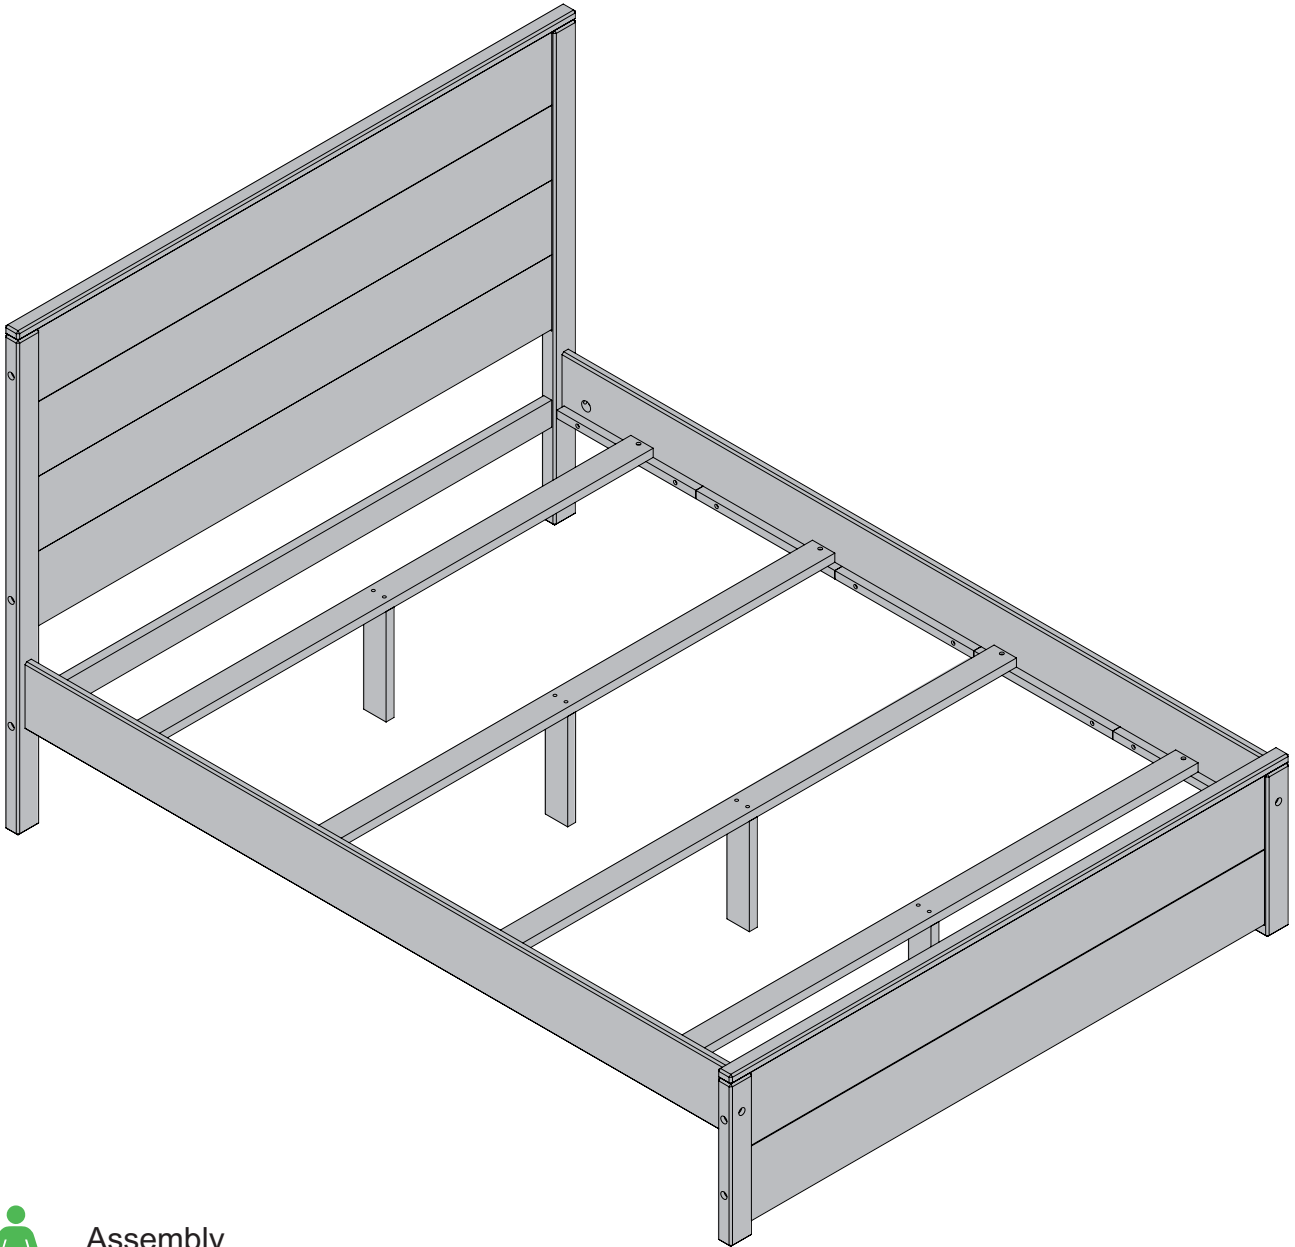

Assembly
02 people



Time
1:30 hours approximately




Tools
philips key, rubber hammer



Volume quantity
01 box




Parts list for assembly. Please confirm all parts available before assembly

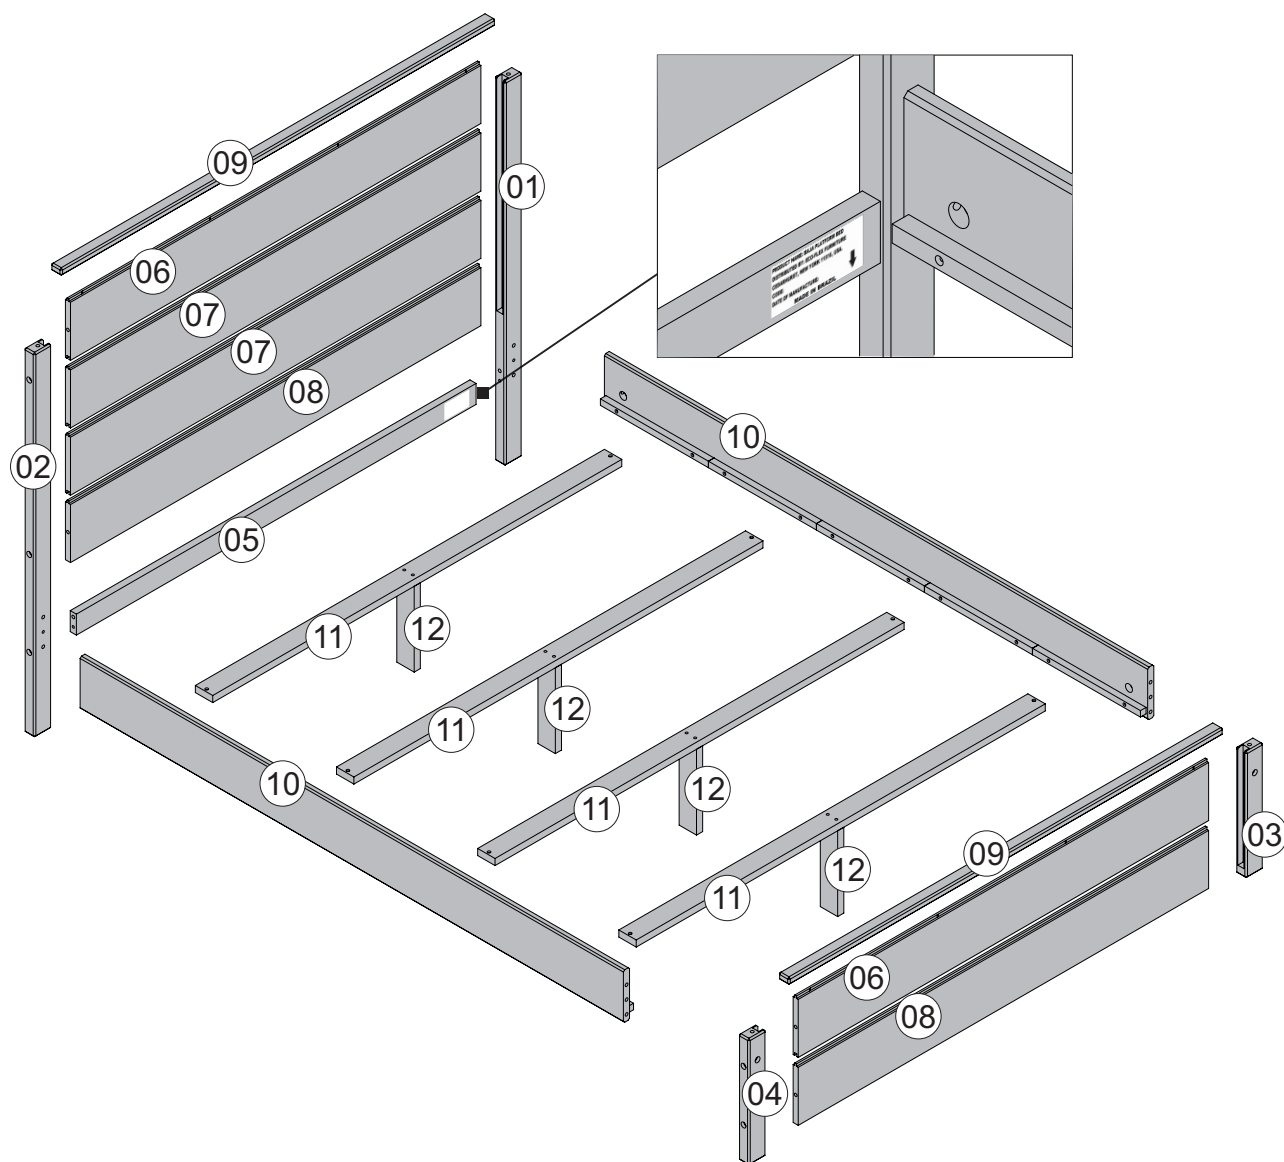


ATTENTION

- * Read and observe carefully all the assembly instructions before beginning assembly.
- * The assembly of the product must be done on a clean and flat surface. We suggest to use the packaging to cover the floor to avoid damages.
- * The screws must be tightened periodically.
- * Avoid contact with sharp objects.
- * Avoid banging pieces together.

Hardware list for assembly.
Please confirm all hardware available before assembly

A	 ø3/8" x 1' 9/16"	14x	+	SPARE 02x
B	 ø1/4" x 4' 1/4"	14x	+	02x
F		01x	+	01x
AP	 ø1/8" x 1' 3/8"	18x	+	02x
BC	 1/4"	14x	+	02x
BJ	 ø3/4"	12x	+	02x
BL	 ø1/4" x 2"	08x	+	01x
BV	 ø1/4"	04x		

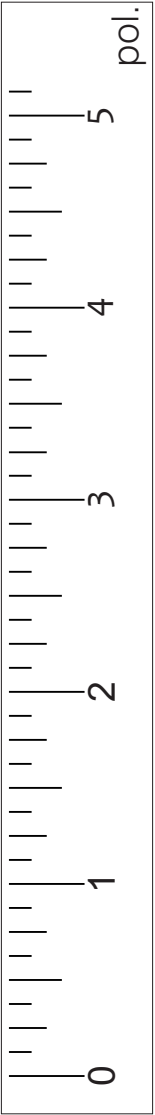

Step - 01

Diagram illustrating the assembly of three parallel metal rails (labeled 10, 10, and 05) using 10x threaded rods (labeled A). The rods are shown being inserted into the rails, with the top rail labeled 10 and the bottom rail labeled 05. The rods are secured with nuts and washers. A detailed view of the rod (A) shows its dimensions: 10x, 3/8" x 1 9/16".

Step - 02

BC

02

01

BC

05

LABEL DOWN

B

F

B

F

B

F

BC

02x

01x


02x

1/4"


1/4" x 4 1/4"

1/4"


Step - 03

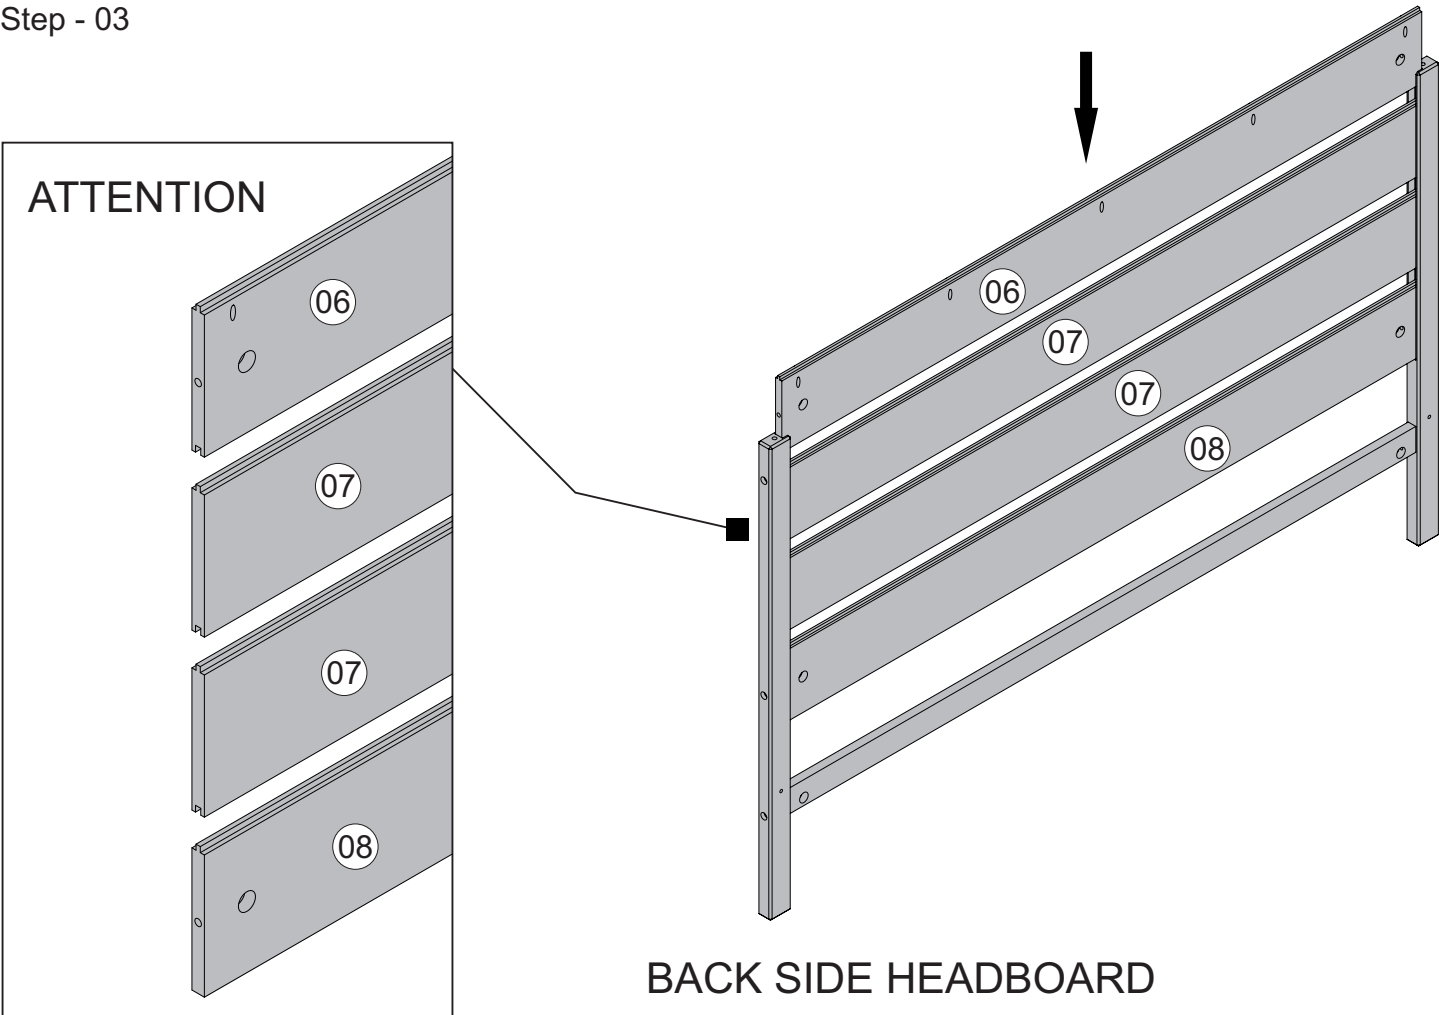


Step - 04

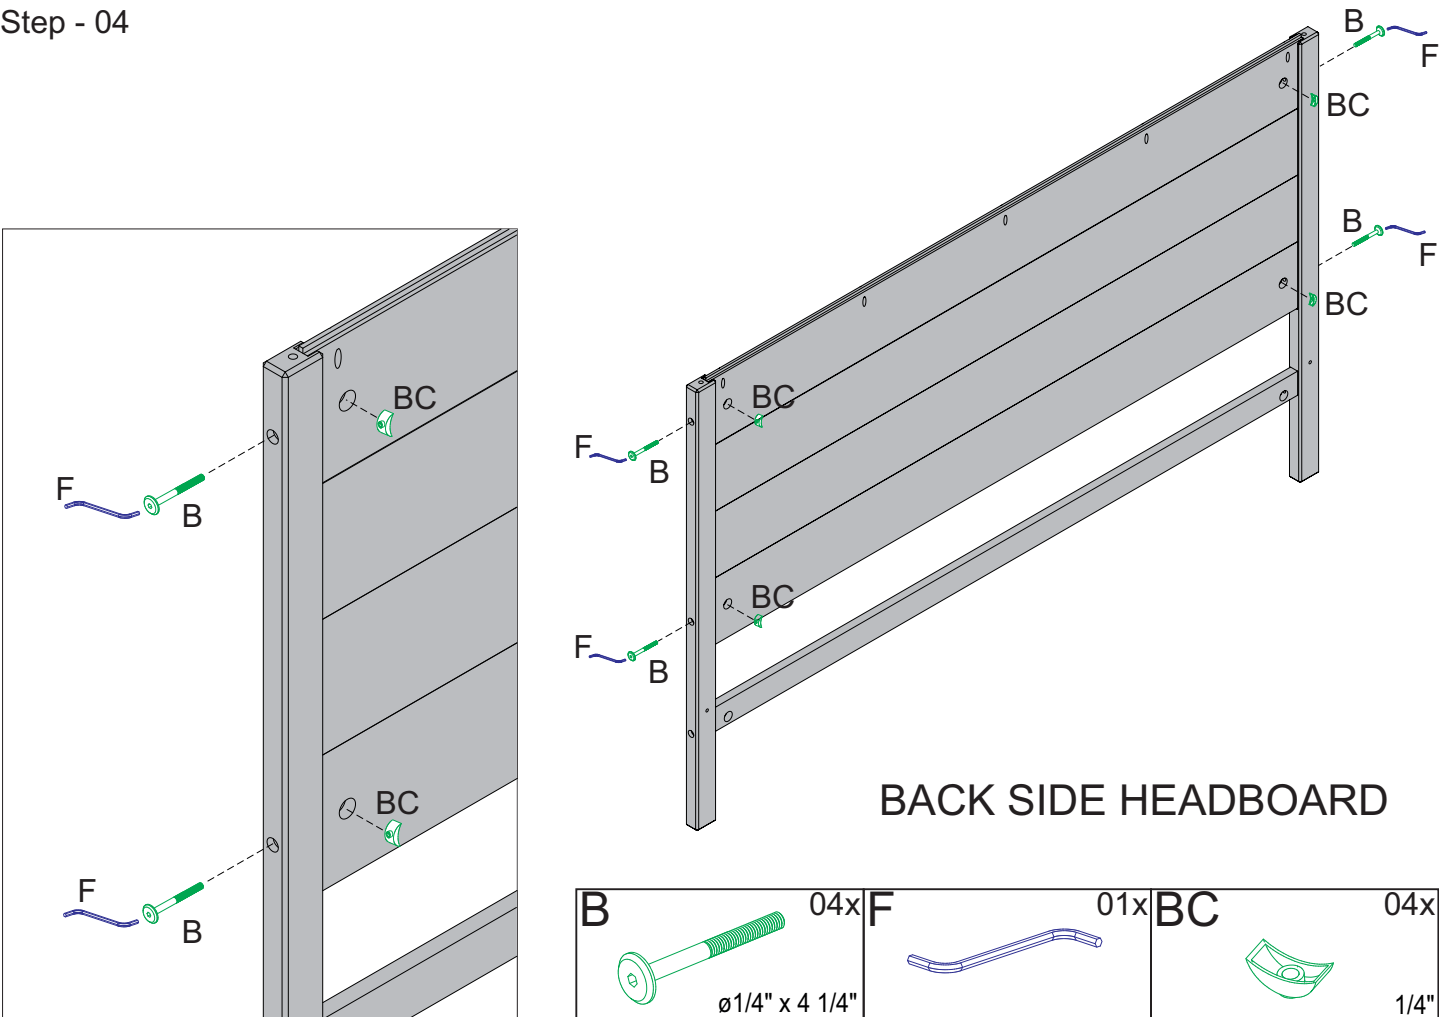


Step - 05

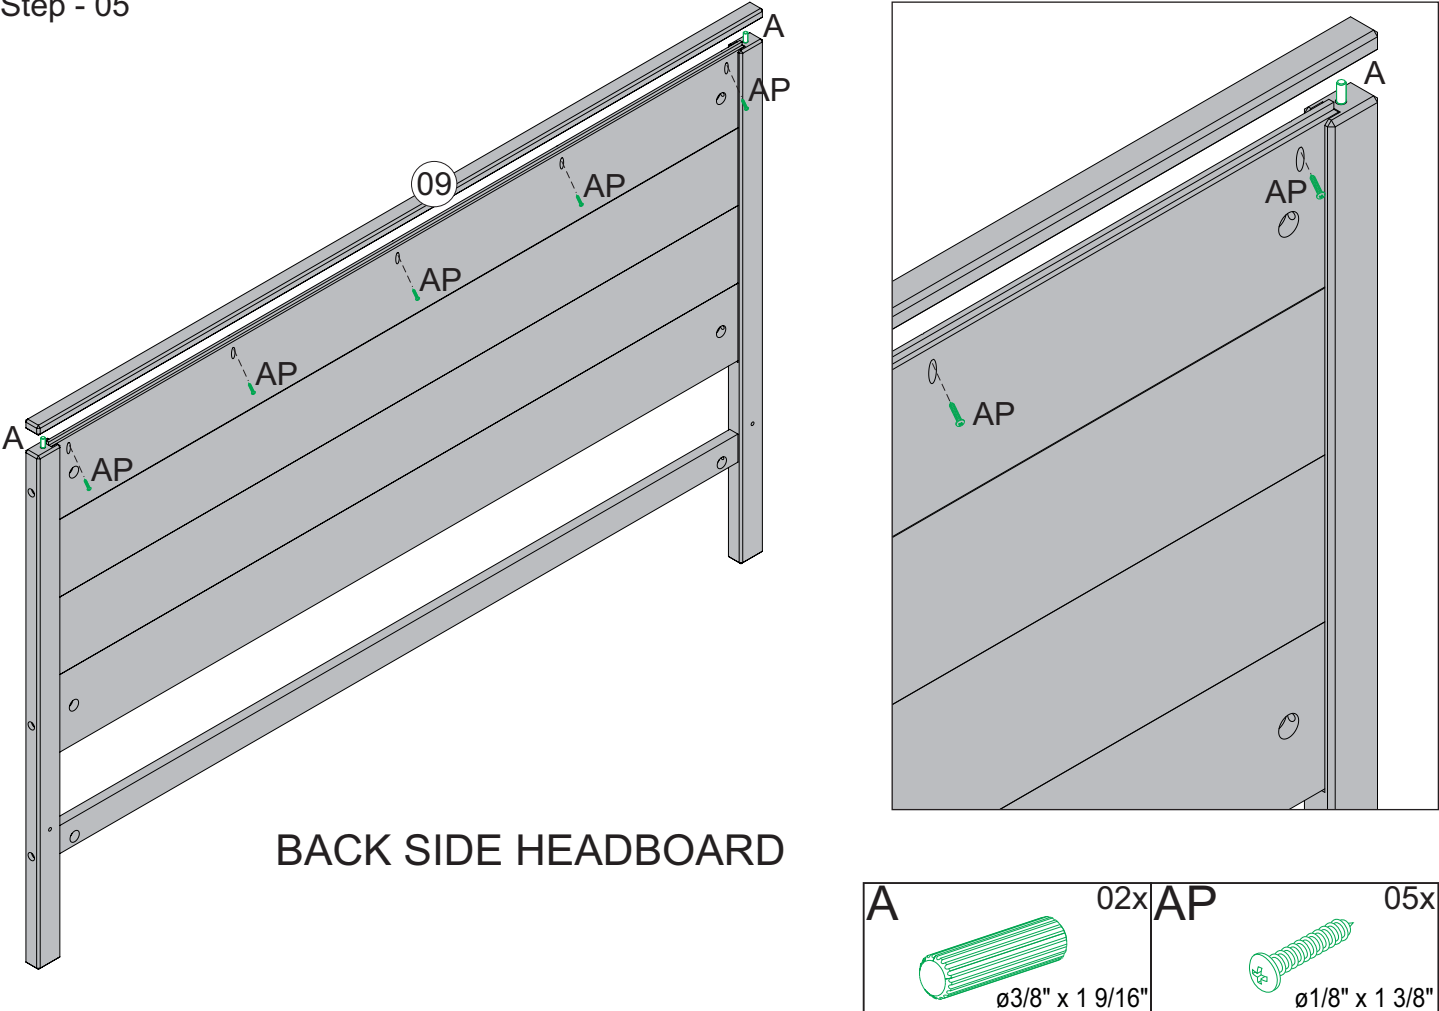



Step - 06

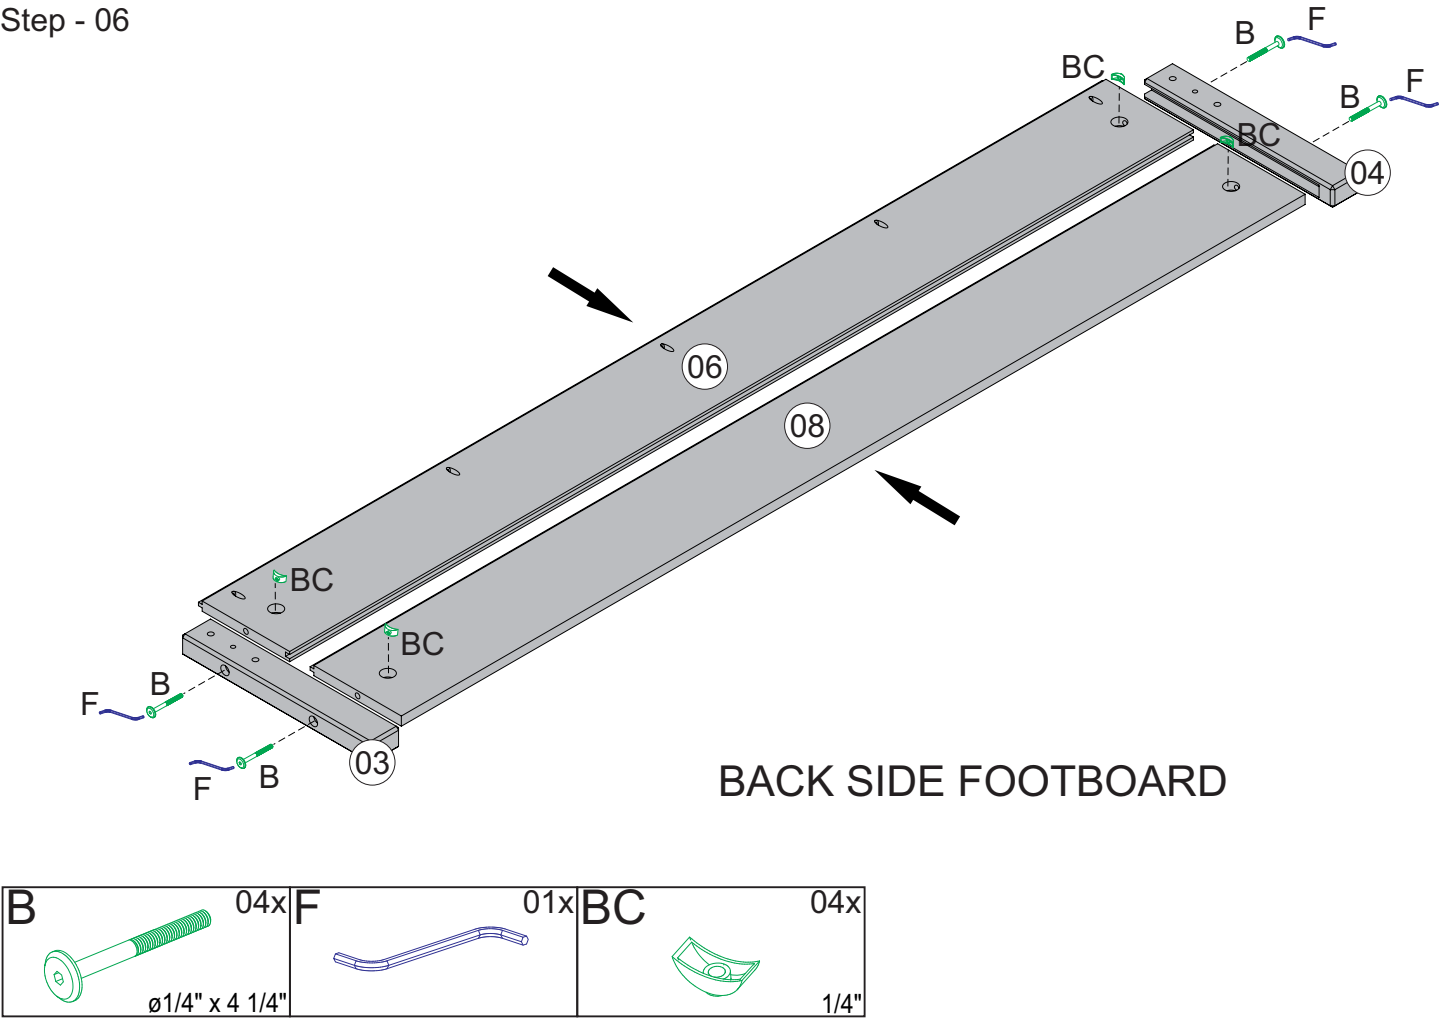

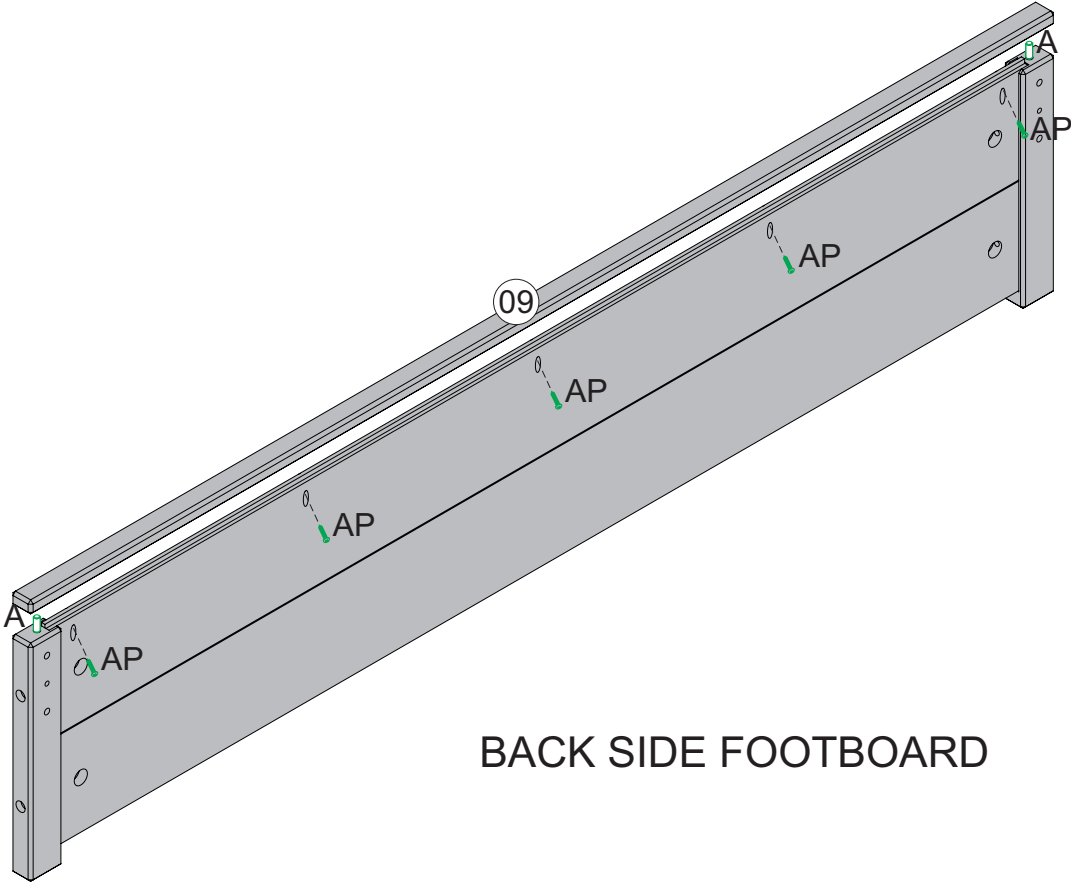


BACK SIDE FOOTBOARD

A  02x ø3/8" x 1 9/16"	AP  04x ø1/8" x 1 3/8"
---	---

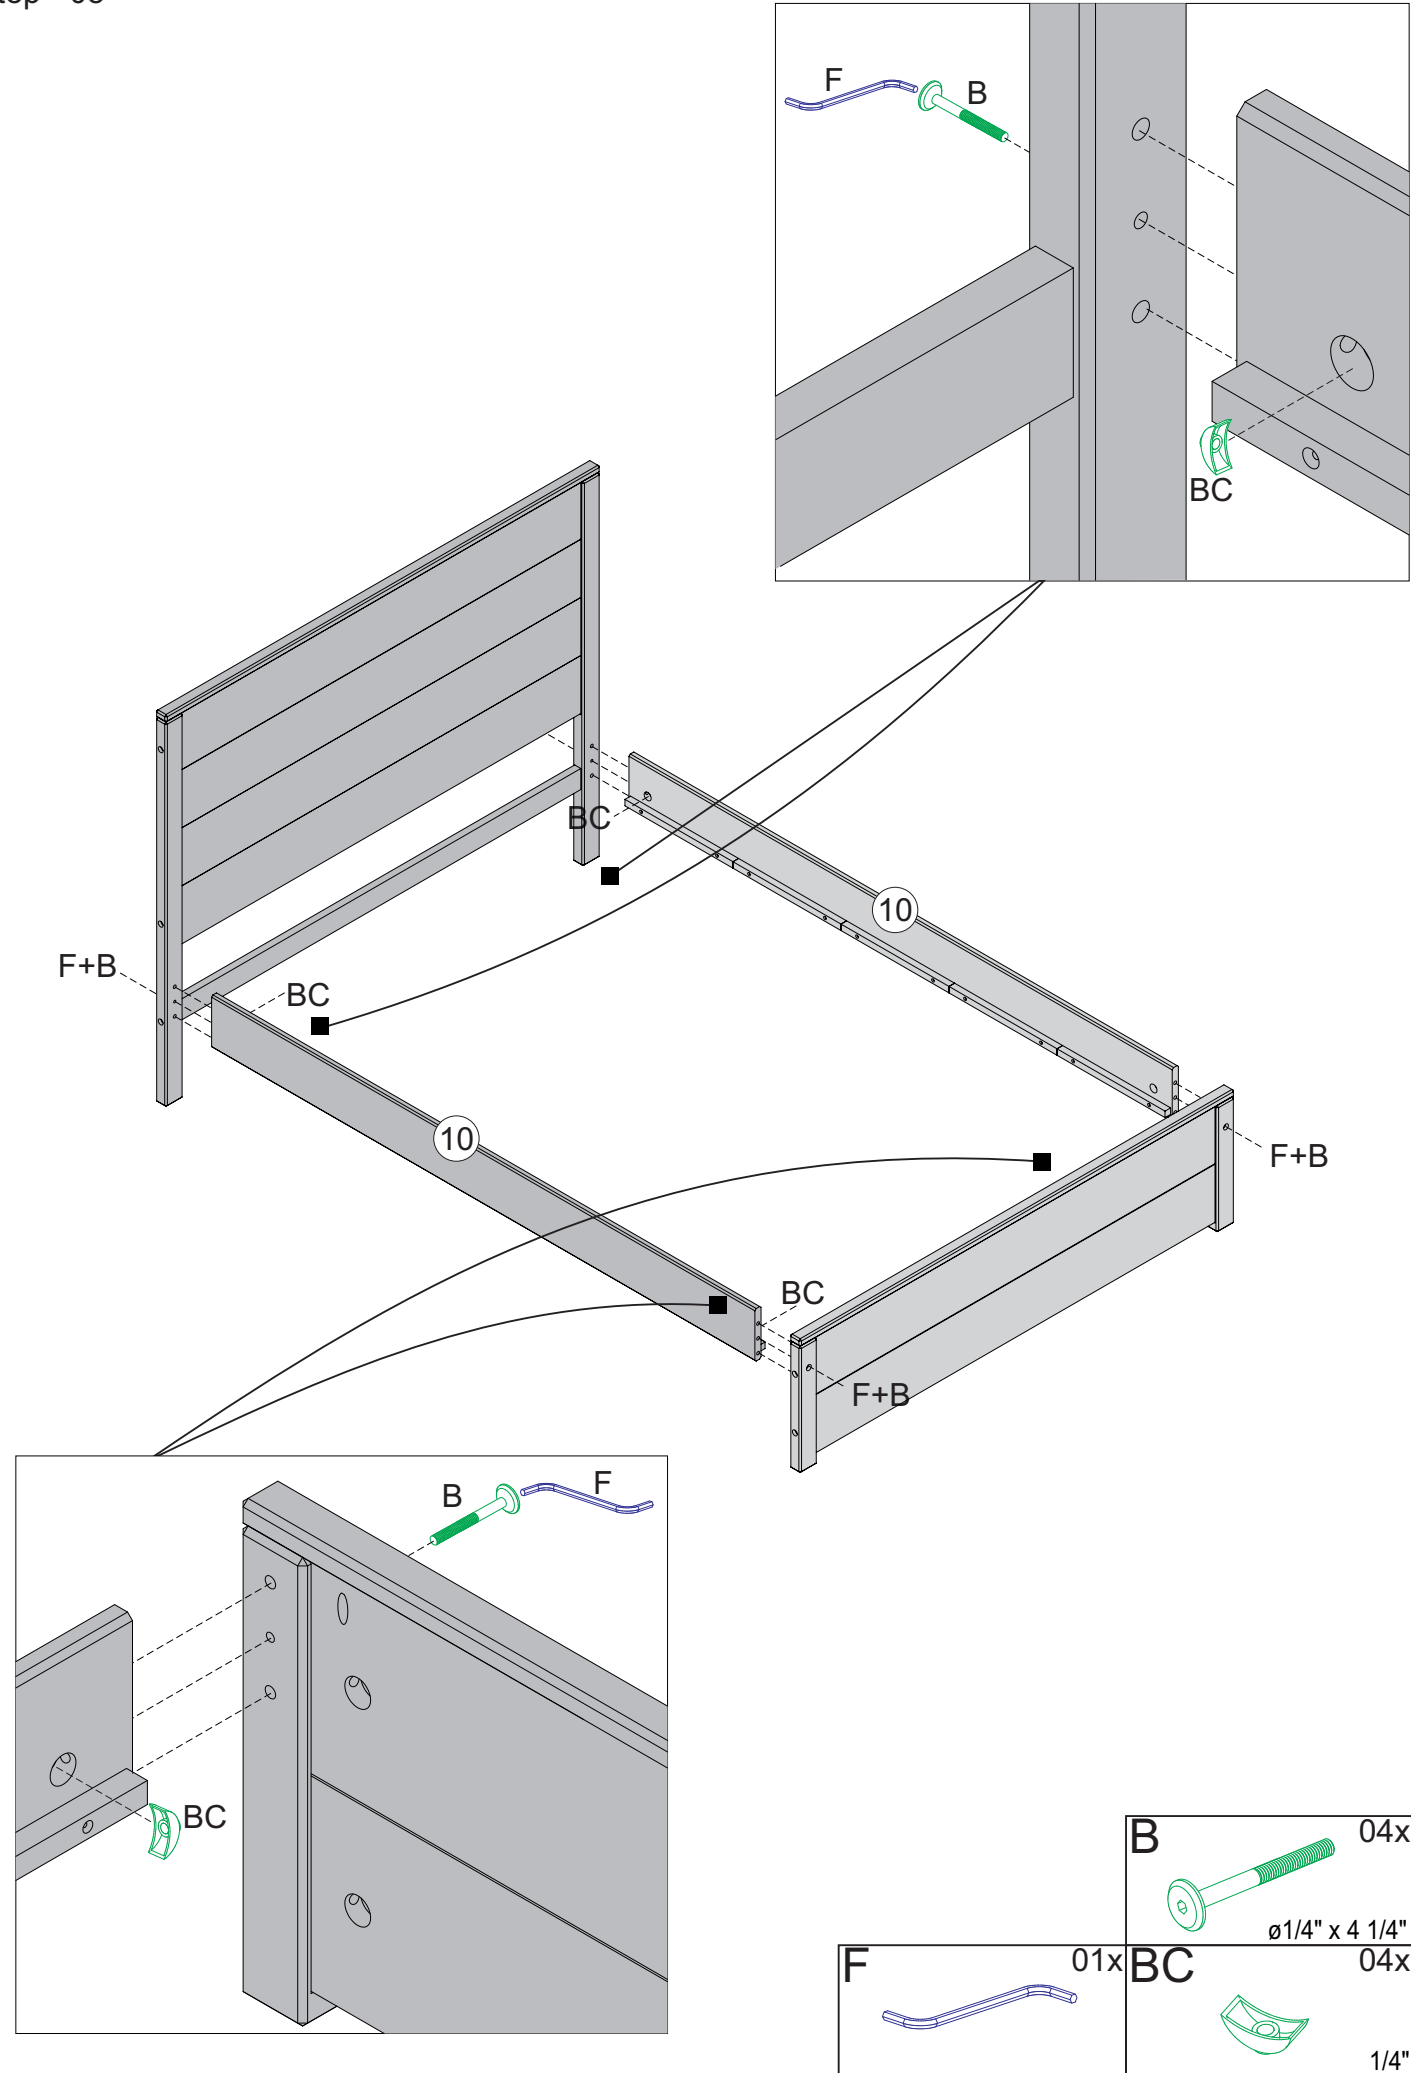

Step - 10

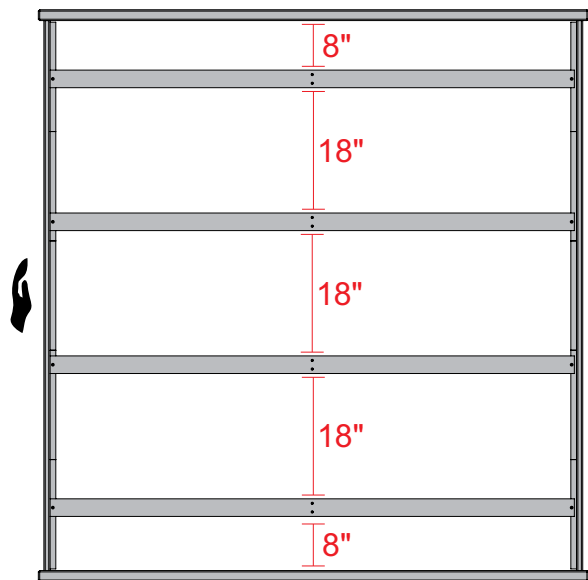

AP 08x

 ø1/8" x 1 3/8"

