




1. Shingle up to the roof penetration.

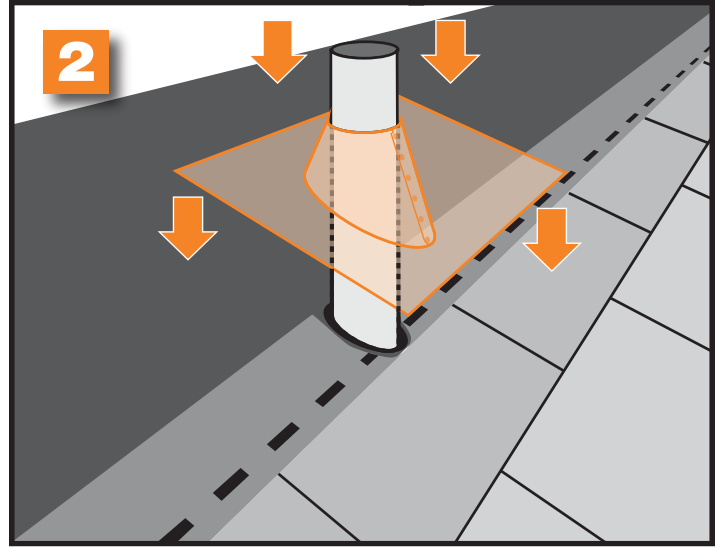

2. Slide flashing over the vent pipe.

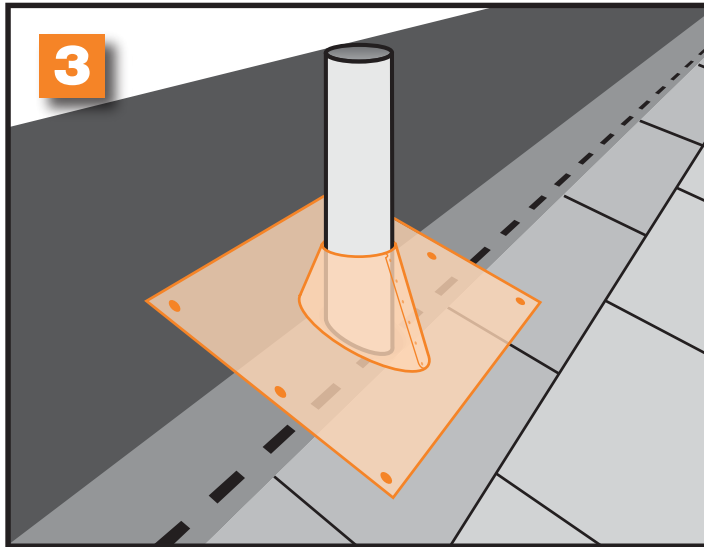

3. Secure flange with 6 roofing nails.

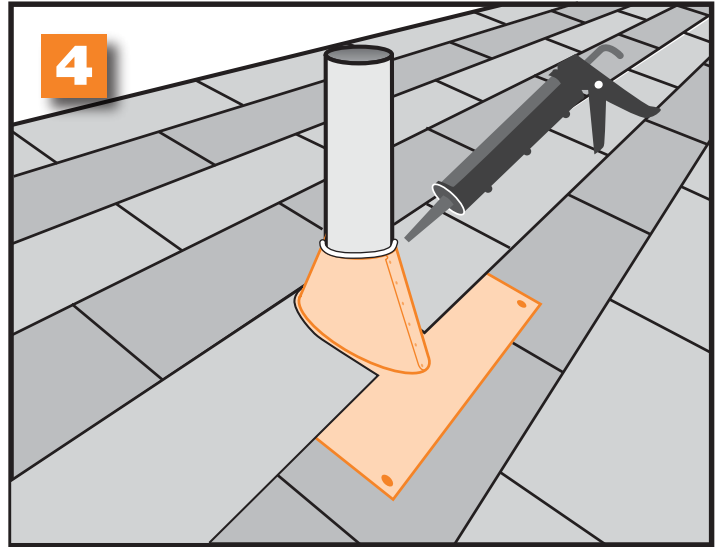

4. Continue shingling above the vent pipe. Optional: apply roofing mastic around the mouth of the cone and to the top of the flange before installing upper side shingles.



## CAUTION!

Working above grade is inherently dangerous, be sure that proper fall protection measures are in place. When working with power tools and sheet metal, gloves and eye protection are absolutely required.