


Tribeca TV Panel 53.94

Before starting


Prepare the room before starting the assembly, leaving it completely clean and the area in good condition to start the work.

Use the cardboard of the packaging and the foam sheets protection to separate and support the parts removed from the boxes.

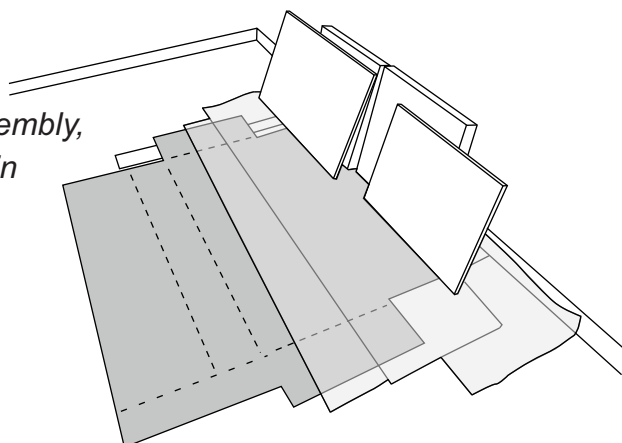

Dimension:



W: 53.94" H: 40.55" D: 7.08"

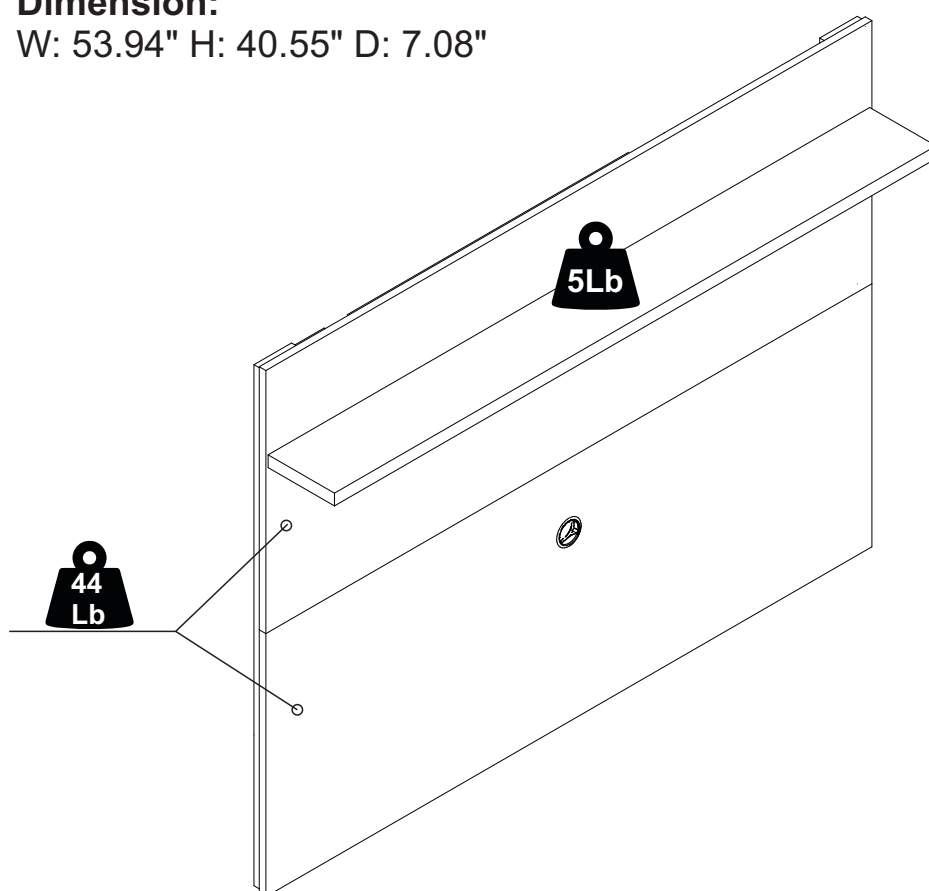


QUANTITY OF PEOPLE
TO ASSEMBLE THIS
FURNITURE





REQUIRED TOOLS

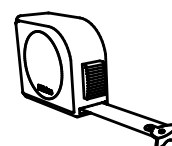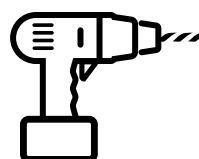

FRONT VIEW







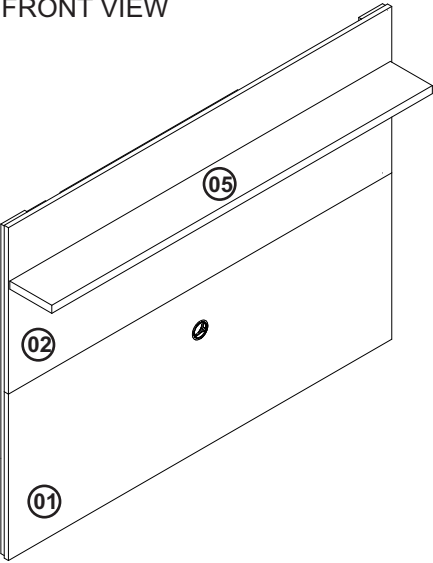


REAR VIEW

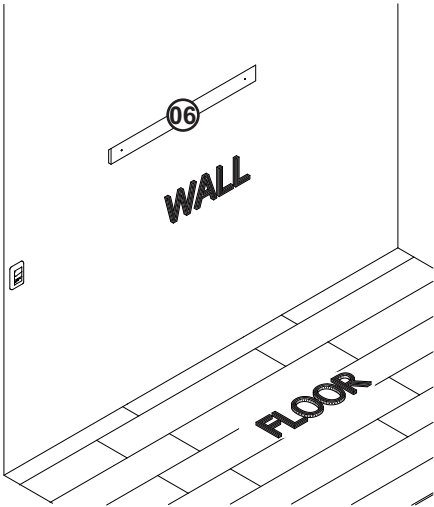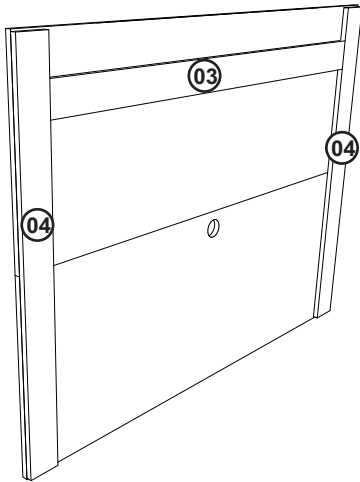


| PART | DESCRIPTION | QUANTITY |
|------|---------------|----------|
| 01 | LOWER PANEL | 01 |
| 02 | TOP PANEL | 01 |
| 03 | PANEL SUPPORT | 01 |
| 04 | BACK SUPPORT | 02 |
| 05 | SHELF | 01 |
| 06 | WALL SUPPORT | 01 |

HARDWARE

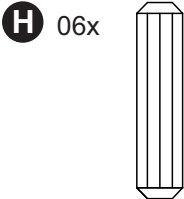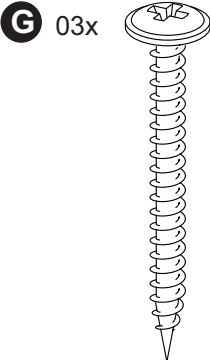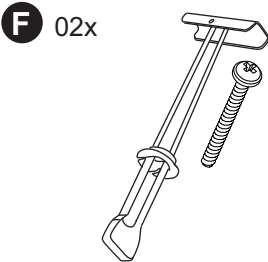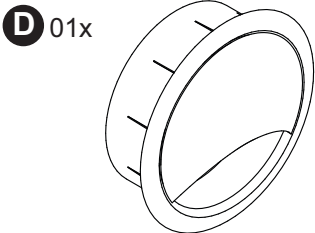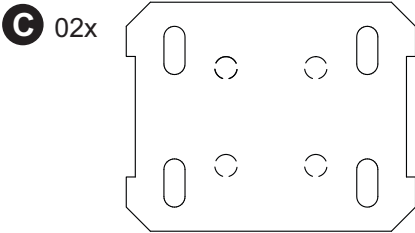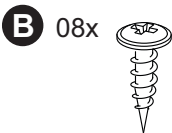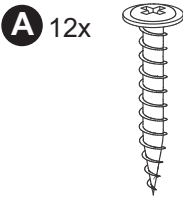


STEP 1

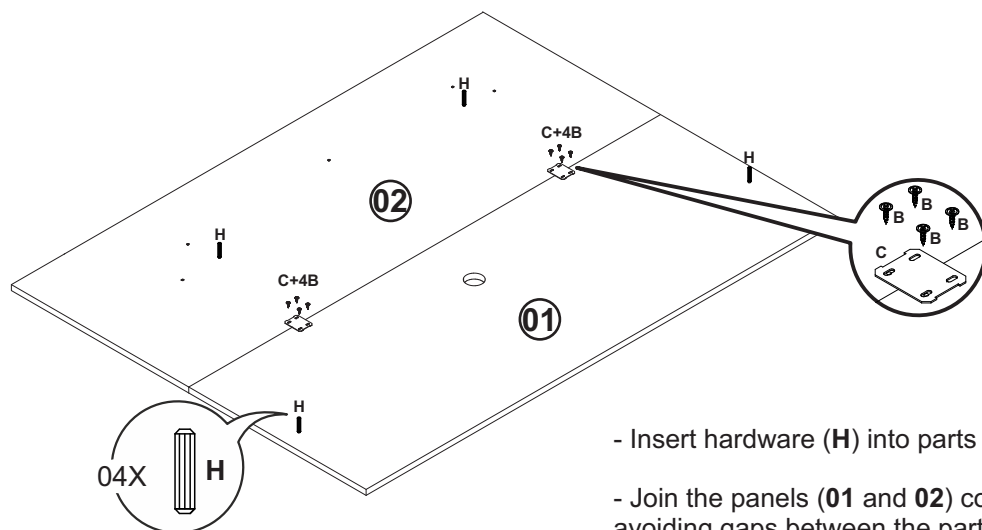


- Insert hardware (H) into parts (01 and 02).

- Join the panels (01 and 02) correctly aligning the edges, avoiding gaps between the parts and connect them with the steel plate (C) and bolts (B).

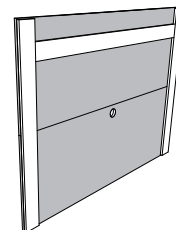


STEP 2

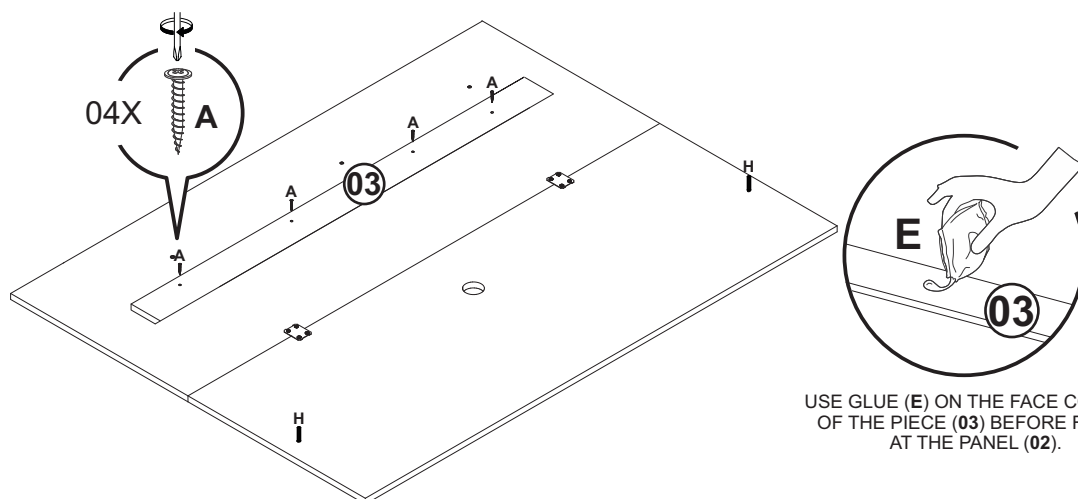


USE GLUE (E) ON THE FACE CONTACT OF THE PIECE (03) BEFORE FIXING AT THE PANEL (02).


- Fix the piece (03) in the top panel (02) with bolt (A).

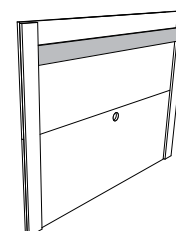


STEP 3

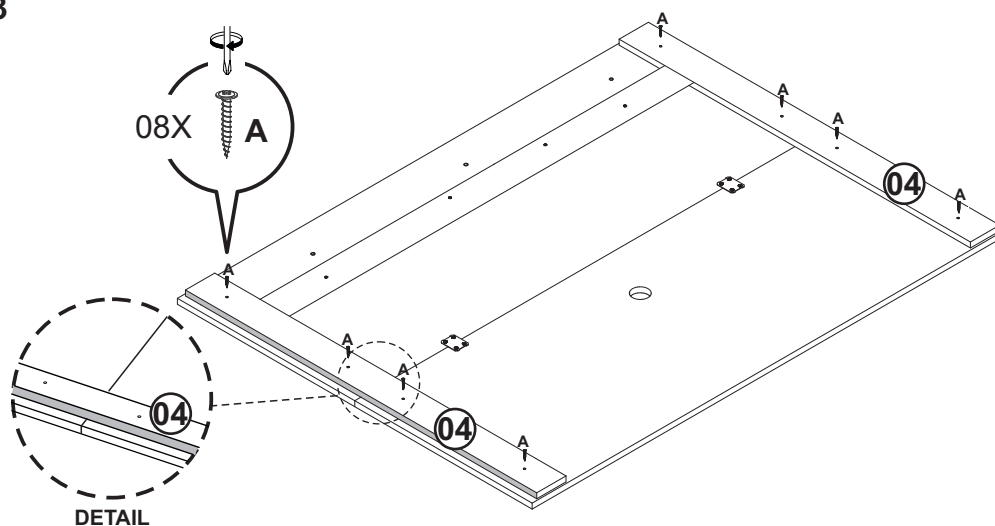


- Fix the parts (04) behind the panel (01 and 02) with bolt (A), observing the right position of the finished edges and correctly aligning as show in the drawing.

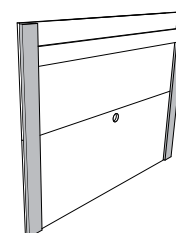


STEP 4

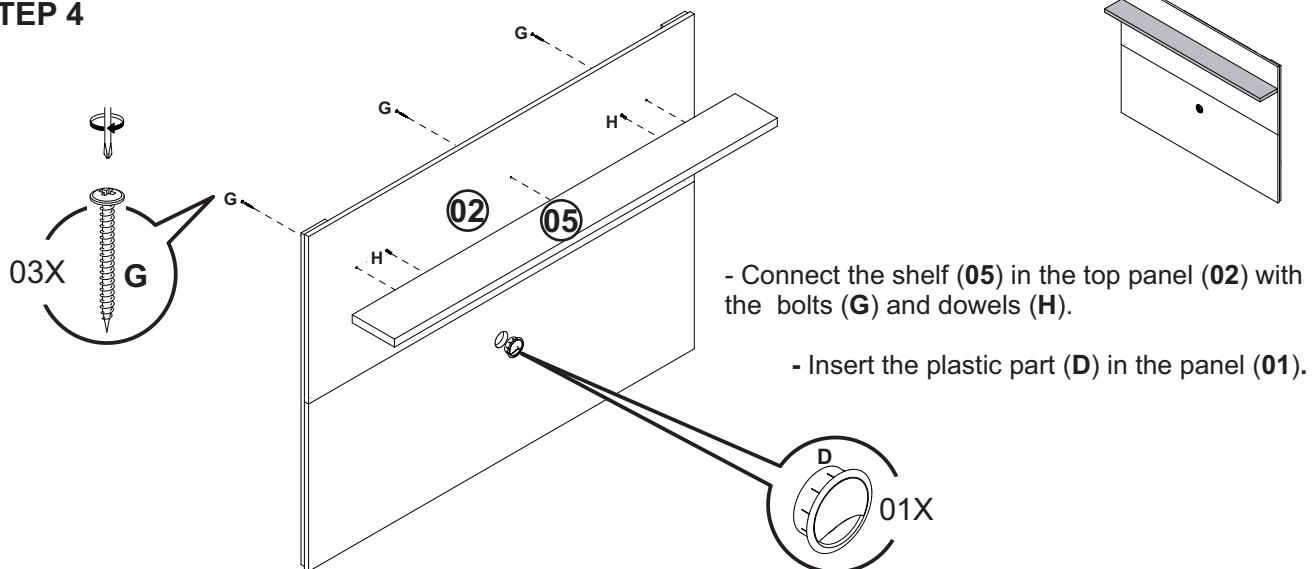

STEP 5

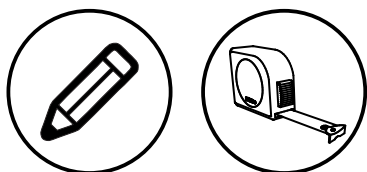


With a pencil and measuring tape mark the height to fasten the part (06) on the wall.

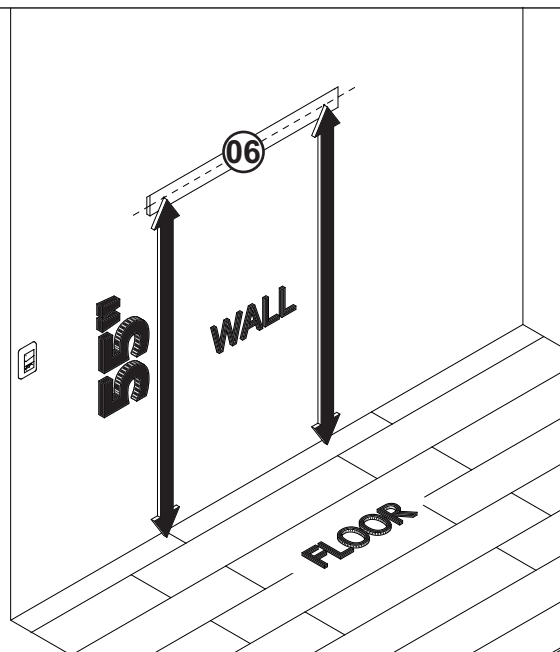


STEP 6


How to use the drywall toggle bolt (F):

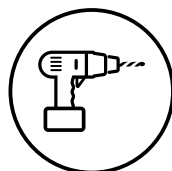



- Drill the wall with one twist bit drill of 1/2 inches.

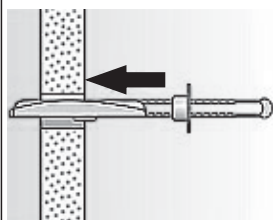


Insert the bolt and toggle into hole

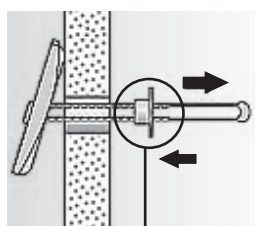


To push against the wall

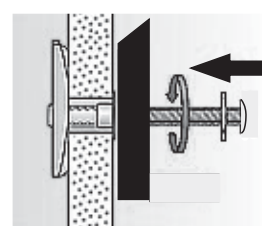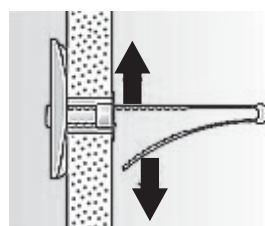


STEP 7

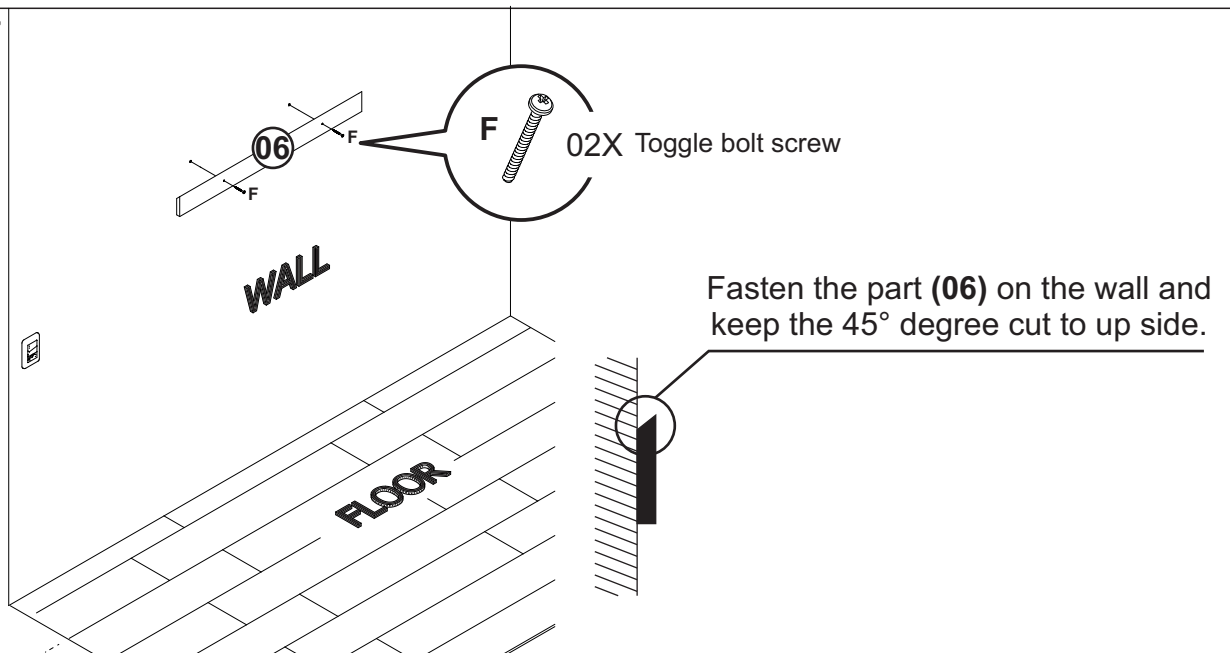

STEP 8

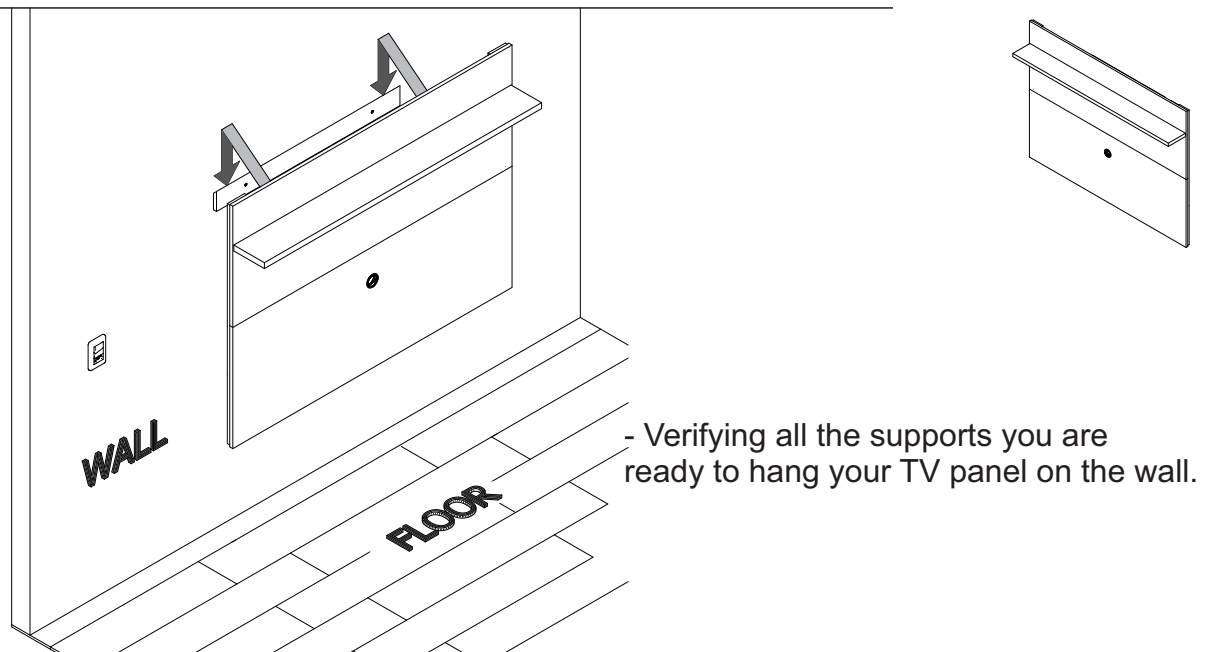

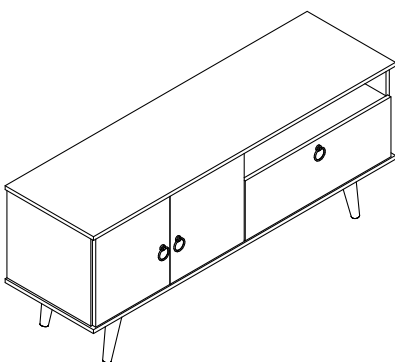


Tribeca TV Stand 53.94

Before starting


Prepare the room before starting the assembly, leaving it completely clean and the area in good condition to start the work.

Use the cardboard of the packaging and the foam sheets protection to separate and support the parts removed from the boxes.

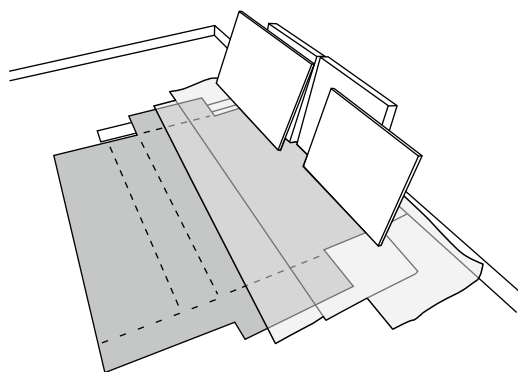

Dimension:



W: 53.94" H: 26.57" D: 15.74"

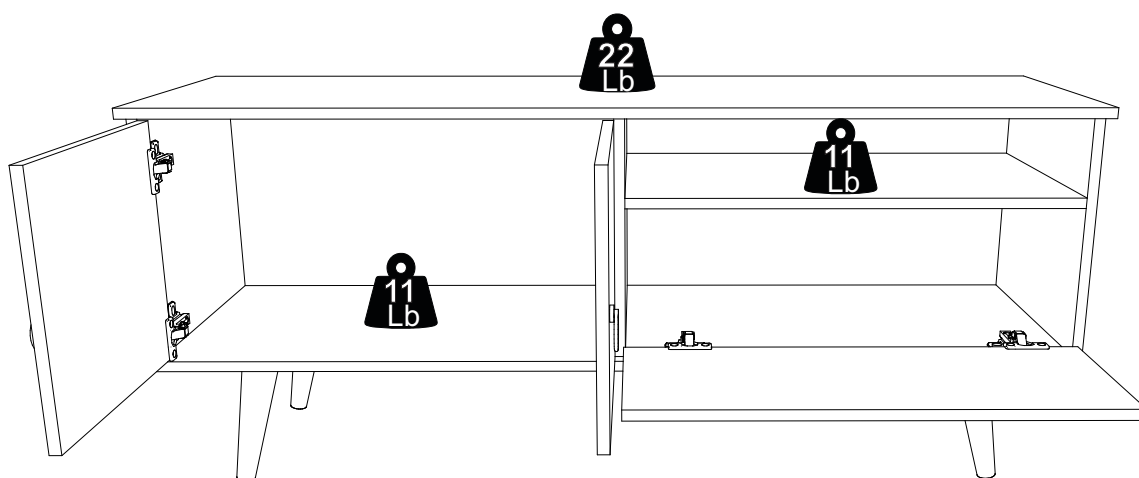


QUANTITY OF PEOPLE
TO ASSEMBLE THIS
FURNITURE




REQUIRED TOOLS

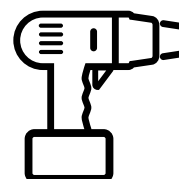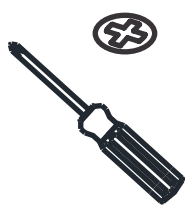

FRONT VIEW











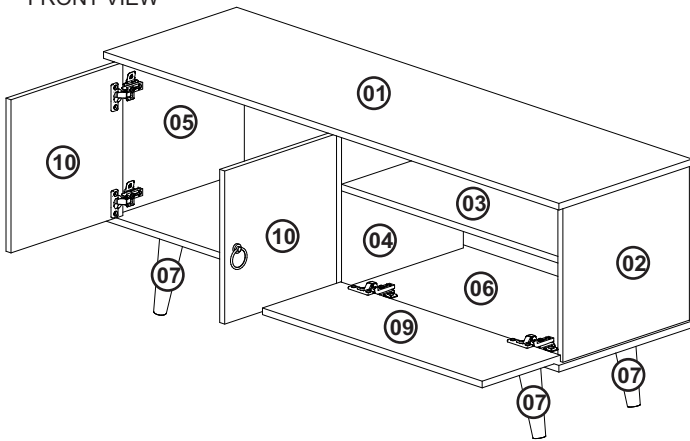


REAR VIEW

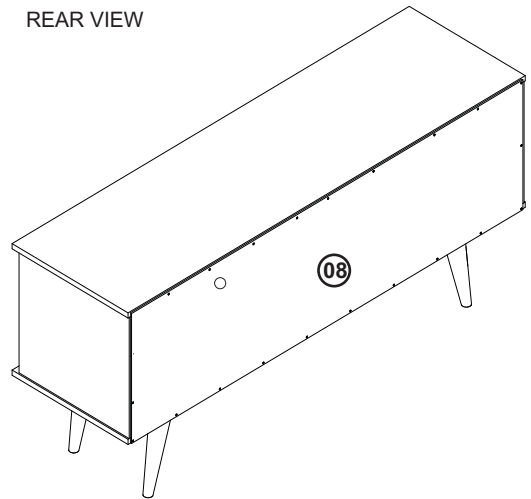


| PART | DESCRIPTION | QUANTITY |
|------|------------------|----------|
| 01 | TOP | 01 |
| 02 | RIGHT SIDE | 01 |
| 03 | SHELF | 01 |
| 04 | PARTITION | 01 |
| 05 | LEFT SIDE | 01 |
| 06 | BASE | 01 |
| 07 | FEET | 04 |
| 08 | BACK COVER | 01 |
| 09 | TILTING DOOR | 01 |
| 10 | RIGHT/ LEFT DOOR | 02 |


HARDWARE

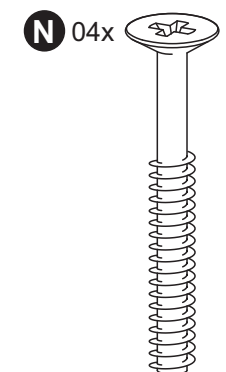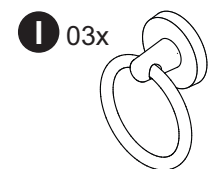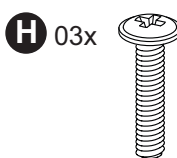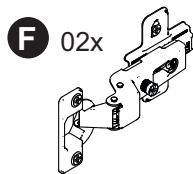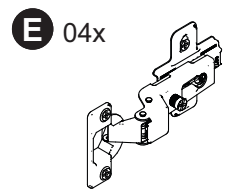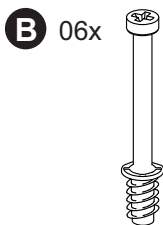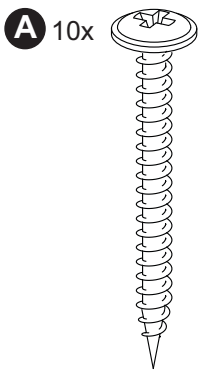


STEP 1

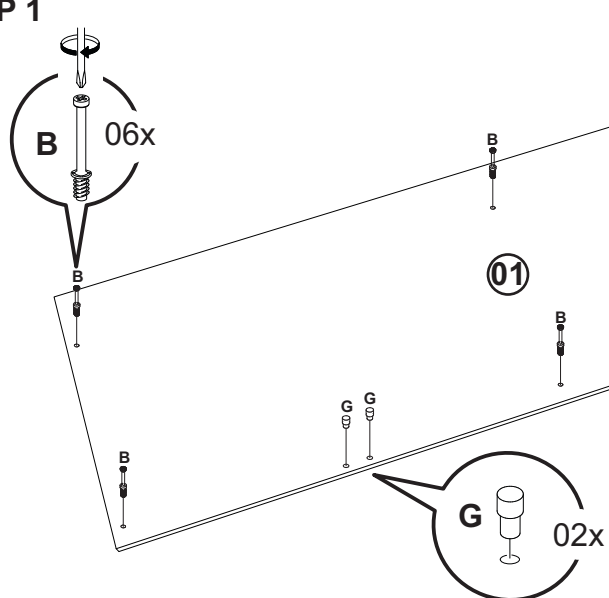


- Insert the hardware (**B** and **G**) on the piece (**01**).

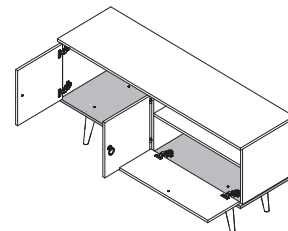


STEP 2

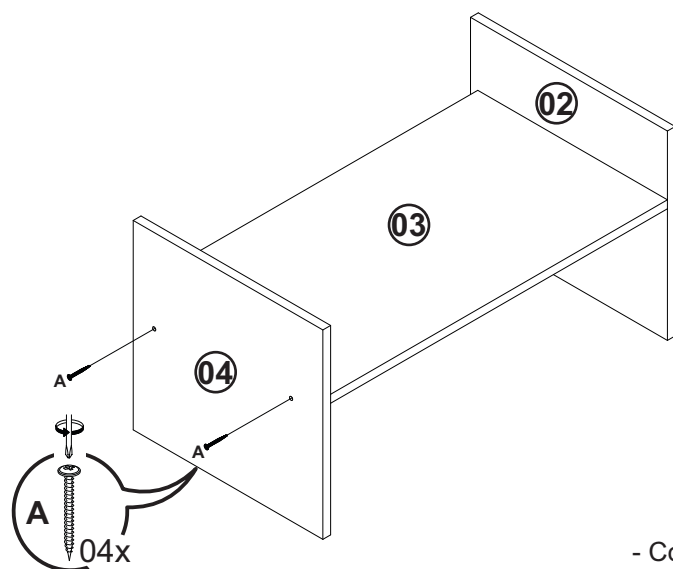


- Connect the parts (**02**, **03** and **04**) with a bolts (**A**).

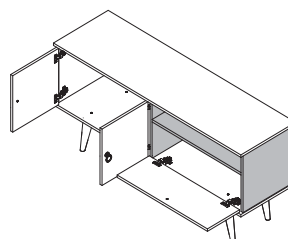


STEP 3

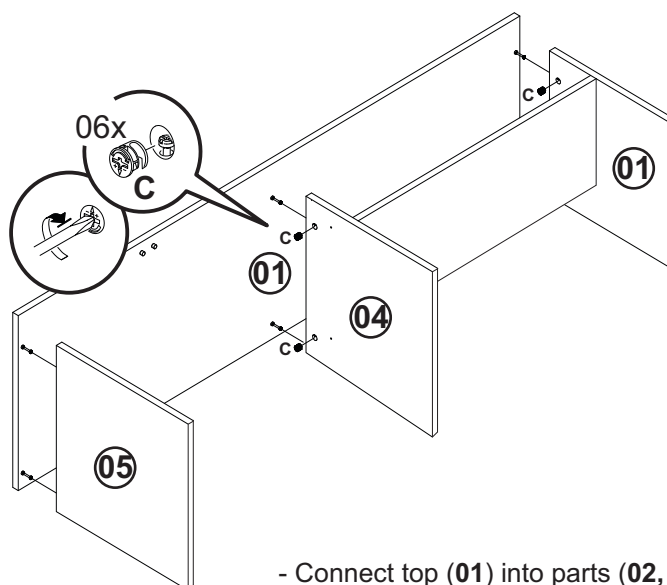


- Connect top (**01**) into parts (**02**, **04** and **05**) with hardware (**C**).

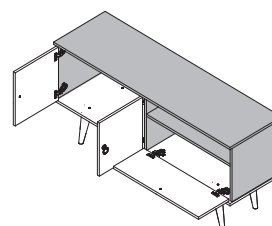

STEP 4

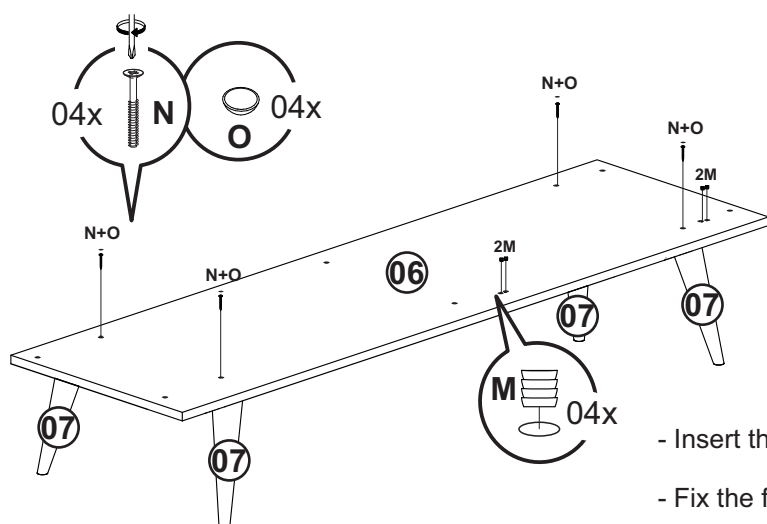


Use the glue (J) before fastening the feet (07).

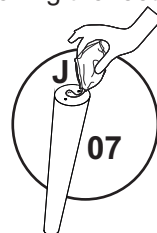


- Insert the hardware (M) in the base (06).
- Fix the feet (07) under the base (06) with a bolt (N).
- Apply the plastic covers (O) on top of the bolts (N).

STEP 5

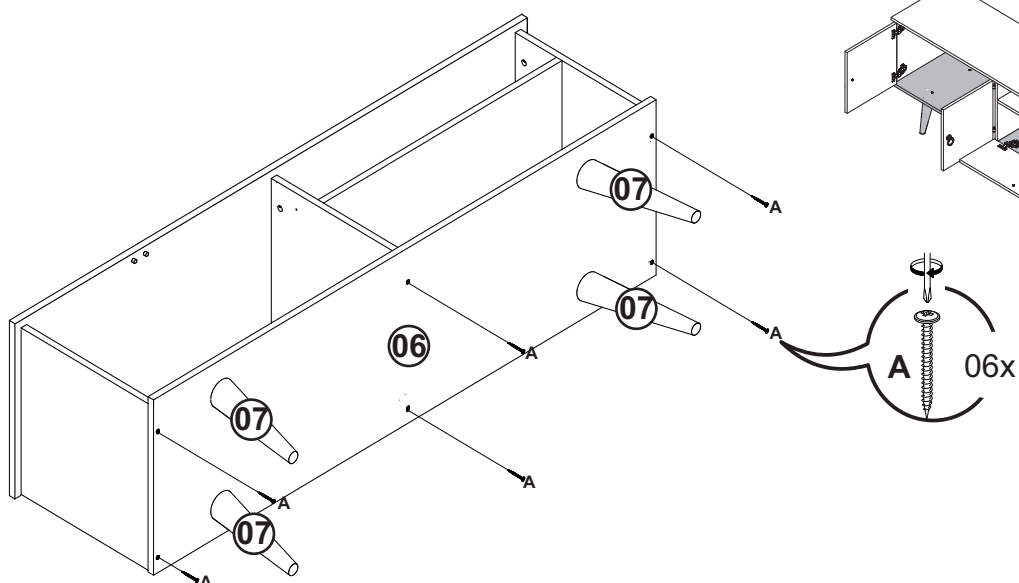


- Fix the piece (06) under the part assemble on step 3, using bolt (A).

STEP 4

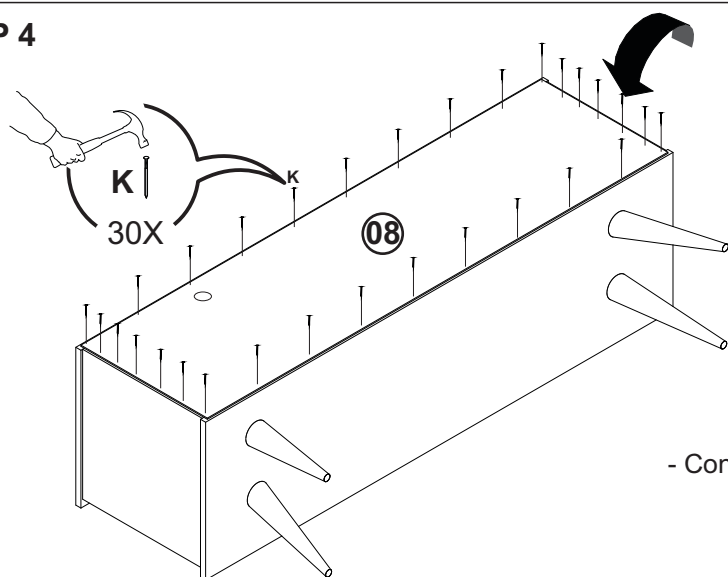


- Connect back cover (08) with nails (K).

STEP 5

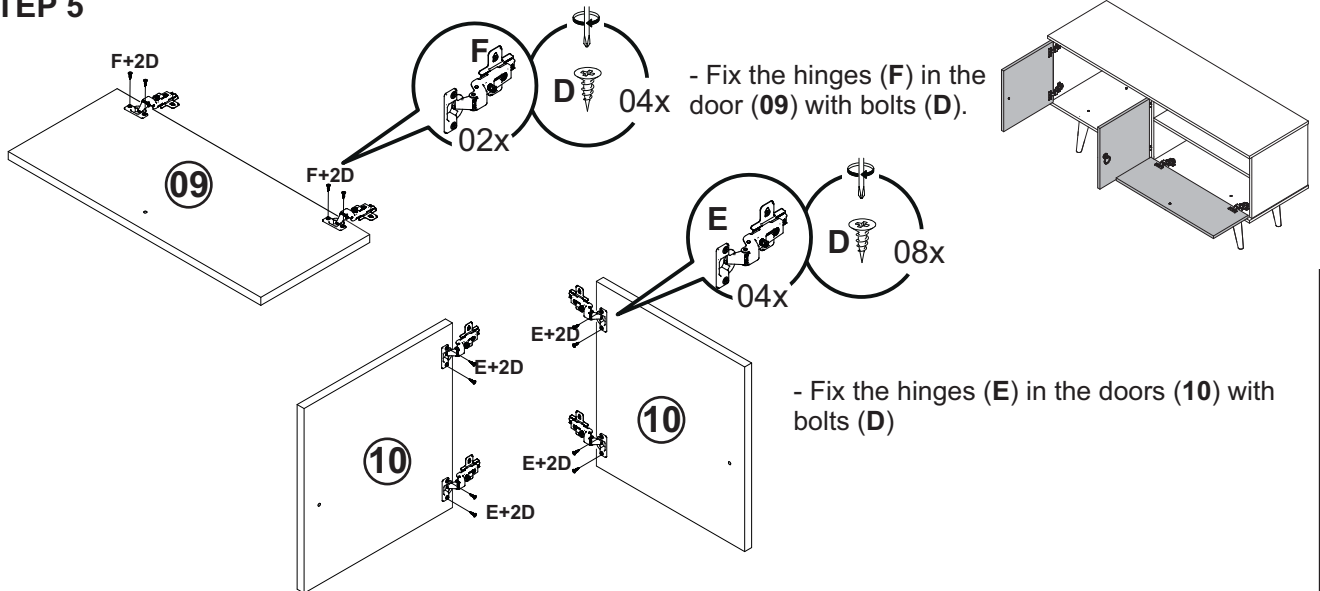

STEP 6

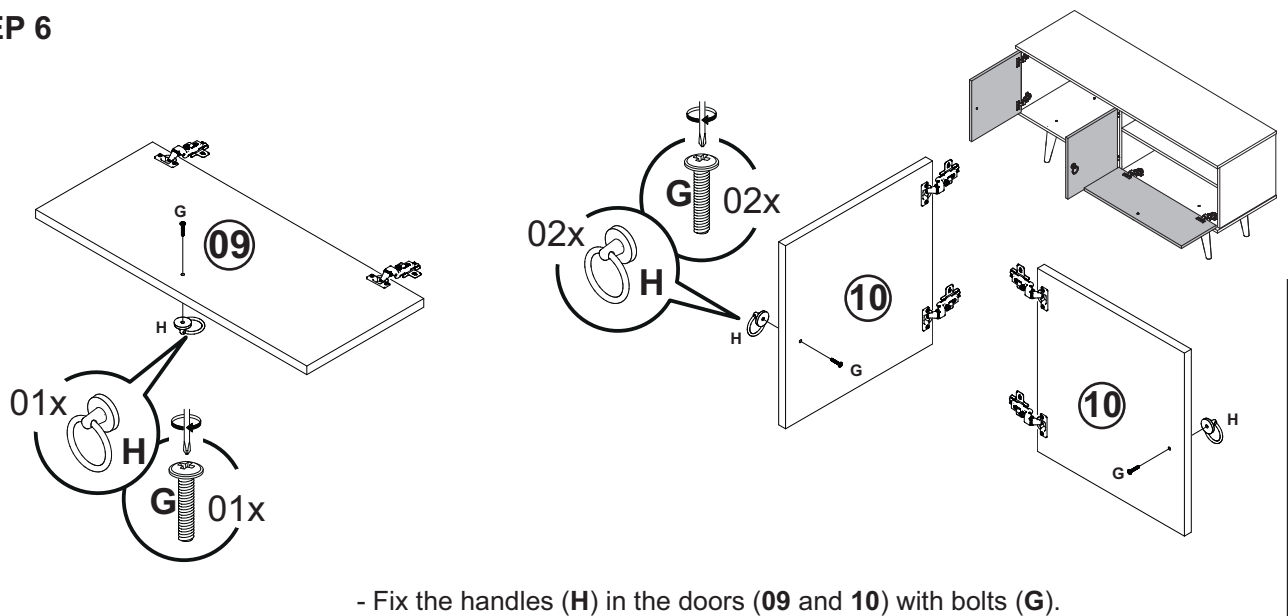

STEP 7

