




ASSEMBLY INSTRUCTIONS

X-BINS (VT-DIAMONDBIN)


Contents of Box:

- 12 Screws
- 8 Wood pegs
- 2 Side panels (smaller package)
- 2 Top/bottom panels (medium package)
- 2 X Panels (large package)


* A Phillips head screwdriver is required for assembly

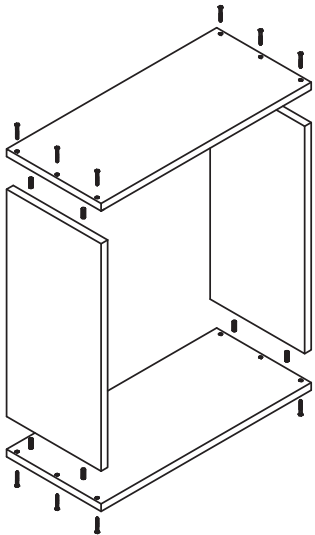

STEP 1, 2, & 3

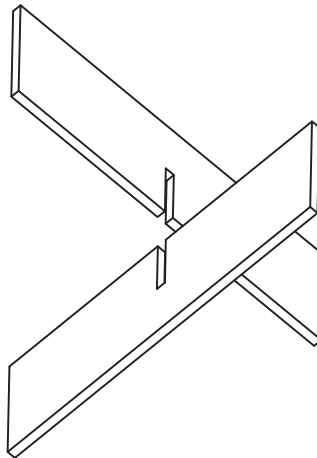


STEP 4

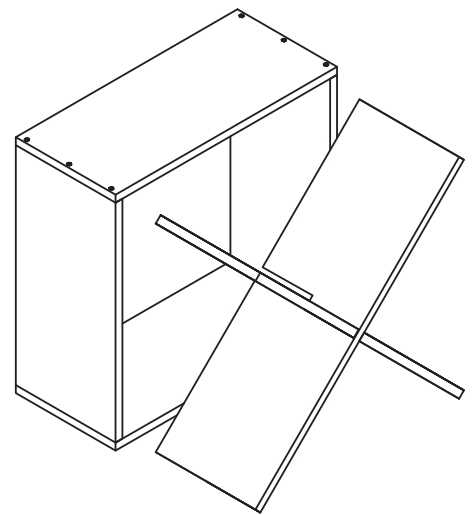

STEP 5

1. Insert wood pegs into both side panels.
2. Connect top panels to the side panels using the wood pegs.
3. With a Phillips head screwdriver, screw the top and bottom panel into the side panels using the 12 screws included.
4. Connect the two X panels together in an X pattern as shown.
5. Place the assembled X panels into the finished frame. If you have difficulty doing this, loosen the screws on the top, place the X panels in the frame and then tighten the screws again.

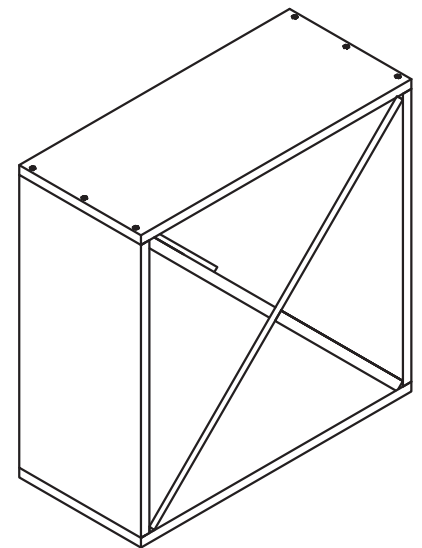

FINISHED X-BIN