

88 5537 70


Lafayette Vanity with Mirror

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

Home  
Styles

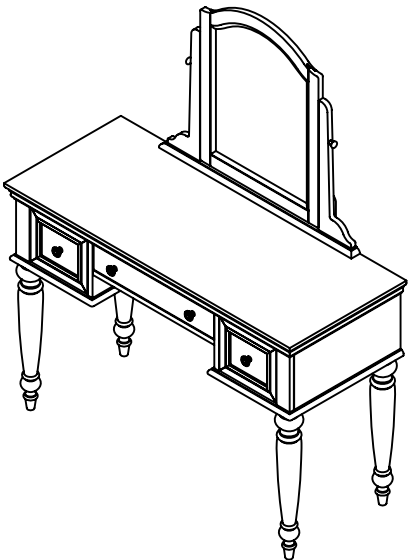

Part List

A. Mirror

1 pc.

B. Mirror Support

1 pc.

C. Mirror Support

1 pc.

D. Mirror Support

1 pc.

E. Mirror Support

2 pcs.

O. Leg

4 pcs.

F. Top

1 pc.

G. Side Panel

1 pc.

H. Side Panel

1 pc.

I. Divider

1 pc.

J. Divider

1 pc.

K. Front Piece

1 pc.

L. Bottom

1 pc.

M. Bottom

1 pc.

N. Back Panel

1 pc.

P. KD Drawer


2 pcs.

Q. KD Drawer

1 pc.


(Knock-Down Construction, please refer to the last page of instructions for steps to complete drawer assembly)

Hardware List




Cam Lock Screw

18 pcs. (+1 extra)




Cam Lock

18 pcs. (+1 extra)




1 1/4" Round Head Screw

12 pcs. (+1 extra)




1" Round Head Screw

2 pcs. (+1 extra)




1 1/4" Flat Head Screw

24 pcs. (+1 extra)




3/4" Flat Head Screw

10 pcs. (+1 extra)




Bolt

8 pcs. (+1 extra)




Axis Bolt

2 pcs.




Mirror Axis

2 pcs.




Machine Screw

4 pcs.




Handle

4 pcs.




Flat Washer

8 pcs. (+1 extra)




Spring Washer

8 pcs. (+1 extra)




Plastic Washer

2 pcs. (+1 extra)



Hex Wrench

1 pc.



Hex Wrench (Small)

1 pc.

Tools required for assembly : Phillips screwdriver

Tools recommended for assembly : Level

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319

servicedesk@homestyles-furniture.com


# Assembly Instructions 2/9

**IMPORTANT**

- \* Do not tighten up all the screws until each part is properly assembled.
- \* You should keep Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- \* After assembly, item must be level to work properly. use the included adjustable levelers to level
- \* Use a soft cloth between these parts and the floor.

## STEP 1

Insert Cam Lock Screws into the pre-drilled holes of Top (F), Side Panel (G) and (H), Divider (I) and (J), Back Panel (N).

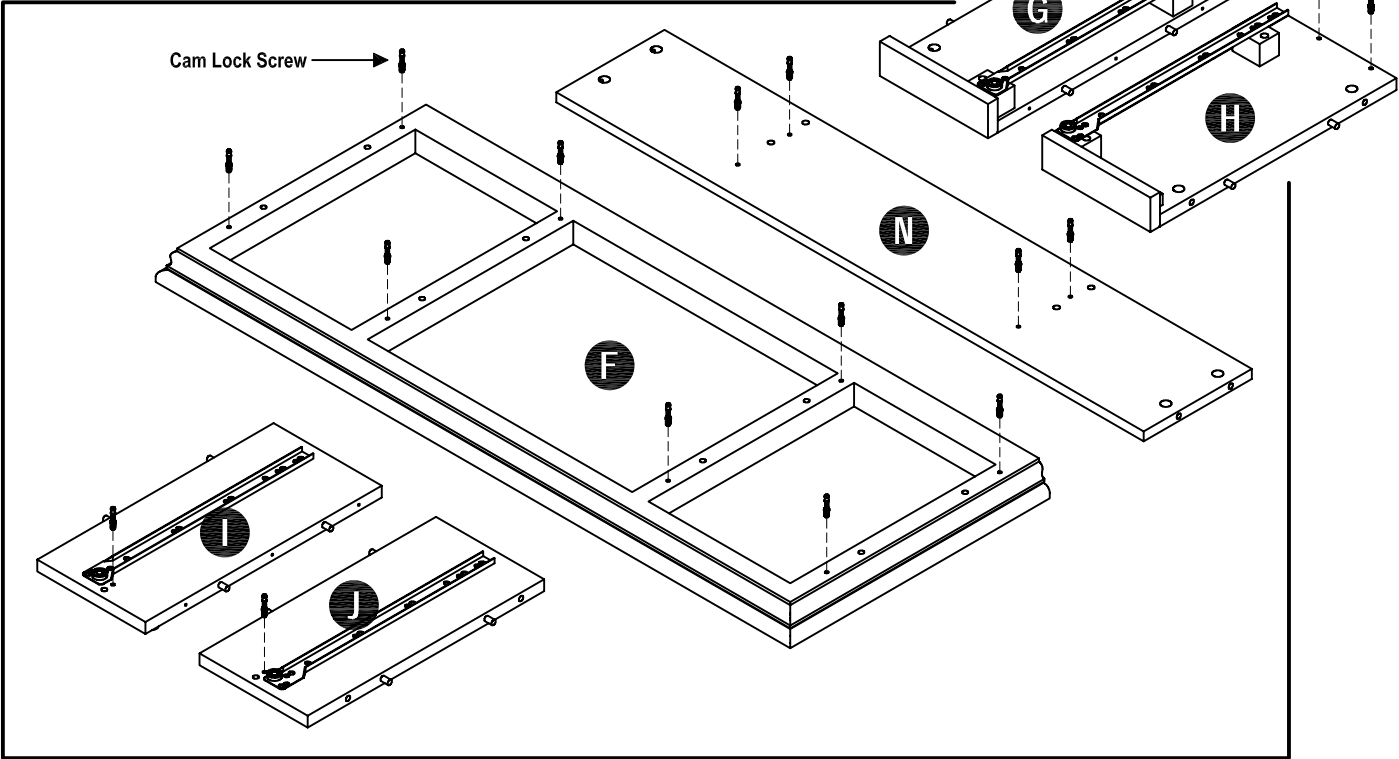

## STEP 2

Attach Front Piece (K) to Divider (I) and (J) with Cam Locks.  
(See figure 1)



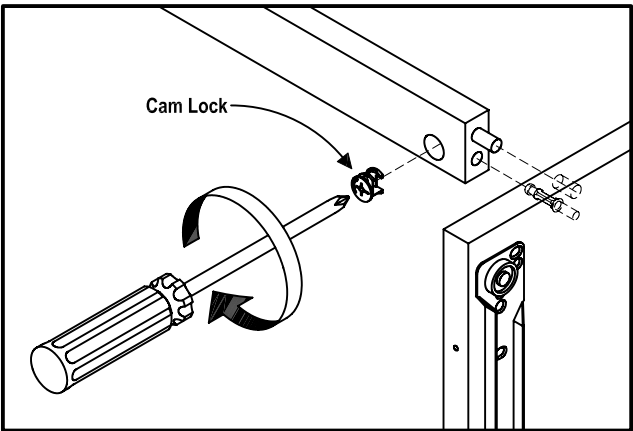



Figure 1

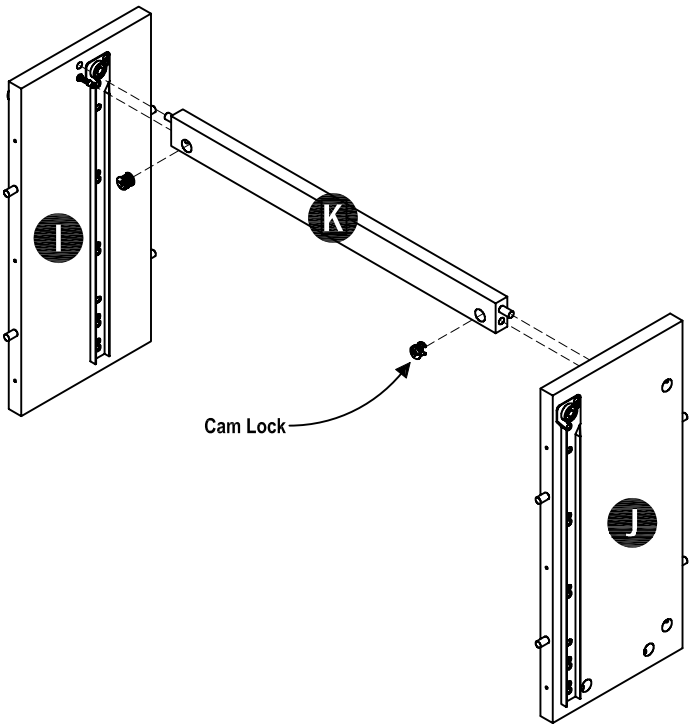

# Assembly Instructions 3/9

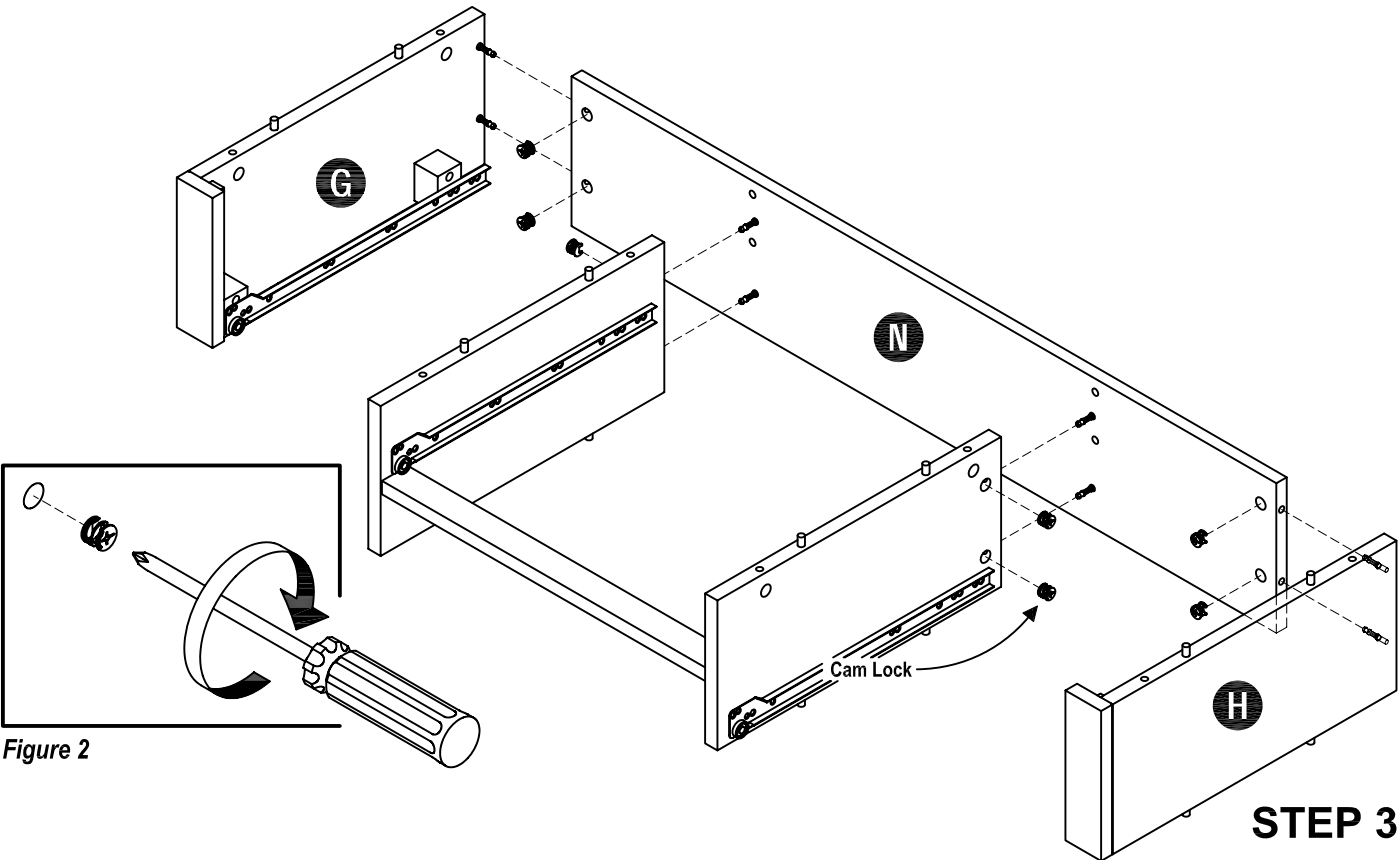

Attach unit, Side Panel (G) and (H) to Back Panel (N) with Cam Locks.  
(See figure 2)


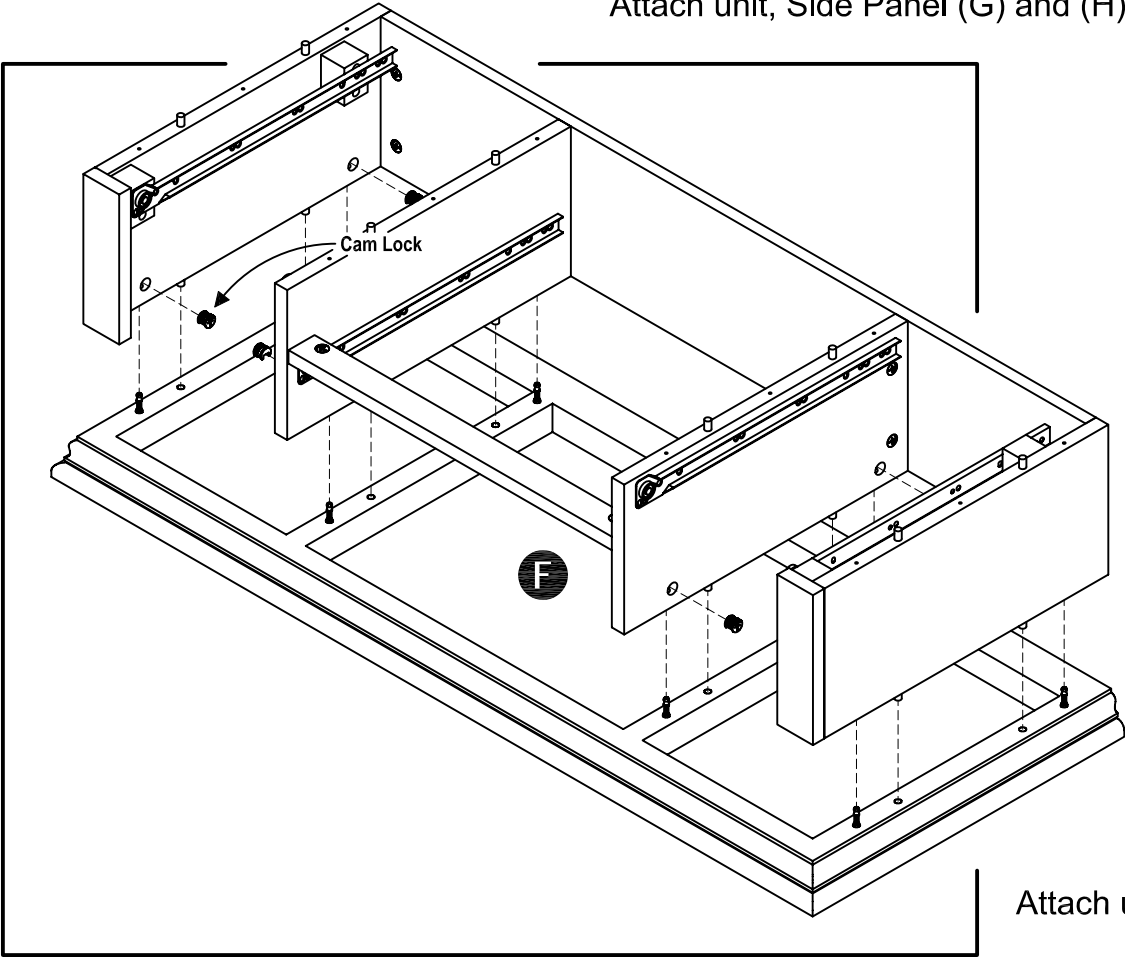


Attach unit to Top (F) with Cam Locks.

# Assembly Instructions 4/9

## STEP 5

Attach Bottom (L) and (M) to unit using 1 1/4" Round Head Screws.

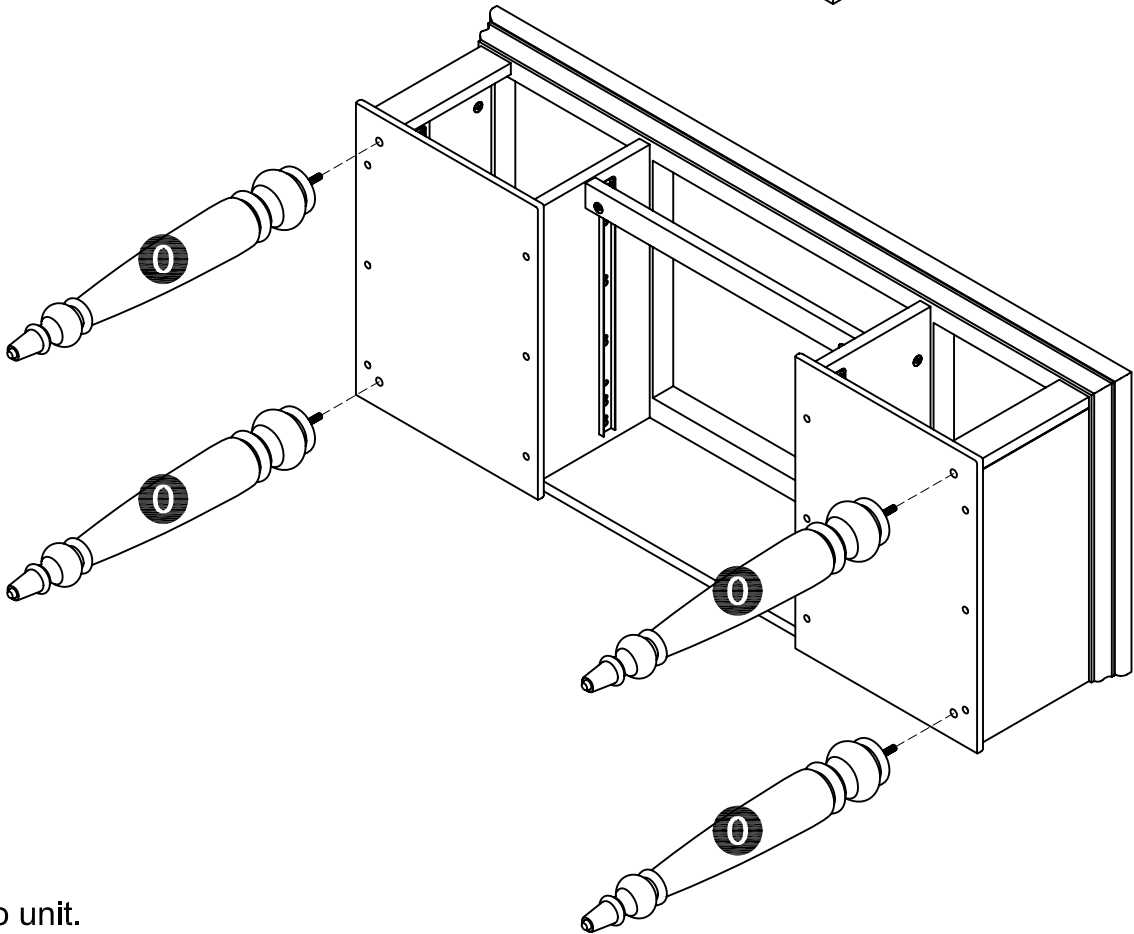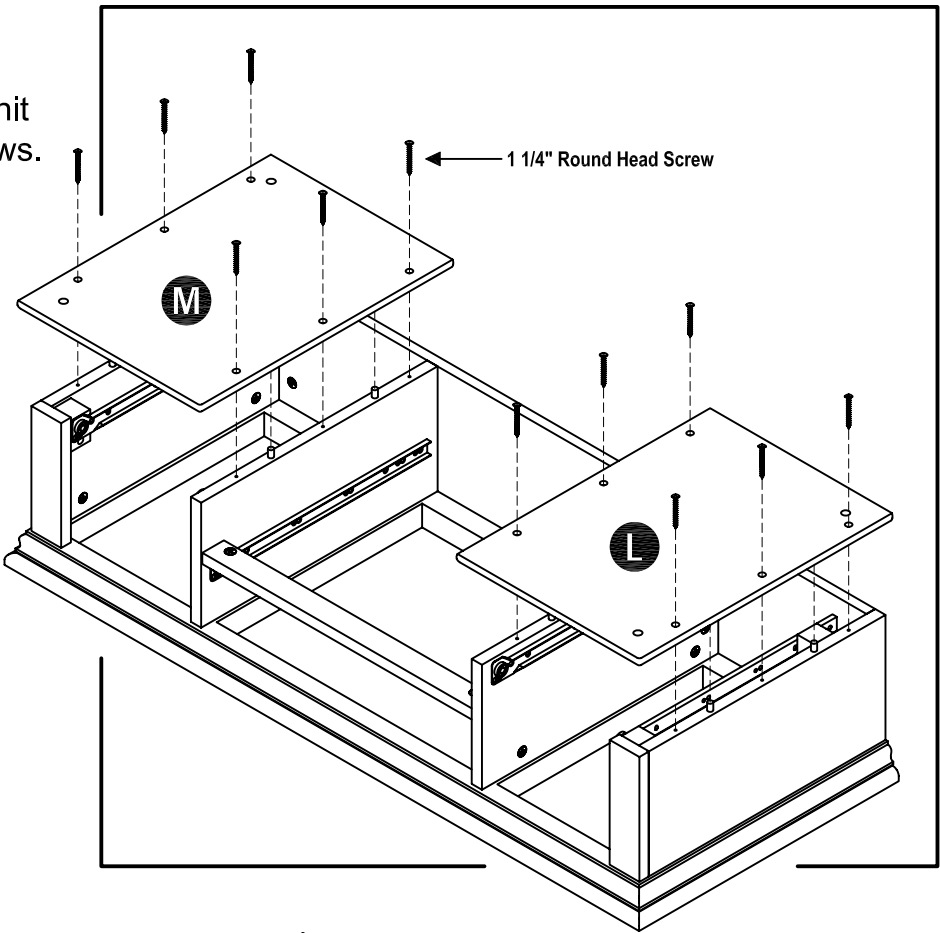


## STEP 6

Attach Legs (O) to unit.

STEP 7

Attach Mirror Support (D) to Mirror Support (B) and (C) to unit using 1" Round Head Screws.

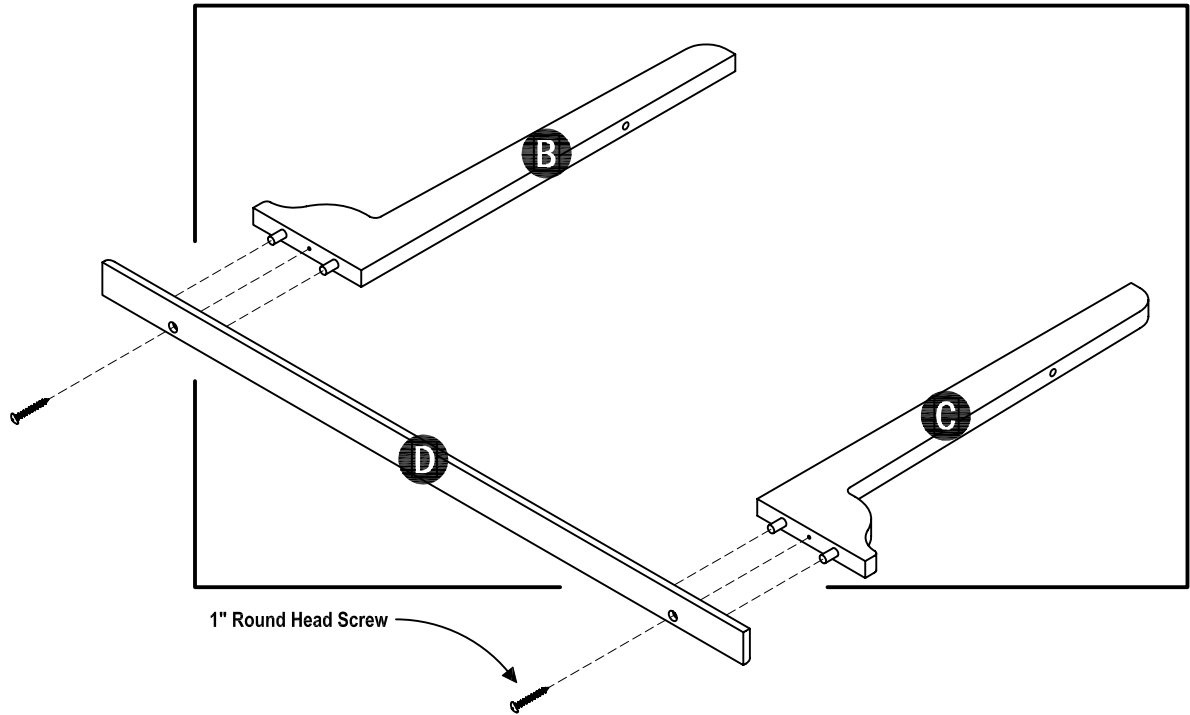

STEP 8

Attach Mirror (A) to unit using Axis Bolts, Mirror Axis and Plastic Washers.  
(See figure 3)


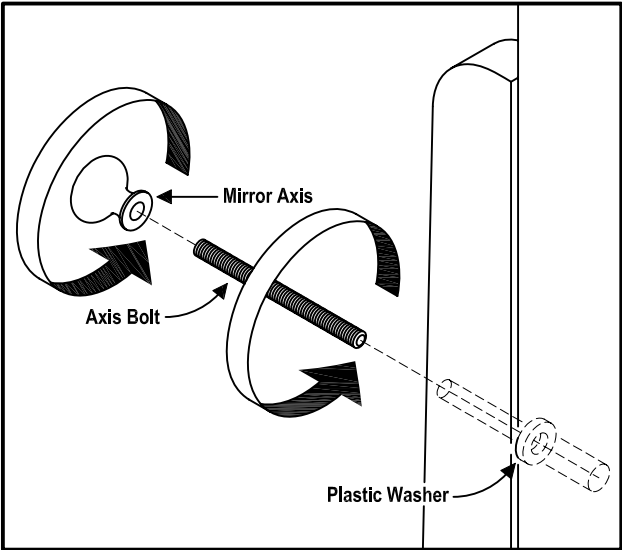


Figure 3

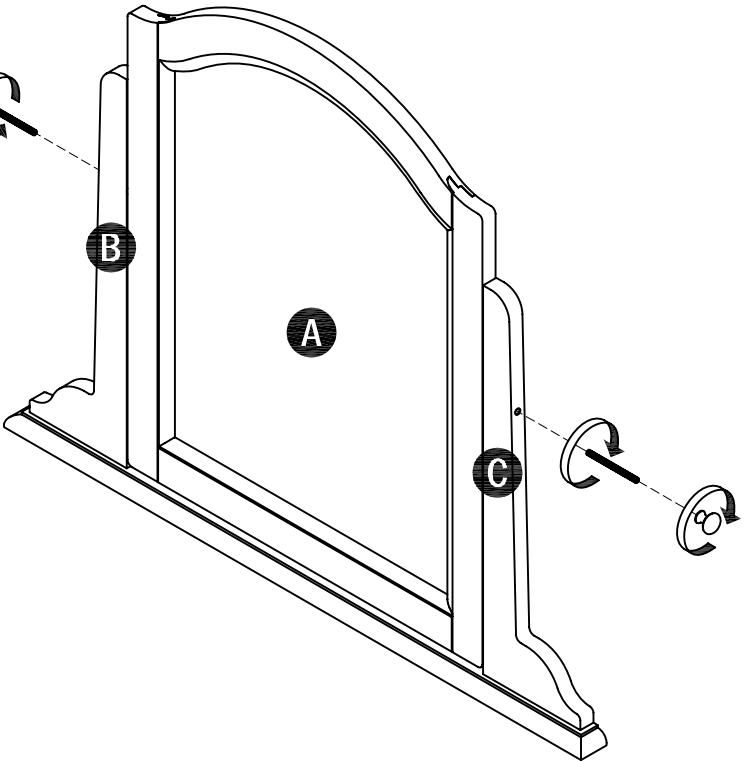

# Assembly Instructions 6/9

## STEP 9

Attach Mirror Support (B), (C) and (E) to unit using Bolts, Flat Washers and Spring Washers.

Tighten it using Hex Wrench.  
(See figure 4)

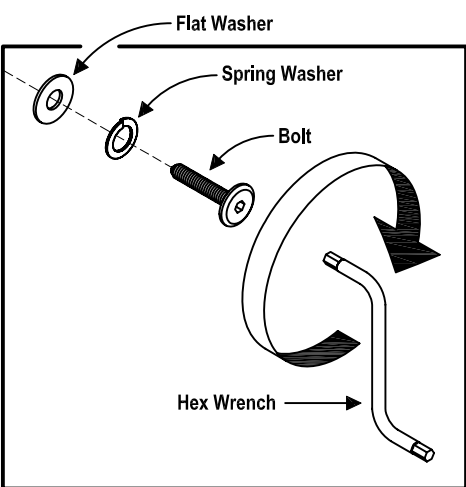


Figure 4

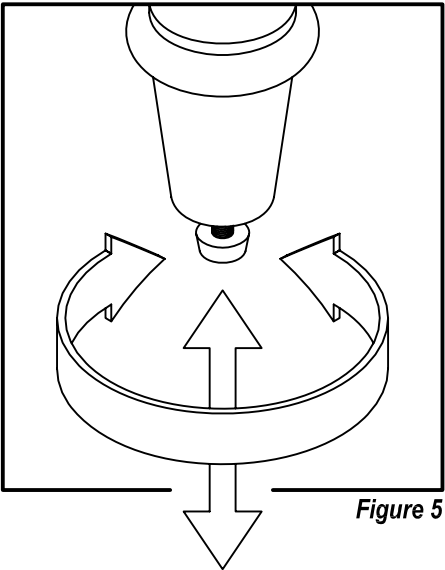
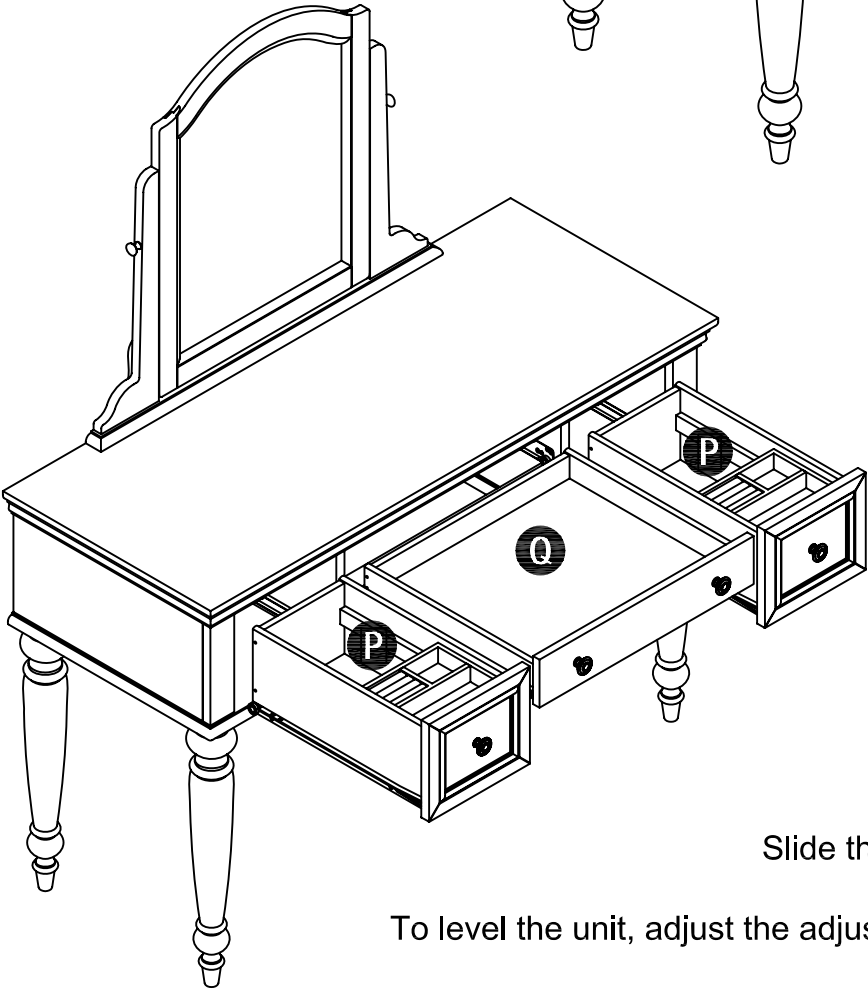
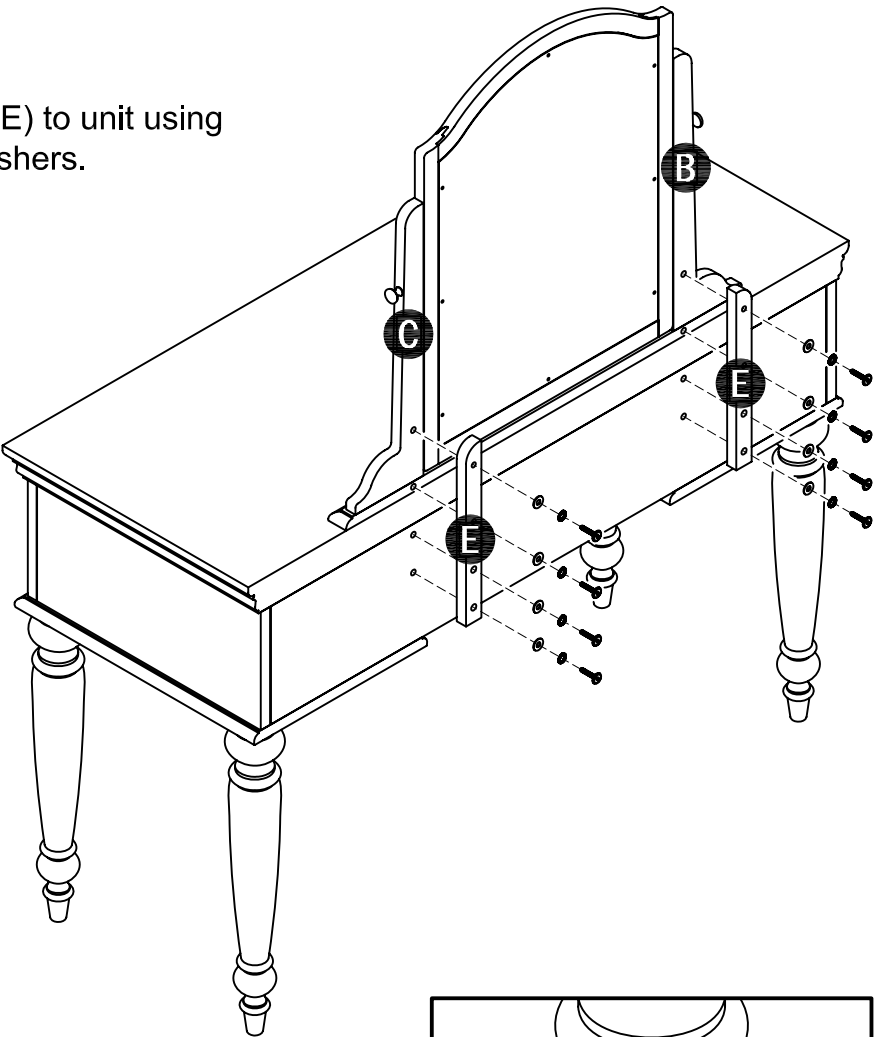



Figure 5

## STEP 10

Turn the unit to its' upright position.  
Slide the Drawers (P) and (Q) into position.

To level the unit, adjust the adjustable levelers on the bottom of unit.  
(See figure 5)


# Drawer (P)

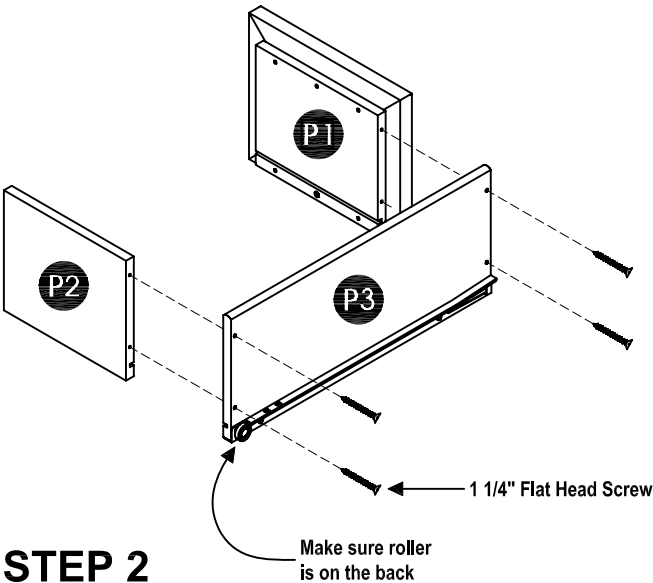

## STEP 2


Insert Base Part (P5) into the groove.

Attach Side Part (P4) to Front Part (P1) and Back Part (P2) using a Phillips screwdriver and 1 1/4" Flat Head Screws.

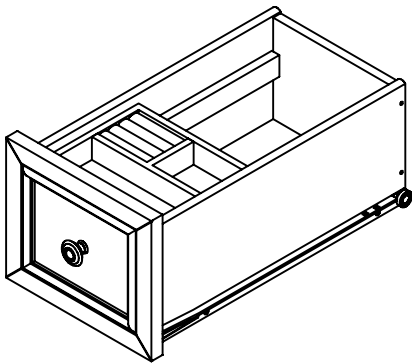


## STEP 1

Attach Side Part (P3) to Front Part (P1) and Back Part (P2) using a Phillips screwdriver and 1 1/4" Flat Head Screws.

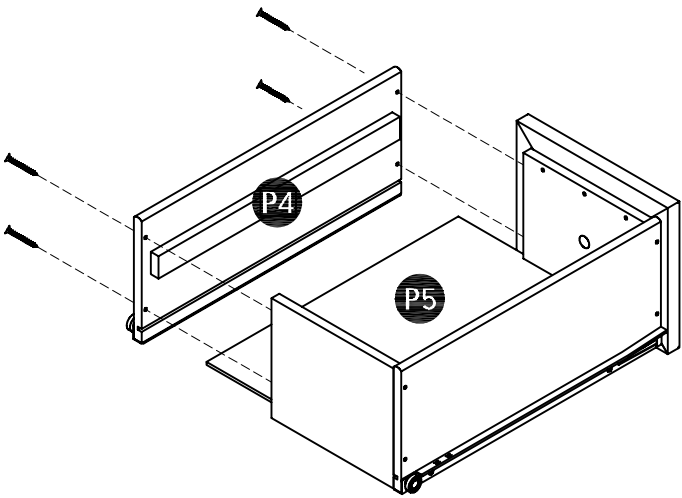


## STEP 3

Attach Handle with Machine Screws.






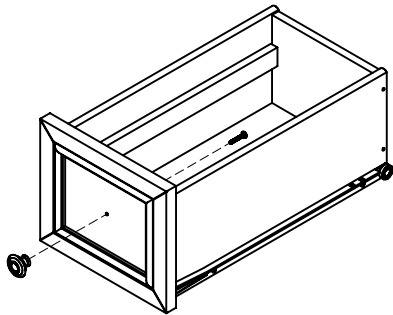


## STEP 4



Place Jewel Box (P6) into position.

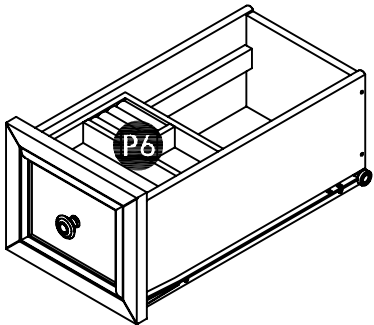

## Part List

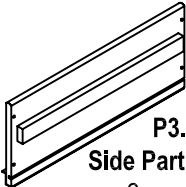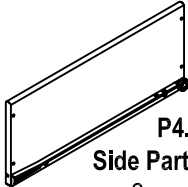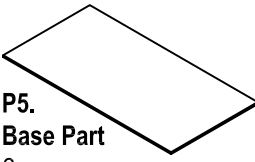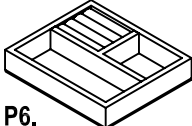					
P1. Front Part 2 pcs.	P2. Back Part 2 pcs.	P3. Side Part 2 pcs.	P4. Side Part 2 pcs.	P5. Base Part 2 pcs.	P6. Jewel Box 2 pcs.


# Drawer (Q)

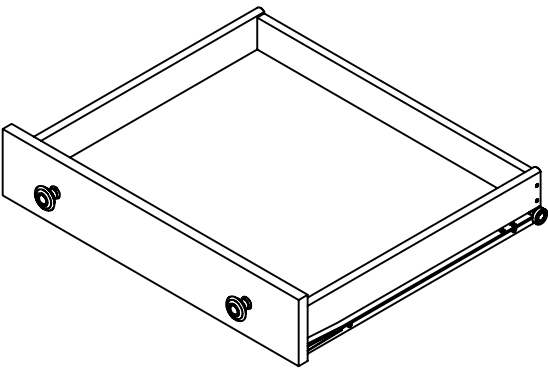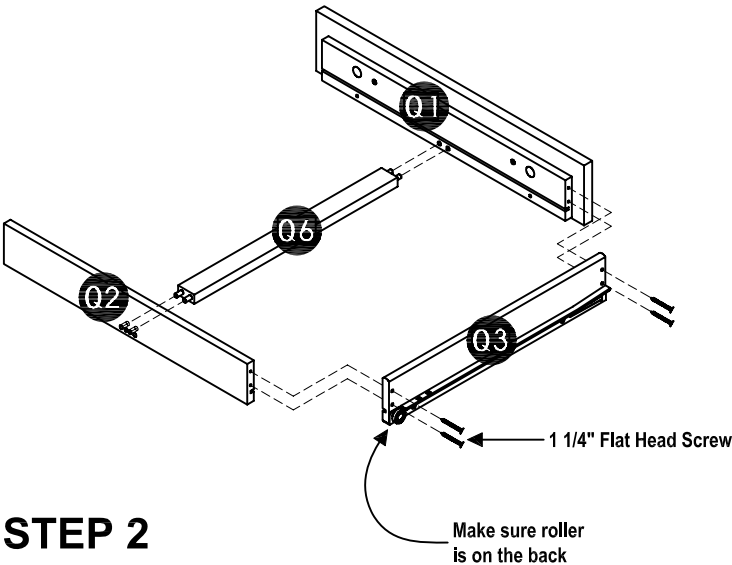

## STEP 1


Attach Base Part (Q6) to Front Part (Q1) and Back Part (Q2).

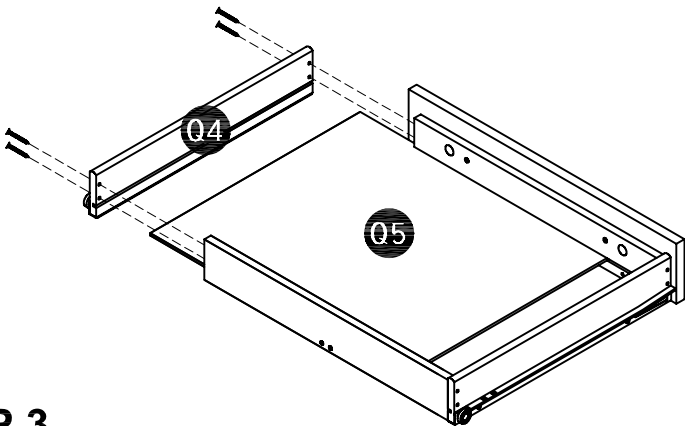



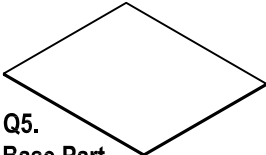

Attach Side Part (Q3) to Front Part (Q1) and Back Part (Q2) using a Phillips screwdriver and 1 1/4" Flat Head Screws.



## STEP 3

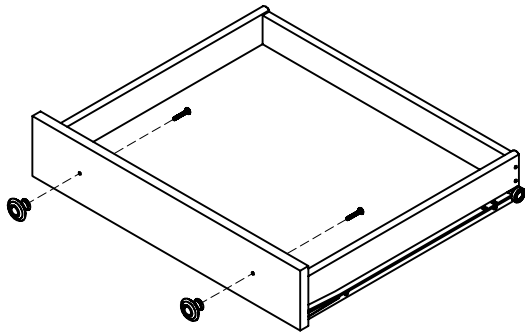Attach Handle with Machine Screws.

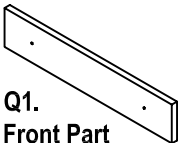

Part List					
					
<b>Q1.</b> Front Part 1 pc.	<b>Q2.</b> Back Part 1 pc.	<b>Q3.</b> Side Part 1 pc.	<b>Q4.</b> Side Part 1 pc.	<b>Q5.</b> Base Part 1 pc.	<b>Q6.</b> Base Part 1 pc.




# Assembly Instructions 9/9

## I. IF A DRAWER DOES NOT ALIGN

### STEP 1


For Drawer (P) uninstall the upper center screw and loosen slightly the lower center screws.

For Drawer (Q) loosen slightly the upper screws.

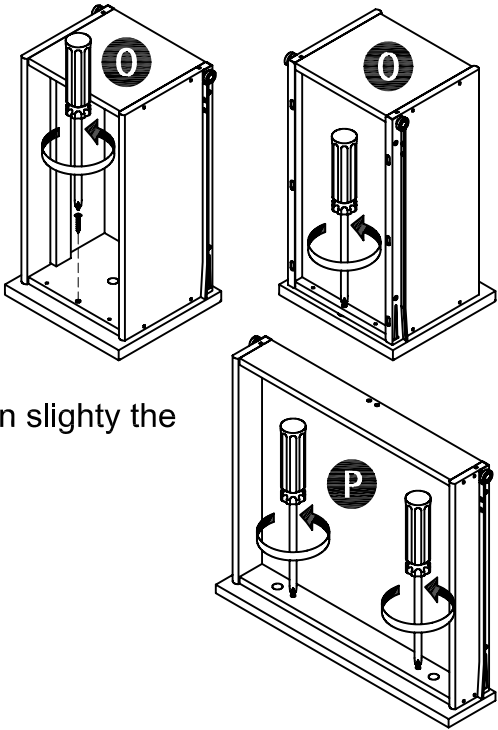


### STEP 2

Insert the drawer into the main body, then adjust the drawer front panel left or right and up or down, until the drawer gaps look proportional.

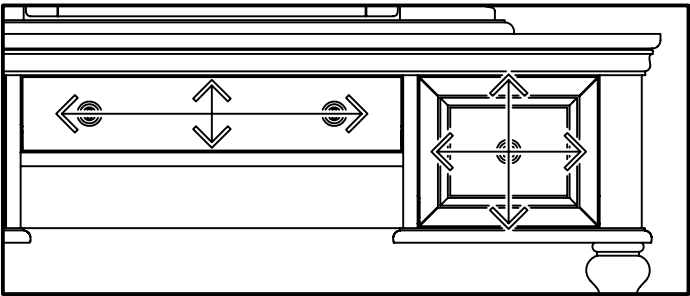


### STEP 3

Pull the drawer open slowly and tighten the lower screw for Drawer (P) and upper screws for Drawer (Q). Make sure the front panel does not move and lock the drawer front panel into position with 3/4" Flat Head Screws.

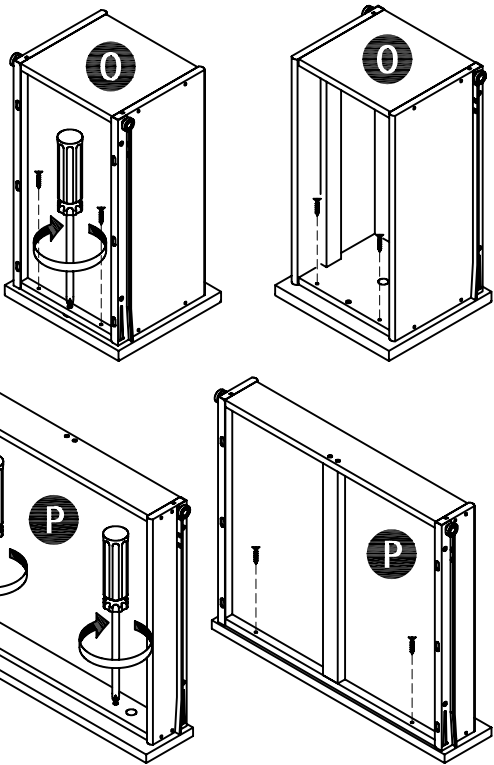

## II. IF A DRAWER ALREADY ALIGNS

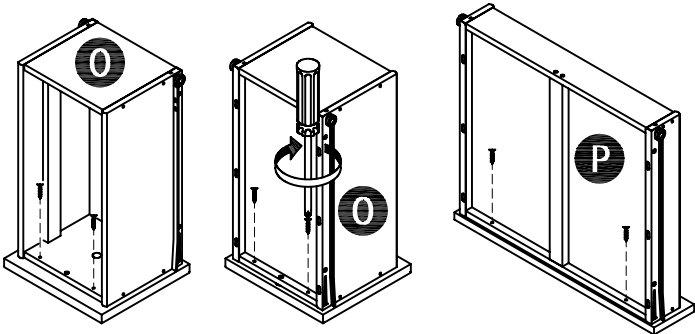

Pull out drawer slowly. Lock the drawer front panel into position with 3/4" Flat Head Screws.

# VERY IMPORTANT !!

## CARE INSTRUCTIONS

### NEVER

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE LACQUER.

### NEVER

ALLOW LIQUIDS OF ANY KIND TO REMAIN ON THE FURNITURE. ABSORPTION CAUSES WOOD TO WARP AND SPLIT AND FINISHES TO DELAMINATE.

DO NOT  
WRITE  
DIRECTLY  
ON  
SURFACE.




**PREVENT  
MARKING**

DO NOT  
PLACE IN  
DIRECT  
SUNLIGHT.



**PREVENT  
FADING**

DO NOT USE  
COMMERCIAL  
WAXES AND  
POLISHES.

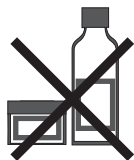

**PREVENT  
YELLOWING**

DO NOT  
PLACE HOT  
OBJECTS  
ON SURFACE.



**PREVENT  
FINISH DAMAGE**

DO NOT  
USE  
RUBBER  
BASED  
PLACE MATS.



**PREVENT  
DISCOLORING**

## TO CLEAN

USE A SOFT CLOTH MOISTENED IN LEMON OIL POLISH OR LUKEWARM SOAP AND WATER, THEN BUFF WITH A DRY CLEAN CLOTH.



88 5537 28


Lafayette Bench

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.


Home  
Styles

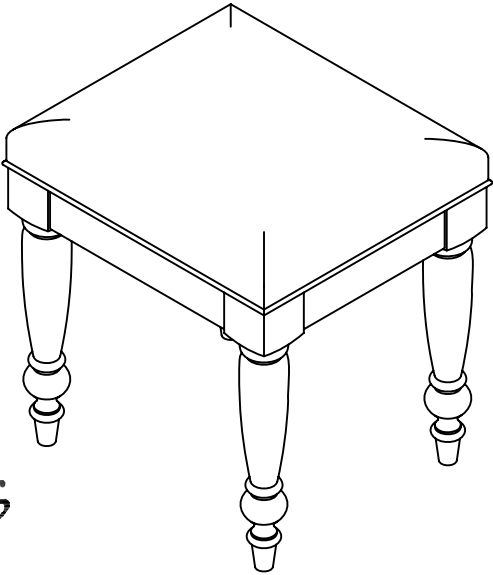

Part List

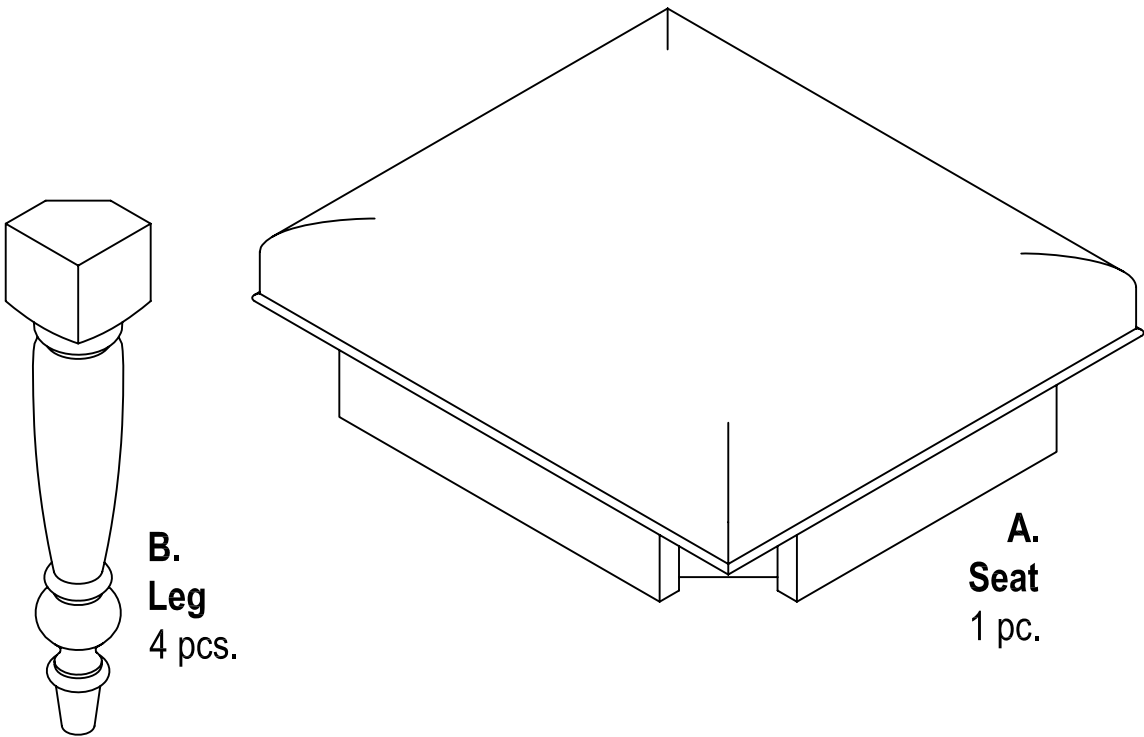

Hardware List



**Bolt**  
8 pcs. (+1 extra)



**Flat Washer**  
8 pcs. (+1 extra)



**Spring Washer**  
8 pcs. (+1 extra)



**Hex Wrench**  
1 pc.



**Hex Wrench (Small)**  
1 pc.

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319  
servicedesk@homestyles-furniture.com

# Assembly Instructions 2/2

**IMPORTANT**  
\* Do not tighten up all the bolts until each part is properly assembled.  
\* Use a soft cloth between these parts and the floor.

## STEP 1

Attach Seat (A) to the Legs (B) using Bolts, Flat Washers and Spring Washers.

Tighten using the Hex Wrench.  
(See figure 1)



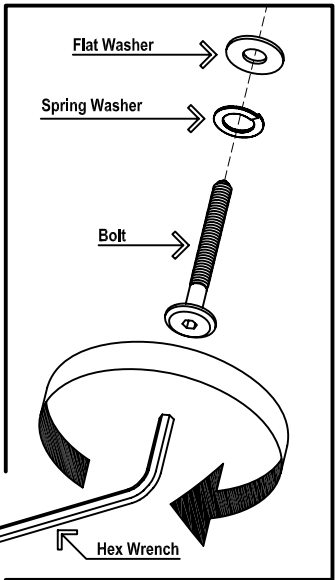


Figure 1

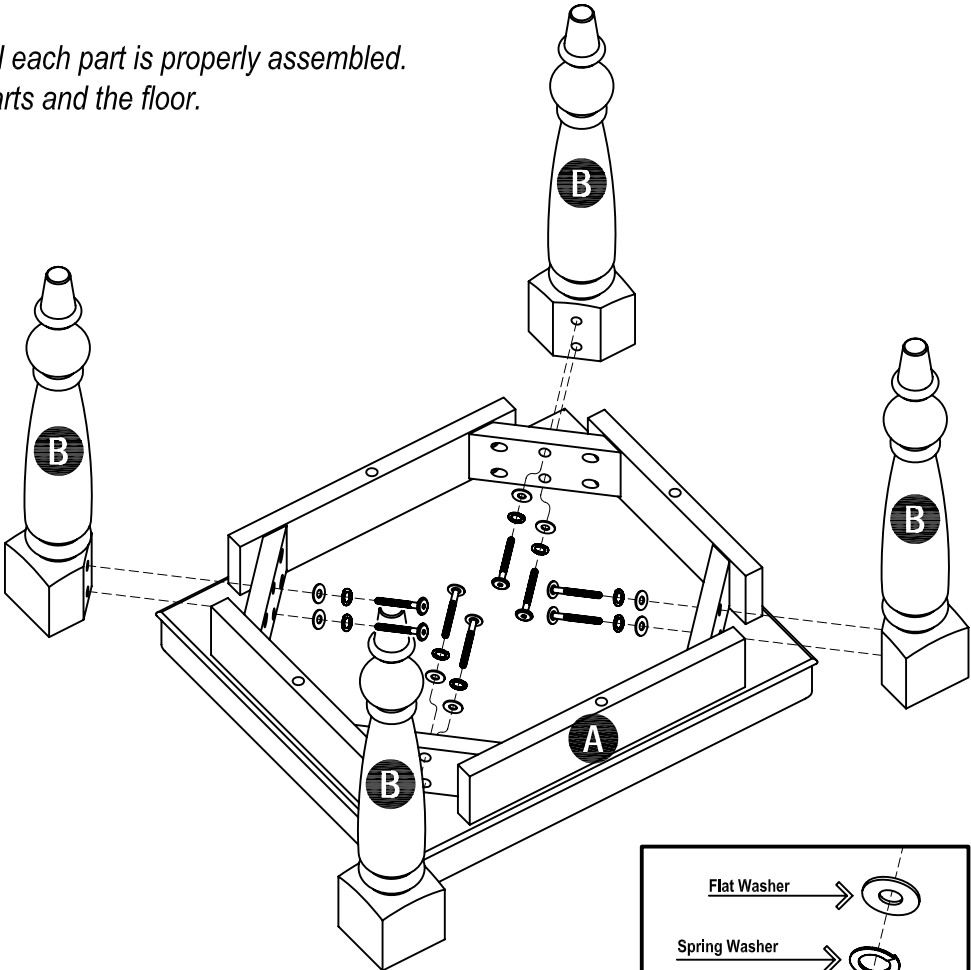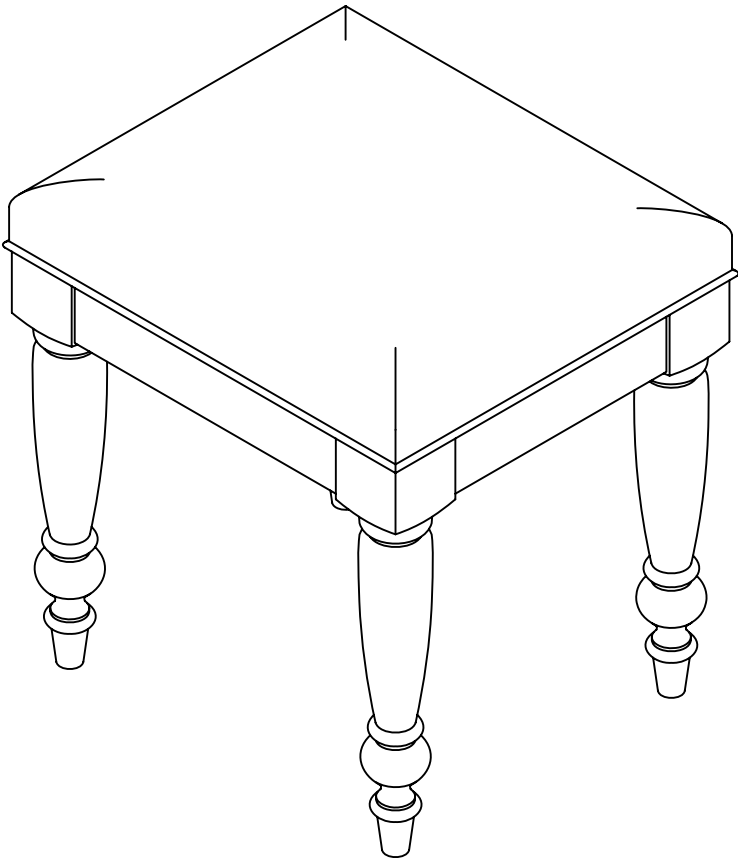

## STEP 2

Turn the unit to its' upright position.

# VERY IMPORTANT !!

## CARE INSTRUCTIONS

### NEVER

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE LACQUER.

### NEVER

ALLOW LIQUIDS OF ANY KIND TO REMAIN ON THE FURNITURE. ABSORPTION CAUSES WOOD TO WARP AND SPLIT AND FINISHES TO DELAMINATE.

DO NOT  
WRITE  
DIRECTLY  
ON  
SURFACE.




**PREVENT  
MARKING**

DO NOT  
PLACE IN  
DIRECT  
SUNLIGHT.



**PREVENT  
FADING**

DO NOT USE  
COMMERCIAL  
WAXES AND  
POLISHES.

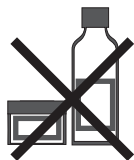

**PREVENT  
YELLOWING**

DO NOT  
PLACE HOT  
OBJECTS  
ON SURFACE.



**PREVENT  
FINISH DAMAGE**

DO NOT  
USE  
RUBBER  
BASED  
PLACE MATS.



**PREVENT  
DISCOLORING**

## TO CLEAN

USE A SOFT CLOTH MOISTENED IN LEMON OIL POLISH OR LUKEWARM SOAP AND WATER, THEN BUFF WITH A DRY CLEAN CLOTH.

