


4' CHIPPENDALE BENCH

Style # IT-14790

ASSEMBLY INSTRUCTIONS

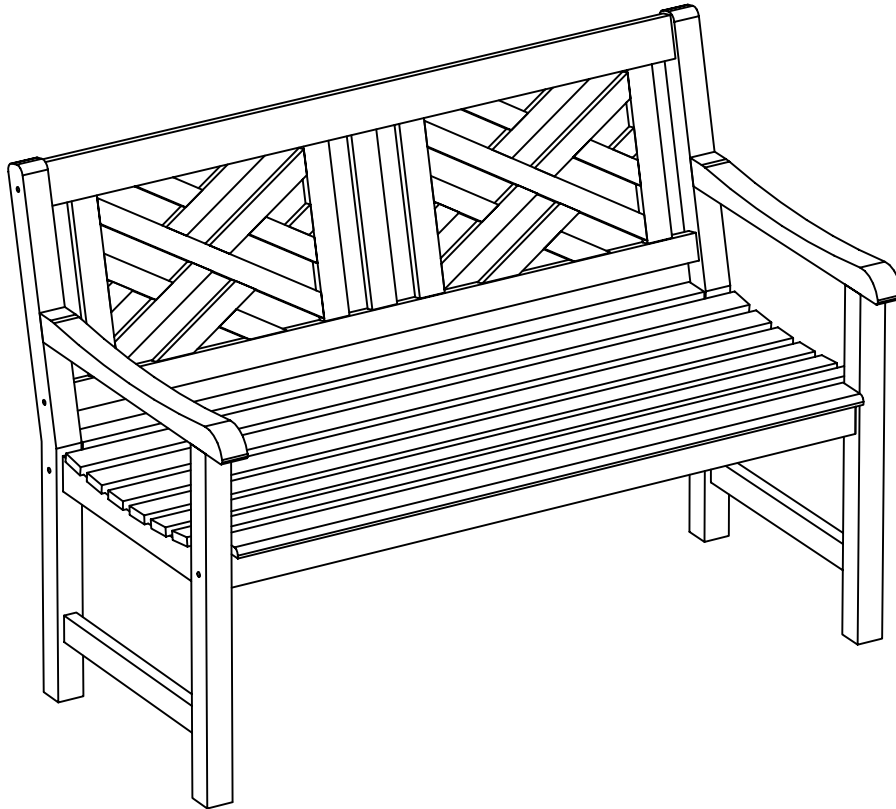


QUESTION ?

Identify all parts and hardware. If any pieces are missing call our toll free number at 1-888-287-4275 from 9:00 am to 5.00 pm CST (Monday to Friday) or e-mail help@crestwoodgc.com for replacement parts. For faster service, have the style number handy when calling.

Manufacturer : Goldenwood International Ltd.
Lot number :
Date :

**THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.**


- * ASSEMBLE YOUR UNIT IN AN AREA FREE FROM ANY OBJECTS THAT MIGHT SCRATCH THE SURFACE OF YOUR UNIT.
- * EXAMINE ALL PACKING MATERIAL BEFORE DISCARDING, SHORTAGES MAY OCCUR FROM PARTS LEFT IN THE PACKING MATERIAL.
- * PLEASE READ THE INSTRUCTIONS CAREFULLY, AND VERIFY ALL PARTS ARE INCLUDED.
- * ALL BOLTS AND SCREWS NEED TO BE TIGHTENED FROM TIME TO TIME TO AVOID DAMAGE.

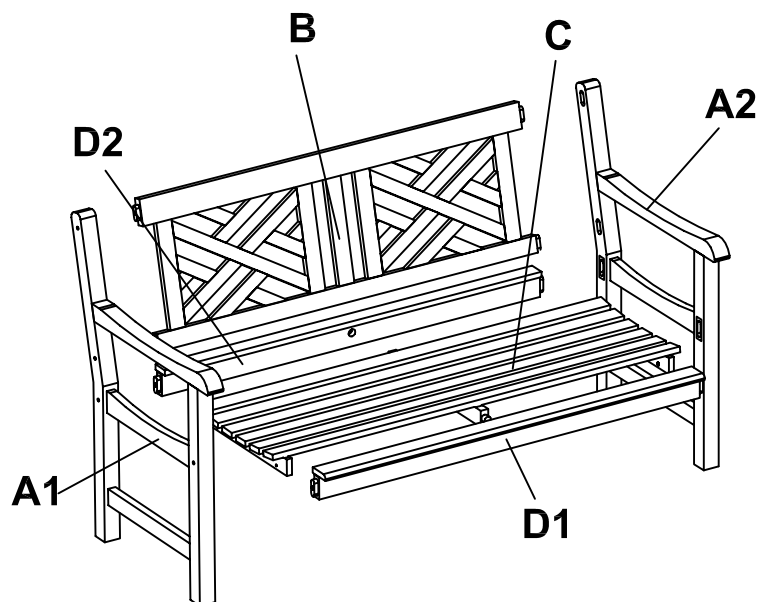

LIST OF WOODEN PARTS

NO.	DESCRIPTION	Q'TY
A1	Right side frame	1 Pc
A2	Left side frame	1 Pc
B	Back support	1 Pc
C	Seat	1 Pc
D1	Front apron (round edge)	1 Pc
D2	Back apron	1 Pc


LIST OF HARDWARE PARTS



1 3/4" Bolt 6 Pcs + 1



1" Screw 4 Pcs + 1



1 1/4" Screw 2 Pcs + 1



Wooden cap 6 Pcs + 1


TOOLS REQUIRED

For proper assembly use these tools (not included)

1. 8" Phillips screwdriver
- for tightening bolts and screws.
2. Rubber mallet
- for tapping in the wooden caps.




STEP 1

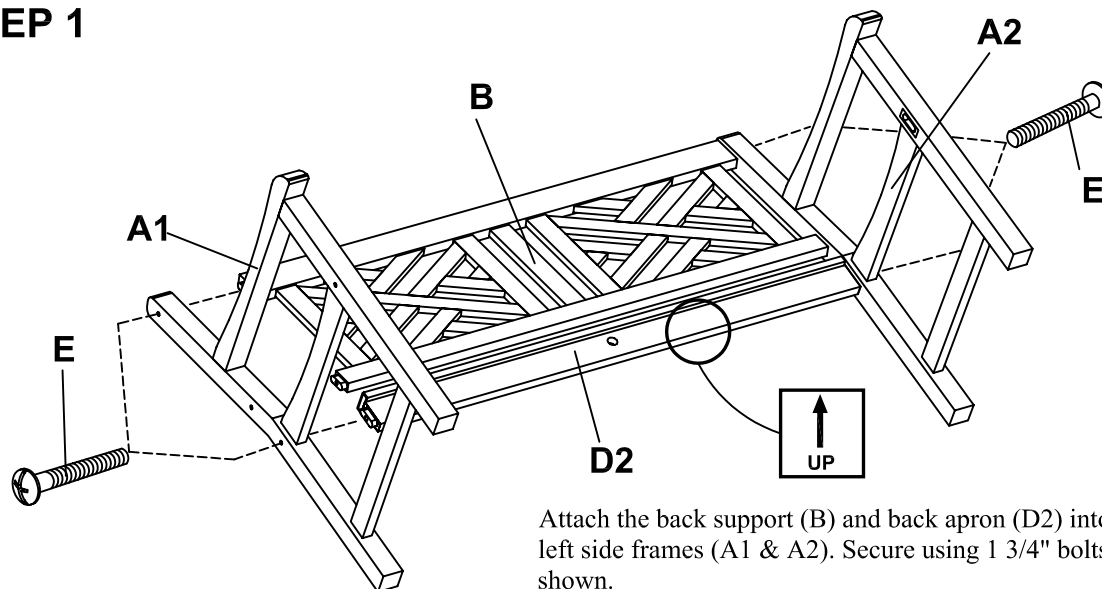

Attach the back support (B) and back apron (D2) into right and left side frames (A1 & A2). Secure using 1 3/4" bolts (E) as shown.


**** DO NOT TIGHTEN BOLTS YET.**

STEP 2

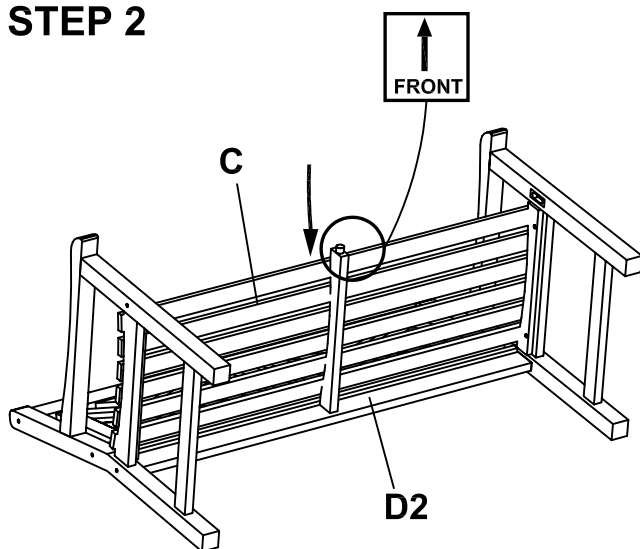

Put the seat (C) onto predrilled holes of back apron (D2) as shown.


STEP 3

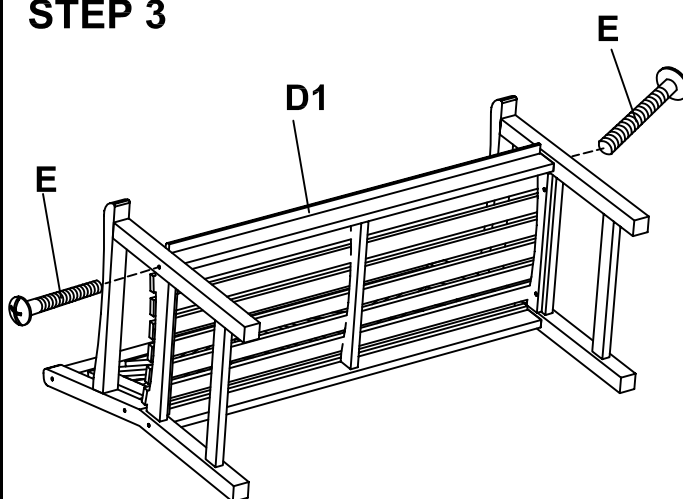

Next, attach the front apron (D1) into right and left side frames (A1 & A2).


Secure front apron using 1 3/4" bolts (E) as shown.

STEP 4

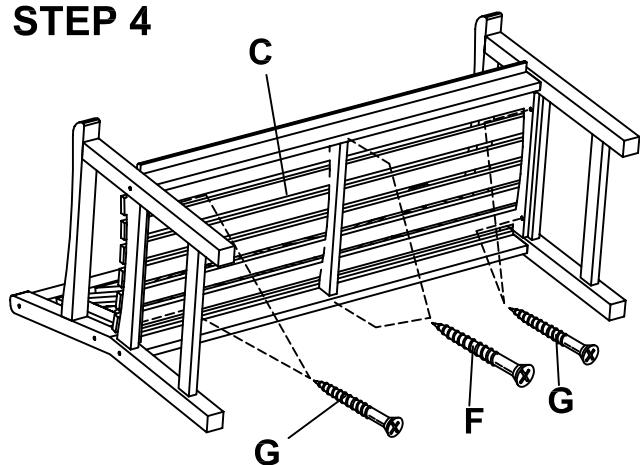

- Secure the seat (C) using 1 1/4" screw (G) into front & back apron and 1" screws (H) into side frames.
- Make sure all parts are correctly connected and tighten all bolts completely using screwdriver.
- Upright the bench.

STEP 5

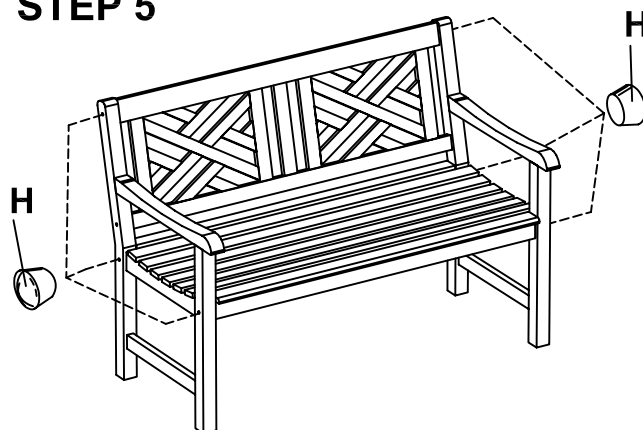

Tapping in the wooden caps (H) to cover bolts head using rubber mallet.

CONGRATULATIONS !
THE BENCH IS NOW READY FOR USE.