



- 1** Attach 2 hinges to door with 3 screws included for each hinge

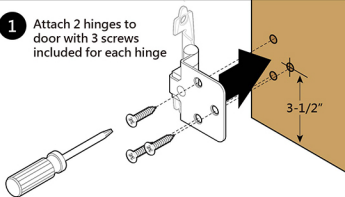

Note: This hinge designed for face-frame cabinets only.

- 2** Align door position/overlay, drill pilot holes, then secure with 2 screws included for each hinge

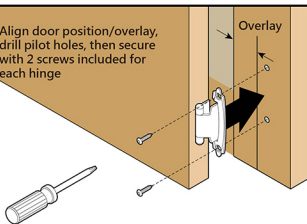

Note: This hinge designed for face-frame cabinets only.