Model No.: 182-6596 Polished Chrome 182-6597 Brushed Nickel 182-6598 Oil-Rubbed Bronze



Aegean 18" Towel Bar

Parts Diagram / List


- Level
- Power Drill
- 1/4" Drill Bit
- 1/16" Drill Bit
- Masking Tape
- · Phillips Screw Driver
- Safety Glasses
- Stud Finder


Your new Bath Accessory is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, steel wool and harsh chemicals as these will dull the finish and void your warranty.



Parts Diagram / List Installation Instructions

away any packaging.

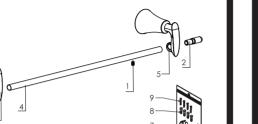



cate mounting hardware before throwing

Use the stud finder to locate the stud to Place the template on the wall in the desire location and make sure it is level, then tape t





Mark the mounting screw holes through the template with the pencil. (Once holes are marked, you can remove the template)

Installation Instructions



Figure 1






Step 4a – Drywall or Ceramic Tile Installation the hammer to tap them into place. (Be sure not to hit them too hard)

Installation Instructions Wood Wall Stud Installation Front View Side View 1 Bracket



Step 4b - Wood Wall Stud Installation to keep the drill level. Insert anchors will not Installation Instructions

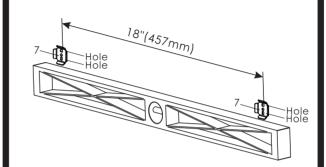

Wood Wall Stud Installation: Attach the mounting brackets (7) using the mounting screws directly into the stud. See Figure 2 for a


A - Assemble towel bar as shown.

B - Position towel bar over mounting bracket (7)

and tighten set screws (1) as shown.

Installation Instructions

Freendo Faucets

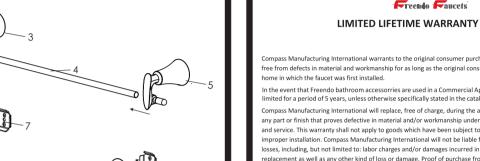

be obtained by emailing the address below, calling the number below or by writing to:

Compass Manufacturing International

6702 Enterprise Drive Louisville, KY 40214

800.626.3525

warranty@cmiproduct.com

Revised 1/29/18

© Compass Manufacturing International

