













SSDDL6072/SSDDL4872/SSDDL6058


L


























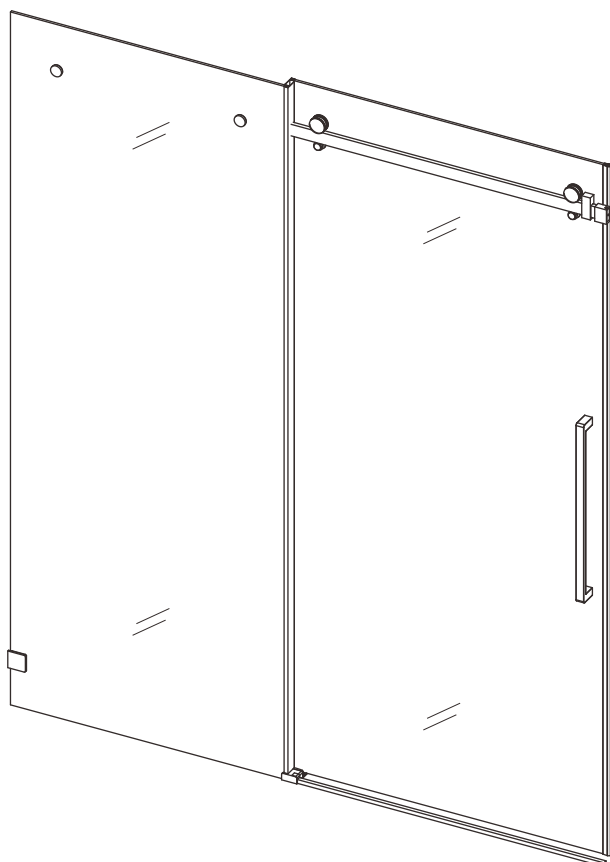


R

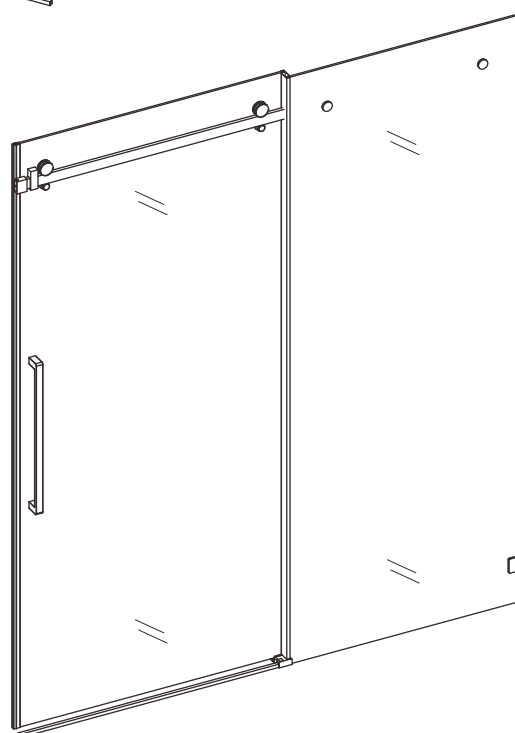


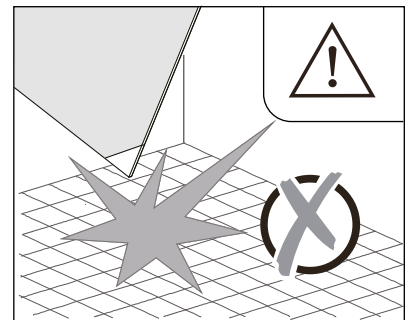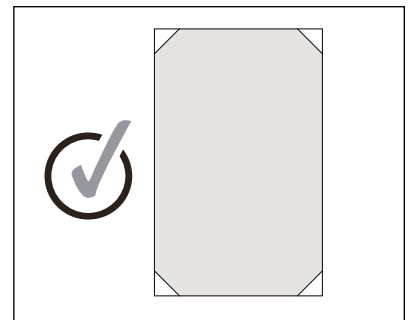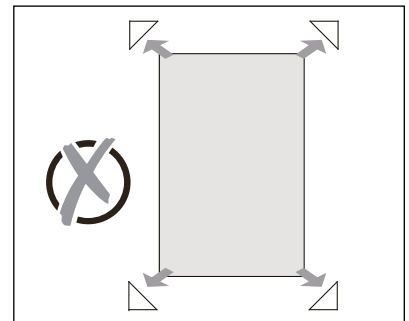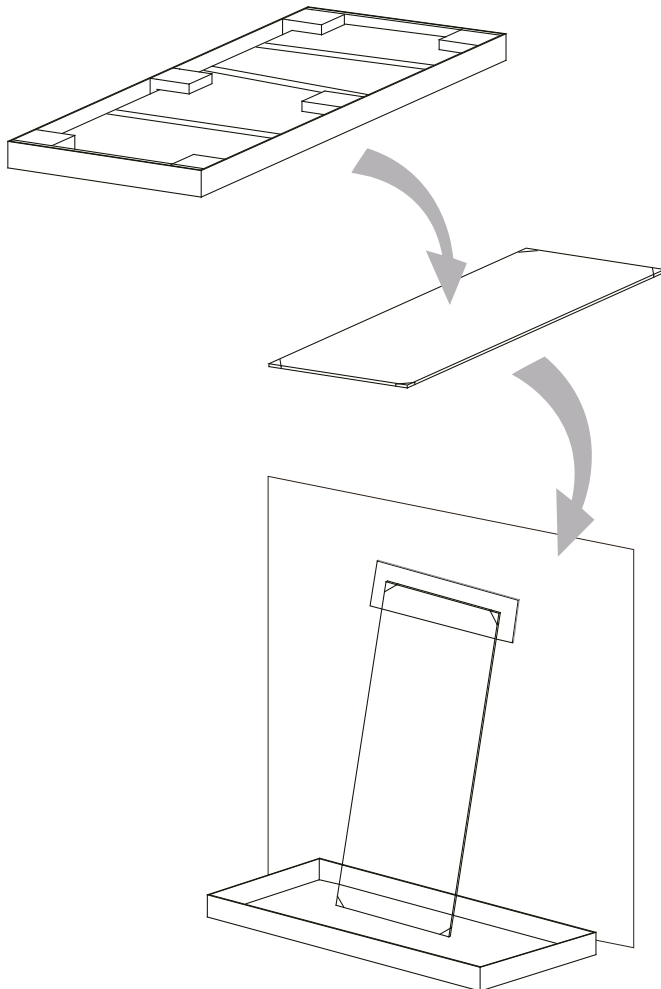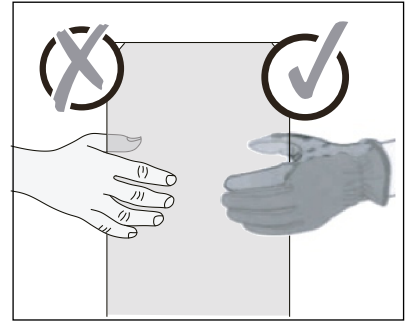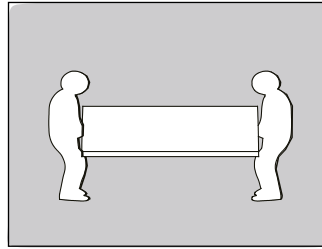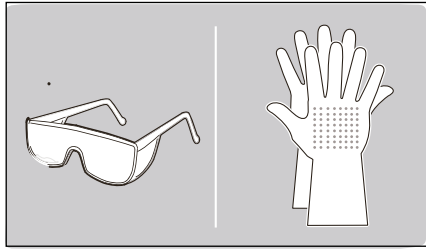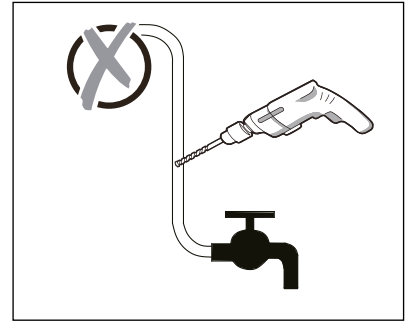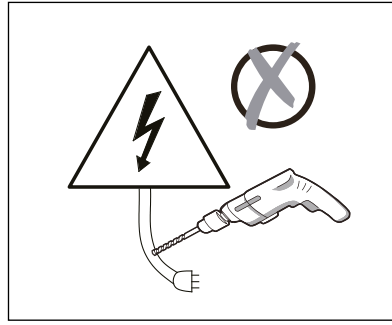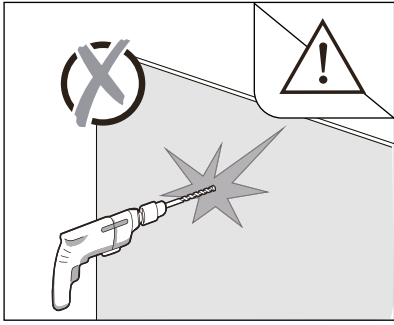


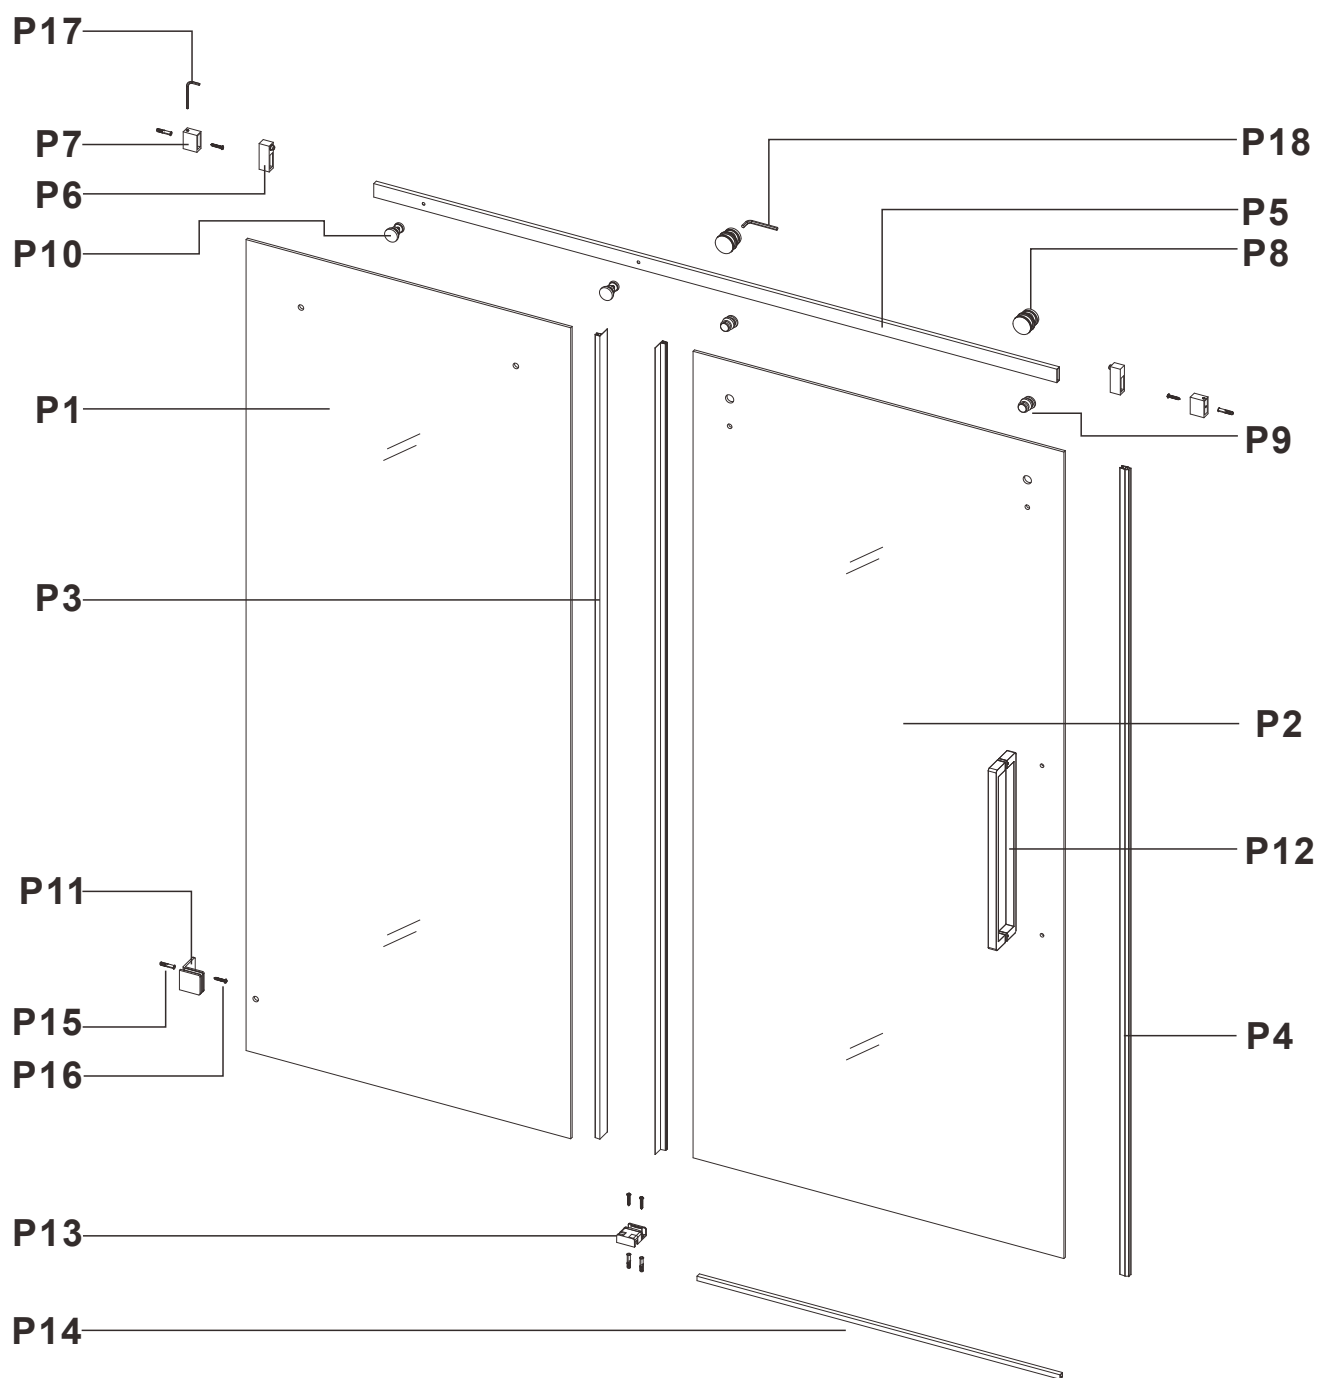

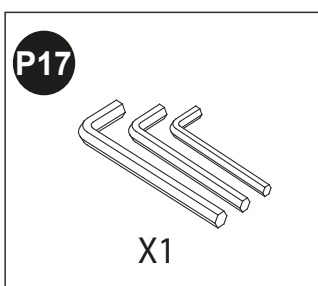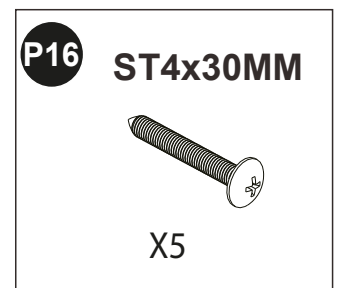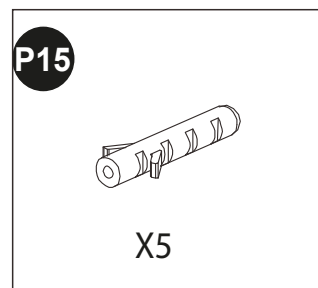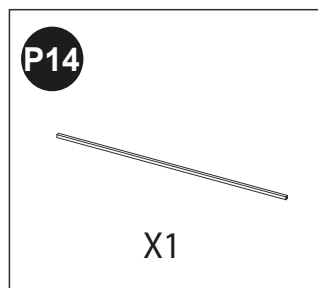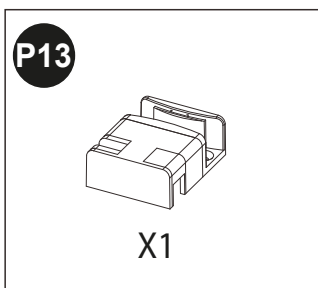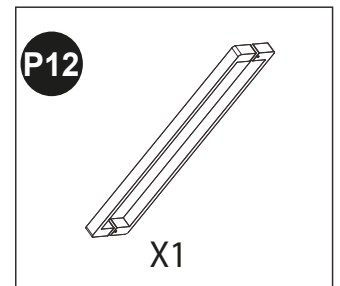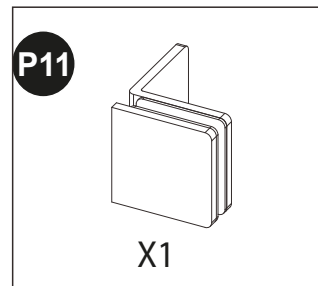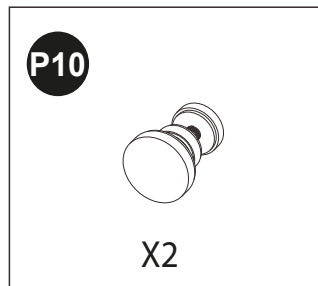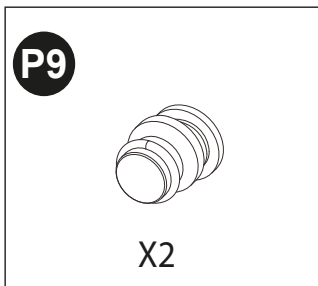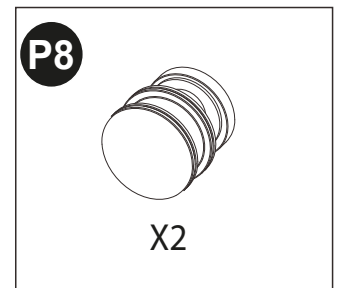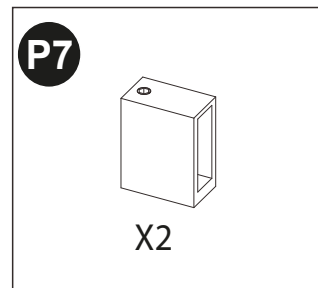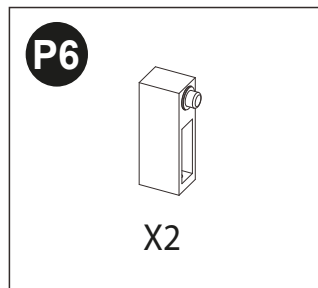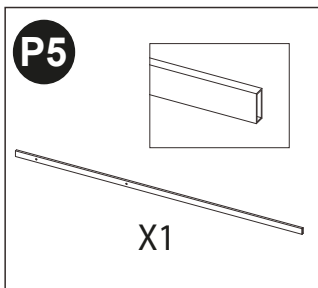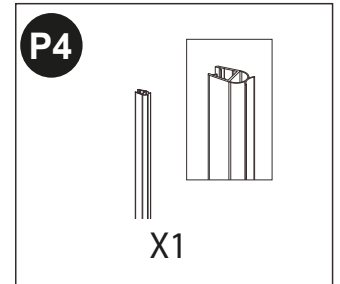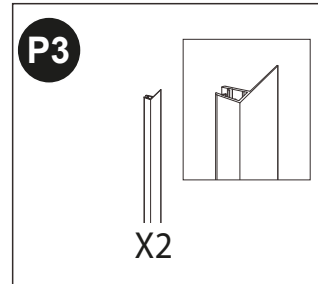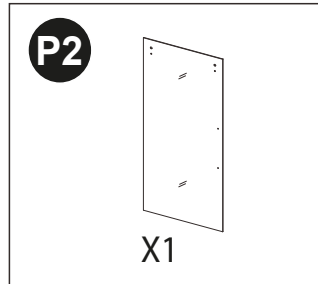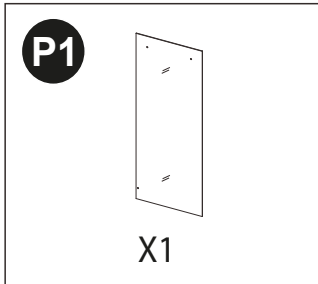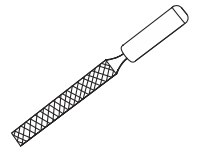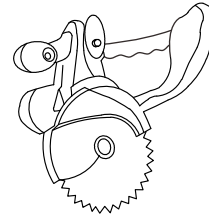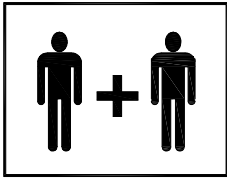


L

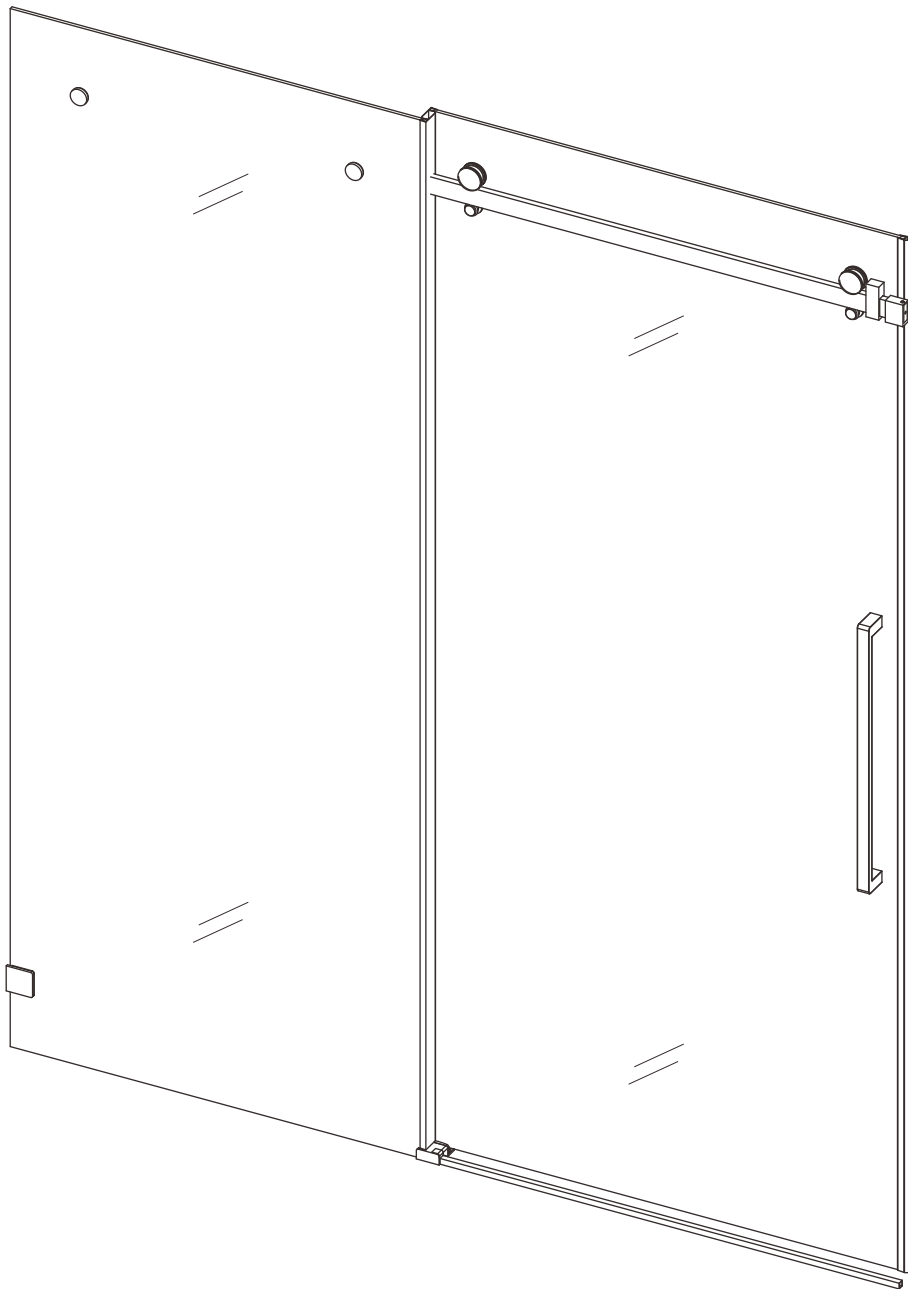








1



P13



X1


	W(inch)
48"	44"-48"
60"	56"-60"

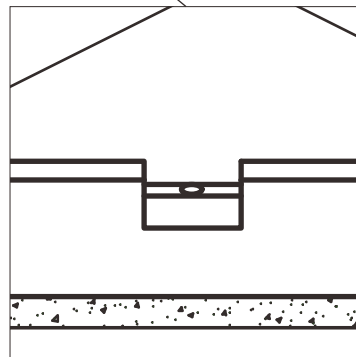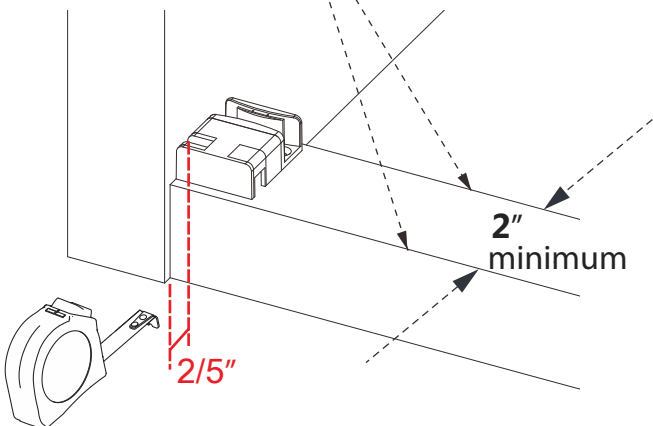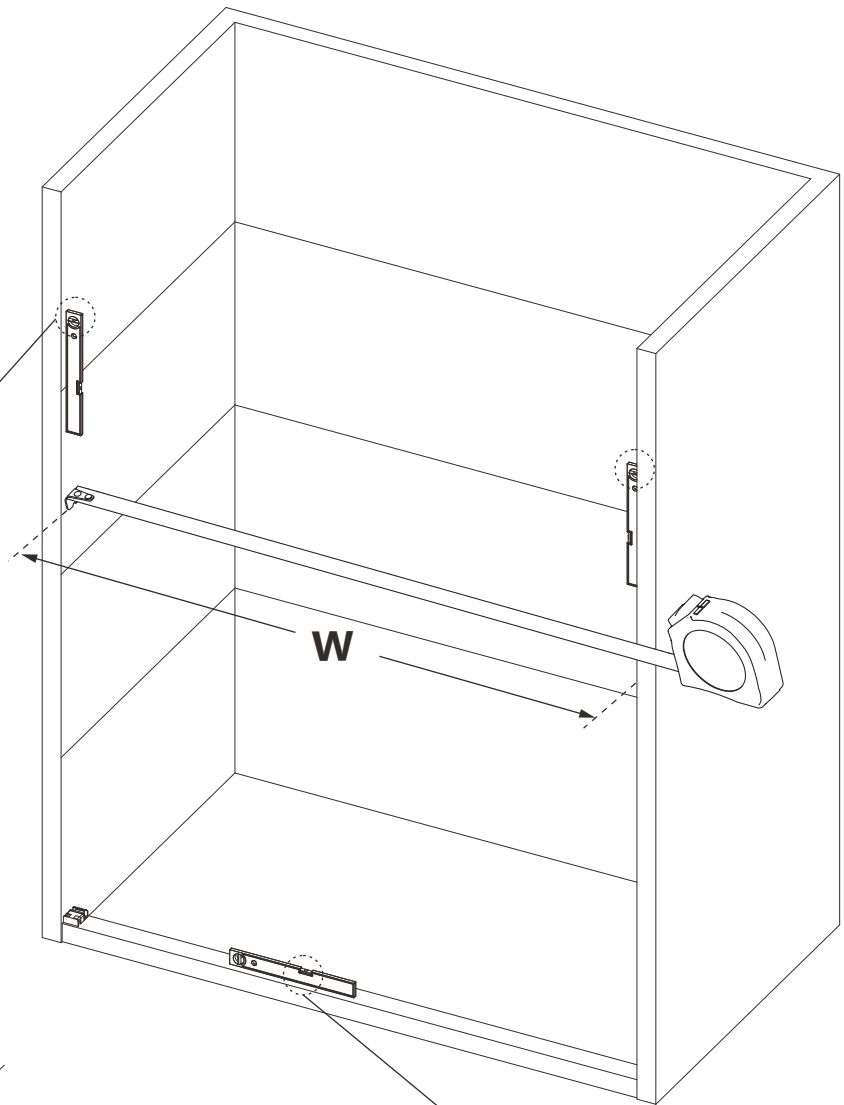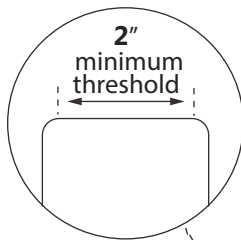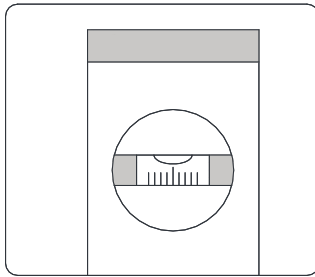

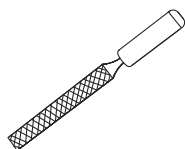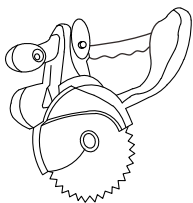


Cut the aluminum frame to fit your wall layout (If the frame already fit the wall, then you do not need to cut it)

2

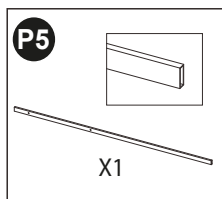









	L(inch)	W(inch)
48"	L=48"-W	44"-48"
60"	L=60"-W	56"-60"



1

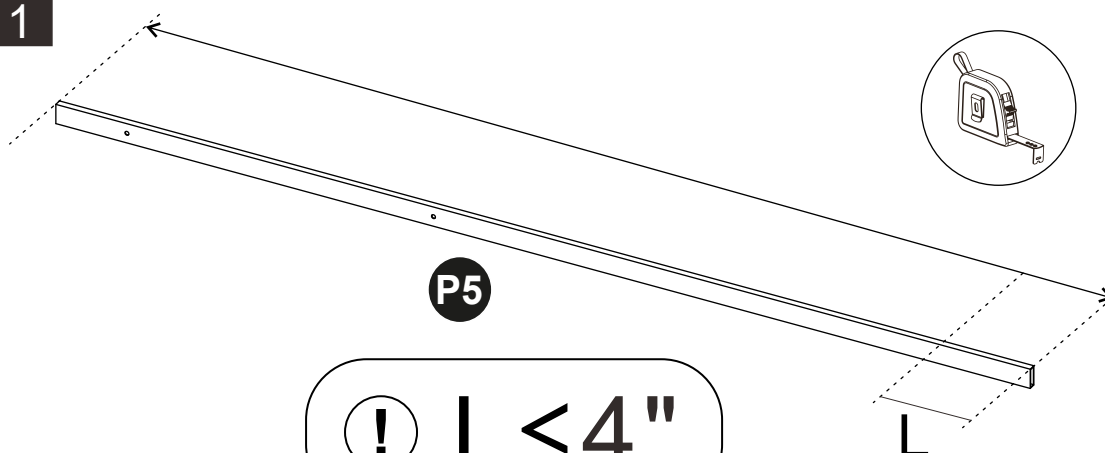


2







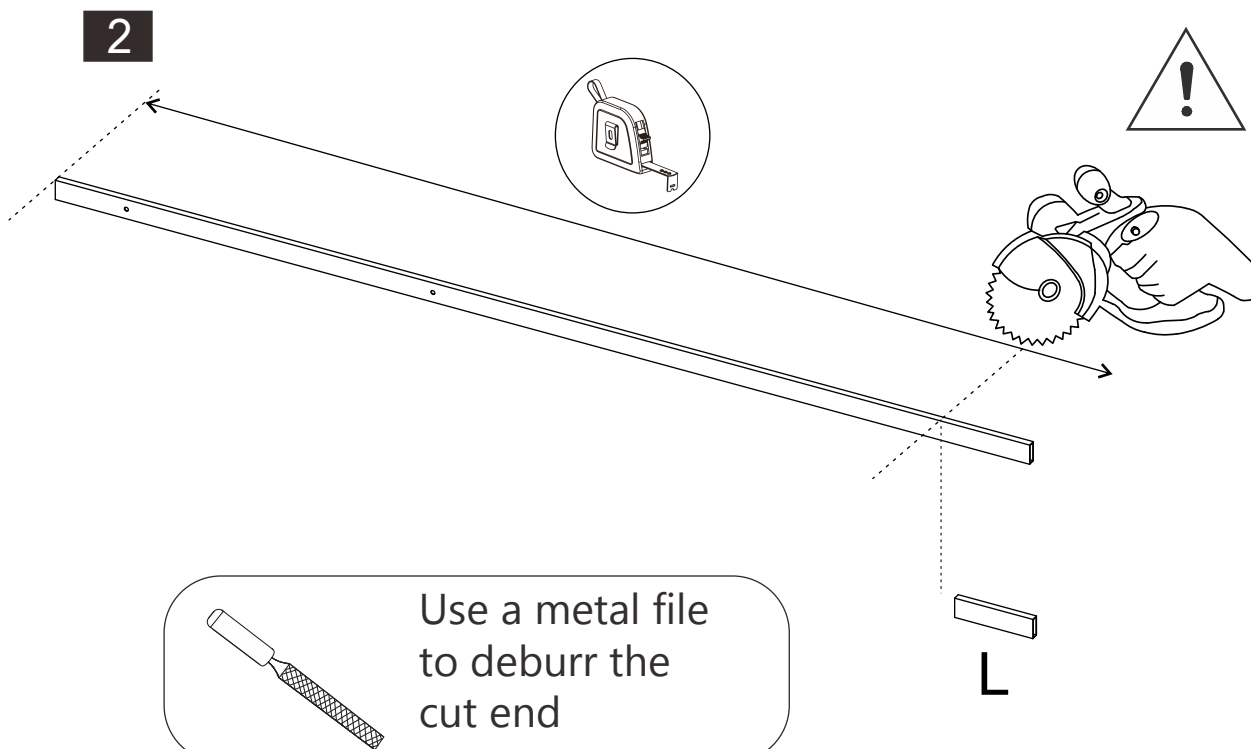


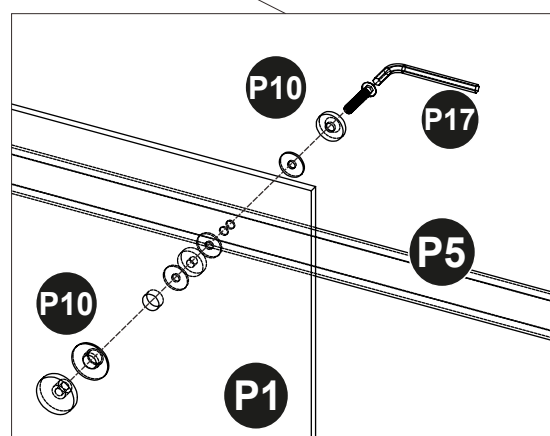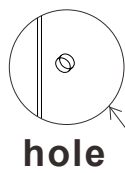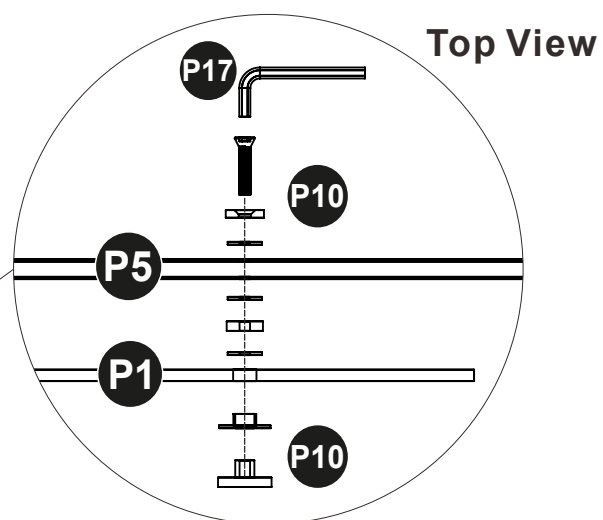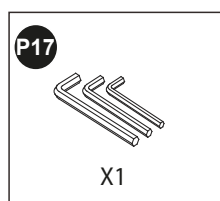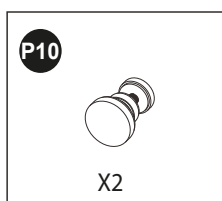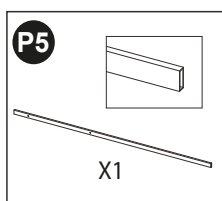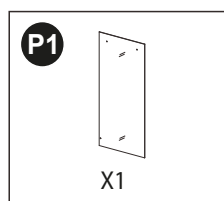


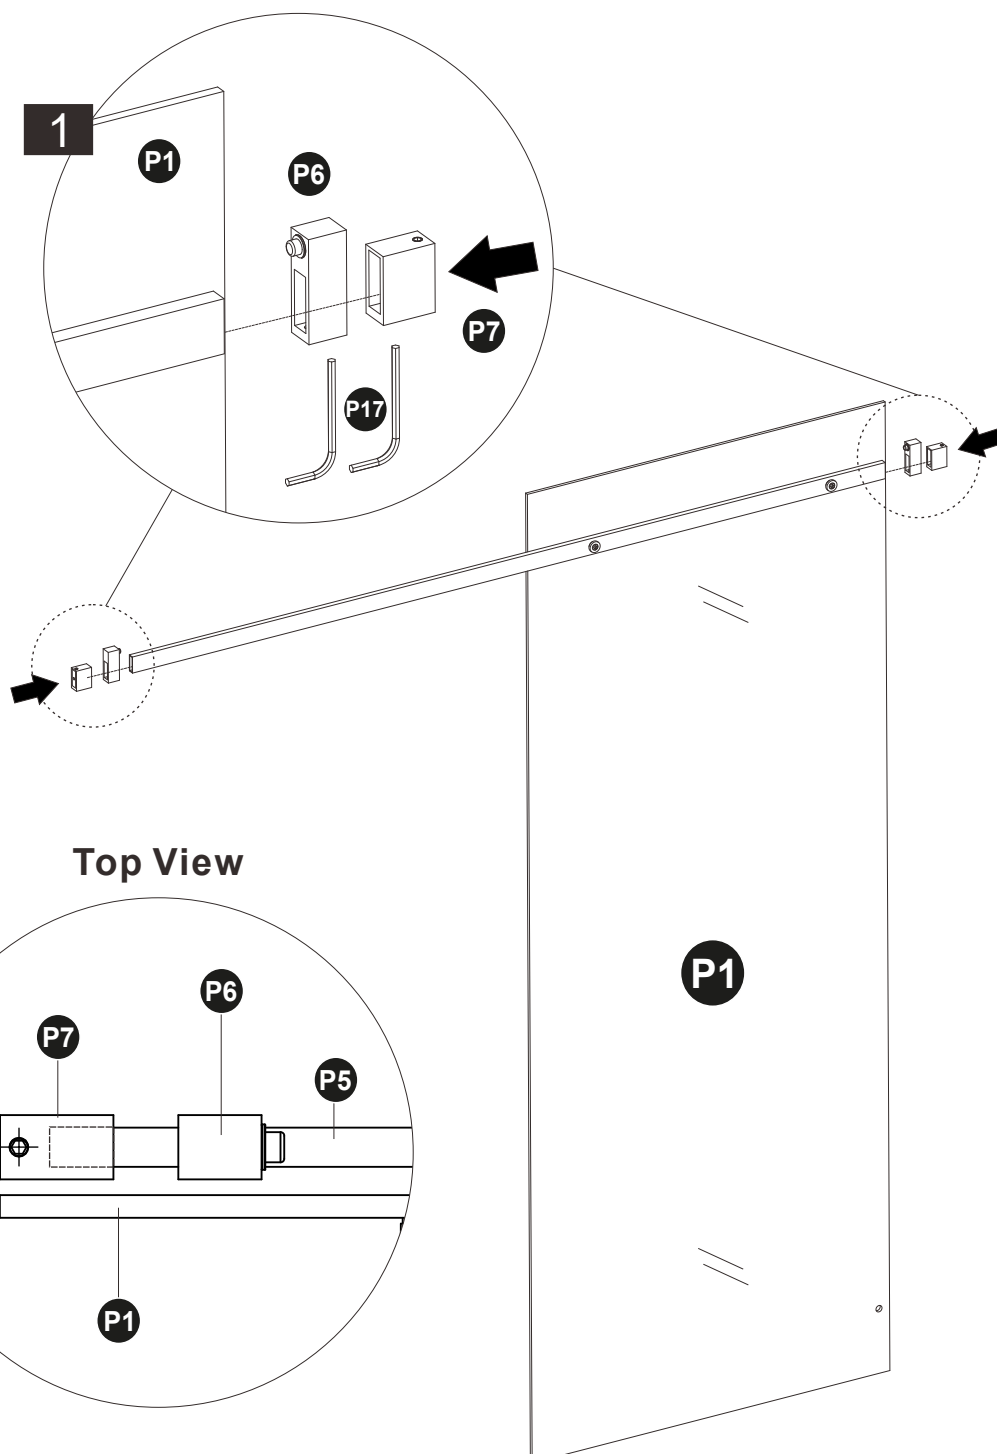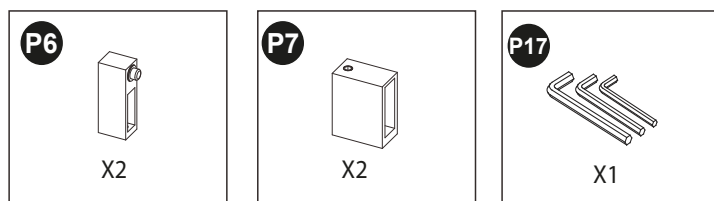







5

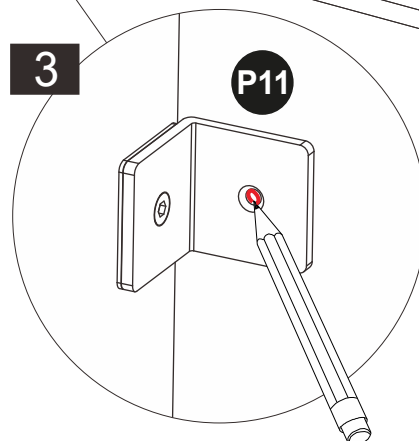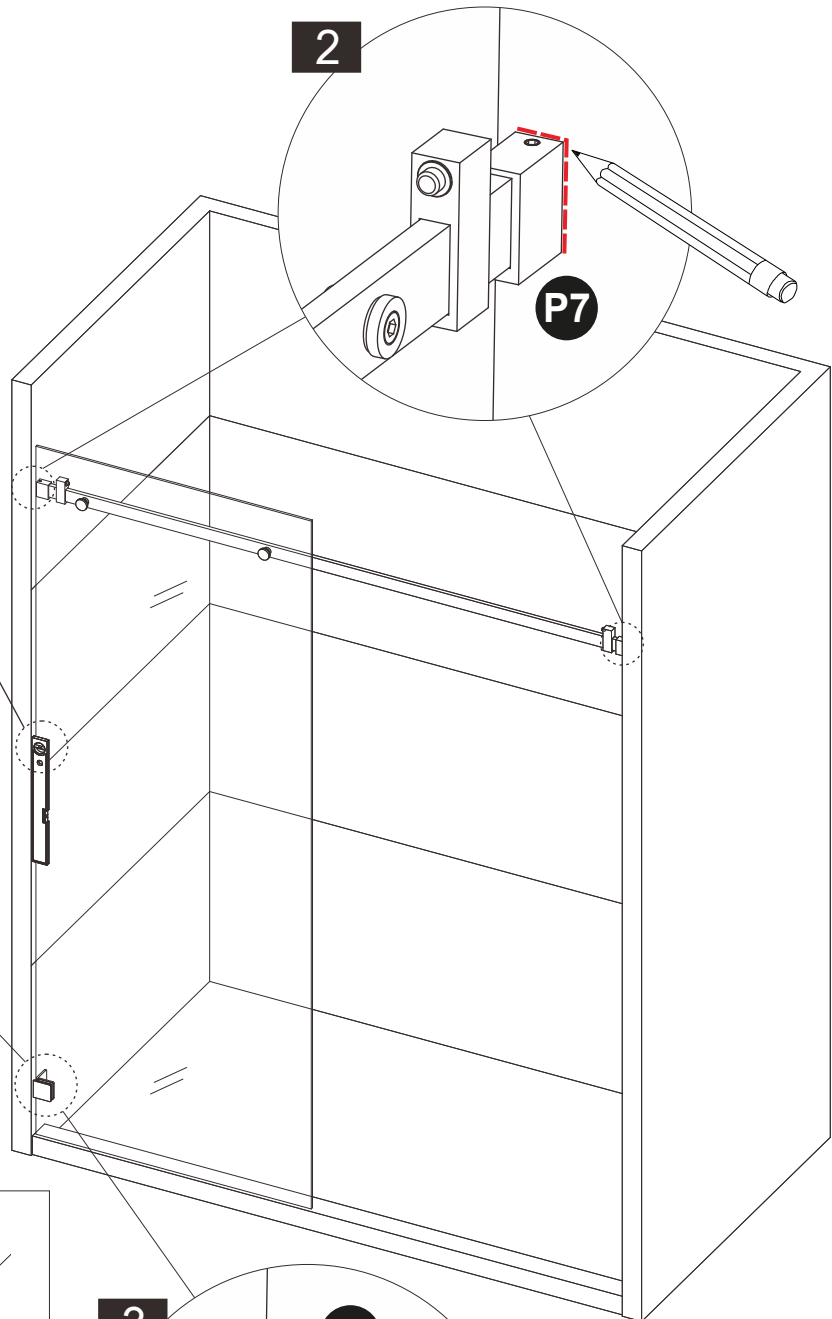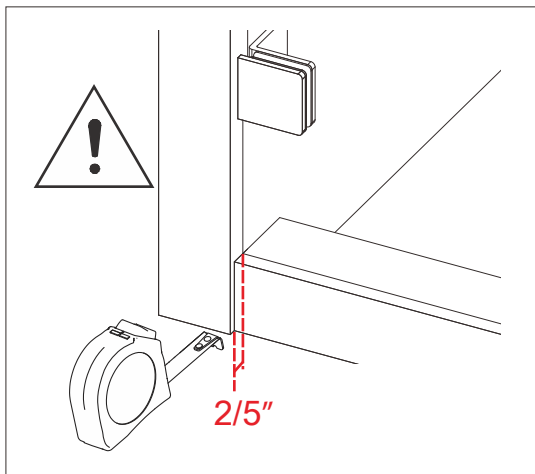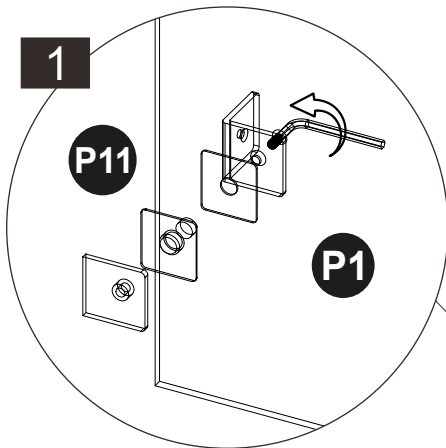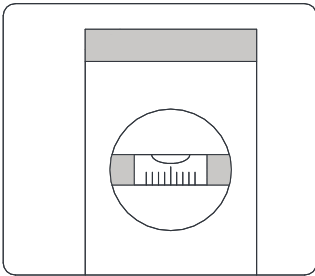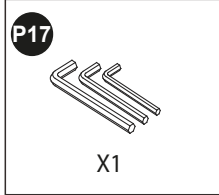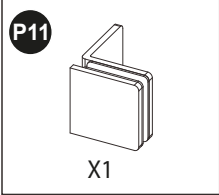

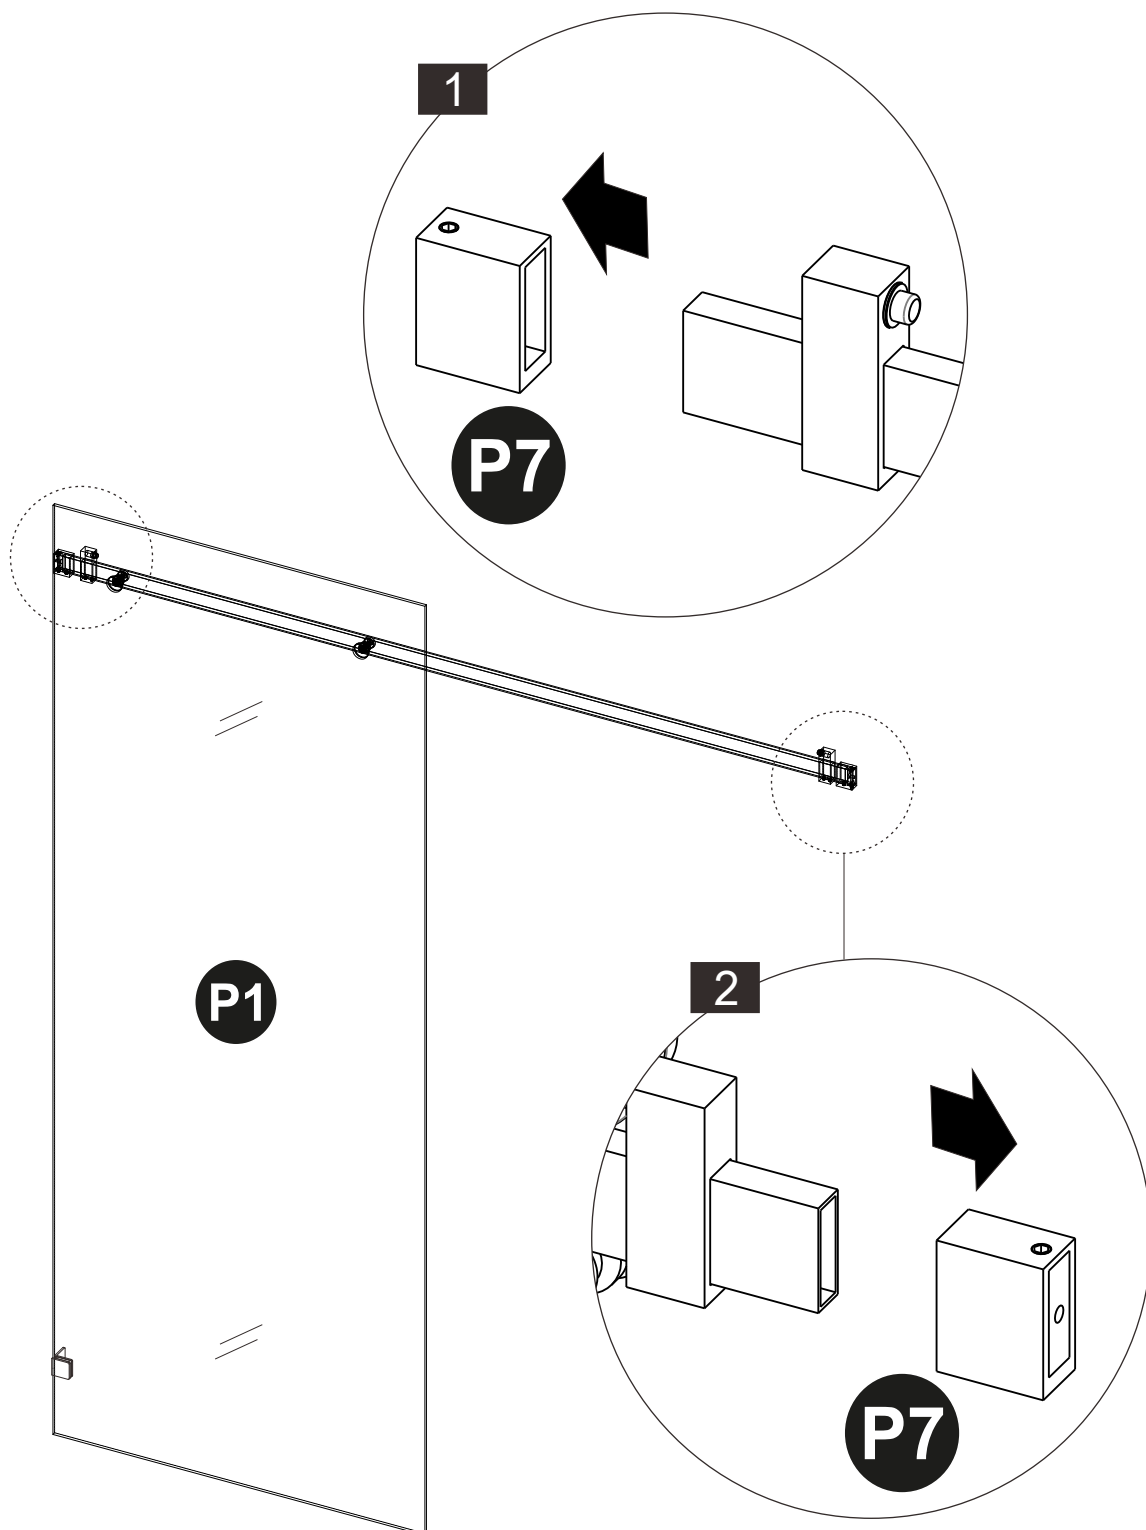




6mm



7

P15



X3


P16

ST4x30MM








X2

P7









X2

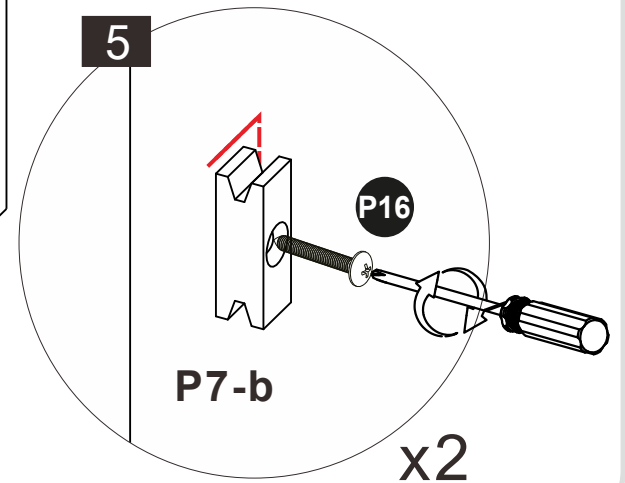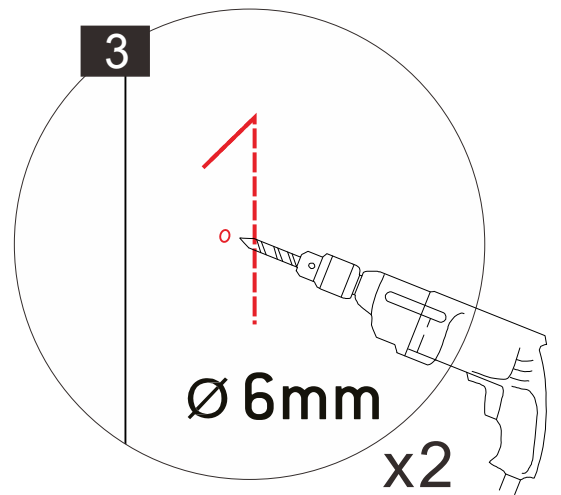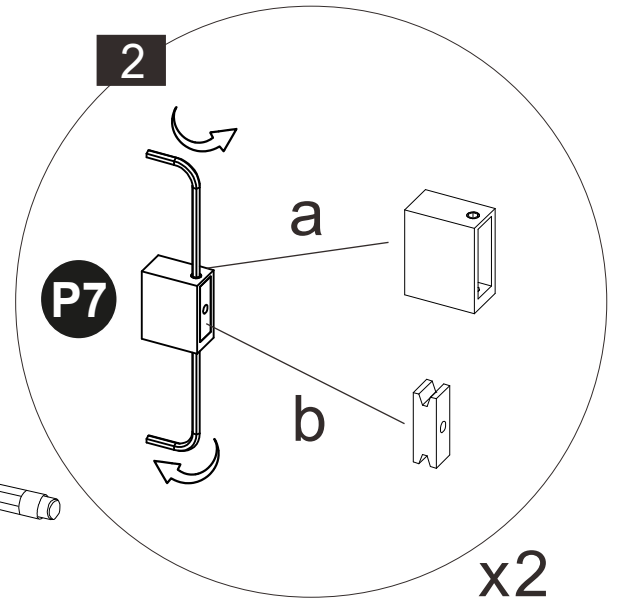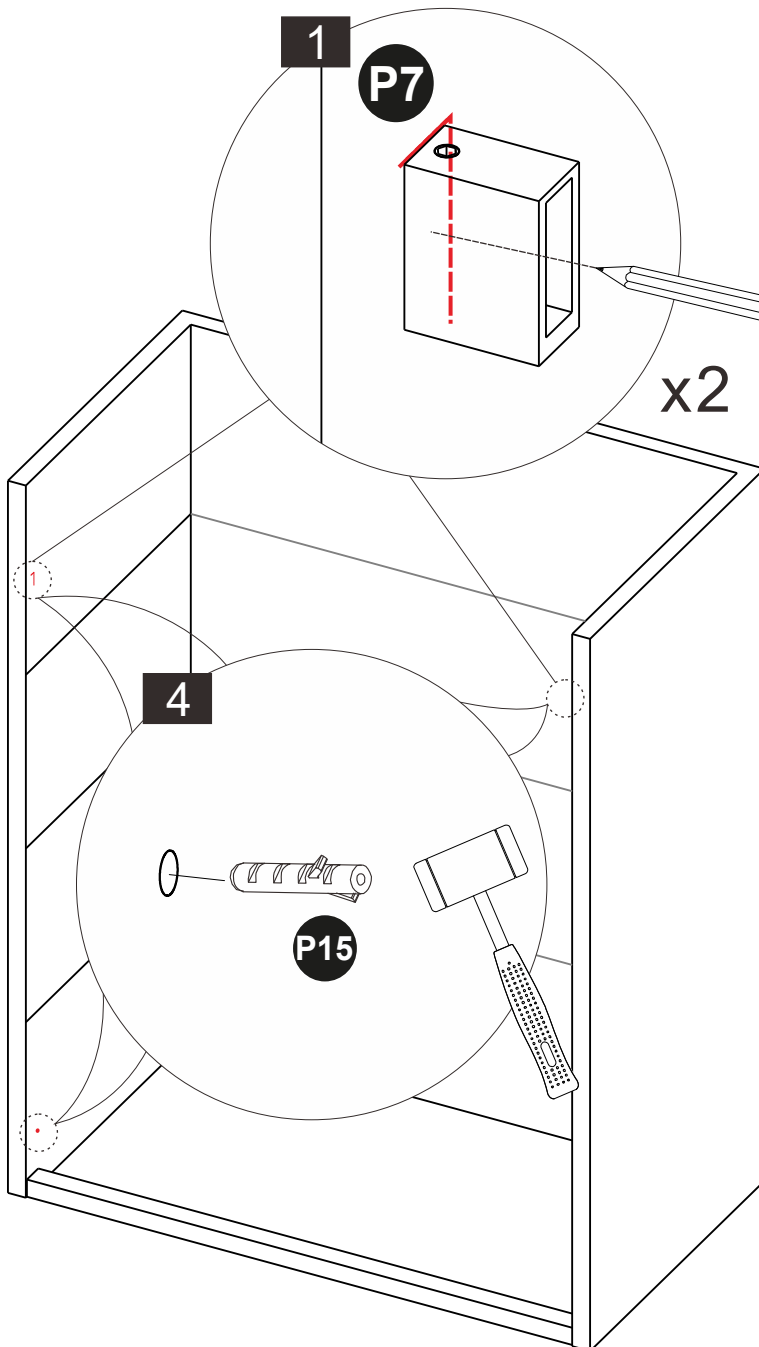

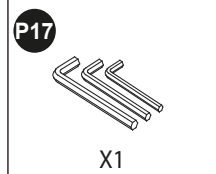

8

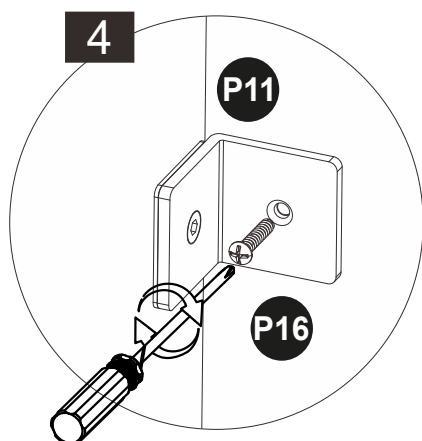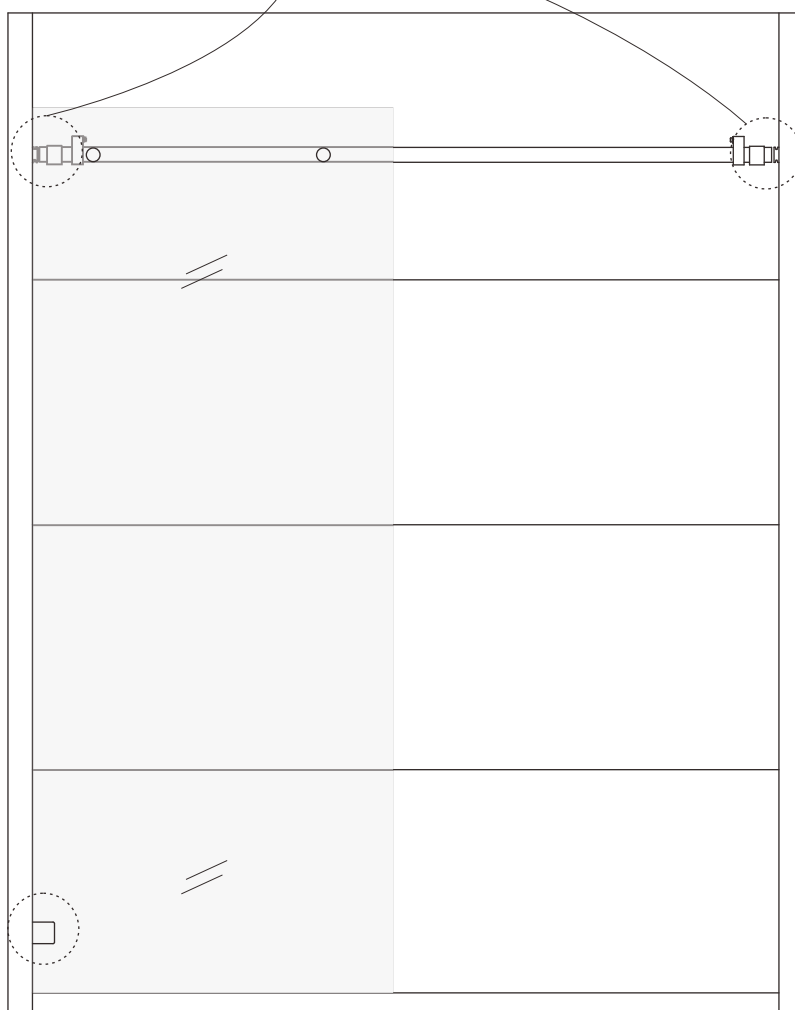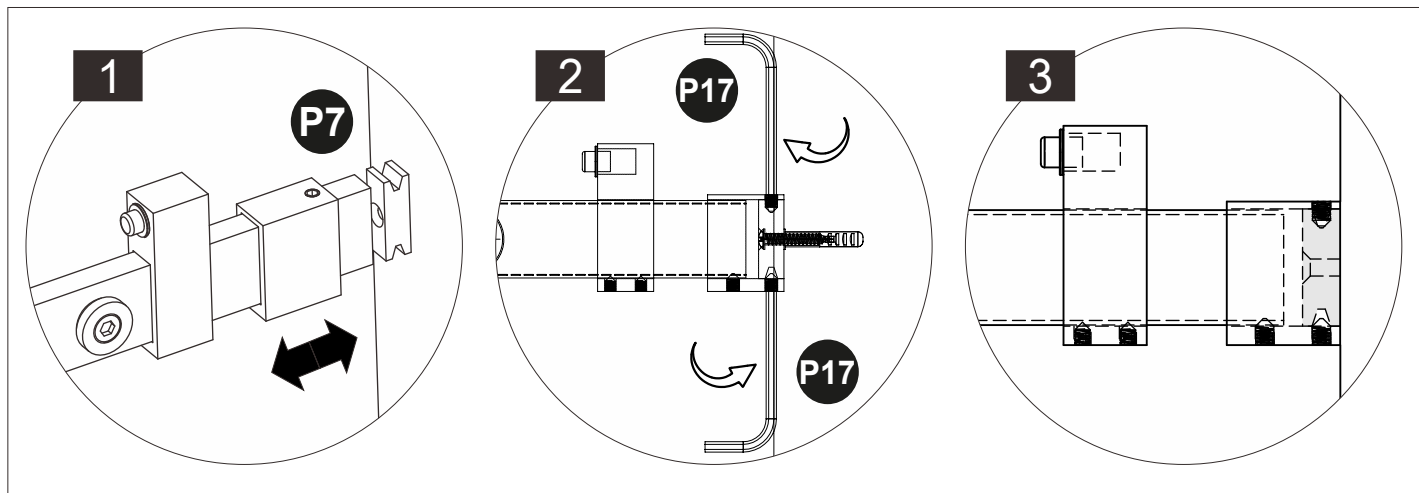




9

P13



X1

P15



X2

P16

ST4x30MM



X2

1

P13

2


Ø 6mm



3

4

P16


P13

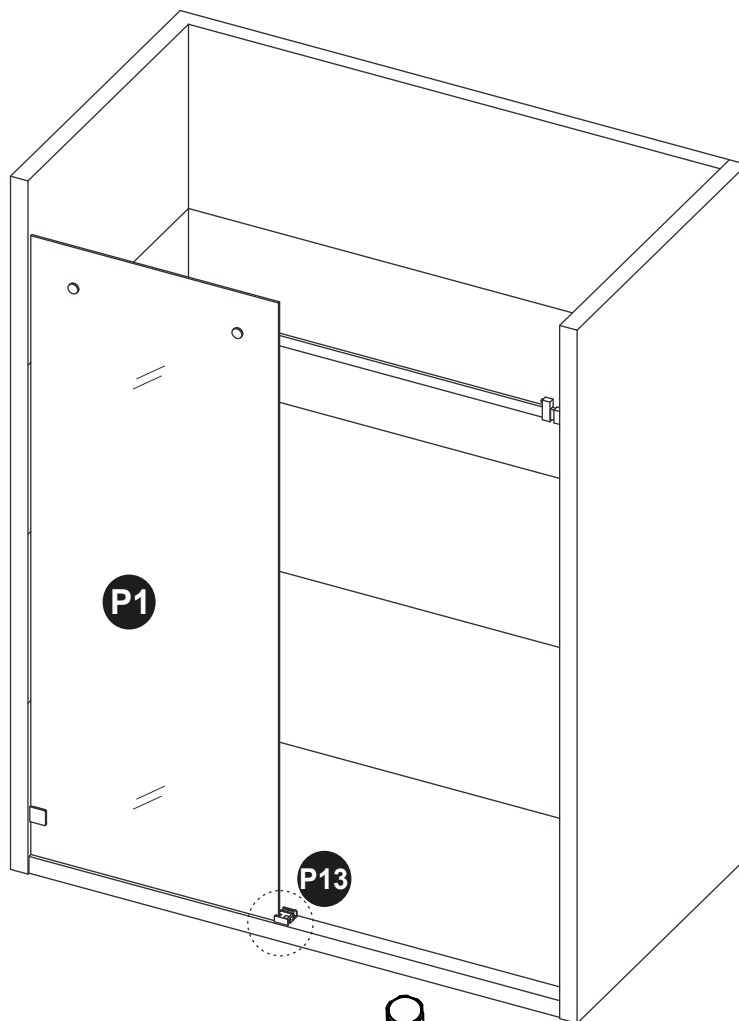




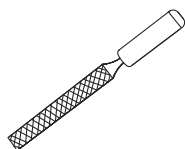
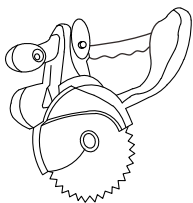


Cut the aluminum frame to fit your wall layout (If the frame already fit the wall, then you do not need to cut it)


10

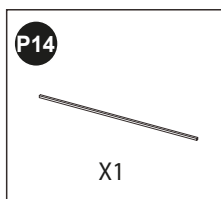






! $L \leq 4"$


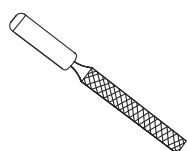
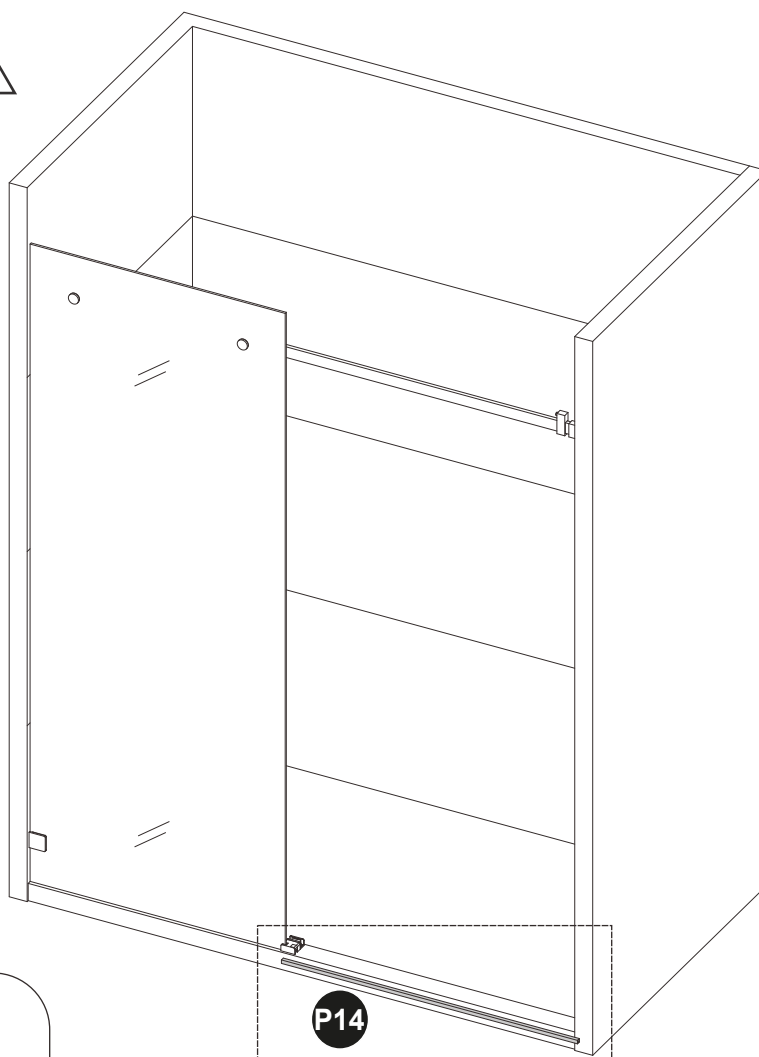
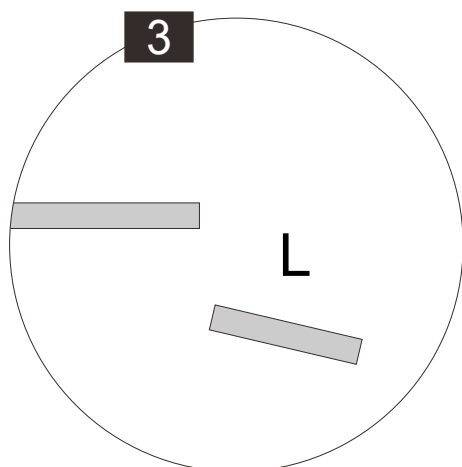
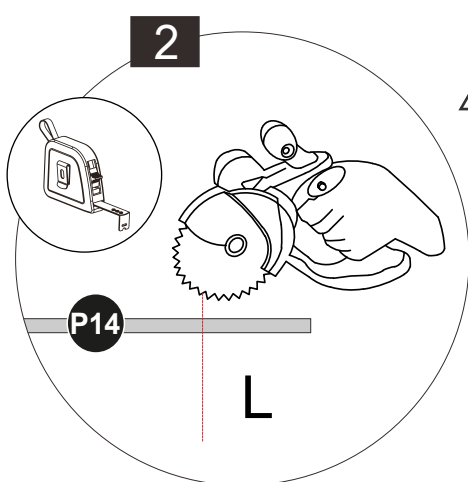
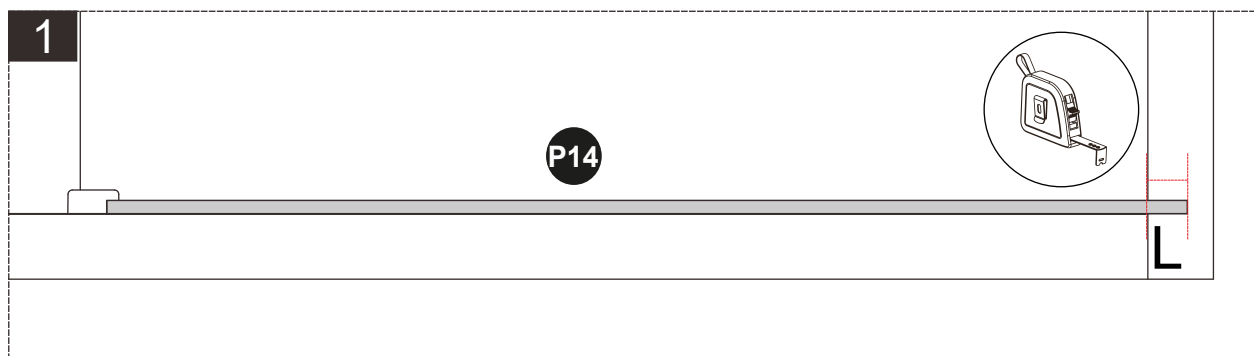



Use a metal file to deburr the cut end







11

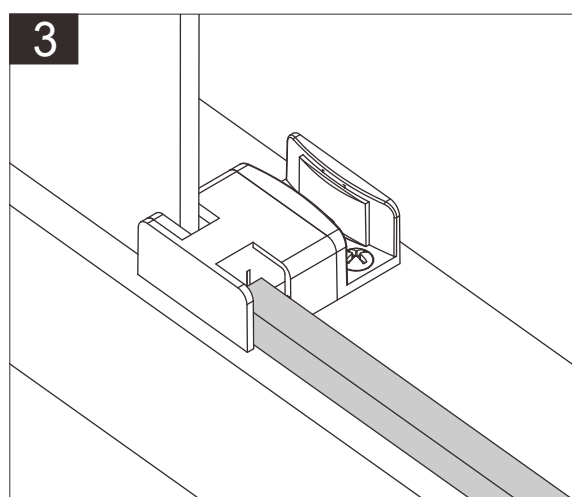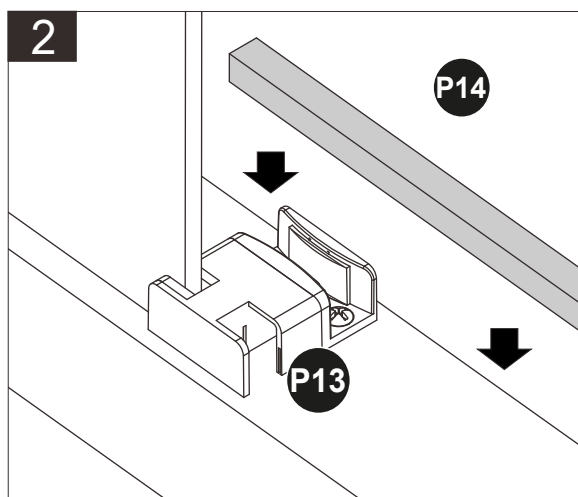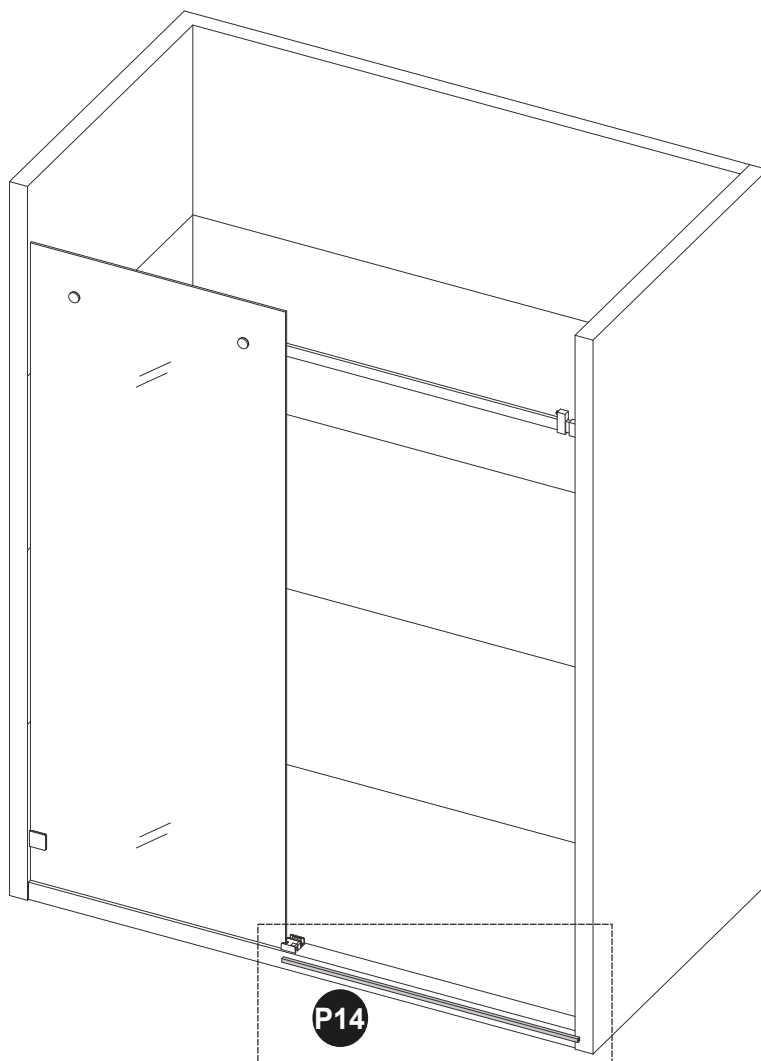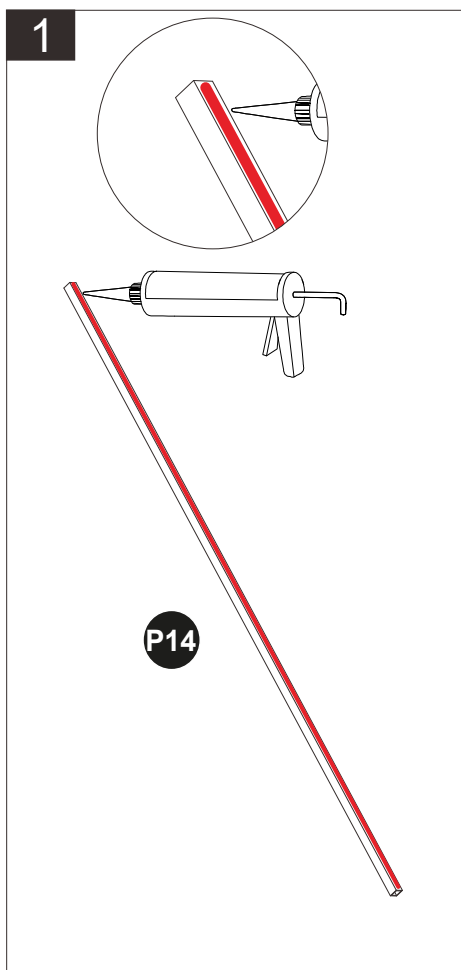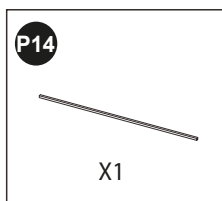

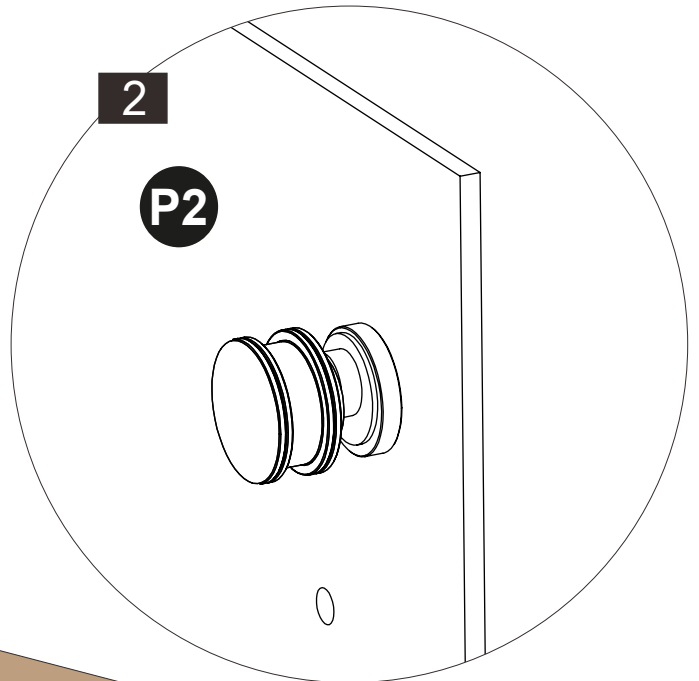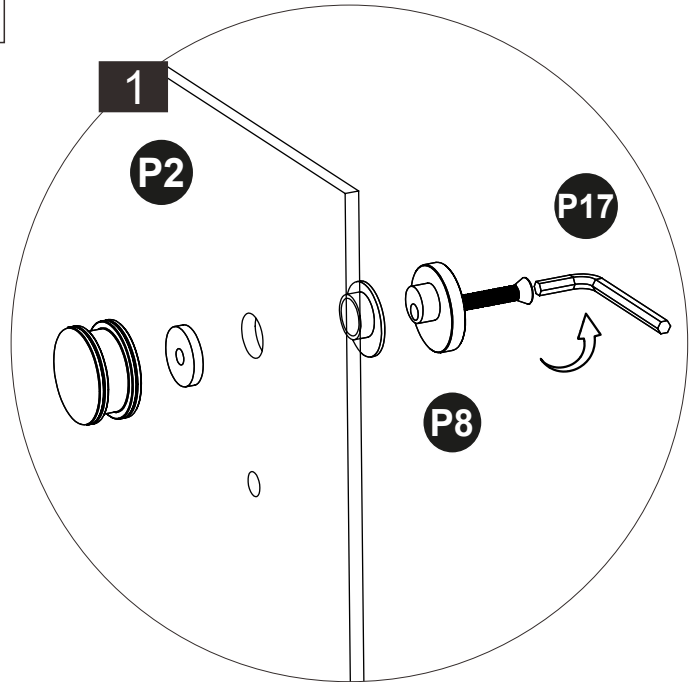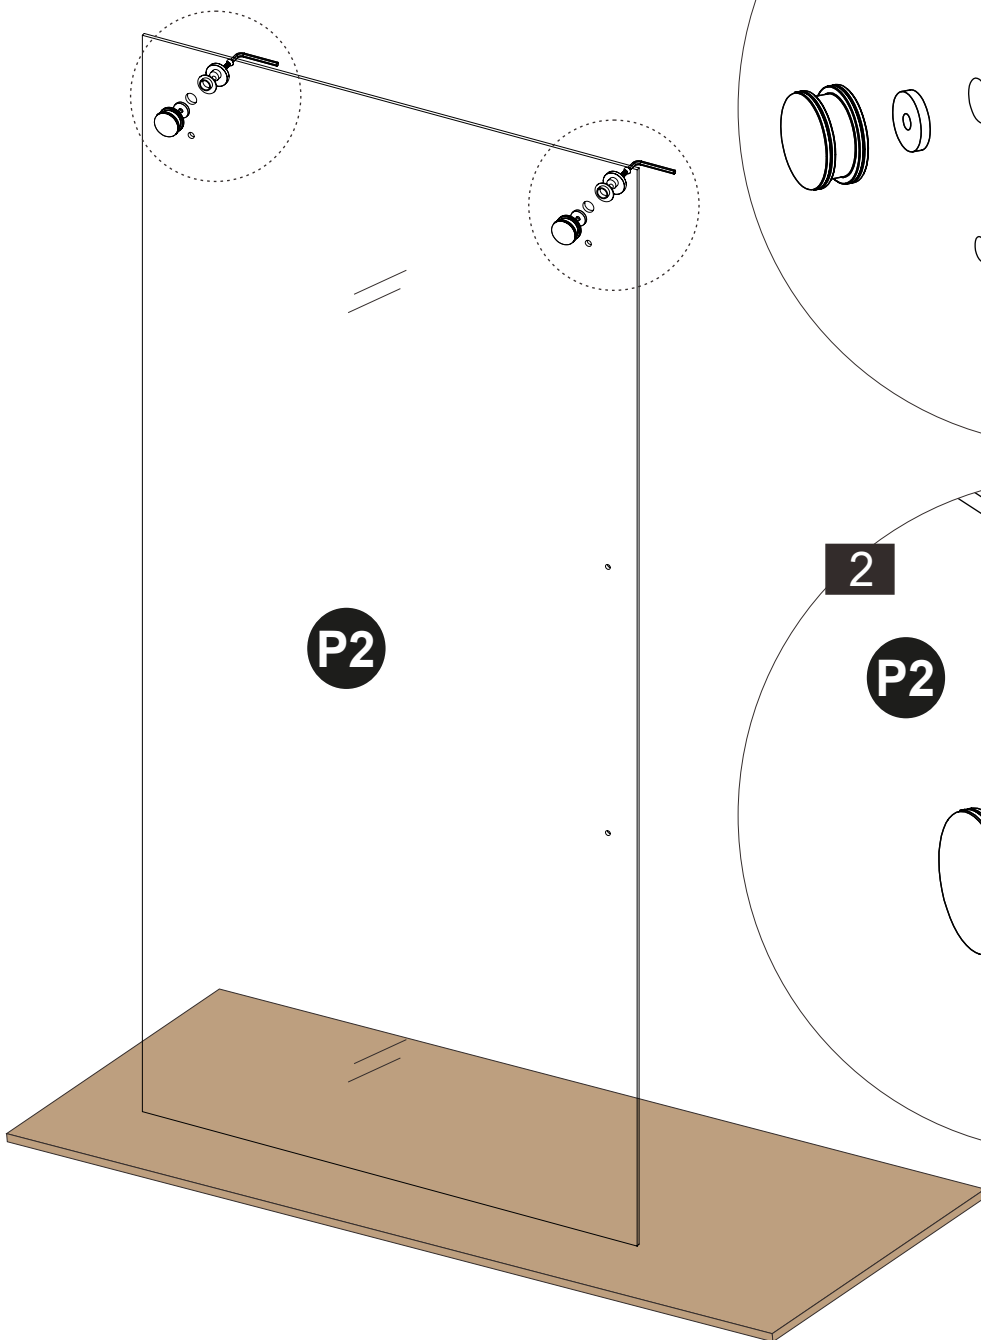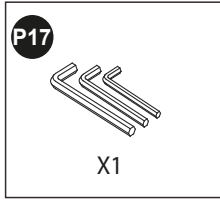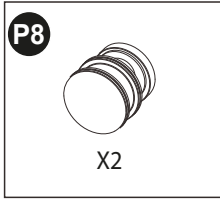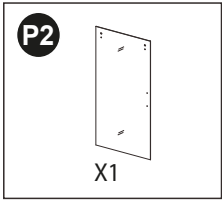


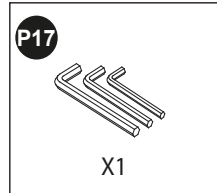

13



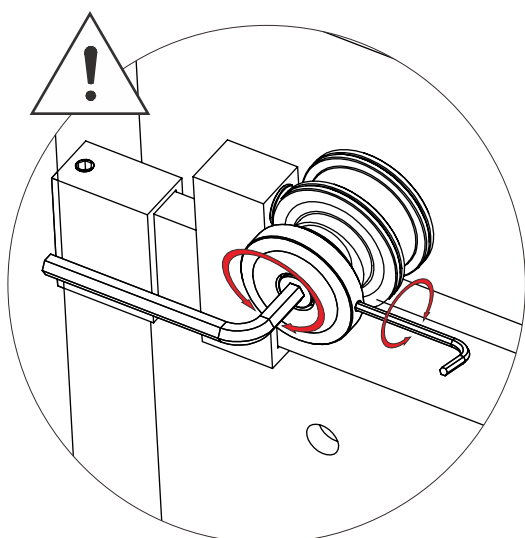
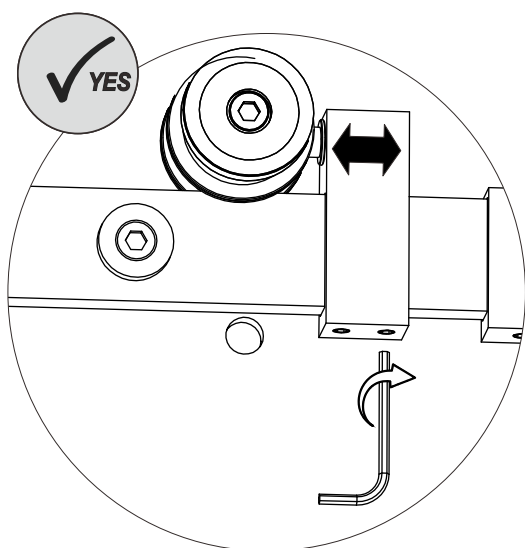
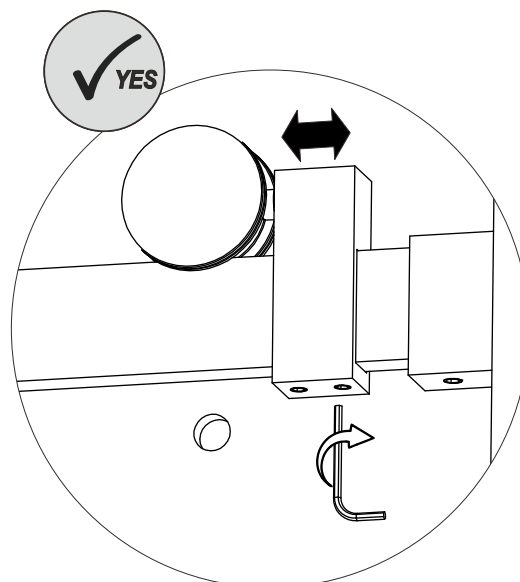
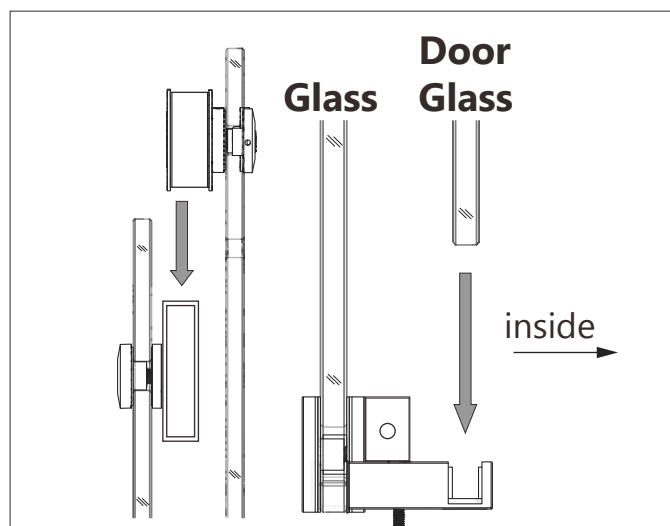


Adjust the door glass

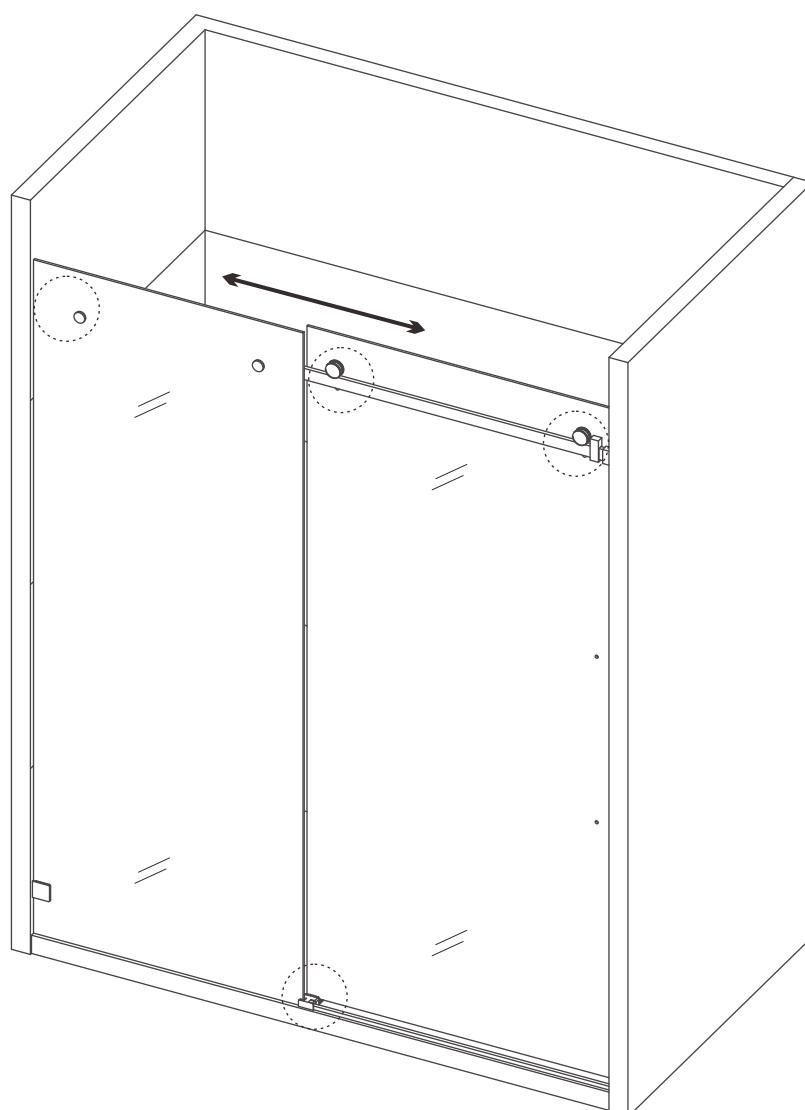

















14

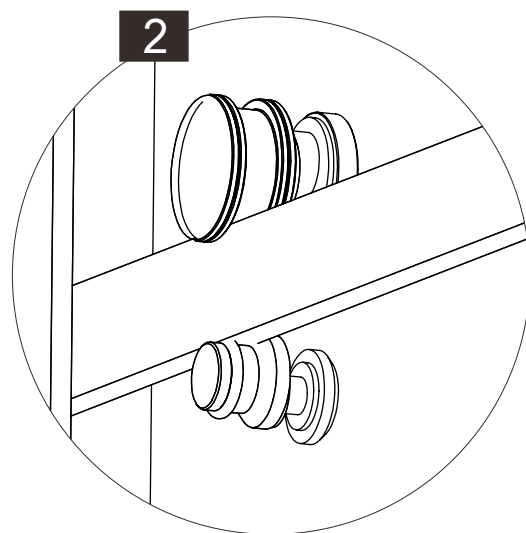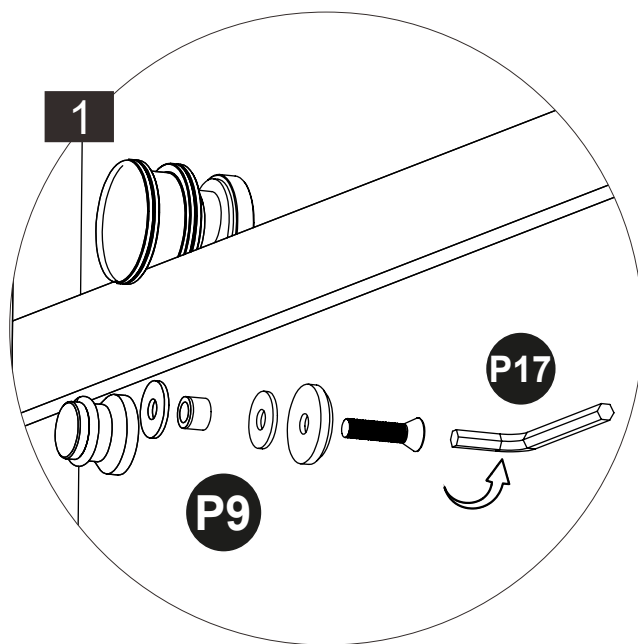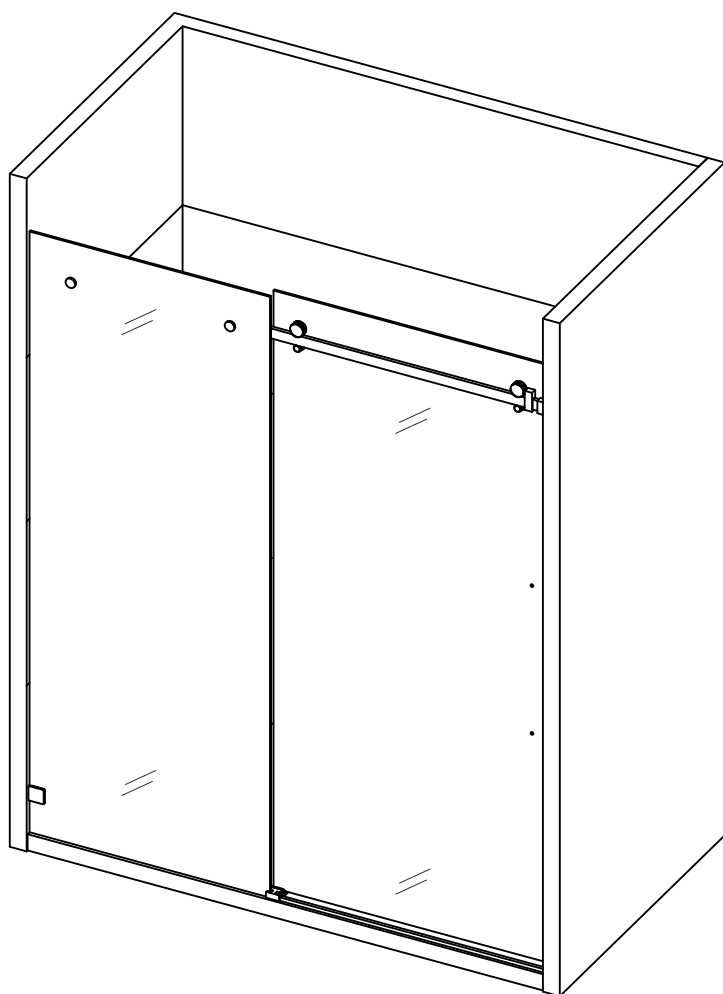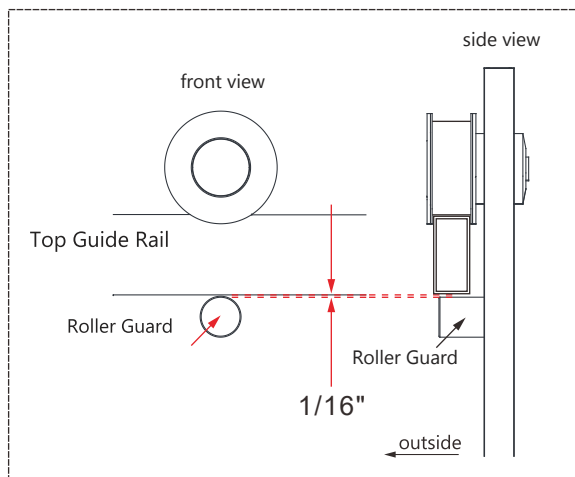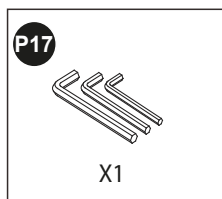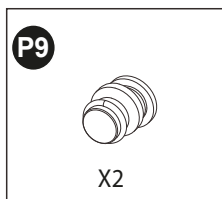







15

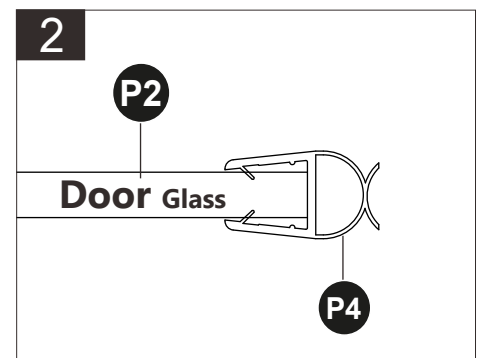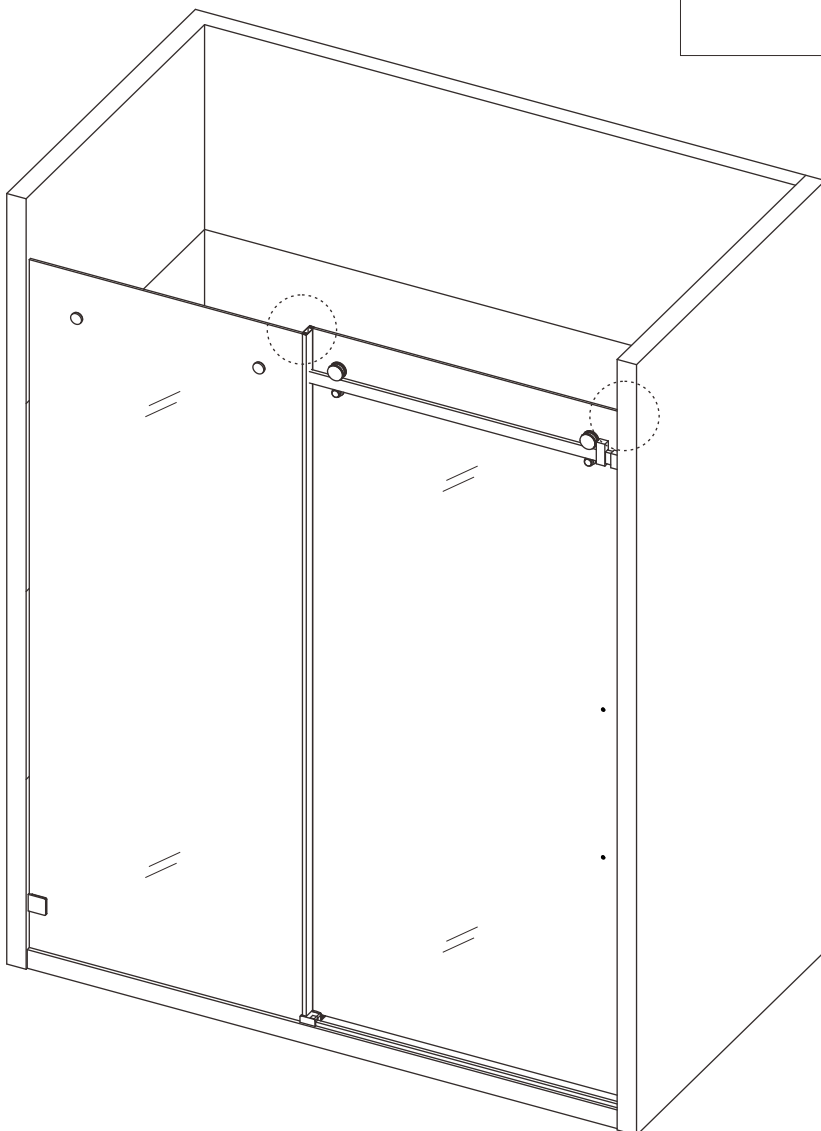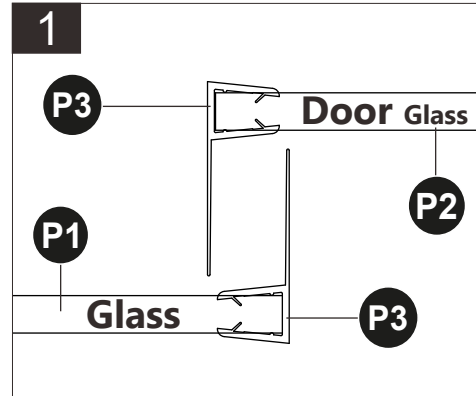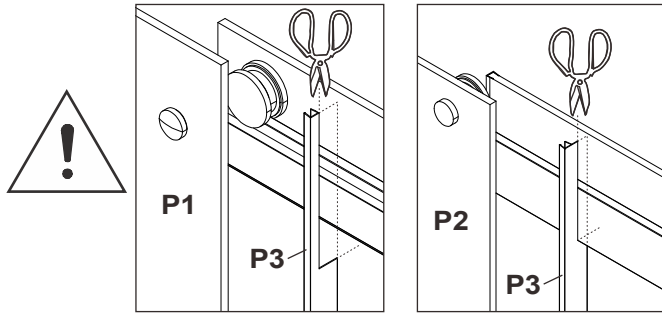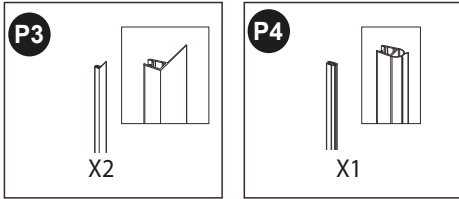

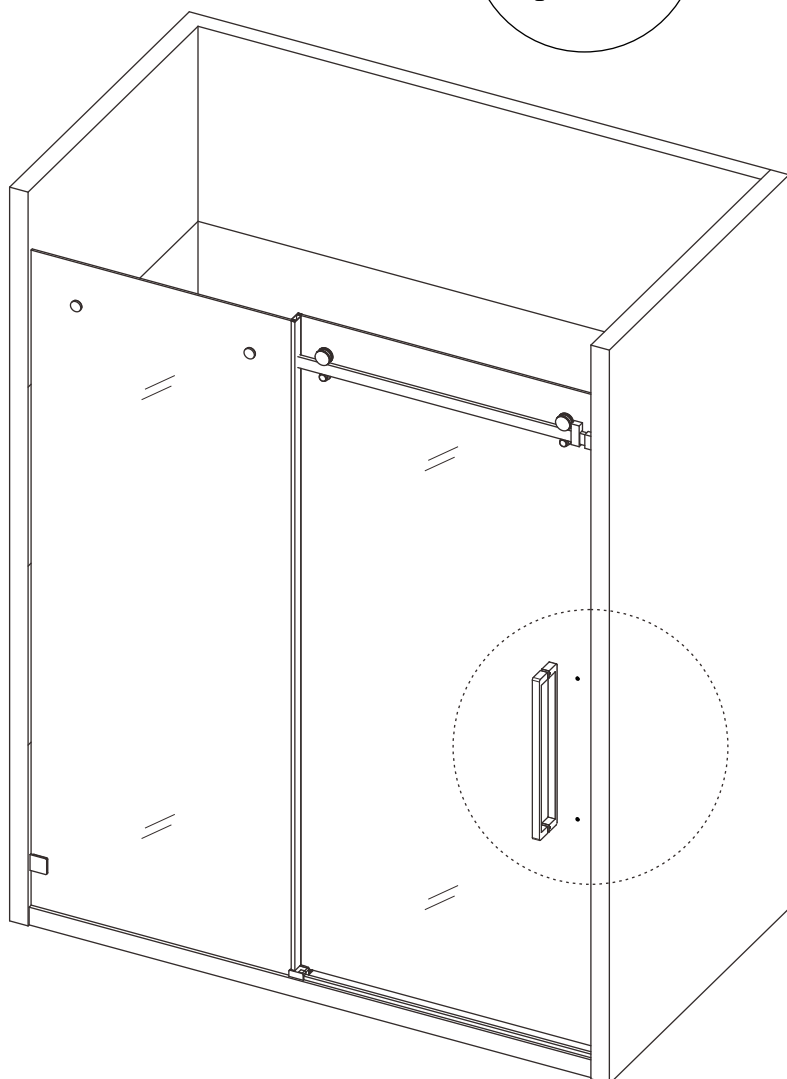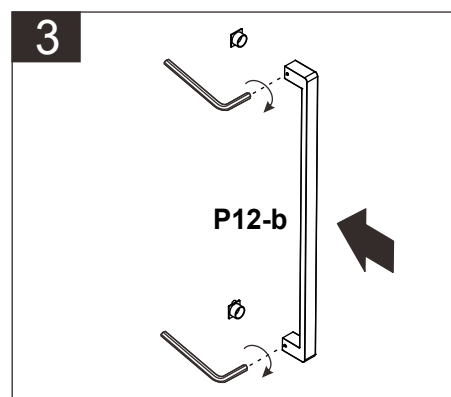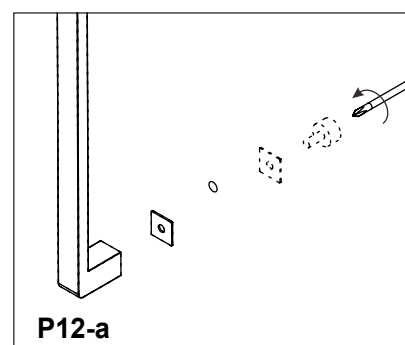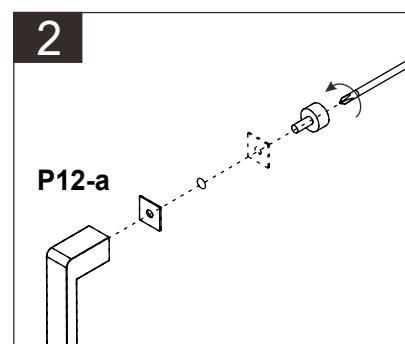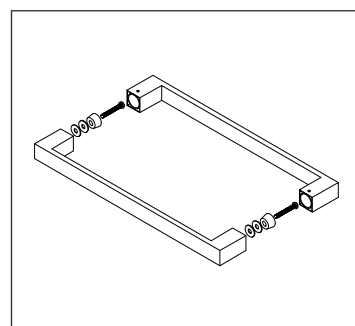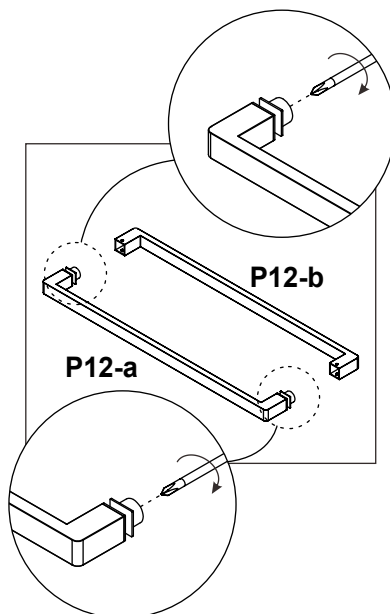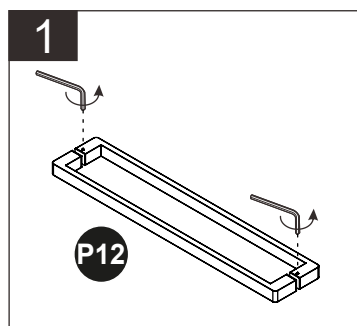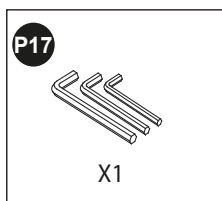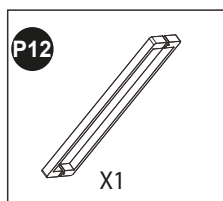





17

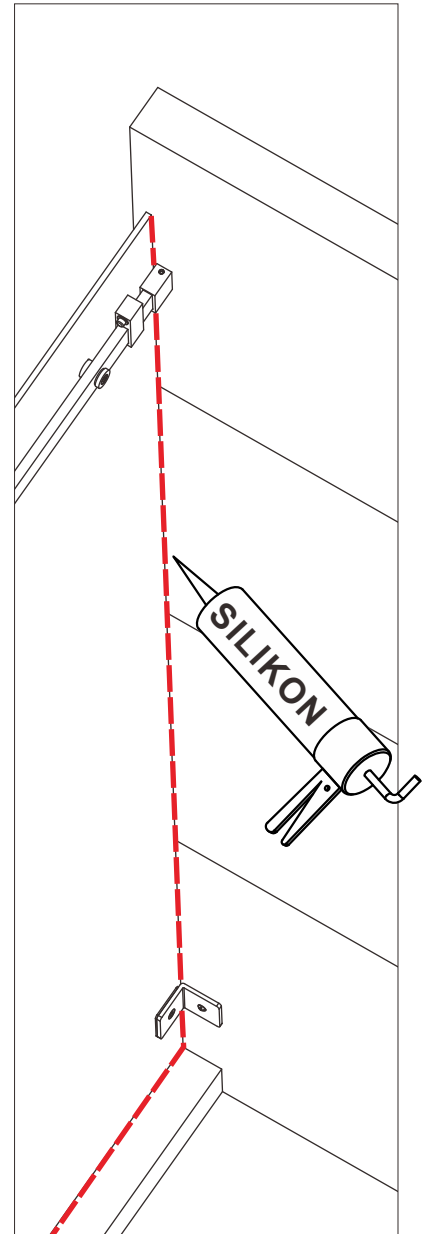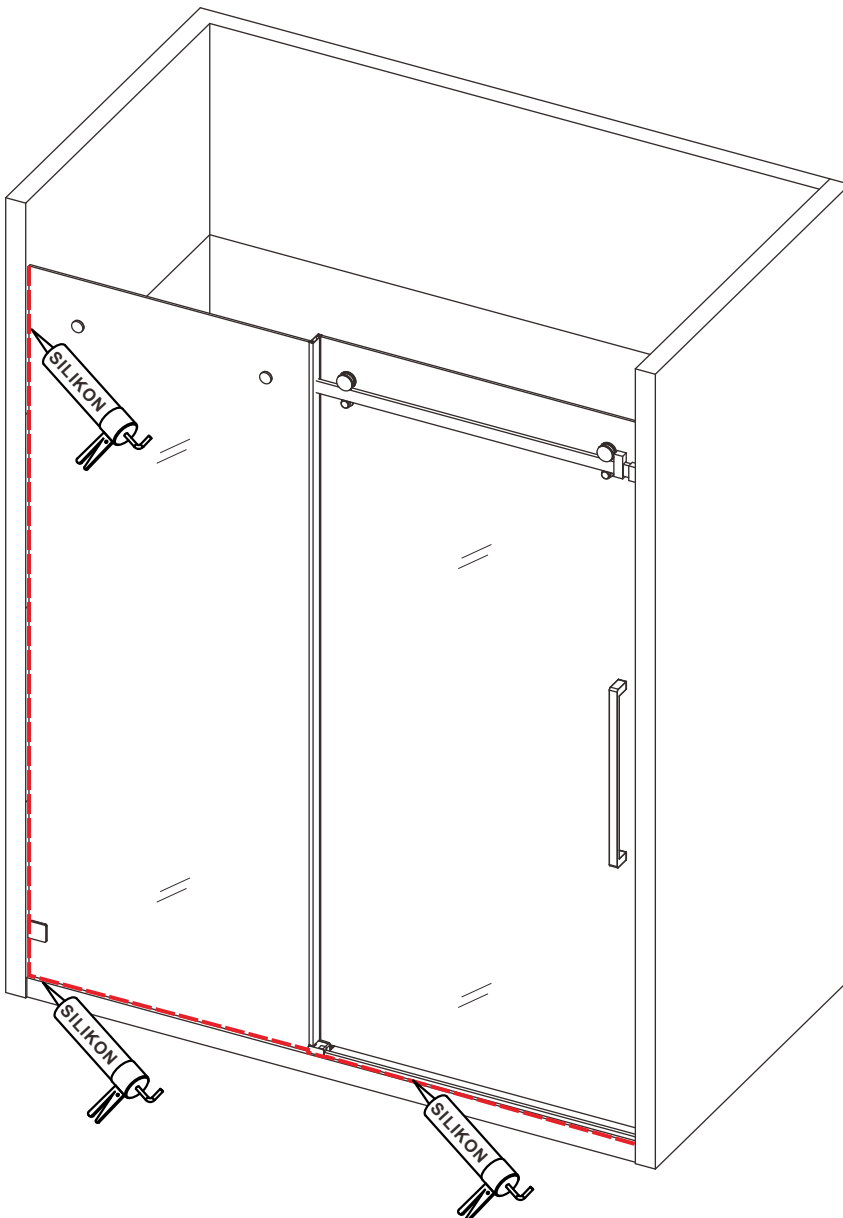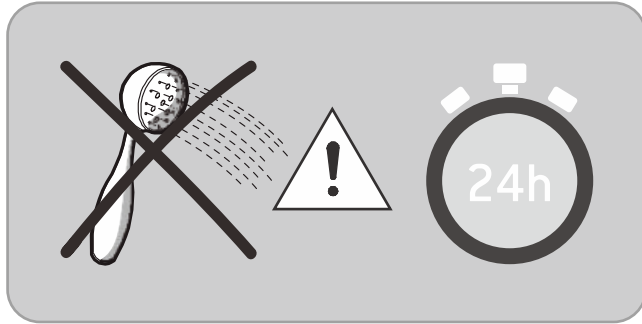

R

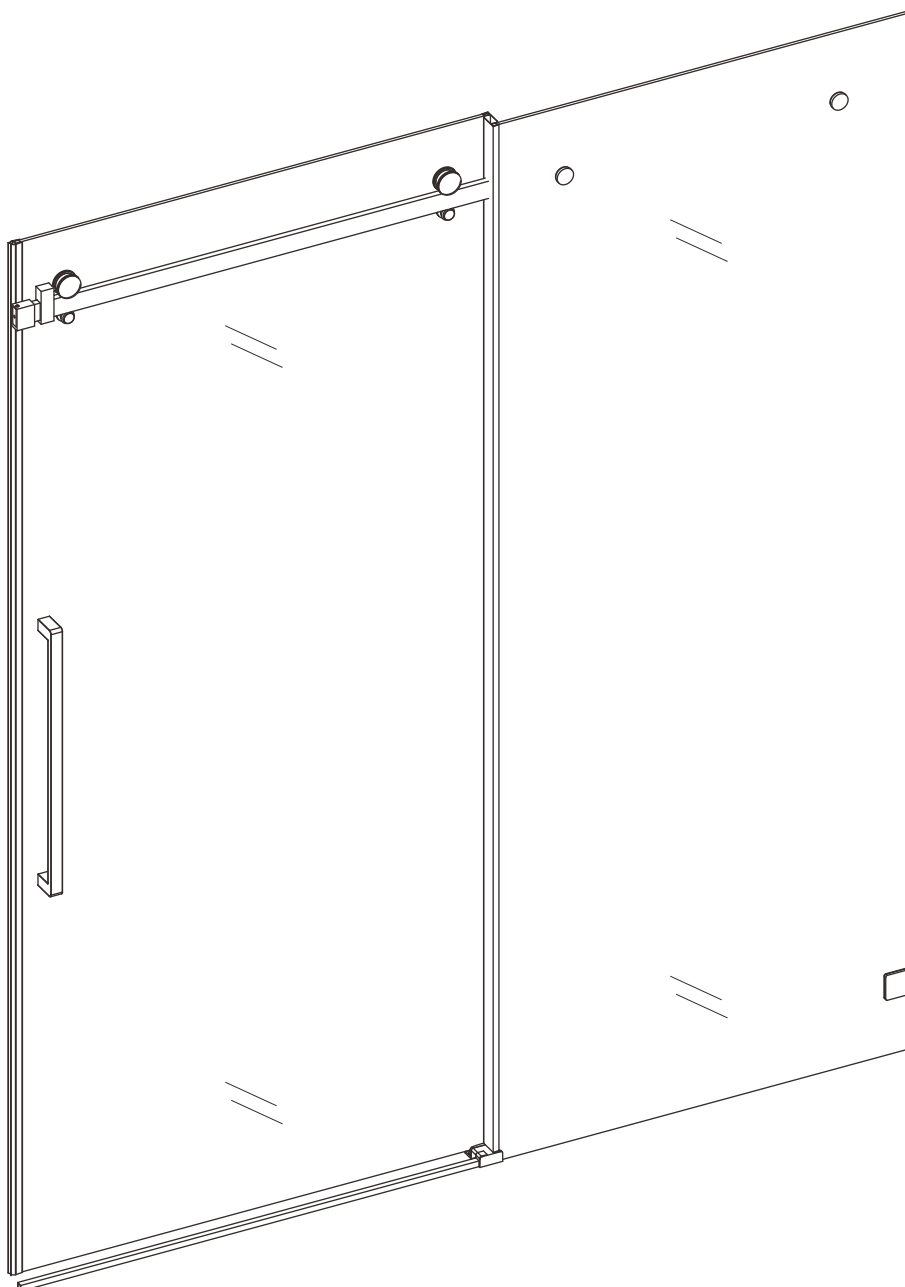




1



P13



X1


	W(inch)
48"	44"-48"
60"	56"-60"

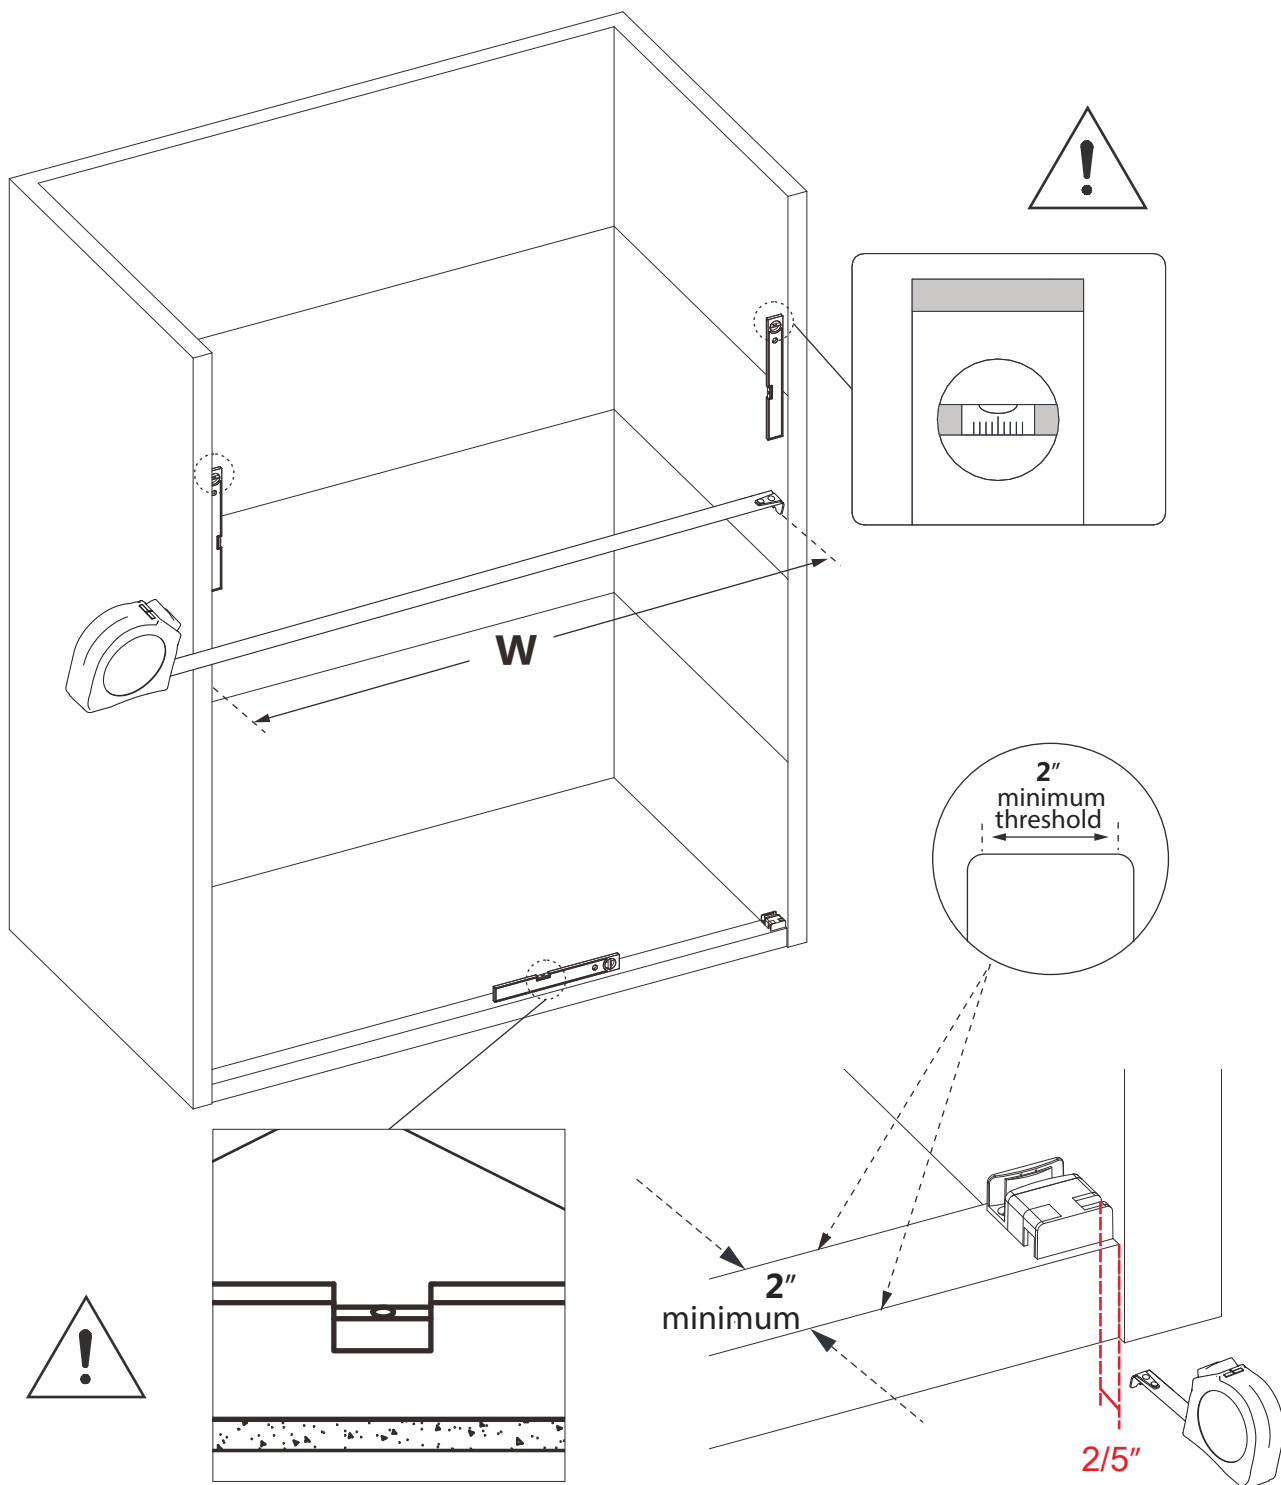

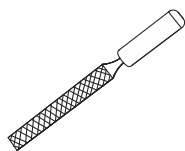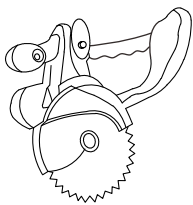


Cut the aluminum frame to fit your wall layout (If the frame already fit the wall, then you do not need to cut it)

2



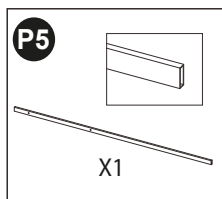


	L(inch)	W(inch)
48"	L=48"-W	44"-48"
60"	L=60"-W	56"-60"


1

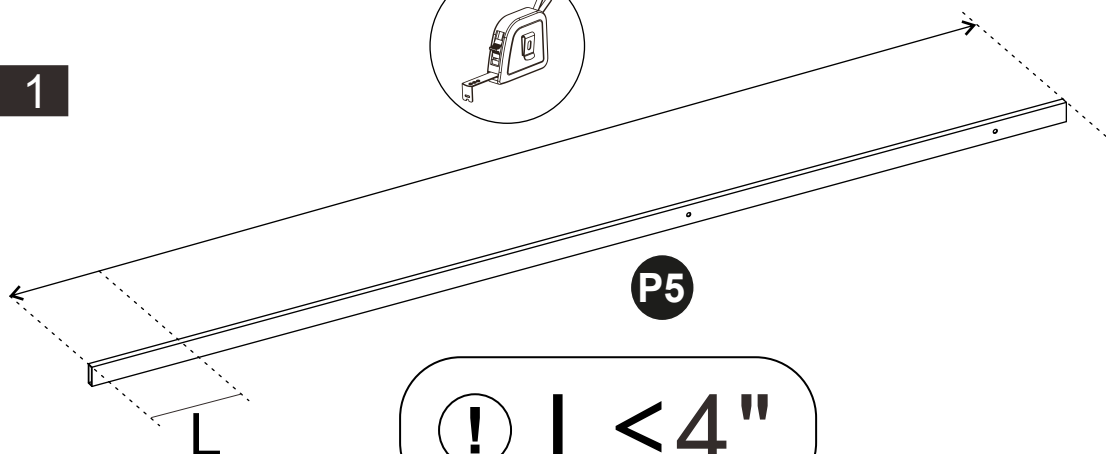


2

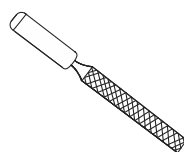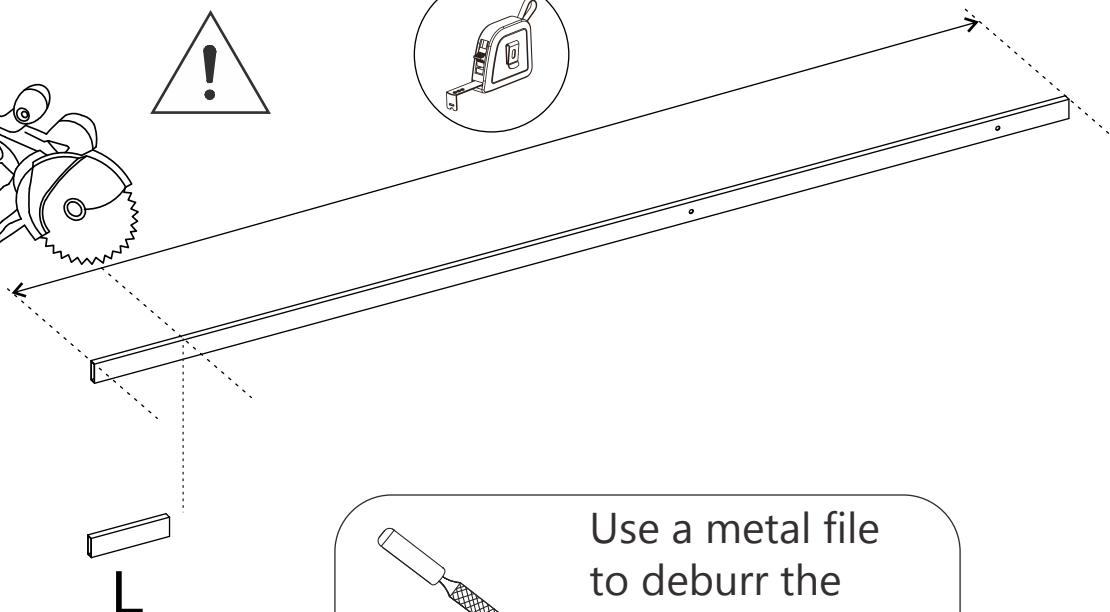
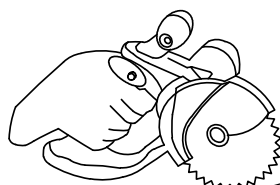



Use a metal file to deburr the cut end

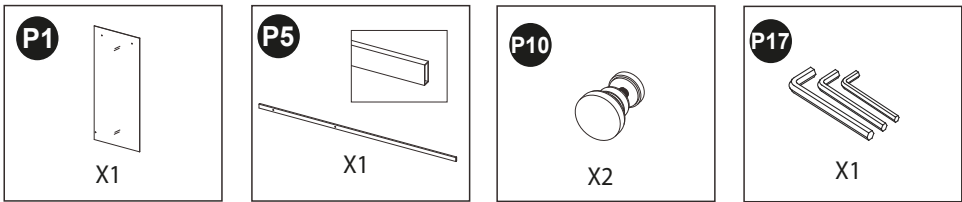







Top View

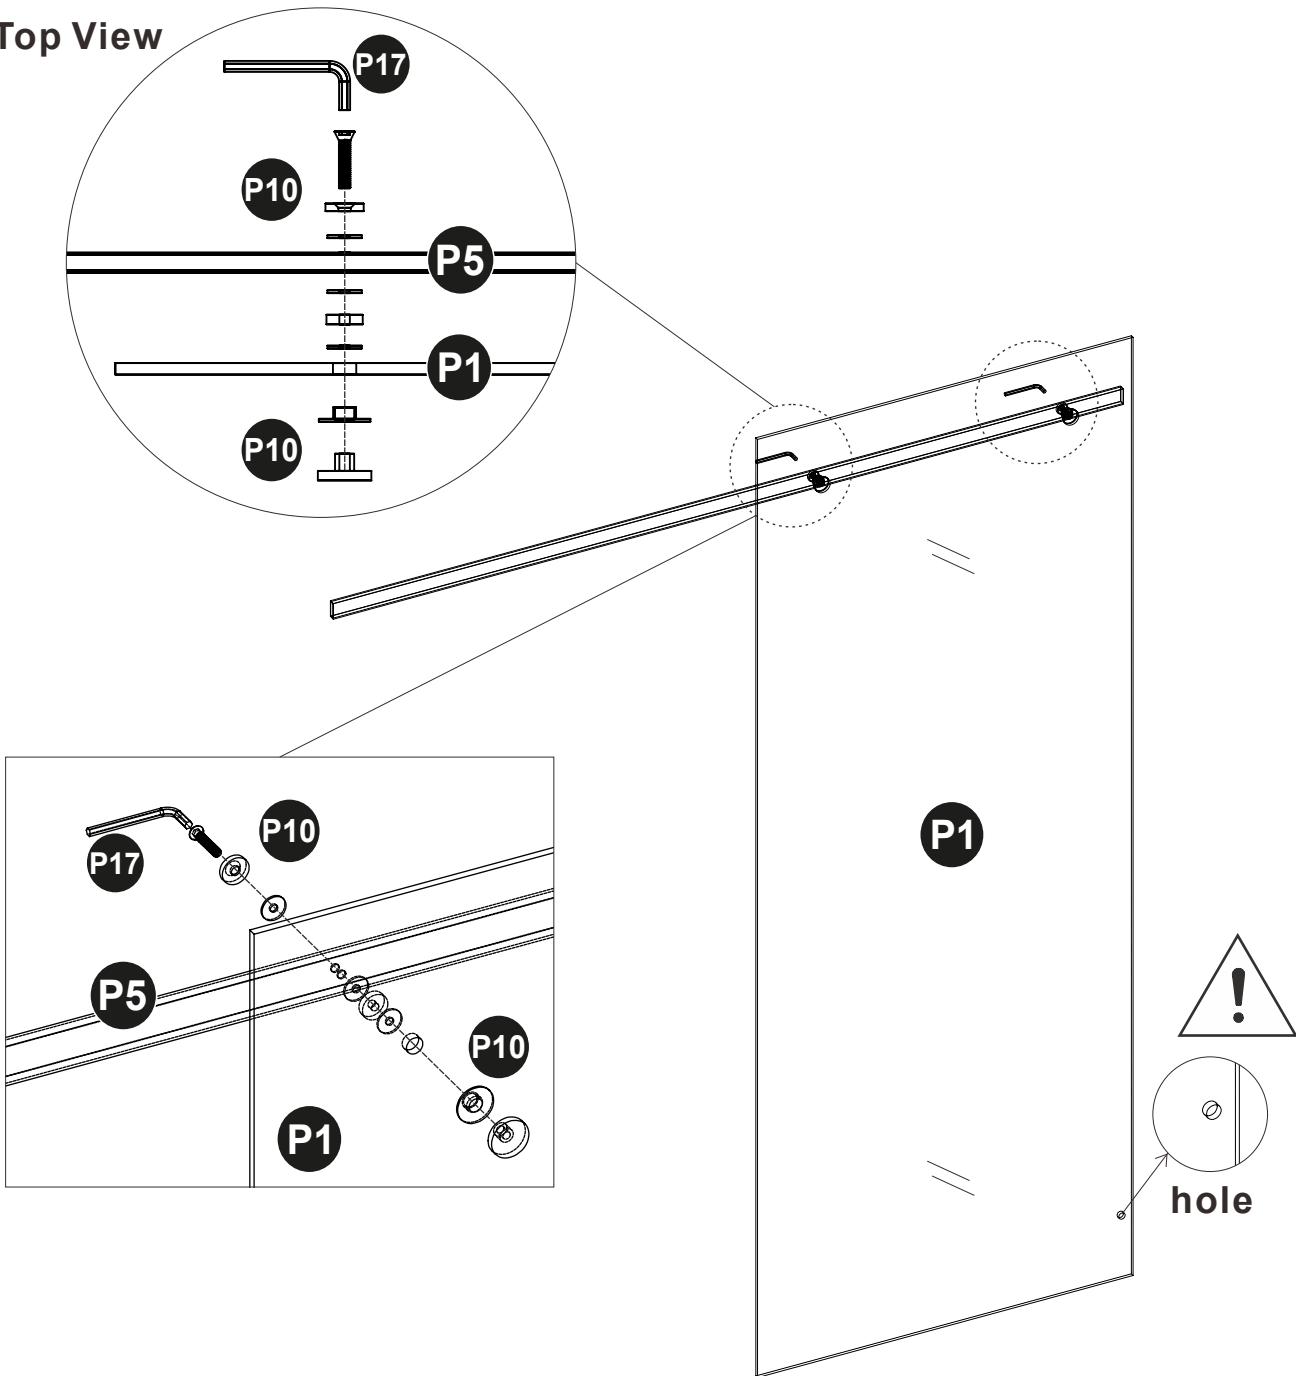




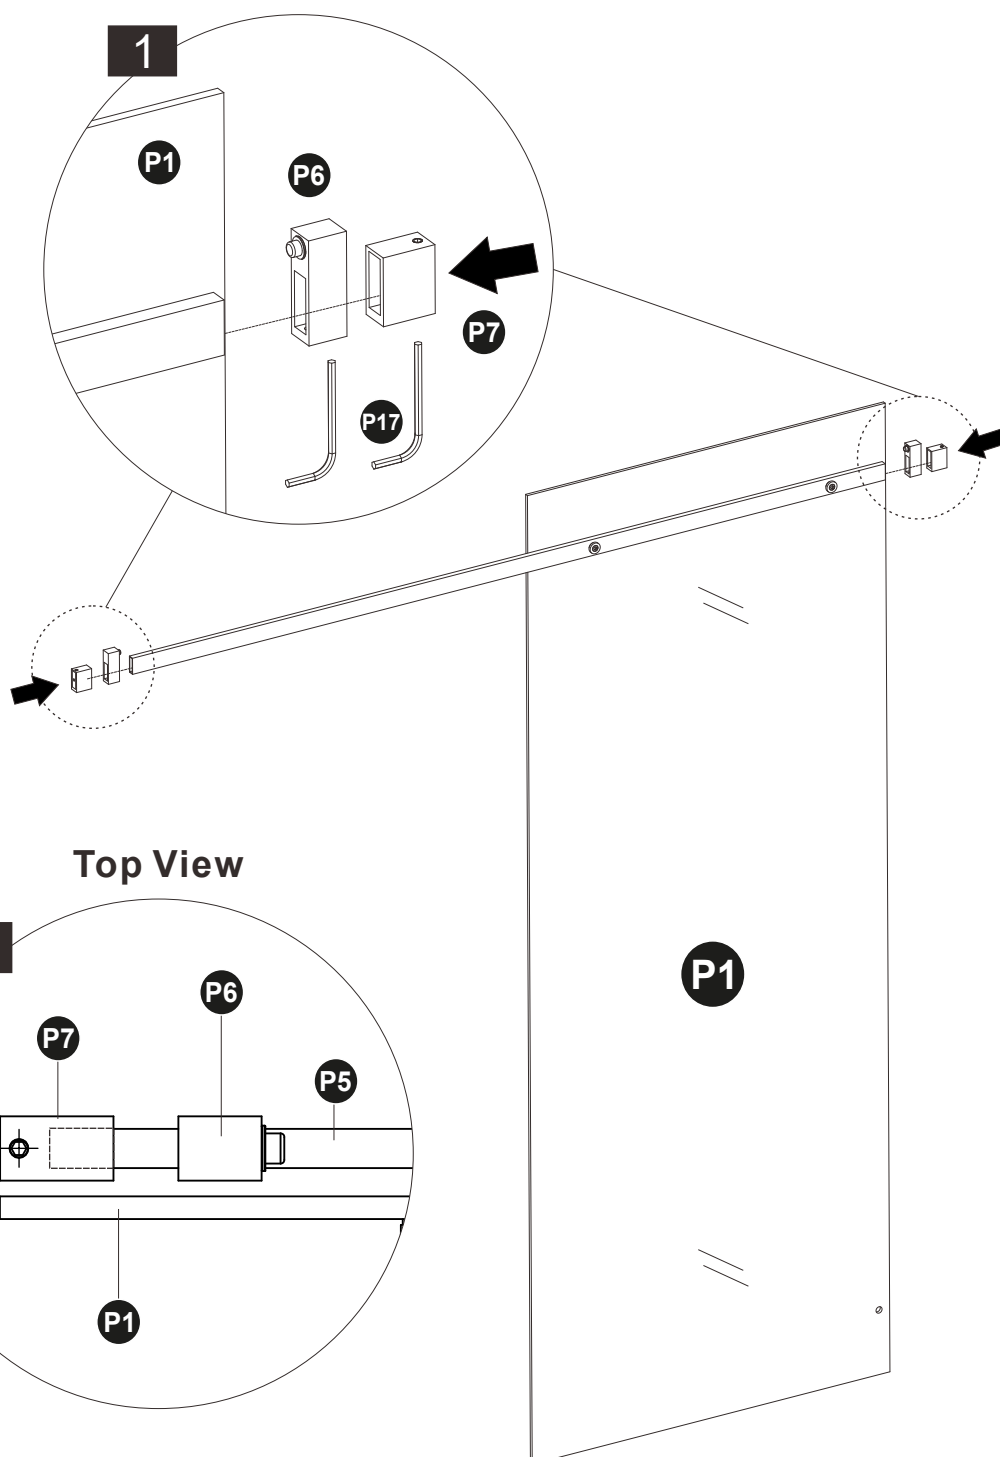
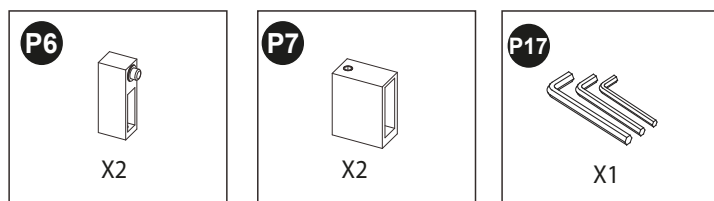




5

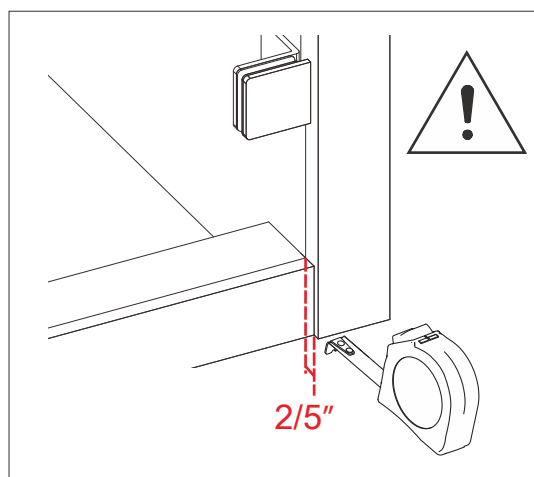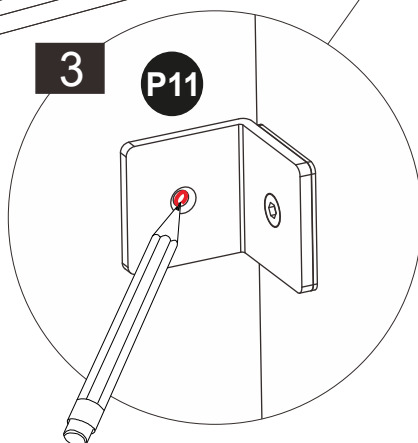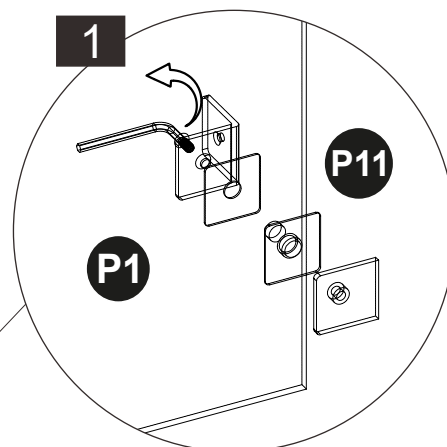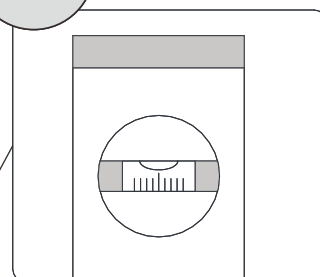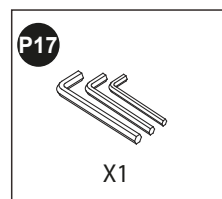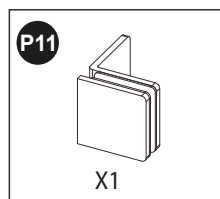

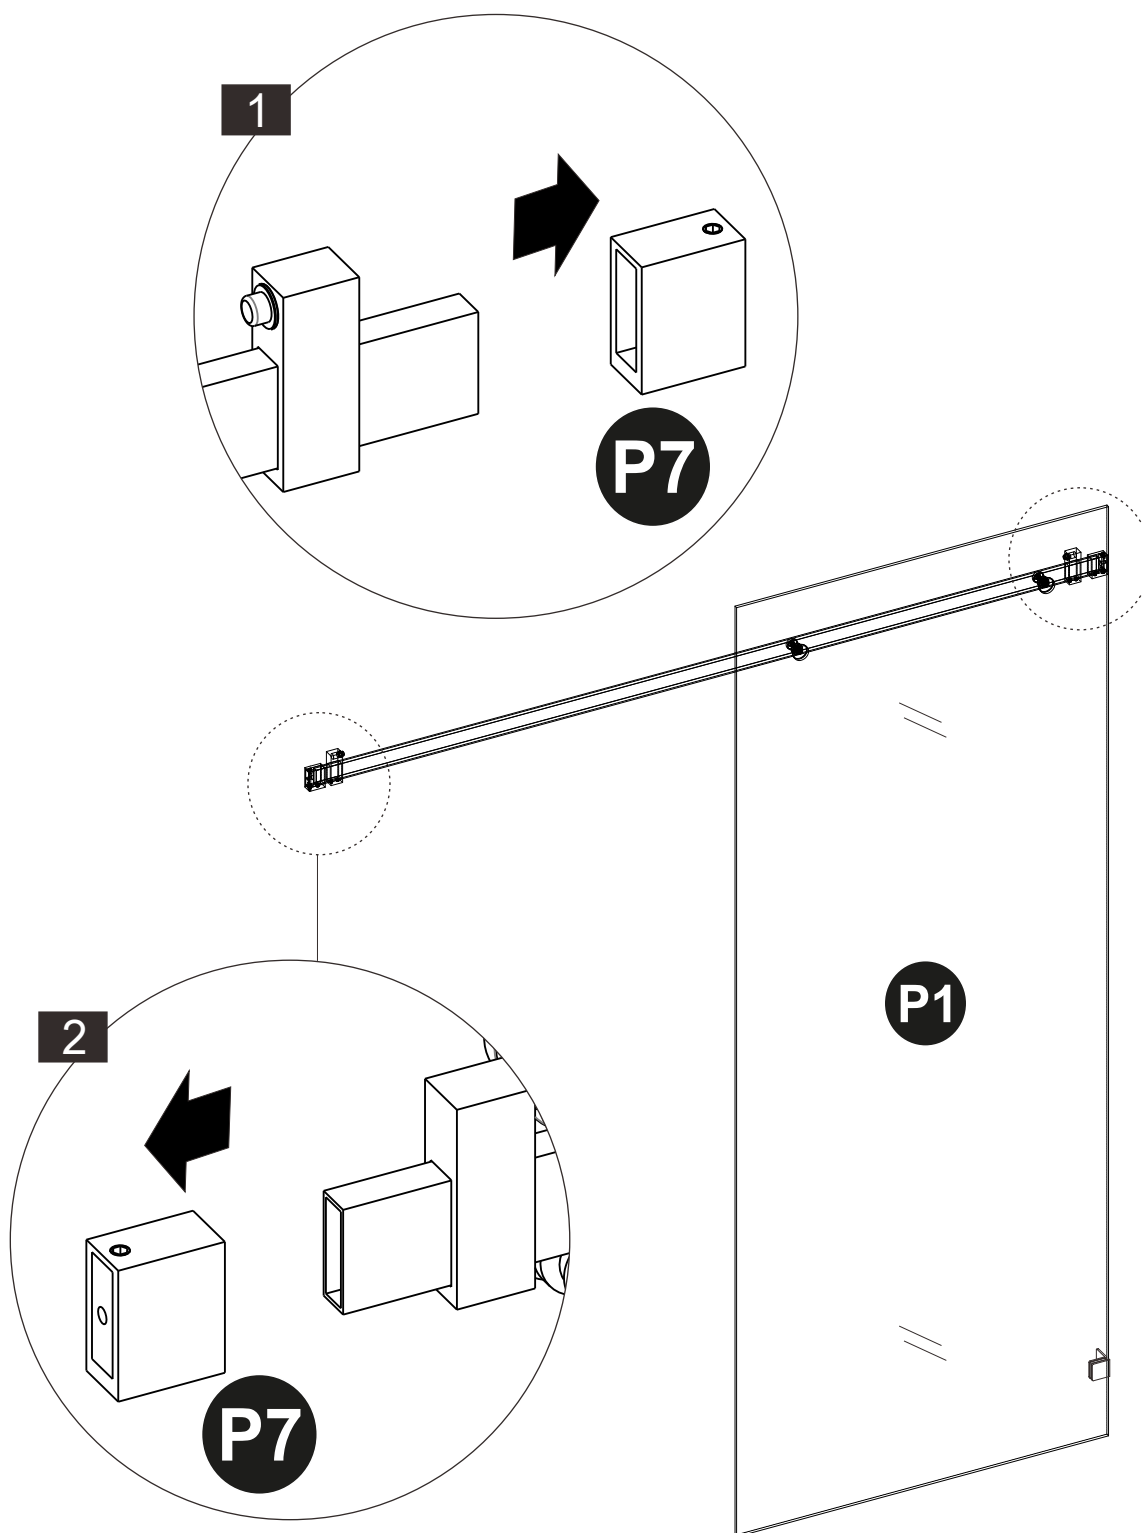



7

P15



X3


P16

ST4x30MM








X2

P7










X2

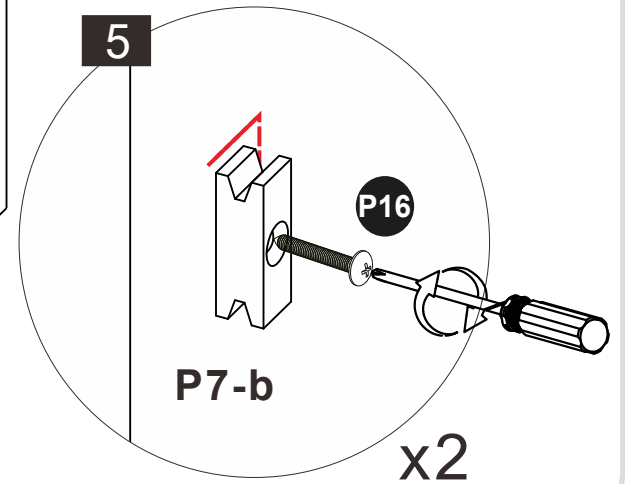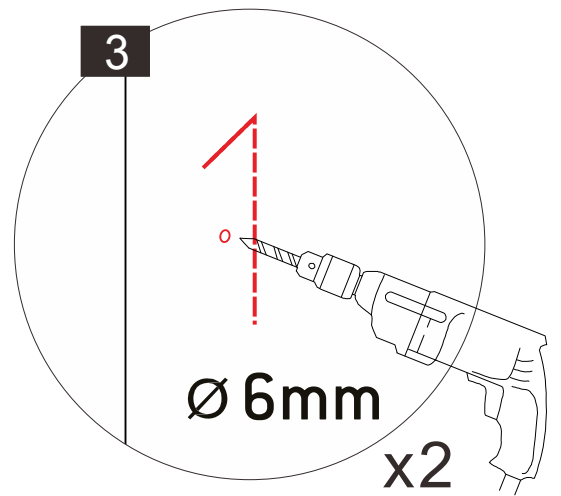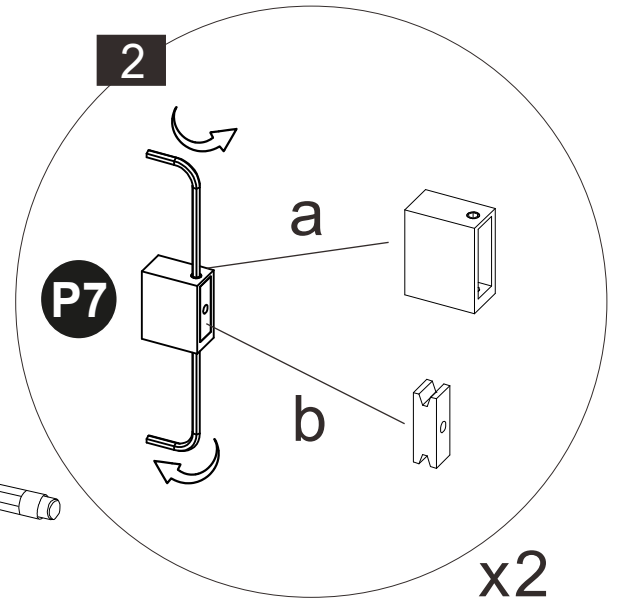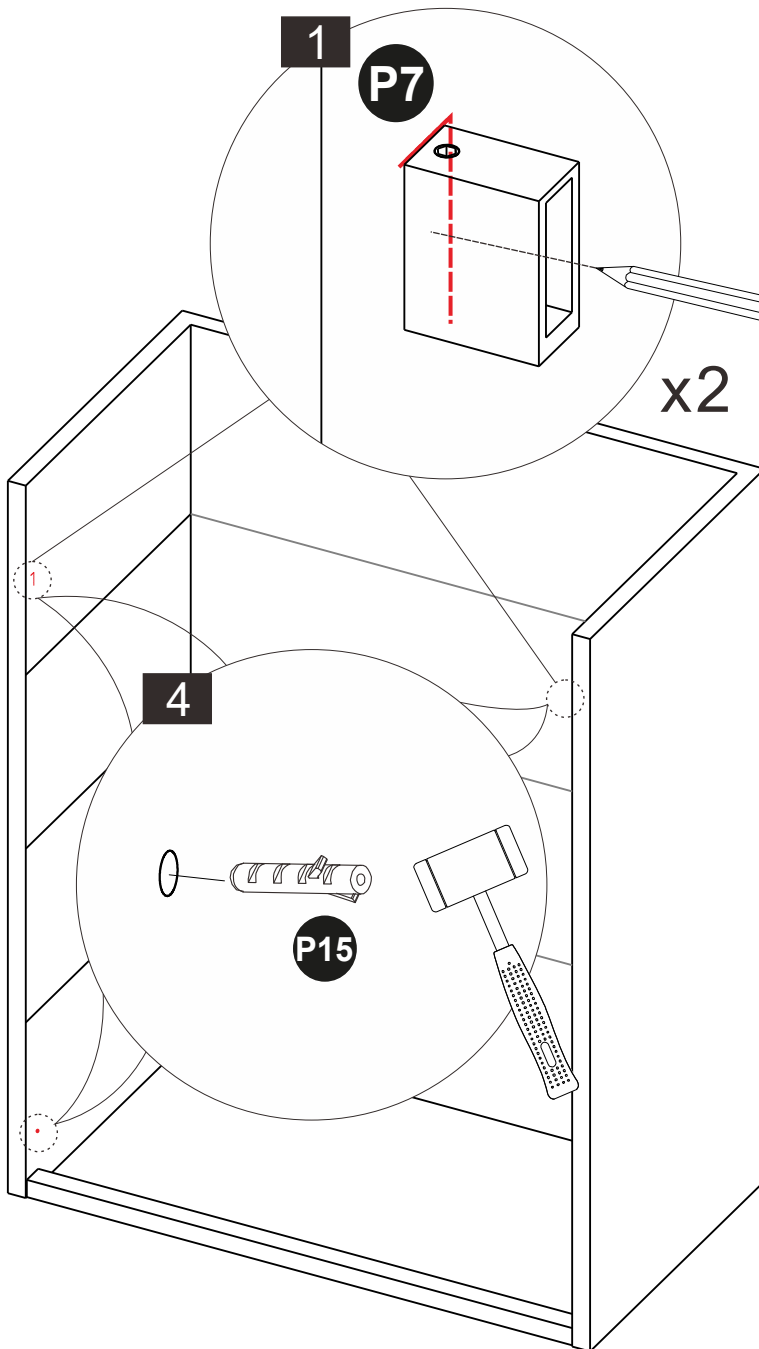

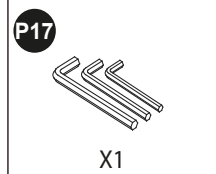

8

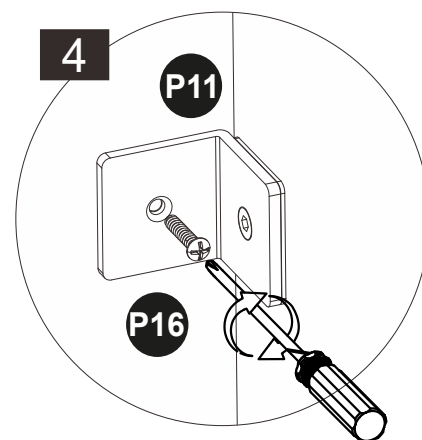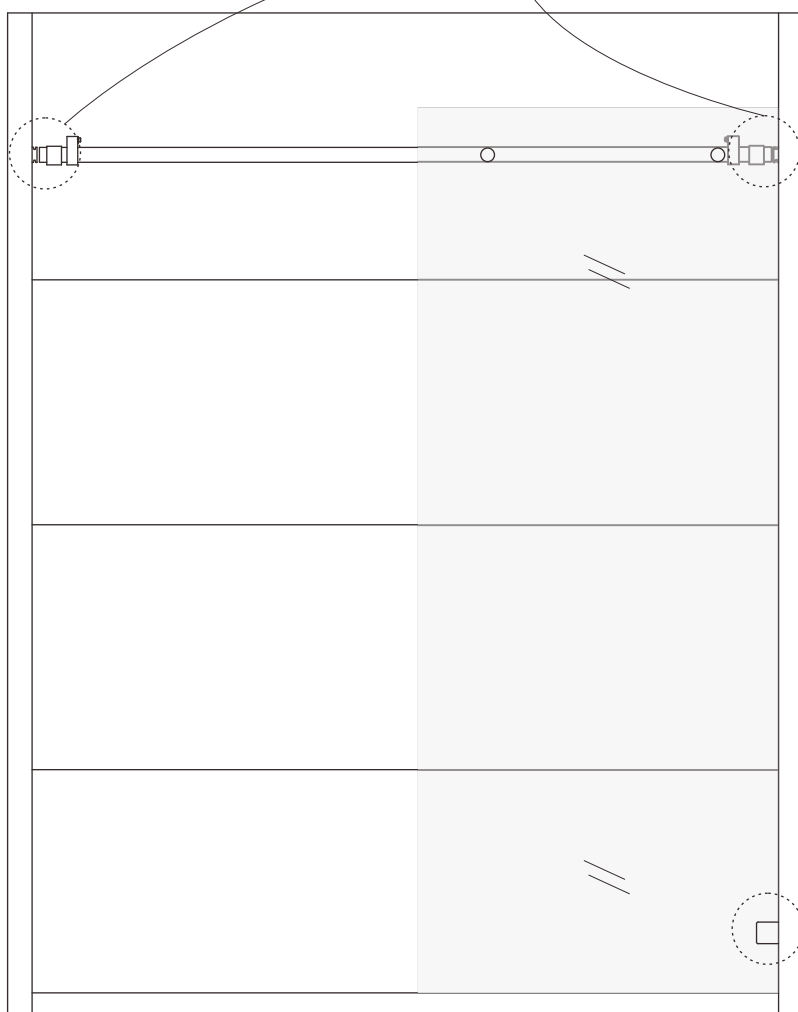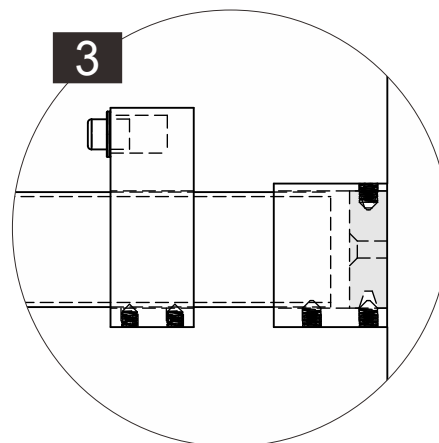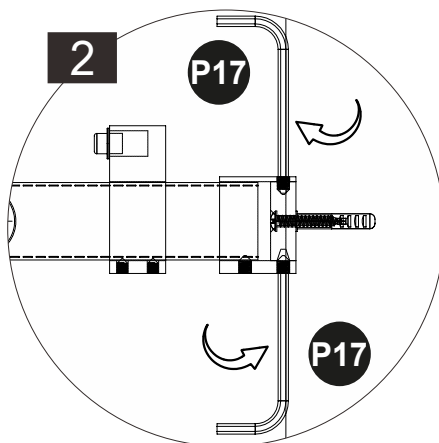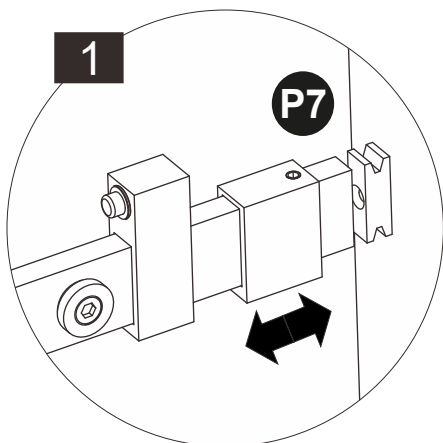



9

P13



X1

P15




X2

P16


ST4x30MM




X2

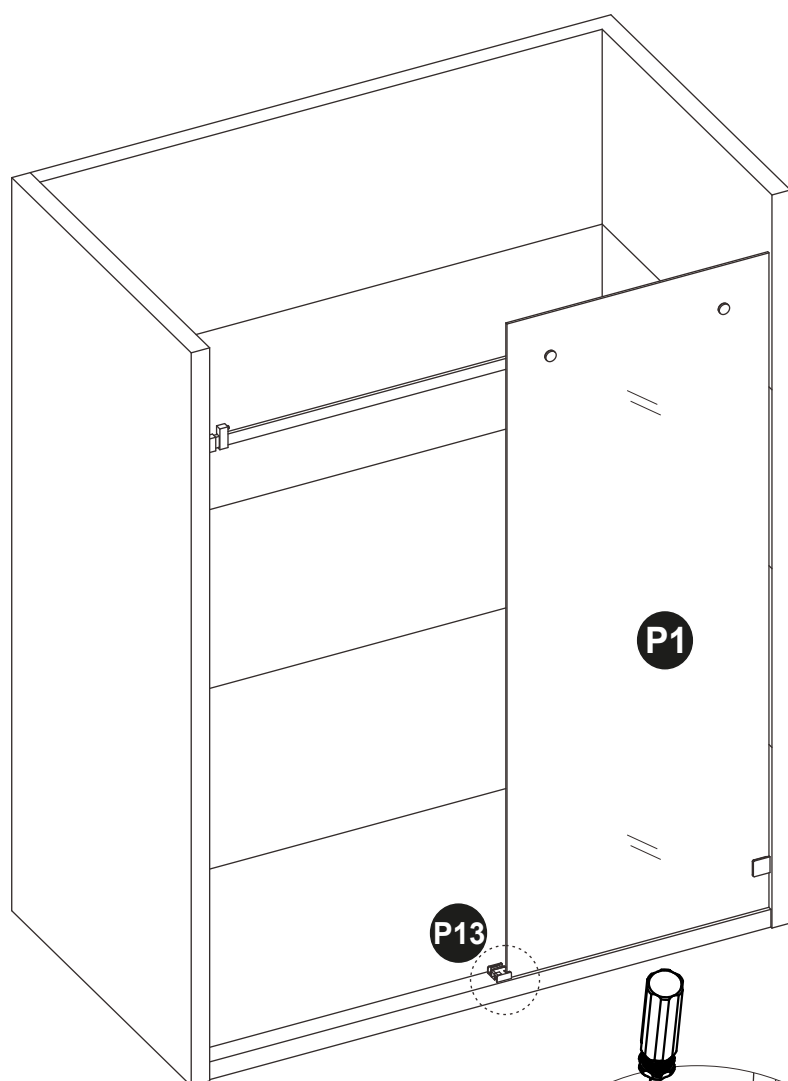


1

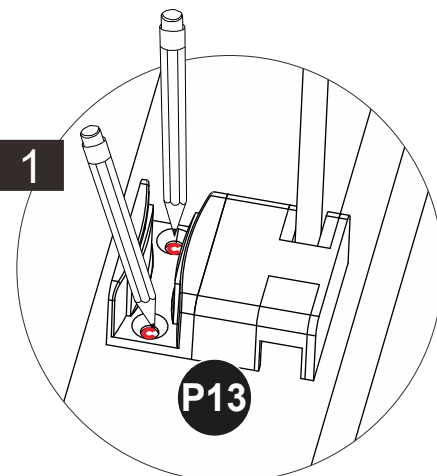


2


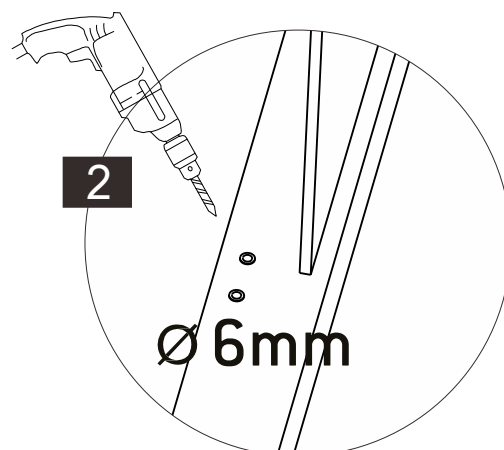


3

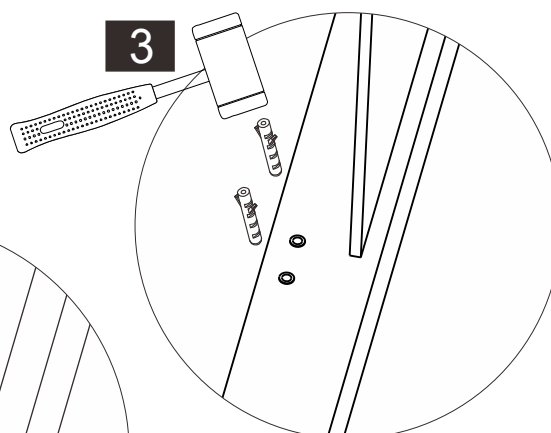


4

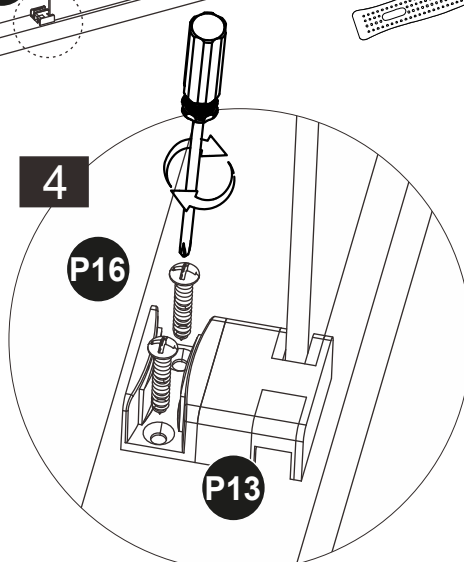




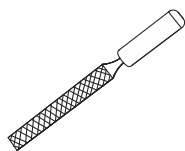
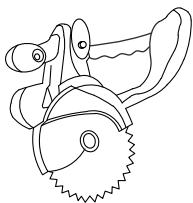


Cut the aluminum frame to fit your wall layout (If the frame already fit the wall, then you do not need to cut it)


10

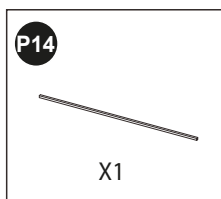






! $L \leq 4"$


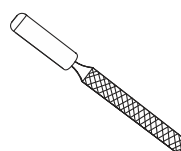
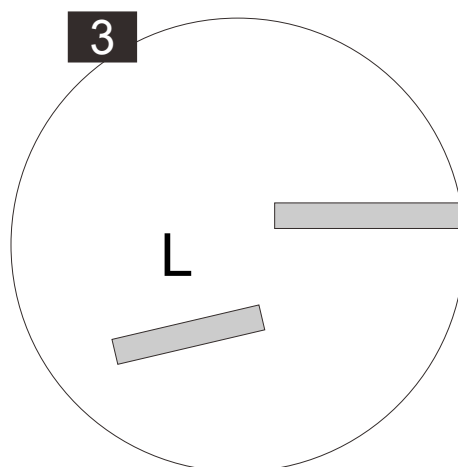
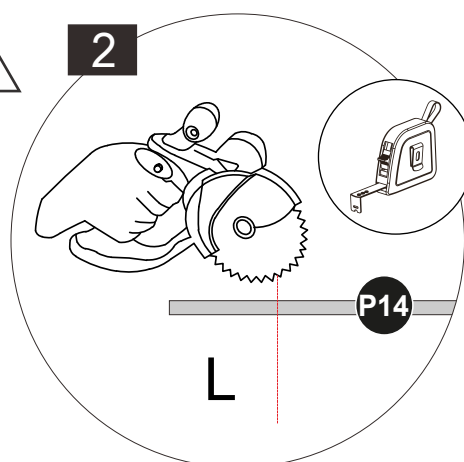
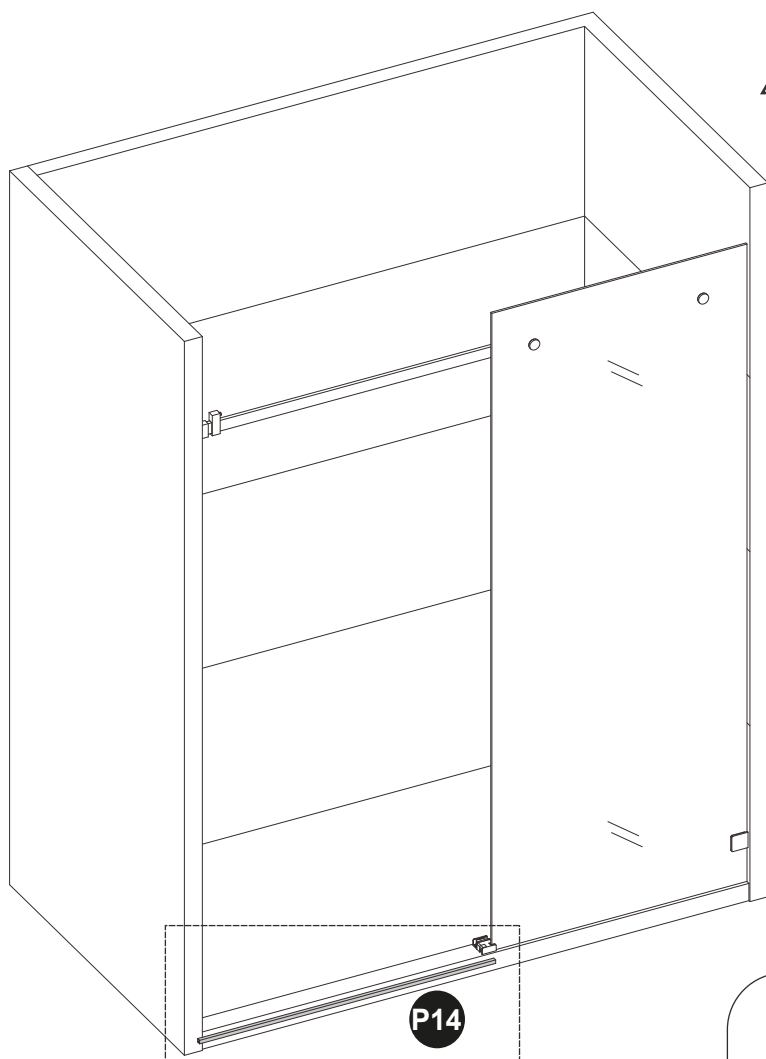
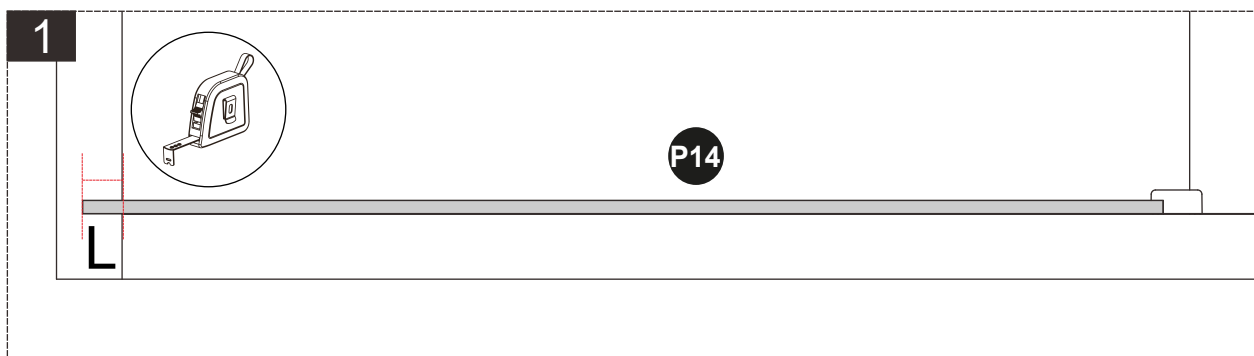



Use a metal file to deburr the cut end







11

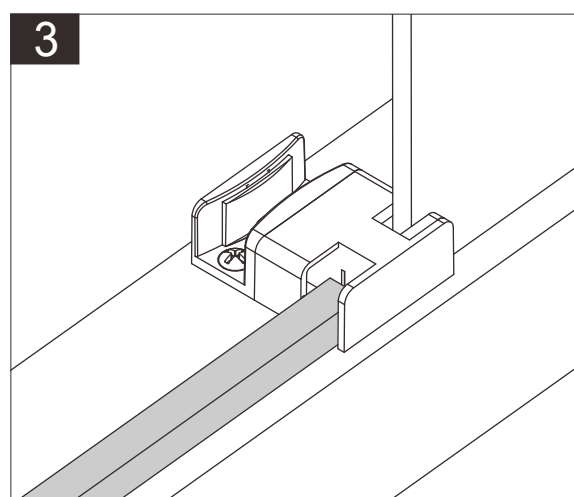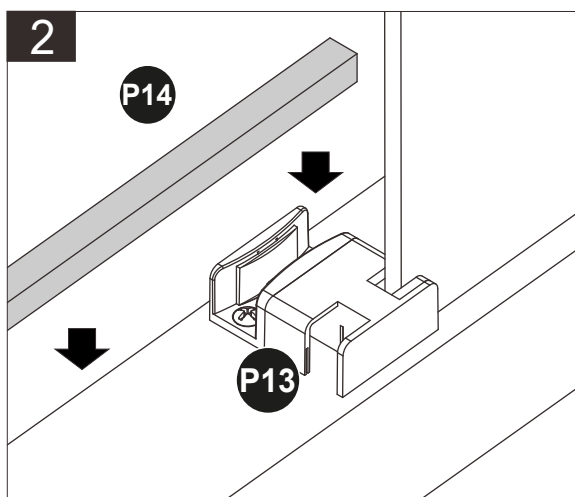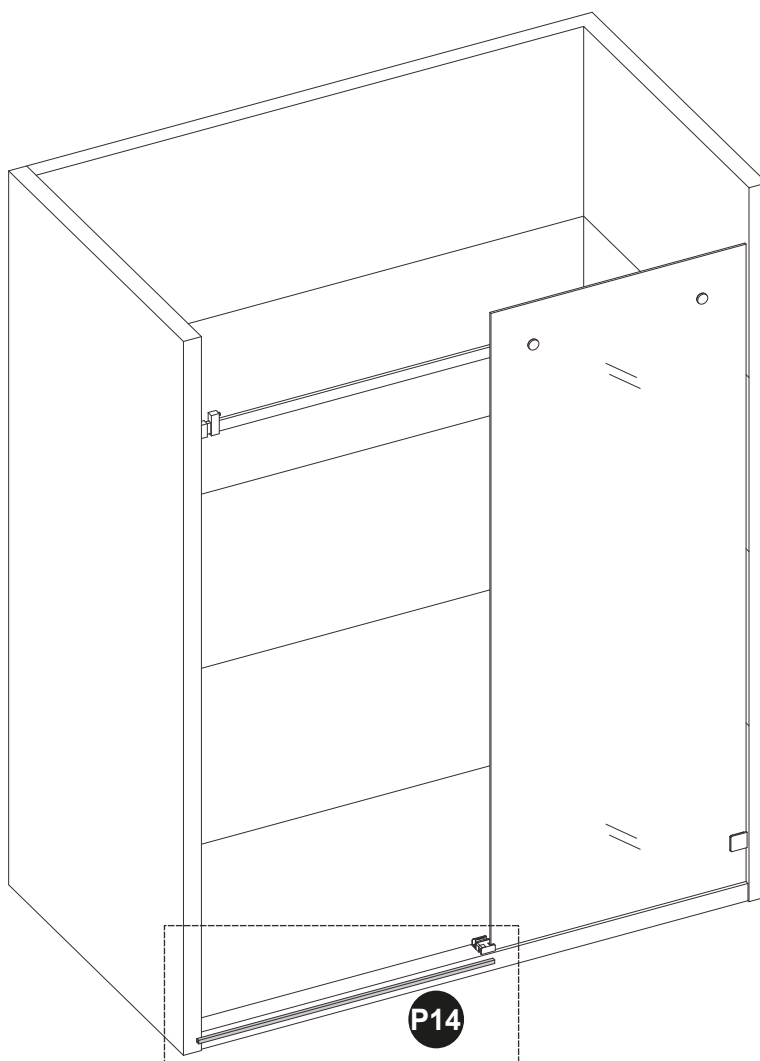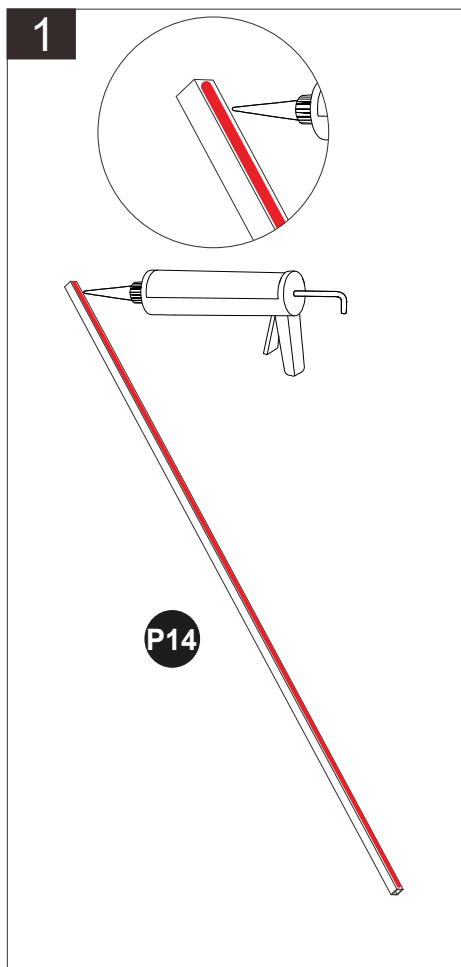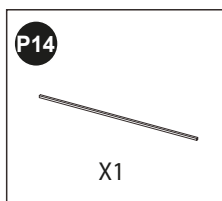

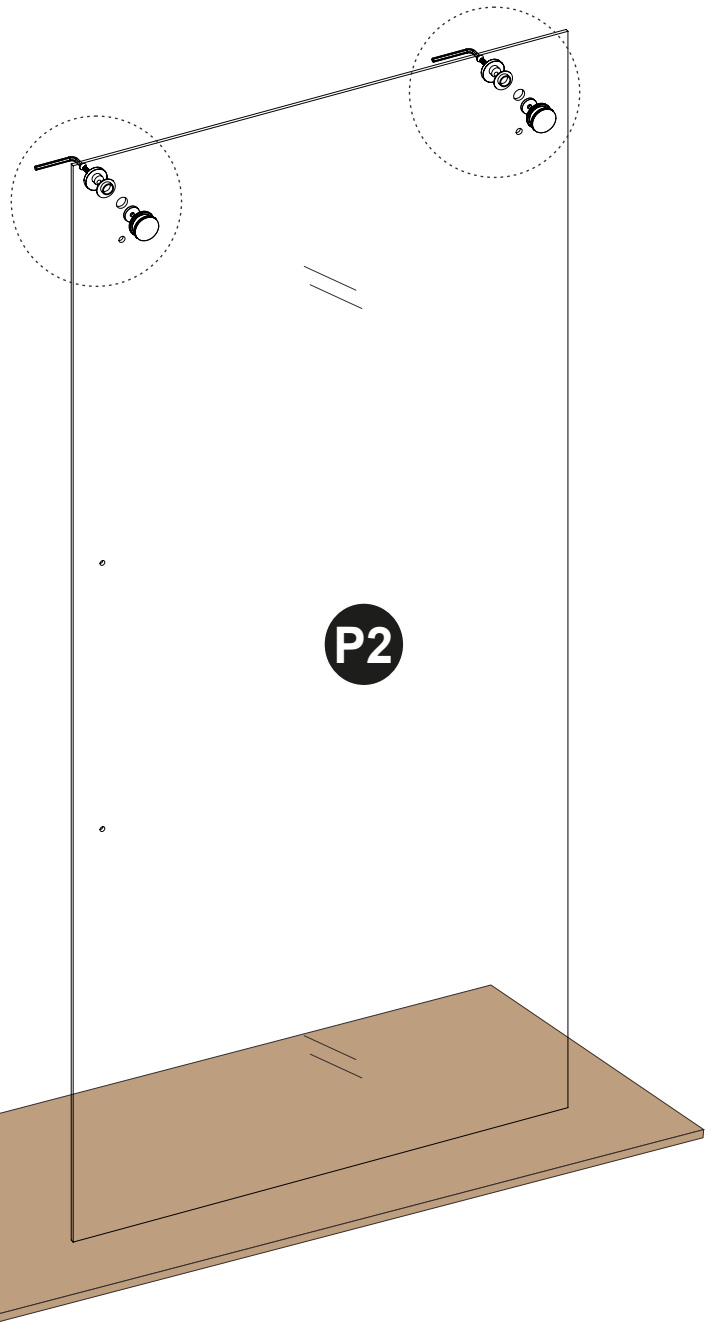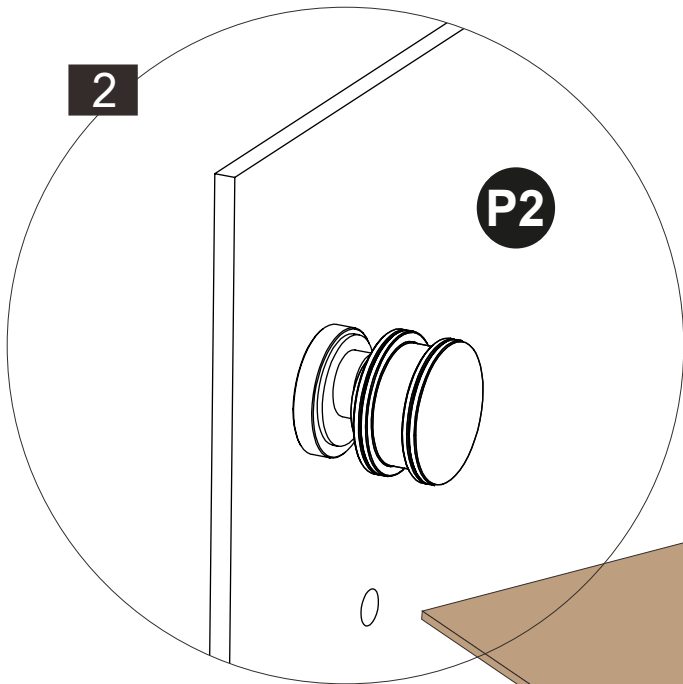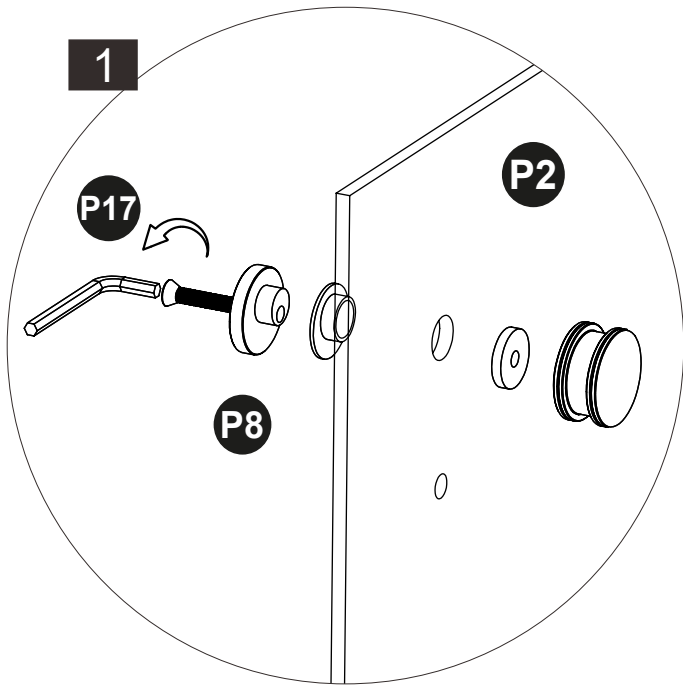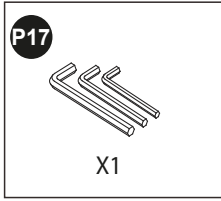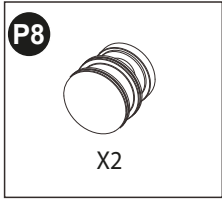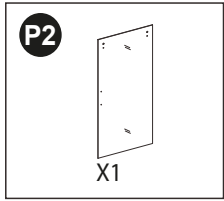


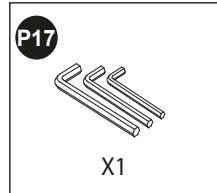


13



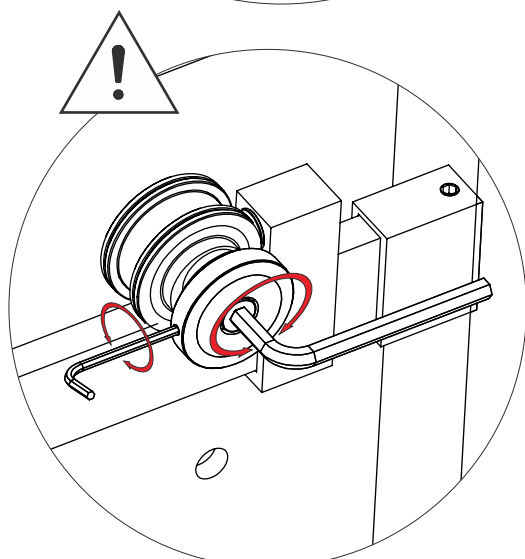
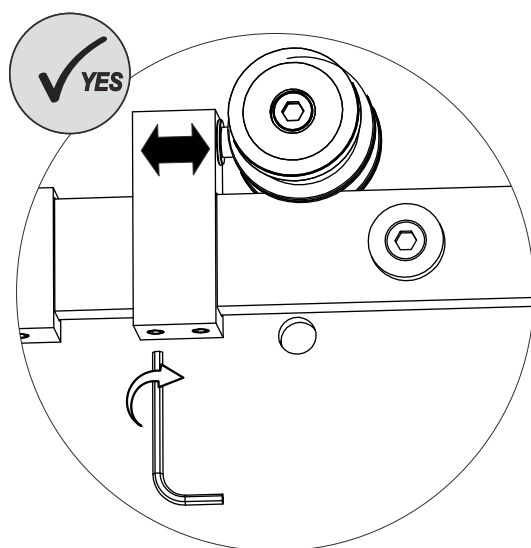
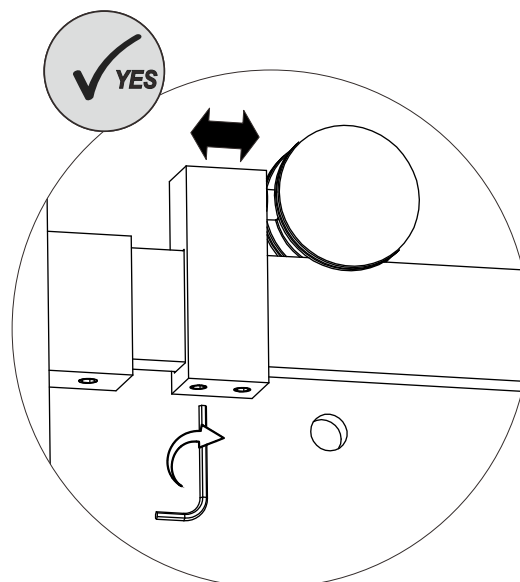
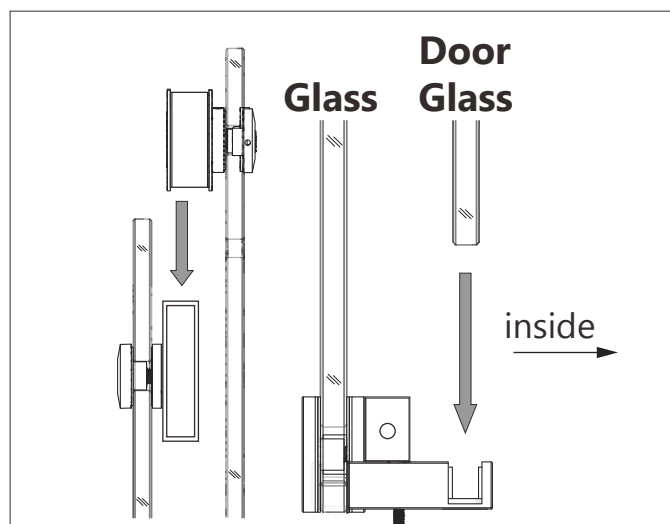









Adjust the door glass









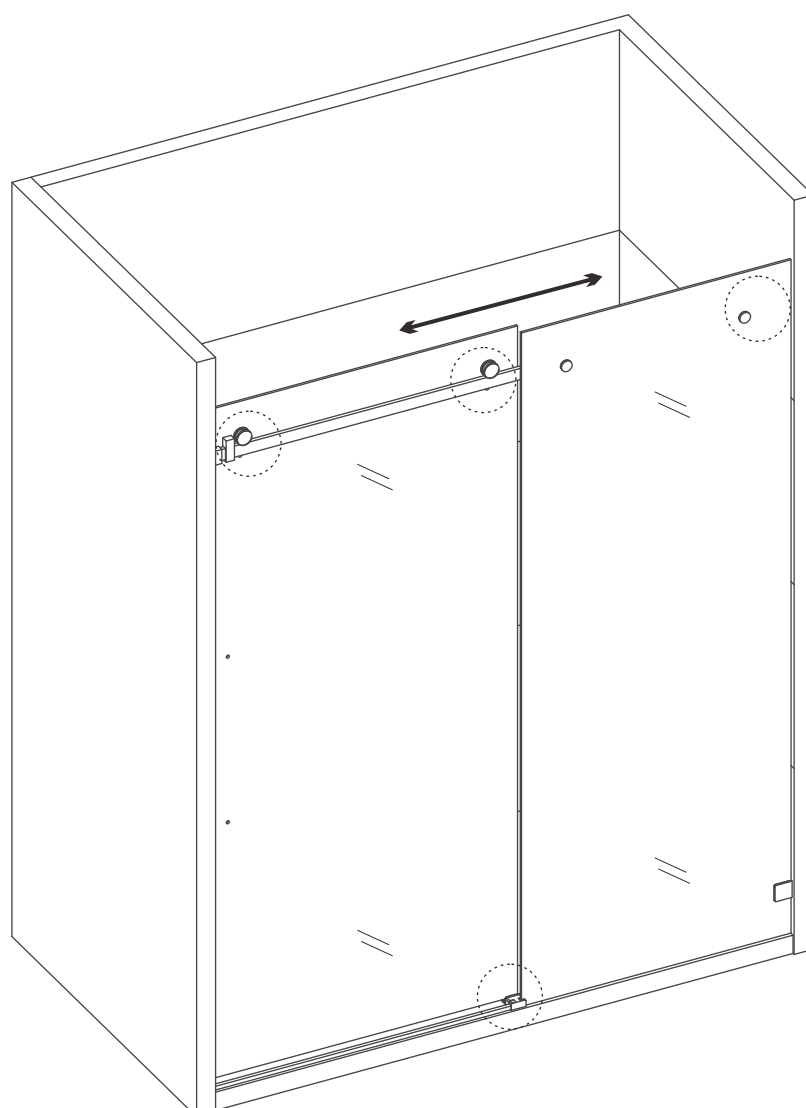





14

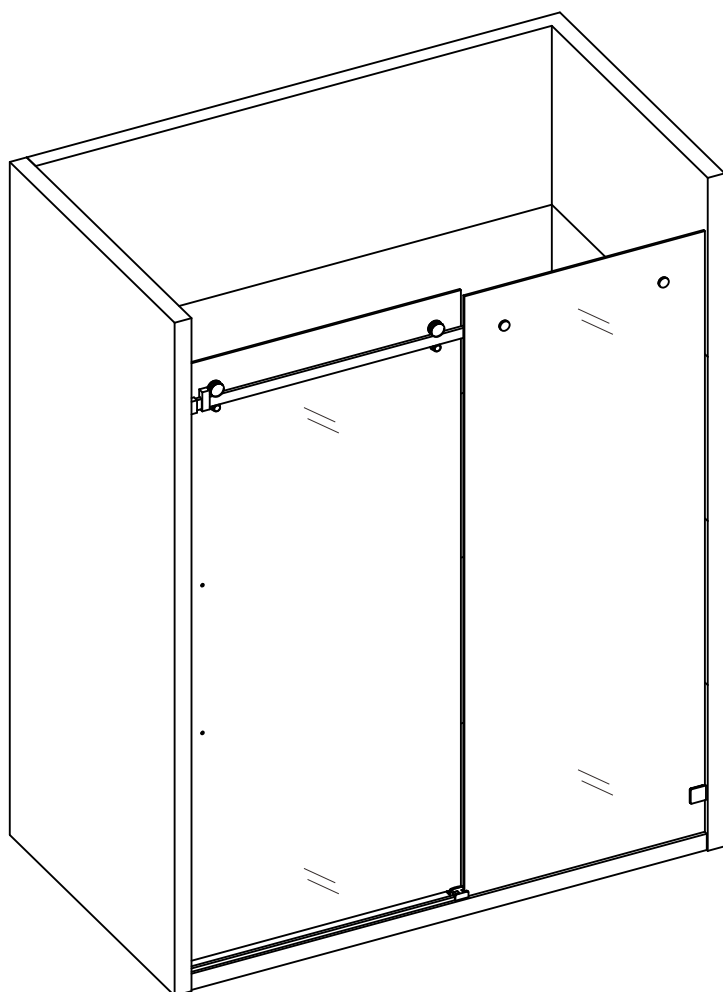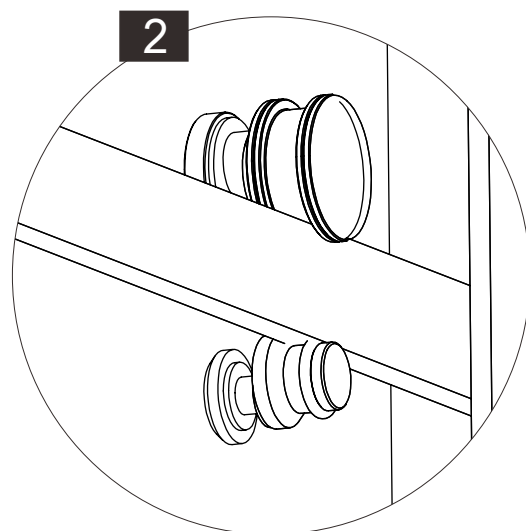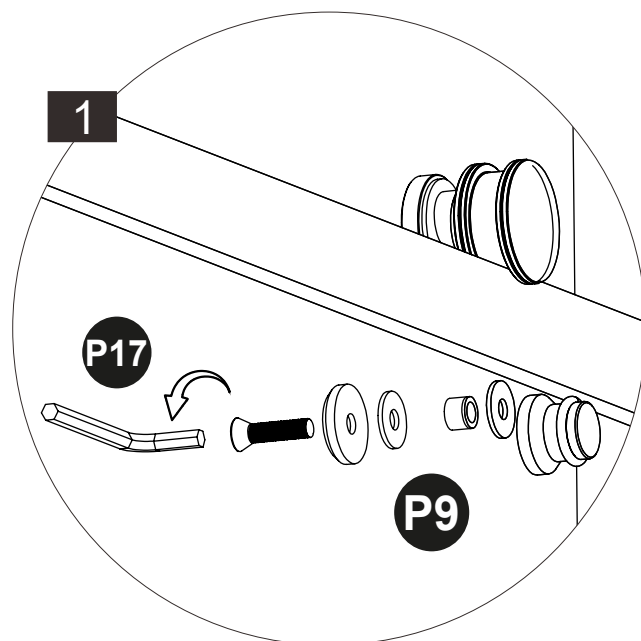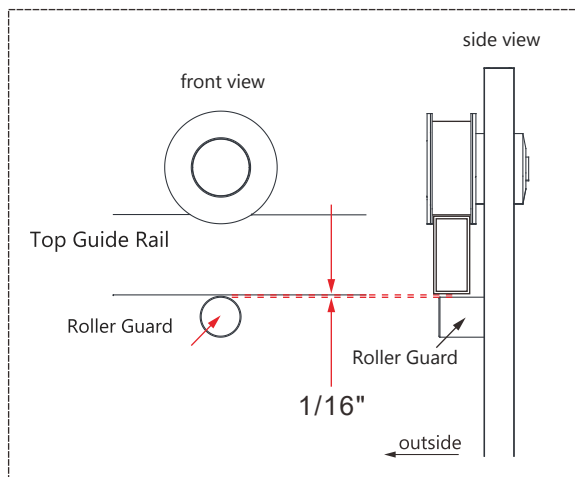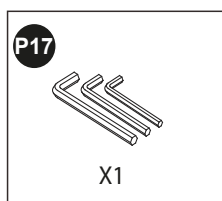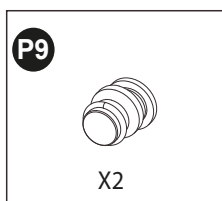

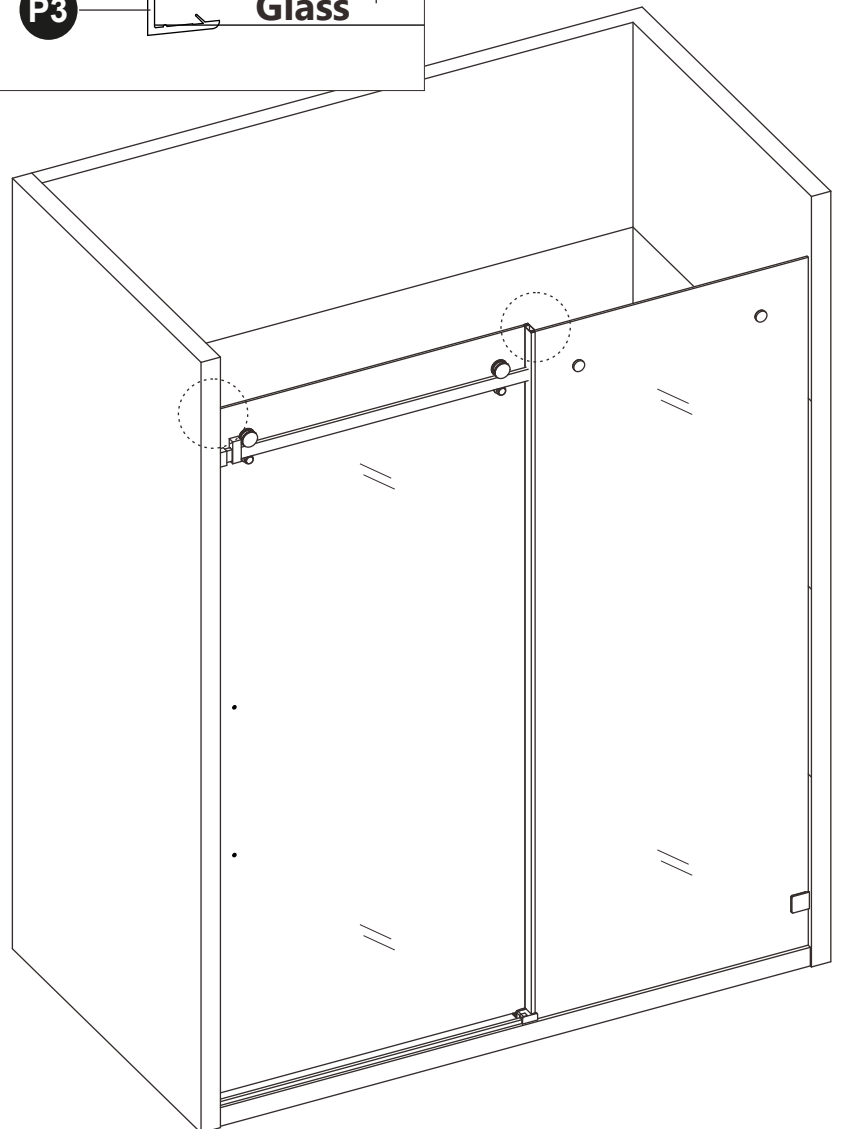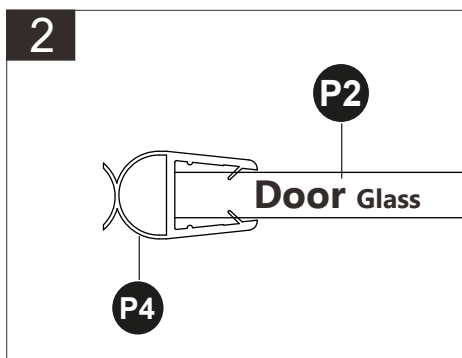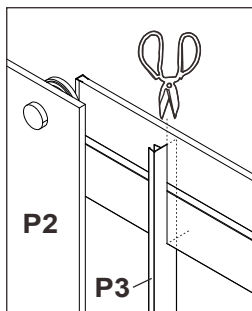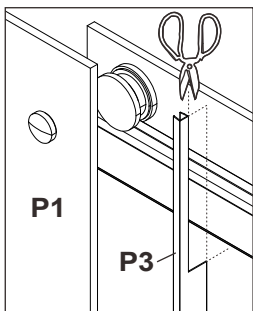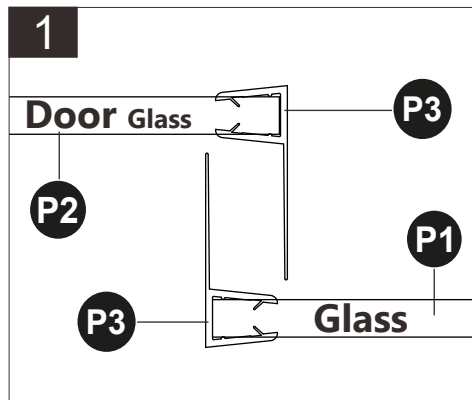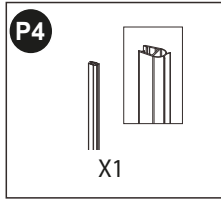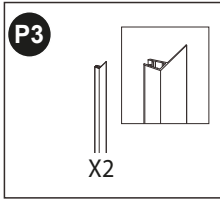

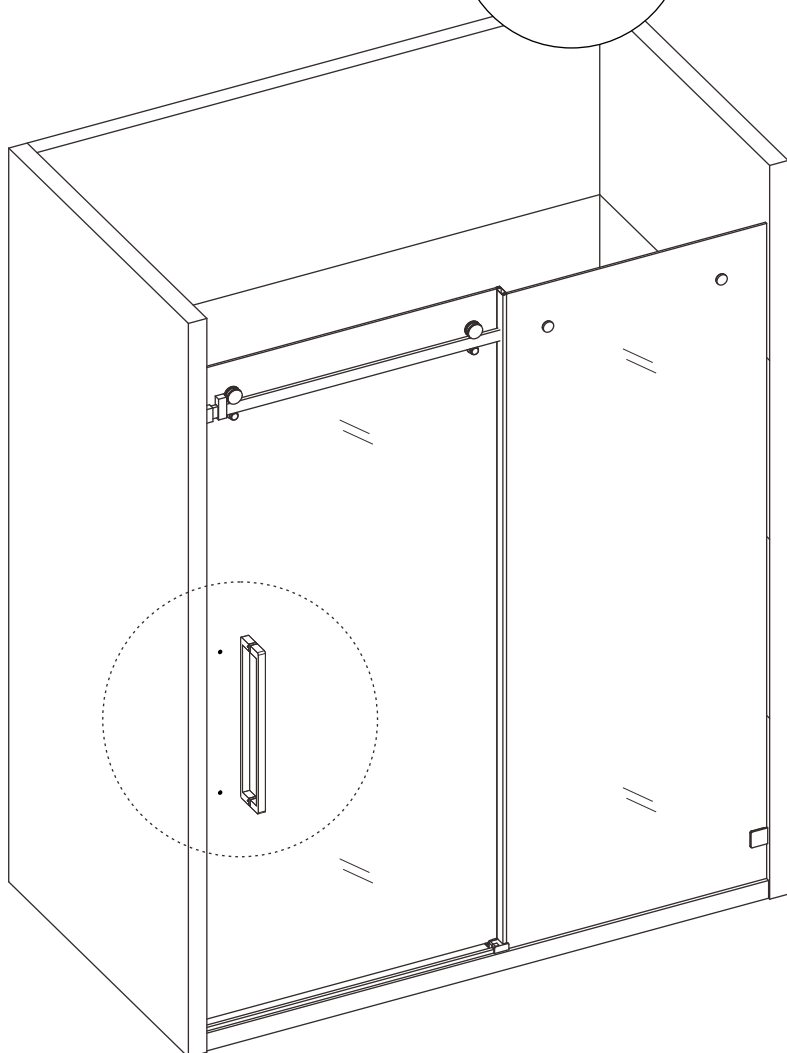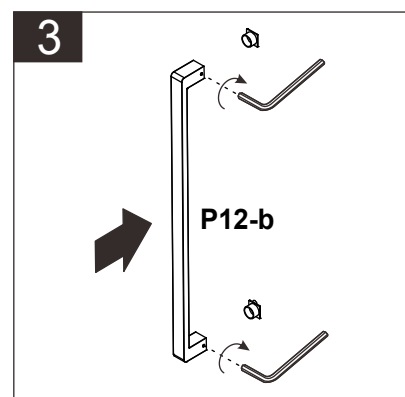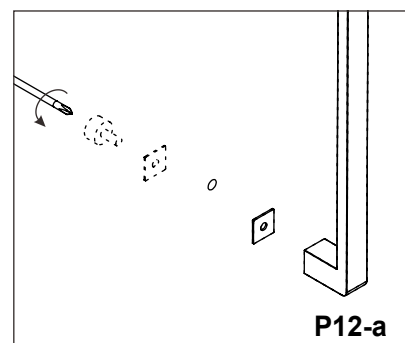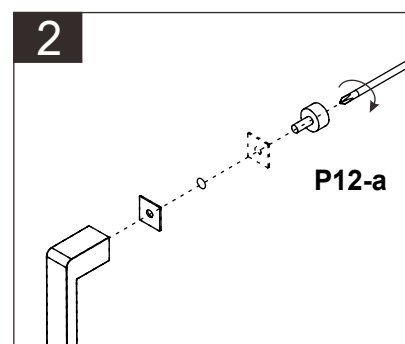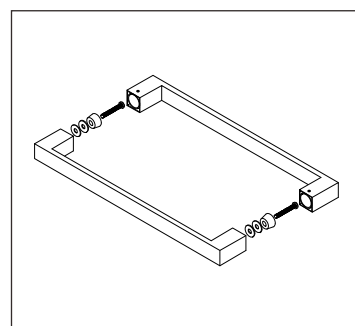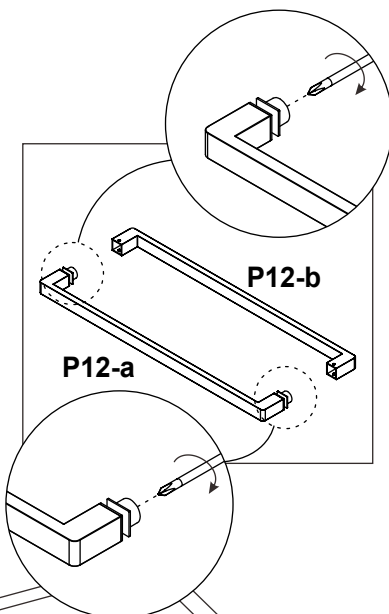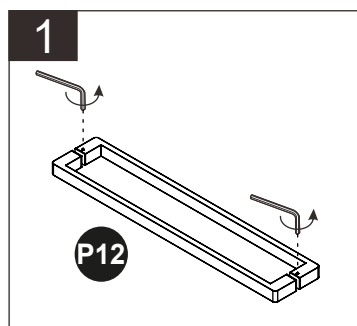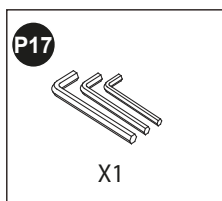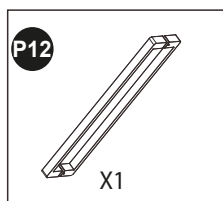



17

