


Assembly Instruction

Caution: You must read this before you proceed

Care & Maintenance



- Not for commercial use. For residential use only.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.




- Do not place furniture under direct sunlight



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.




- Do not place furniture outside. For indoor use only.



- Stains may be removed with mild soap solution and damp cloth






- Children should not climb or jump on the furniture.



- Dust and pick-up spills using a clean, non-colored, lint-free cloth

Assembly Instruction


King Size Bed with 2 Night Stands



N758P270802W

N758P270803W

N758P270804W

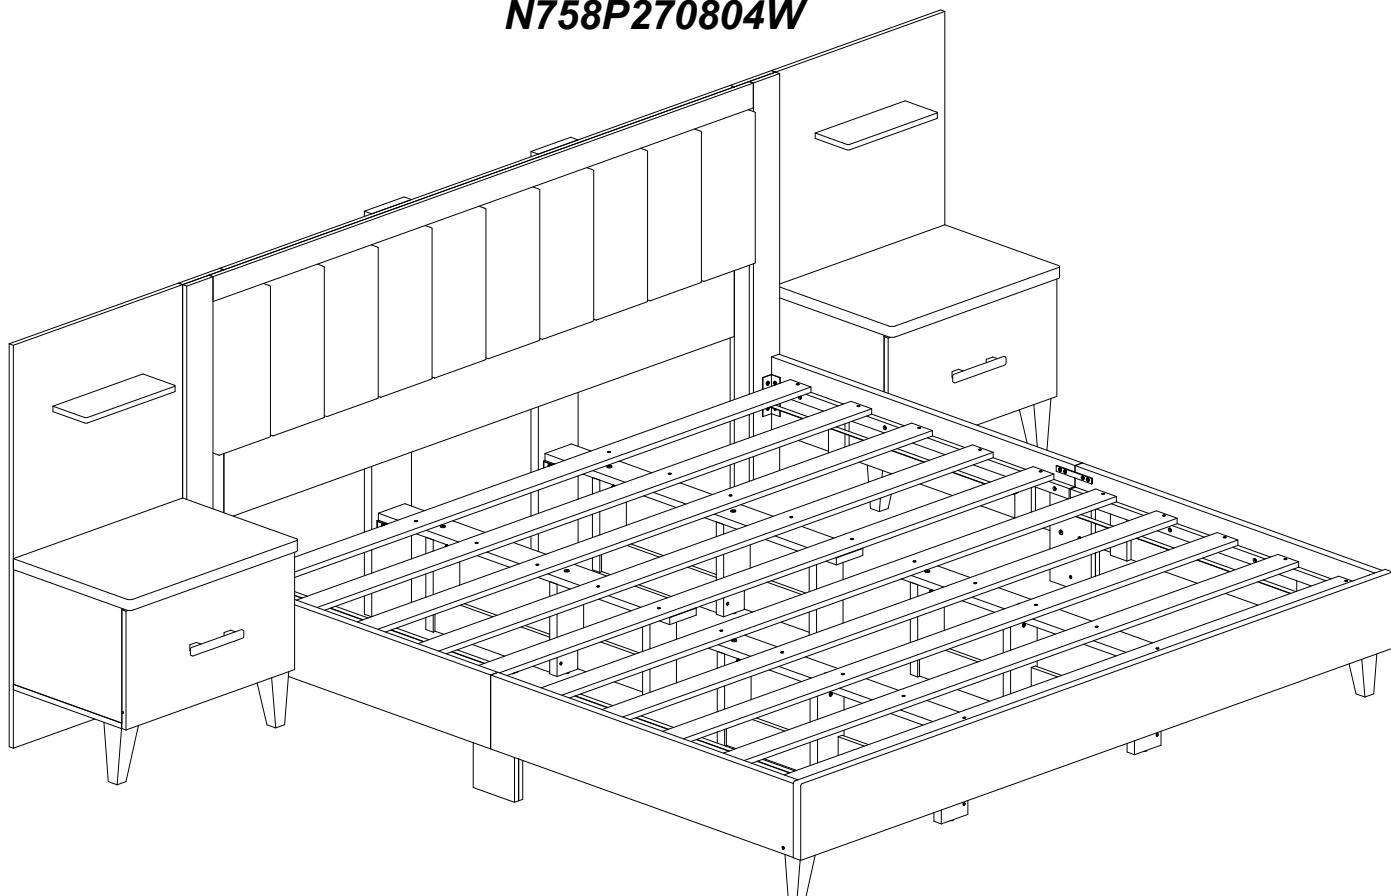

WARNING **STRANGULATION HAZARD**

NEVER place bed near windows where cords from blinds or drapes may be strangle a child.
NEVER suspend strings over bed.
NEVER place items with a string, cord, or ribbon, such as hood strings or pacifier cords, around a child's neck. these items may catch on bed parts.
ALWAYS follow assembly instructions.



WARNING!

Not intended for children under the age of six. INFANTS HAVE DIED FROM BECOMING ENTRAPPED IN BEDS. Openings in and between bed parts can entrap the neck and head of a small child. NEVER use bed for child under the age of six.

The mattress must be appropriately size for the bed. If the mattress is undersized, dangerous gaps can exist and a person can become entrapped or entangled in the frame and suffocate.

Note: This Bed is NOT a TOY.

Keep your child/children at bay during the assembly process.


The BED is HEAVY.

To prevent injury to yourself or damage to the product a minimum of two adults are required whenever moving or lifting it.


Assembly Instruction

Parts List - N758P270802W


B Headboard Top Cross Bar
1731x112x14mm
1Pc

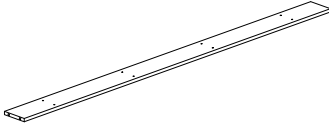


C Headboard Mid Support
1731x295x14mm
1Pc

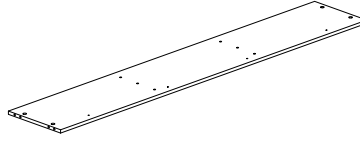


L Center Panel Big (Head)
988x90x18mm
2Pcs

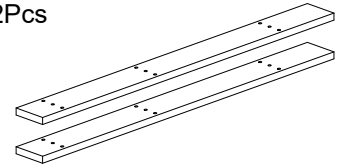


L1 Center Panel Small (Foot)
1066x288x18mm
2Pcs

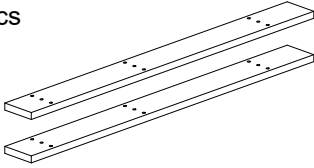


M Leg Panel Big
237x90x25mm
8Pcs

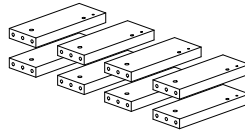


M1 Leg Panel Small
237x90x25mm
4Pcs




O Cushion Board
1827x395x14mm
1Pc

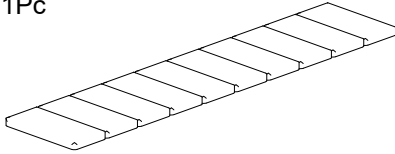


Q Headboard Support
1035x135x25mm
2Pcs

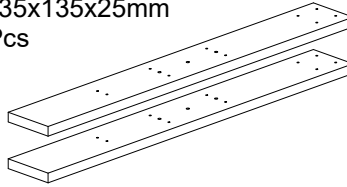


R Bottom Panel
574x367x14mm
2Pcs

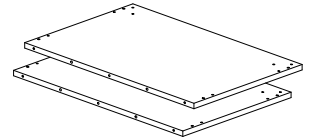


S Side Panel - L
295x367x14mm
2Pcs



T Side Panel - R
295x367x14mm
2Pcs



Z1 Drawer Bottom Panel
518x343x3mm
2Pcs











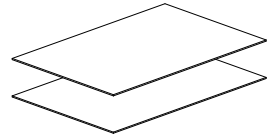


Z2 Drawer Bottom Support
338x56x14mm
2Pcs











Assembly Instruction

Parts List - N758P270803W

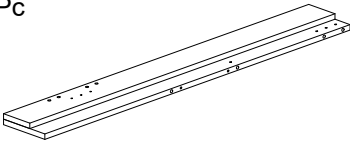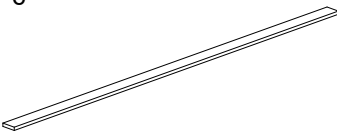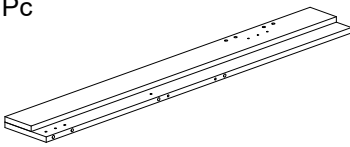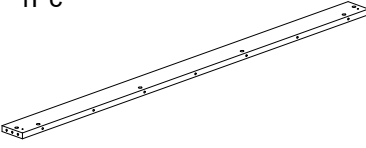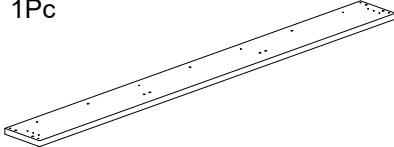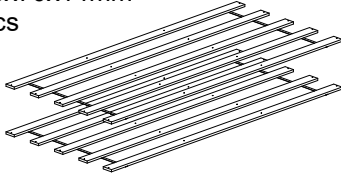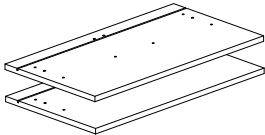A Side Headboard - L 1035x140x28mm 1Pc 	B1 Headboard Top Frame 1832x64x14mm 1Pc 	D Side Headboard - R 1035x140x28mm 1Pc 
G Side Stand Support 229x140x28mm 2Pcs 	J Footboard Support 1956x115x25mm 1Pc 	K Footboard Panel 2011x196x25mm 1Pc 
N Center Leg Panel Big 395x90x14mm 4Pcs 	N1 Center Leg Panel Small 395x90x14mm 4Pcs 	P Bed Slat 1955x70x14mm 10Pcs 
W Drawer Front Panel 572x305x14mm 2Pcs 	Z Drawer Back Panel 491x140x14mm 2Pcs 	Z3 Shelf Panel S 305x112x14mm 2Pcs 







Assembly Instruction

Parts List - N758P270804W

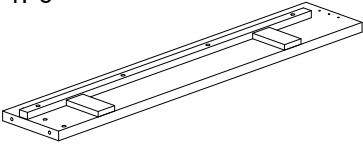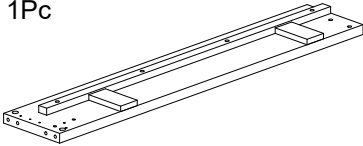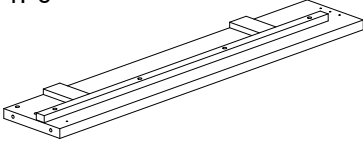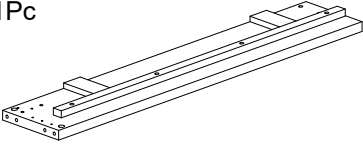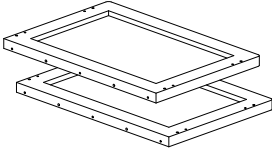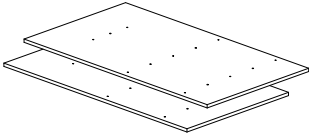E Side Panel Headboard - L 1029x190x43mm 1Pc 	F Side Panel Footboard - L 1029x190x43mm 1Pc 	H Side Panel Headboard - R 1029x190x43mm 1Pc 
I Side Panel Footboard - R 1029x190x43mm 1Pc 	U Top Panel 574x395x28mm 2Pcs 	V Back Panel 1035x574x14mm 2Pcs 
X Drawer Side Panel - L 338x140x14mm 2Pcs 	Y Drawer Side Panel - R 338x140x14mm 2Pcs 	



Assembly Instruction

Hardware List - N758P270802W

<i>No.</i>	<i>SHAPE</i>	<i>DESCRIPTION</i>	<i>Qty.</i>
1		6x25mm PVC Dowel	34Pcs
2		8x20mm Wood Dowel	6Pcs
3		8x30mm Wood Dowel	71Pcs
4		TP 10#x1/2" Screw	44Pcs
5		M3.5x14mm Screw	44Pcs
6		M6.2x8mm EURO Screw	8Pcs
7		M4x25mm Screw	12Pcs
8		M4x28mm Screw	12Pcs
9		M4x32mm Screw	50Pcs
10		M4x38mm Screw	24Pcs
11		M4.5x45mm Screw	2Pcs
12		M6x40mm Screw	24Pcs
13		M6x50mm Screw	22Pcs
14		M6x25mm Bolt	8Pcs
15		JCBC M6x50mm screw	12Pcs

Assembly Instruction

Hardware List - N758P270802W


<i>No.</i>	<i>SHAPE</i>	<i>DESCRIPTION</i>	<i>Qty.</i>
16		JCBC M6x60mm screw	4Pcs
17		M6x13mm Barrel Nut	12Pcs
18		Seal Sticker	76Pcs
19		15MM Myfix Minifix	30Sets
20		Drawer Slide	2Sets
21		Flat Handle 2 Tone (128mm)	2Pcs
22		Wooden Leg(150x60x60mm)	6Pcs
23		L-Bracket(100x30mm)(Black)	8Pcs
24		Metal Support (120x15x2.7mm)	6Pcs
25		L-Bracket 22x18mm	2Pcs
26		Paste Pad (Ø22mm)	2Pcs
27		Nail Leg	12Pcs
28		Nail	16Pcs
29		M4 Ball-End Allen Wrench	1Pc
30		M4 Allen Wrench	1Pc

Assembly Instruction

-  • Read instructions, cover to cover
-  • Have 2 adults on hand assembly
-  • Do not assemble on flooring or carpet
-  • Assemble on a clean non-marring surface (packing foam)
-  • Save all packaging until finished.

Overview


King Bed

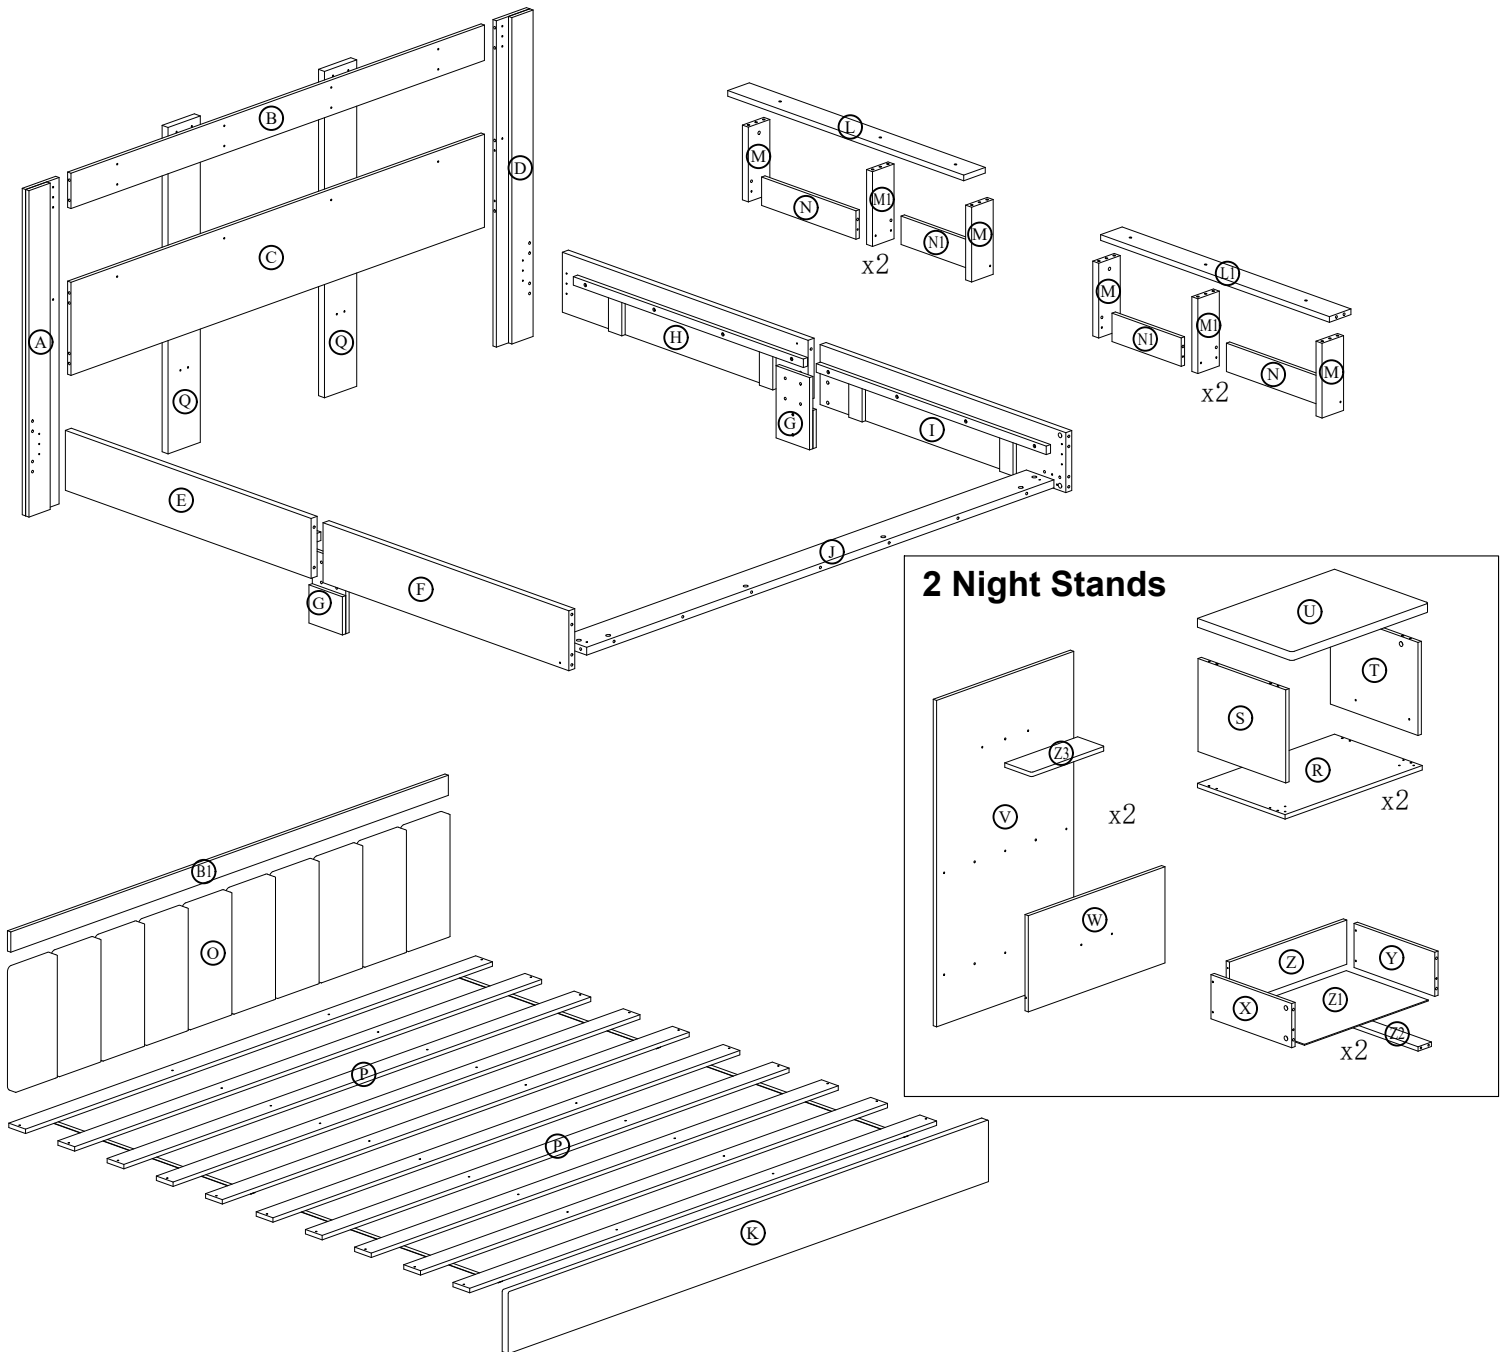


This Bed has multiple parts and may require up to 90 minutes to assemble. To give you an overview of the Bed parts, the above picture is provided to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Assembly Instruction


Step 1.1

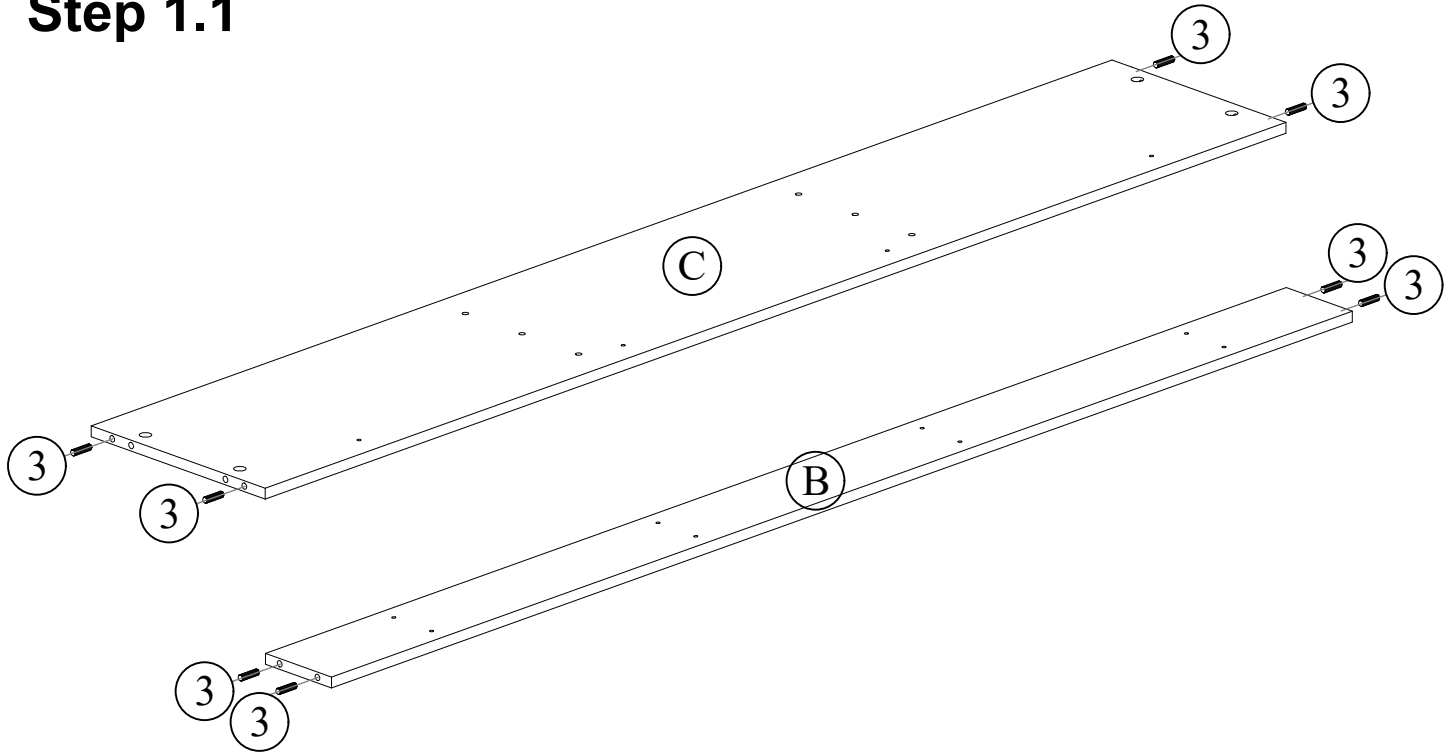


- Unpack and place all parts on a clean, non-marring surface. Insert the 8x30mm wood dowel (3) to side mounting position of Headboard Top Cross Bar (B) & Headboard Mid Support (C).

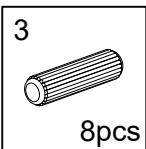

Step 1.2

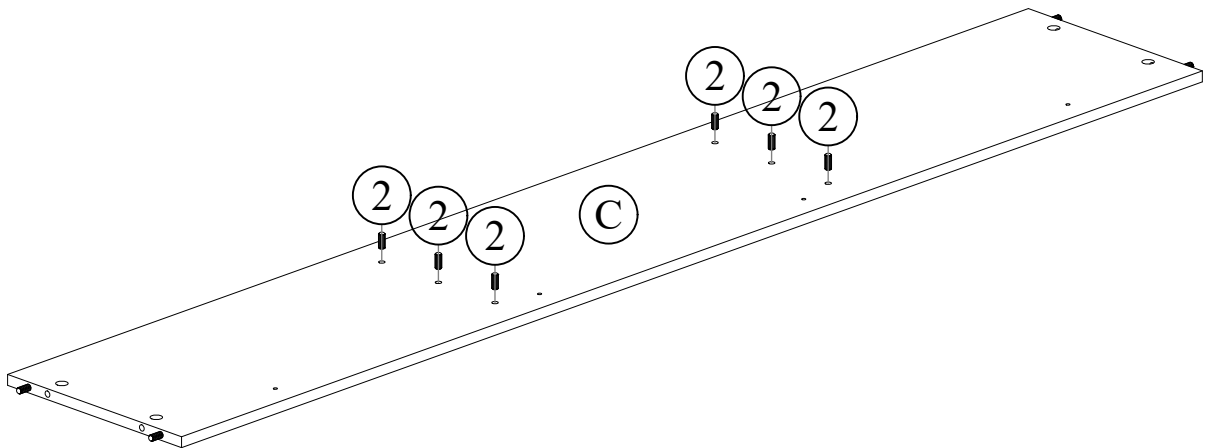


- Insert the 8x20mm wood dowel (2) on the bottom mounting position of Headboard Mid Support (C).

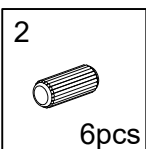


Assembly Instruction


Step 1

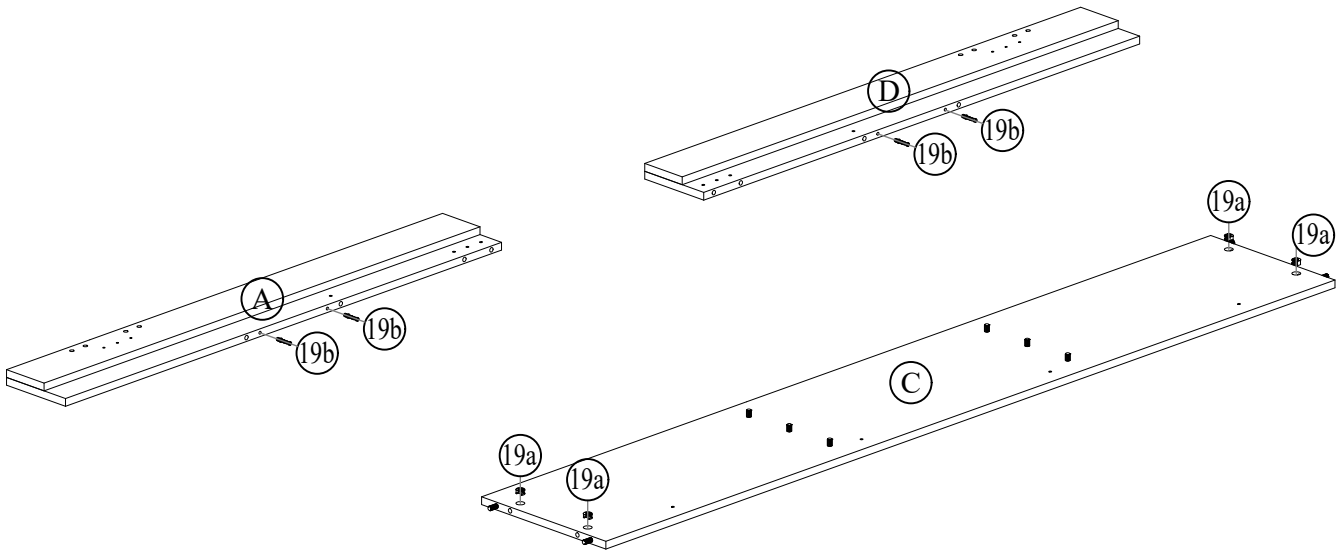


- Insert the minifix nuts (19a) & the minifix screws (19b) to Side Headboard - L (A), Headboard Mid Support (C) & Side Headboard - R (D) as shown above.

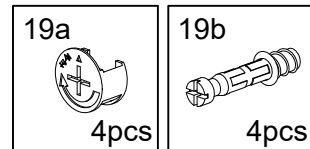

Step 2

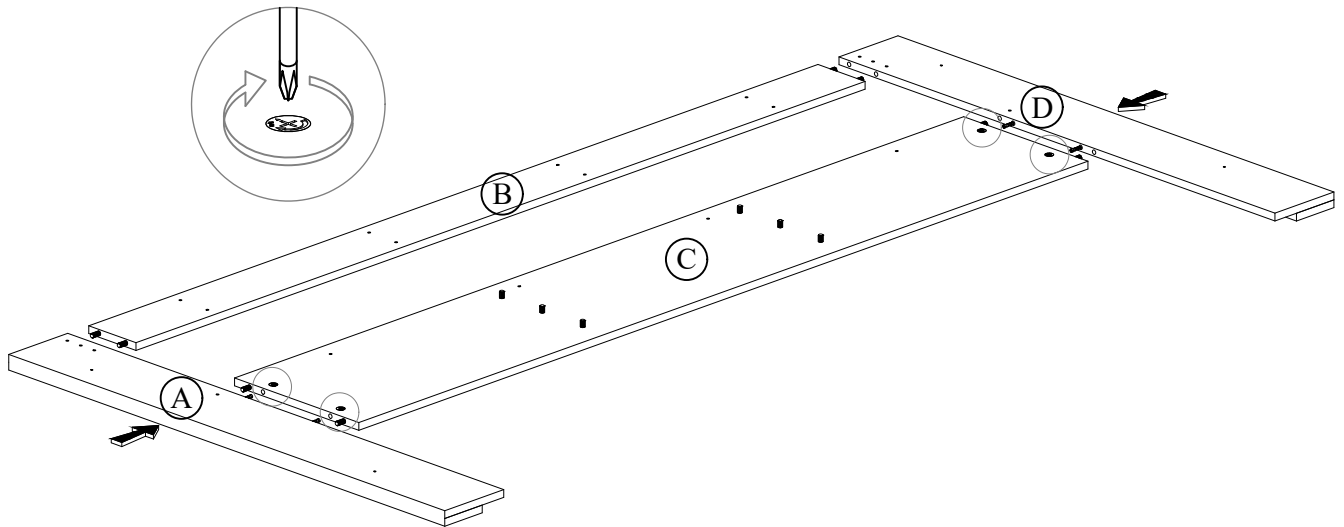


- Attach Side Headboard - L (A) & Side headboard - R (D) to the side of Headboard Top Cross Bar (B) & Headboard Mid Support (C) as shown above. Rotate the minifix nuts to tighten the minifix screws as indicated in the diagram.




➔ Step 10

Assembly Instruction

Step 3

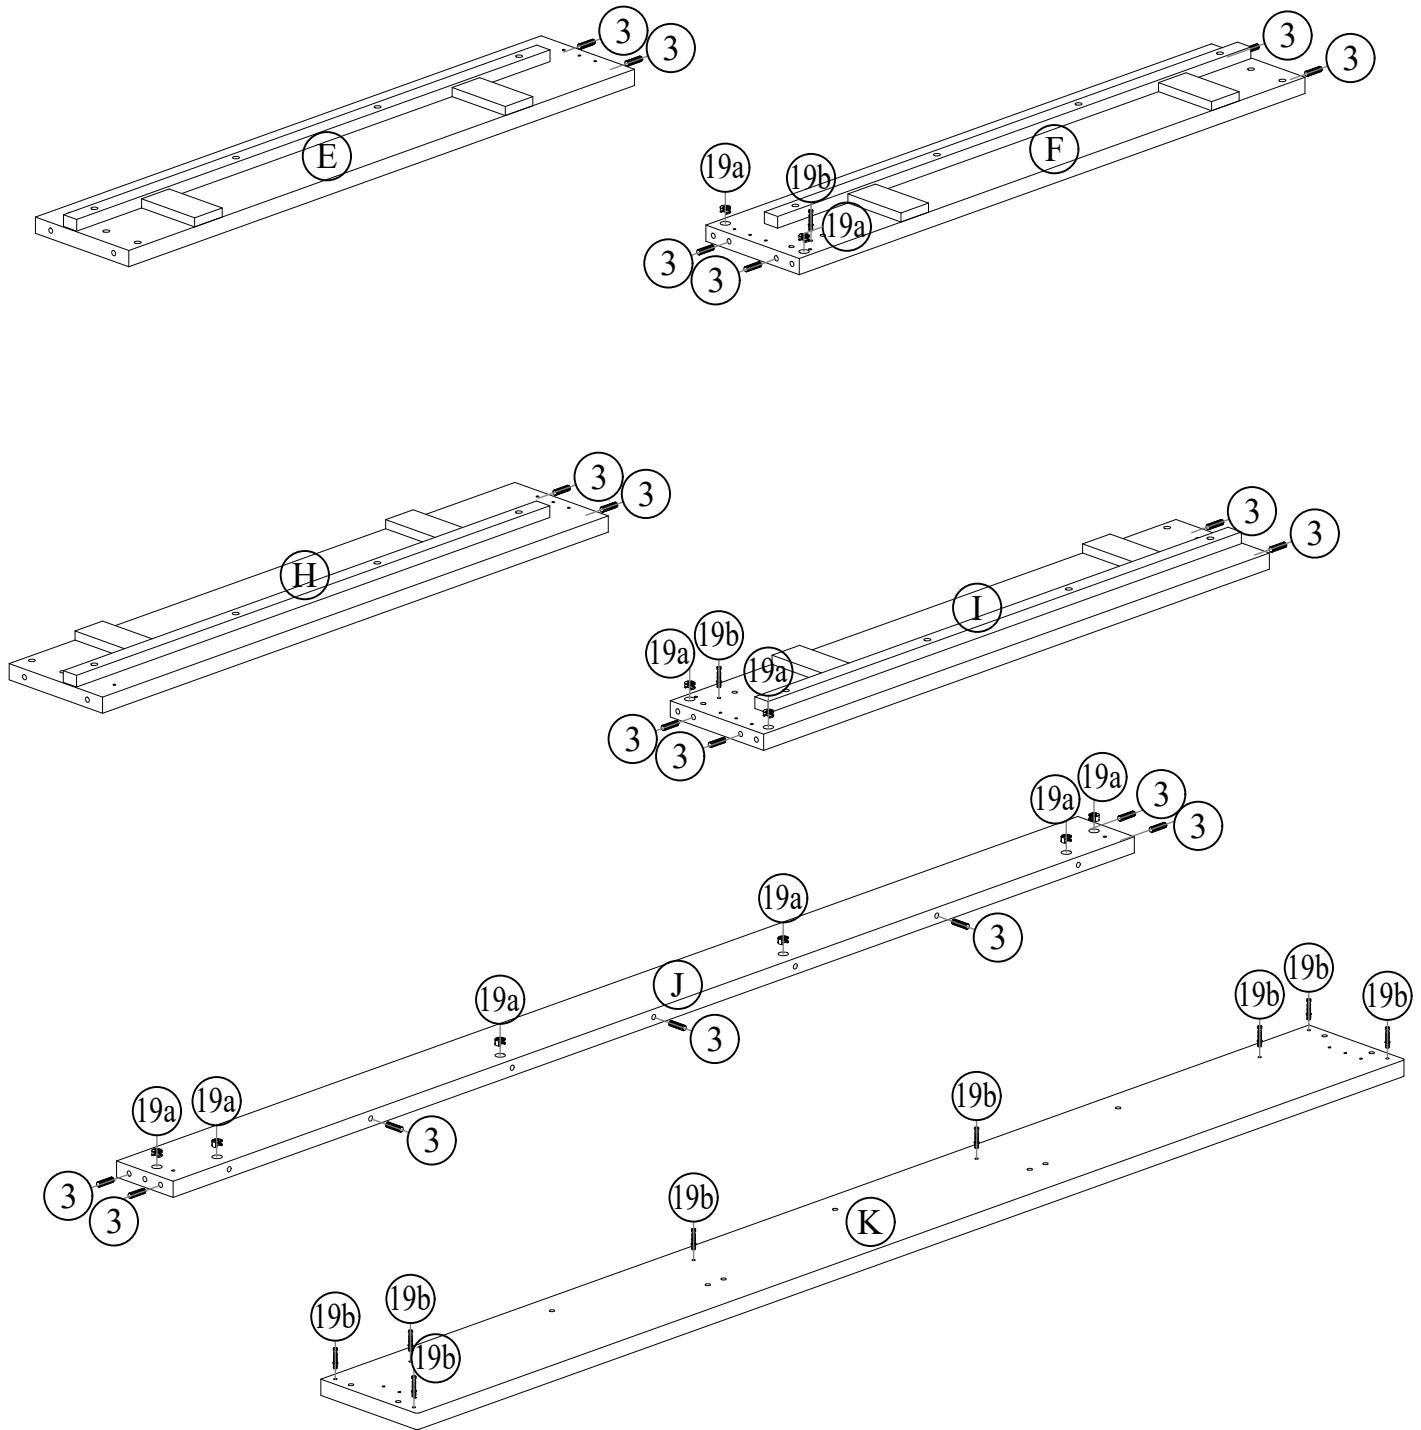


- Insert the 8x30mm wood dowel (3) to side mounting position of Side Panel Headboard - L (E), Side Panel Footboard - L (F), Side Panel Headboard - R (H), Side Panel Footboard - R (I) and Footboard Support (J). Next, insert the minifix nuts (19a) & the minifix screws (19b) to Side Panel Footboard - L (F), Side Panel Footboard - R (I), Footboard Support (J) and Footboard Panel (K) as shown above.

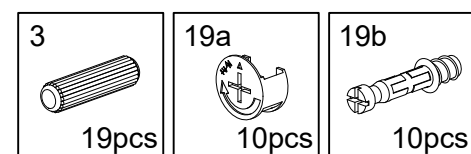

Assembly Instruction

Step 4

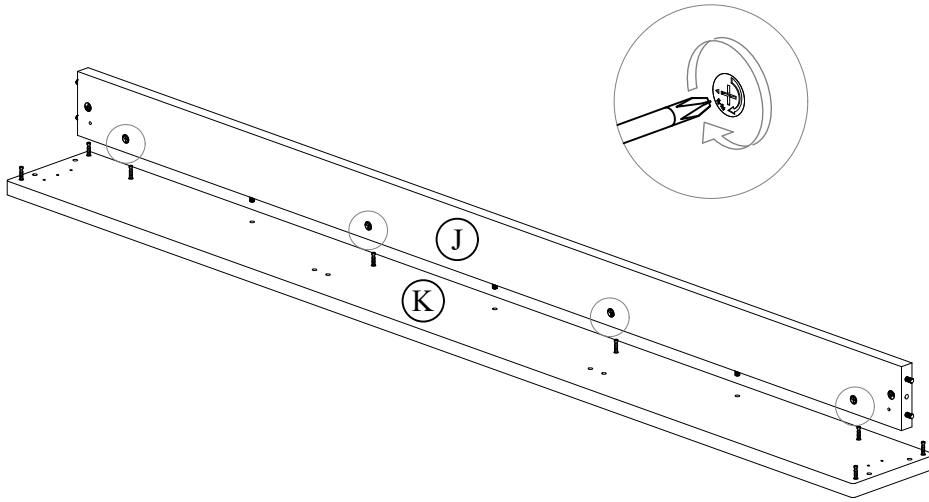


- Attach Footboard Support (J) to Footboard Panel (K) as shown above. Rotate the minifix nuts to tighten the minifix screws as indicated in the diagram.



Place it right side up before moving on Step 5.

Step 5

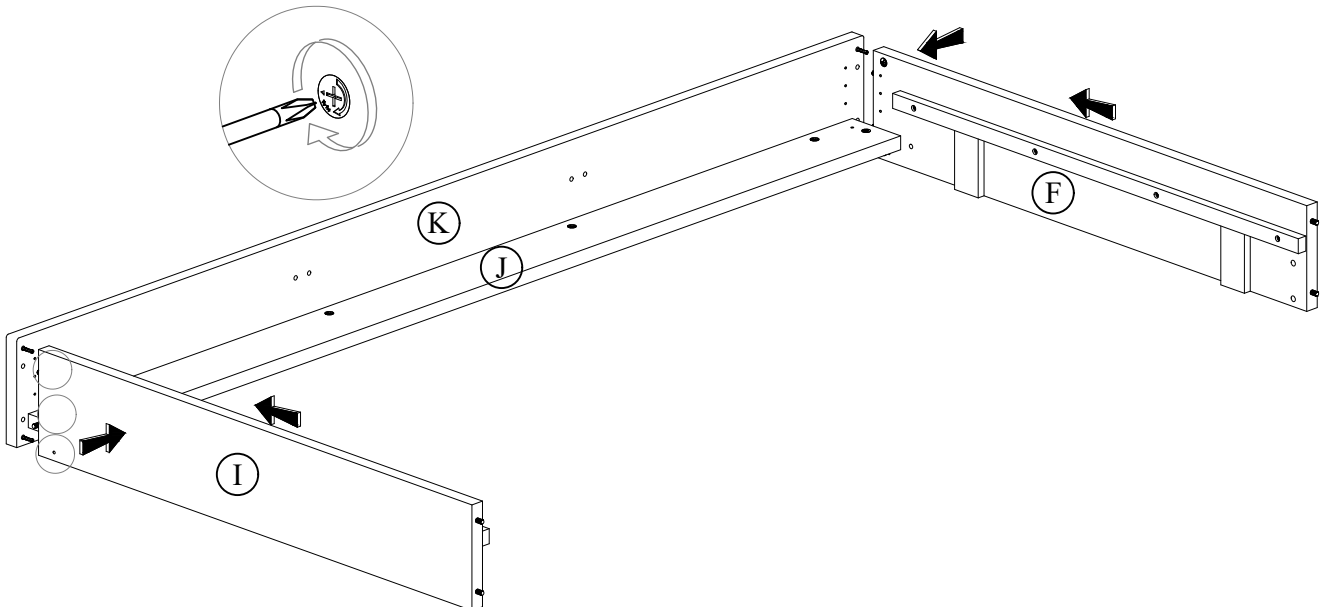


- Attach Side Panel Headboard - L (I) and Side Panel Footboard - L (F) to the assembled Footboard (J) & (K) as shown above. Rotate the minifix nuts to tighten the minifix screws as indicated in the diagram.


Assembly Instruction

Step 6




Step 6.1

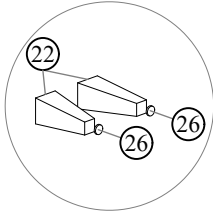


Step 6.2

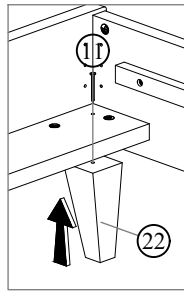


Step 6.3

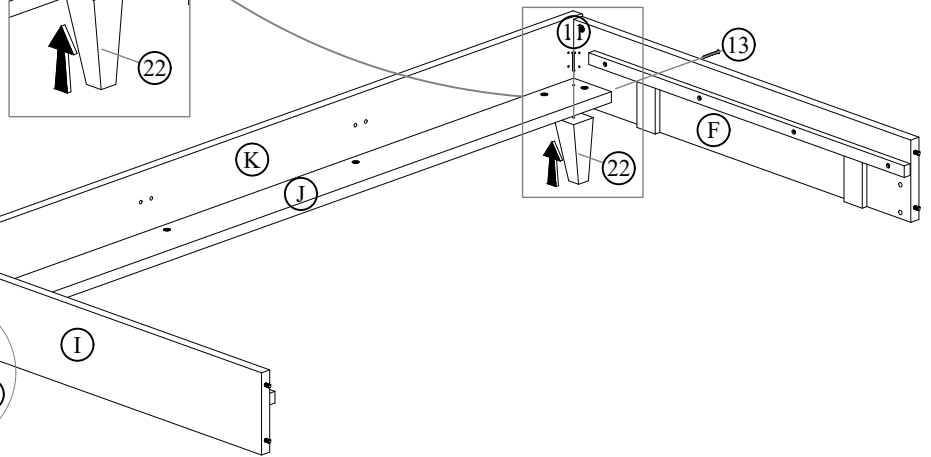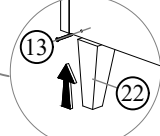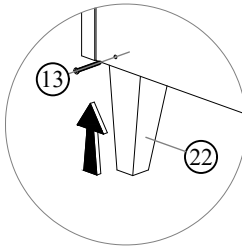

- **6.1: Attach the paste pad (26) to the bottom of the Wooden Leg (22) .**
 - **6.2: Attach the Wooden Leg (22) to Footboard Support (J) by using Screw (11) with Screwdriver (not provided).**
 - **6.3: Attach the Wooden Leg (22) to Side Panel Footboard (F) and Side Panel Footboard - R (I) by using Screw (13) with Allen Wrench (29) .**
- DO NOT FULLY TIGHTEN SCREWS.**

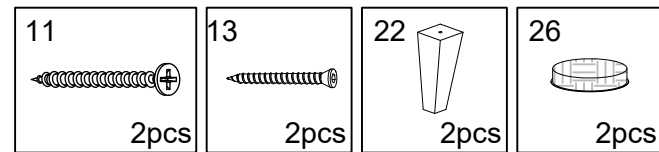


Step 7

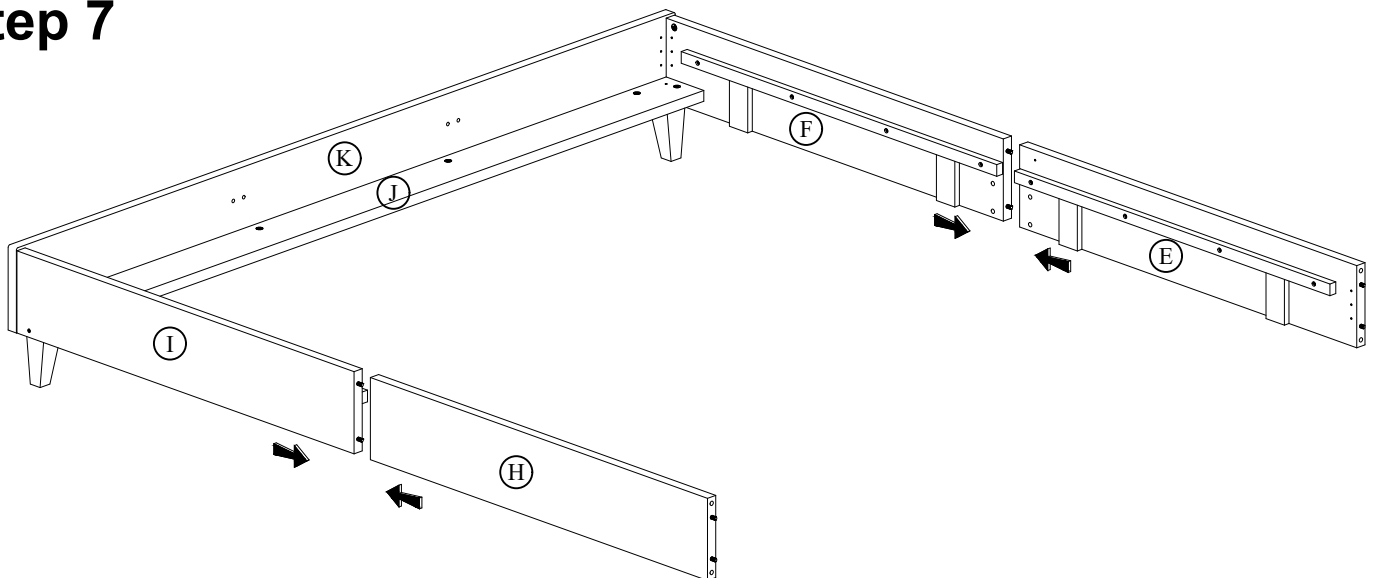


- **Attach the Side Panel Headboard - L (E) to Side Panel Footboard - L (F) and attach the Side Panel Headboard - R (H) to Side Panel Footboard - R (I) as shown above. Make sure they are well-fitted each other.**

Assembly Instruction


Step 8

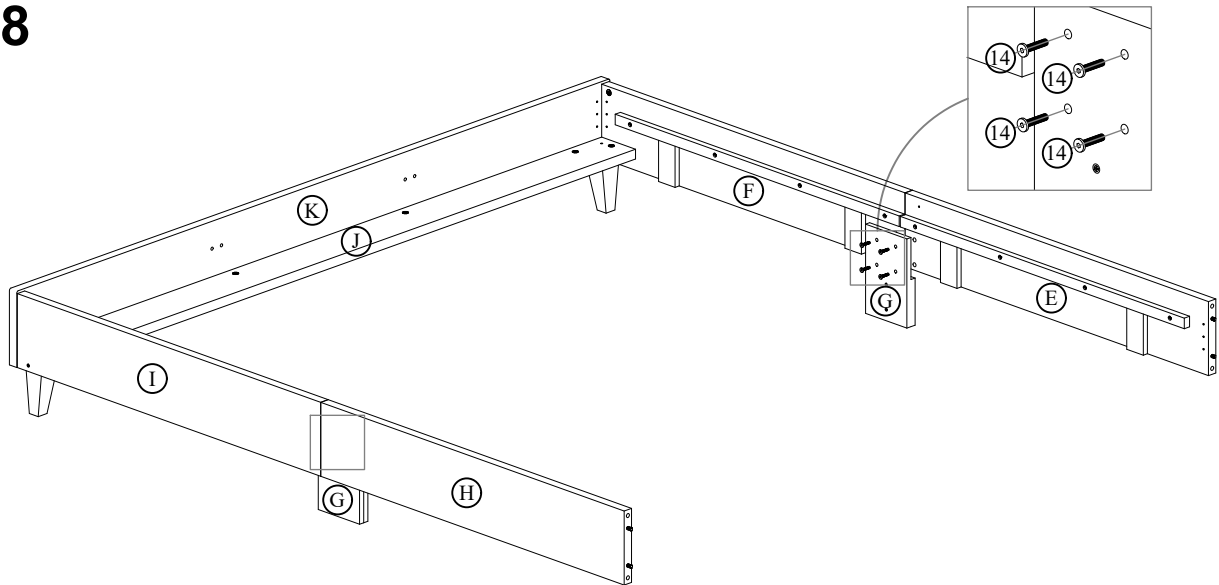






- Attach the Side Stand Support (G) to assembled Side Panel (E) & (F) by using Bolt (14) with Allen Wrench (29). Repeat the same step to attach Side Stand Support (G) to assembled Side Panel (H) & (I).
DO NOT FULLY TIGHTEN BOLTS.

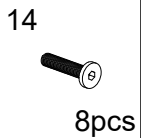

Step 9

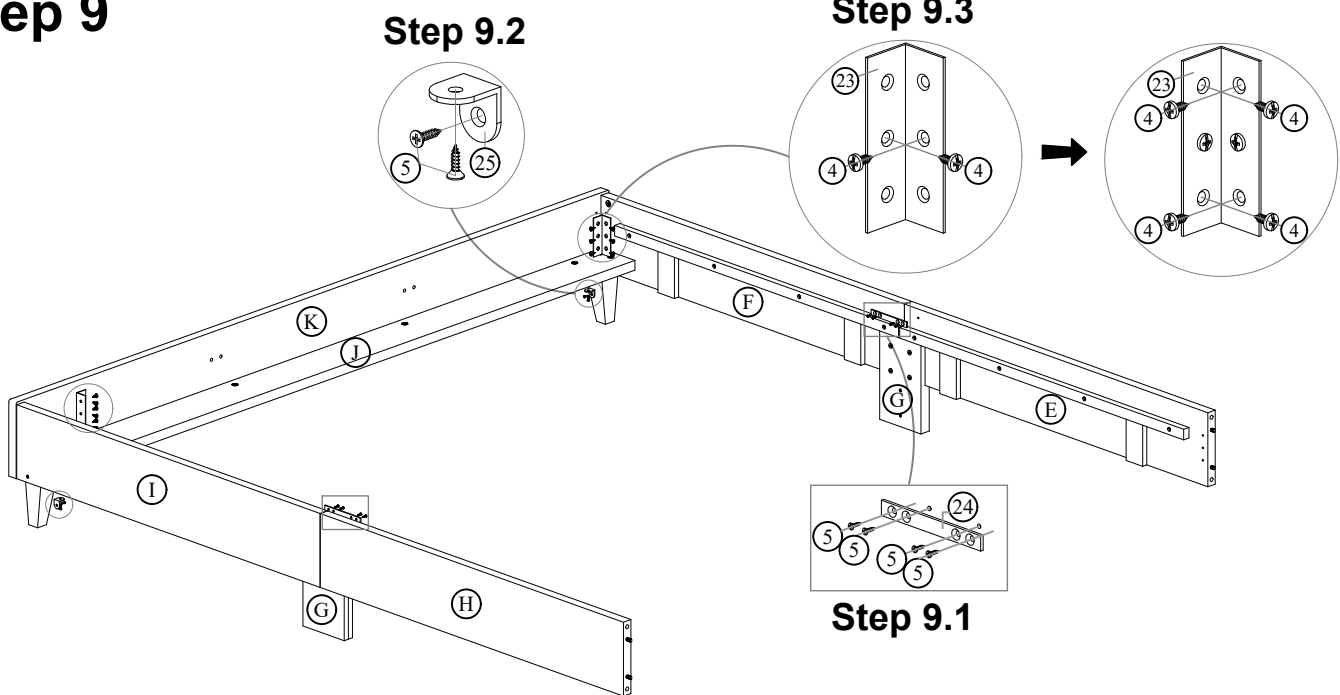


- **9.1:** Attach the Metal Support (24) to the mounting position on middle of Side Panel (E) & (F) and Side Panel (H) & (I) by using Screws (5) with Screwdriver (Not Provided).
9.2: Attach the L - Bracket (25) to Footboard Support (J) and Wooden Leg (22) by using screws (5) with Screwdriver (Not Provided).
9.3: Attach the L - Bracket (23) to Side Panel Footboard - L (F), Side Panel Footboard - R (I) & and Footboard Panel (K) by using Screw (4) with Screwdriver (Not Provided).
DO NOT FULLY TIGHTEN SCREWS.

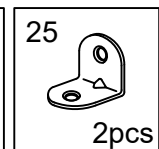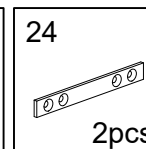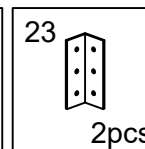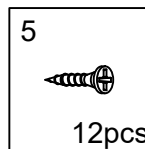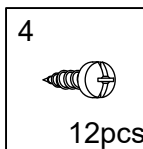


Assembly Instruction


Step 10

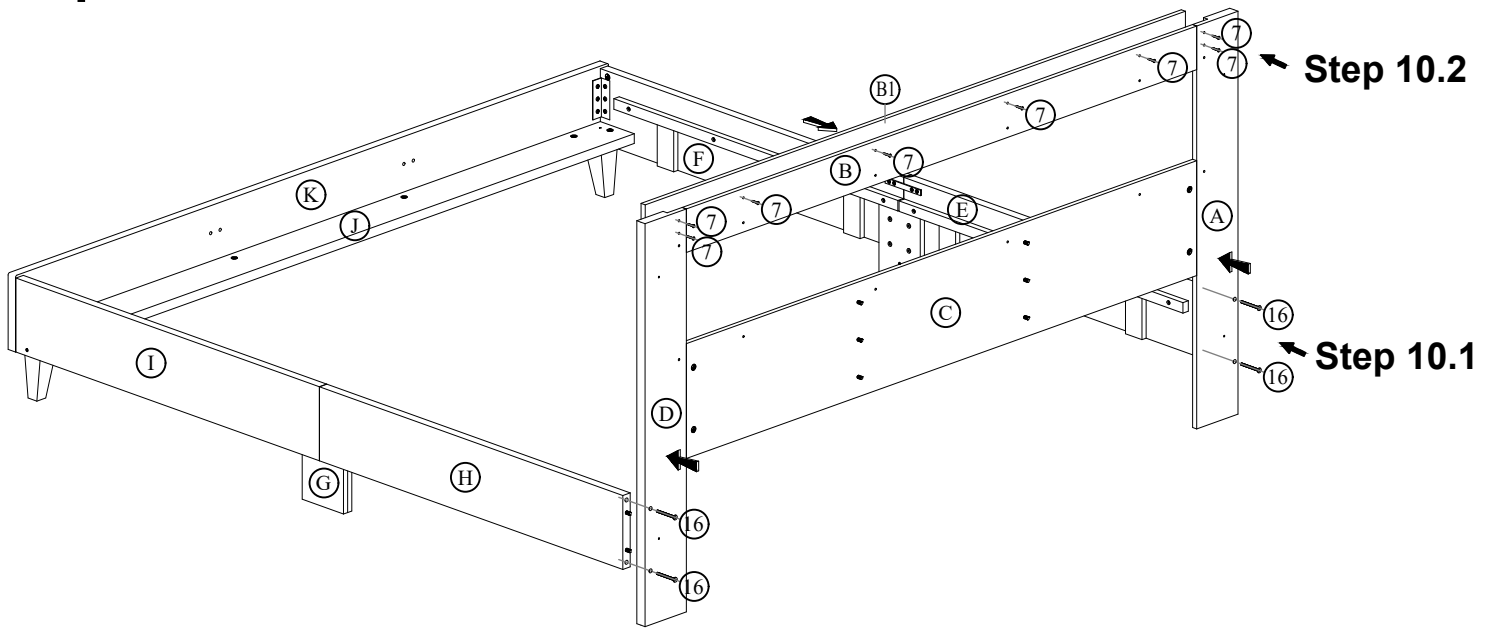


- **10.1: Attach the assembled Headboard Panel (A) & (D) to assembled Side Panel (E) & (H) by using Bolt (16) with Allen Wrench (29).**
10.2: Attach the Headboard Top Frame (B1) to Headboard Top Cross Bar (B) by using Screws (7) with Screwdriver (Not Provided).
DO NOT FULLY TIGHTEN BOLTS.

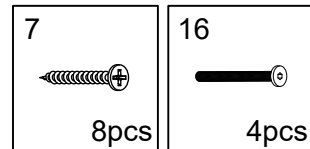

Step 11

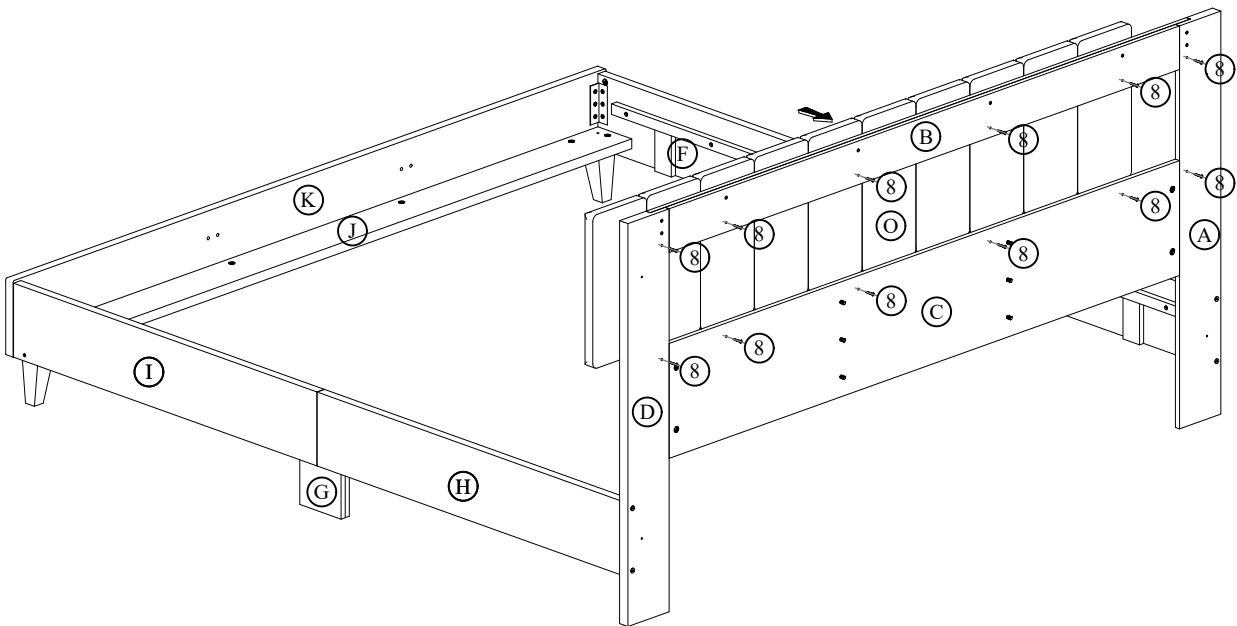


- **Attach the Cushion Board (O) to assembled headboard (A), (B), (C) & (D) by using Screws (8) with Screwdriver (Not Provided).**

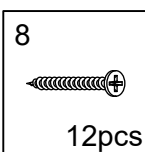


Assembly Instruction


Step 12

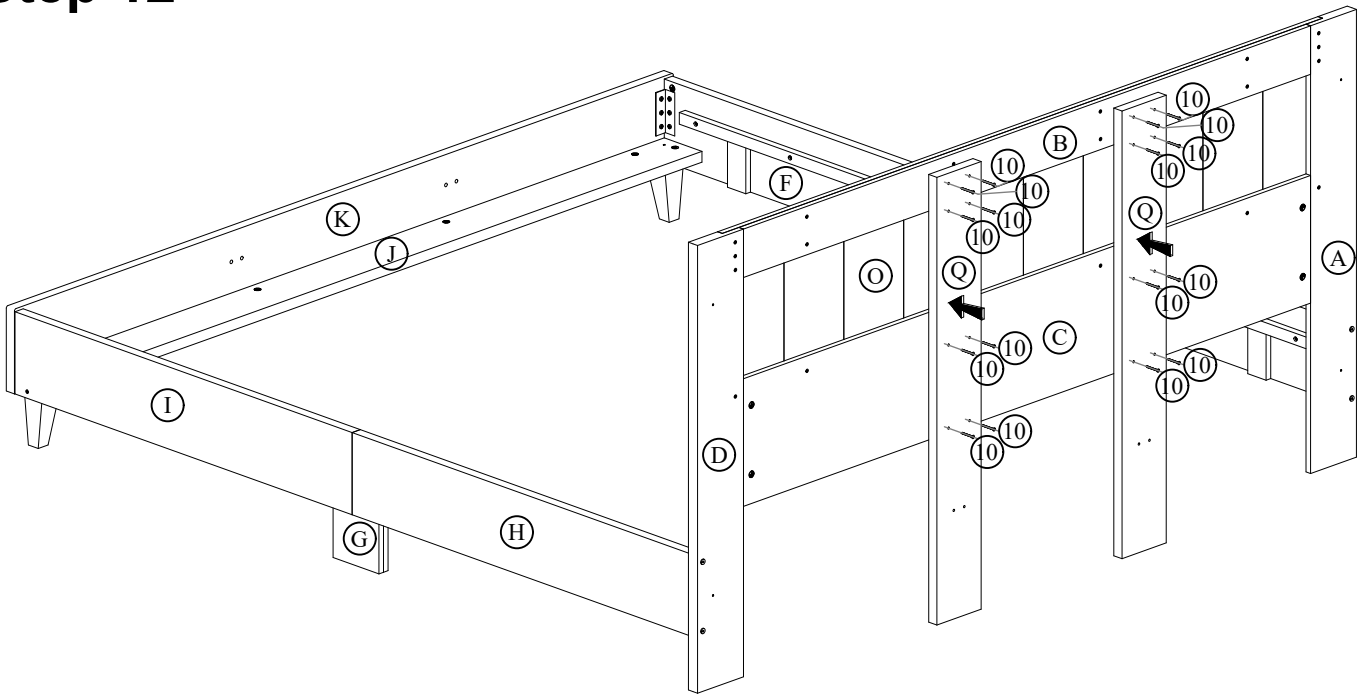






- Attach the Headboard Support (Q) to Headboard Top Cross Bar (B) and Headboard Mid Support (C) by using Screws (10) with Screwdriver (Not provided).

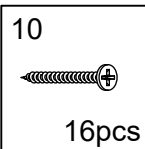

Step 13

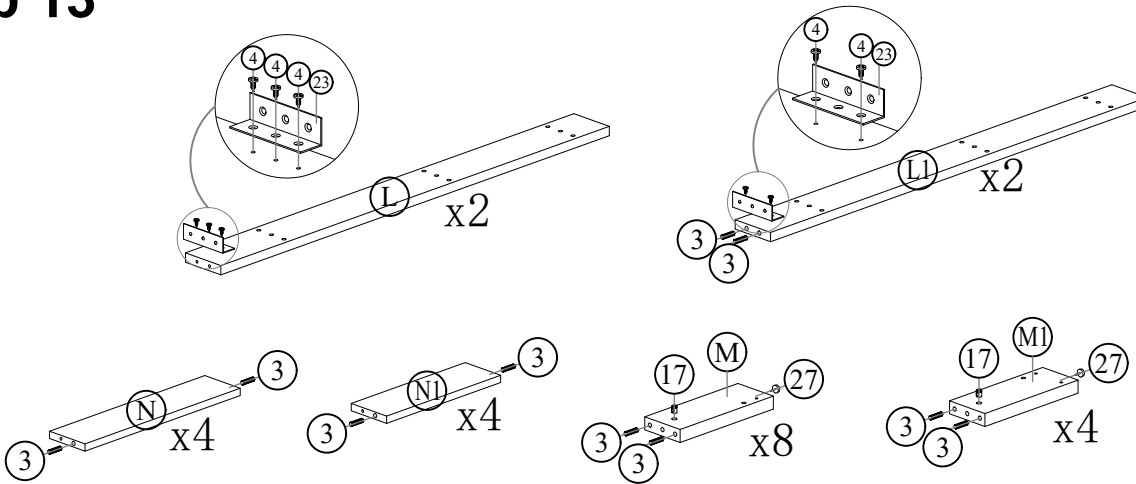


- Insert the 8x30mm wood dowel (3) to side mounting position of Leg Panel Big (M), Leg Panel Small (M1), Center Leg Panel Big (N), Center Leg Panel Small (N1) and Center Panel Small (L).
Insert Barrel Nut (17) and Nail Leg (27) to Leg Panel Big (M) and Leg Panel Small (M1) as shown above.
Attach the L-Bracket (23) to Center Panel Small (L) and Center Panel Big (L1) by using Screw (4) with Screwdriver (Not provided) as shown above.

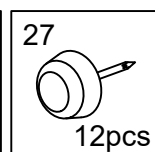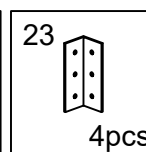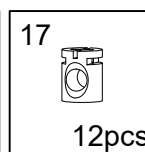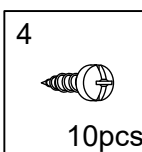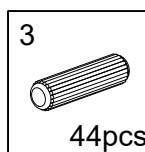


Assembly Instruction


Step 14

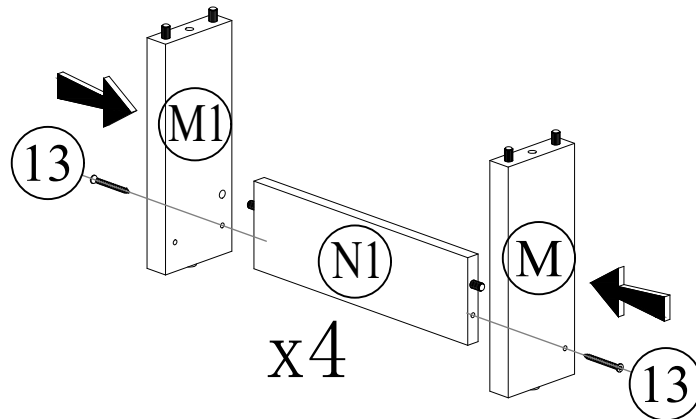


- Attach the Center Leg Panel Small (N1) to Leg Panel Big (M) and Leg Panel Small (M1) by using Screw (13) with Allen Wrench (30).

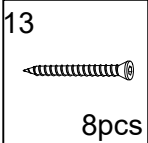

Step 15

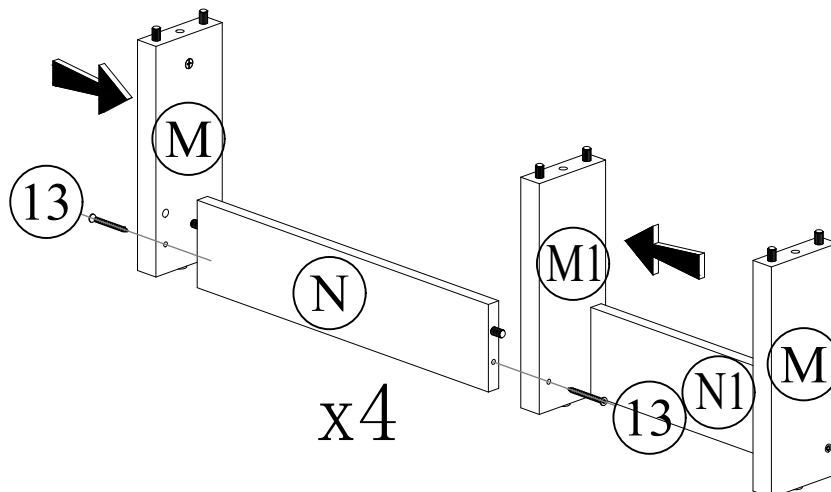


- Attach the Center Leg Panel Big (N) to Leg Panel Big (M) and Leg Panel Small (M1) by using Screw (13) with Allen Wrench (30).

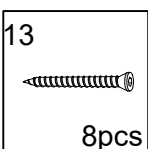


Assembly Instruction


Step 16

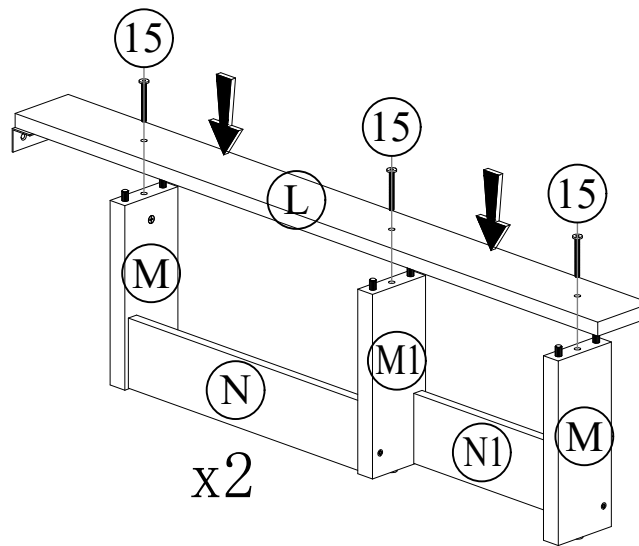


- Attach the Center Panel Big (L) to assembled Leg Panel (M) & (M1) by using Bolt (15) with Allen Wrench (29).

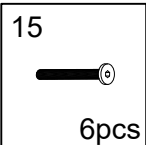

Step 17

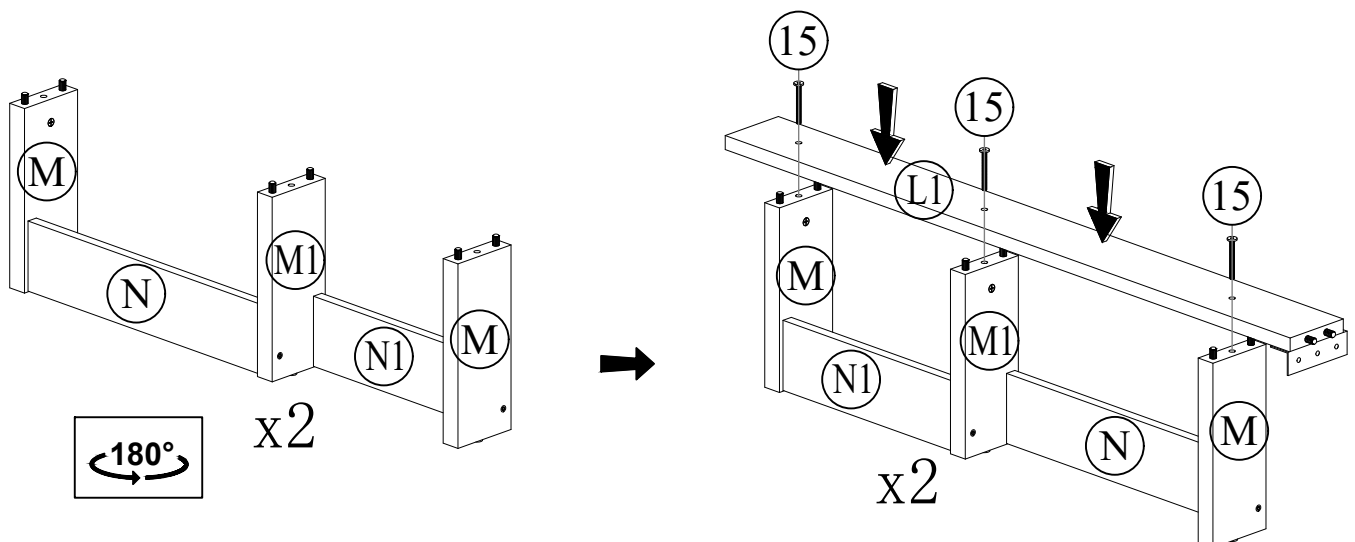


- Rotate 180° for another assembled Leg panel (L1) & (M), then attach the Center Panel Small (M1) to it by using Bolt (15) with Allen Wrench (29).

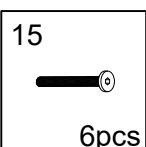

Assembly Instruction

Step 18

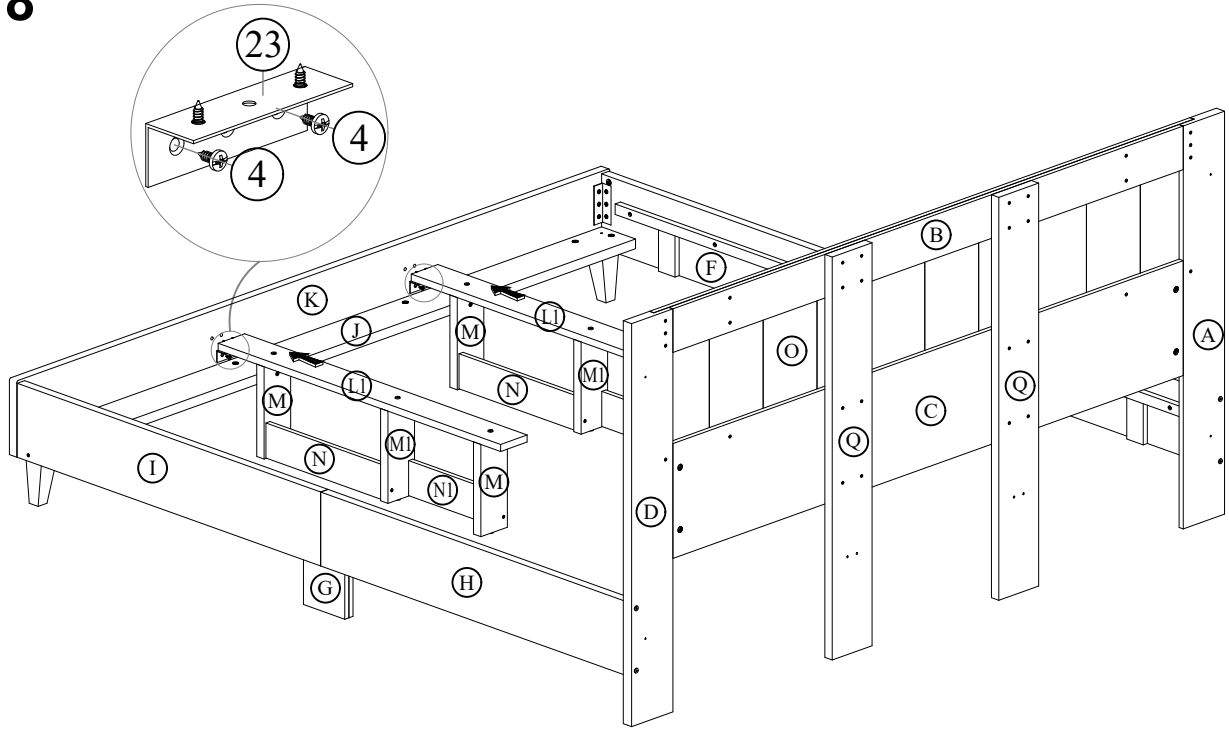


- Attach the L - Bracket (23) on Center Panel Small (L1) to Footboard Panel (K) by using screw (4) with Screwdriver (Not Provided) as shown above.
DO NOT FULLY TIGHTEN SCREWS.

4




4pcs

Step 19

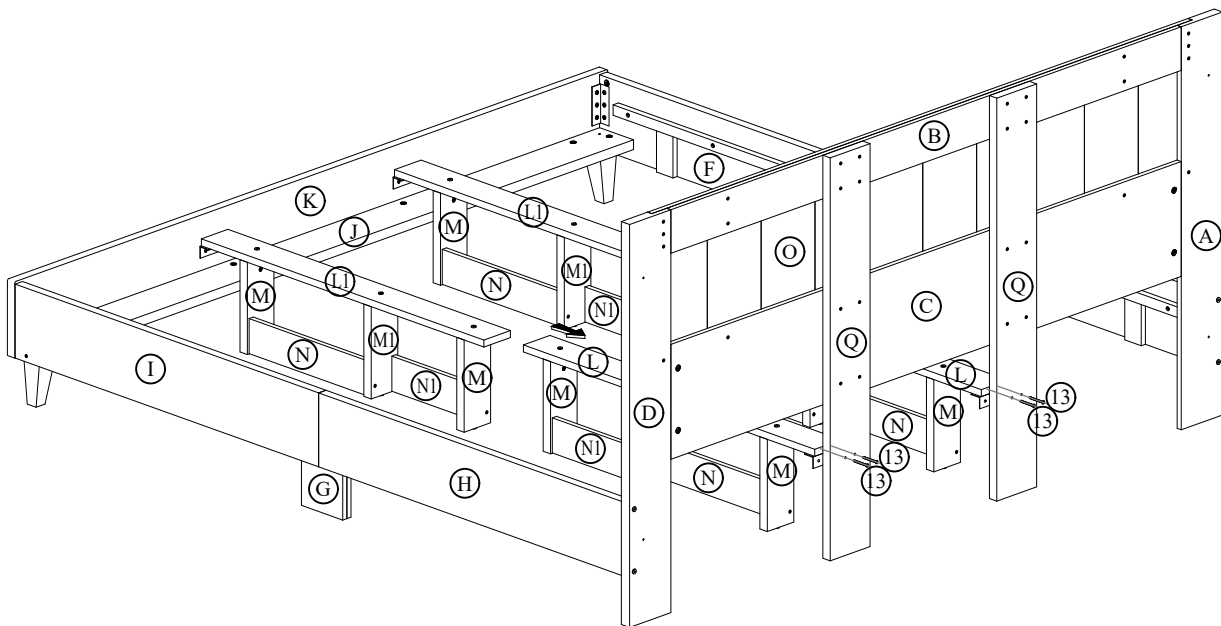


- Attach the L-bracket on Center Panel Big (L) to Headboard Support (Q) by using Screw (13) with Allen Wrench (30) as shown above.
DO NOT FULLY TIGHTEN SCREWS.

13



4pcs




➡ Step 20



Assembly Instruction

Step 20

Step 20.2

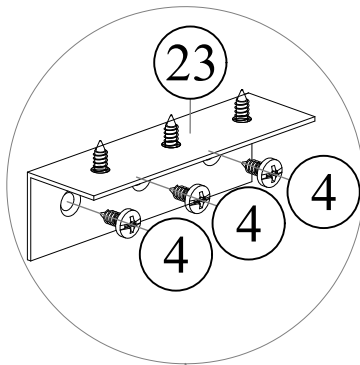


Step 20.1

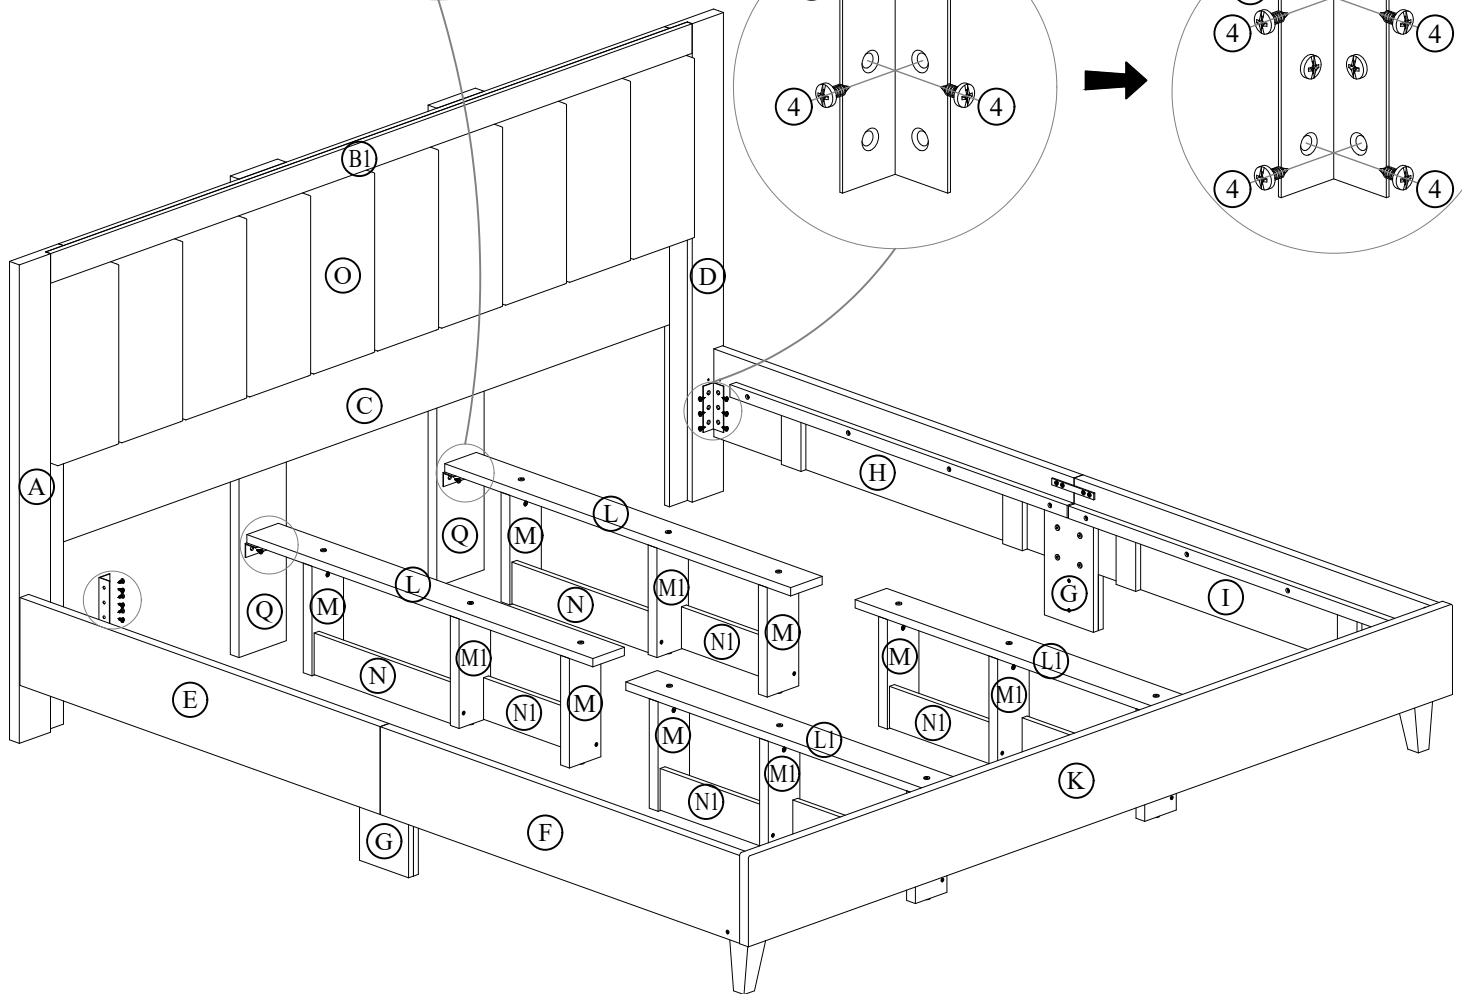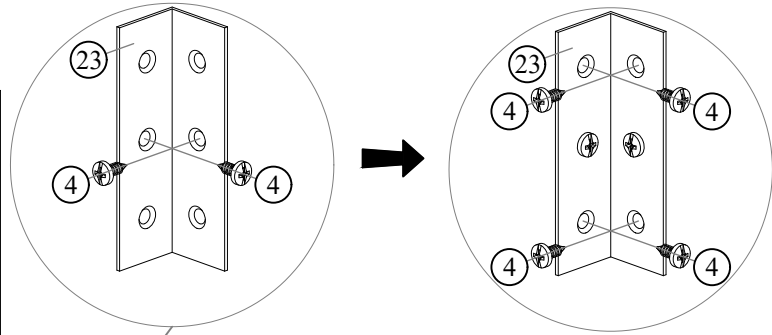


- **Step 20.1: Attach the L - Bracket 23 to the middle of assembled Headboard Panel A & D and Side Panel E & H by using Screw 4 with Screwdriver (Not Provided)**

Step 20.2: Attach the L - Bracket 23 to assembled Headboard Support Q and Center Panel Big L by using screw 4 with Screwdriver (Not Provided). DO NOT FULLY TIGHTEN SCREWS

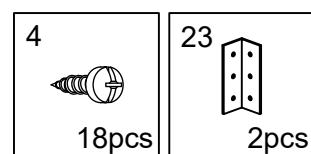


Assembly Instruction

Step 21

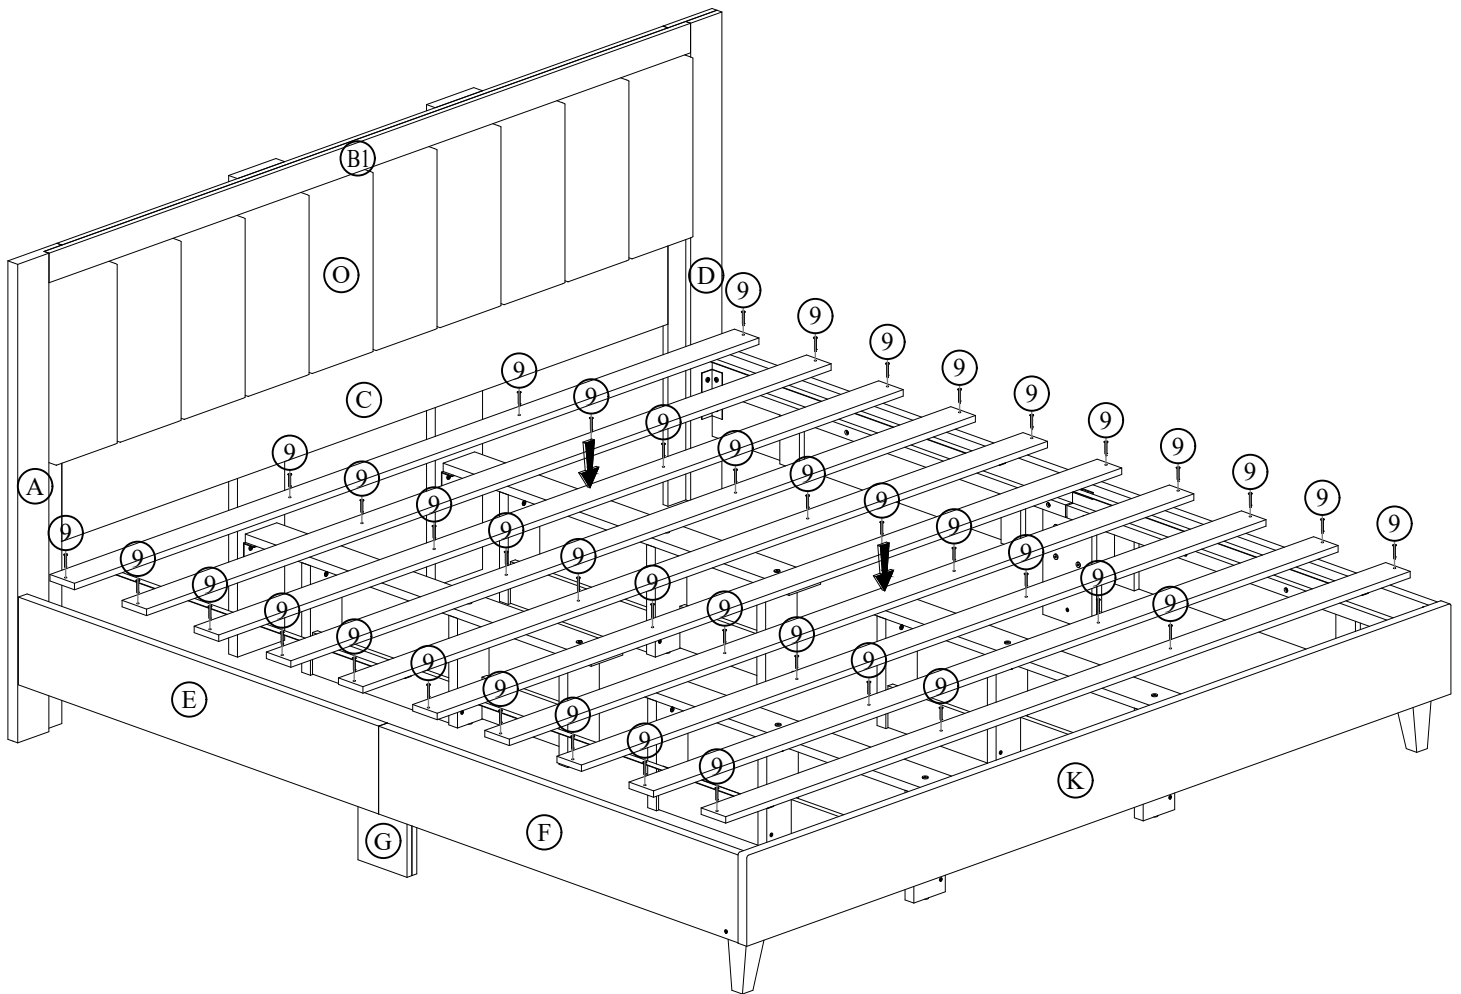


- Attach the Bed Slat (P) to assembled Side Panel (E), (F), (H) & (I), and (L) & (LI) by using Screw (9) with Screwdriver (Not Provided) as shown above.

DO NOT FULLY TIGHTEN SCREWS

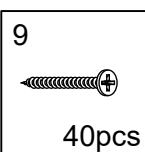


Assembly Instruction


Step 22

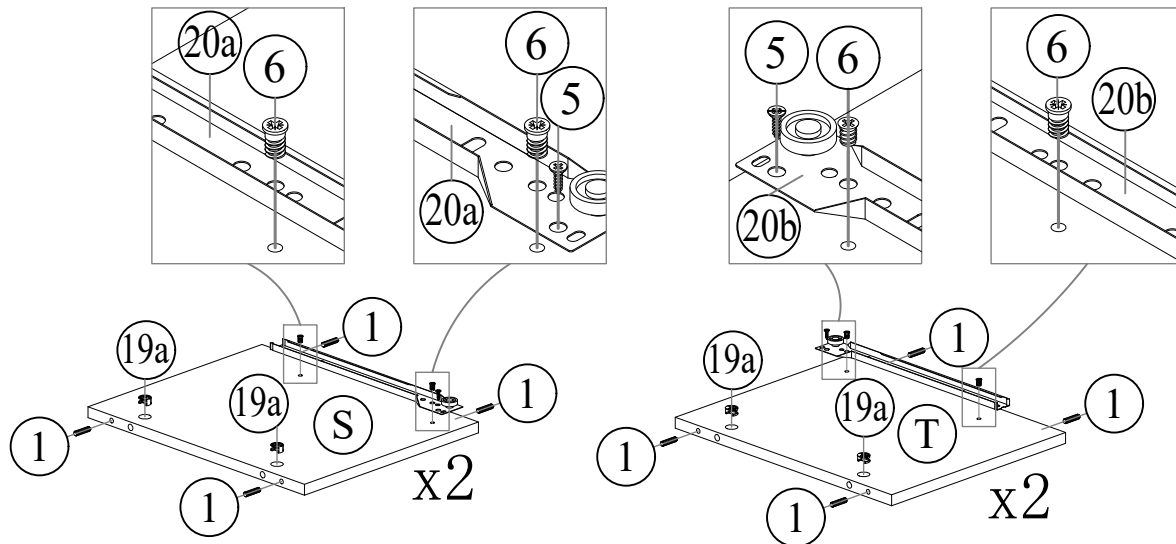


- Insert Wood Dowel (1) and Minifix Nuts (19a) to Side Panel - L (S) and Side Panel - R (T) as shown above.
Attach the drawer slide (20a) to Side Panel - L (S) by using Screw (5) and Screws (6) with Screwdriver (Not Provided).
Repeat the same step to attach drawer slide (20b) to Side Panel - R (T).

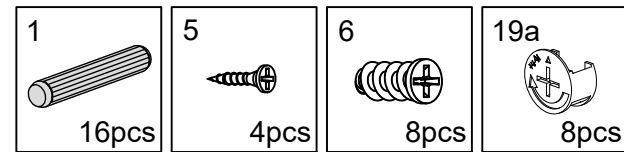

Step 23

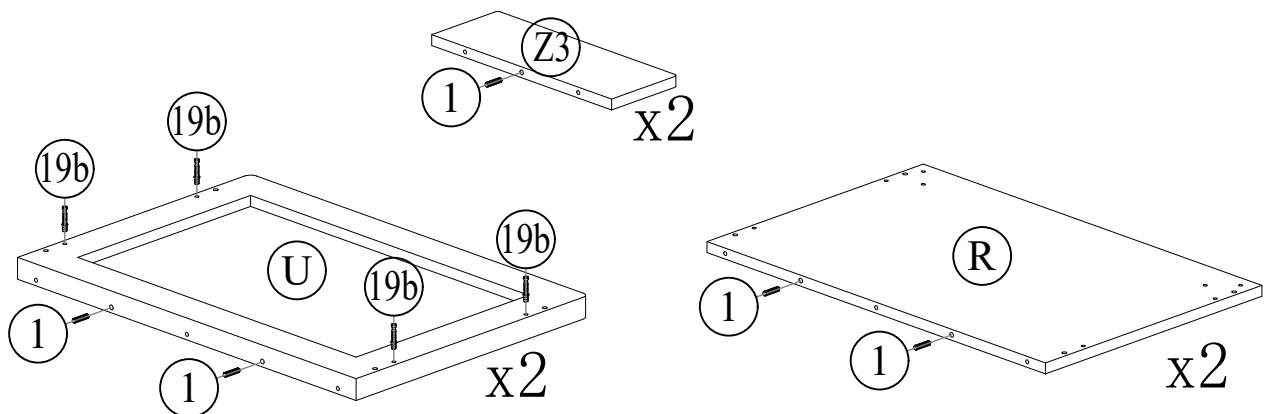


- Insert Wood Dowel (1) to side mounting position of Bottom Panel (R), Top Panel (U) and Shelf Panel S (Z3).
Insert Minifix Screws (19b) to Bottom Panel (R) and Top Panel (U) as shown above.

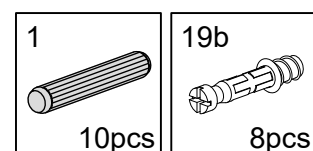


Assembly Instruction


Step 24

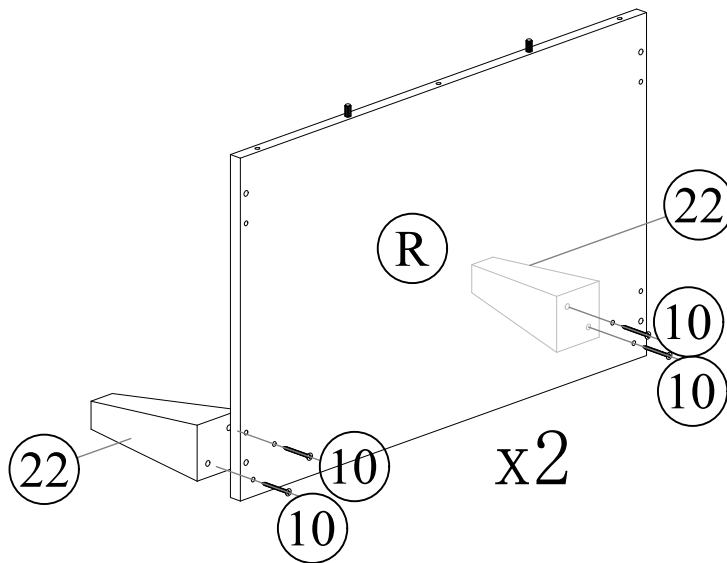


- Attach the Wooden Leg (22) to Bottom Panel (R) by using Screws (10) with Screwdriver (Not Provided).




➡ Step 25

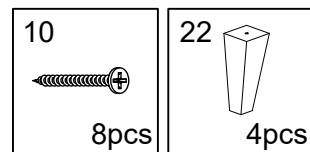

Step 25

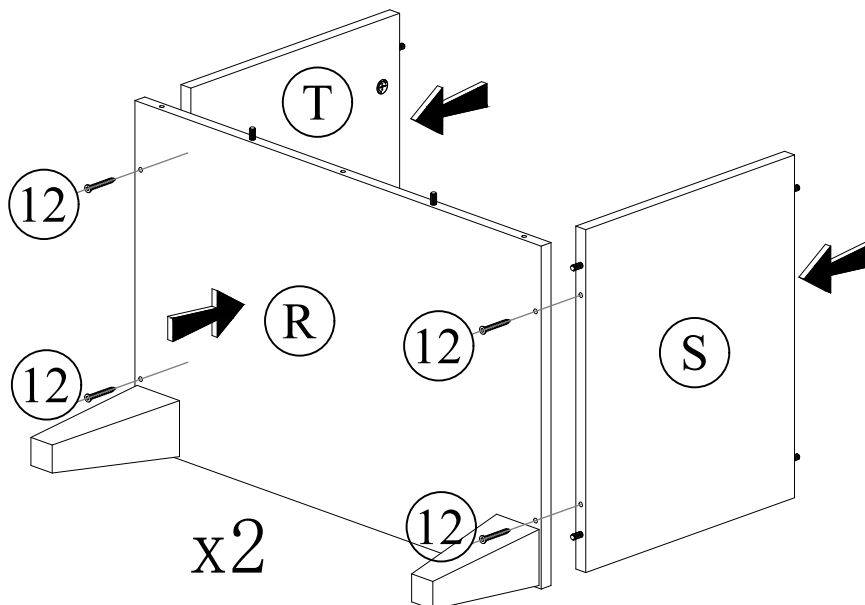


- Attach Side Panel - L (S) and Side Panel - R (T) to Bottom Panel (R) by using Screw (12) with Allen Wrench (30).

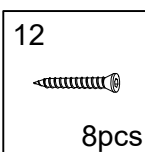


Assembly Instruction

Step 26

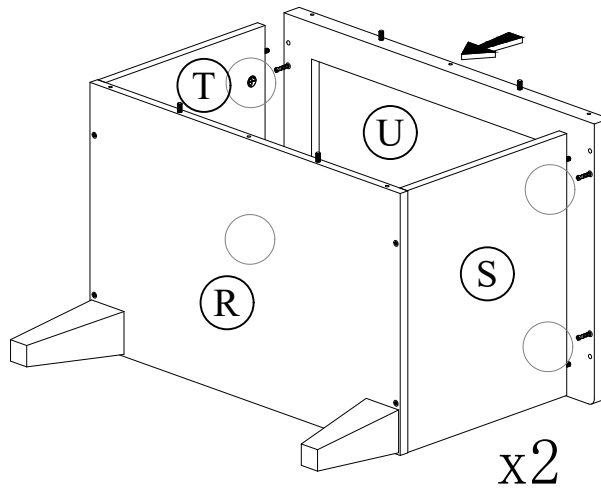


- Attach Top Panel (U) to assembled Side Panel (S) & (T) by rotating the minifix nuts to tighten the minifix screws as shown above.




➡ Turn to its side before moving on Step 27

Step 27

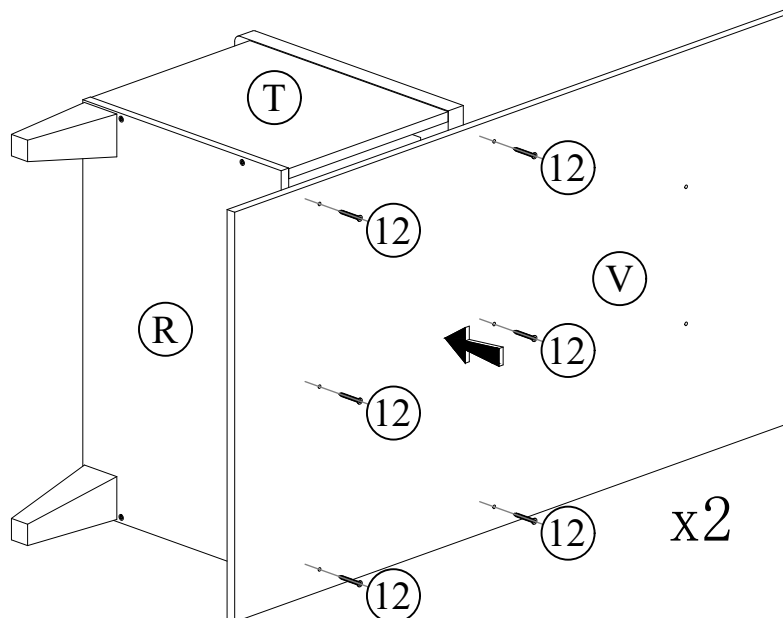

- Attach Back Panel (V) to assembled Top Panel (U) and Bottom Panel (R) by using Screw (12) with Allen Wrench (30).



➡ Place it on its right side up before moving on Step 28.


12




12pcs

Assembly Instruction

Step 28


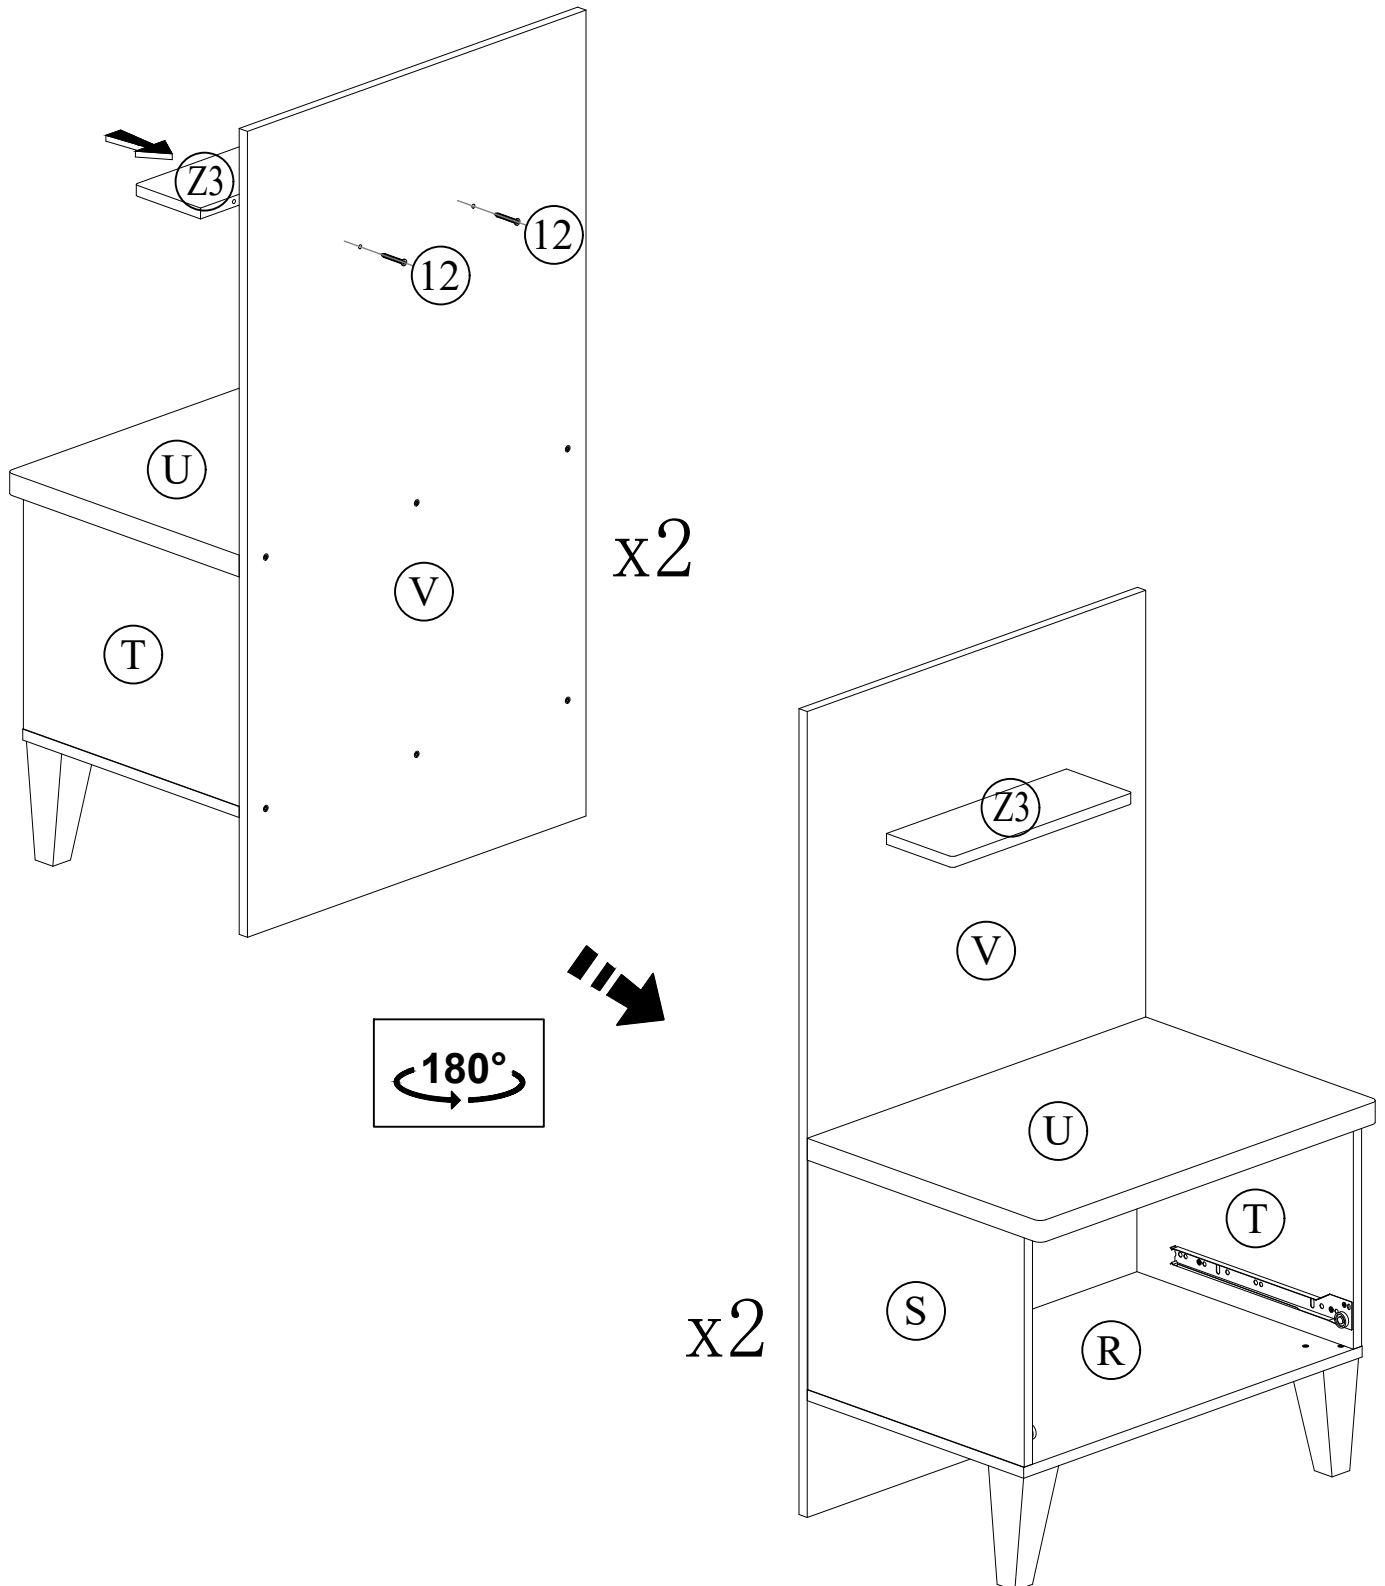


- Attach Shelf Panel Small (Z3) to Back Panel (V) by using Screw (12) with Allen Wrench (30). Then rotate 180° for next step.

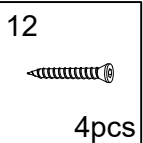


Assembly Instruction

Step 29

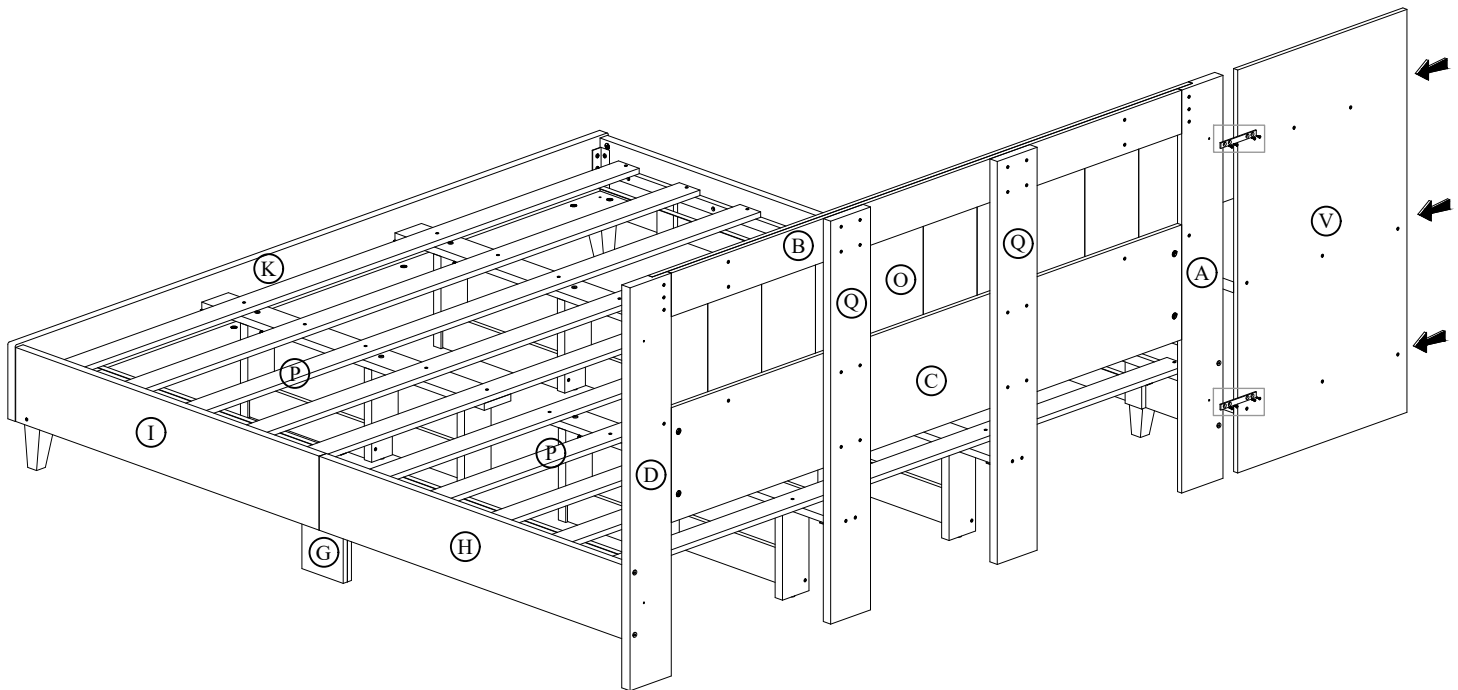
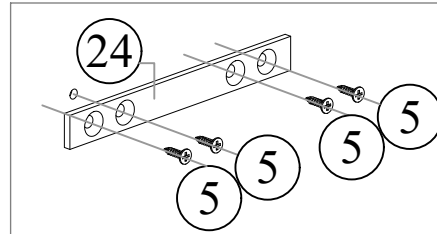


- **Attach the Metal Support (24) to assembled Panel (V) and assembled Side Headboard (A) by using Screws (5) with Screwdriver (Not Provided).**

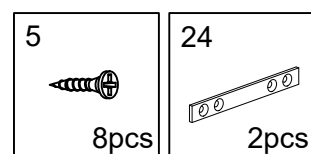


Assembly Instruction


Step 30

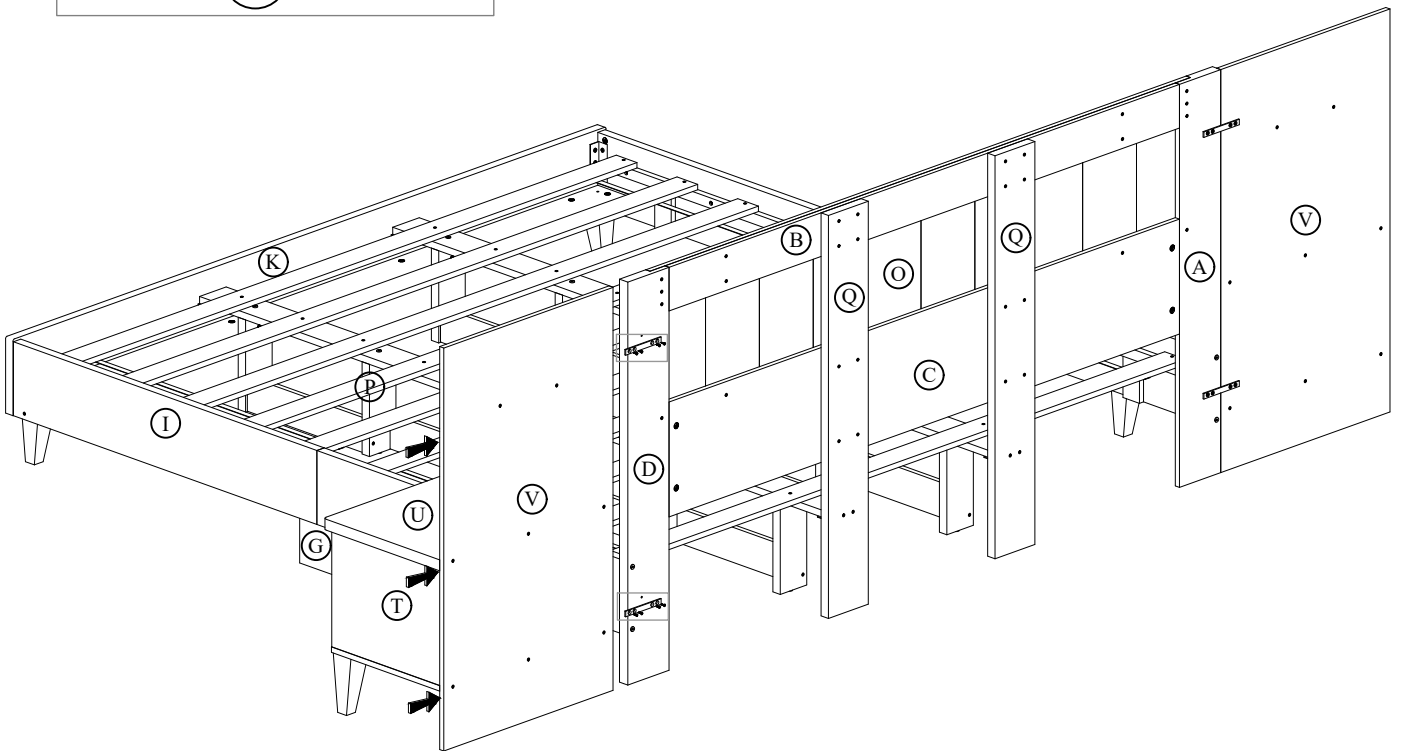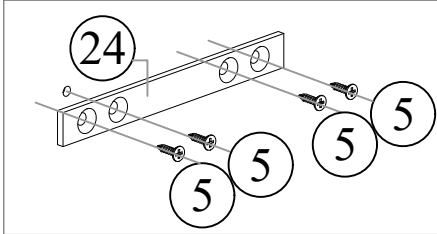

- **Attach Metal Support (24) to another assembled nightstand Panel (V) and assembled Side Headboard (D) by using Screws (5) with Screwdriver (Not Provided).**




➔ **Step 36**



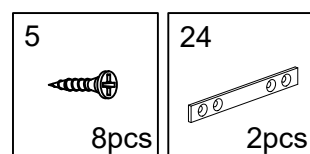


Assembly Instruction


Step 31

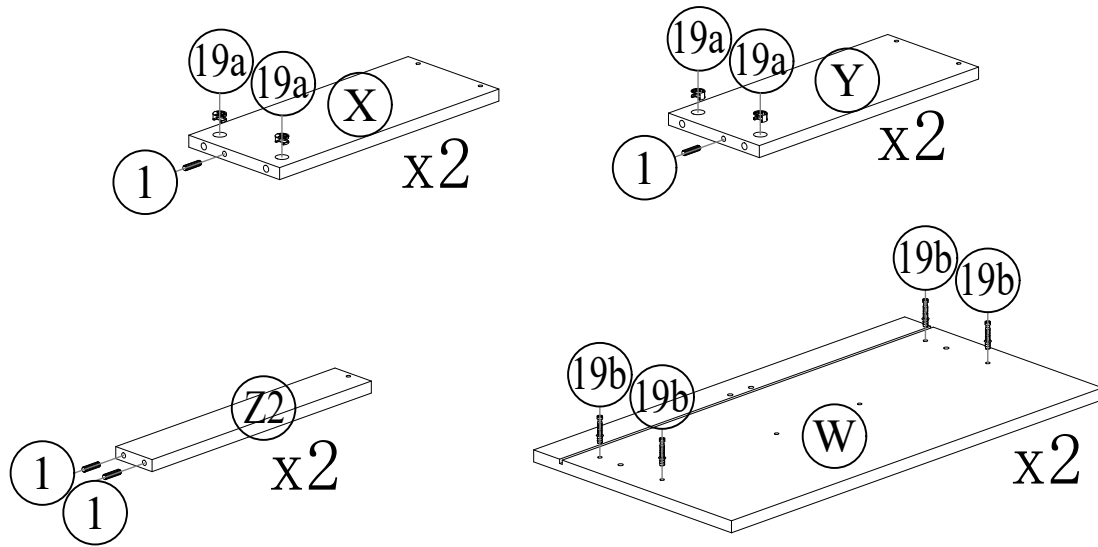


- Insert Wood Dowel (1) to side mounting position of Drawer Side Panel (X) & (Y) and Drawer Bottom Support (Z2). Insert the Minifix Nuts (19a) to Side Panel (X) & (Y) and insert Minifix Screws (19b) to Drawer Front Panel (W) as shown above.

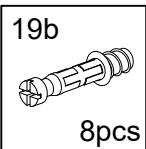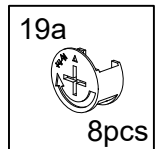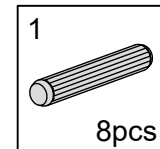

Step 32

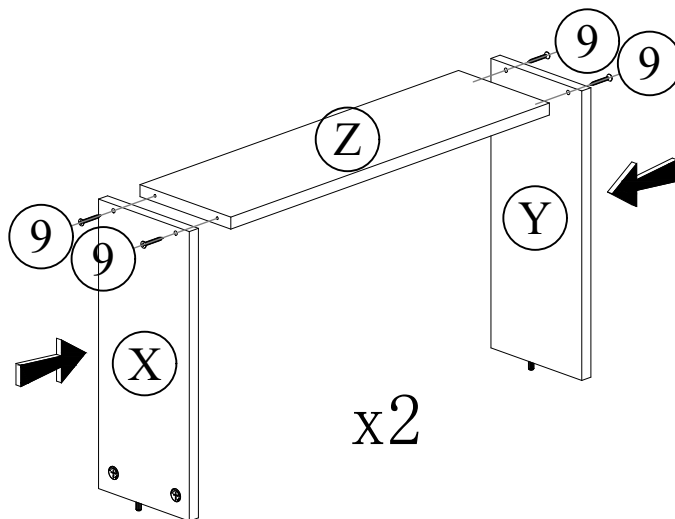


- Attach Drawer Back Panel (Z) to Side Panel (X) & (Y) by using Screw (9) with Screwdriver (Not Provided) as shown above.

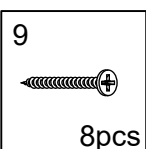


Assembly Instruction

Step 33

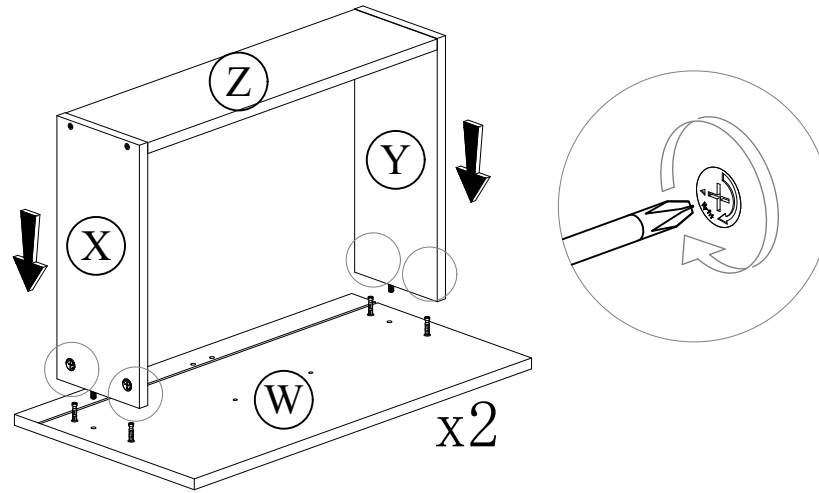


- Attach the assembled Side Panel (X) & (Y) to Drawer Front Panel (W) by rotating the minifix nuts to tighten the minifix screws as shown above.




Step 34

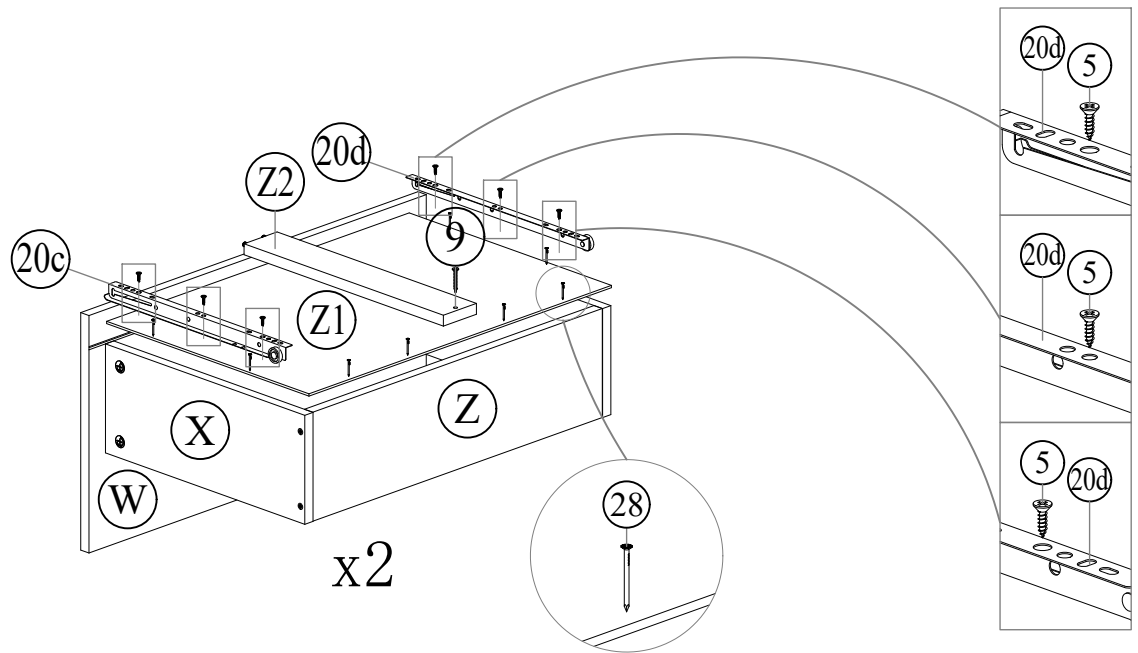

- Insert Drawer Bottom Panel (Z1) in the line groove of Drawer Front Panel (W), make sure it is evenly positioned above assembled Panel (X), (Y) & (Z). Secure the bottom Panel (Z1) with nails (28) as shown above.
- Attach the Drawer Slide (20c & 20d) to Side Panel (X) & (Y) by using screws (5) with Screwdriver (Not Provided).
Attach one end of Drawer Bottom Support (Z2) to Drawer Front Panel (W) and attach the another end to Drawer Back Panel (Z) by using Screw (9) with Screwdriver (Not Provided) as shown above.





➔ Place it on its right side up before moving on Step 35.

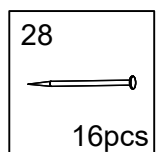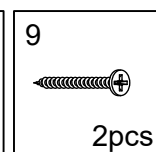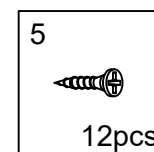


Assembly Instruction

Step 35

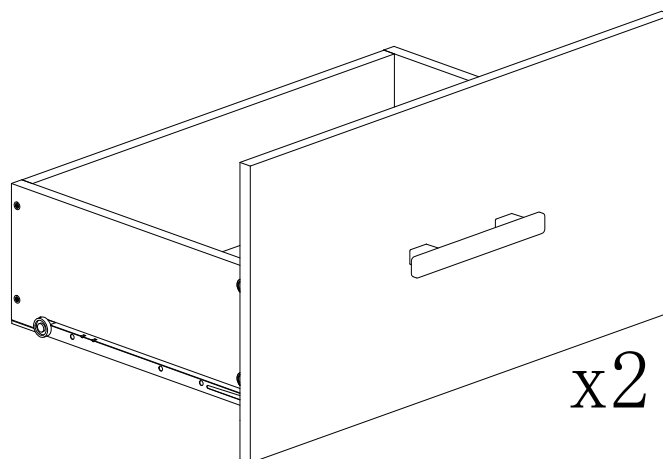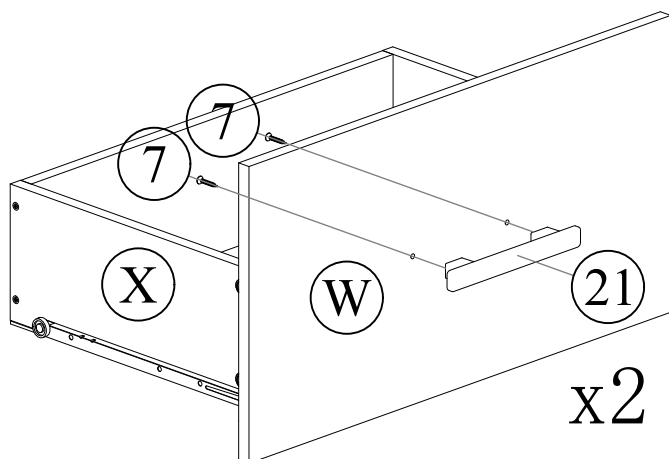


- **Attach the Flat Handle (21) to Drawer Front Panel (W) by using Screws (7) with Screwdriver (Not Provided)**

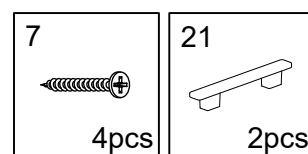

Assembly Instruction

Step 36

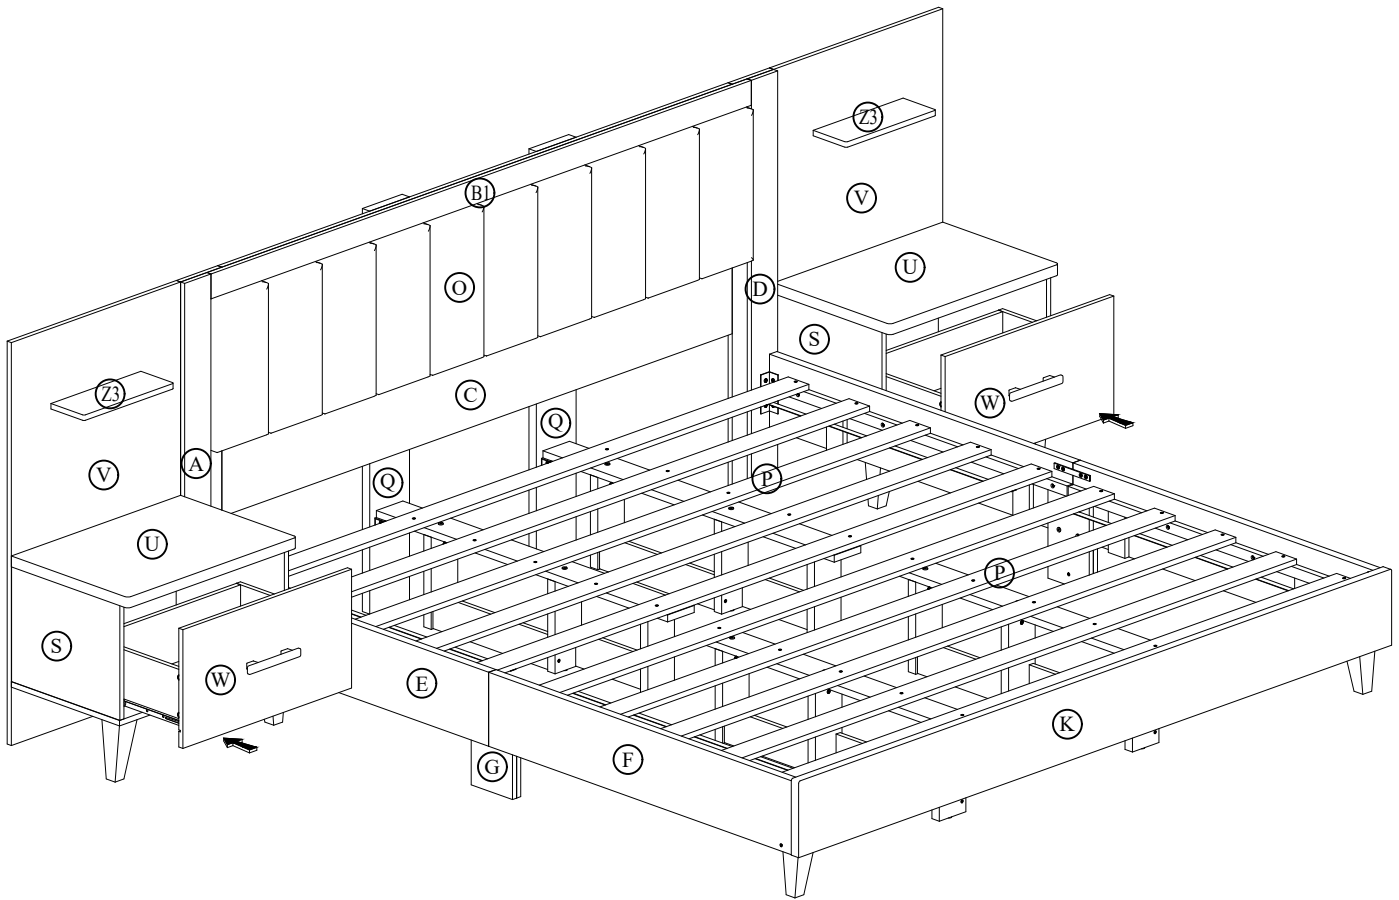

- **Install the drawers at both left and right night stand.
Inspect it and make sure all parts are adequately connected.**

CAUTION 1 :

When tightening these screws, tighten sequentially.

Do Not tighten any screw fully and then towards the next one.

This would cause the frame to warp.

If there is still wobbles, loosen the screws and execute this same process.

DO NOT tighten any screw fully and then towards the next one.

WARNING!! IF BED IS NOT STABLE, IT COULD LEAD TO DAMAGING THE PRODUCT.

Ensure all screws are fully locked into position.


The bed is ready to be used .

CAUTION 2:


This bed can only be used on a flat, level surface.

Assembly Instruction

Step 37

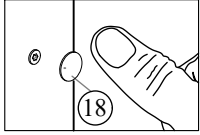

* Cover all the screw ⑫,⑬'s head with the seal sticker provided by sticking the sticker on the screw head.

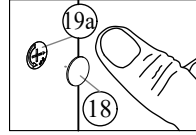

* Cover all the mini fix (nuts) ⑲a's head with the seal sticker provided by sticking the sticker on the head of mini fix (nuts).

Complete

