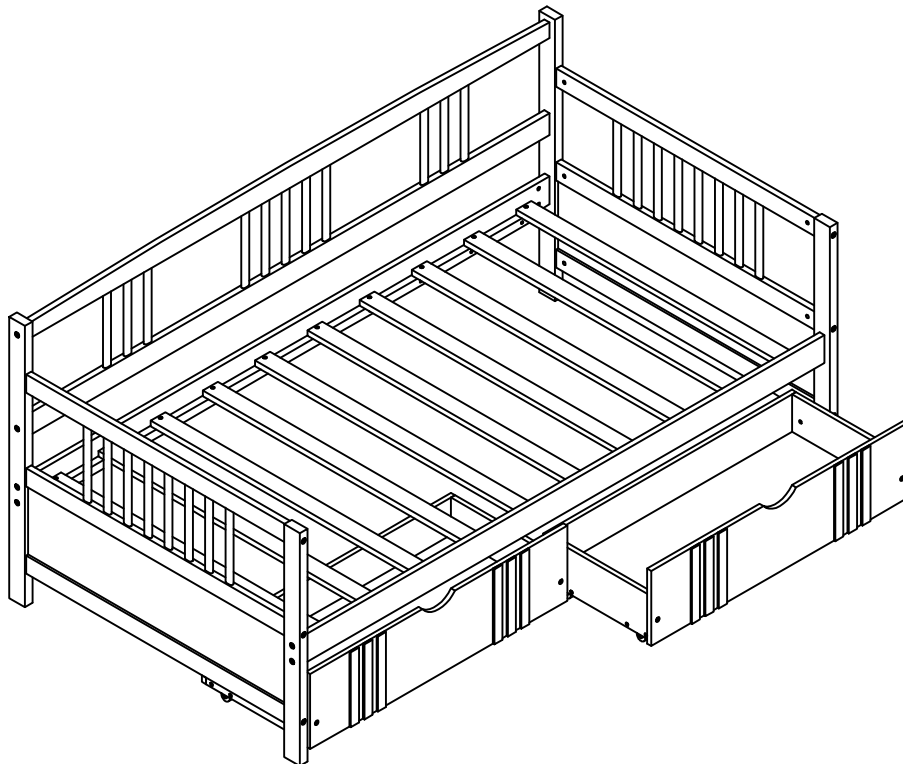


ASSEMBLY INSTRUCTIONS


TWIN SIZE DAYBED WITH 2 DRAWERS

If you have any questions, please feel free to contact us.
Email: lowes.team@qualfurn.net


















WF295029




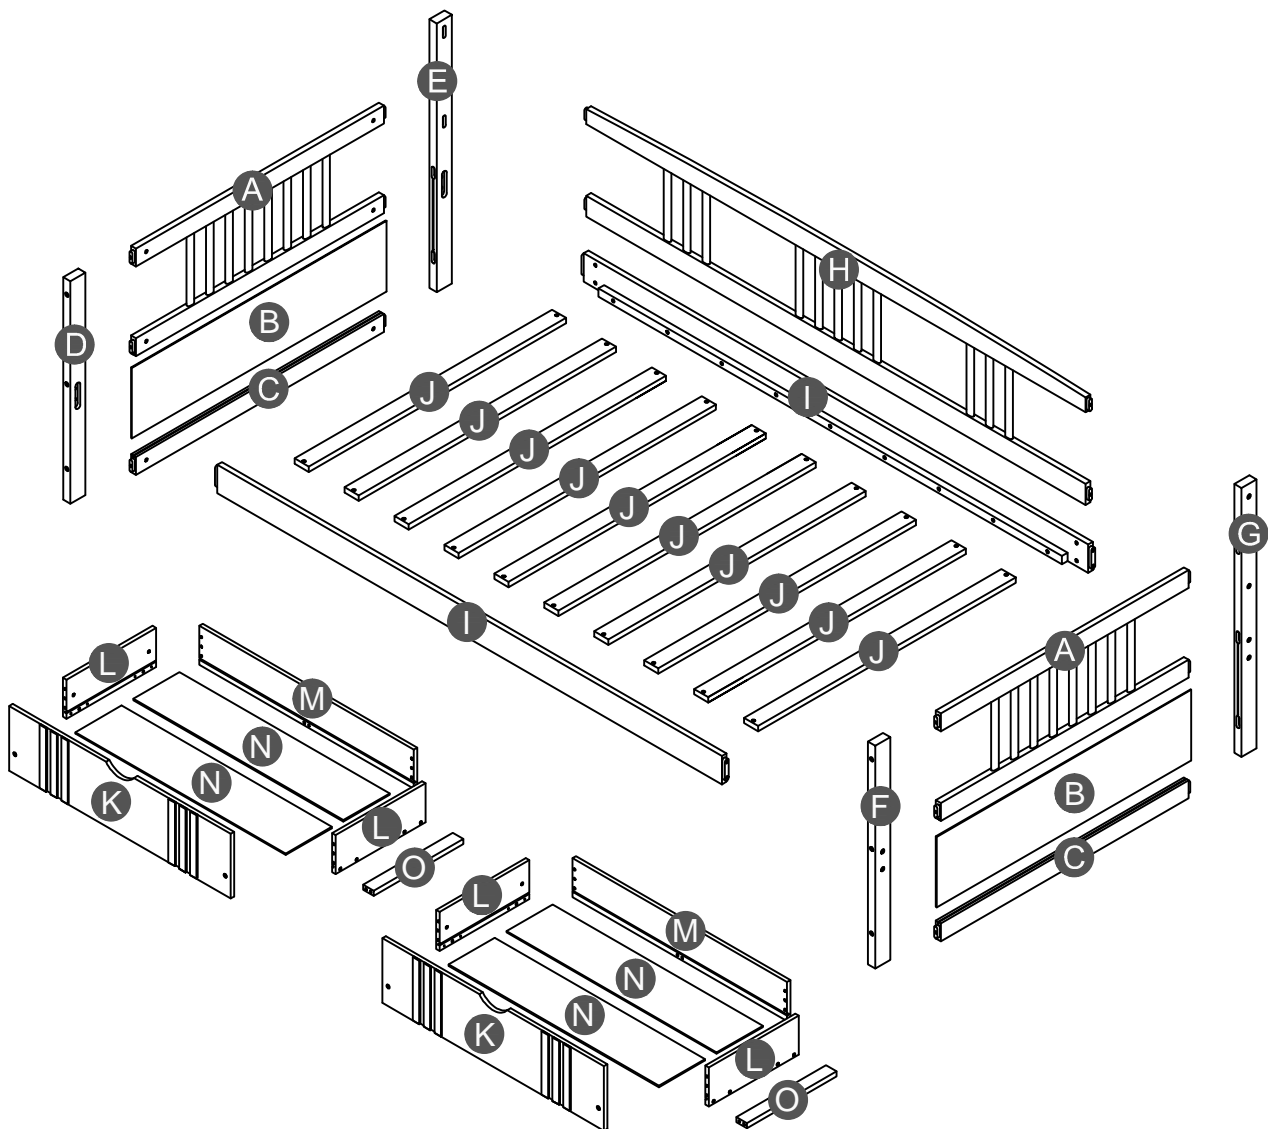






Detail View




Part List

A  <p>Frame HB/FB - 2pcs</p>	B  <p>Side panel - 2pcs</p>	C  <p>Horizontal bar - 2pcs</p>
D  <p>Leg left (Front) - 1pc</p>	E  <p>Leg left (Back) - 1pc</p>	F  <p>Leg right (Front) - 1pc</p>
G  <p>Leg right (Back) - 1pc</p>	H  <p>Long guard rail - 1pc</p>	I  <p>Side rail - 2pcs</p>
J  <p>Slats - 10pcs</p>	K  <p>Front drawer panel - 2pcs</p>	L  <p>Left / right drawer panel - 4pcs</p>
M  <p>Back drawer panel - 2pcs</p>	N  <p>Drawer bottom - 4pcs</p>	O  <p>Support drawer - 2pcs</p>

Hardware List


1  (Ø15)1/4"*100mm Hex-Head bolts (12pcs)	2  (Ø15)1/4"*80mm Hex-Head bolts (12pcs)	3  (Ø12)1/4"*60mm Hex-Head bolts (8pcs)
4  1/4"*15 (9.5mm) Horizontal-Hole bolts(32pcs)	5  Ø4*30mm Wood screws (42pcs)	6  (1/4")4.5*58mm Allen key (1pc)
7  100*54*20 mm Wheels (8pcs)	8  70*35*19 mm Drawer stopper (3pcs)	9  Ø8*30mm Wood dowel (24pcs)
10  Ø10*20mm Wood dowel (8pcs)		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !


STEP 1:

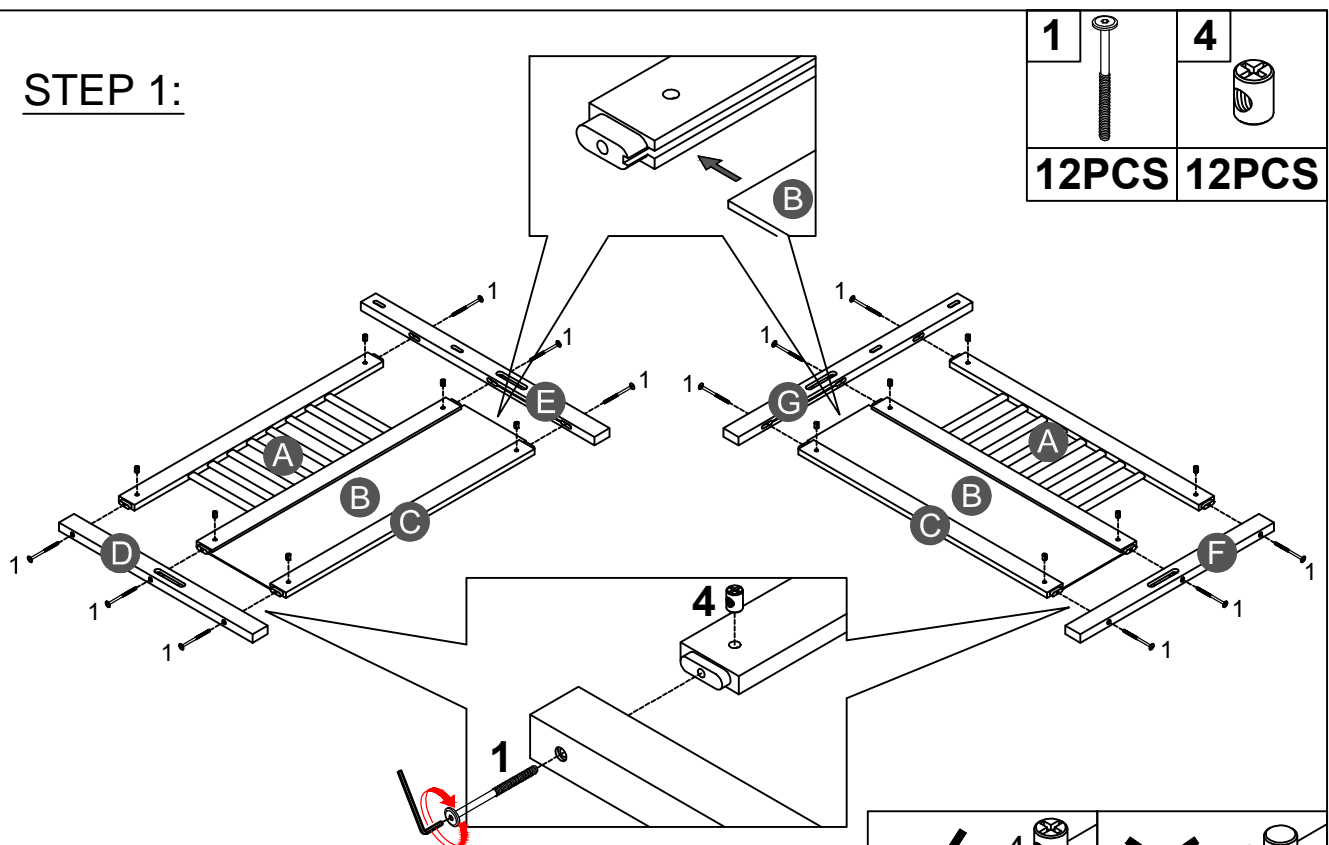

Note: Part 4 will face up with the "x" mark on it, otherwise it cannot be tightened

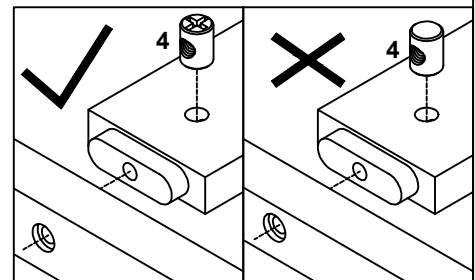


STEP 2:

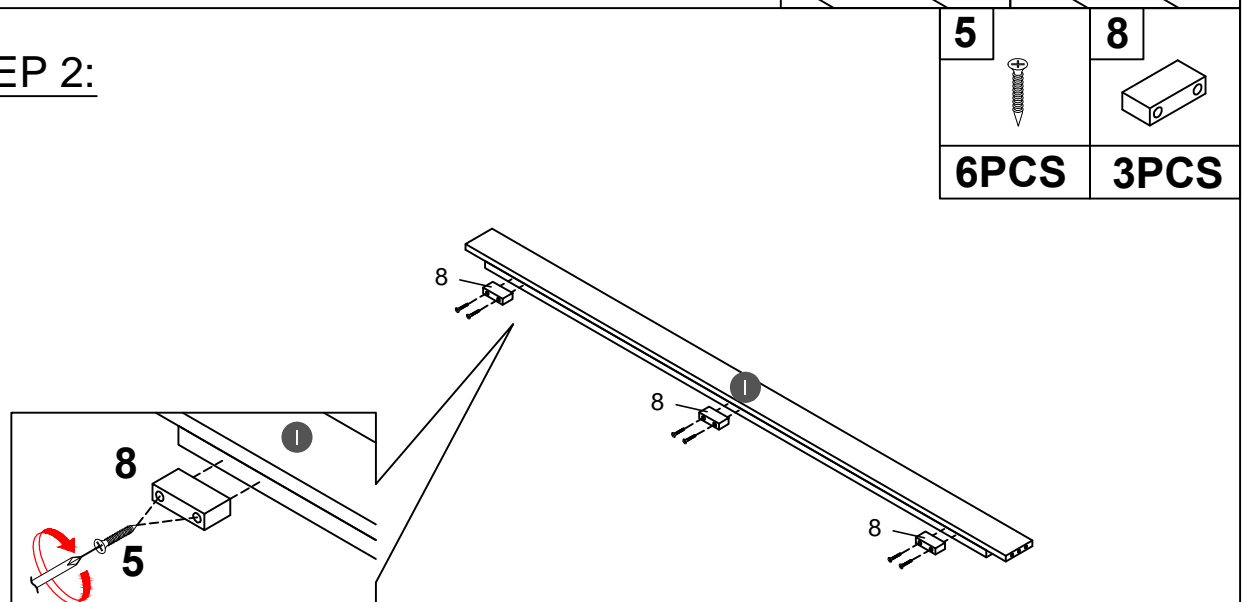


Drawer stopper (8) with lower side rail front (1) by using screw (5).

STEP 3:

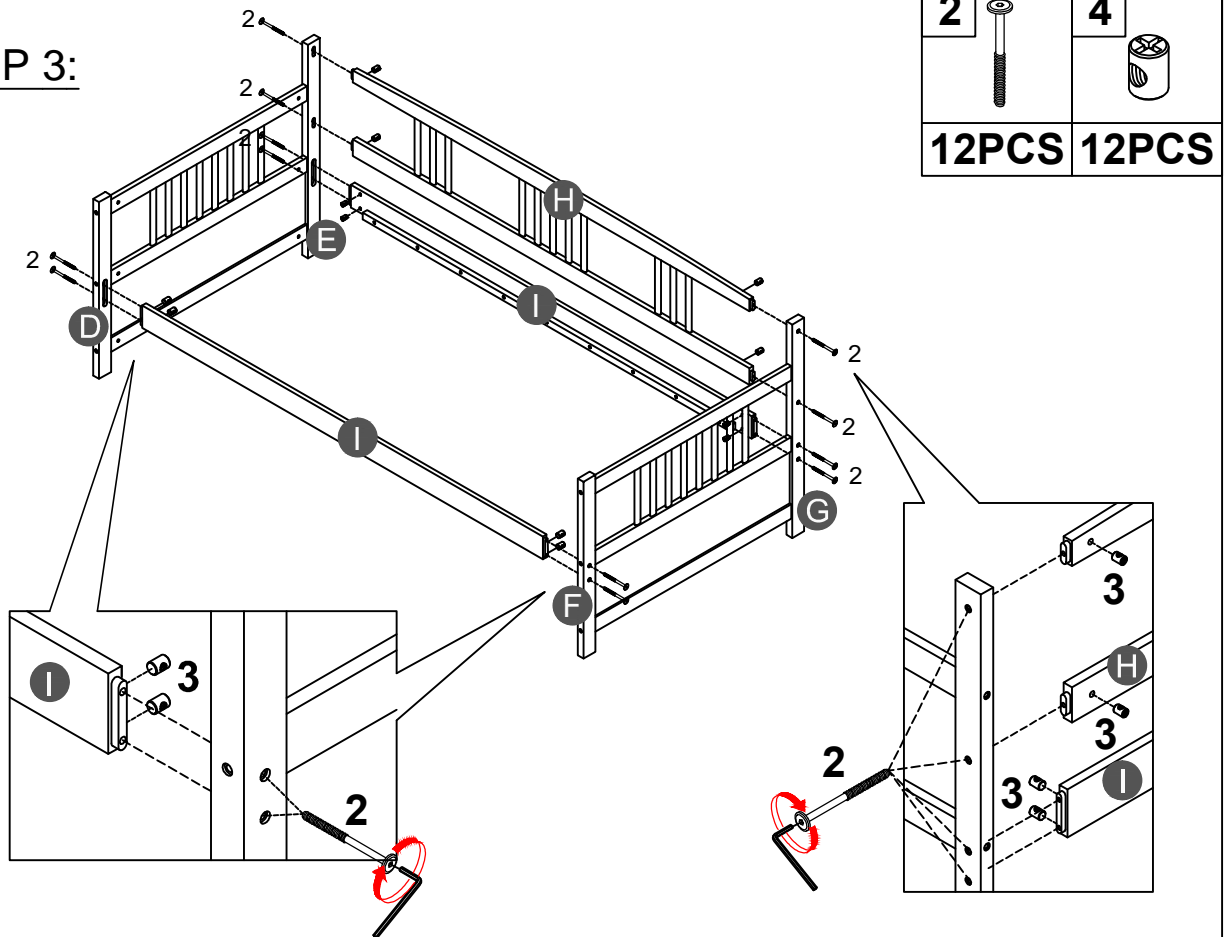


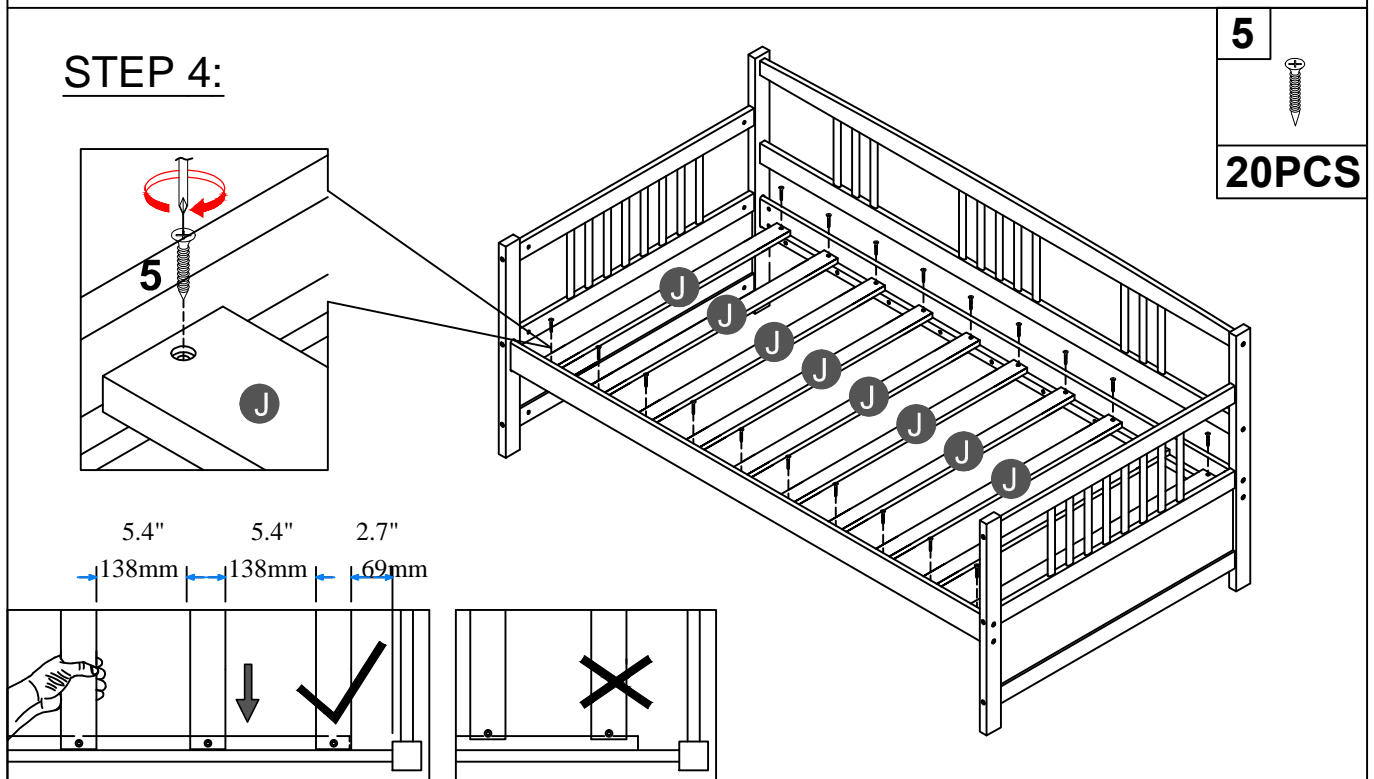


STEP 4:




Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.
Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

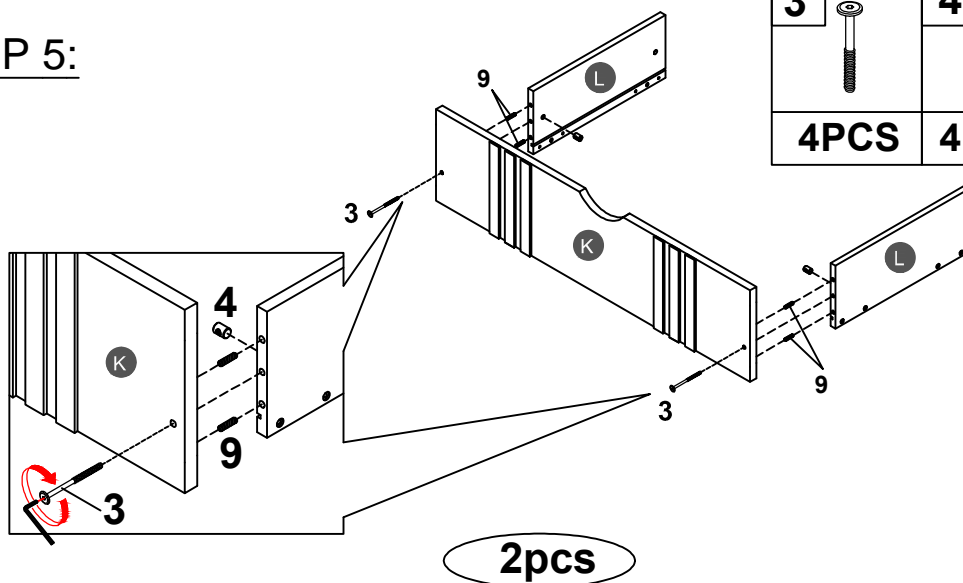


STEP 5:




3	4	9
		
4PCS	4PCS	8PCS

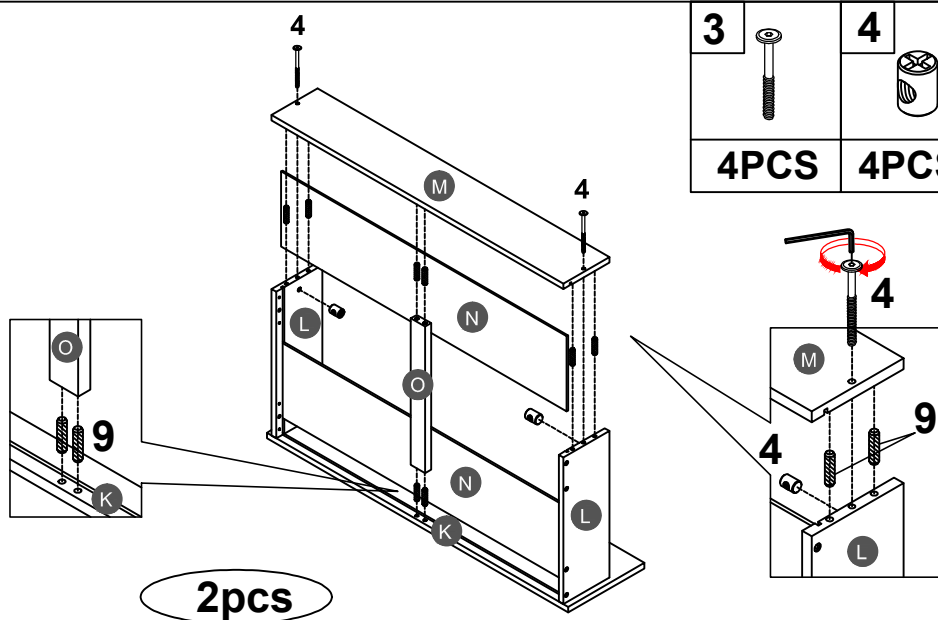


STEP 6:




3	4	9
		
4PCS	4PCS	16PCS

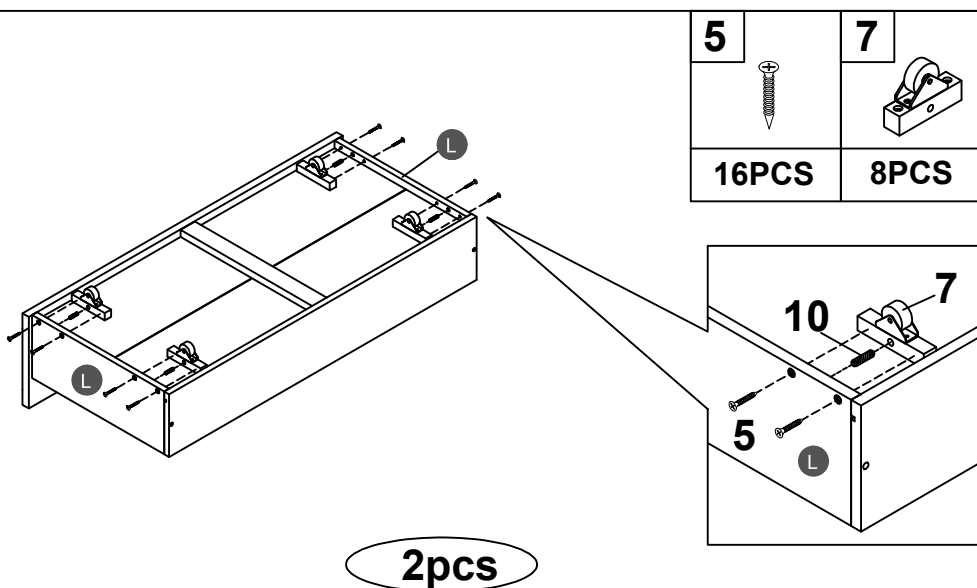STEP 7:



5	7	10
		
16PCS	8PCS	8PCS

STEP 8:

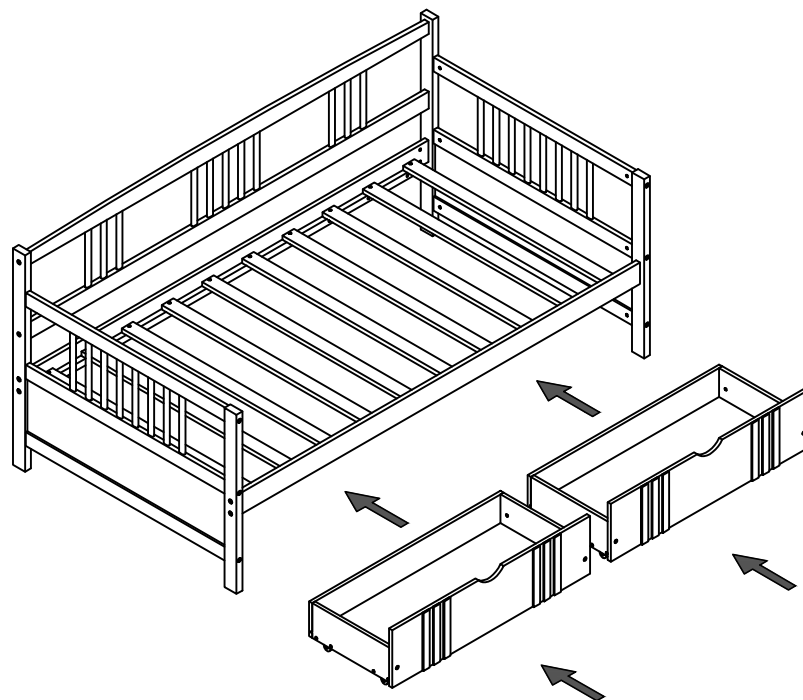

Push drawers under the bottom of daybed.

