



ASSEMBLY INSTRUCTIONS

ITEM CODE: WF298789

If you have any questions, please feel free to contact us.
Email: lowes.team@qualfurn.net

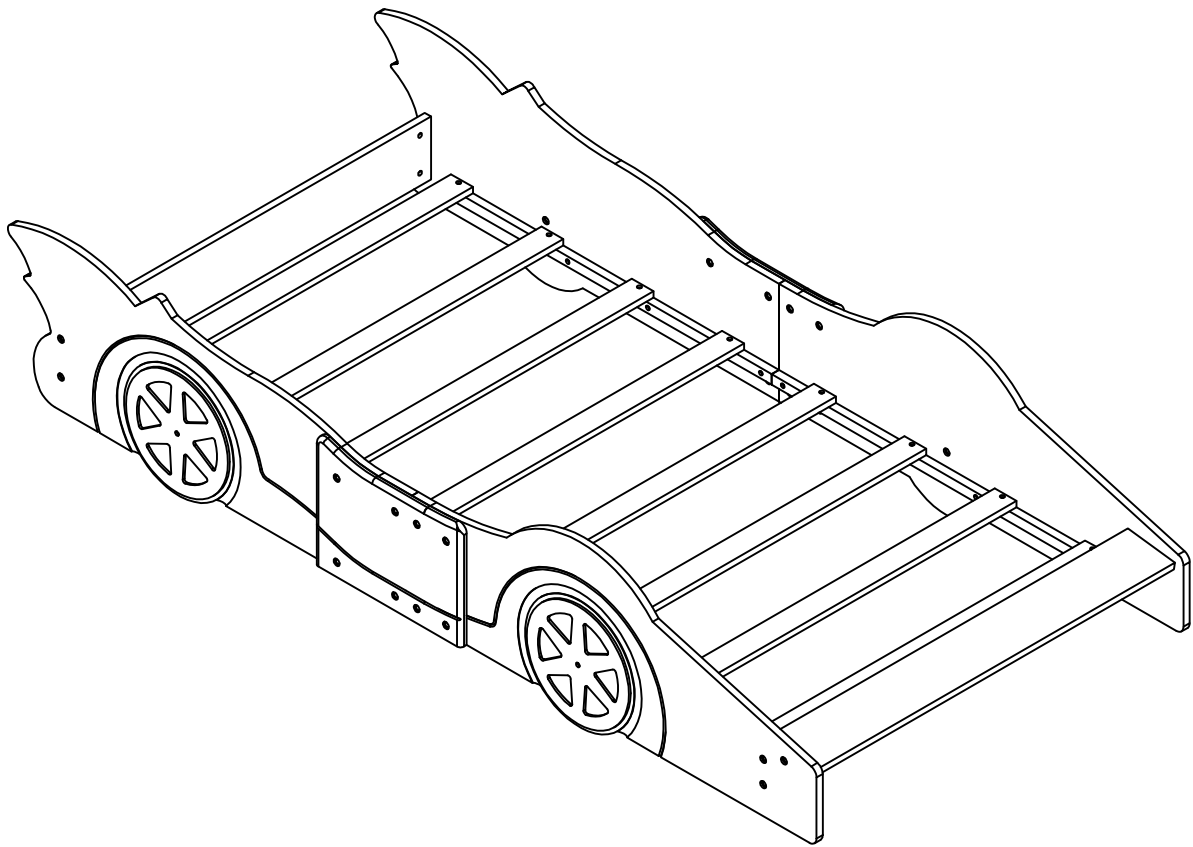


DETAIL VIEW

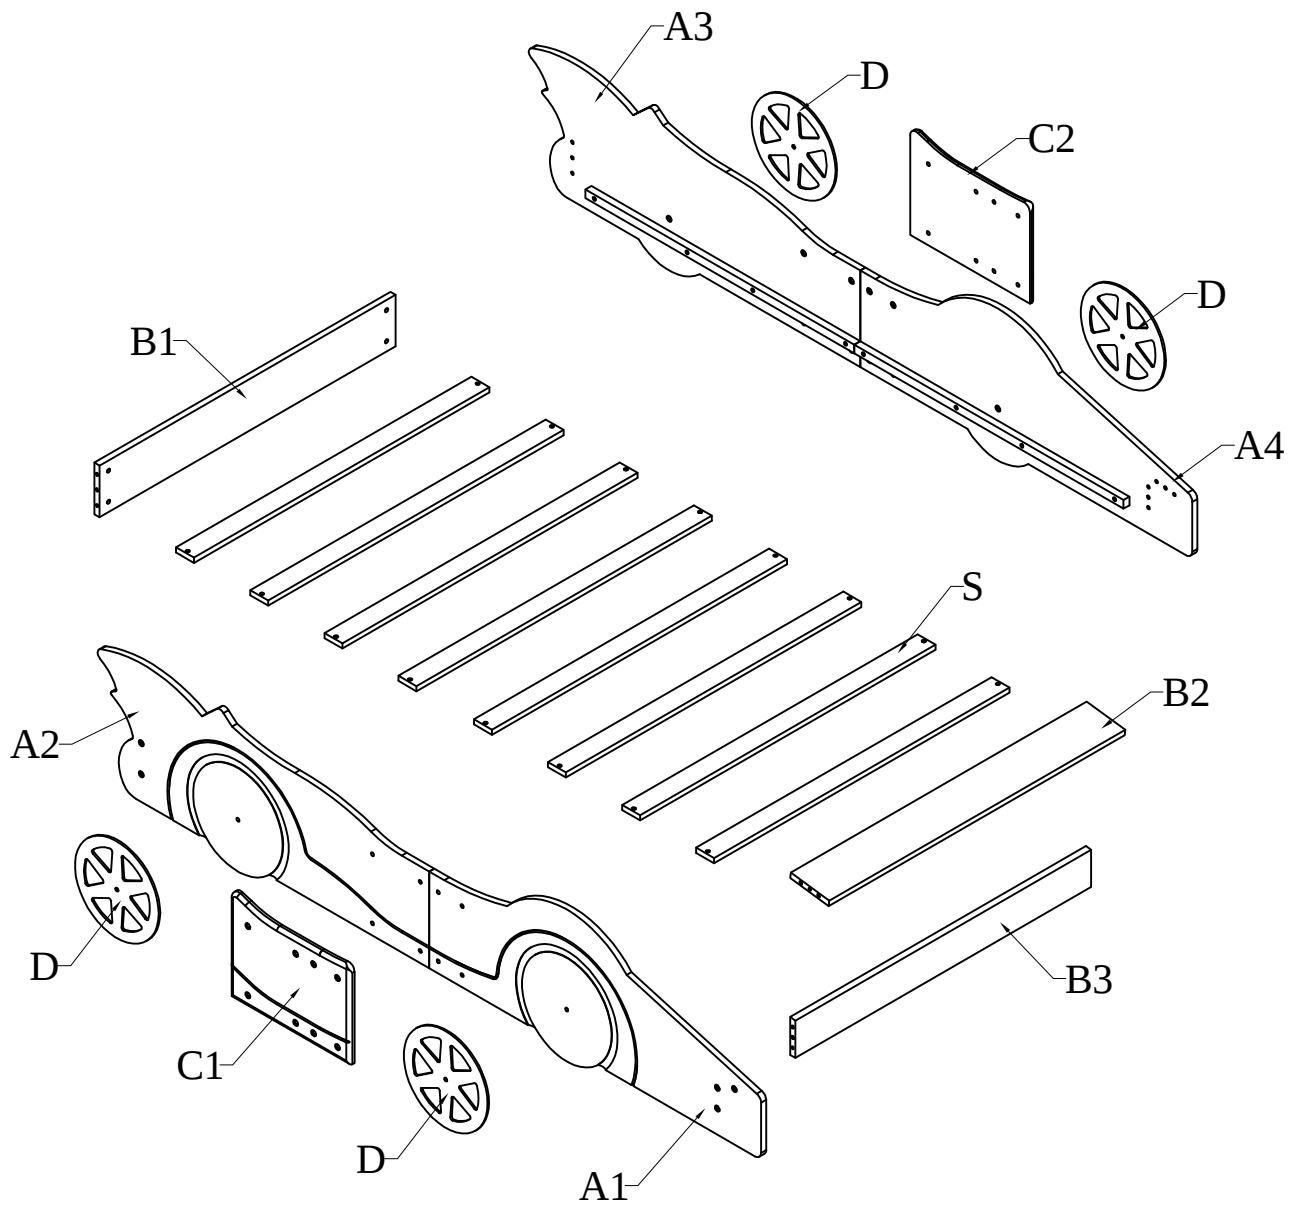


BOX: WF298789

A1

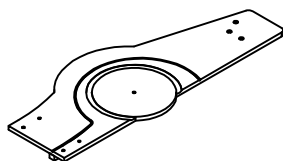


Left side rail - front (1pc)

A2

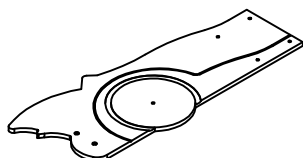


Left side rail - back (1pc)

A3

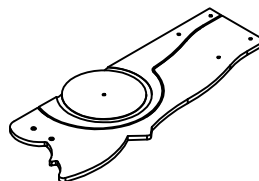


Right side rail - back (1pc)

A4

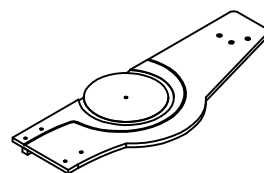


Right side rail - front (1pc)

B1

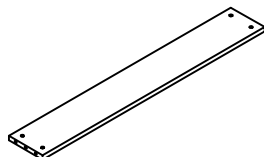


Horizontal rail - back (1pc)

B2

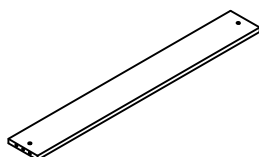


Car headboard (1pc)

B3

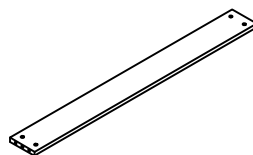


Horizontal rail - front (1pc)

C1

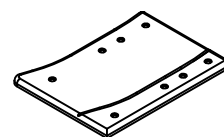

Support side rail - left (1pc)

C2

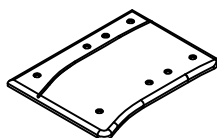


Support side rail - right (1pc)

D







Wheel car - right (4pcs)


S

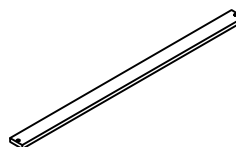

Slats (8pcs)


HARDWARE LIST: WF298789

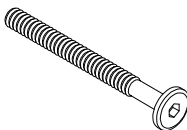1		2		3		4	
Hex - Head bolts Ø1/4" * 60 - 10pcs		Hex - Head bolts Ø1/4" * 25 - 16pcs		Hex - Head bolts Ø1/4" * 15 - 4pcs		Horizontal - Hold bolts Ø1/4" - 10pcs	
5		9		7		8	
Canopy head though Ø1/4" - 20pcs		Wood dowel Ø8 * 30 - 8pcs		Wood crews M4 * 25 - 16pcs		Allen key K4 - 2pc	



Asembly Tools Required (Not Included)

STEP 1

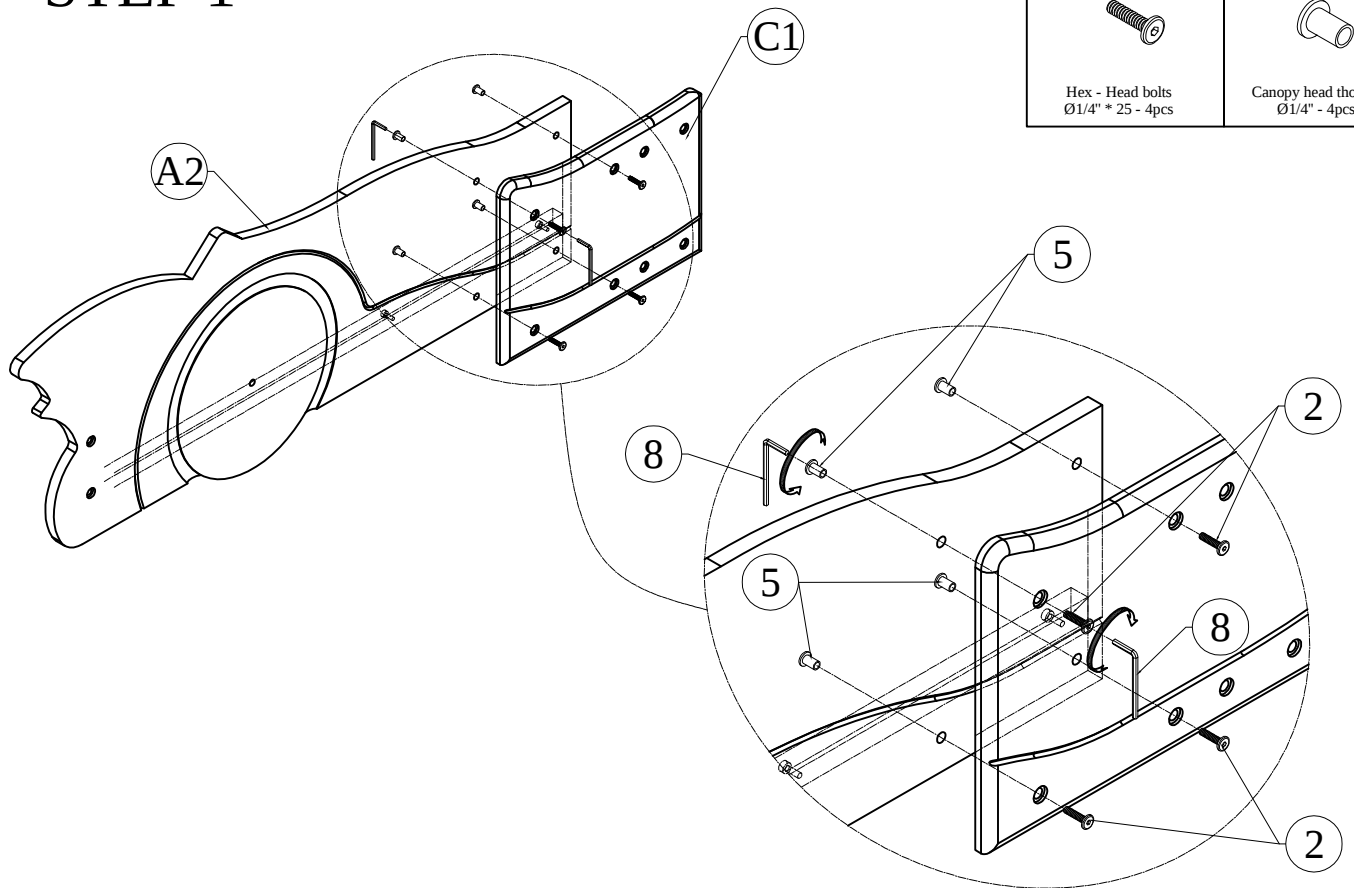

2




Hex - Head bolts
Ø1/4" * 25 - 4pcs

5



Canopy head though
Ø1/4" - 4pcs

STEP 2

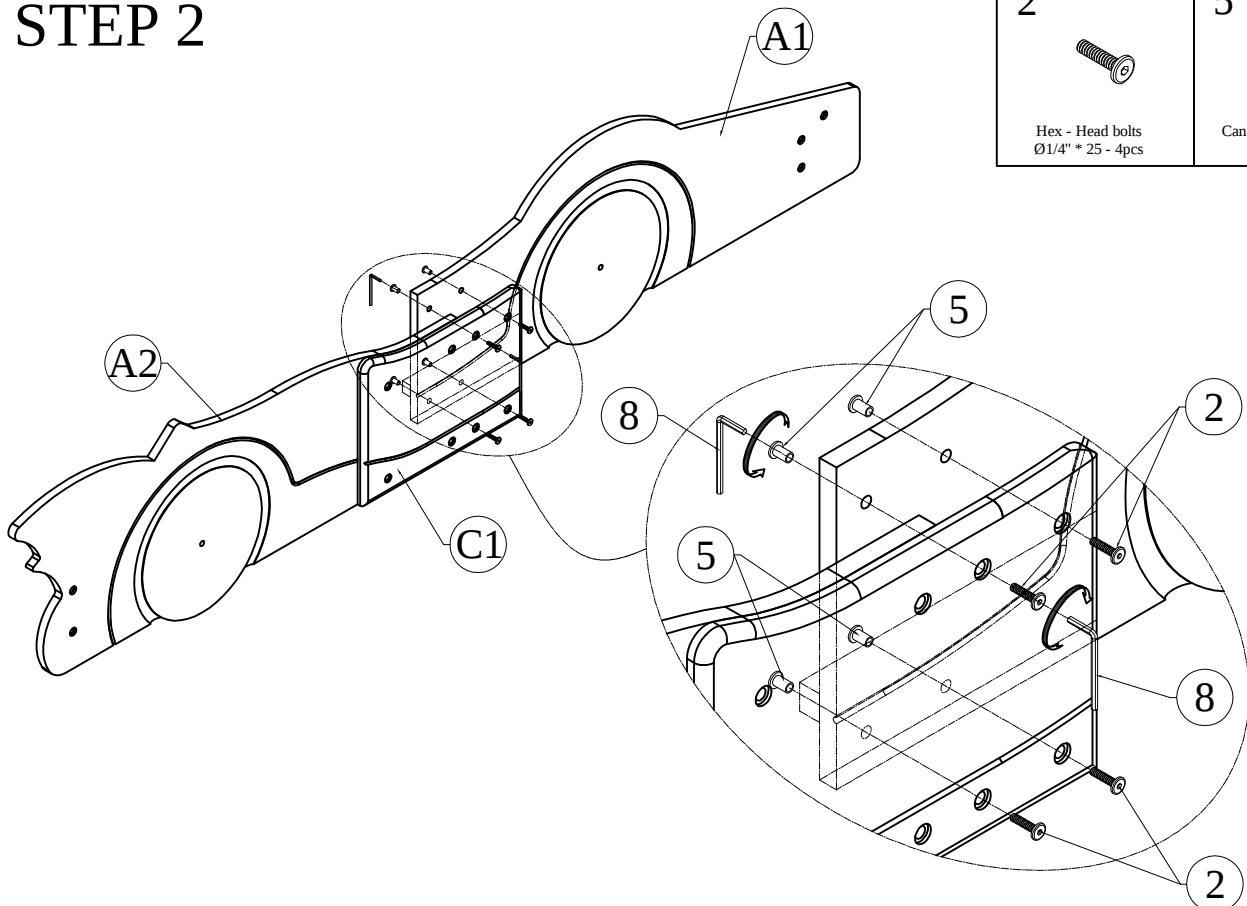

2



Hex - Head bolts
Ø1/4" * 25 - 4pcs

5



Canopy head though
Ø1/4" - 4pcs

STEP 3

2




Hex - Head bolts
Ø1/4" * 25 - 4pcs

5



Canopy head though
Ø1/4" - 4pcs

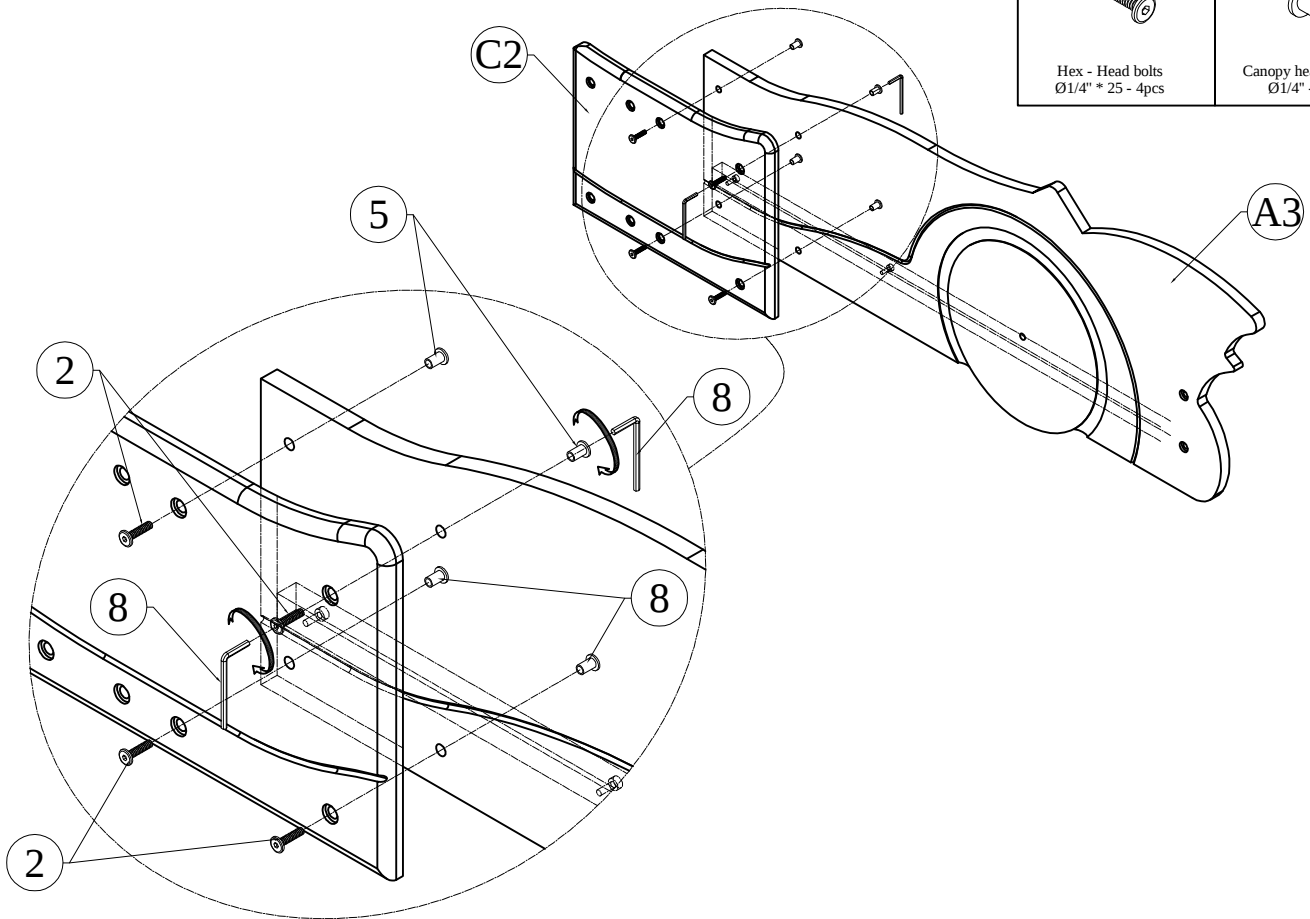

STEP 4

2




Hex - Head bolts
Ø1/4" * 25 - 4pcs

5



Canopy head though
Ø1/4" - 4pcs

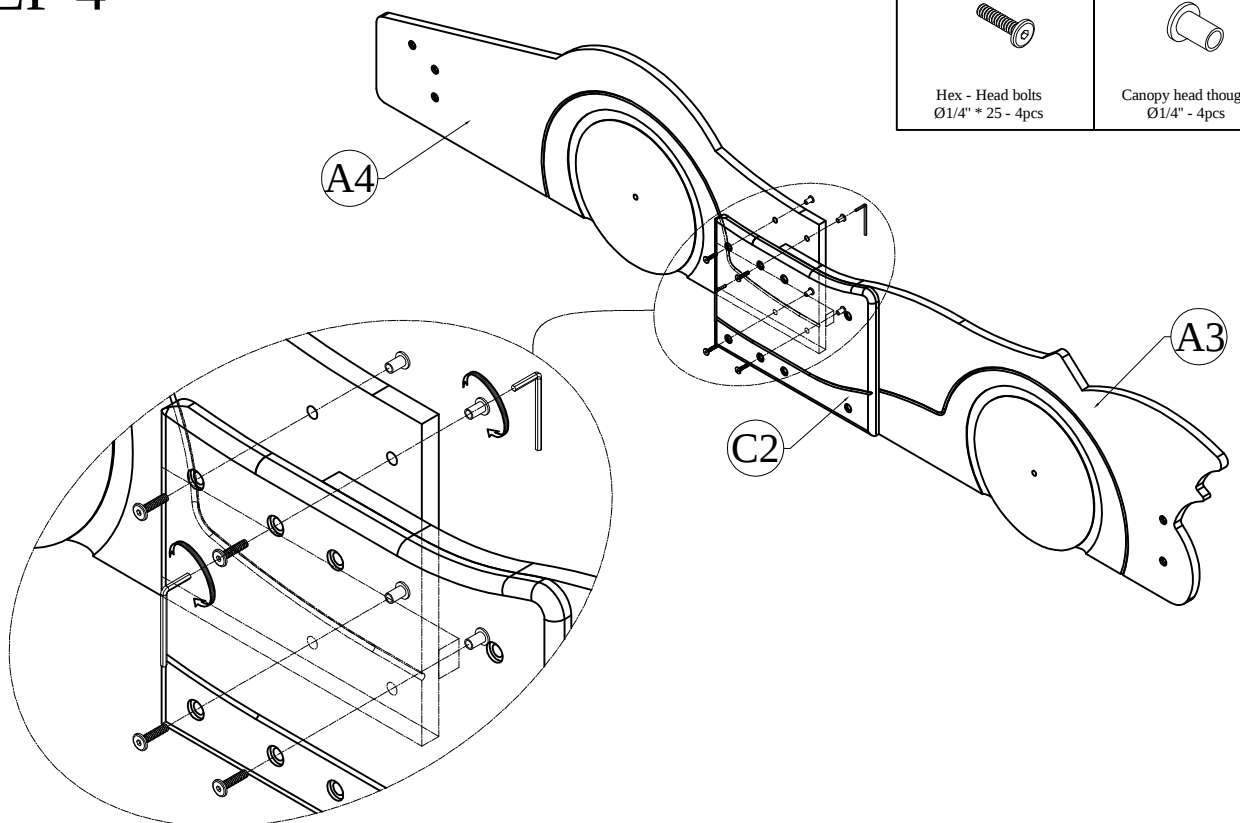

STEP 5

1



Hex - Head bolts
Ø1/4" * 60- 10pcs

4




Horizontal - Hold bolts
Ø1/4" - 10pcs

9



Wood dowel
Ø8 * 30 - 8pcs

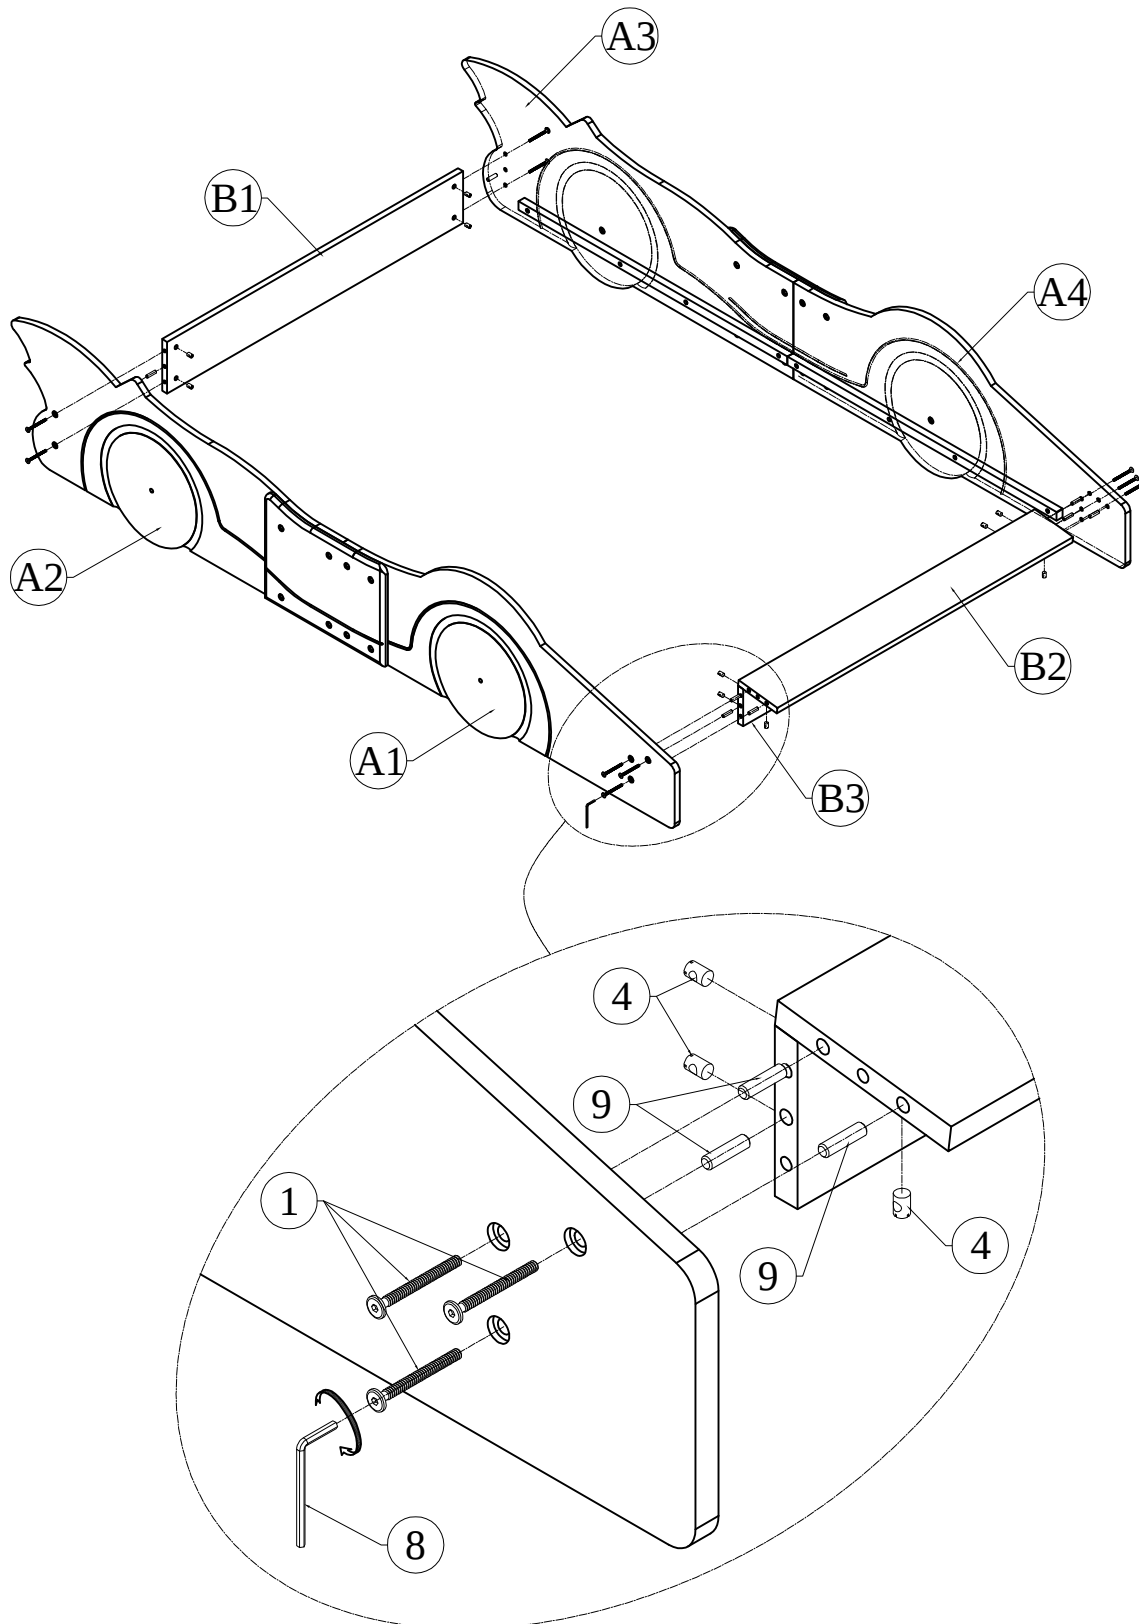

STEP 6

3





Hex - Head bolts
Ø1/4" * 15 - 4pcs

5



Canopy head through
Ø1/4" - 4pcs

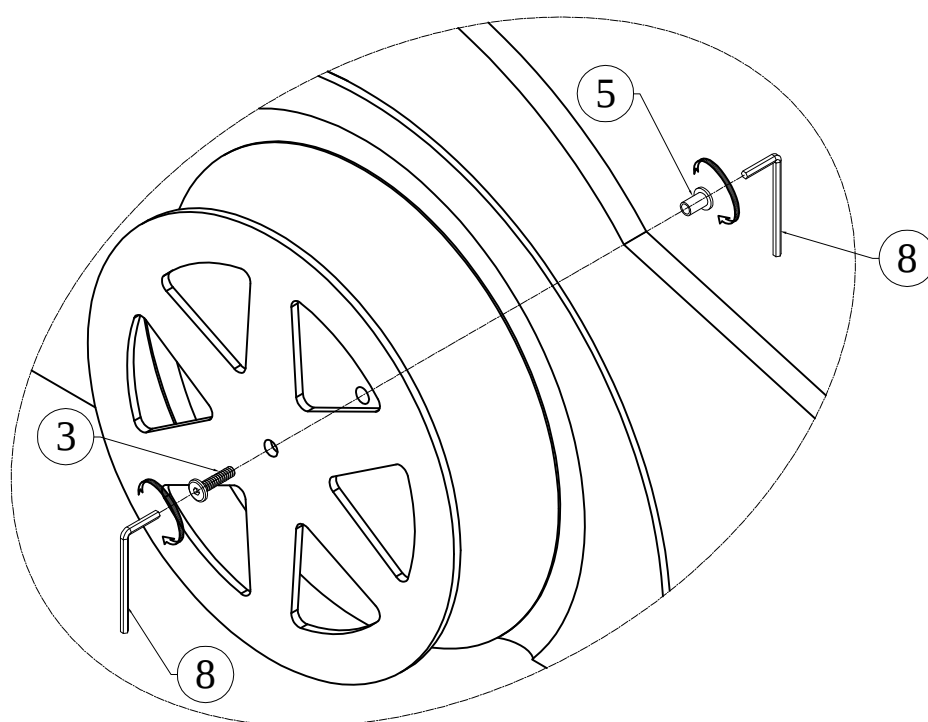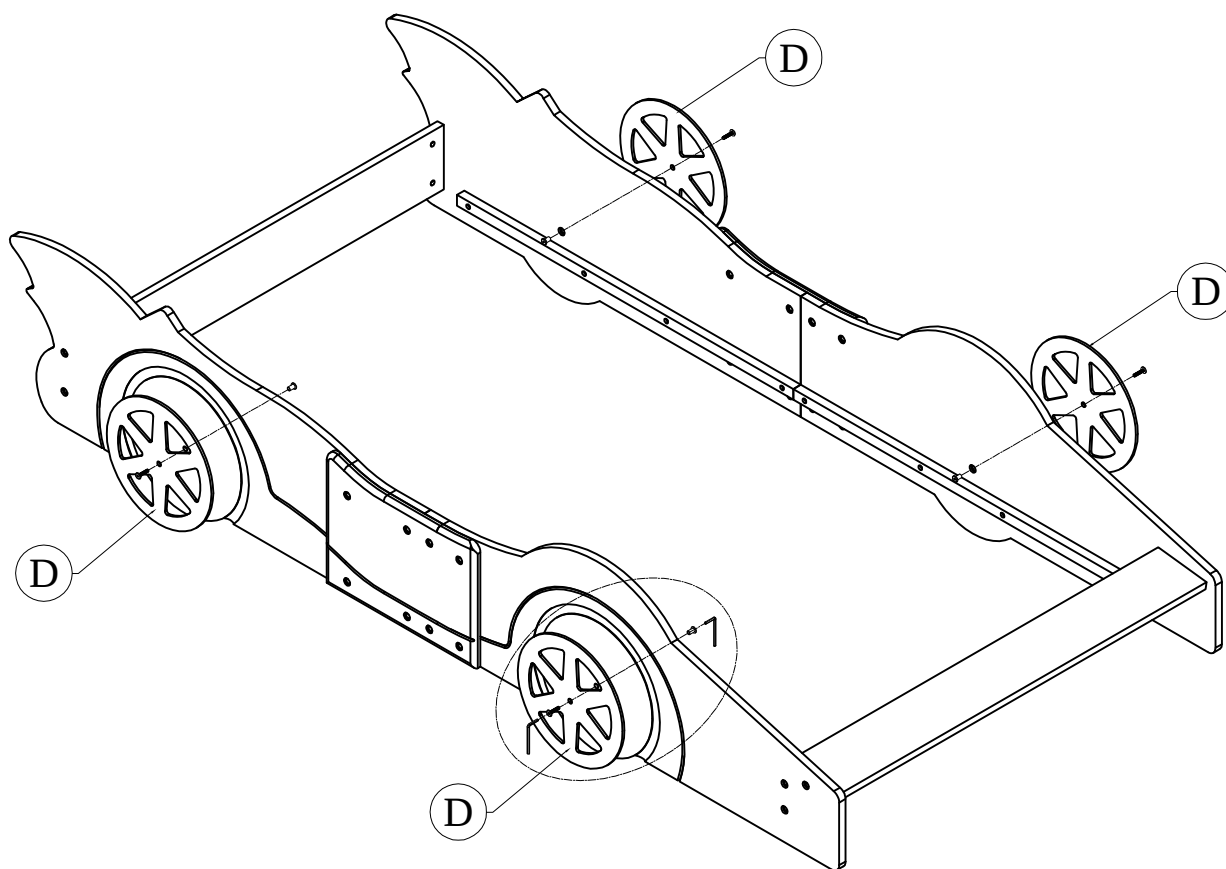


STEP 10

7



Wood crews
M4 * 25 - 16pcs

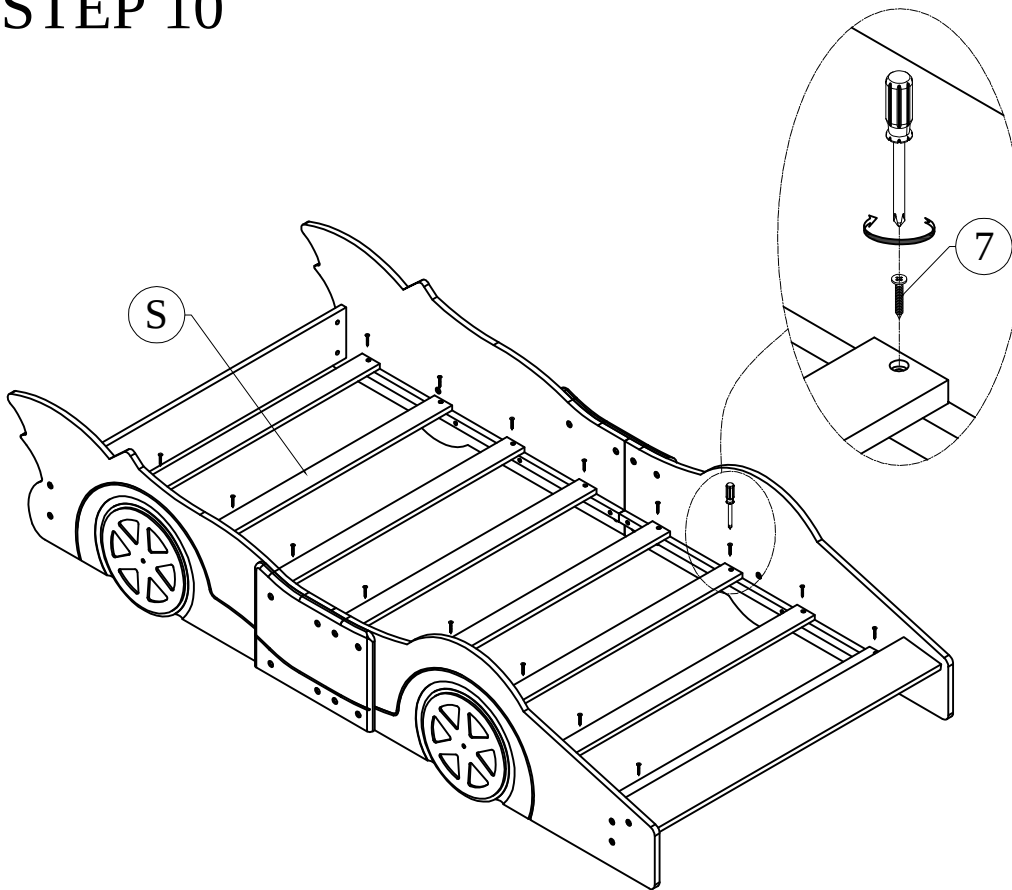

COMPLETED

