

J9P002

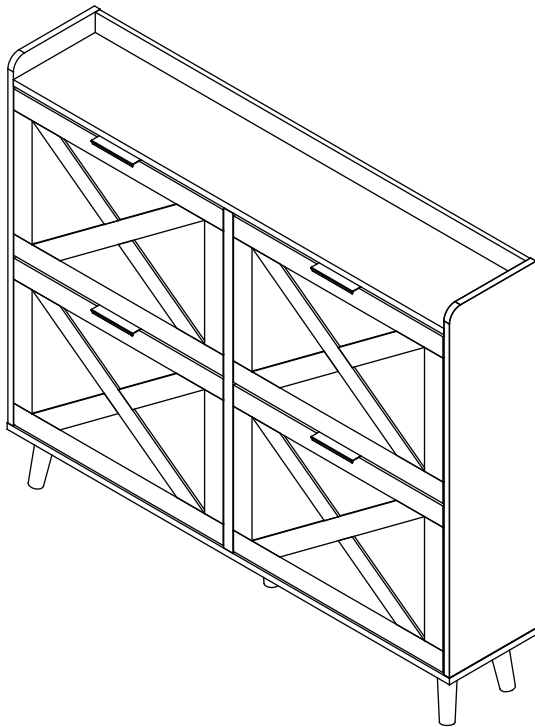

Because it's a narrow cabinet, it must permanently be fixed to the wall with the included anti-tipping device to prevent the cabinet from tipping over. It will be very stable and safe when locked on the wall.

Please see page 15 for steps to lock the wall.


This product requires (2 hours) for one person to install; if two people work together, it will take (1 hour). The product requires (2 people) for installation. Please carefully review the installation instructions before proceeding. Thank you!

As this item contains many parts, please read the installation instruction carefully before installation. Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start

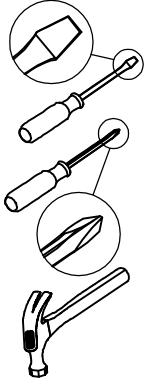


- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification

Not actual size

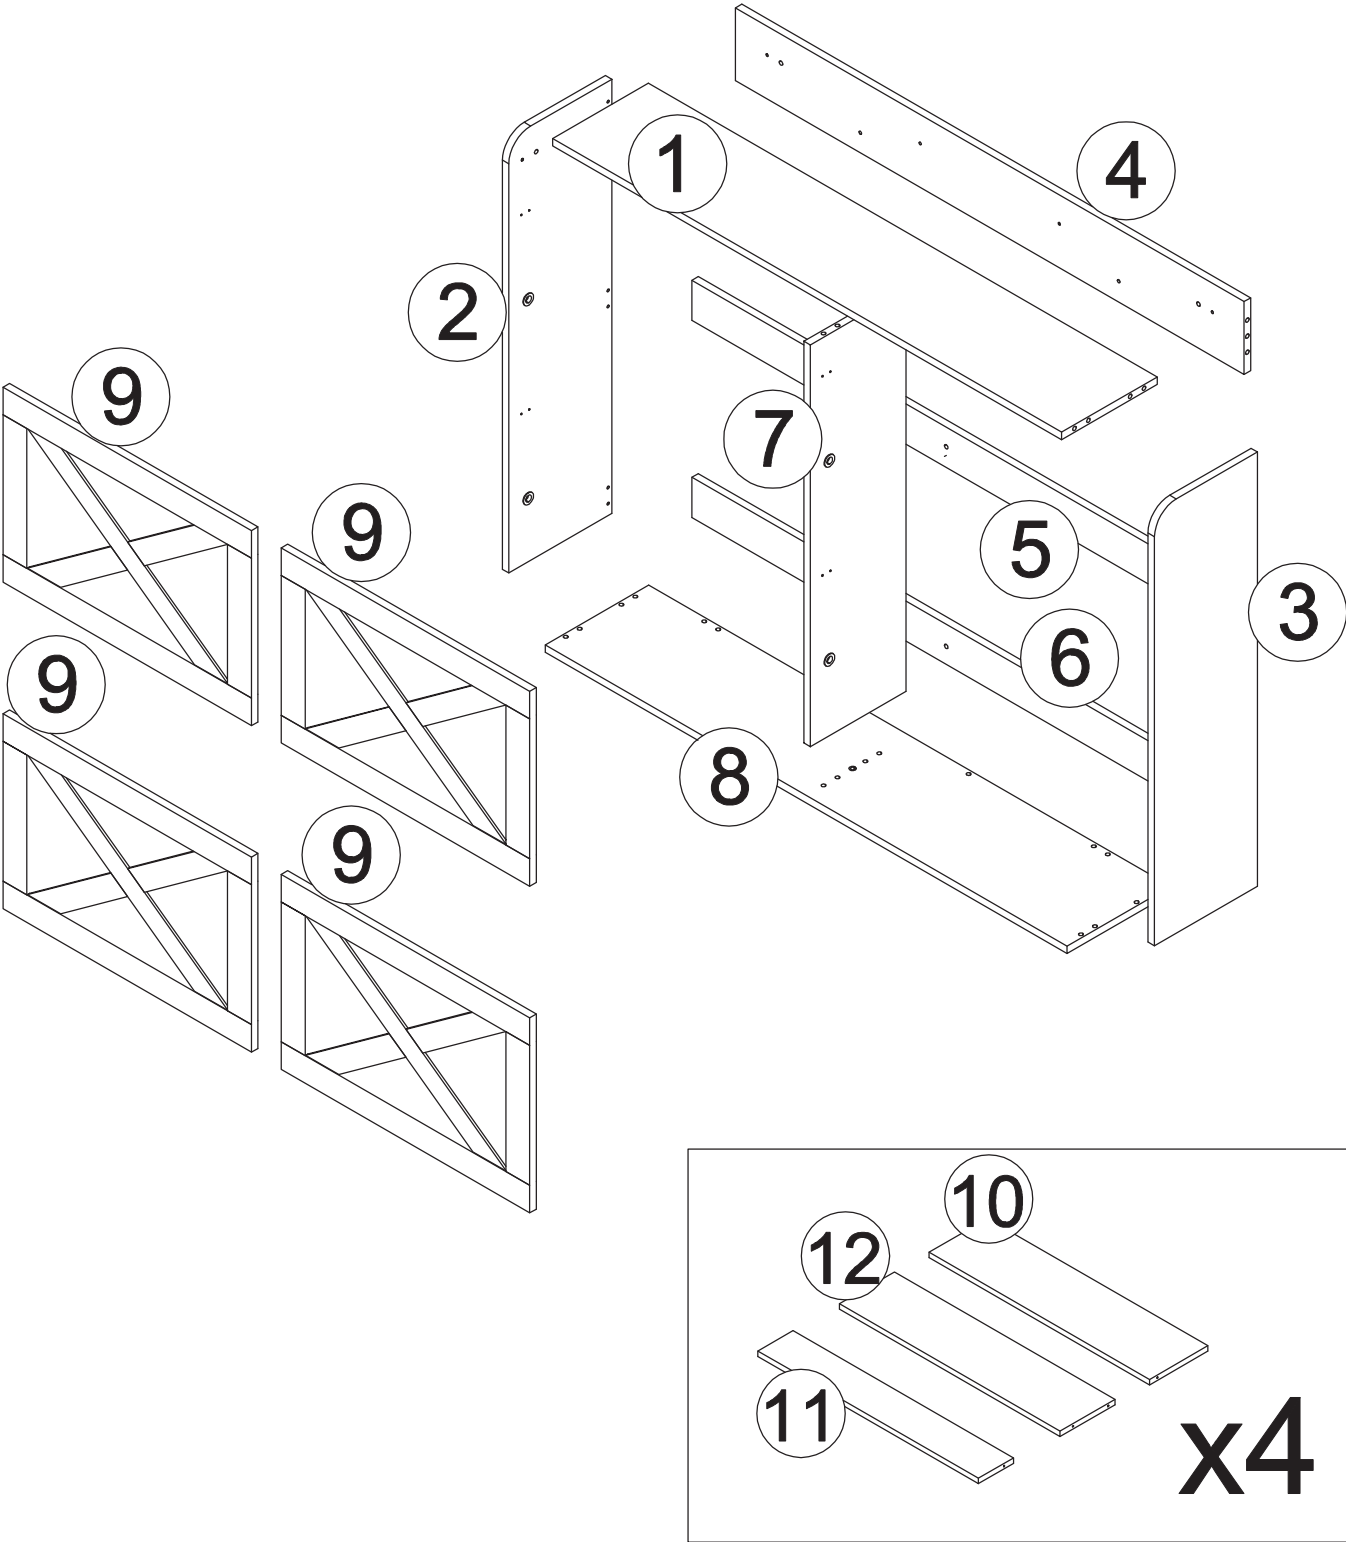


Board Identification


Not actual size

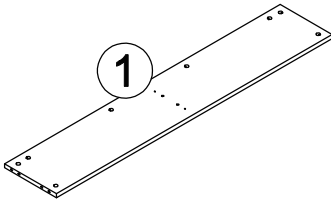


1
Top panel
Qty:1

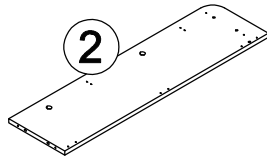


2
Left side panel
Qty:1

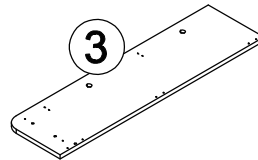


3
Right side panel
Qty:1

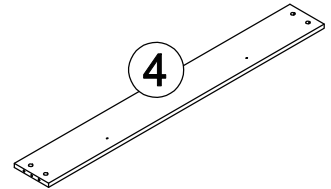


4
Upper back panel
Qty:1

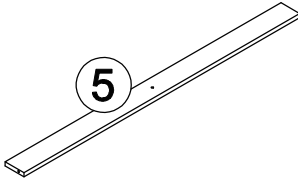


5
Upper back brace
Qty:1

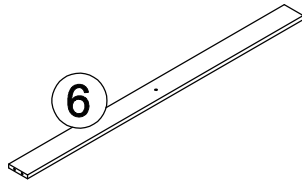


6
Lower back brace
Qty:1

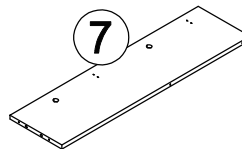


7
Neutral board
Qty:1

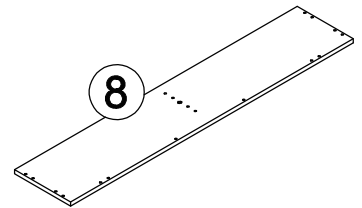


8
Bottom panel
Qty:1

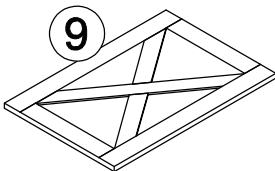


9
Left door panel
Qty:4

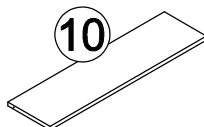

10
Shoe box layer
Qty:4




11
Shoe box bottom
Qty:4

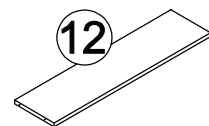


12
Shoe box back
Qty:4


Part List

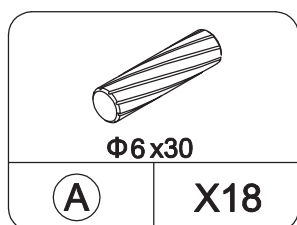


WOOD DOWEL
spare:2

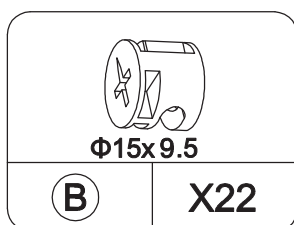


CAM LOCK
spare:2

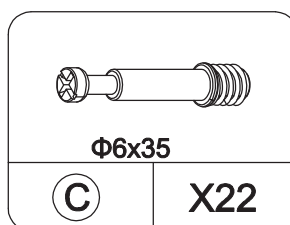


CAM BOLT
spare:2

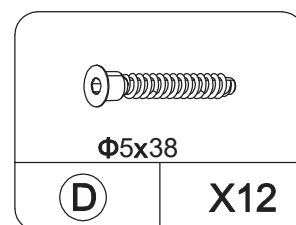


SCREW
spare:2

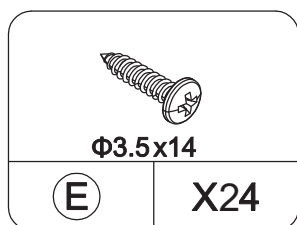


SCREW
spare:2

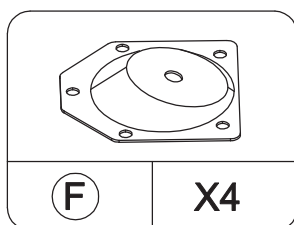


METAL PLATE

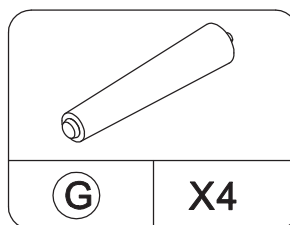


SOLID WOODEN LEGS

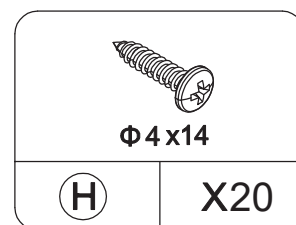


SCREW
spare:2

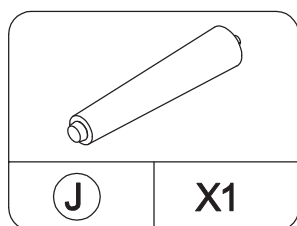


WOODEN LEG

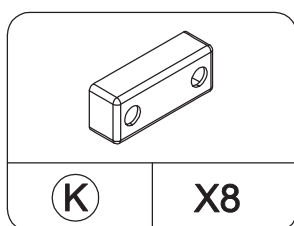


DOOR STOPPER

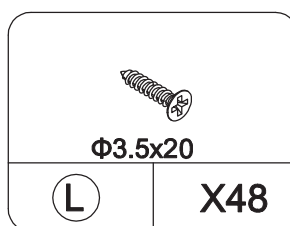


SCREW
spare:3

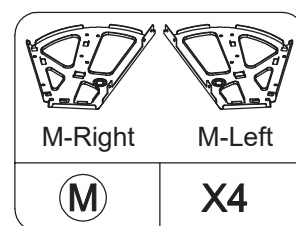


METAL FLIP FRAME

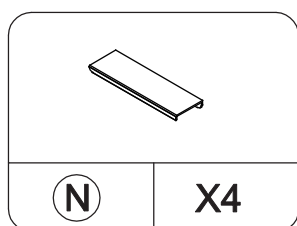


HANDLE

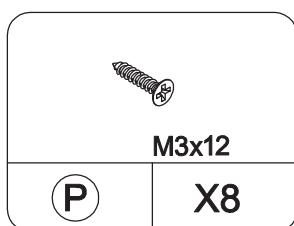


BOLT

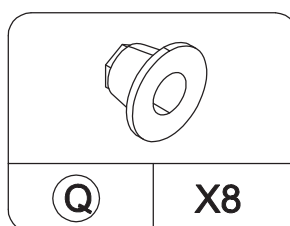


CIRCULAR AXIS

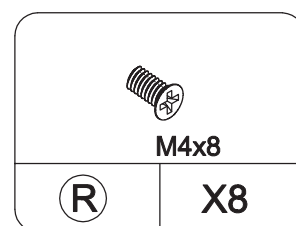


BOLT

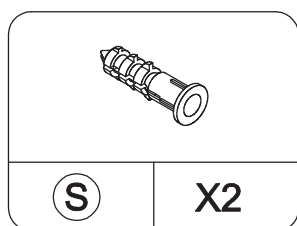


WALL ANCHOR

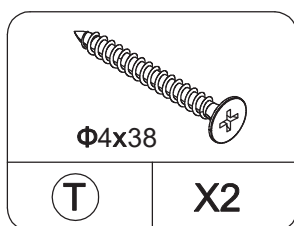

SCREW

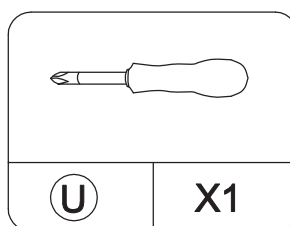

SCREW DRIVER

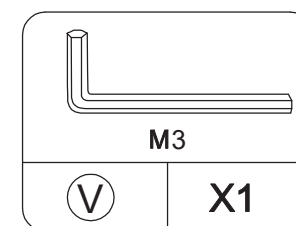


INNER HEXAGON SPANNER











Part List

Cam Lock Fastening System






Insert the cam bolt into the hole first, then insert the cam lock and lock it.

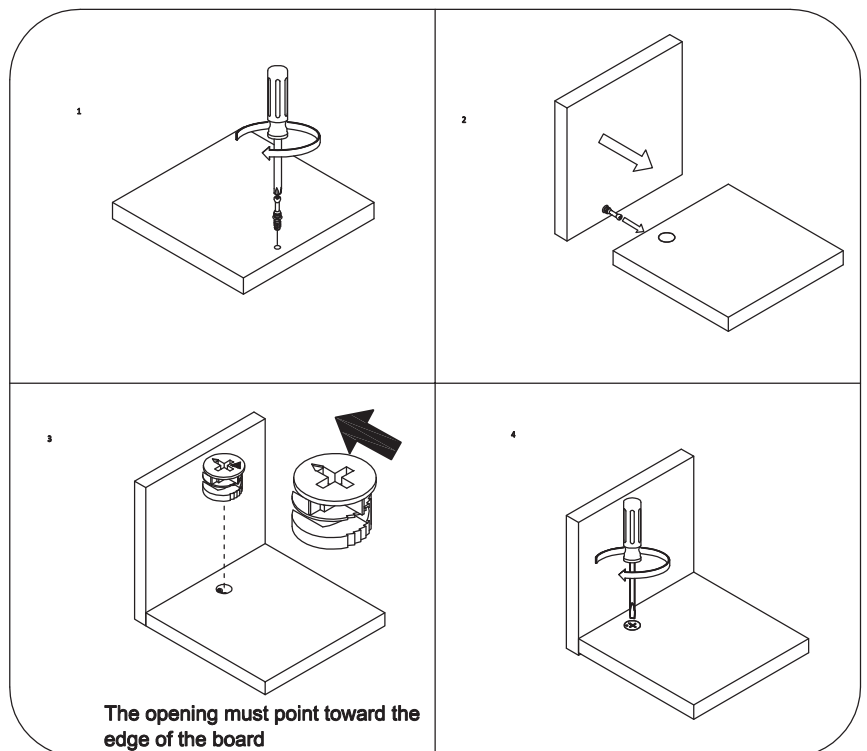

STEP1

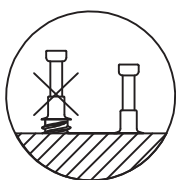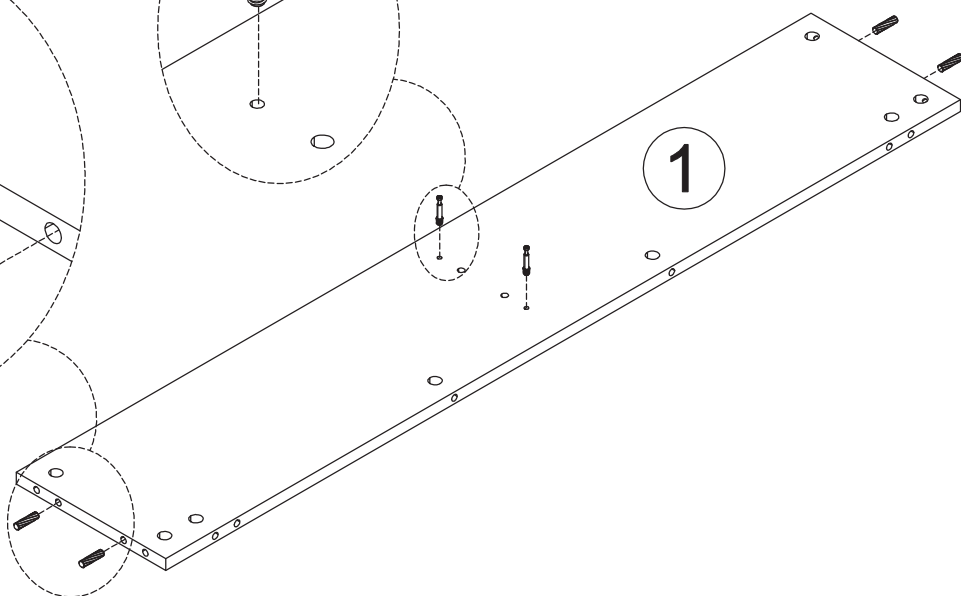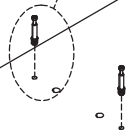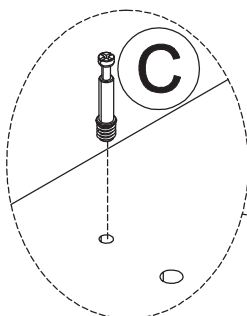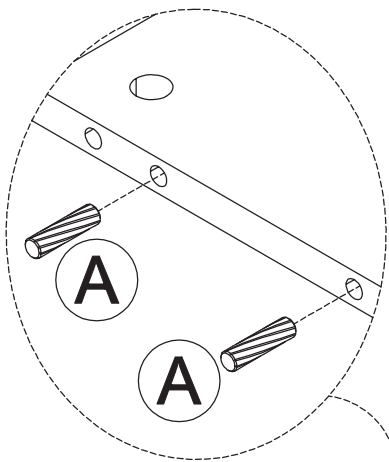
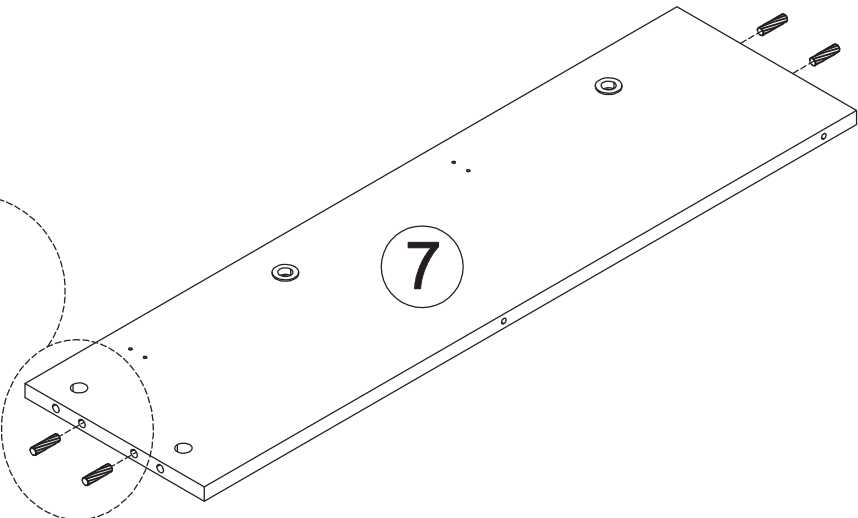
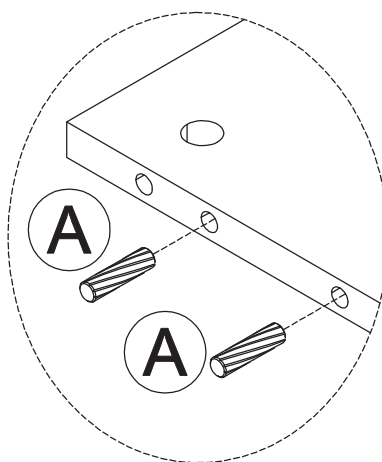
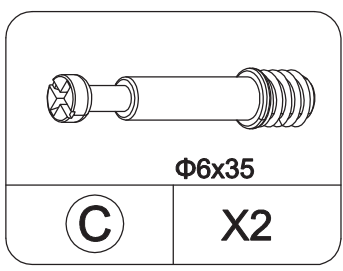
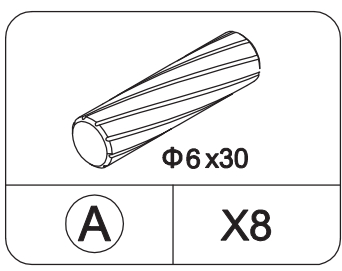
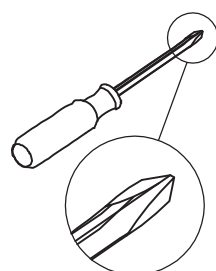


STEP2

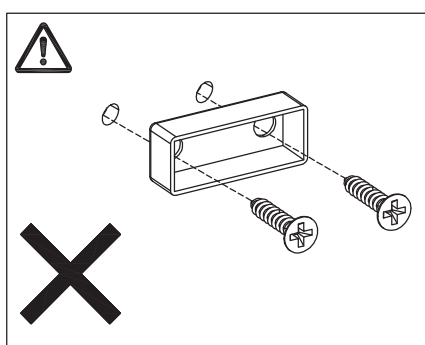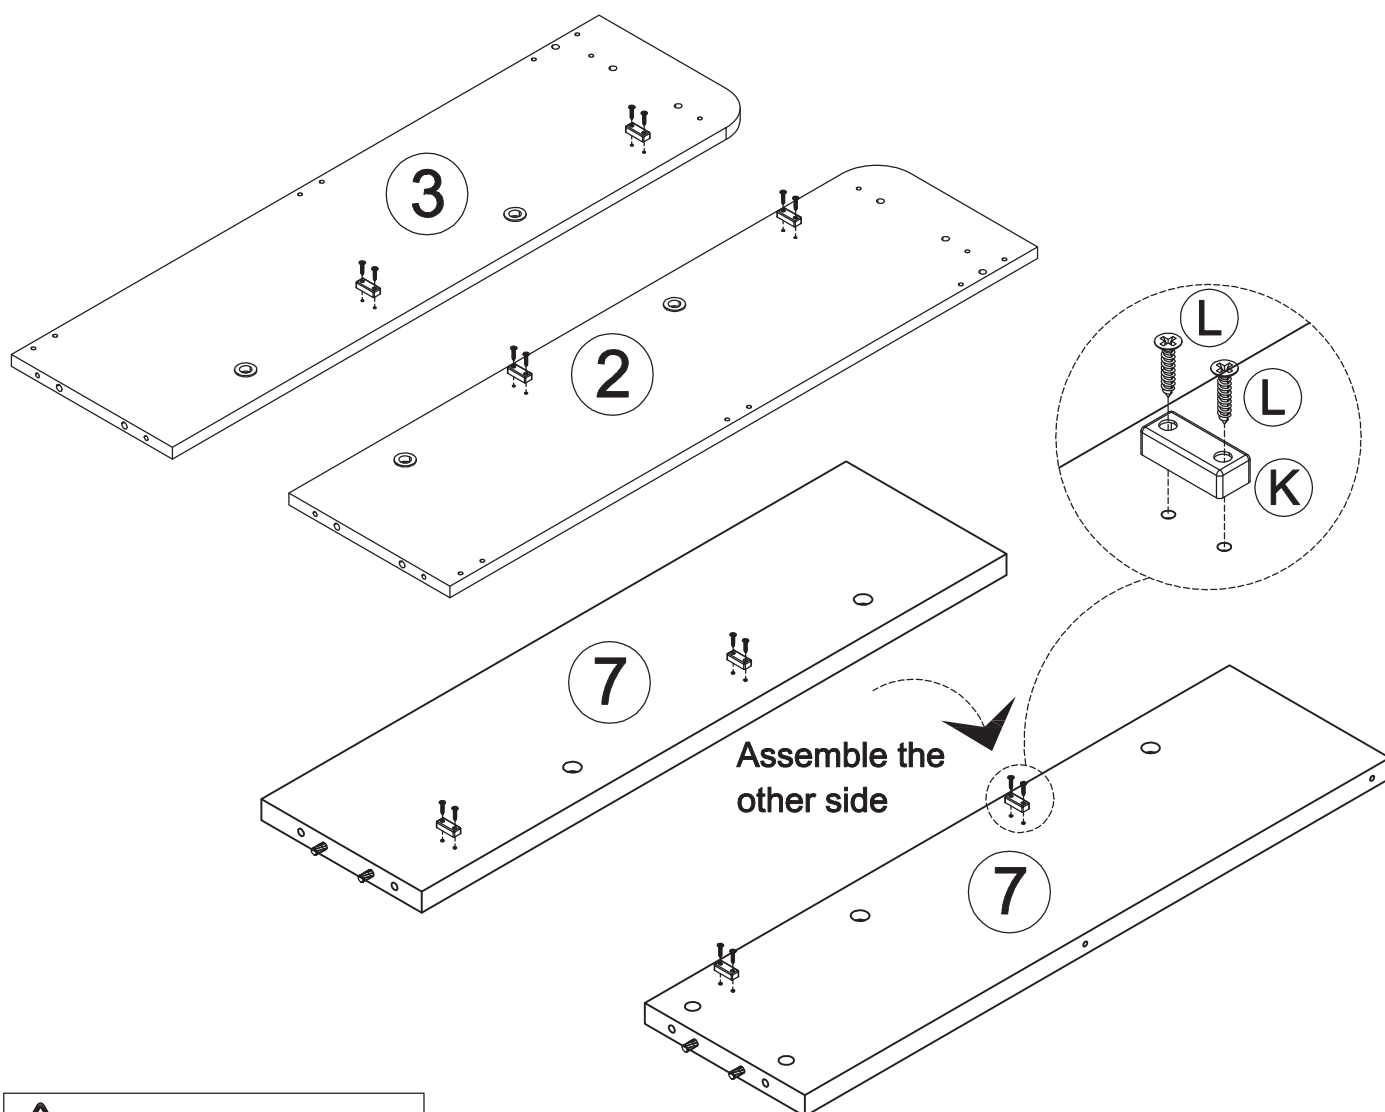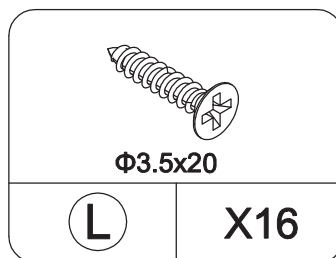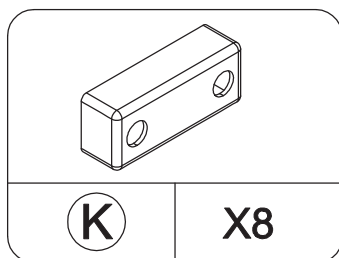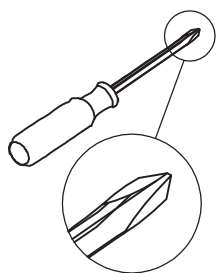


Be careful not to install the door stopper upside down, as the screws will screw through the wooden board.







STEP3

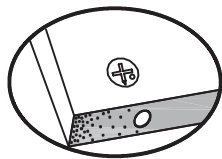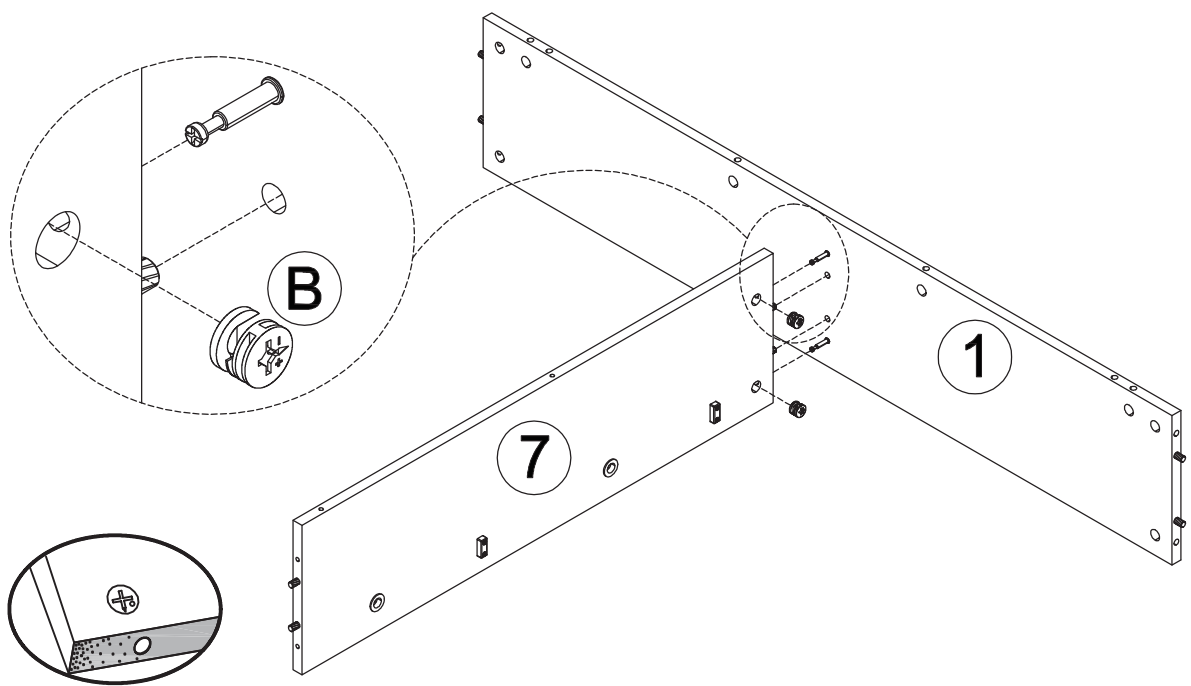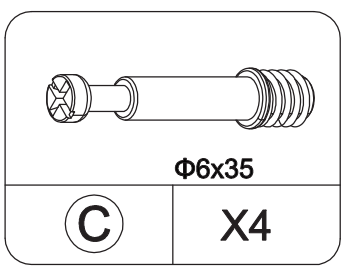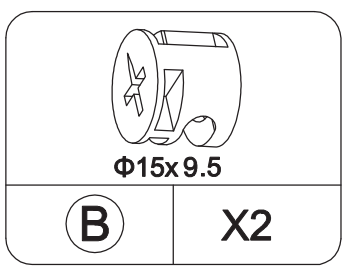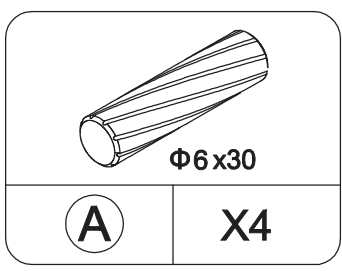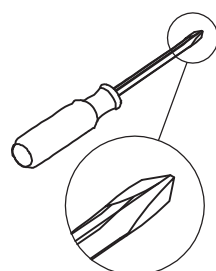


Proper orientation of CAM LOCK

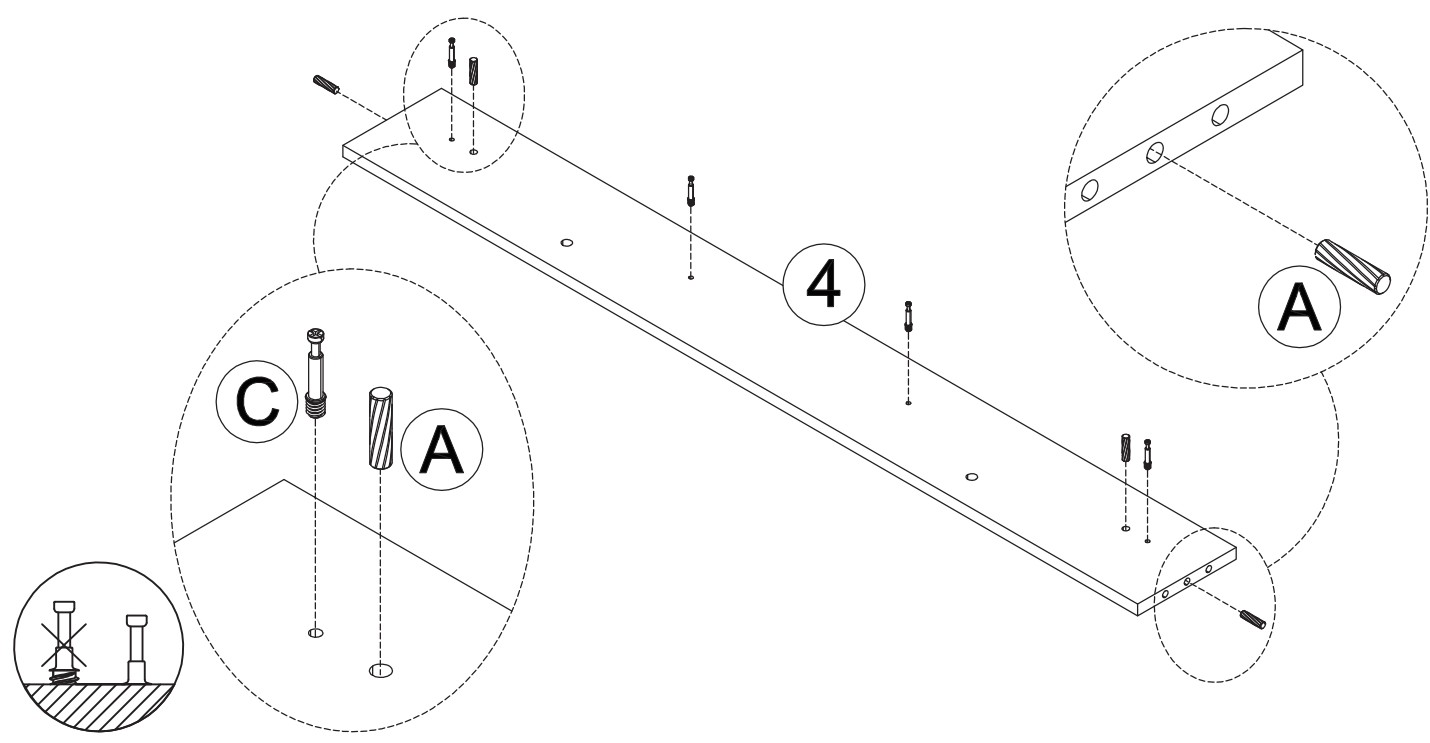




STEP4

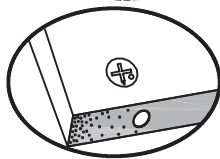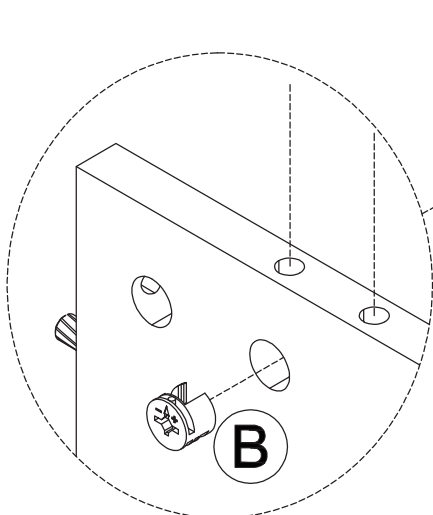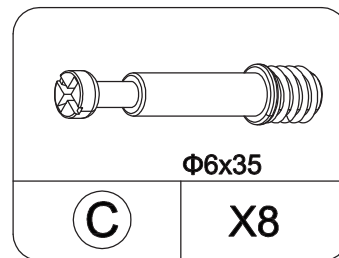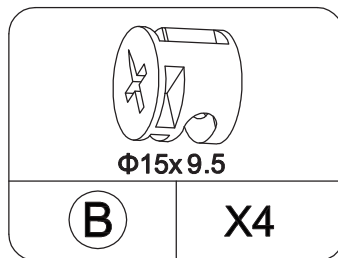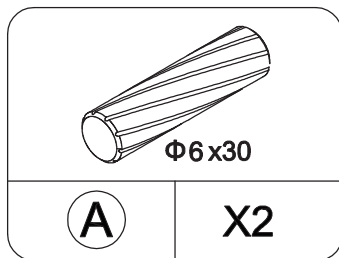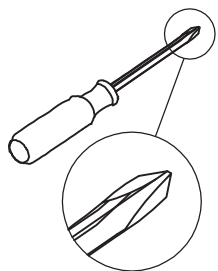




Proper orientation of CAM LOCK

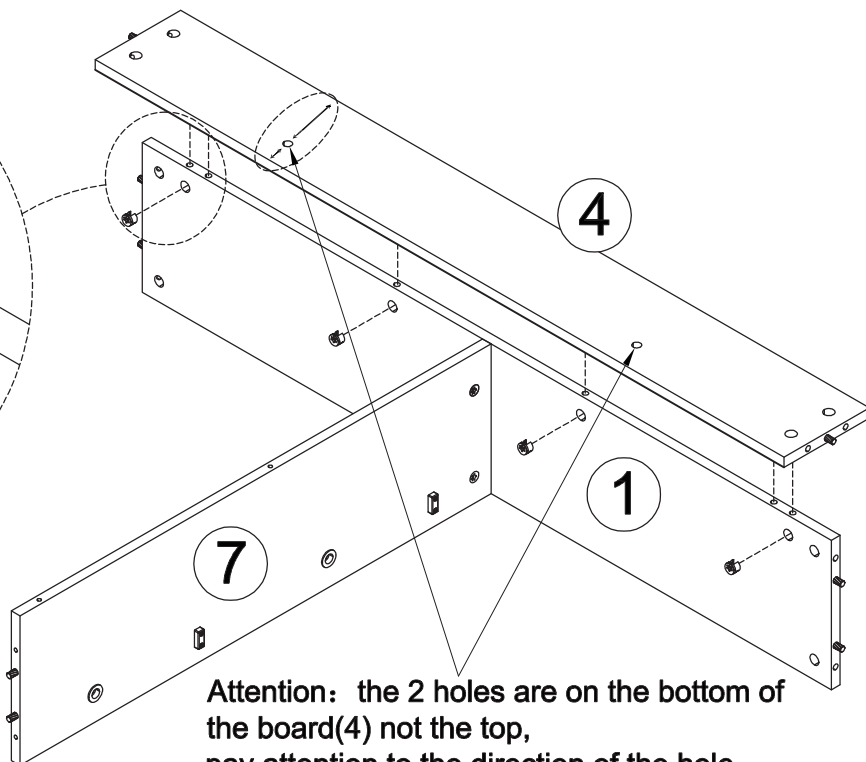



Attention: the 2 holes are on the bottom of the board(4) not the top, pay attention to the direction of the hole position.

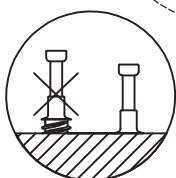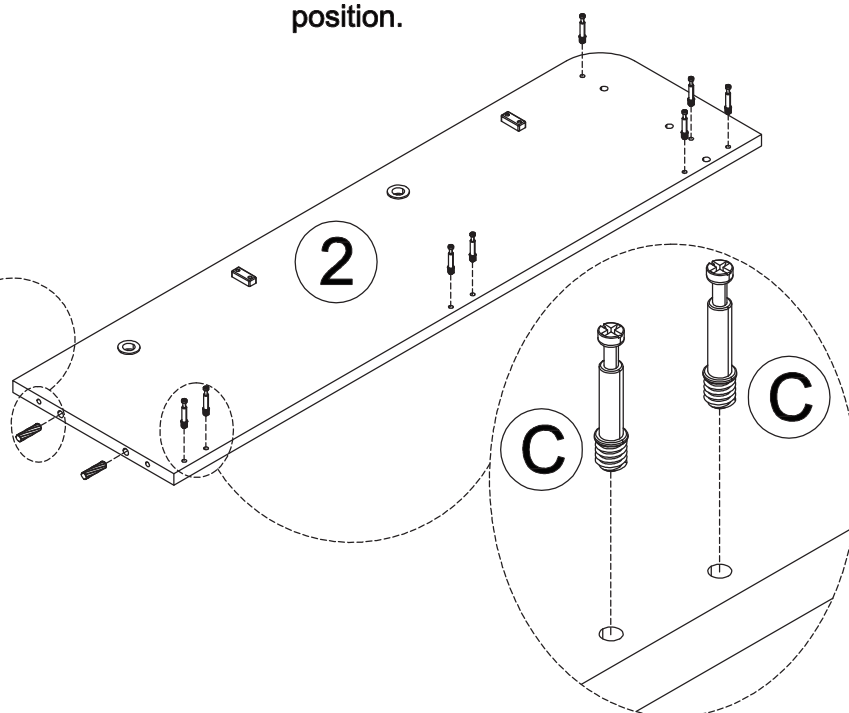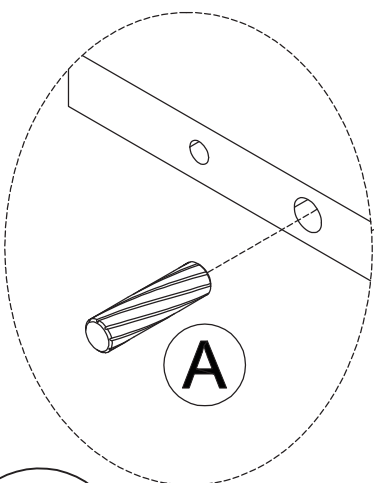


STEP5

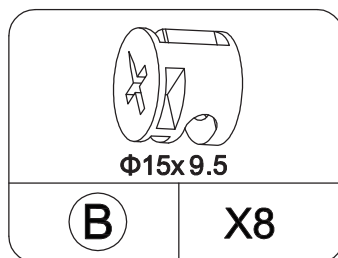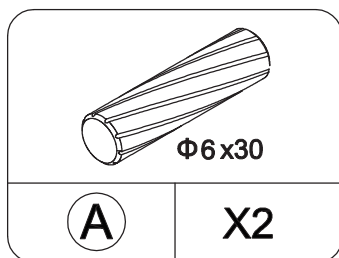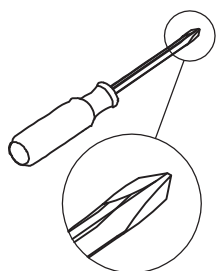


Note: If the holes are not aligned in this step, please check whether the direction of the board(4) in the previous step is installed wrong.

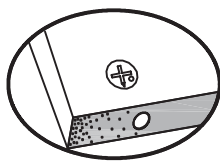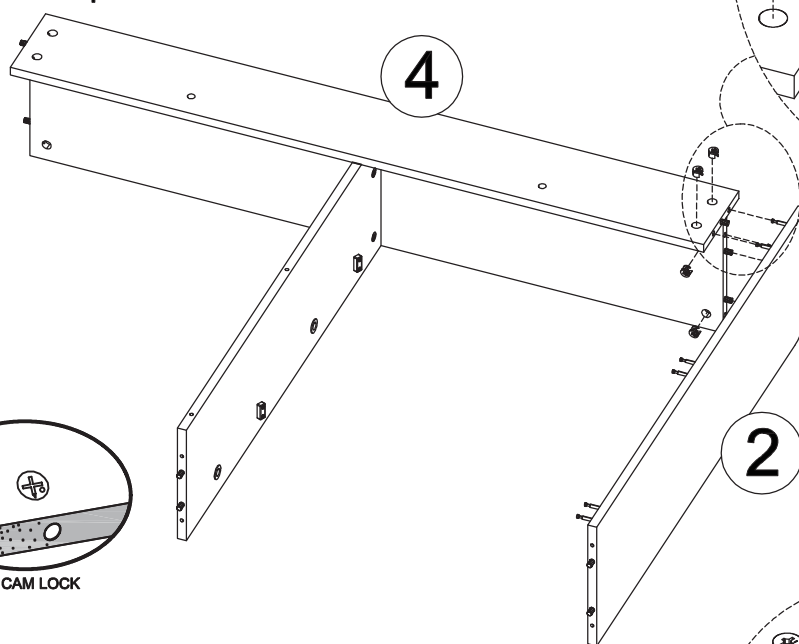

Proper orientation of CAM LOCK

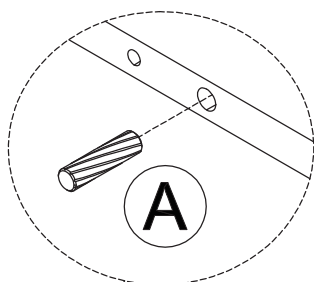

A

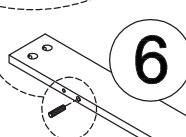


6

5


4

2

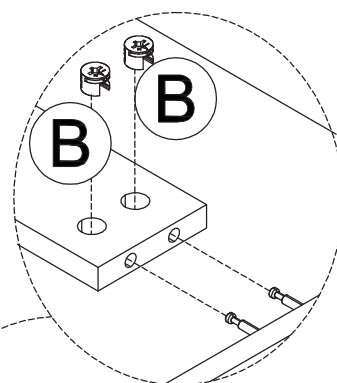













B

B

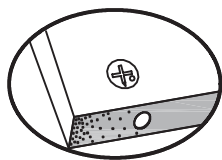







Proper orientation of CAM LOCK

STEP6

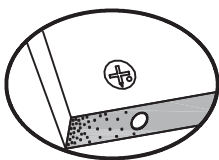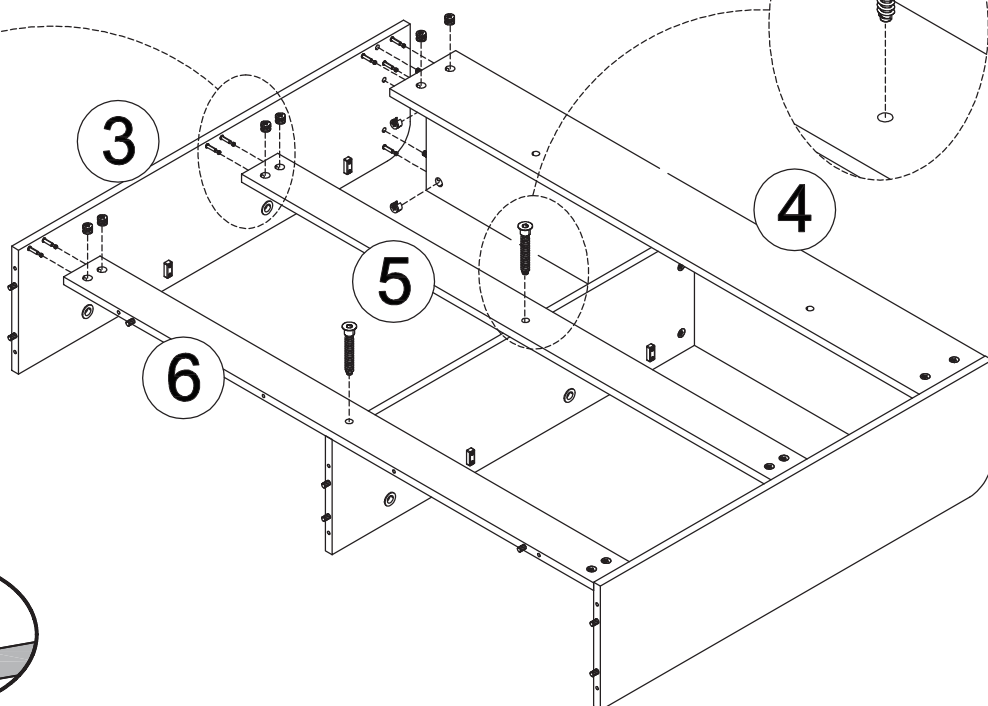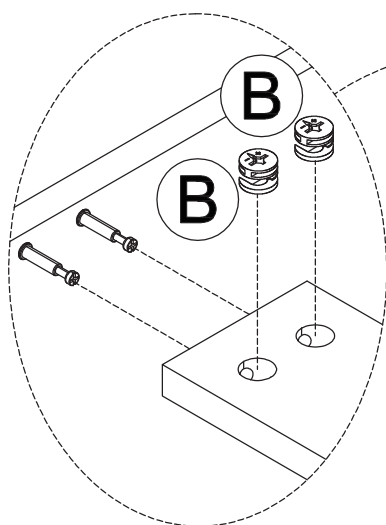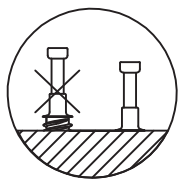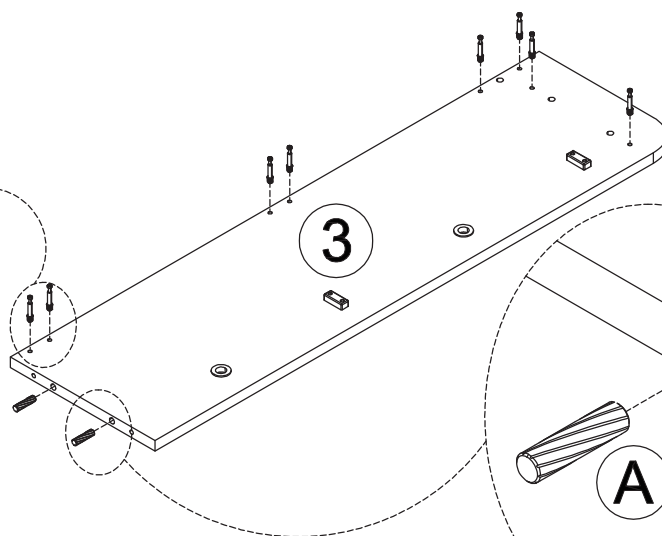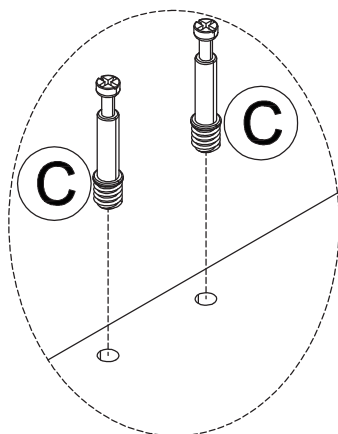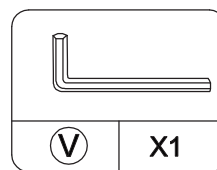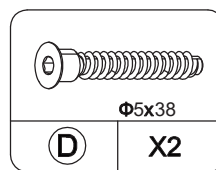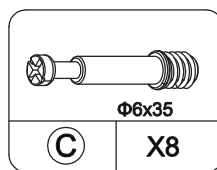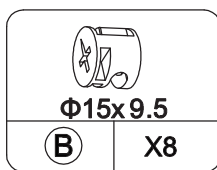
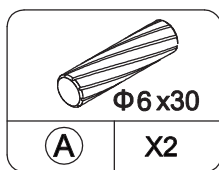
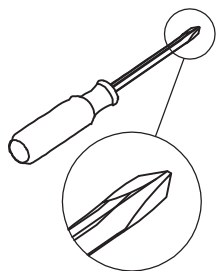


Proper orientation of CAM LOCK

STEP7

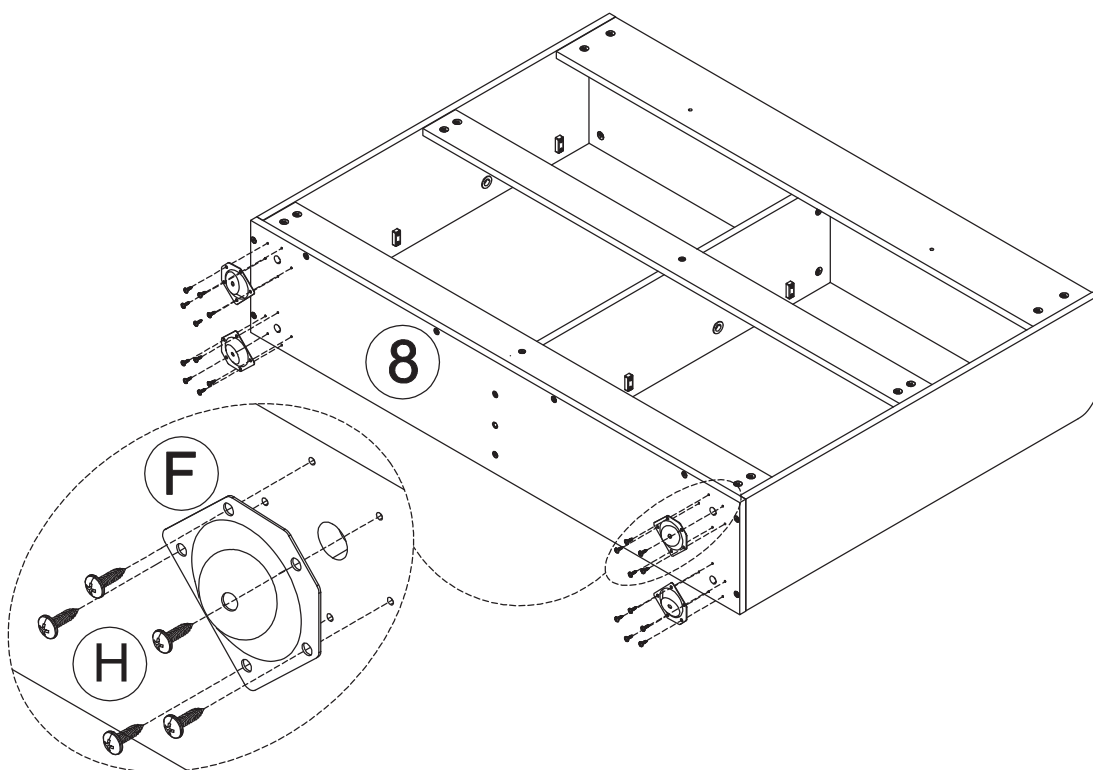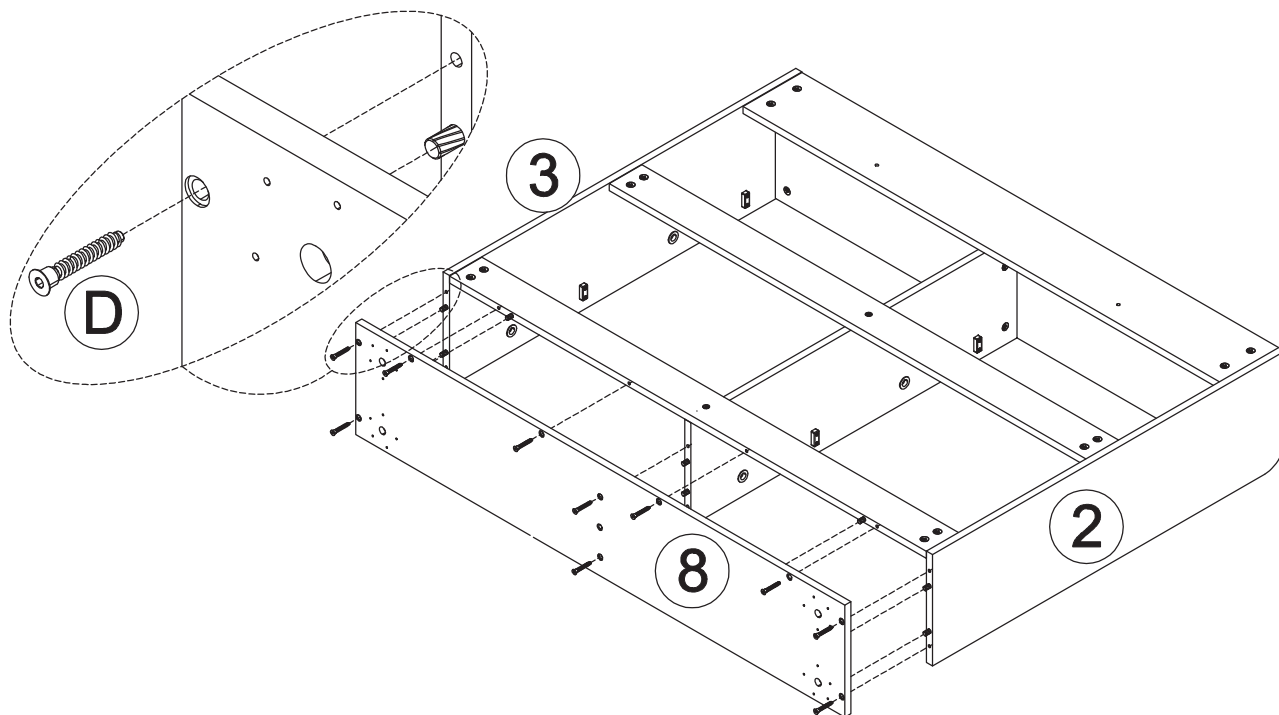
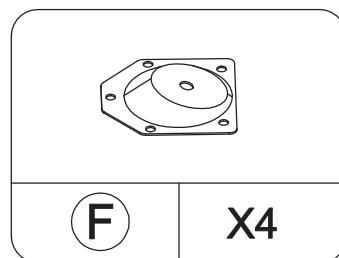
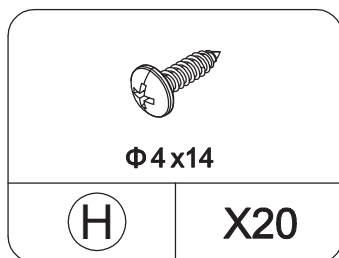
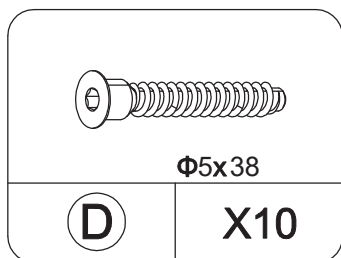
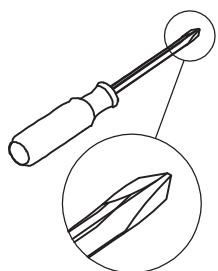


STEP8

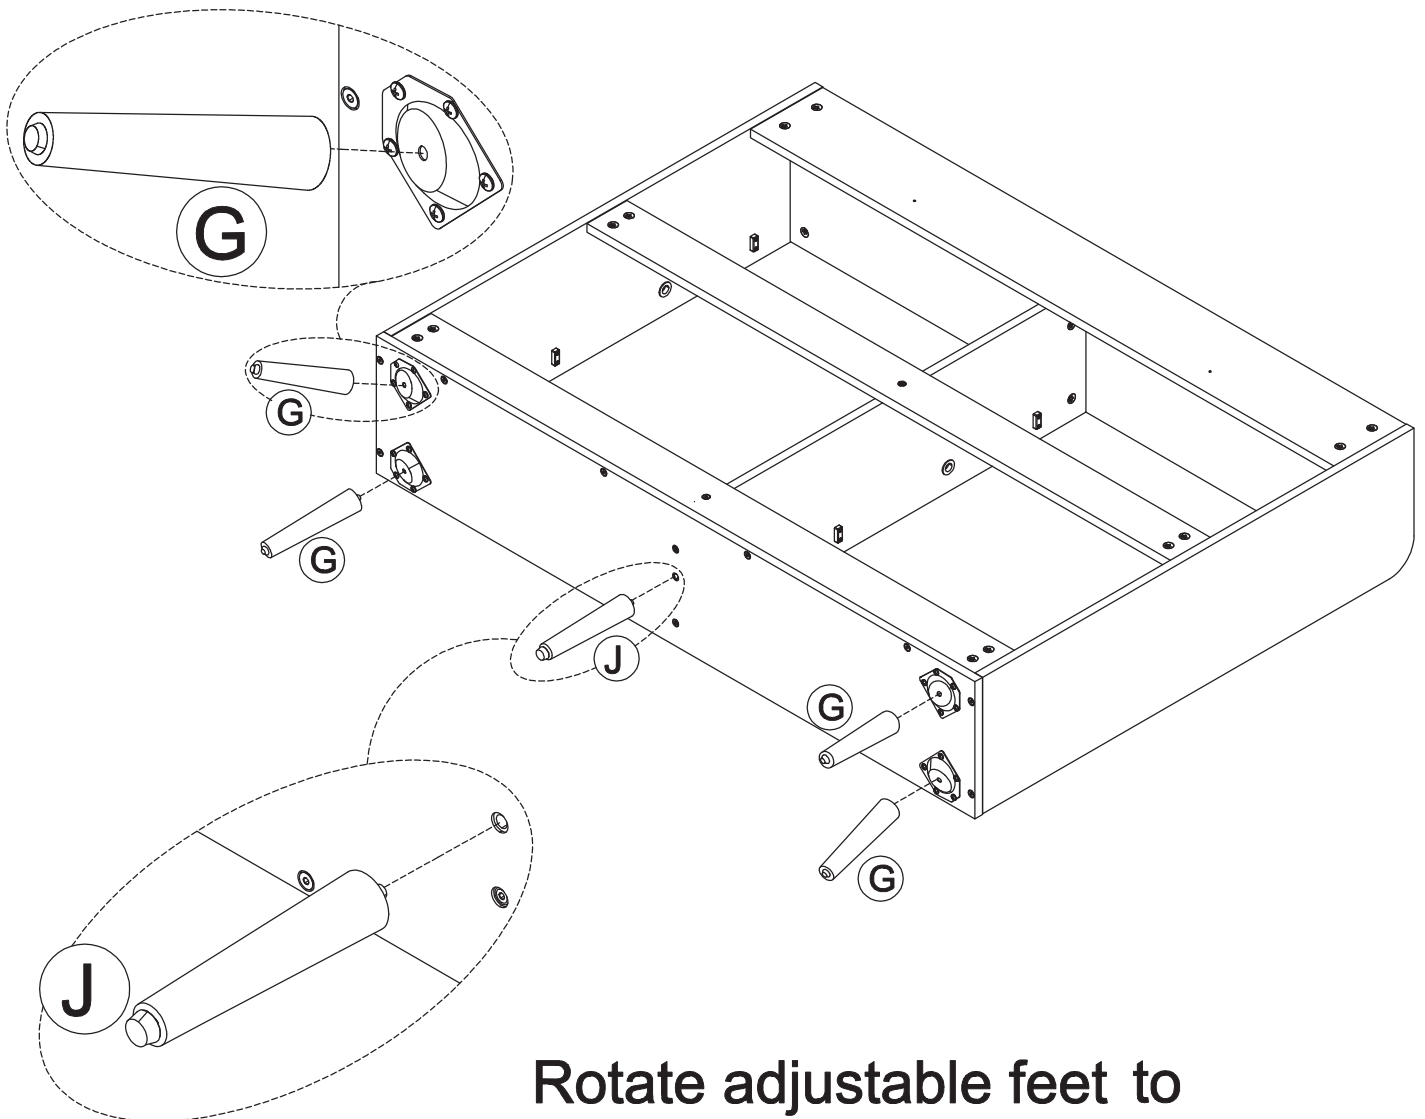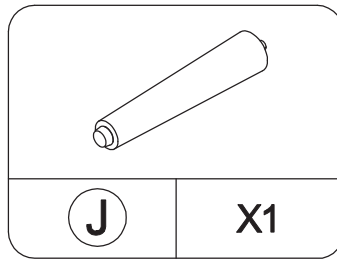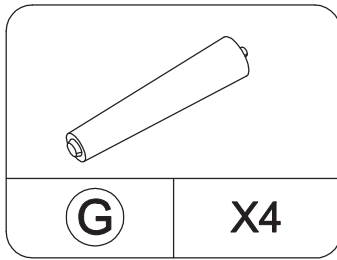

**Rotate adjustable feet to
adjust overall balance.**

STEP9

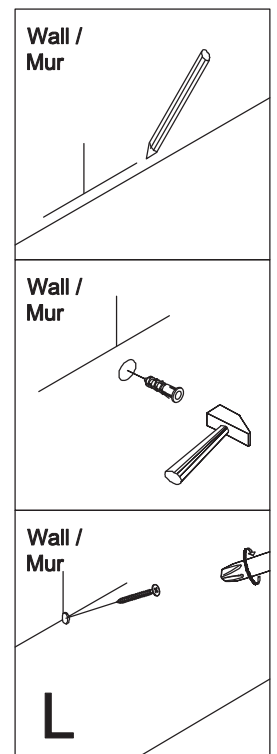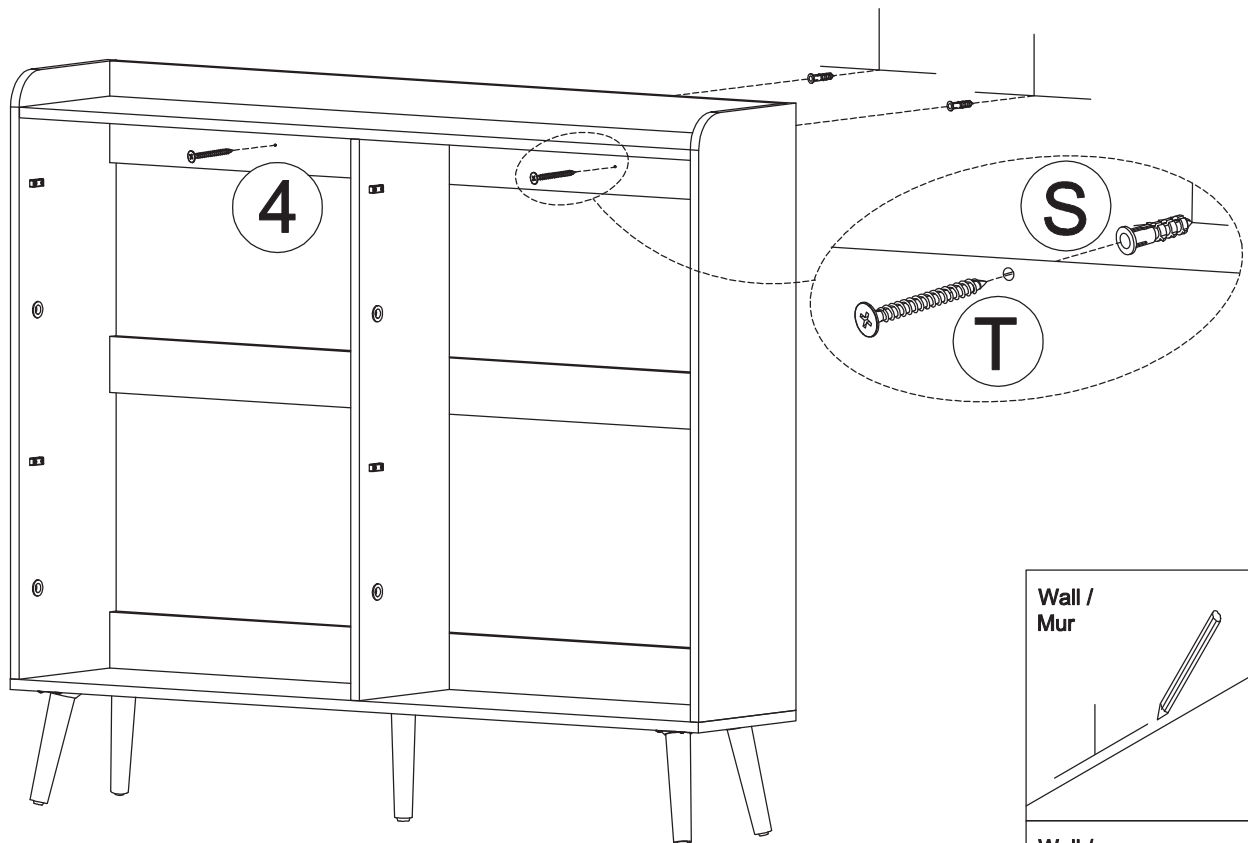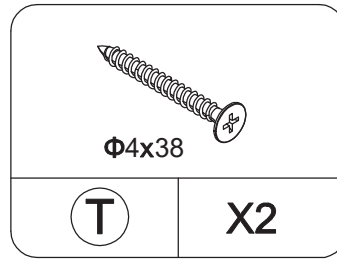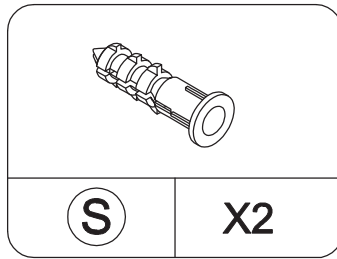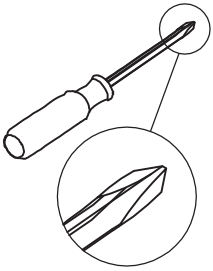

Cabinet must permanently fixed to the wall with included anti-tipping device to prevent the cabinet from tipping over.


.Mark the drill position on the wall with a pencil.

.Drill holes on the marked position using a bit.


Gently insert the wall anchor (S) into the drilled hole with the help of a hammer.


.Fixed the cabinet to the wall with provided screws (T).

STEP10




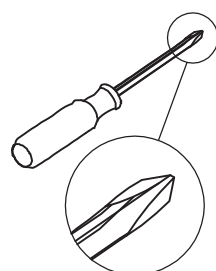


 M-Right	 M-Left
M	X4


 Φ3.5x14	
E	X24

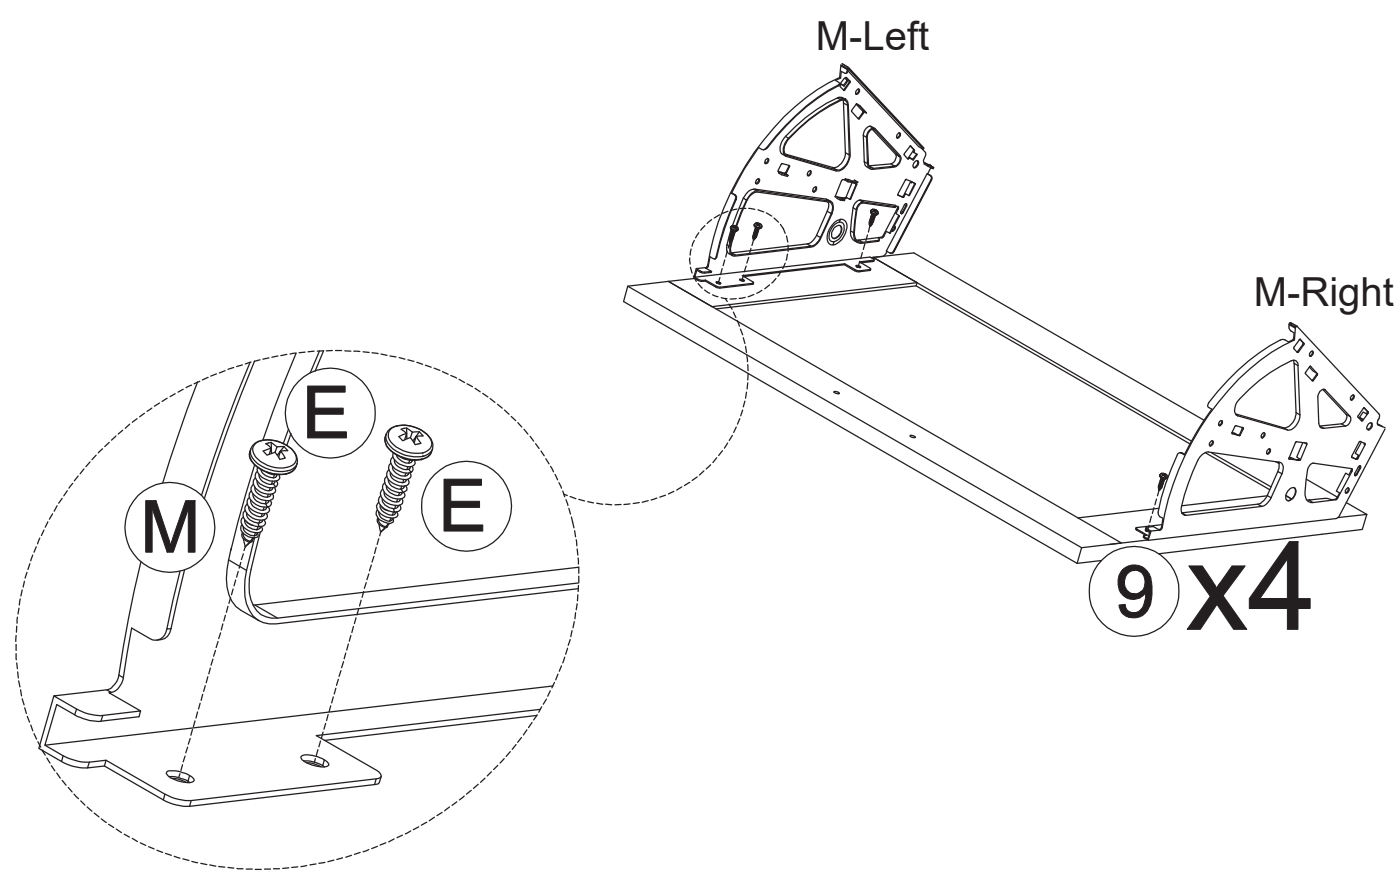



STEP11

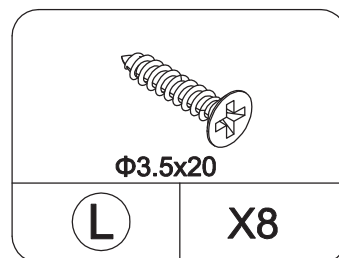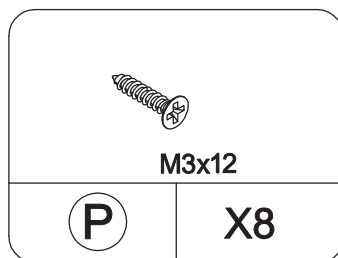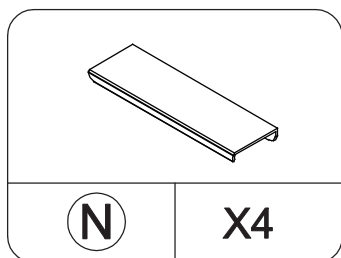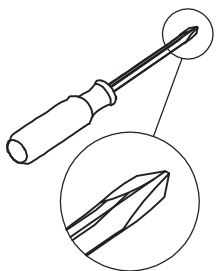


Align the hole positions
and lock the screws

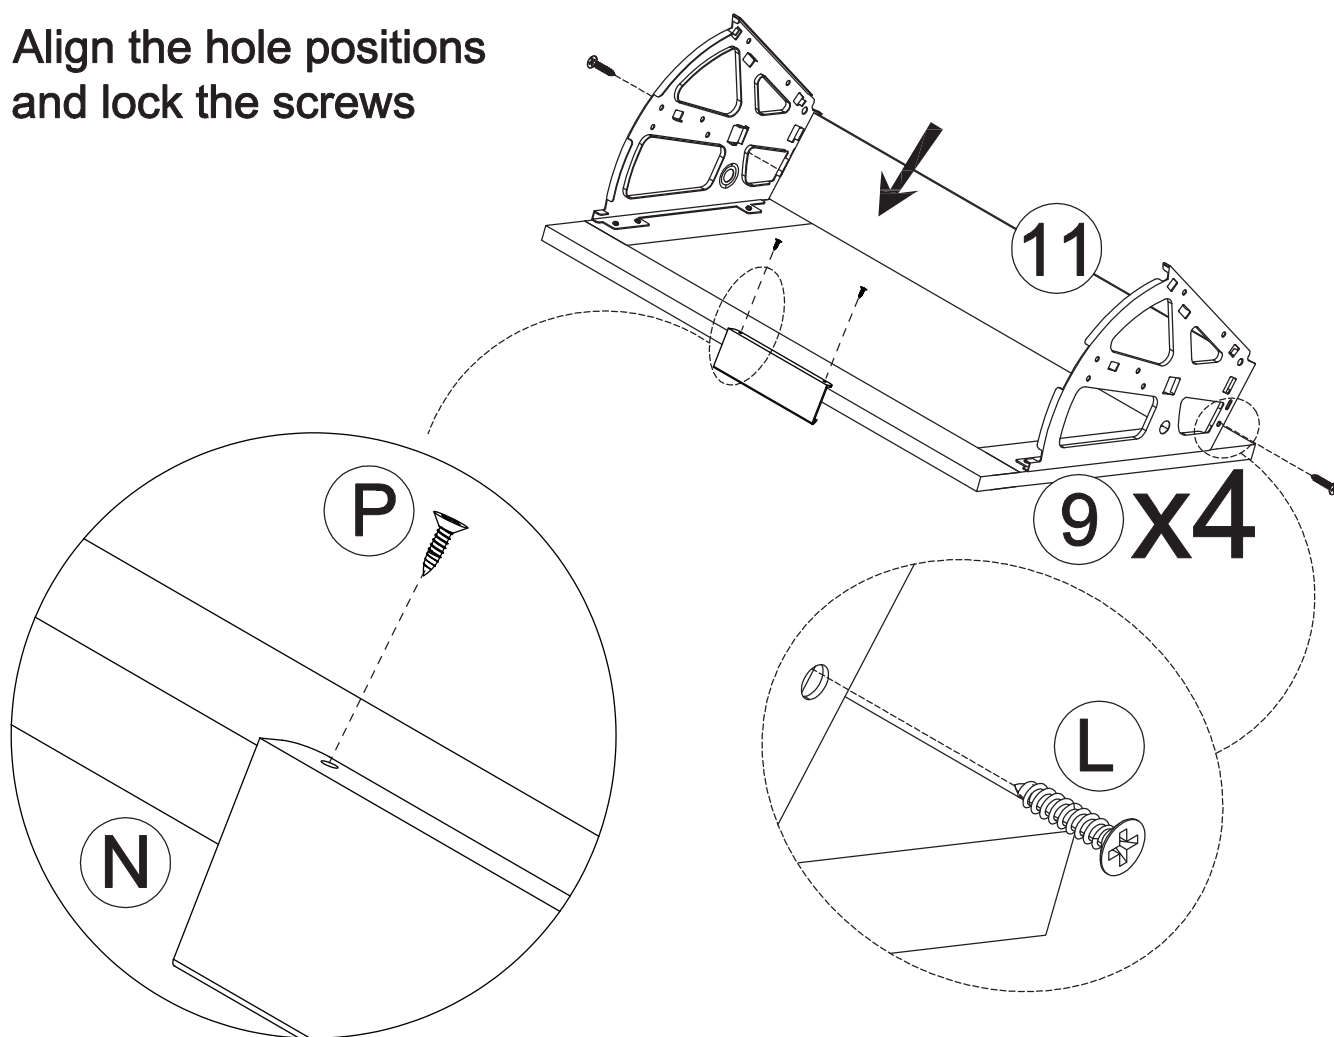





STEP12

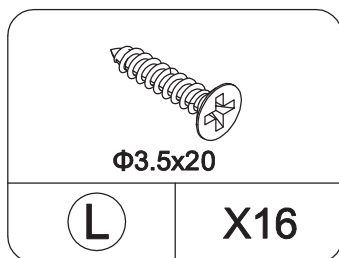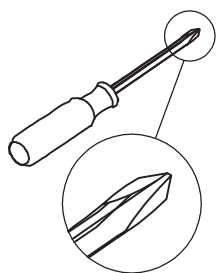



Align the hole positions
and lock the screws

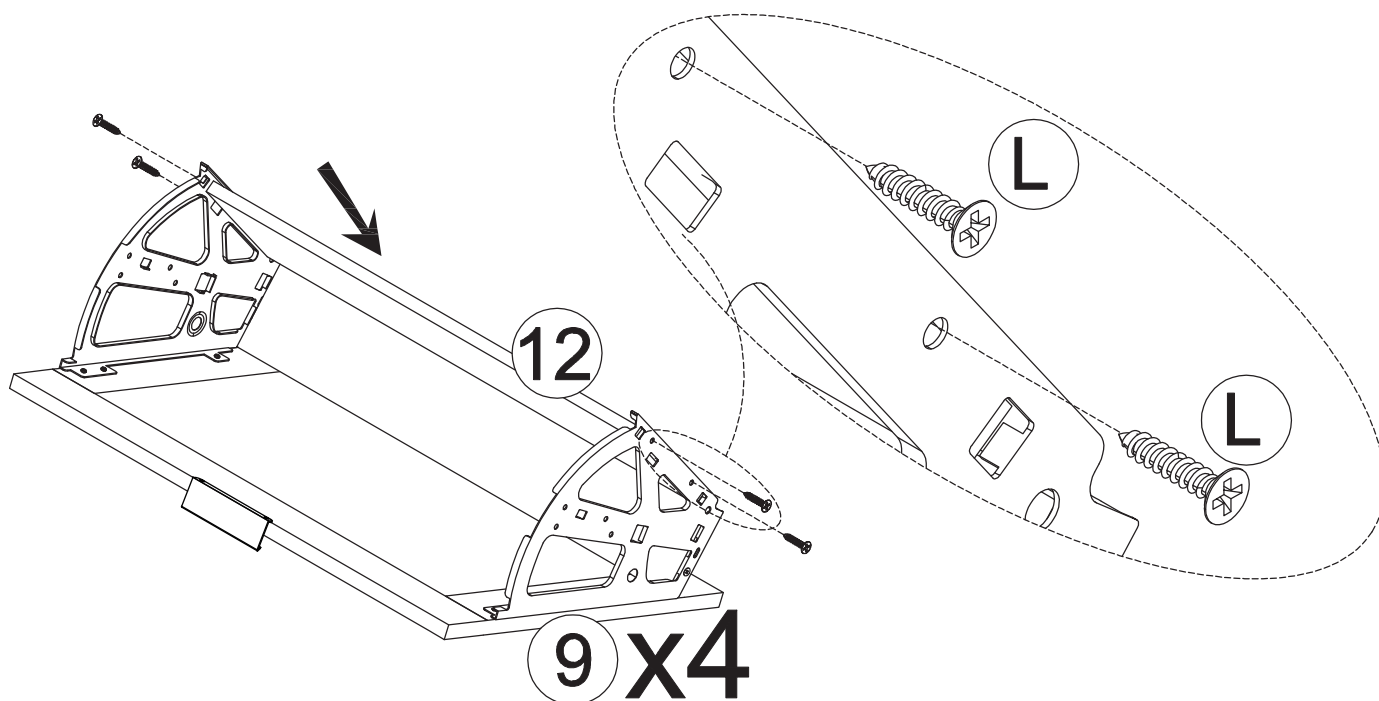



STEP13

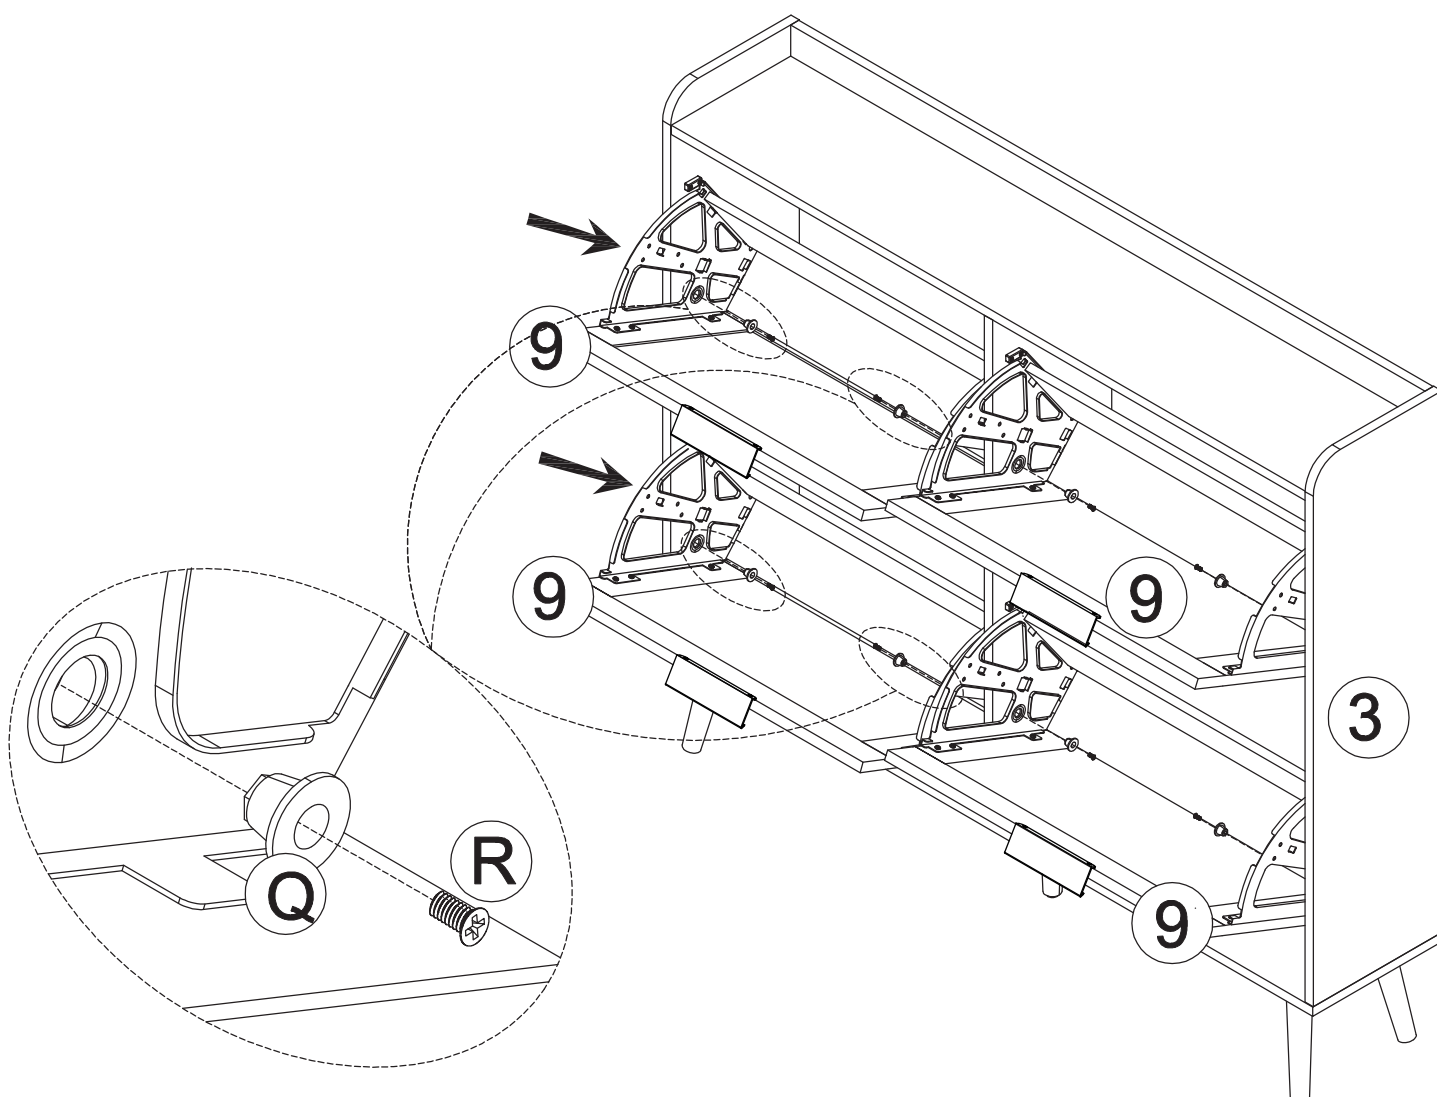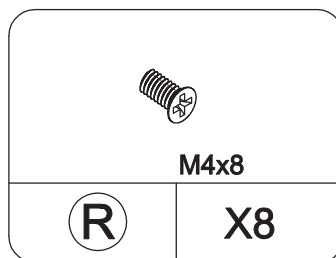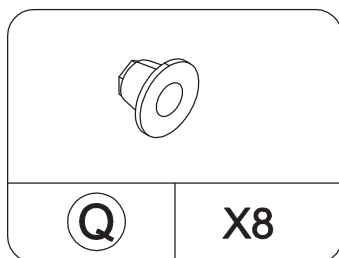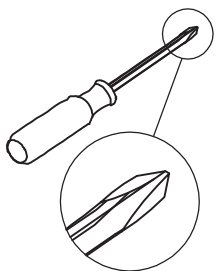



STEP14

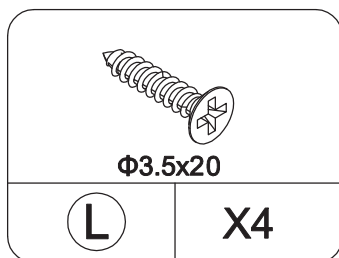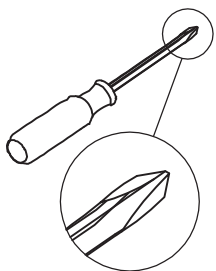

Align the hole positions
and lock the screws

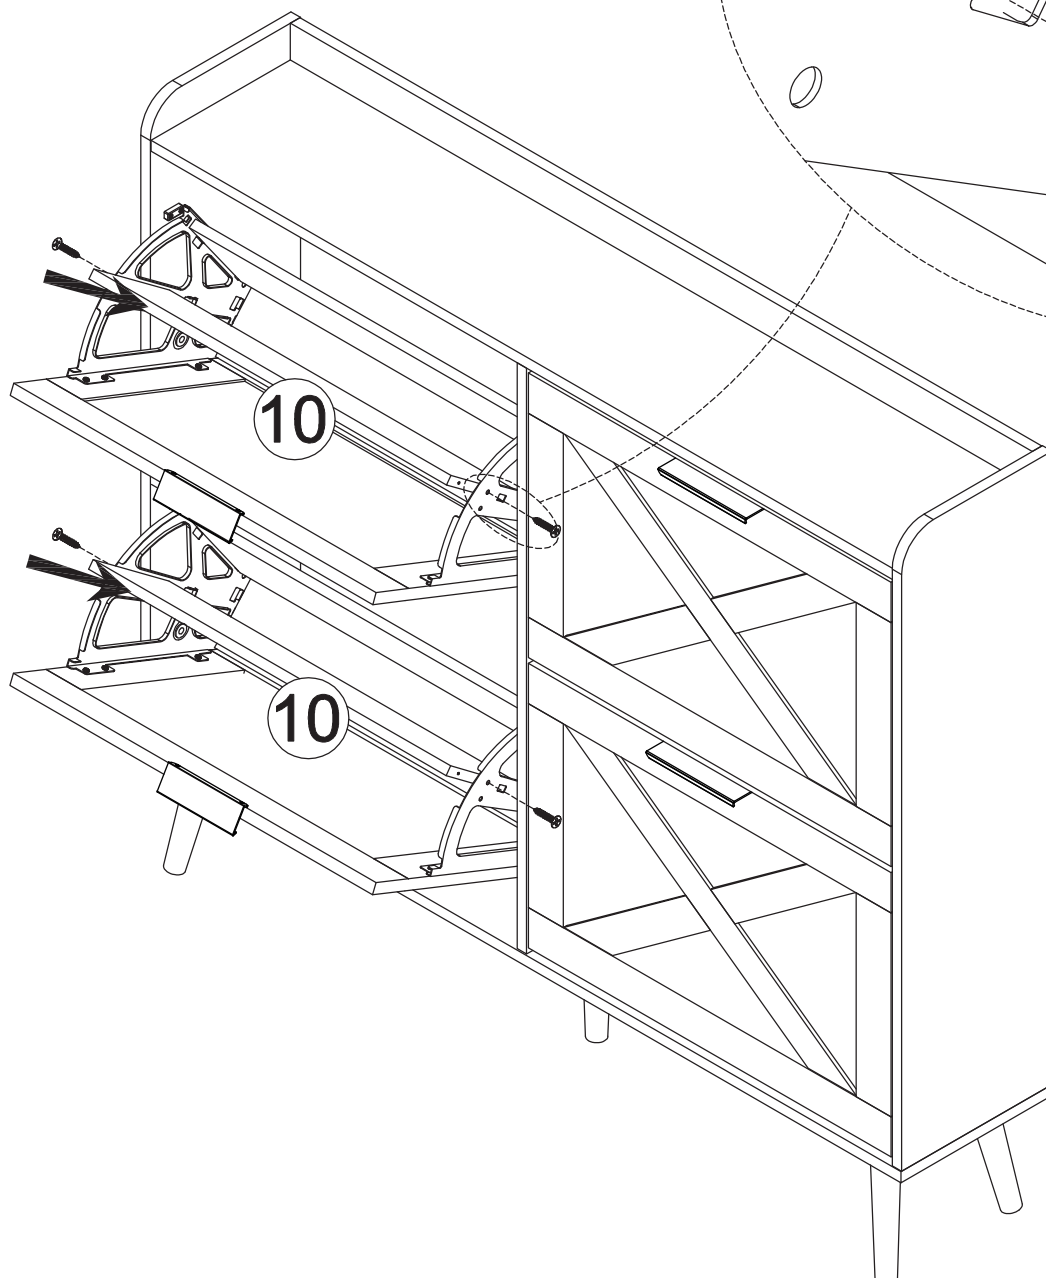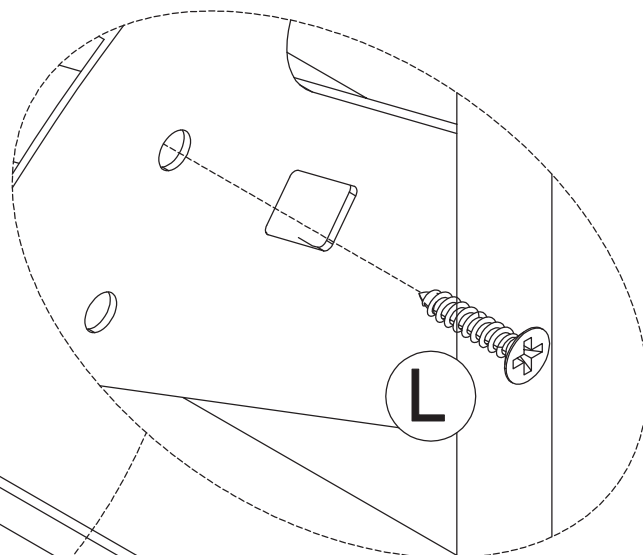

STEP15

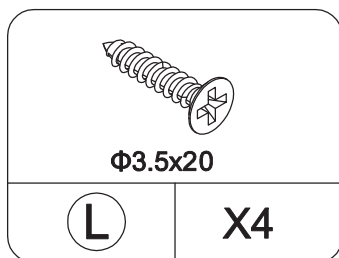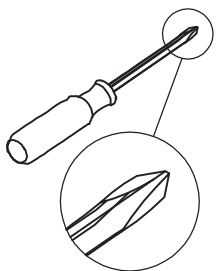

Align the hole positions
and lock the screws

