
Wire Bracket

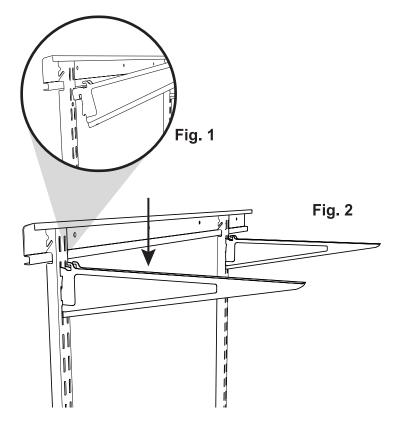


1. Install Wire Brackets

Install brackets into vertical standards at desired heights. Fig. 1

Insert the tabs on the wire bracket into the slots on the vertical standards. Tap the bracket down to lock the bracket into the standard. **Fig. 2**

6-ft shelves require 4 wire brackets

4-ft shelves require 3 wire brackets

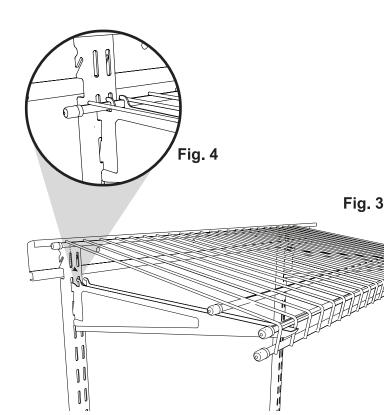

2. Install Shelves

Place the shelf on installed brackets, hooking the front of the shelf over the end of the brackets. End of bracket will protrude through the front of the wire shelf. **Fig. 3**

Push shelf backwards into the shelf hooks on the rear of brackets. Pull the shelf forward to lock shelf into place. **Fig. 4**

Note: Shelves can be cut to size with hacksaw. Make cut on side of shelf that is facing wall. Cut edge will be concealed by shelf caps.