




Installation Steps for Wire Rope Hooks

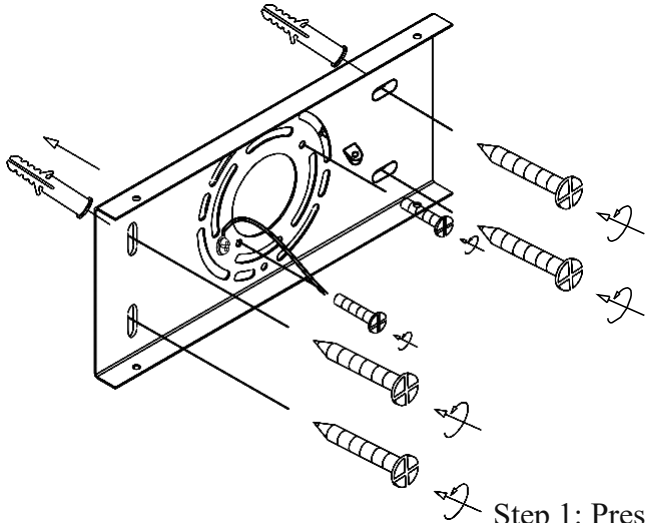


Step 1: Press the octagon mounting board tightly against the pre-set installation position on the wall, align it horizontally, align with the embedded expansion screw plugs, insert the extended self-tapping screws, and tighten the screws one by one so that the mounting board fits closely against the ceiling.

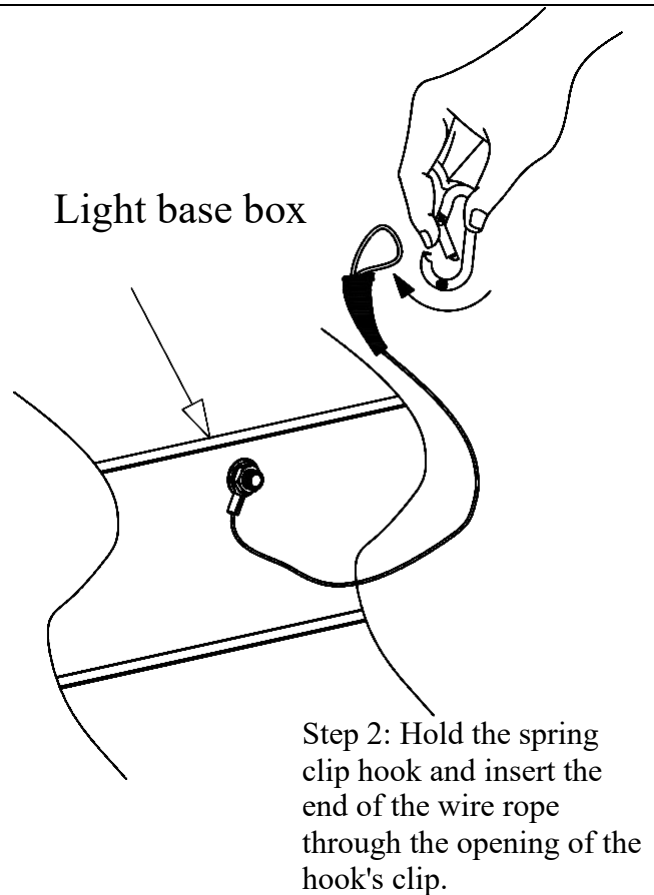

Step 2: Hold the spring clip hook and insert the end of the wire rope through the opening of the hook's clip.

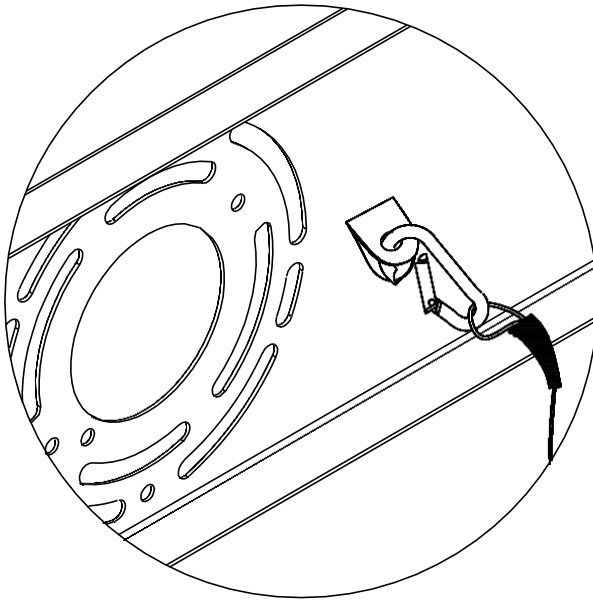

Step 3: Insert the hook with the rope into the reserved hanging hole/slot position of the lamp base, and let the hook hang on the metal edge of the base.

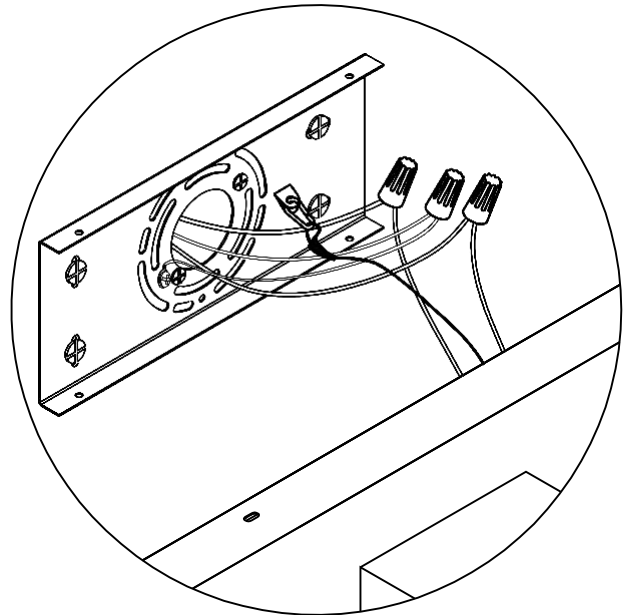

Step 4: Pull the wire rope downward, so that the hook is completely clamped in the chassis slot. Adjust the hook to be straight and securely fixed, completing the overall hoisting assembly.

Note: This type is a spring hook specifically for hanging lamp wires. After installation, gently pull to test that it does not fall off.