


Double Mailbox Post


Assembly Guide

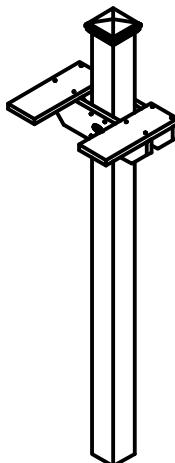

AD-MLBX2

*Actual Style May Vary from
the One Pictured in this Guide

HARDWARE INCLUDED



TOOLS INCLUDED




T-15 TORX BIT

CUSTOMER SUPPLIED TOOLS

Cordless screwdriver/drill OR
multi-bit handle for the T-15 bit

IMPORTANT!


DO NOT fully tighten bolts until all bolts are started.

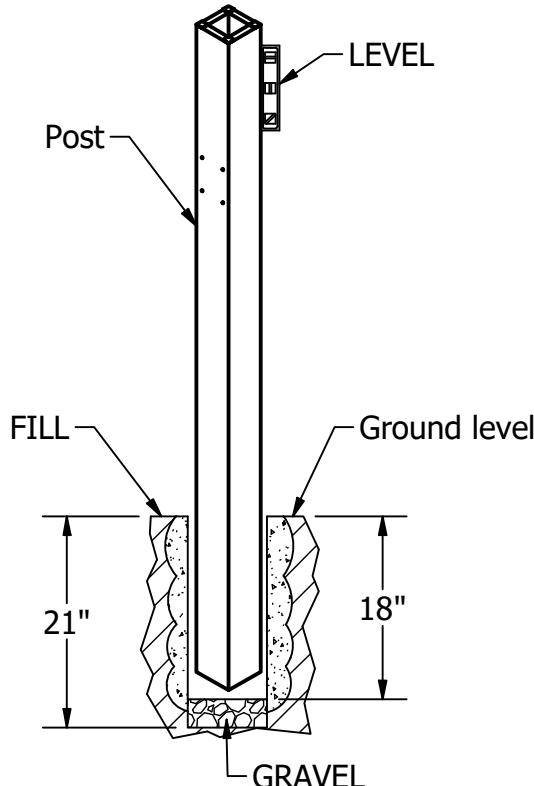

IMPORTANT! Check for Underground
Services With Your Local Authorities
BEFORE Installation of This Product.


1) Dig a Hole Approximately 21" Deep. Fill The
Hole With Approximately 3" of Gravel At the
Bottom For Water Drainage.

2) Insert the Base of the Post Into the Hole
and Fill the Hole With Concrete or Expandable
Foam. Using a Hand level, Ensure the Post is
Plumb on All Sides

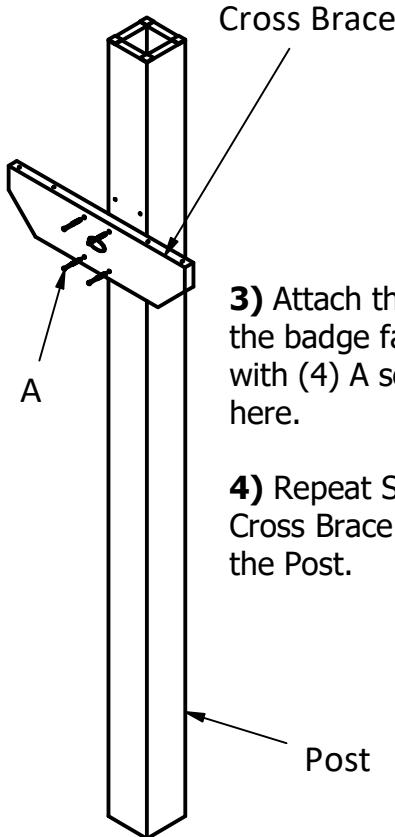


3) Attach the Cross Brace with the badge facing out to the Post with (4) A screws as shown here.

4) Repeat Step 3 with the other Cross Brace on the other side of the Post.

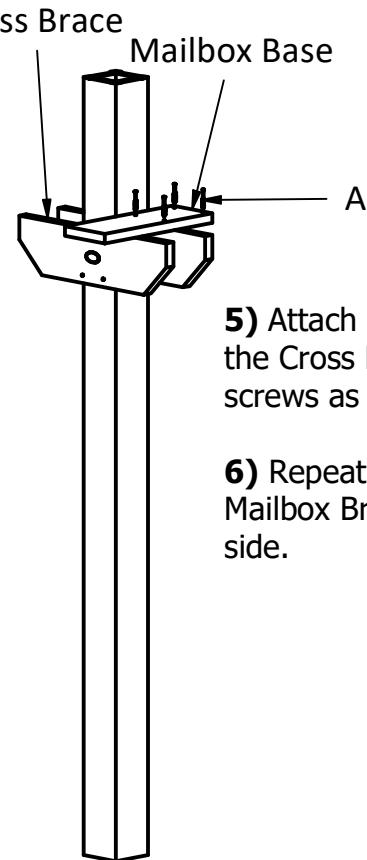


5) Attach the Mailbox Brace to the Cross Brace with (4) A screws as shown here.

6) Repeat Step 6 with the other Mailbox Brace on the other side.

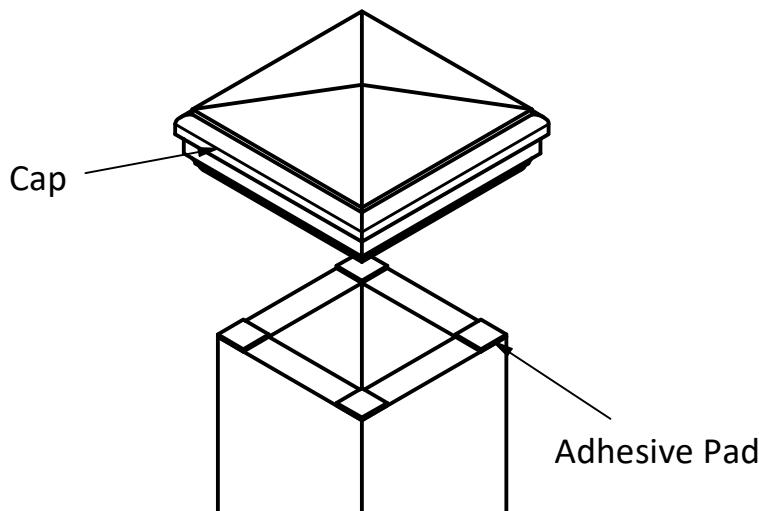

7) Remove Cover on (4) Adhesive Pads and Slide Cap Over Top of Post. Press Down Firmly On Cap to attach.

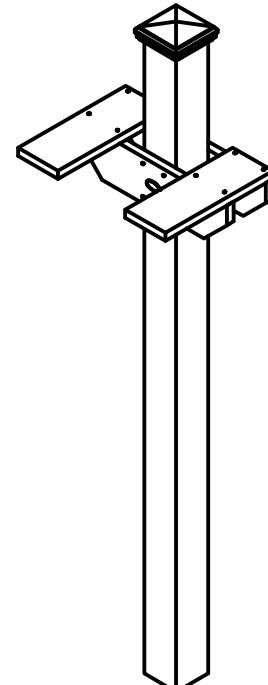

Attach Any Mailbox Purchased Separately Per Instructions Included with Mailbox.