


ASSEMBLY INSTRUCTIONS

LOFT BED SET

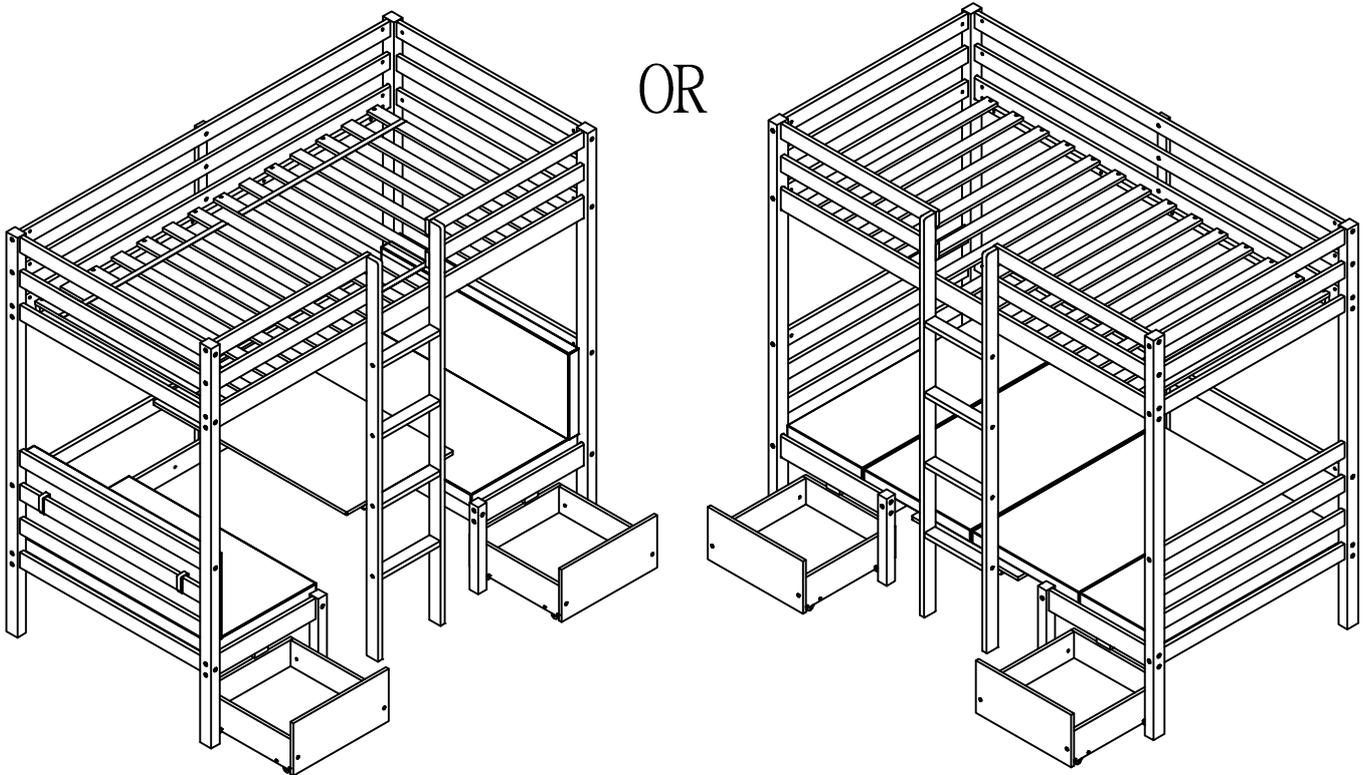

This set is included 3 boxes if don't receive full 3 boxes please contact our customer service team.

WF286042/WF286043/WF286044

SAFETY WARNINGS AND GENERAL NOTES:

Follow the information on the warnings on the loft bed end structure and on the carton. Do not remove the warning label from the bed. Always use the recommended size mattress on mattress support, or both, to help prevent the likelihood of entrapment or falls.

The top surface of the mattress must be at least 5*inch (127mm) below the upper edge of the guardrail.

Do not allow children under 6 years of age to use the upper bunk.

Periodically check and ensure the guardrail, ladder and other components are in their proper position, free from damage, and all connectors are tight.

Do not allow horseplay on or under beds.

Always prohibit jumping on the bed.

Prohibit more than one person on upper bunk.

Always use the ladder for entering and leaving the upper bunk.

Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.

Use of a night-tight may provide added safety precaution for a child using the upper bunk.

Always use guardrails on both long sides of the upper bunk.

If the loft bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.

The use of water or sleep flotation mattresses is prohibited.

STRANGULATION HAZARD-Never attach or hang items to any part of the loft bed that are not designed for use with the bed.

Keep these instructions for future reference.

We recommend assembling your loft bed on the shipping carton to protect your floor or carpet.

Be certain all staples are out of the box before beginning assembly on the shipping carton.


USE ONLY MATTRESSES WHICH ARE 74"-75" LONG AND 37 1/2" - 38 1/2" WIDE ON UPPER AND ON LOWER BUNKS. ENSURE THICKNESS OF MATTRESS DOES NOT EXCEED 6".

SURFACE OF MATTRESS MUST BE AT LEAST 5" (127MM) BELOW THE UPPER EDGE OF GUARDRAILS.

Replacement Parts:







Replacement Parts, including additional guardrails, may be obtained from any of our (GIGACLOUD TECHNOLOGY (USA) INC.) dealers

Detail View





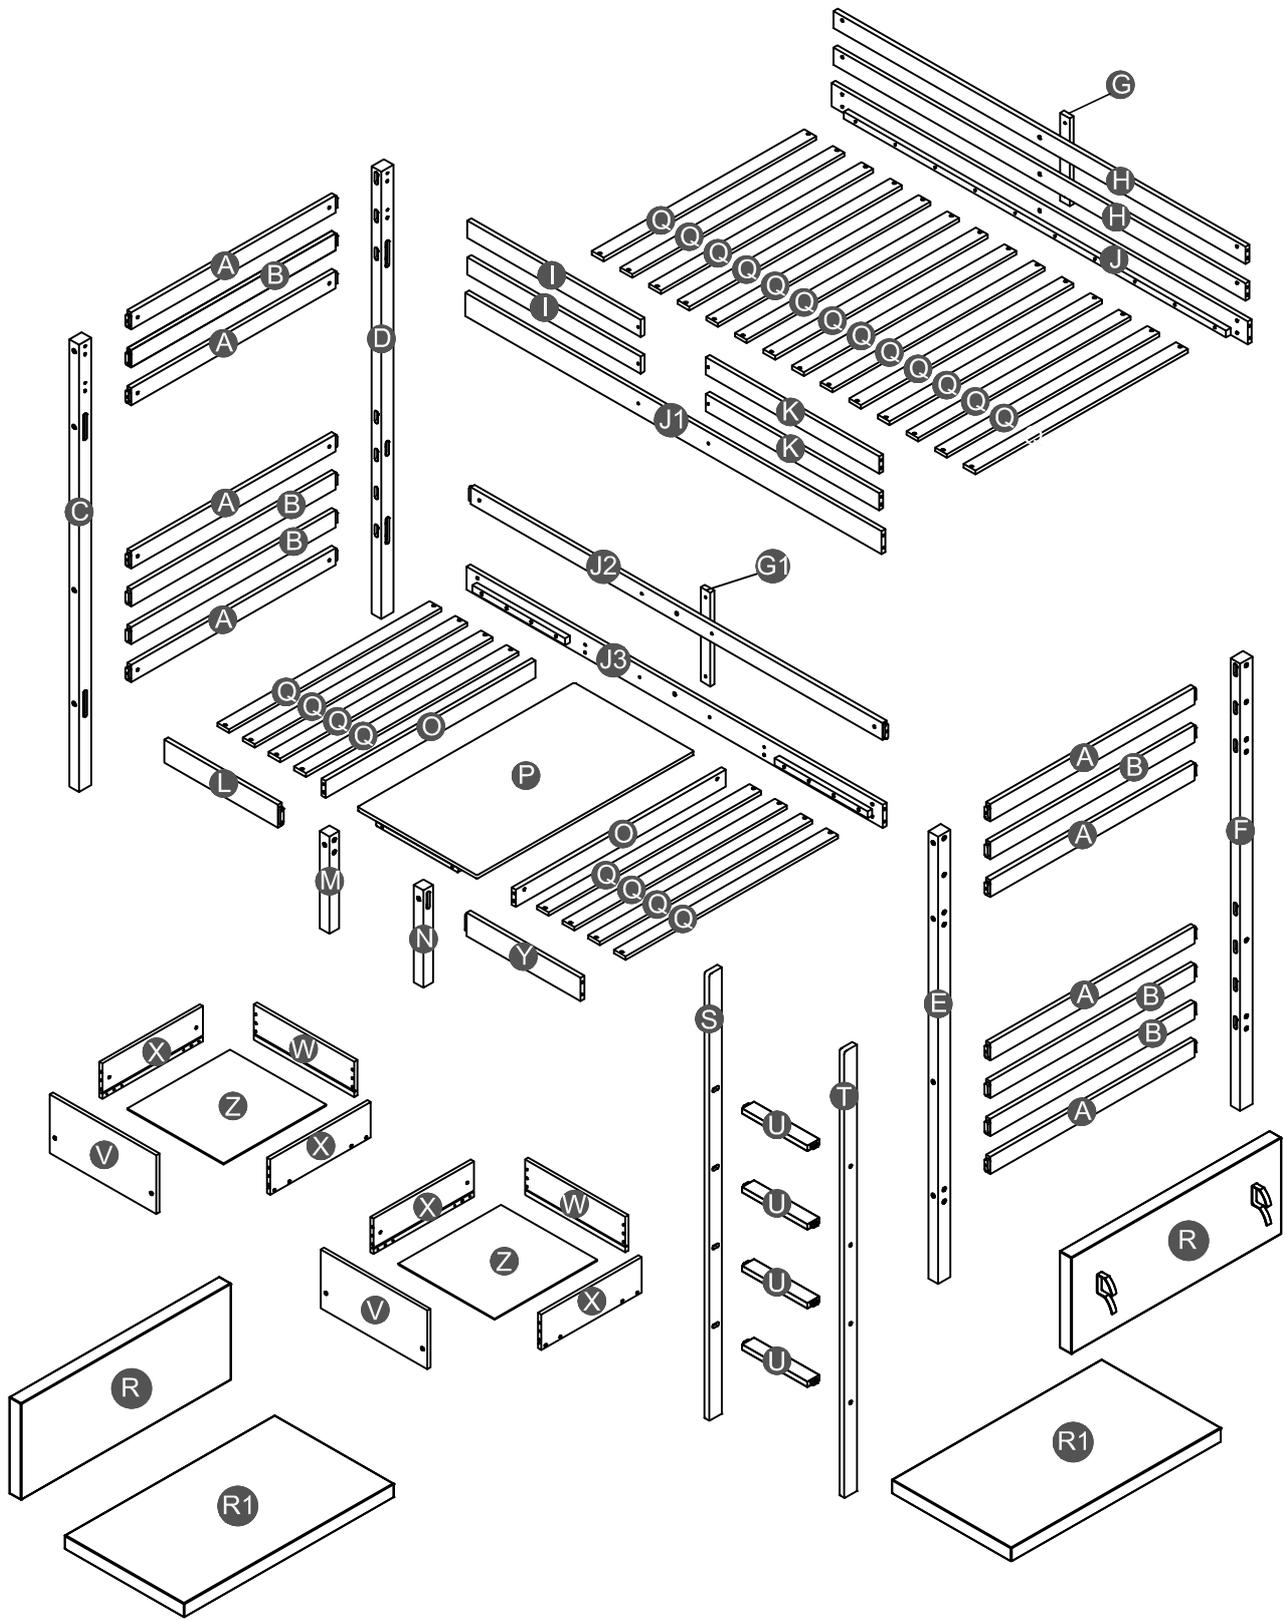


Part List


WF286042

A  Horizontal bar - 8pcs	B  Horizontal bar - 6pcs	C  Leg FB (Left)- 1pc
D  Leg FB (Right)- 1pc	E  Leg HB (Right) - 1pc	F  Leg HB (Left)- 1pc
G  Vertical guard rail - 1pc	G1  Vertical guard rail - 1pc	H  Upper Guard rail (Back)- 2pcs
J  Upper side rail (Back)- 1pc	J1  Upper side rail (Front)- 1pc	J2  Lower Guard rail (Back)- 1pc
J3  Lower side rail (Back)- 1pc	L  Lower side rail (Left front)- 1pc	M  Short Leg (Left front)- 1pc
N  Short Leg (Right front)- 1pc	Y  Lower side rail (Right front)- 1pc	S  Left side ladder - 1pc
T  Right side ladder - 1pc	Q  Upper slats - 14pcs	





Hardware List WF286043

I  Guard rail (Left front)- 2pcs	K  Guard rail (Right front)- 2pcs	O  Horizontal inside bar - 2pcs
P  Bottom shelf - 1pc	U  Step ladder - 4pcs	V  Drawer front - 2pcs
W  Drawer back - 2pcs	X  Drawer (left/right) - 4pcs	Z  Drawer bottom - 2pcs
Q  Lower slats - 8pcs		


WF286044

R  990x410x55 Backrest mattress - 2pcs	R1  990x550x55 Bottom mattress - 2pcs
---	--

Hardware List

1	 Ø8*30mm Wood dowel (16pcs)	2	 Ø10*20mm Wood dowel (8pcs)	3	 Ø10*40mm Wood dowel (12pcs)
4	 (Ø15)1/4"*100mm Hex-Head bolts (46pcs)	5	 (Ø15)1/4"*80mm Hex-Head bolts (2pcs)	6	 (Ø12)1/4"*60mm Hex-Head bolts (18pcs)
7	 (Ø12)1/4"*40mm Hex-Head bolts (6pcs)	8	 (Ø12)1/4"*30mm Hex-Head bolts (9pcs)	9	 1/4"*15 (9.5mm) Horizontal-Hole bolts(66pcs)
10	 (1/4")4.5*58mm Allen key (1pc)	11	 Ø4*38mm Wood screws (2pcs)	12	 Ø4*30mm Wood screws (68pcs)
13	 Ø9*32mm Plastic anchor (2pcs)	14	 58*16*16*(1.5mm) Metal bracket (2pcs)	15	 100*54*20 mm Wheels (8pcs)
16	 70*60*19mm Drawer stopper (2pcs)				



ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)



DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT !


STEP 1:


4	9
	
16PCS	16PCS

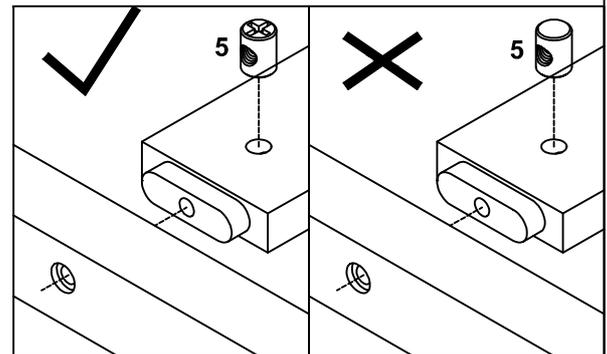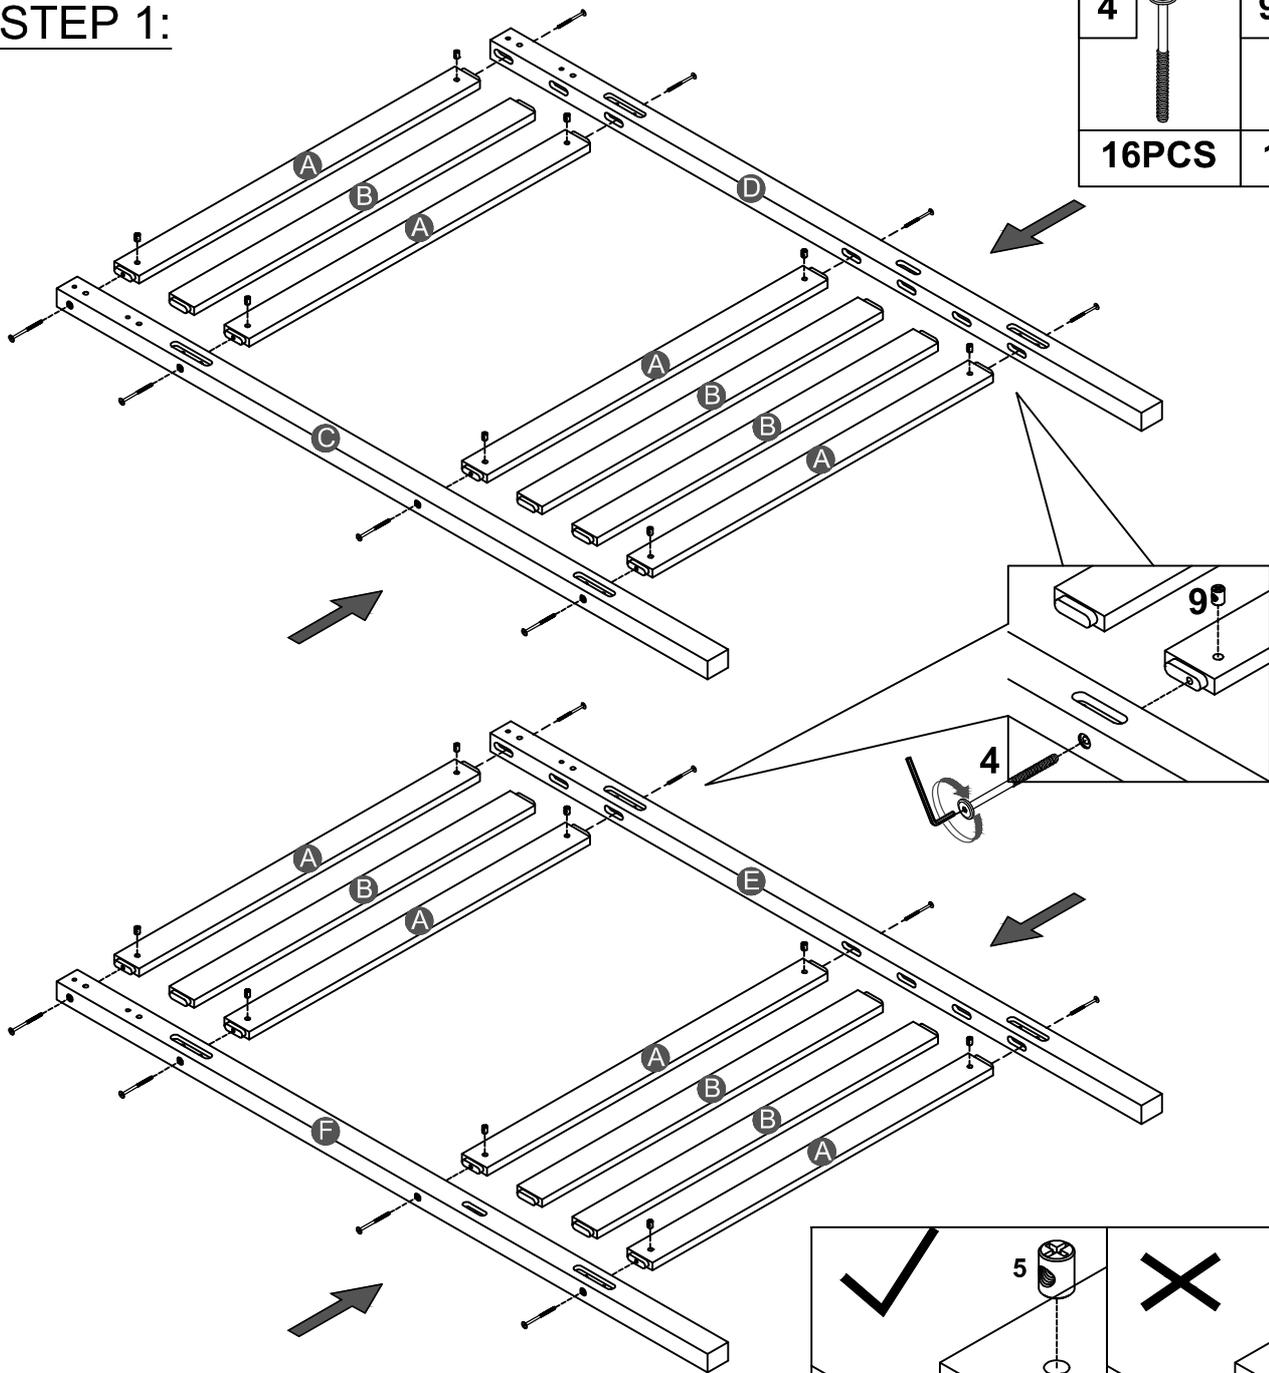

Note: Part 5 will face up with the "x" mark on it, otherwise it cannot be tightened


STEP 2:

12	16
	
4PCS	2PCS

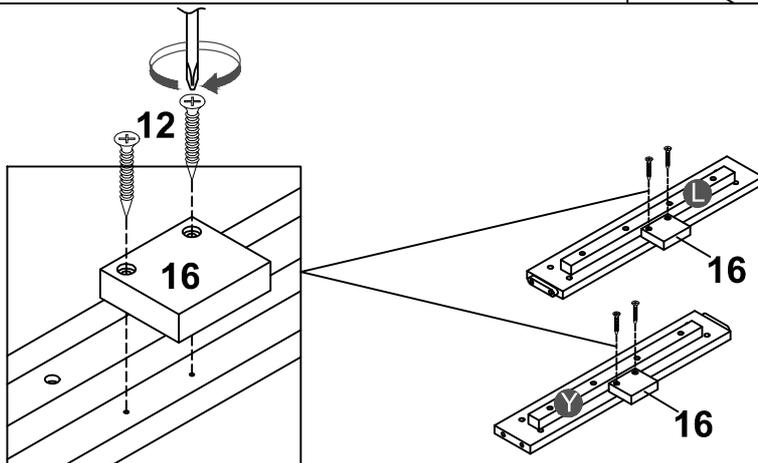


STEP 3:

3		4		9	
4PCS		18PCS		18PCS	

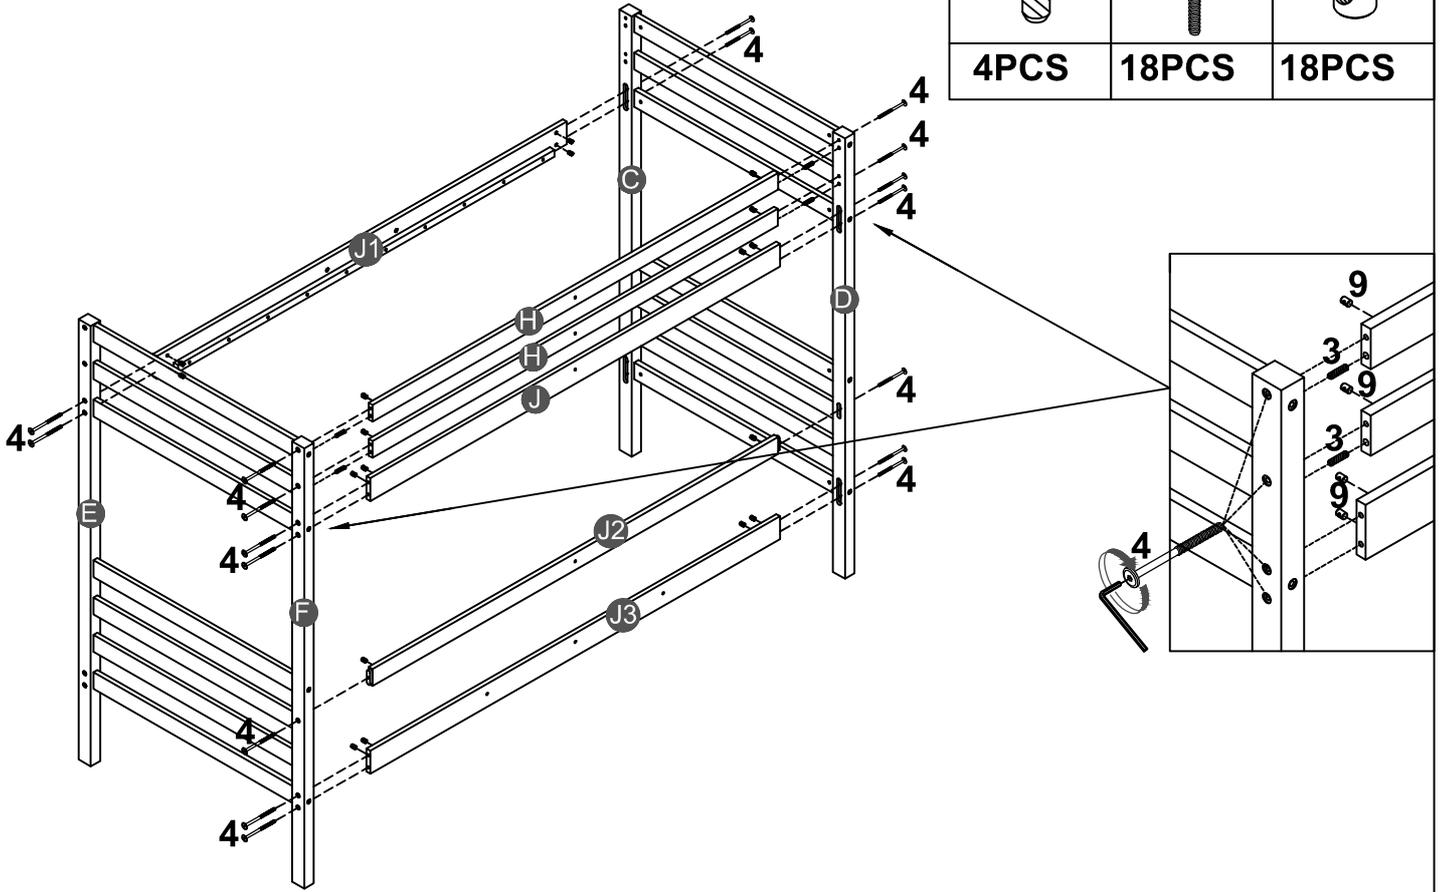


STEP 4:


4		9	
8PCS		8PCS	

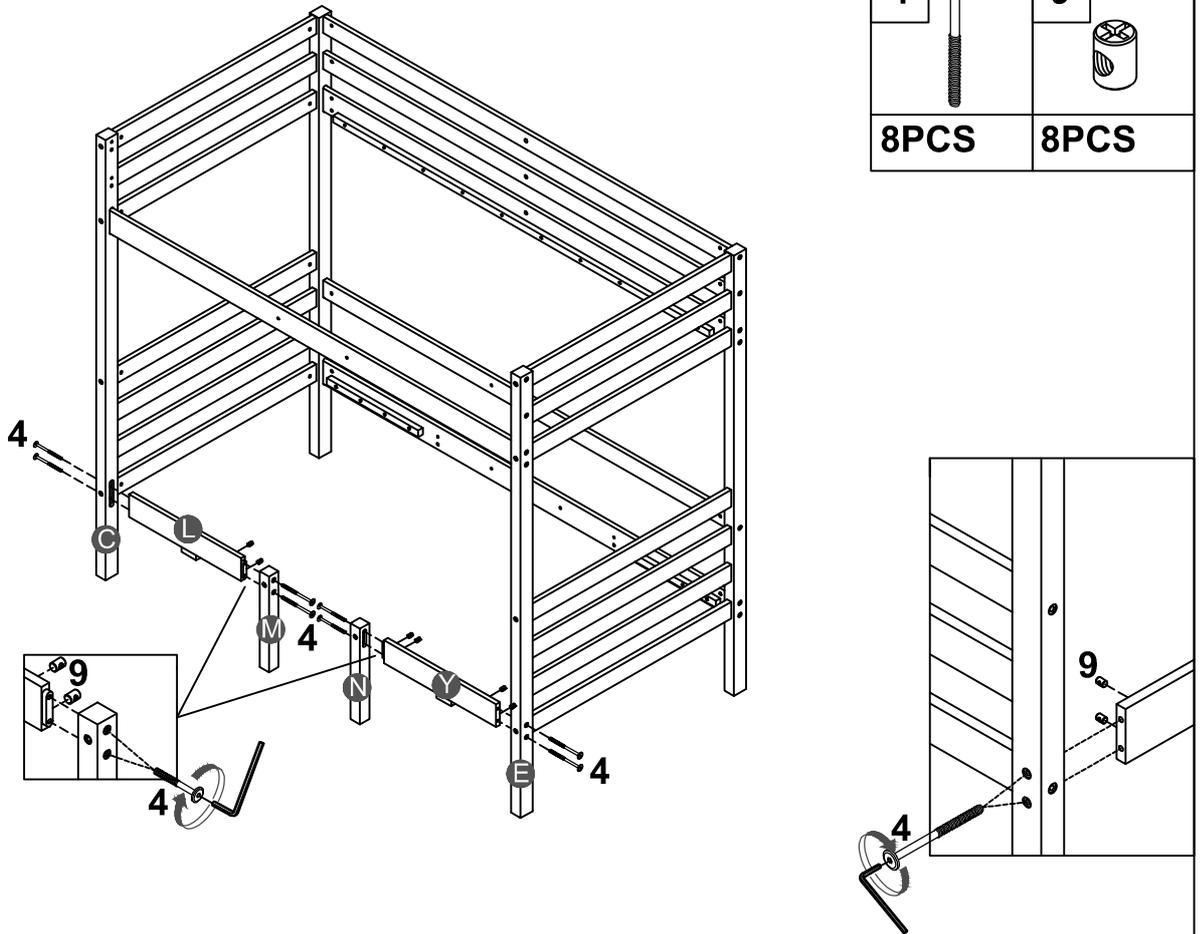

STEP 5:

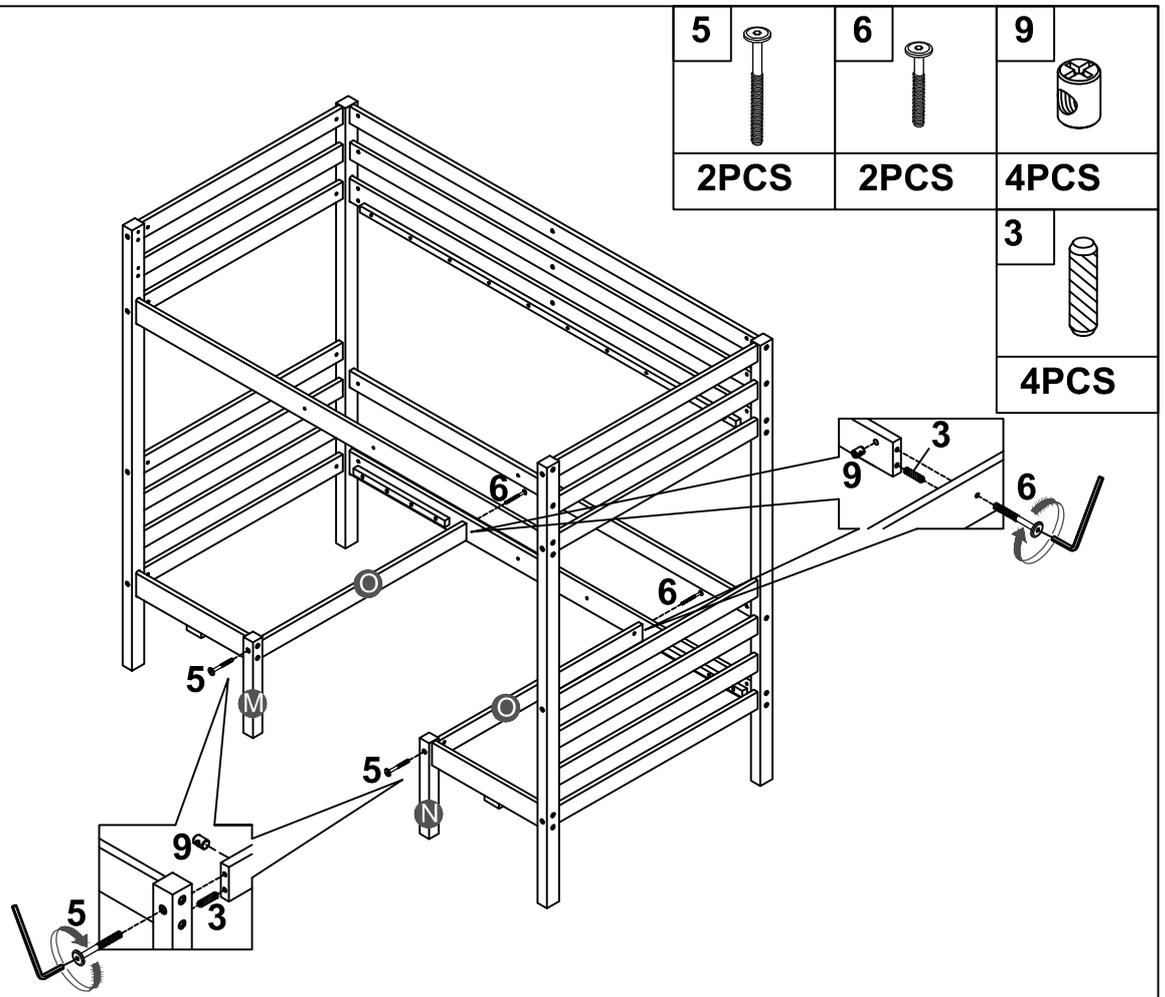


STEP 6:

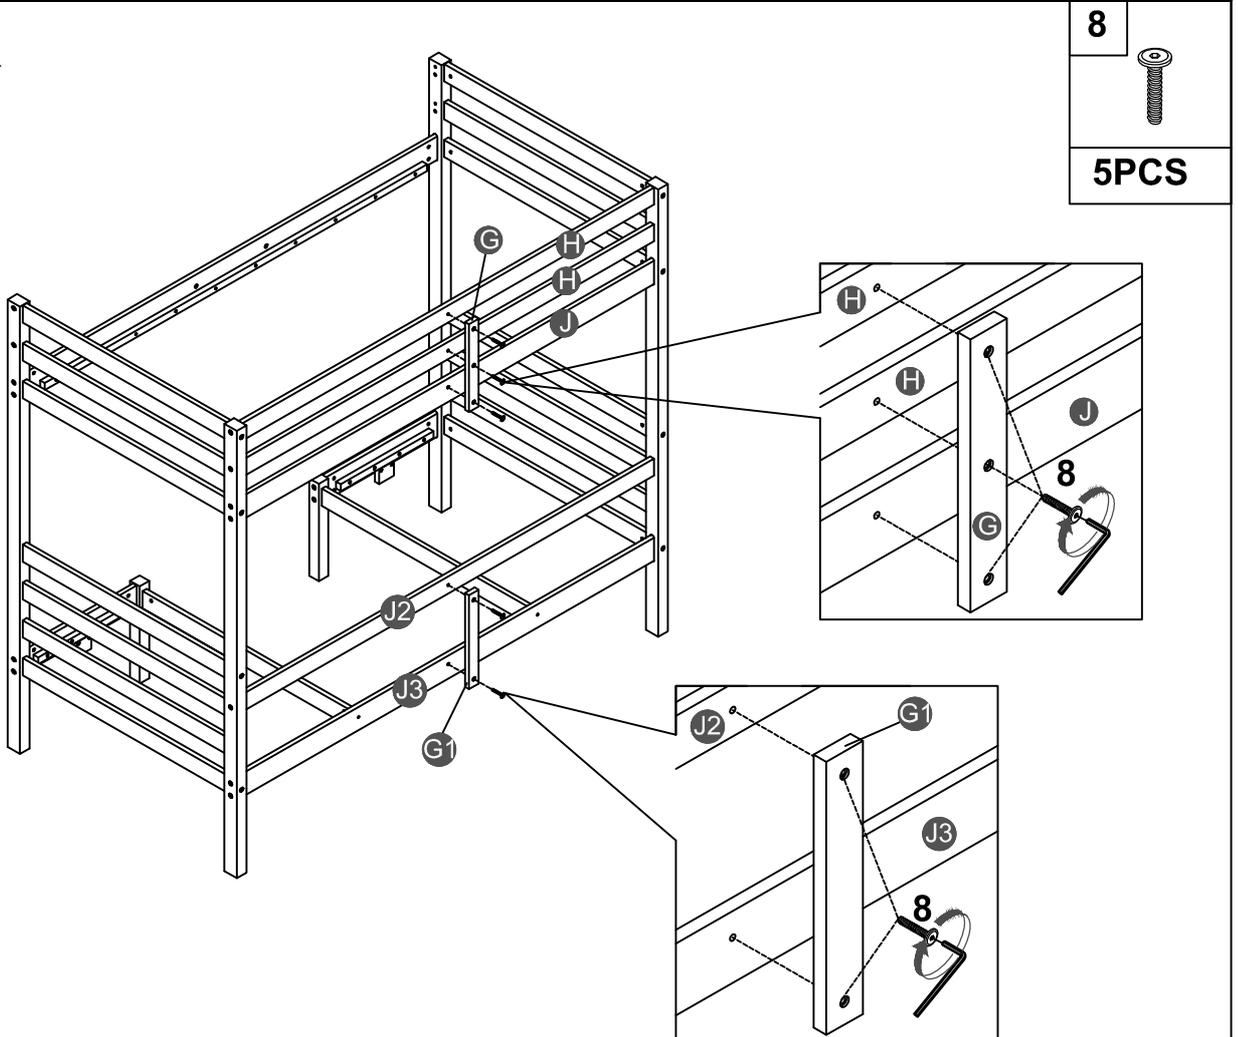


STEP 7:

6		9	
8PCS		8PCS	

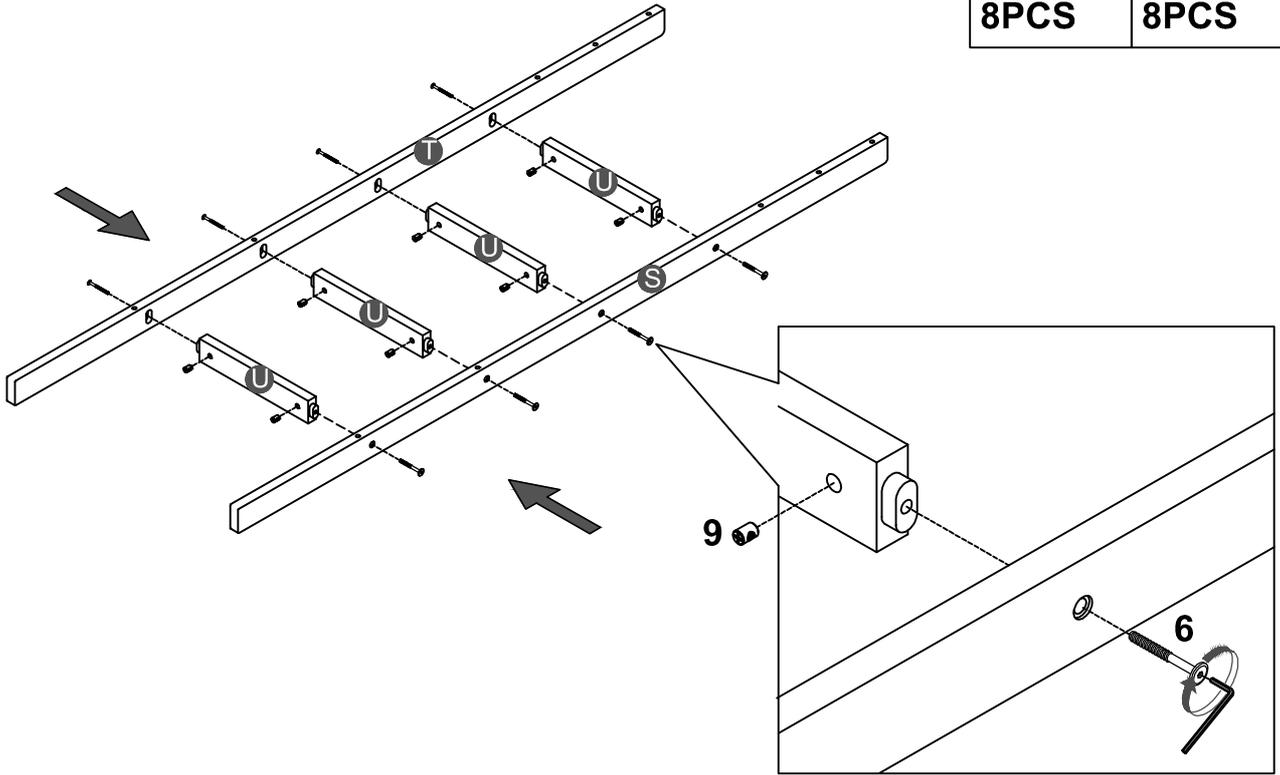

STEP 8:

3		4	
4PCS		4PCS	
		7	
		6PCS	
		9	
		4PCS	

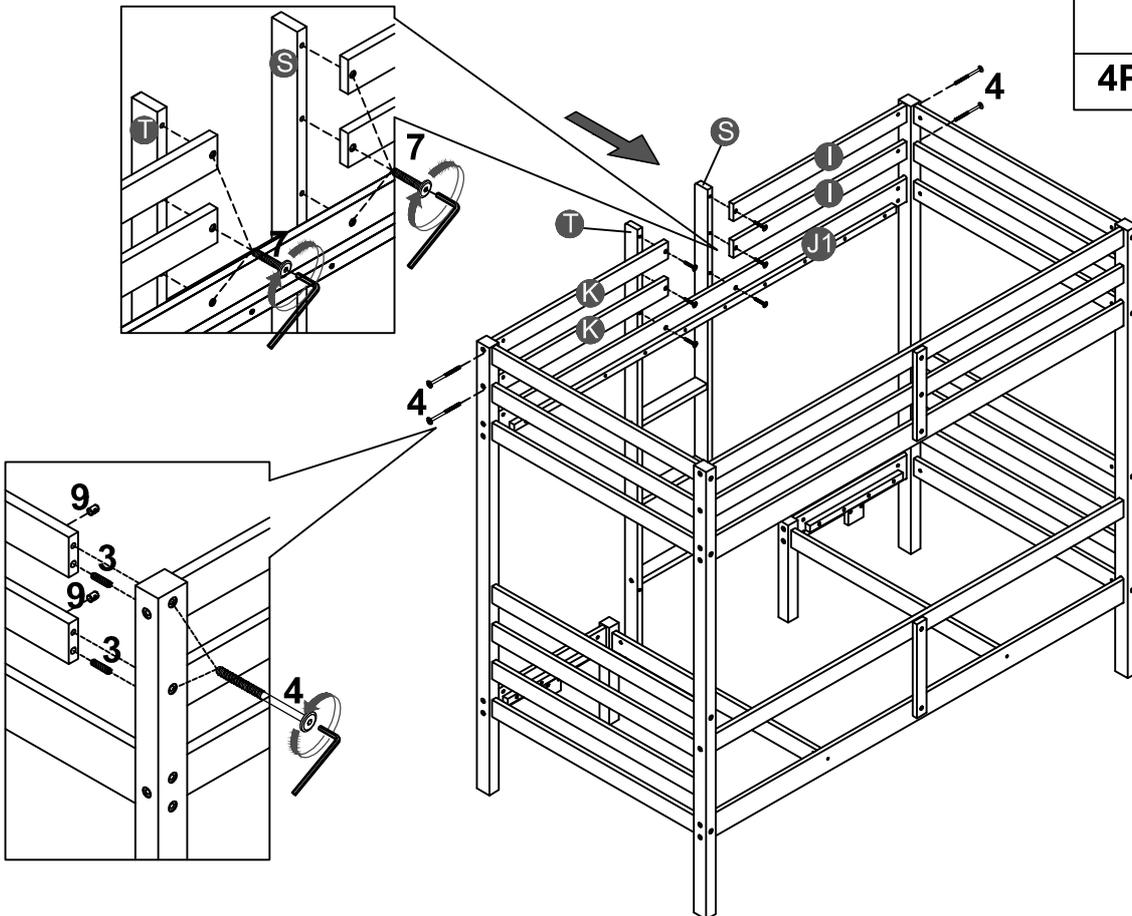


STEP 9:

12



44PCS

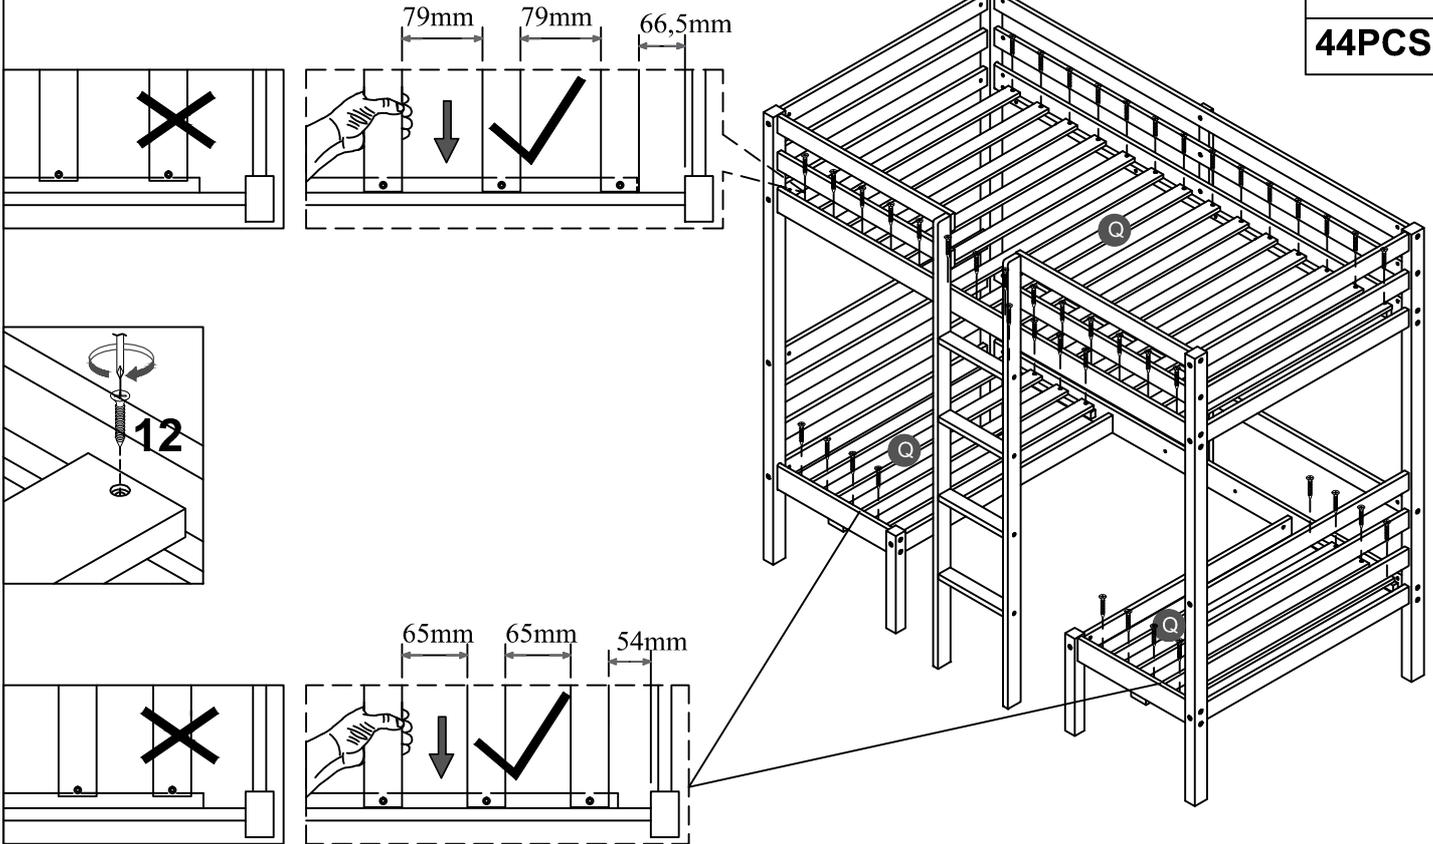


Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

STEP 10A:


8



4PCS

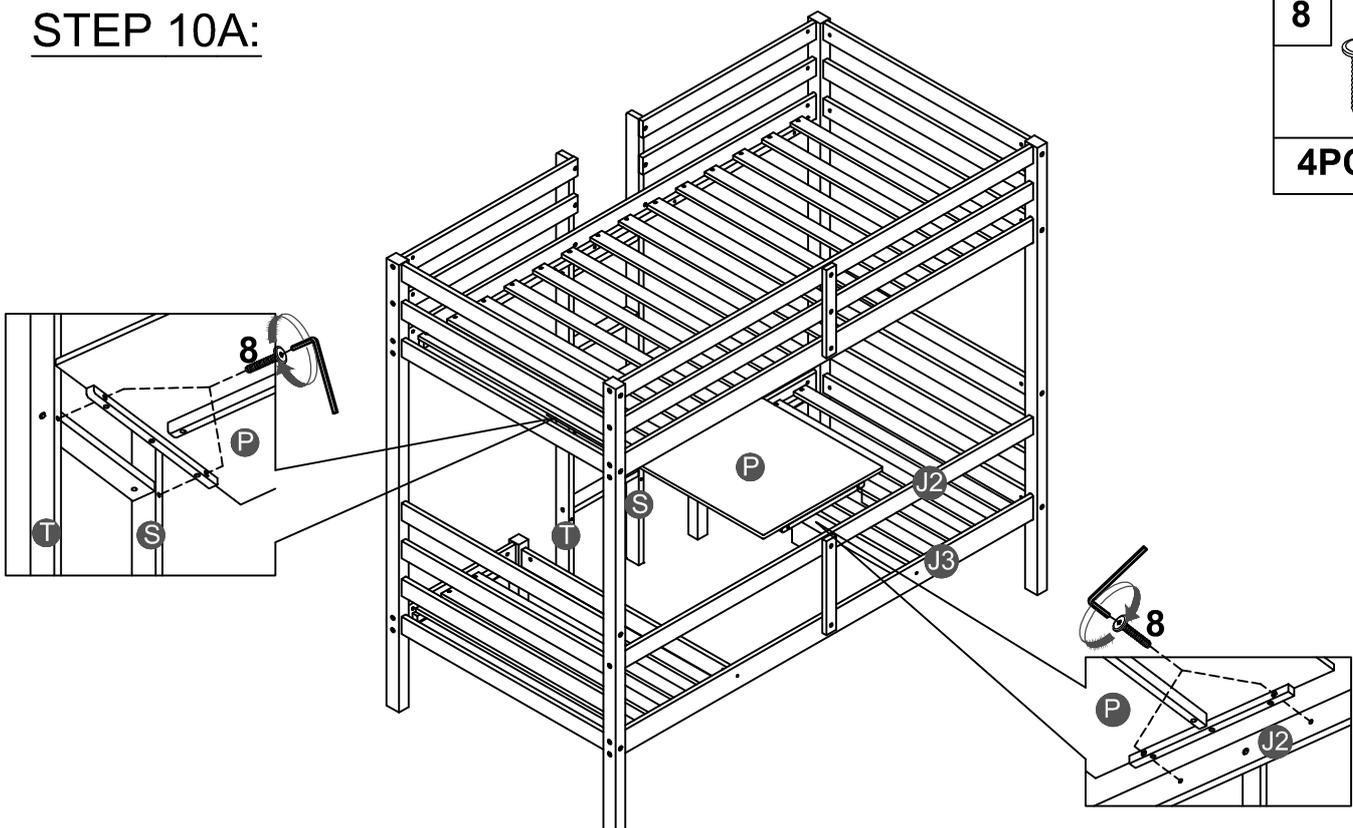


STEP 11:

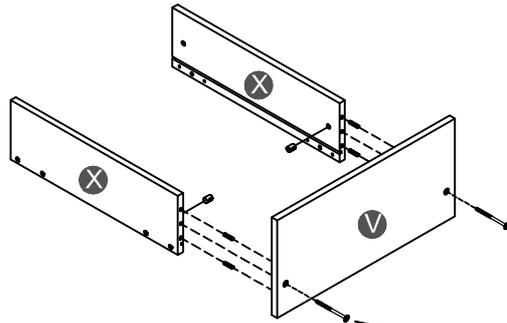


2pcs

1		6		9	
8PCS		4PCS		4PCS	

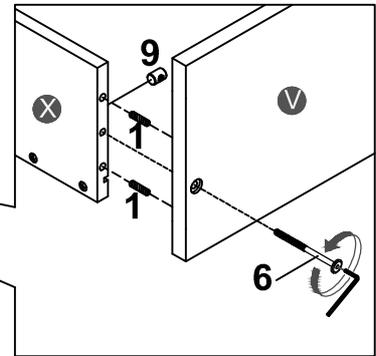


STEP 12:

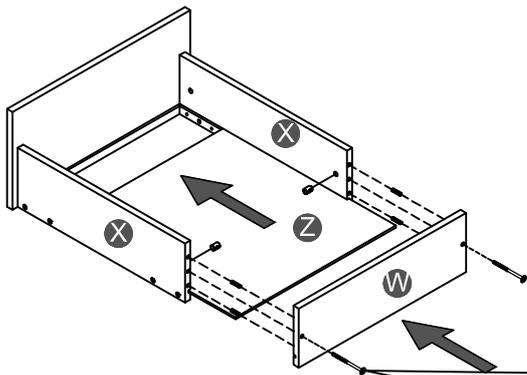


2pcs

1		6		9	
8PCS		4PCS		4PCS	

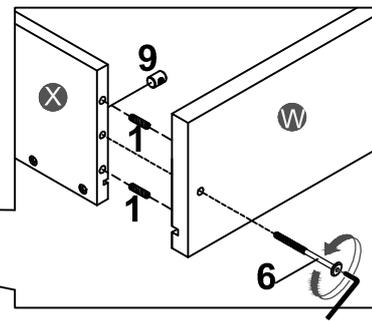


STEP 13:

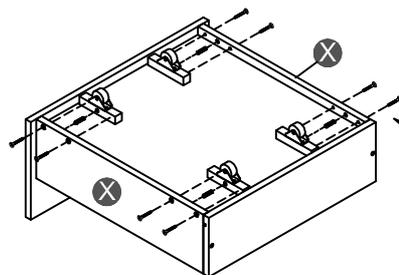


2pcs

2		12		15	
8PCS		16PCS		8PCS	

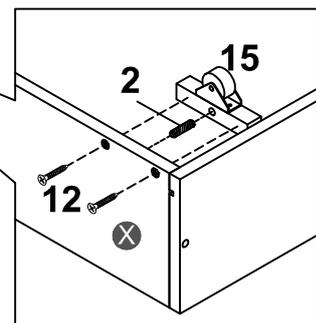


STEP 14A:

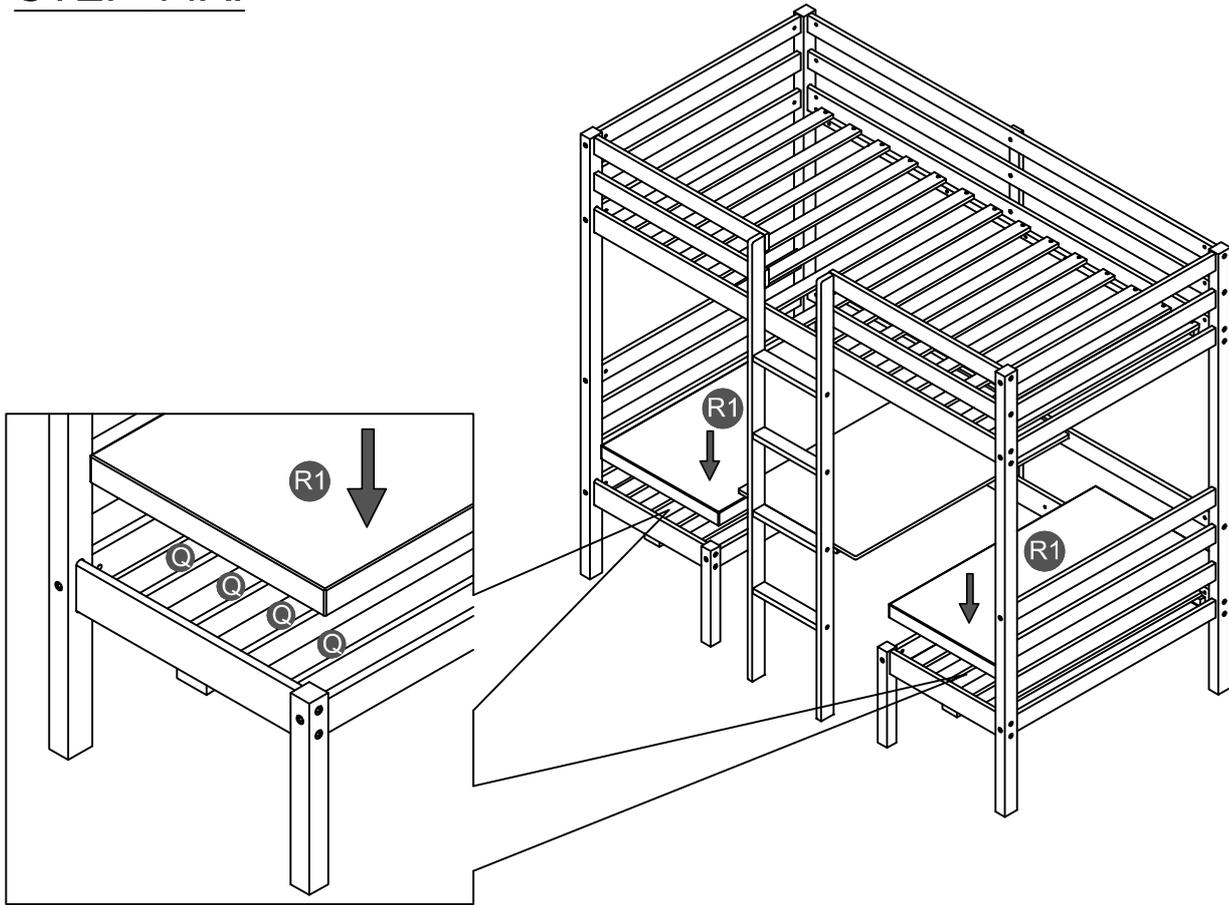


Dimension(R1) - Seat mattress: 990x550x55

STEP 15:

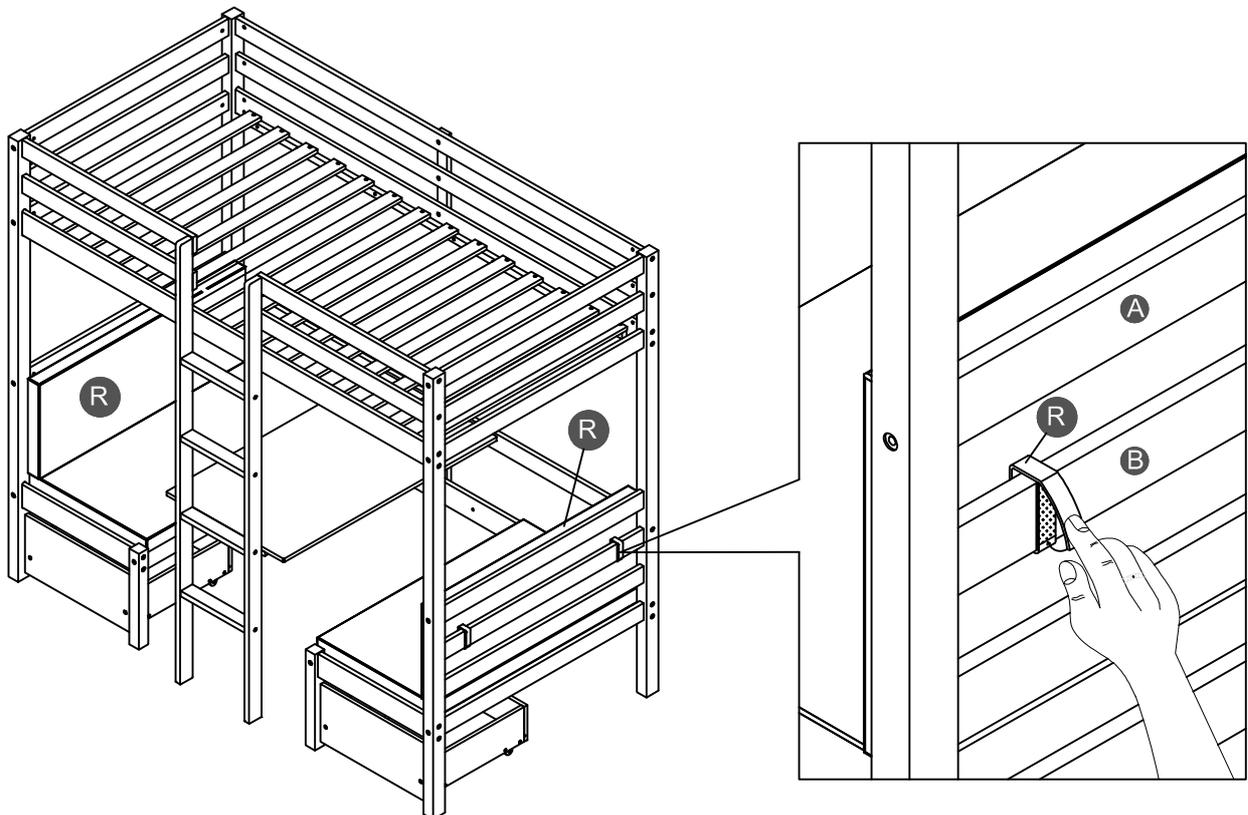


Dimension(R) - Back mattress: 990x410x55

STEP 16:

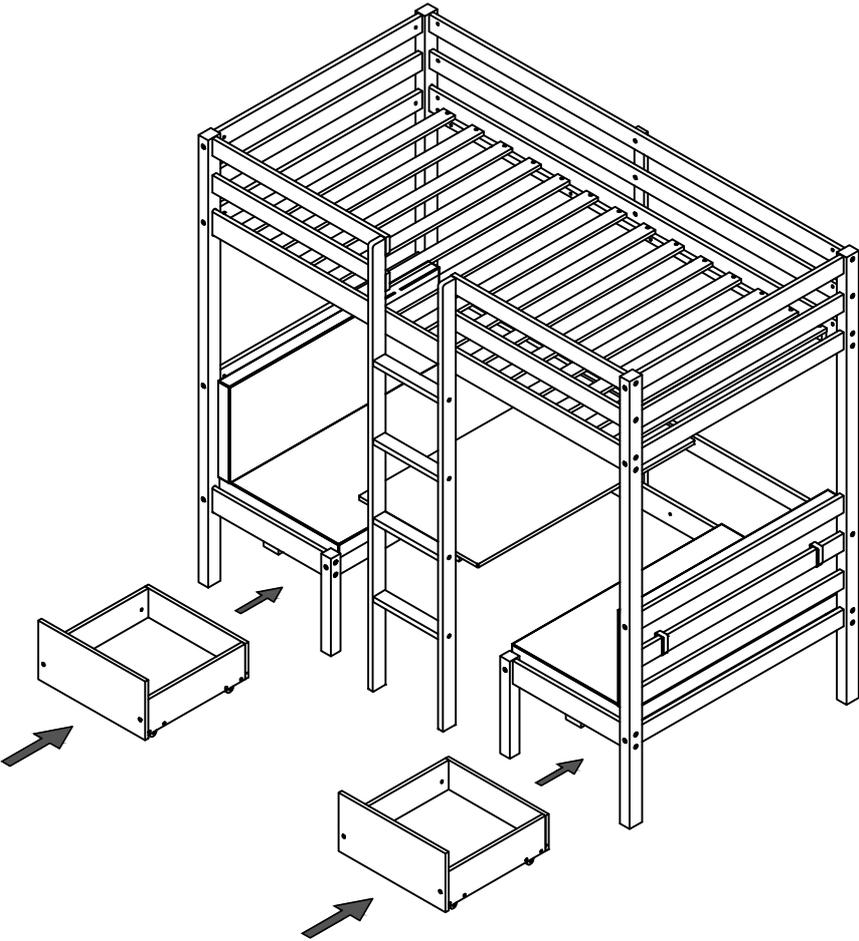


Push Drawer under the bottom of Bunkbed.

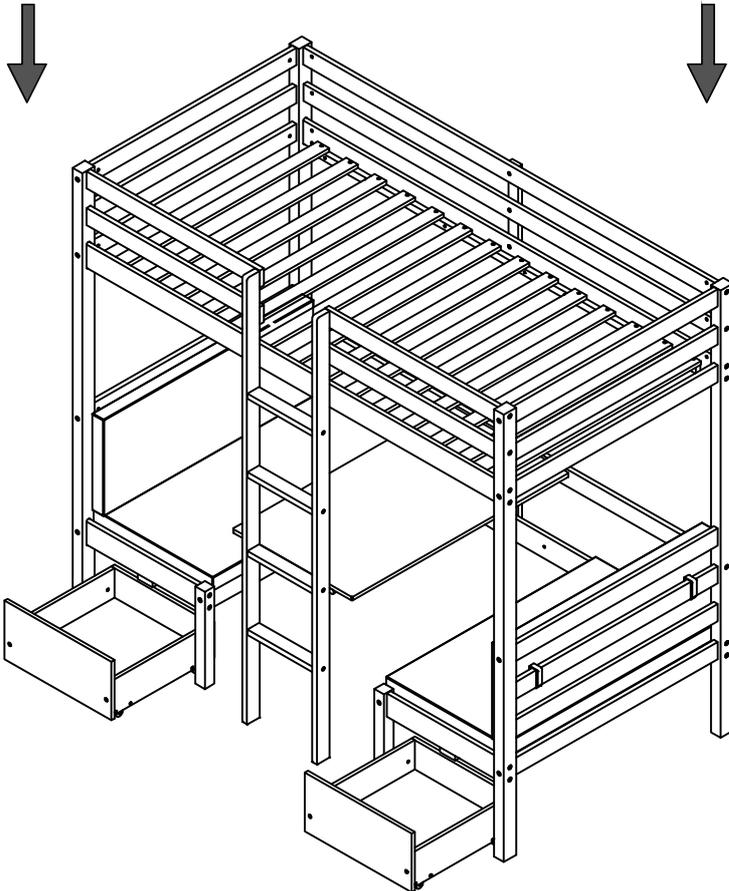


STEP A:

Installing the Anti-Tip Bracket.

12	14
	
4PCS	2PCS

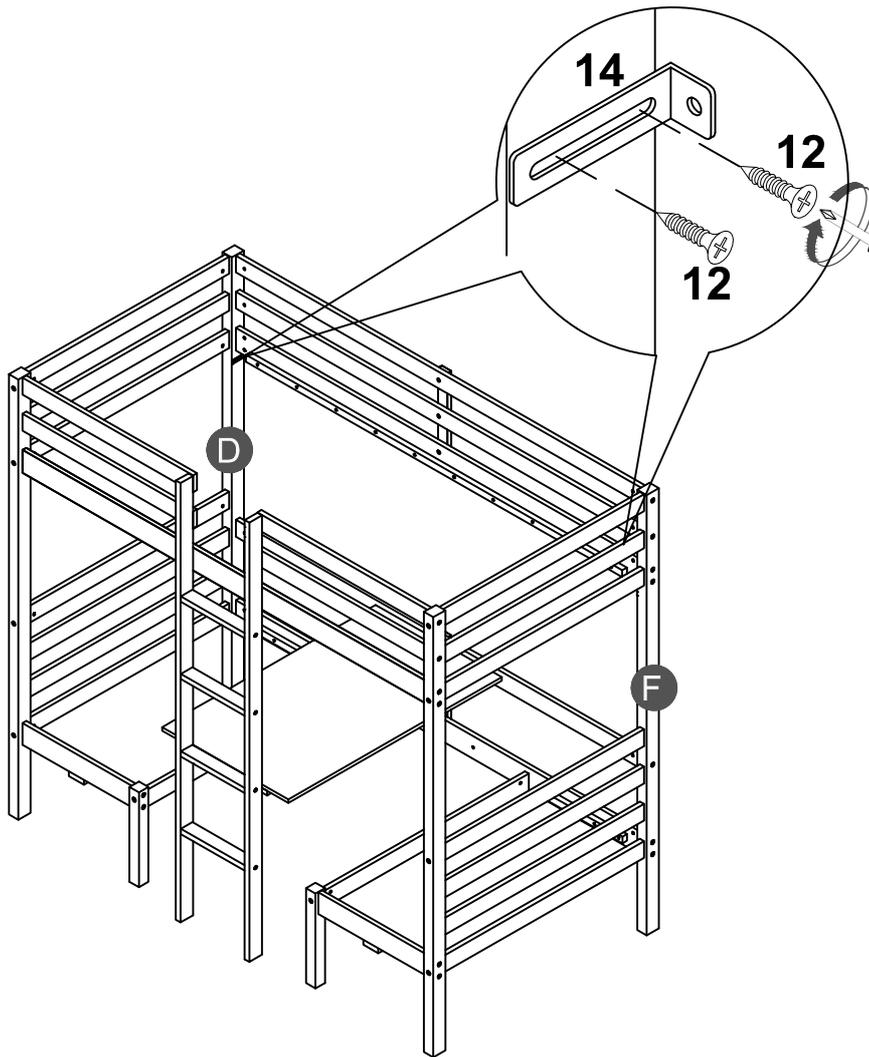


STEP B:

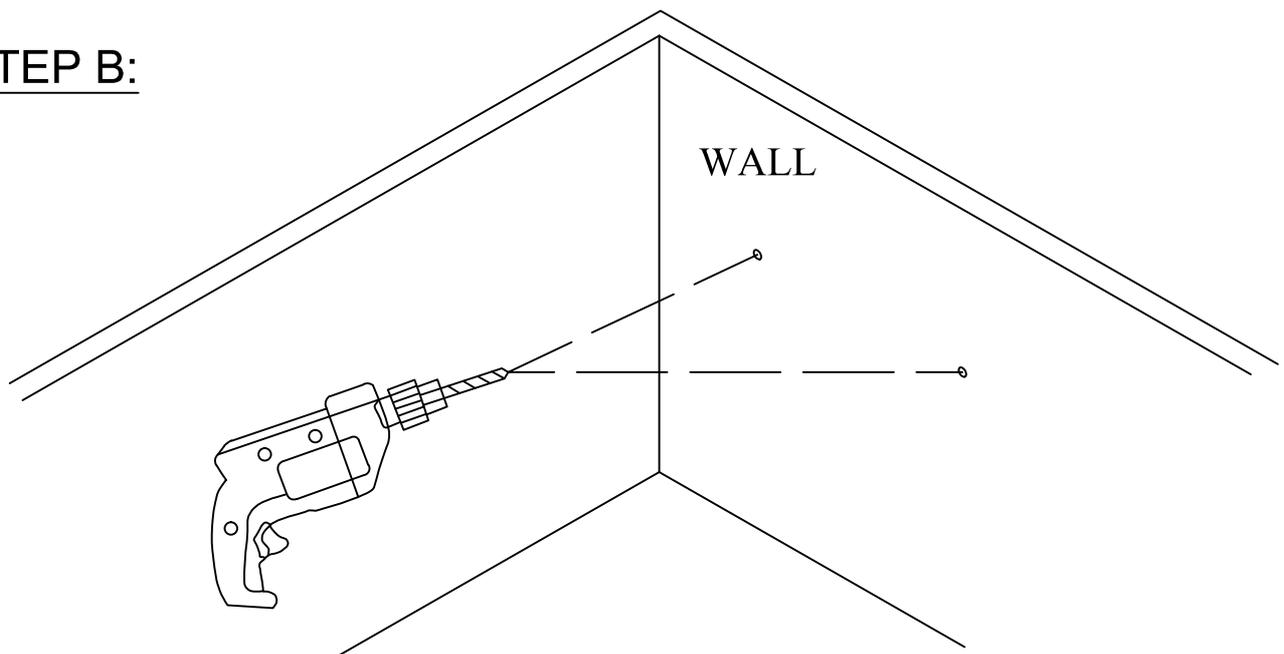

Drill holes in the wall.

STEP C:

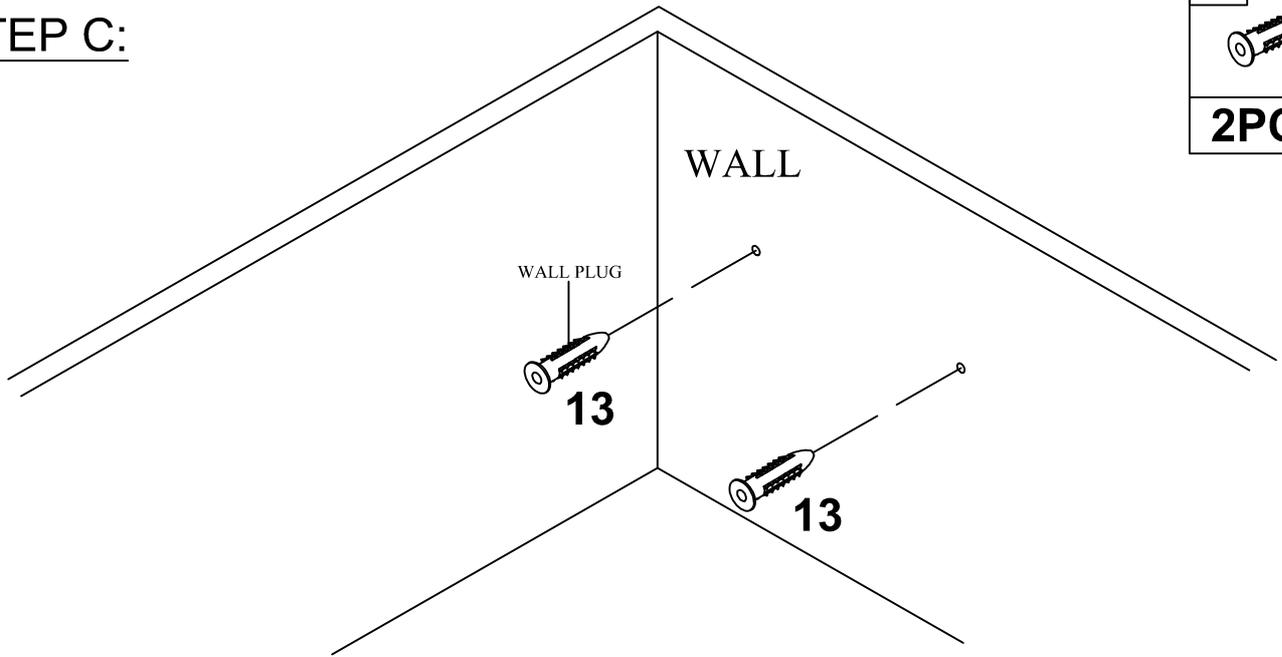


13



2PCS

To drive plastic anchor into the wall.

STEP D:

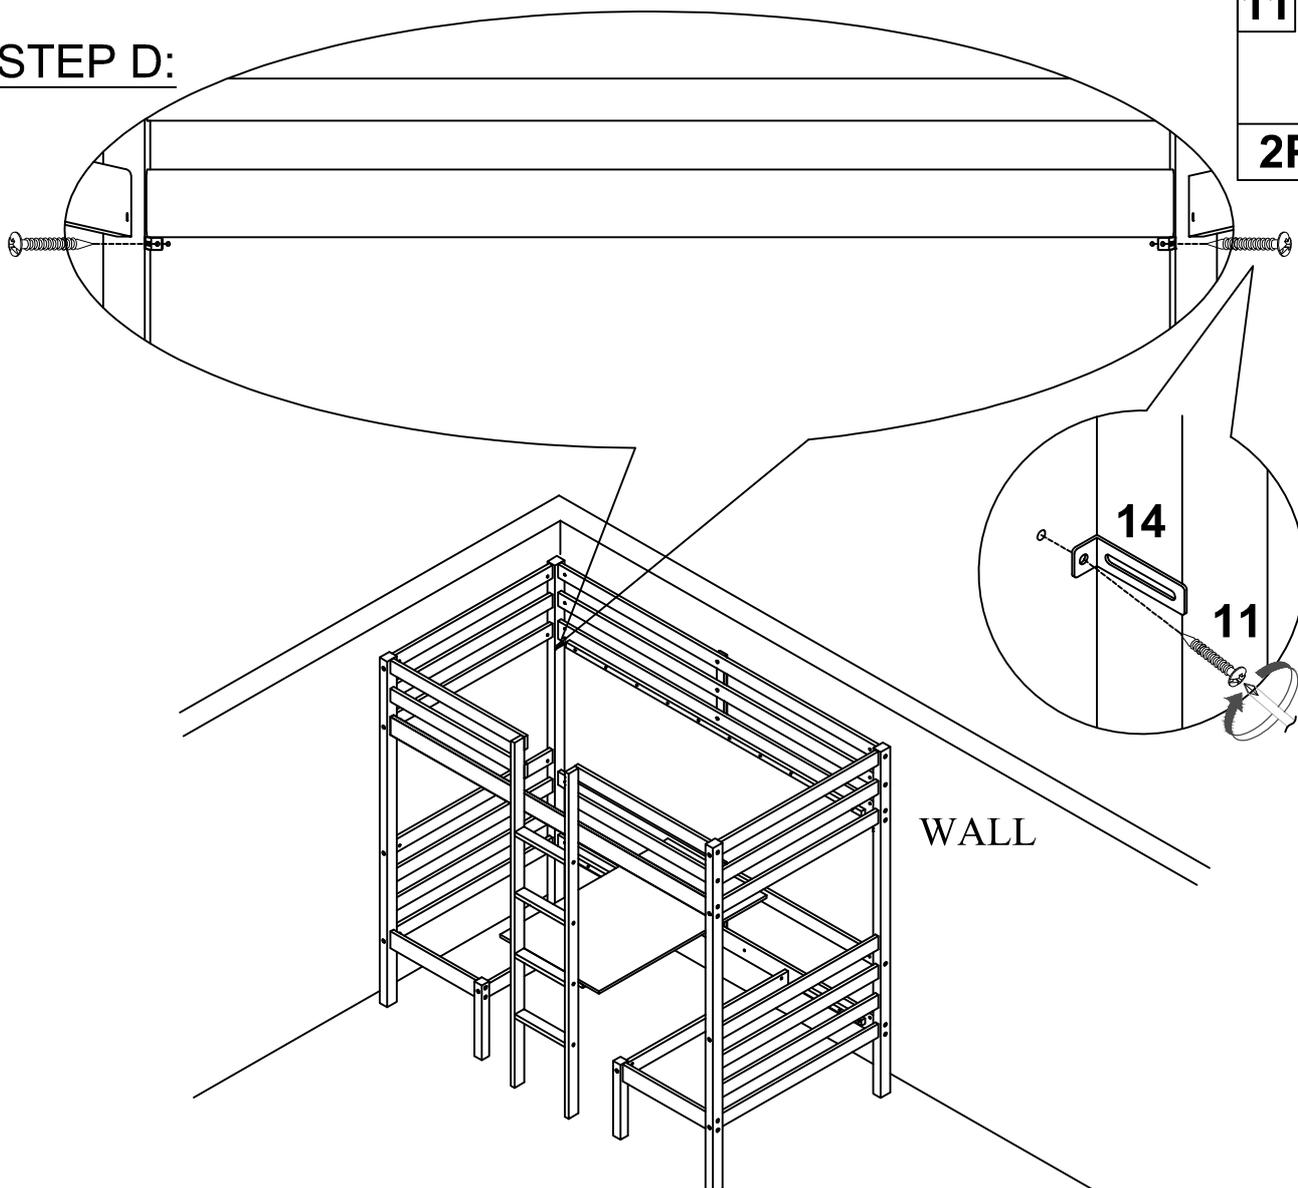

11



2PCS


Fix the bracket to the wall with screw.

STEP 10B:

8




4PCS

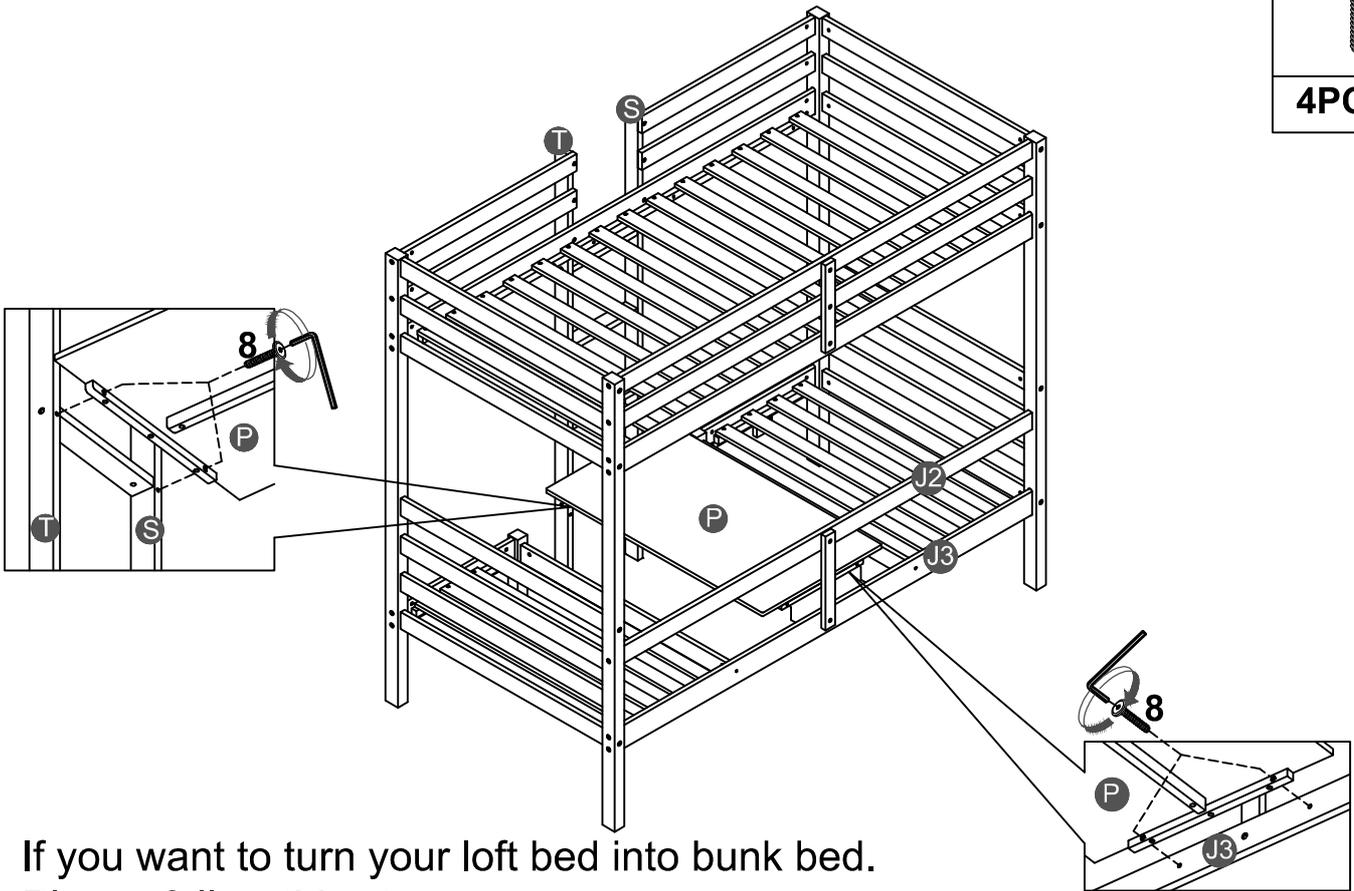

If you want to turn your loft bed into bunk bed.
Please follow this step.

STEP 14B:

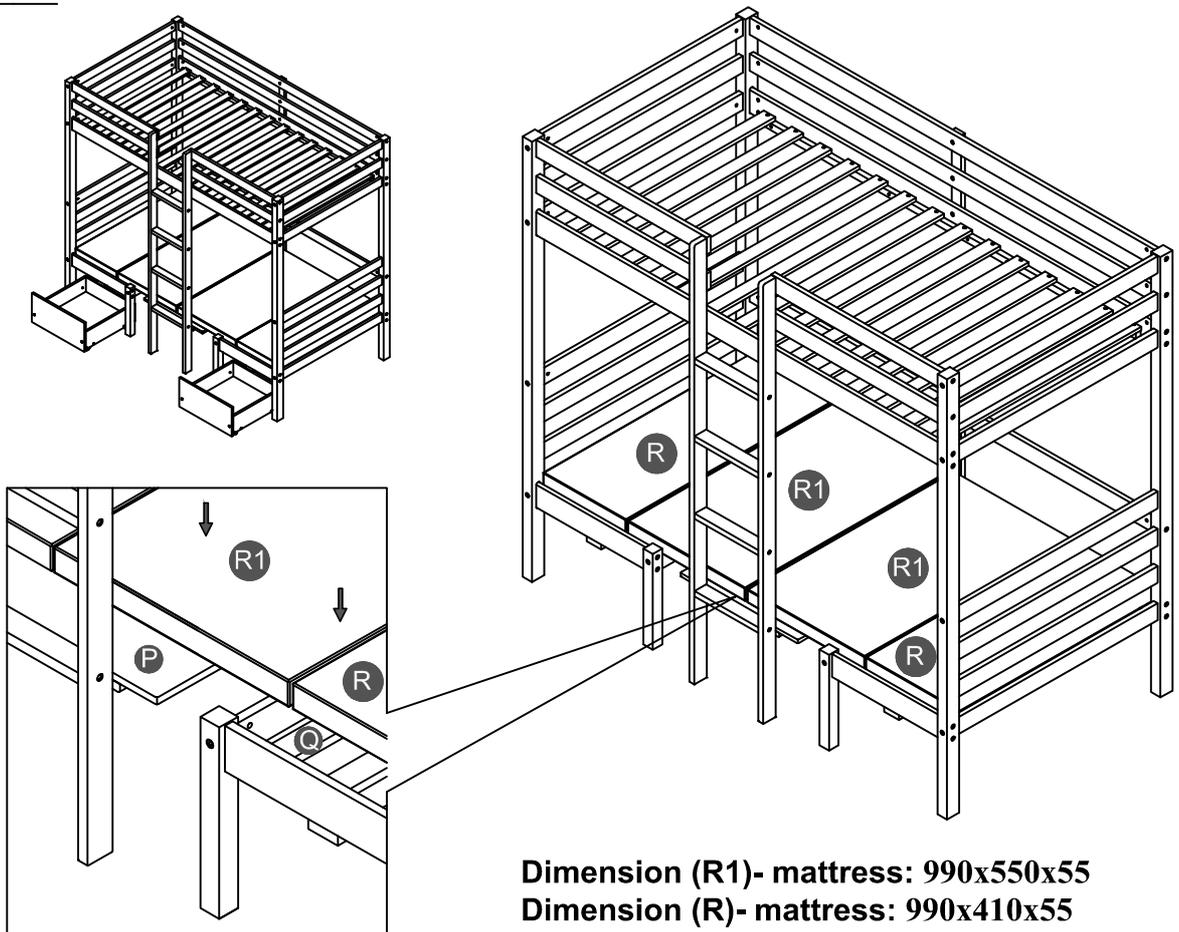

Dimension (R1)- mattress: 990x550x55
Dimension (R)- mattress: 990x410x55