# Assembly Instruction Sheet #IS-1040P32-O For Style 1040P32-O

Tools Required: Flathead screwdriver, Phillips screwdriver, pilers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (2) 120V LED \*1W DIMMABLE (4000K)


Estimated Assembly Time: 10-20 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts,

# $oldsymbol{\Delta}$ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.


Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

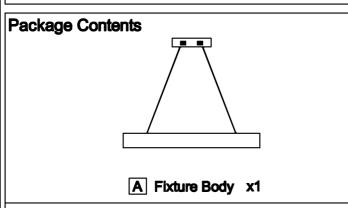


### **Hardware Contents**

Tidiawaio Comonio				
PART	DESCRIPT	TON QU	ANTITY	
AA	Mounting	<b>Balls</b> 2	pcs	
BB	Wire nut	3	pcs	
CC	Outlet Box	Screw 2	pcs	
DD	Mounting	Screw 2	pcs	
EE	Crossbar	1	рсв	
AA	ВВ	cc	DD	EE
≘	Æ		Î	

# STEP 1 - Attach Mounting Screws, Lock Washers and Hex Nuts to Crossbar.

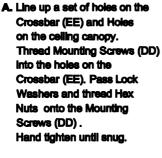

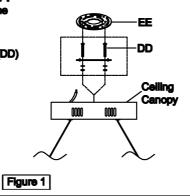

# STEP 2 - Attach Crossbar to Outlet Box.

A.Pass the supply wires through the Crossbar (EE).
Attach the Crossbar (EE) to the Outlet Box (CC)
with the head of the Green Ground Screw facing you.
Secure it with Outlet Box

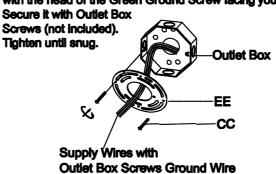


Figure 2

## STEP 3 - Fit Ceiling Canopy to Crossbar Assembly

A. Fit the ceiling canopy to Mounting Screws (DD) and secure with Mounting Balls (AA). Note: The ceiling canopy should be snug against the ceiling and the Mounting Balls (AA). If not, adjust the length of the

If not, adjust the length of the Mounting Screws (DD) by unscrewing the Hex Nut and Lock Washer and then screwing Mounting Screws (DD) in or out of the Crossbar (EE) until the correct length is achieved. Once the celling canopy is secure, remove the Mounting Ball (AA) and celling canopy and proceed to Step 4.

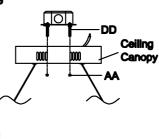


Figure 3

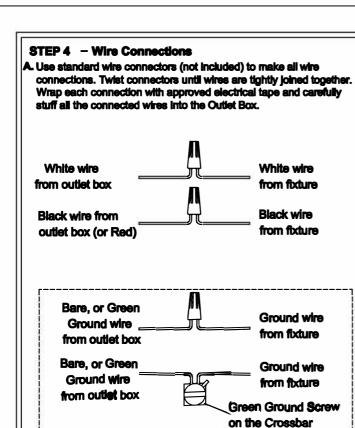


Figure 4

# STEP 5 — Install Celling Canopy to Celling A. Carefully tuck all wires into the outlet box and position the celling canopy of the Fixture Body (A) over the outlet box. Align the holes in the celling canopy with the Mounting Screws (DD). Secure with Mounting Balls (AA) and hand tighten until snug. DD Ceiling Canopy

