

CARE AND MAINTENANCE

Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.
The use of steam or water-based cleaners may cause excessive shrinking or staining.

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.


Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	TOP PANEL		1X
B	SIDE PANEL		2X
C	DOOR		1X
D	BACK PANEL		1X
E	BASE ASSEMBLY		1X
F	LEG		4X
1	40 MM BOLT	M6x40mm 	8X
2	1/2" ROUND HEAD SCREW	M3x13mm 	8X
3	5/8" FLAT HEAD SCREW	M3x16mm 	8X
4	CAMBOLT		8X
5	CAMLOCK		8X
6	HANDLE BOLT		1X

SAFAVIEH FURNITURE

Model# NST5006

Product Dimensions: 18"W x 15 1/2"D x 22"H

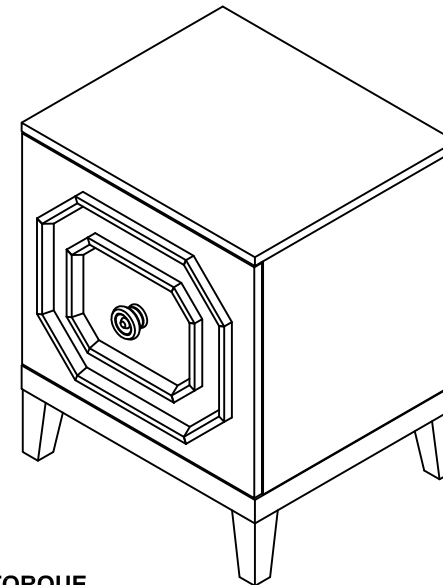



WEIGHT CAPACITY:
TOP: 50 LBS


**WARNING: DO NOT OVER TORQUE
BOLTS/SCREWS**

PIECE	DESCRIPTION	PICTURE	QUANTITY
7	HANDLE		1X
8	HINGE		2X
9	WEDGE		8X
10	DOWEL		8X
11	SPRING WASHER		8X
12	FLAT WASHER		8X
13	ALLEN KEY		1X


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 30 minutes.
Tools Required for Assembly : Phillips Screwdriver

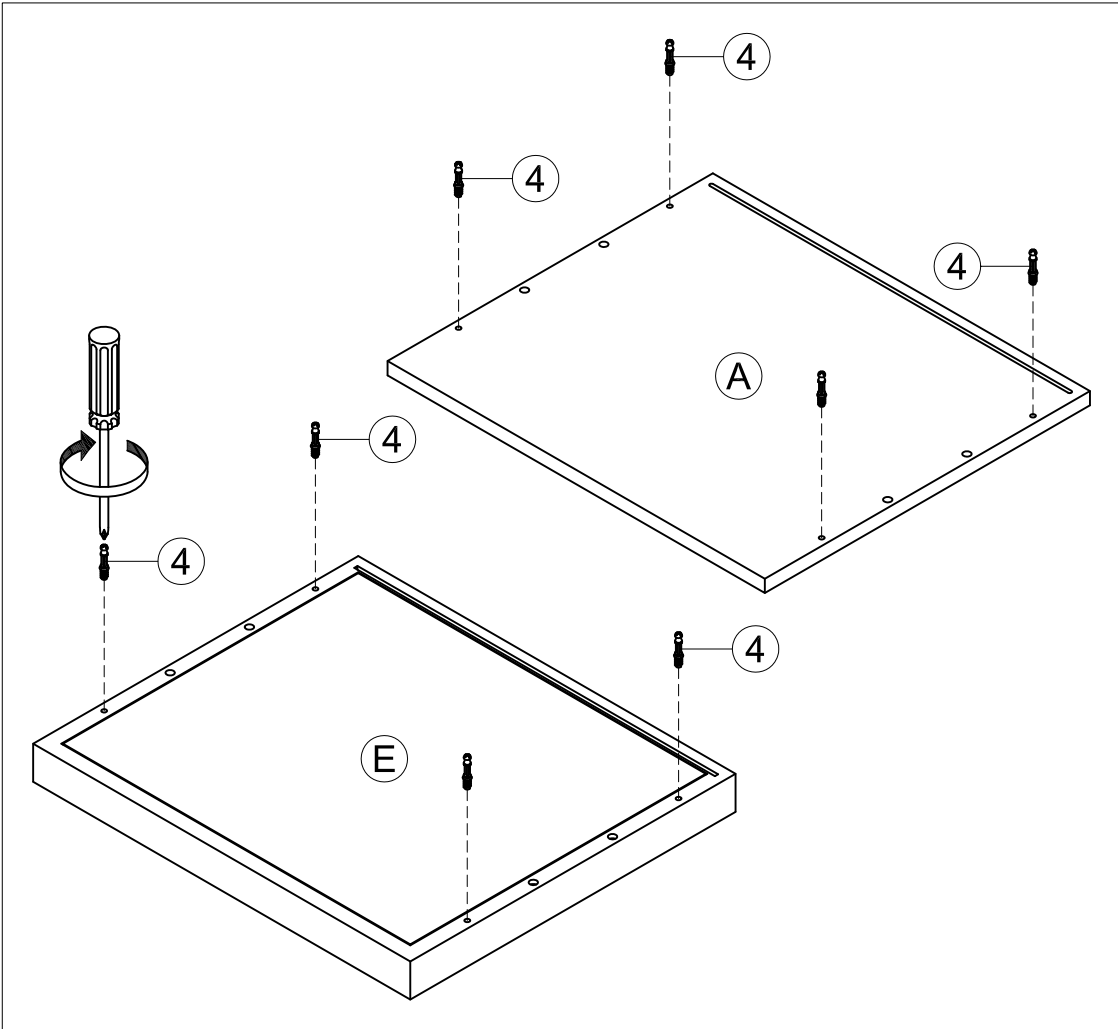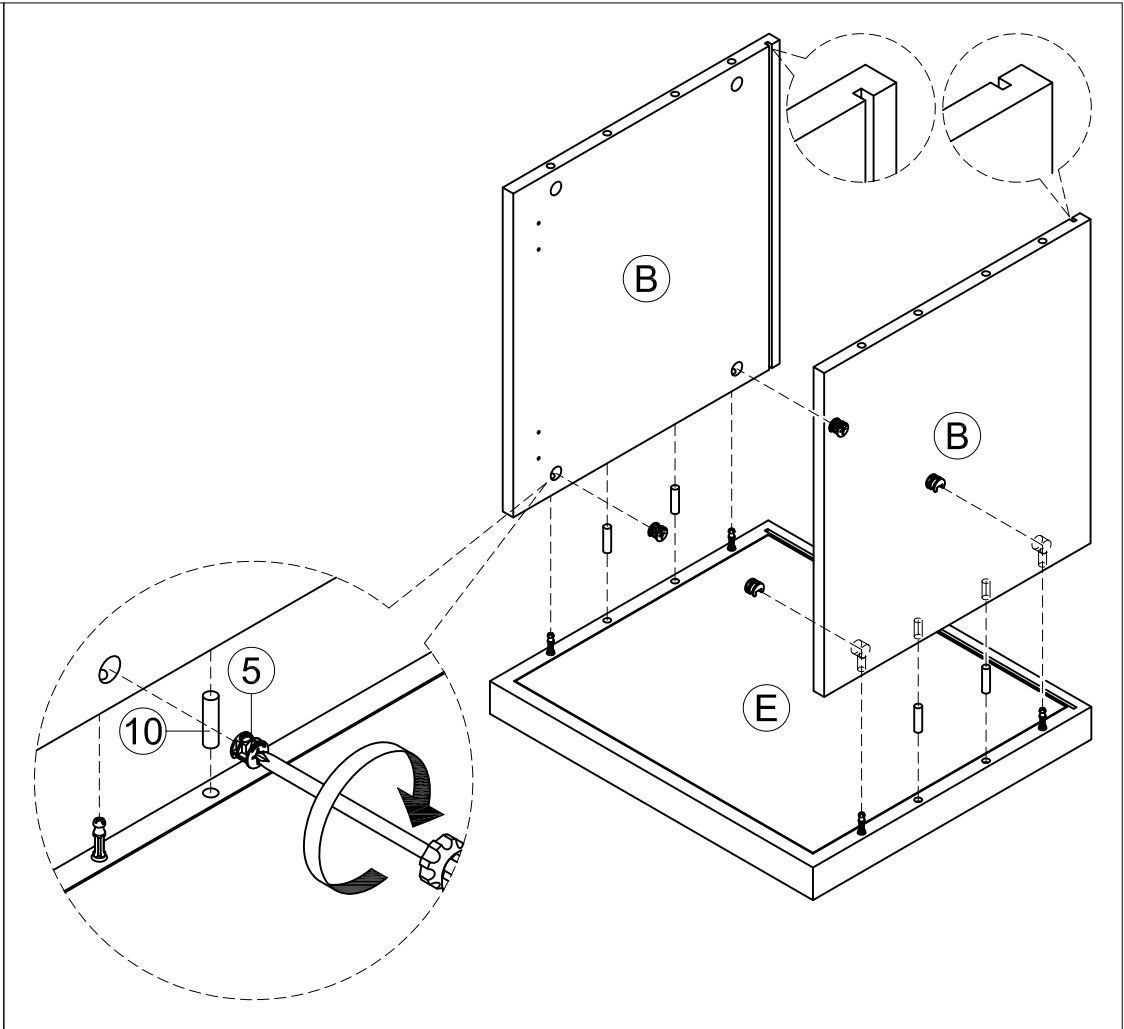
	
STEP 1 ATTACH CAMBOLT TO TOP PANEL AND BASE ASSEMBLY.	STEP 2 ATTACH SIDE PANELS TO BASE ASSEMBLY USING CAM LOCKS AND DOWELS.

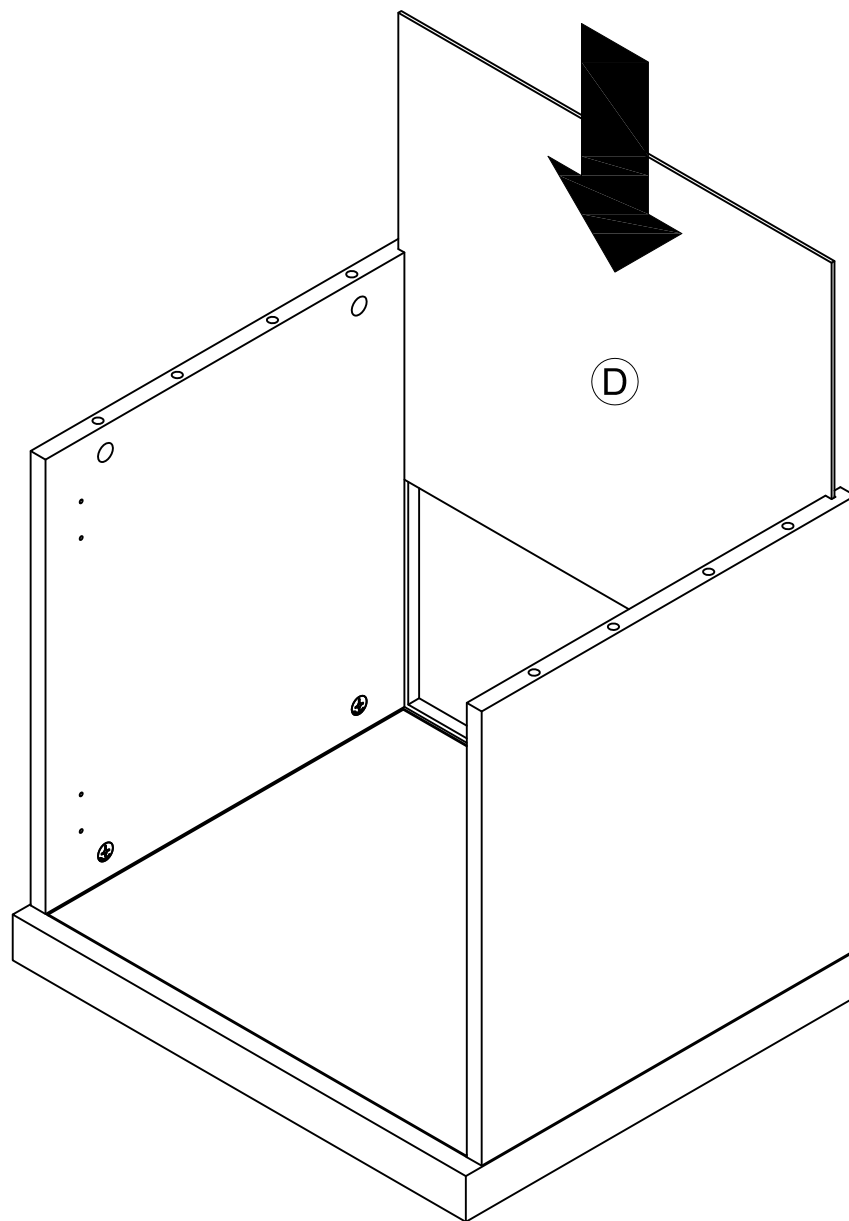


STEP 3 SLIDE BACK PANEL INTO THE GROOVE OF UNIT.

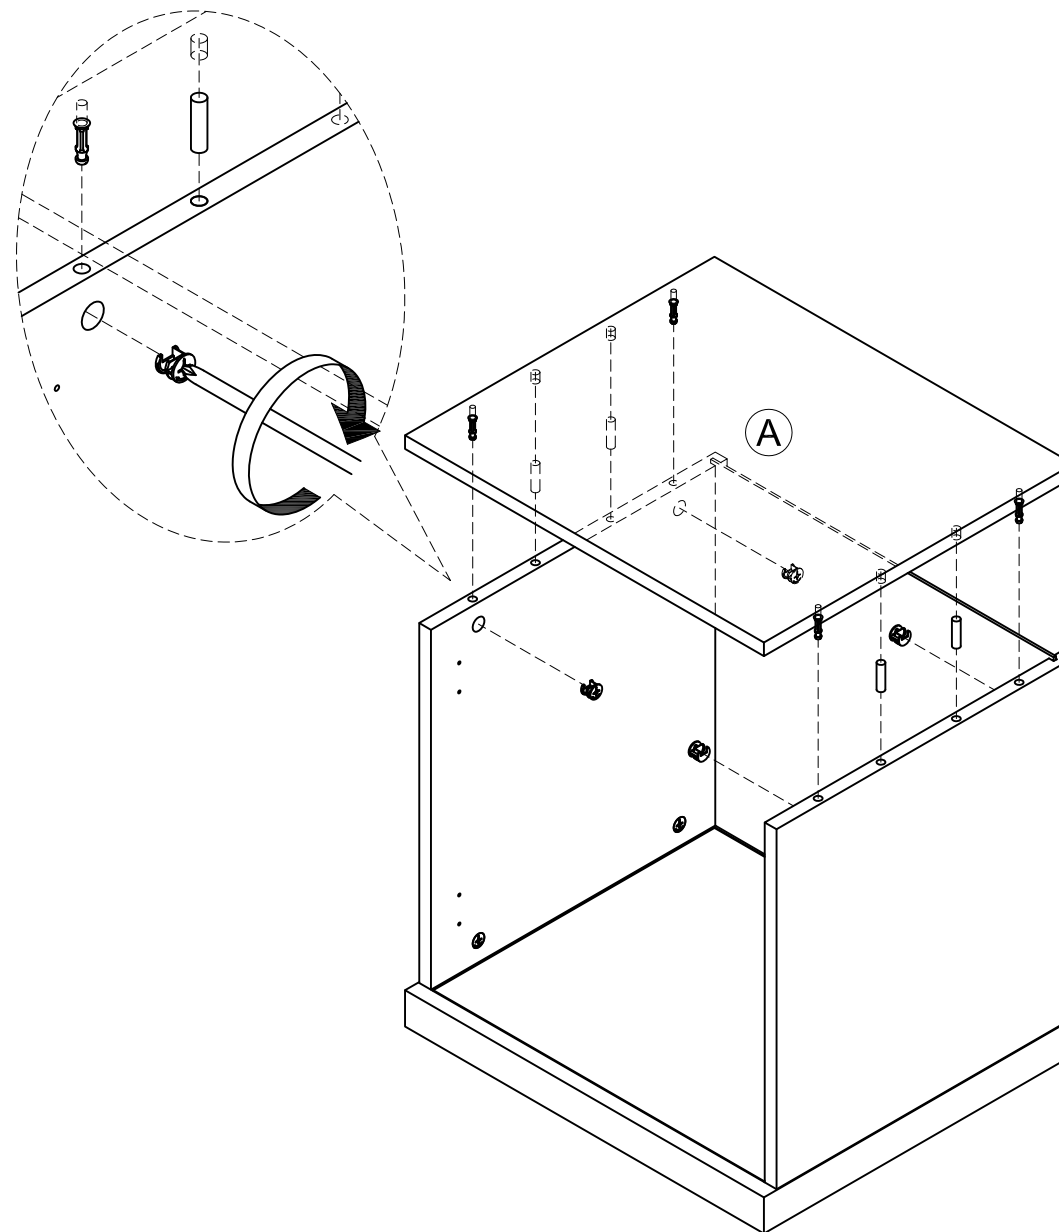


STEP 4 ATTACH TOP PANEL TO UNIT USING CAM LOCKS AND DOWELS.

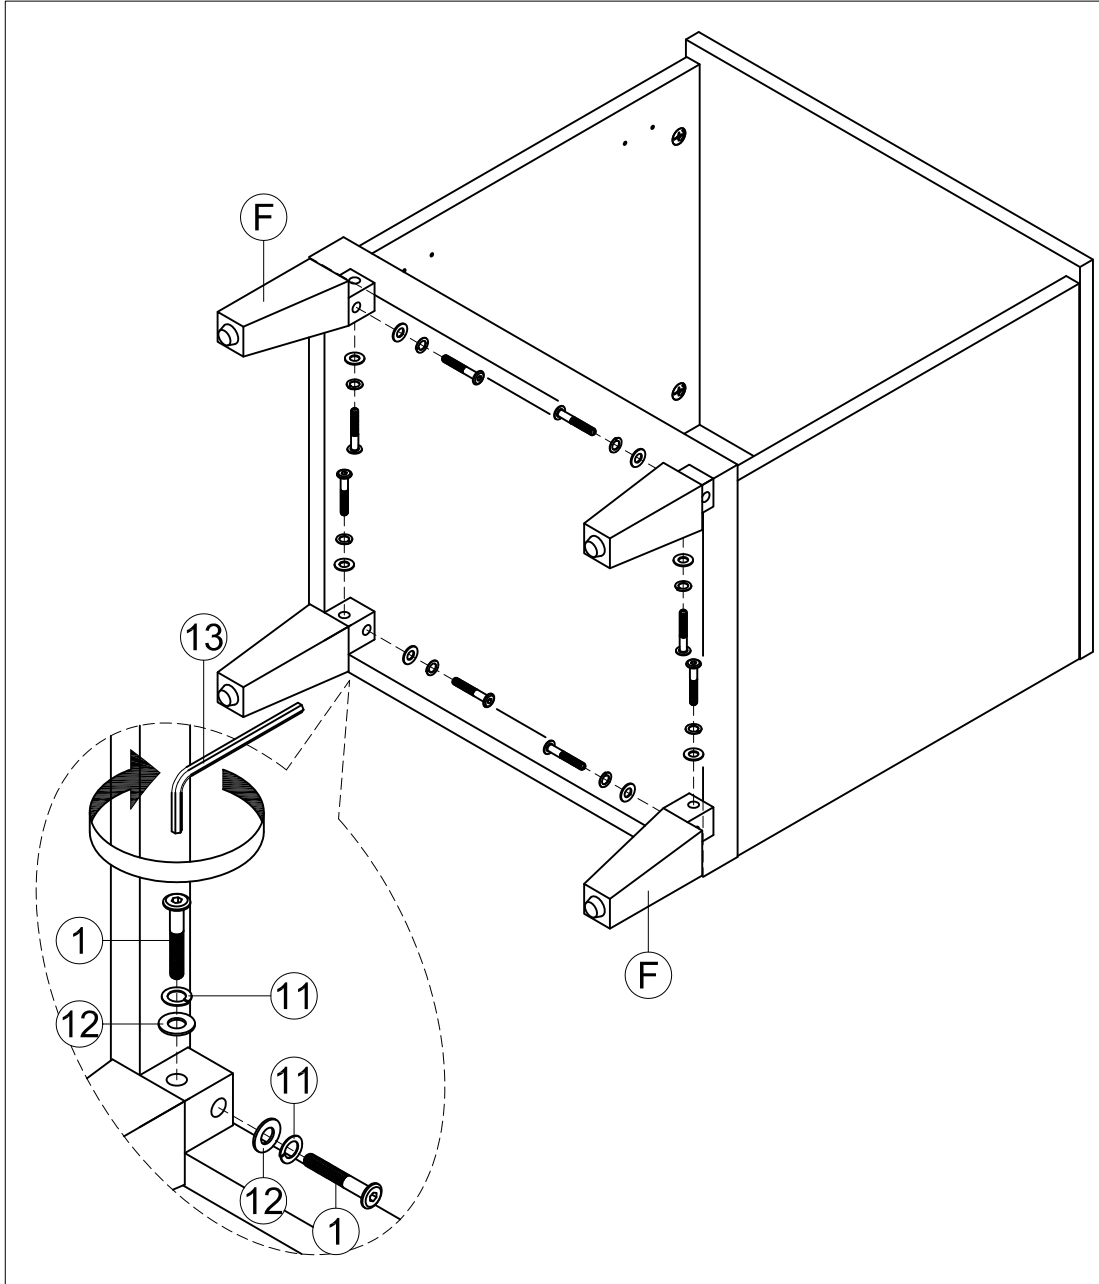


STEP 5 ATTACH LEGS TO UNIT USING BOLTS, SPRING AND FLAT WASHERS. TIGHTEN BOLTS USING ALLEN KEY.

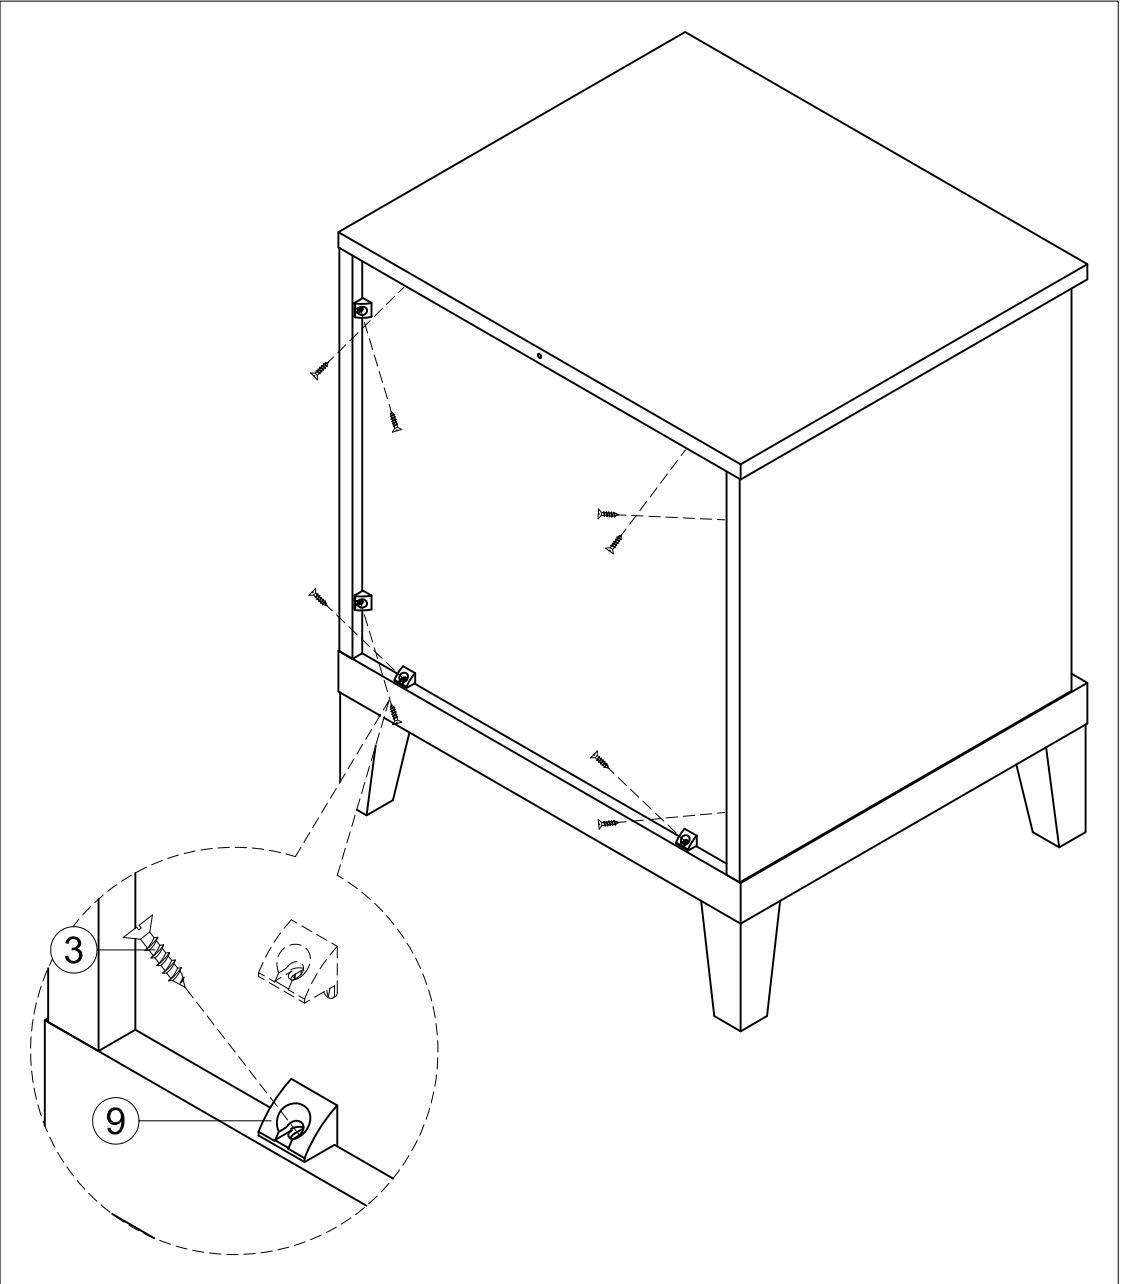


STEP 6 ATTACH WEDGE TO LOCK BACK PANEL USING 5/8" FLAT HEAD SCREW.

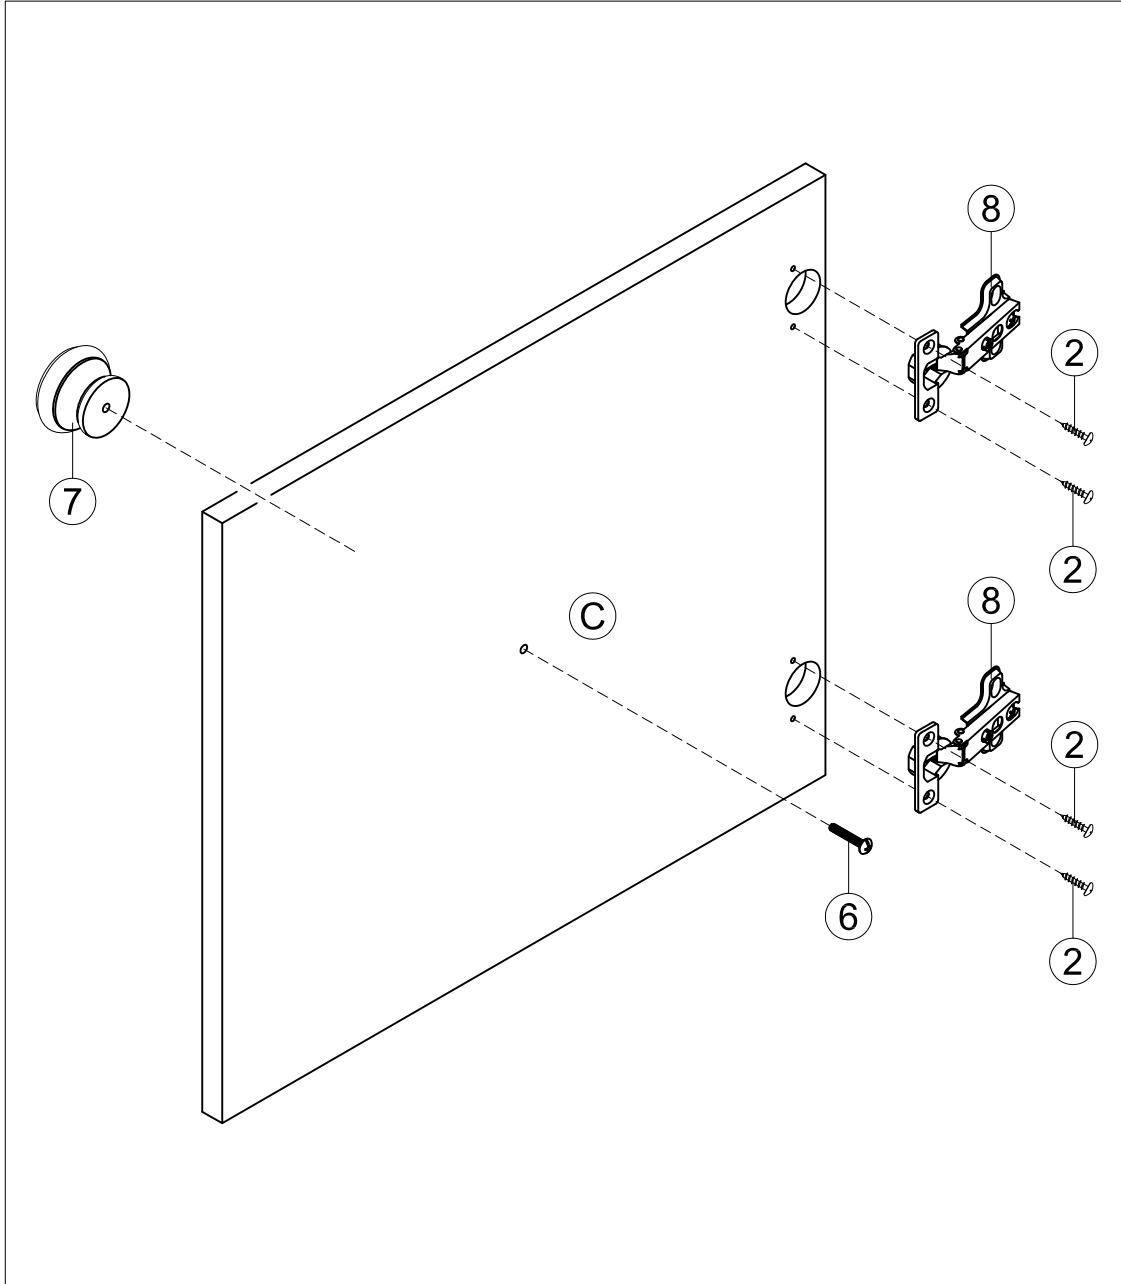


STEP 7 ATTACH HINGES TO DOOR USING 1/2" ROUND HEAD SCREWS. ATTACH HANDLE TO DOORS USING HANDLE BOLT.

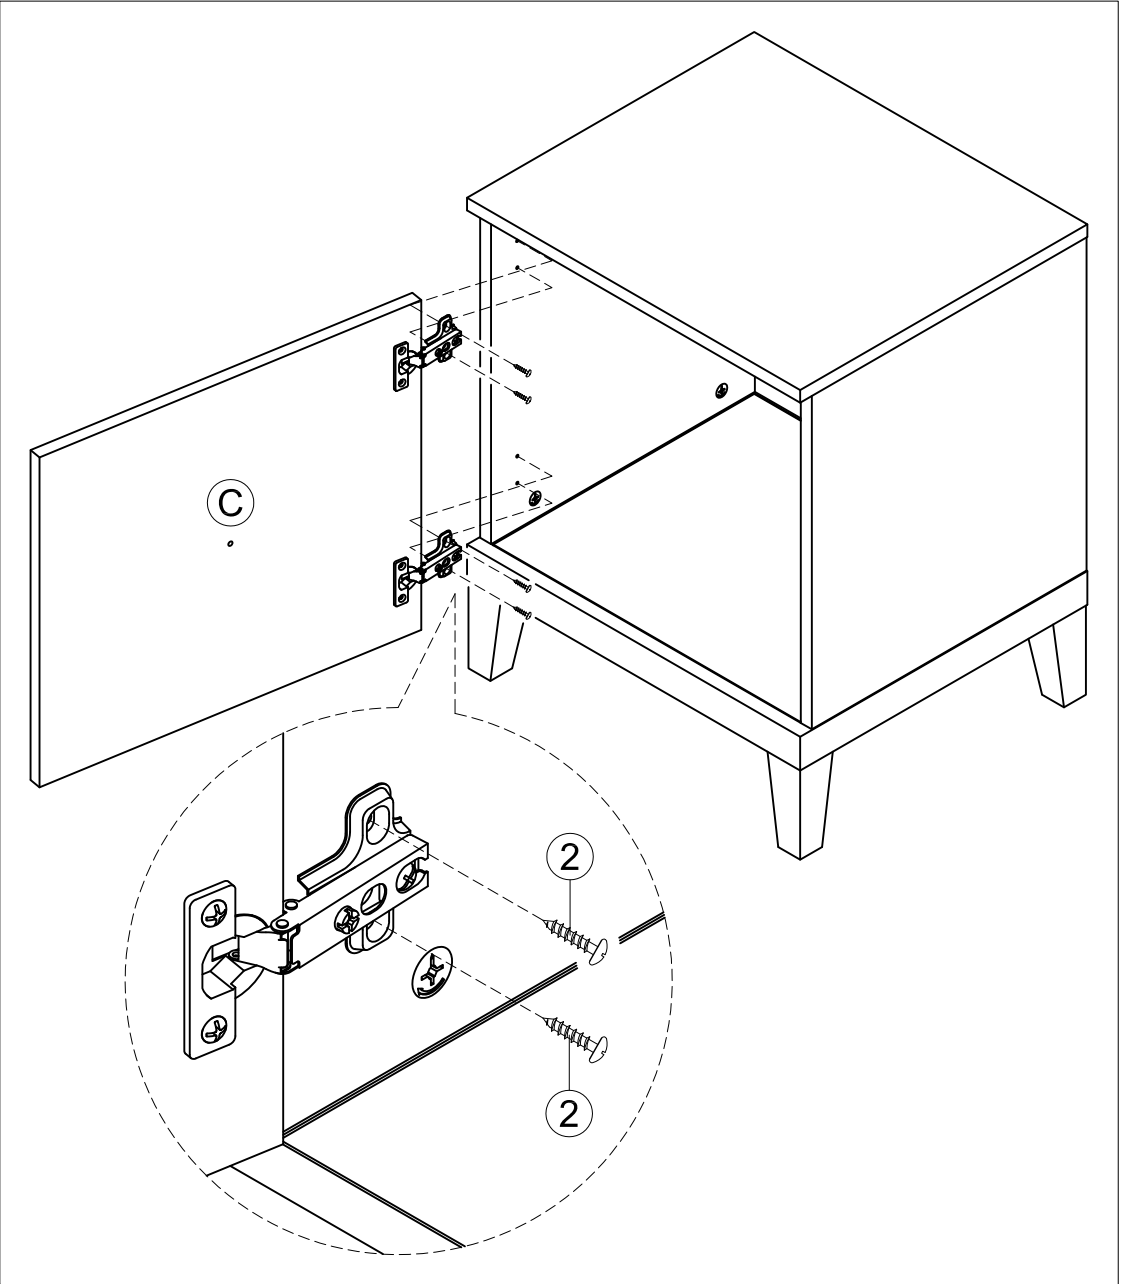

STEP 8 IF YOU NEED THE UNIT WITH LEFT DOOR, ATTACH THE DOOR TO THE LEFT OF UNIT USING 1/2" ROUND HEAD SCREWS.

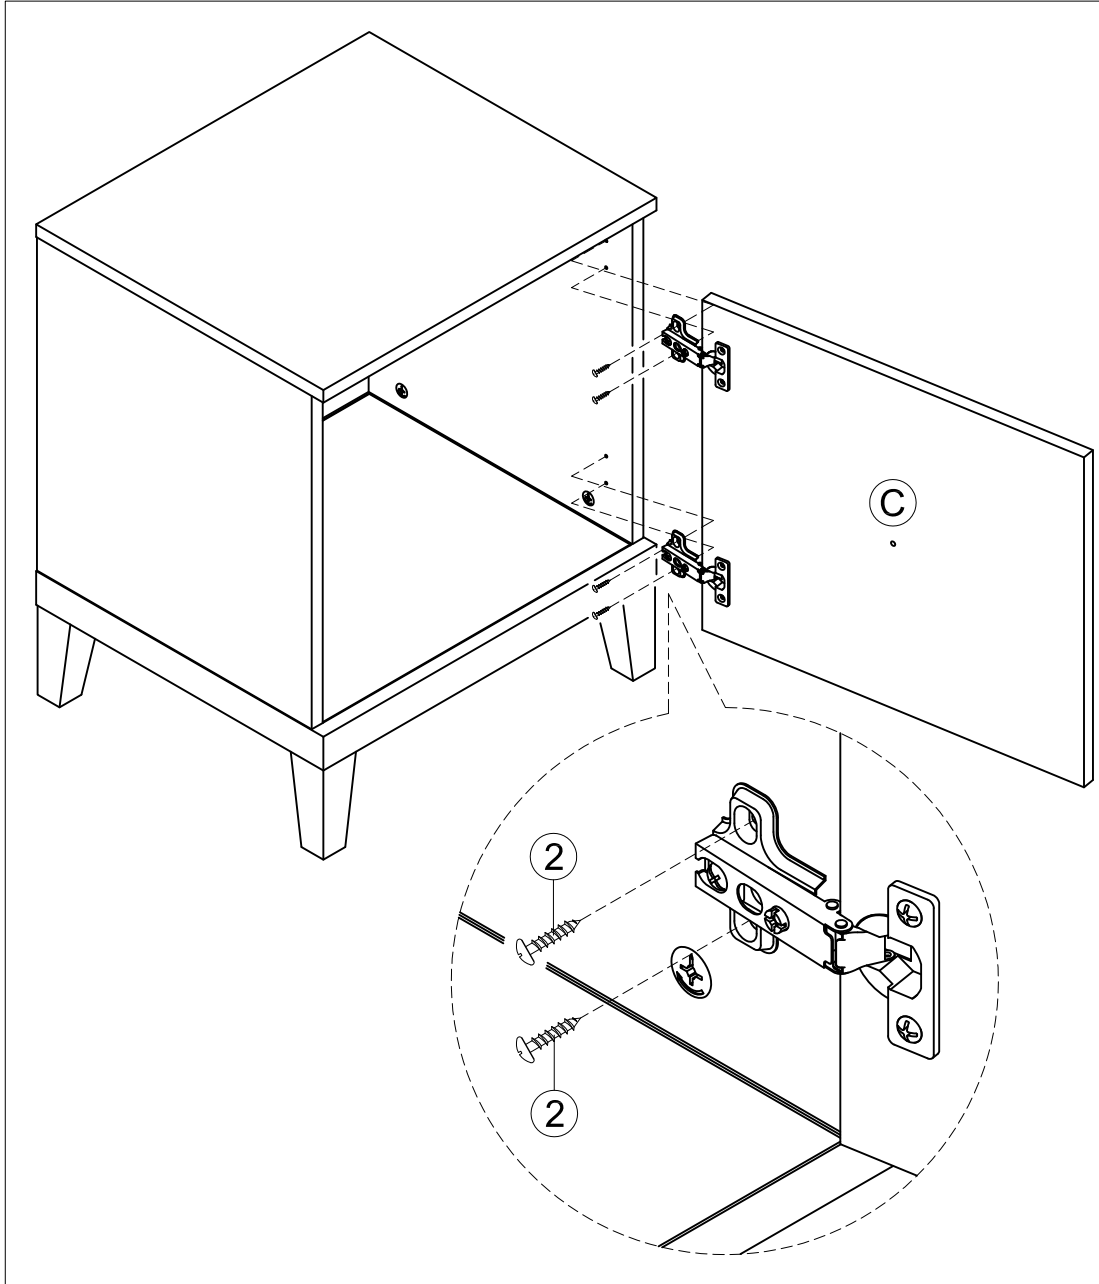

STEP 9 IF YOU NEED THE UNIT WITH RIGHT DOOR, ATTACH THE DOOR TO THE RIGHT OF UNIT USING 1/2" ROUND HEAD SCREWS.

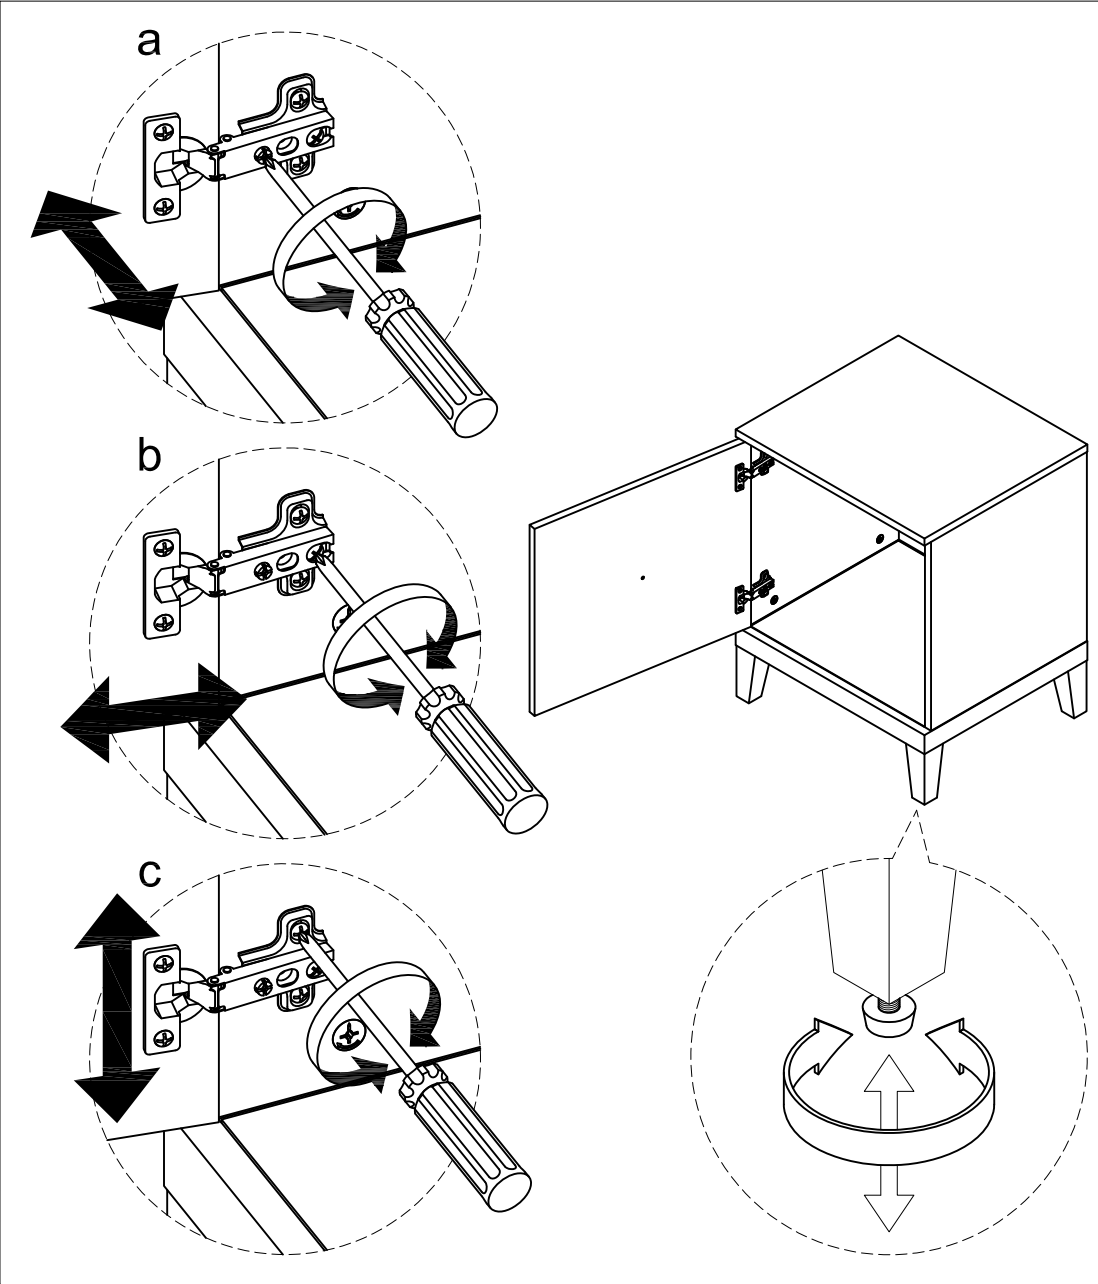

STEP 10 (a) ADJUST THE DOOR PANEL LEFT OR RIGHT. (b) ADJUST THE DOOR PANEL FORWARD OR BACKWARD. (c) ADJUST THE DOOR PANEL UP OR DOWN. ADJUST THE ADJUSTER BOLT THAT HAS ALREADY ASSEMBLED TO THE LEGS TO STABILIZE YOUR UNIT.