

CARE AND MAINTENANCE

Wipe clean with a soft cloth dampened in water and a mild soapy solution. Wipe dry with a clean and dry cloth.

this rattan basket requires no maintenance

however, by keeping the furniture clean and storing it properly you can enjoy it year after year.

If there are any questions relating to missing parts, assembly issues or replacements, please send a detailed email to hello@happimess.com







NOTICE

* Please make sure that you have all parts indicated before you begin assembly of this item

* This item Should be assembled on a soft surface to prevent scratching the finish during assembly

* This Item may require periodic tightening

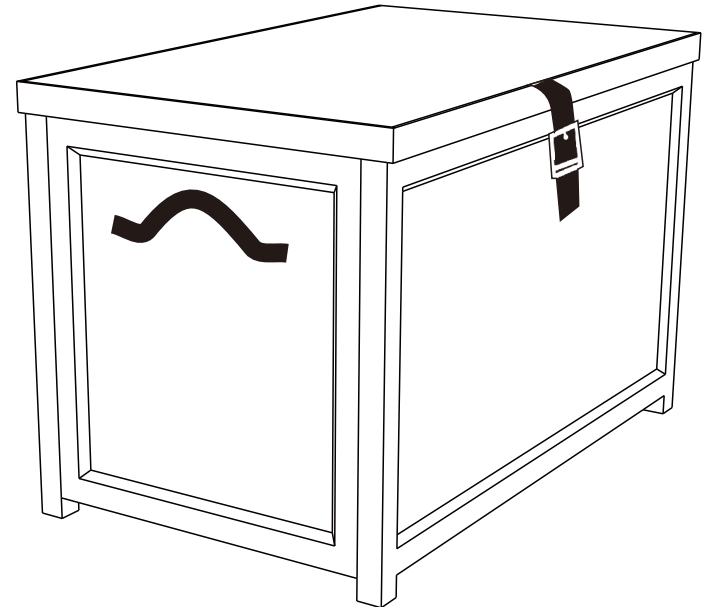
Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QTY
A	Side Frame		1
B	Bottom Base		1
C	Inter liner		1
D	Allen Bolt		4
E	Washer		4
F	Allen Key		1

happimess

Item # : HPM9004

Product Dimensions : W35.03" x D22.04" x H23.22"



Weight Capacity : 33.06 Lbs

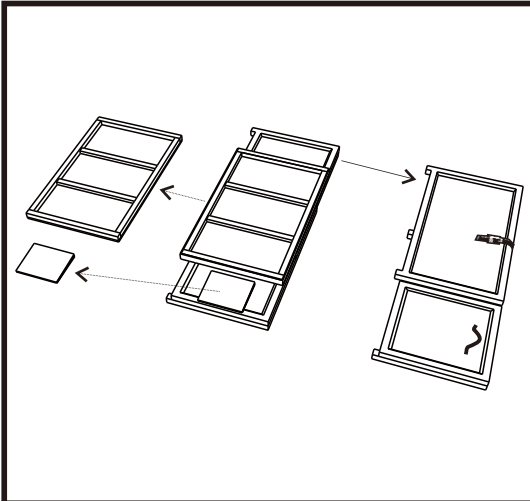
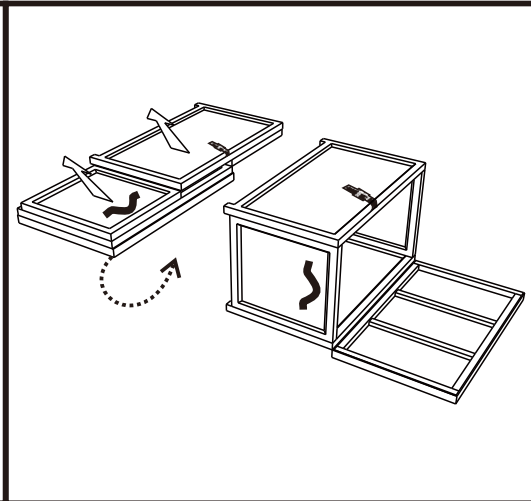
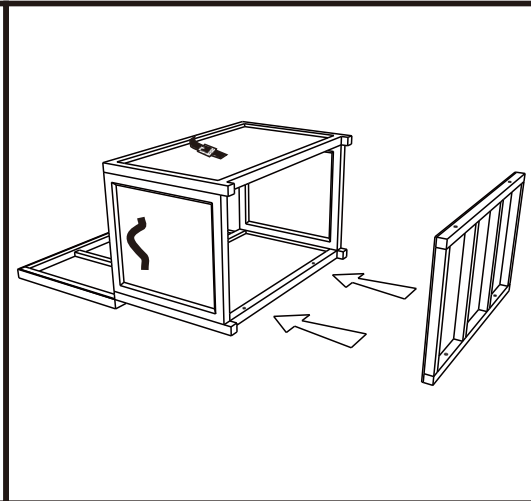
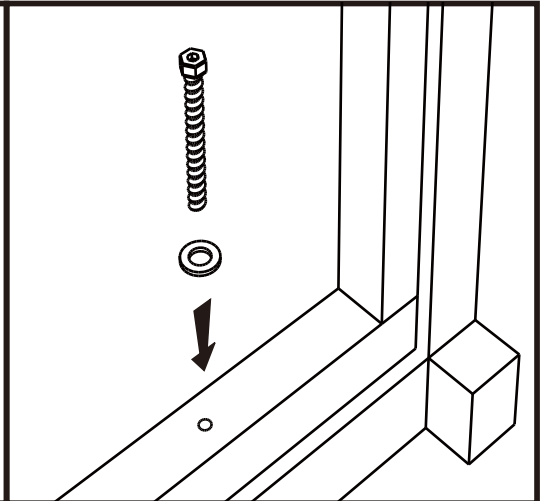
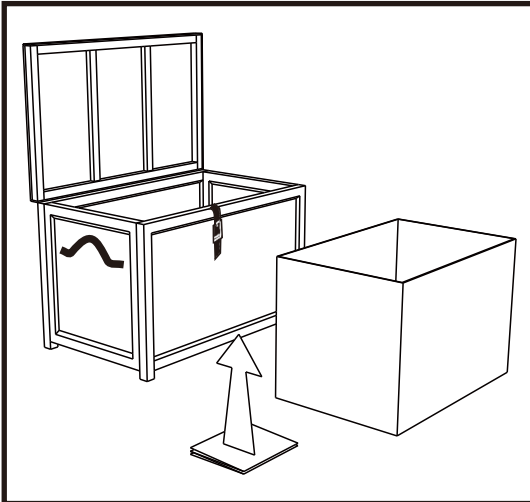
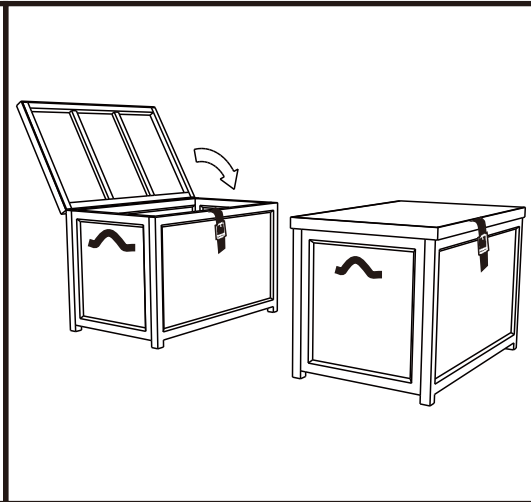
Warning : Do not stand on Basket

Warning : Do not sit on basket



PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware content list. If any parts is missing or damaged, do not attempt to assemble the product
Estimated Assembly Time 10 Minutes.

 <p>This diagram shows the initial components of the trunk laid out on a flat surface. It includes two side panels, a bottom base, and a small rectangular piece, with arrows indicating their relative positions for assembly.</p>	 <p>This diagram illustrates the process of unfolding one of the side panels. A dashed arrow indicates the panel being pulled upwards and outwards from its folded state into an open position.</p>	 <p>This diagram shows the bottom base being aligned and slid onto the protruding legs of the side frame. Arrows indicate the direction of movement.</p>	 <p>This diagram is a close-up showing an Allen bolt with a washer being inserted into a pre-drilled hole in the corner of the side frame to secure the bottom base.</p>
STEP 1 : SPREAD ALL COMPONENTS AND SPARE PARTS IN YOUR WORK AREA	STEP 2 : UNFOLD THE SIDE FRAME BY PULLING UP ONE OF ITS SIDES	STEP 3 : SLIDE THE BOTTOM BASE ON THE SIDE FRAME WHERE THE PROTRUDING LEGS ARE	STEP 4 : MOUNT EACH ALLEN BOLT WITH A WASHER AND THEN FASTEN THE BOTTOM BASE TO THE SIDE FRAME. DO NOT OVERTIGHTEN
 <p>This diagram shows the interior liner, which is a flat rectangular piece, being placed inside the trunk. An arrow points upwards towards the liner, indicating it should be positioned at the bottom of the frame.</p>	 <p>This diagram shows the final assembled trunk with its lid open. The interior liner is visible, and the trunk is shown in its fully functional state.</p>		
STEP 5 : UNFOLD THE INTERIOR LINER AND PLACE IT INSIDE THE TRUNK AND THEN FASTEN TO THE HOOK-AND-LOOP	STEP 6 : THE TRUNK IS COMPLETED		