




MANHATTAN  
COMFORT

---

# Sheridan Sideboard Cabinet SB-4GLF

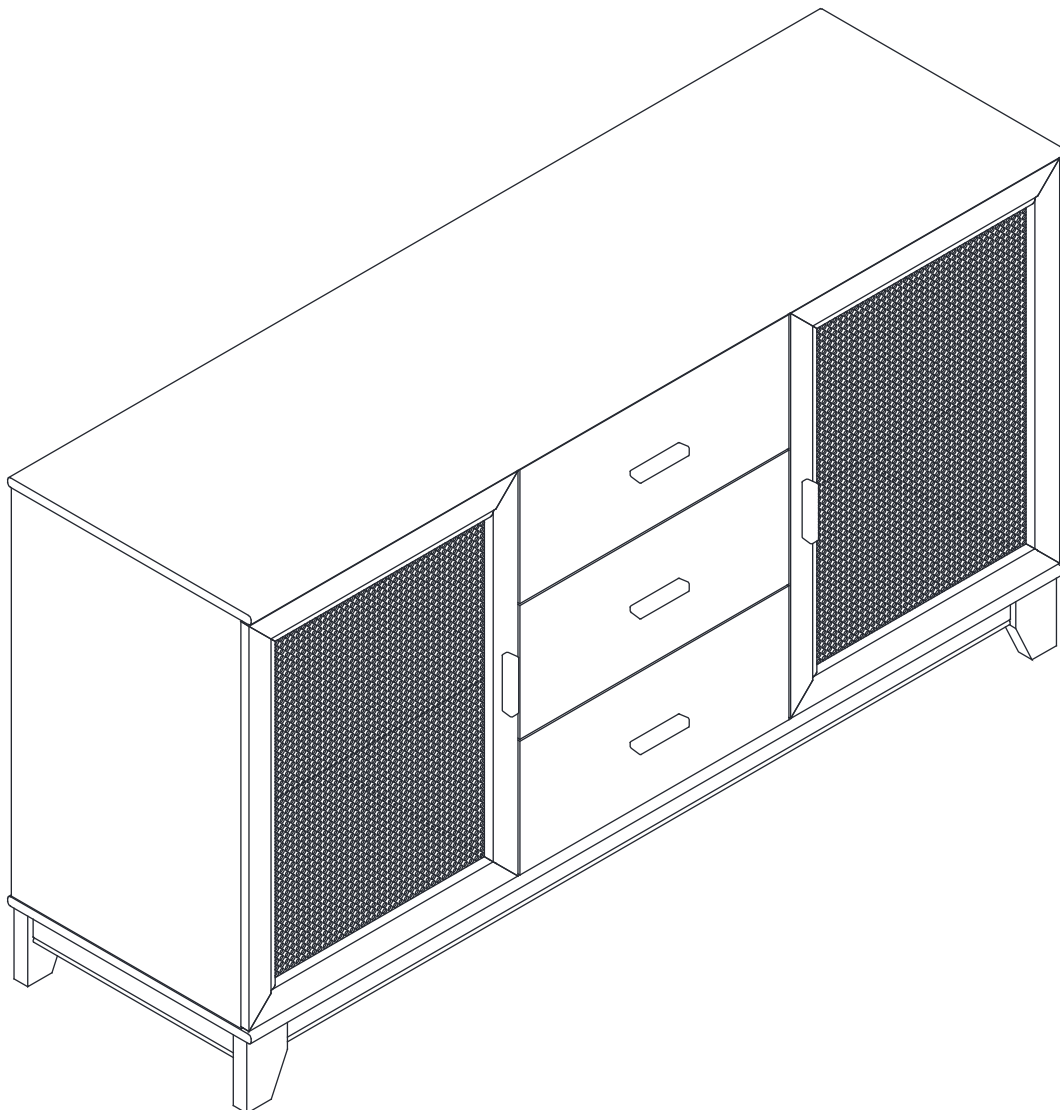







# STOP!


Before beginning the assembly process,  
ensure all boxes and parts have been delivered.

## FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

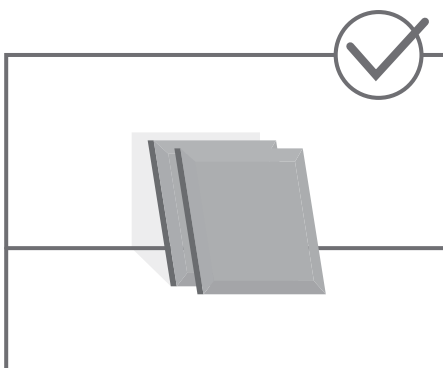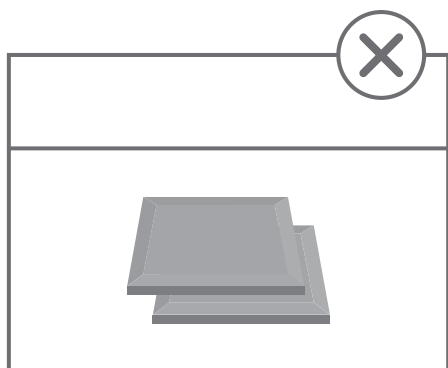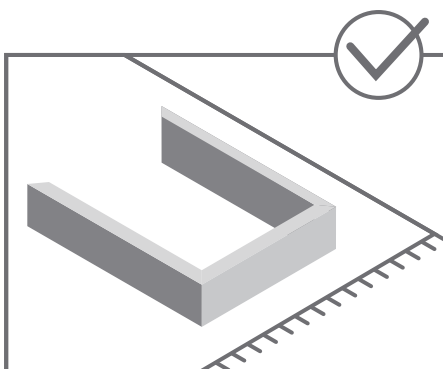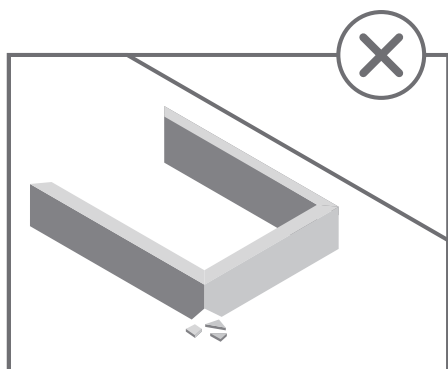

### TOOLS REQUIRED

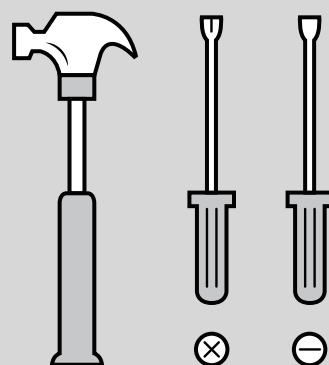


View our assembly video online:  
[WWW.MANHATTANCOMFORT.COM](http://WWW.MANHATTANCOMFORT.COM)






Stuck? Question? We are here to help.  
tel 908-888-0818  
e-mail: [help@manhattancomfort.com](mailto:help@manhattancomfort.com)

# Included in this package:



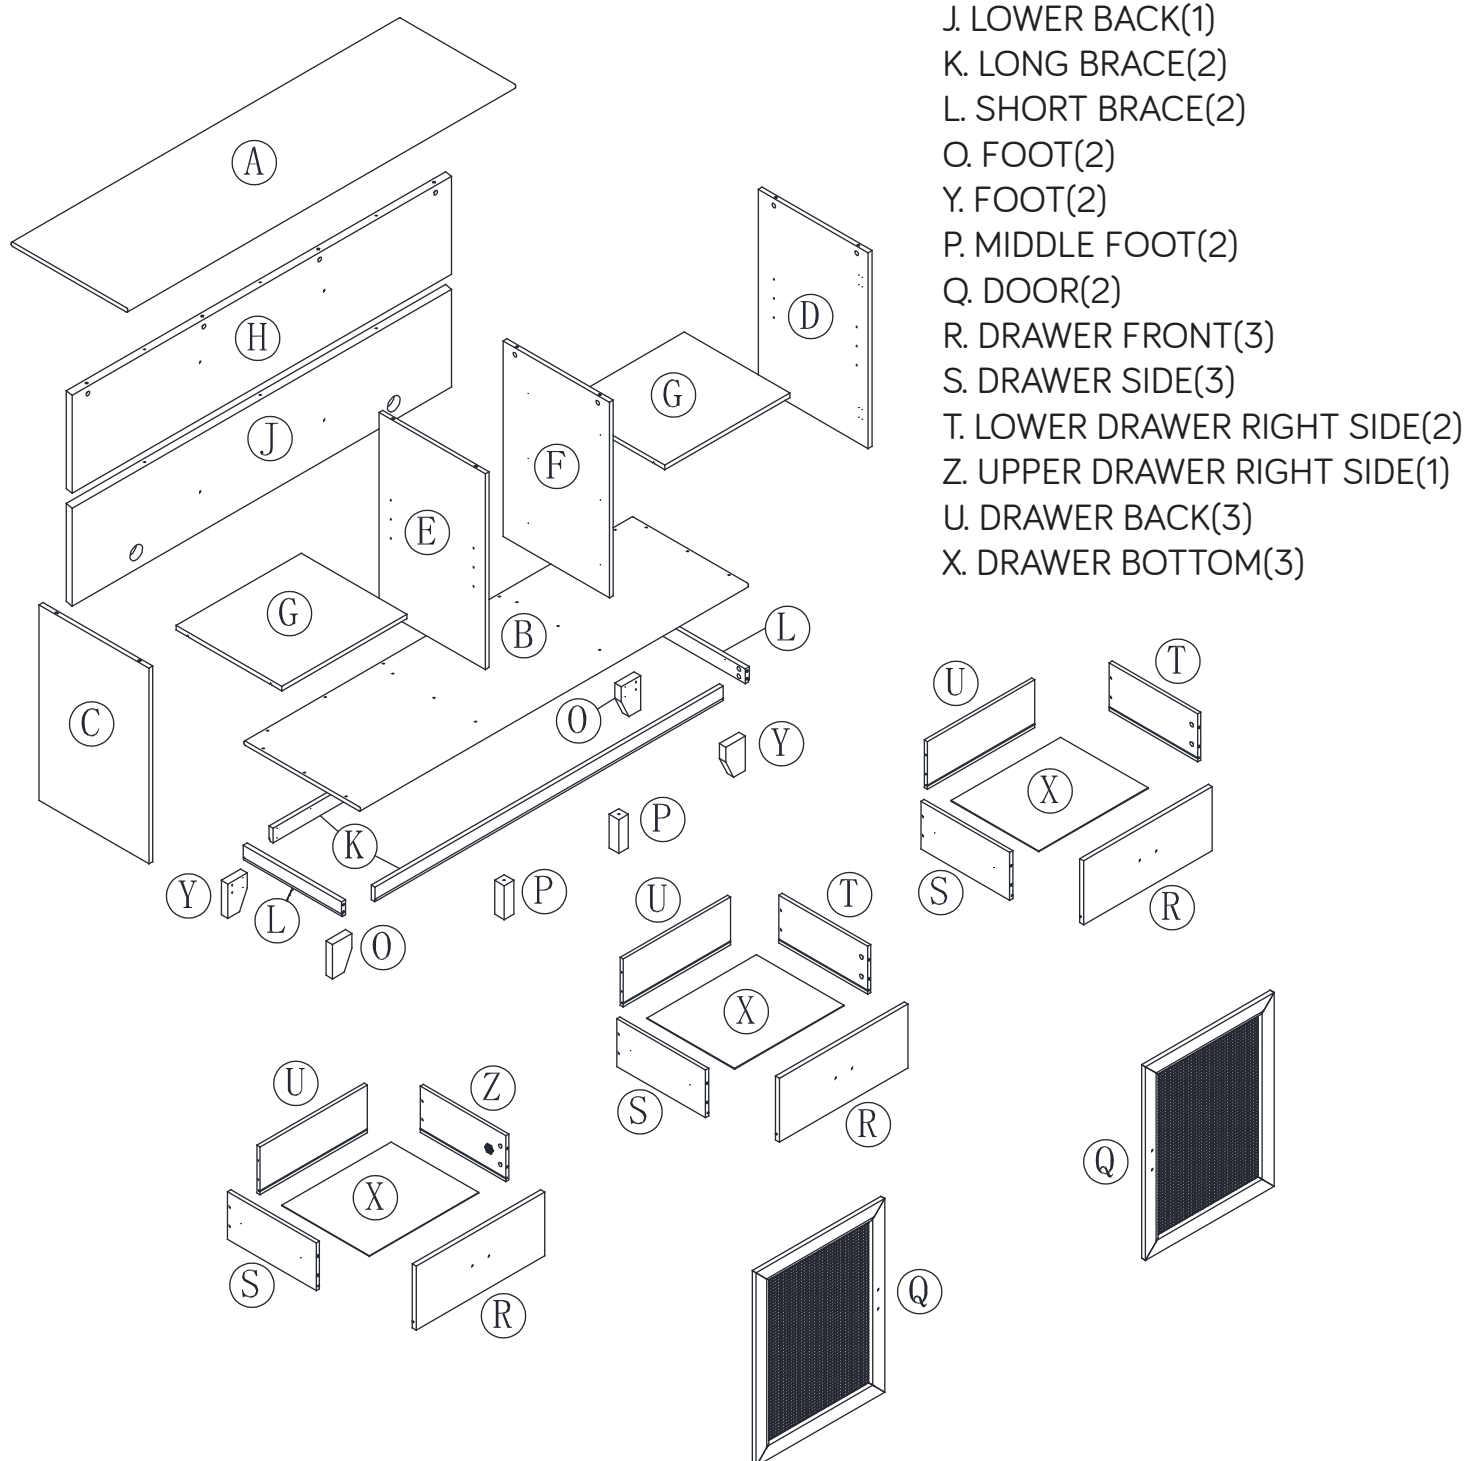


# Hardware Identification





- ① EXTENSION RAIL - 6pcs    ② EXTENSION SLIDE - 6pcs    ③ CAM SCREW - 32pcs

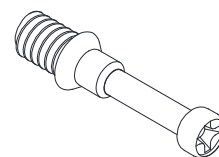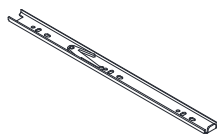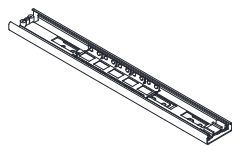



- ④ HIDDEN CAM - 32pcs    ⑤ APPLIQUE CARD - 6pcs    ⑥ PULL - 5pcs

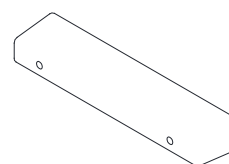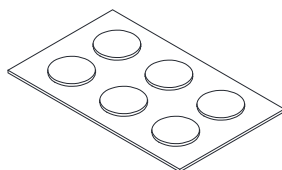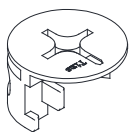




- ⑦ METAL PLATE - 4pcs    ⑧ METAL PIN - 8pcs    ⑨ BRACKET - 12pcs    ⑩ WOOD DOWEL - 13pcs

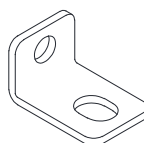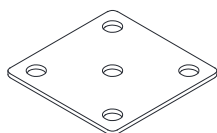





- ⑪ L-WRENCH - 1pc    ⑫ BUMPER CARD - 1pc    ⑬ HINGE - 4pcs

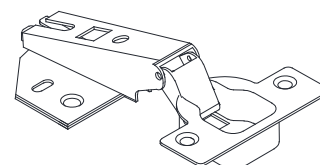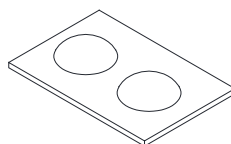

- ⑰ GROMMET WITH CAP - 2pcs    ⑱ PAN HEAD SCREW M5\*40mm - 4PCS    ⑲ PAN HEAD SCREW M5\*30mm - 24PCS

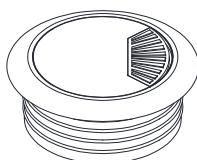

- ⑳ HEX HEAD SCREW M6\*25MM - 2pcs    ㉑ PAN HEAD SCREW M4\*20mm - 10PCS    ㉒ FLAT HEAD SCREW M4\*12mm - 48pcs    ㉓ PAN HEAD SCREW M4\*12MM - 40pcs







# MANHATTAN COMFORT

---

## WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

### THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.






319 Ridge Rd. Dayton, NJ 08810

908-888-0818




# Step 1

- ◆ Assemble your unit on a carpeted floor or on the empty carton to avoid scratching your unit or the floor.
- ◆ Turn thirty-two CAM SCREWS (3) into the TOP(A), DRAWER FRONTS(R) and FEET(O and Y).

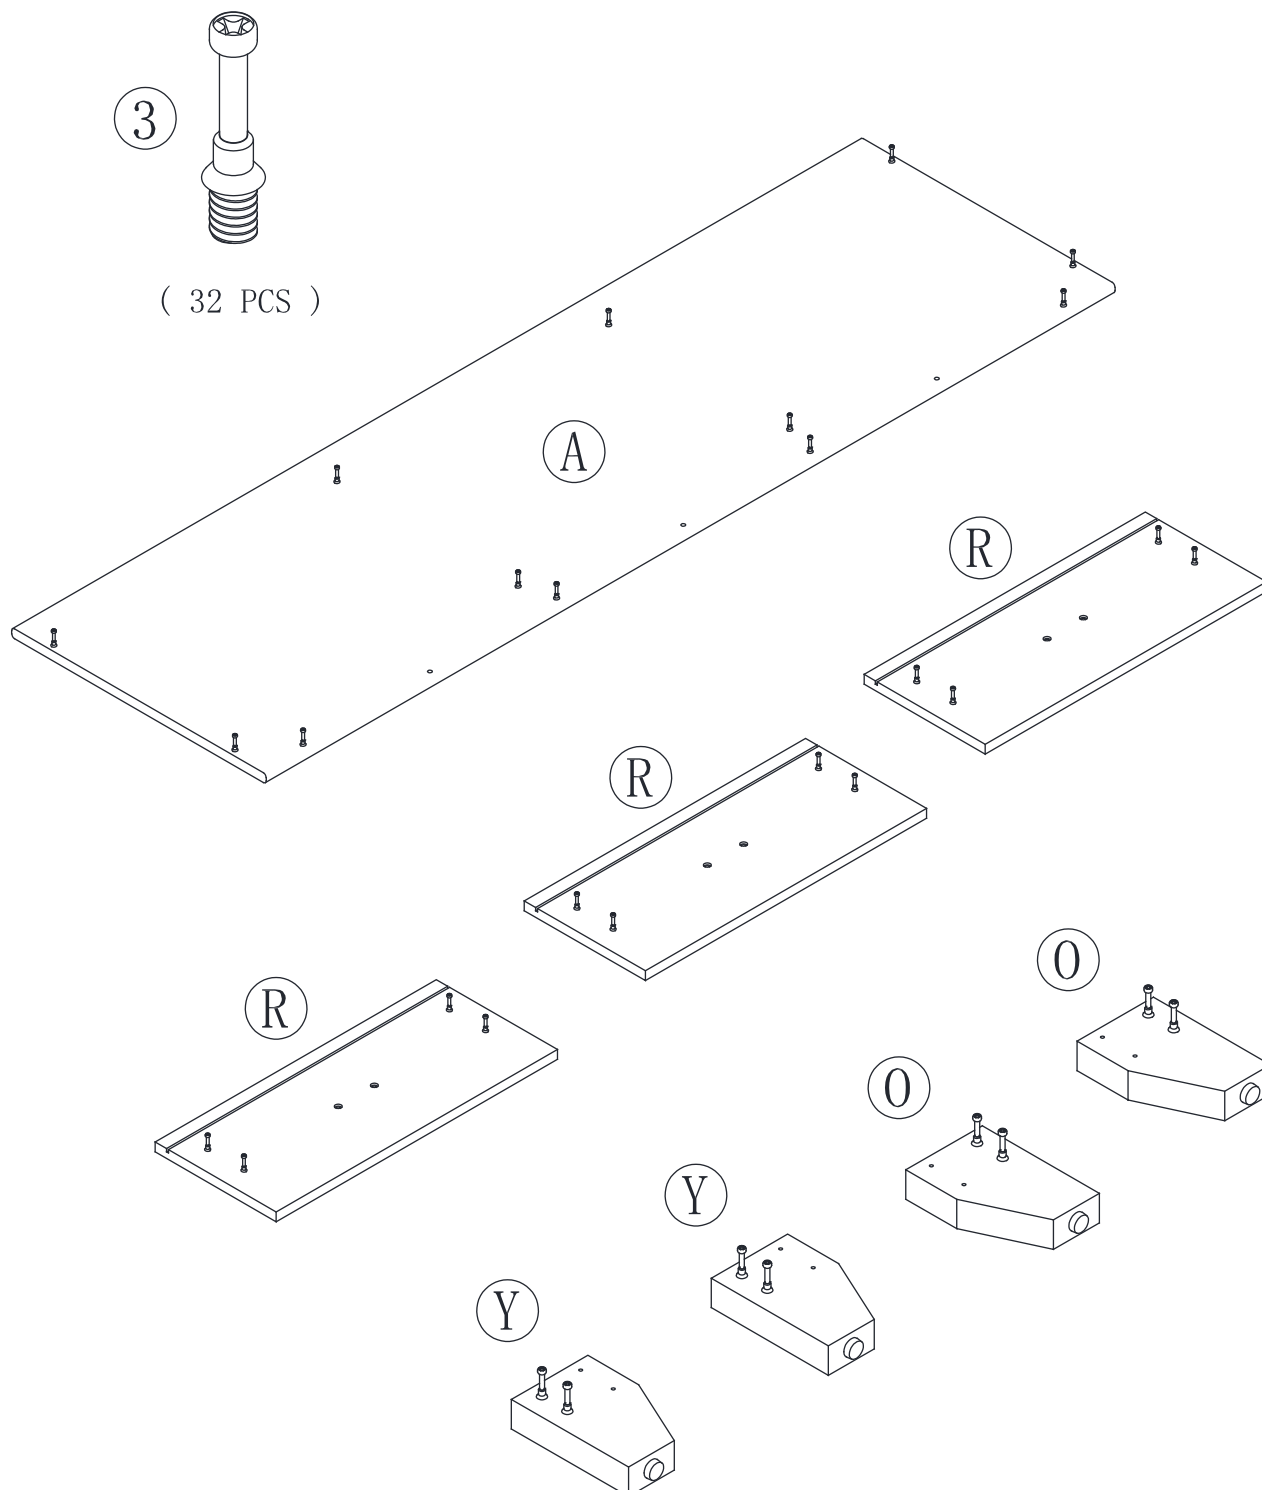



## Step 2

- ◆ Push eight HIDDEN CAMS (4) into the ENDS (C and D) and the UPRIGHT (E and F).

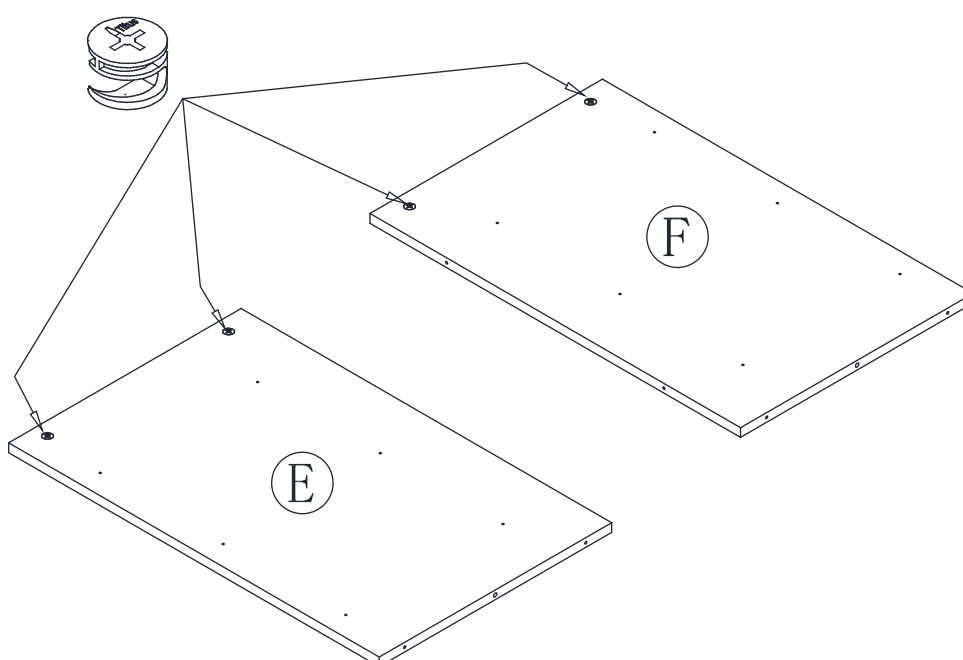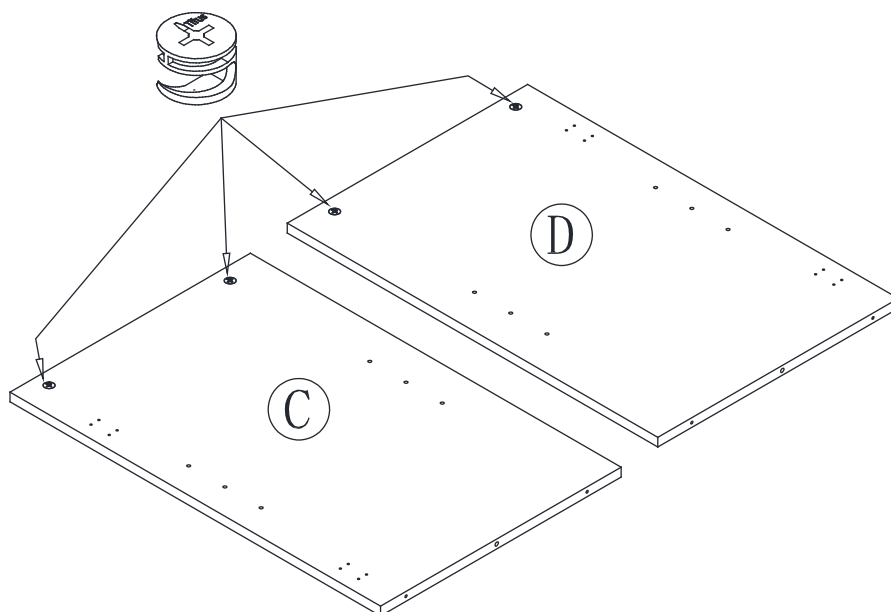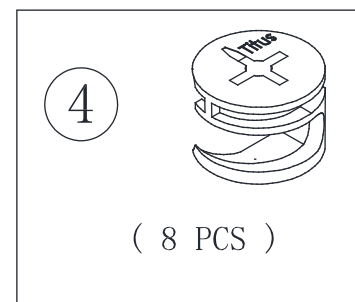

# Step 3

- ◆ Push twenty-four HIDDEN CAMS (4) into the UPPER BACK (H), DRAWER SIDES (S T and Z) and the SHORT BRACE (L)

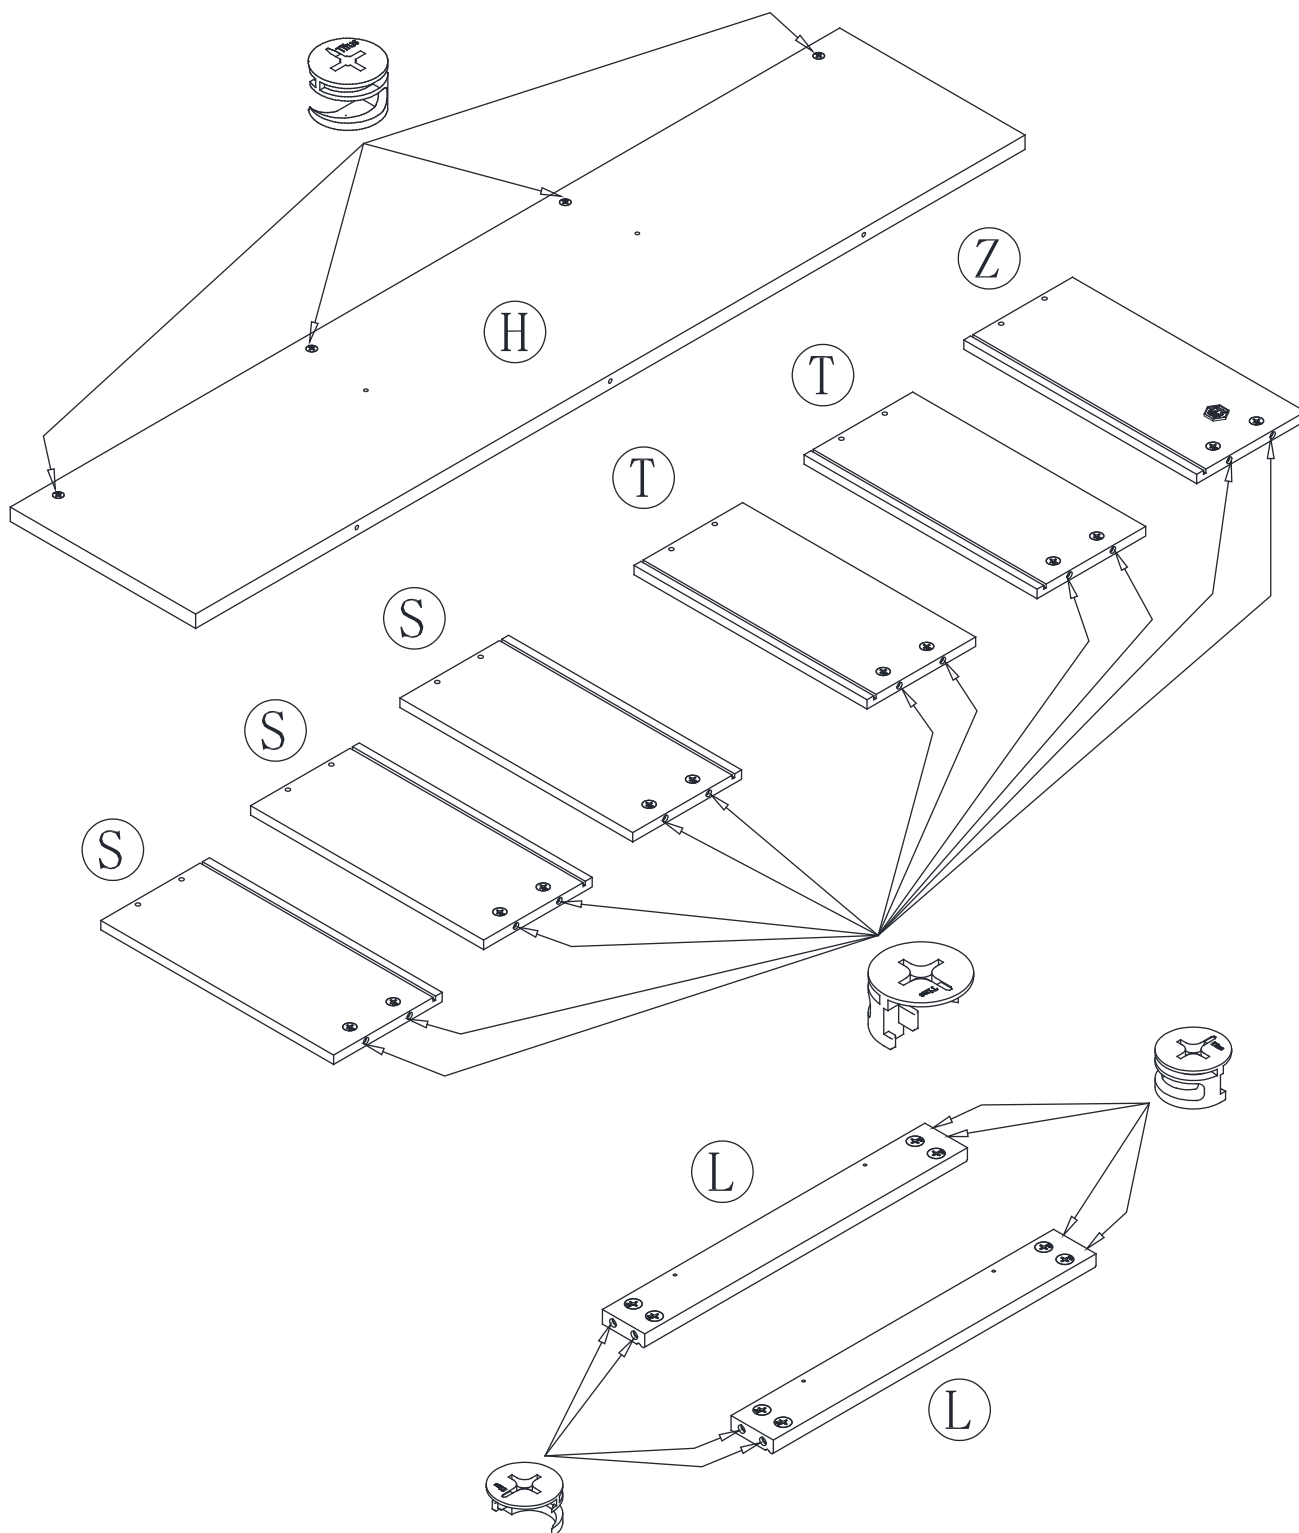
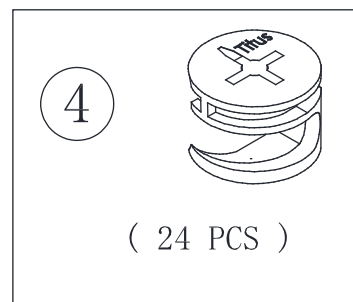


# Step 4

- ◆ Fasten the DRAWER SIDES (S and T) to the DRAWER BACK (U). Use eight PAN HEAD SCREWS(14).



- ◆ NOTE : Please repeat this step for another drawer.

- ◆ NOTE: You should start each SCREW a few turns before completely tightening any of them.

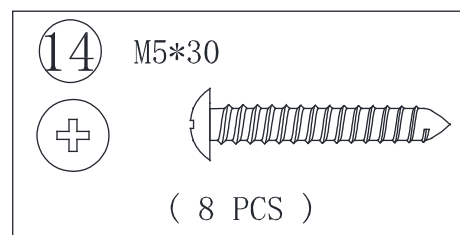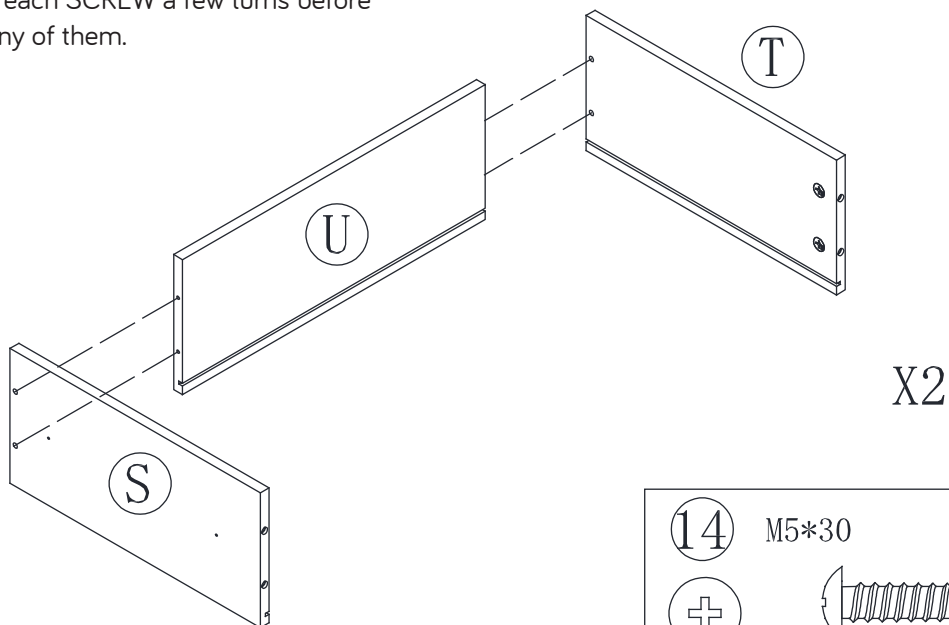

- ◆ Fasten the DRAWER SIDES (S and Z) to the DRAWER BACK (U). Use four PAN HEAD SCREWS (14).


- ◆ NOTE: You should start each SCREW a few turns before completely tightening any of them.

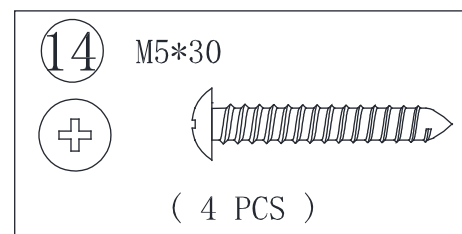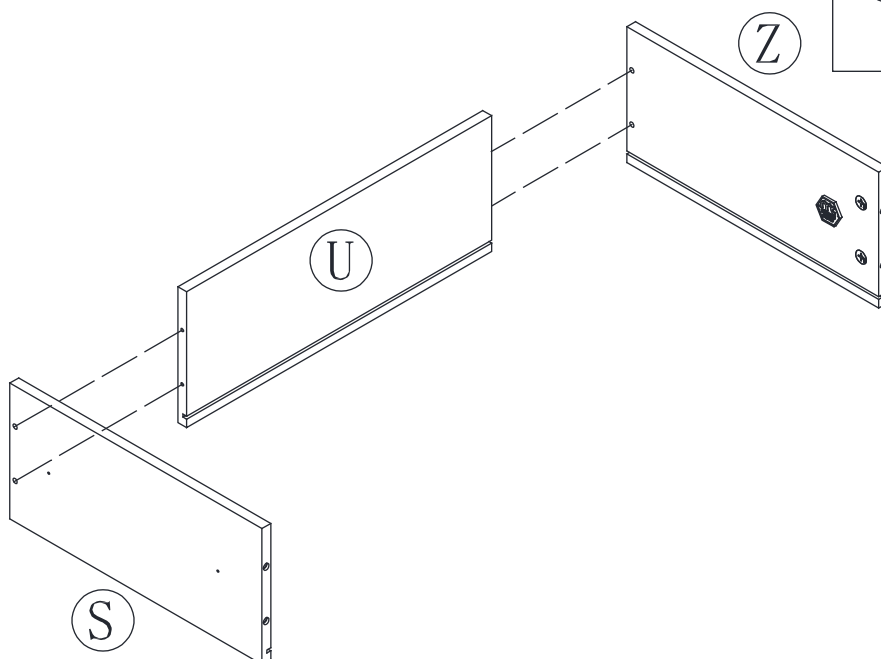

## Step 5


---

- ◆ Slide the DRAWER BOTTOM (X) into the grooves in the DRAWER SIDES (S and T) and DRAWER BACK (U).
- ◆ NOTE: Please repeat this step for another drawer.

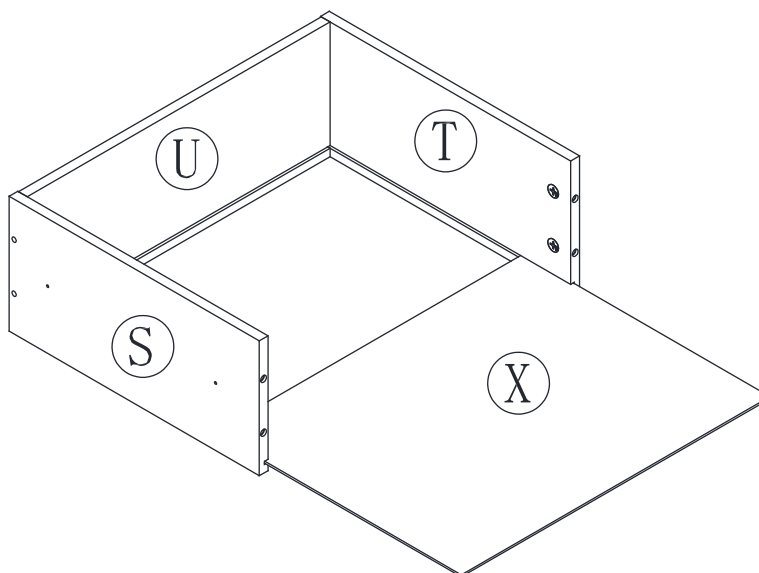


X2

- 
- ◆ Slide the DRAWER BOTTOM (X) into the grooves in the DRAWER SIDES (S and Z) and DRAWER BACK (U).

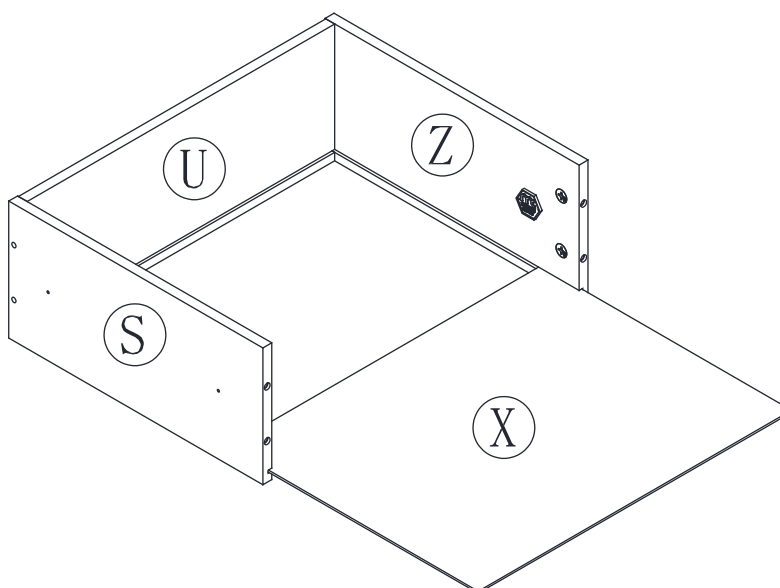


## Step 6


- ◆ Fasten the LEFT DRAWER FRONT (R) to the DRAWER SIDES (T and S). Tighten four HIDDEN CAMS.
- ◆ Be sure the DRAWER BOTTOM inserts into the DRAWER FRONT groove
- ◆ NOTE: Please repeat this step for another drawer.

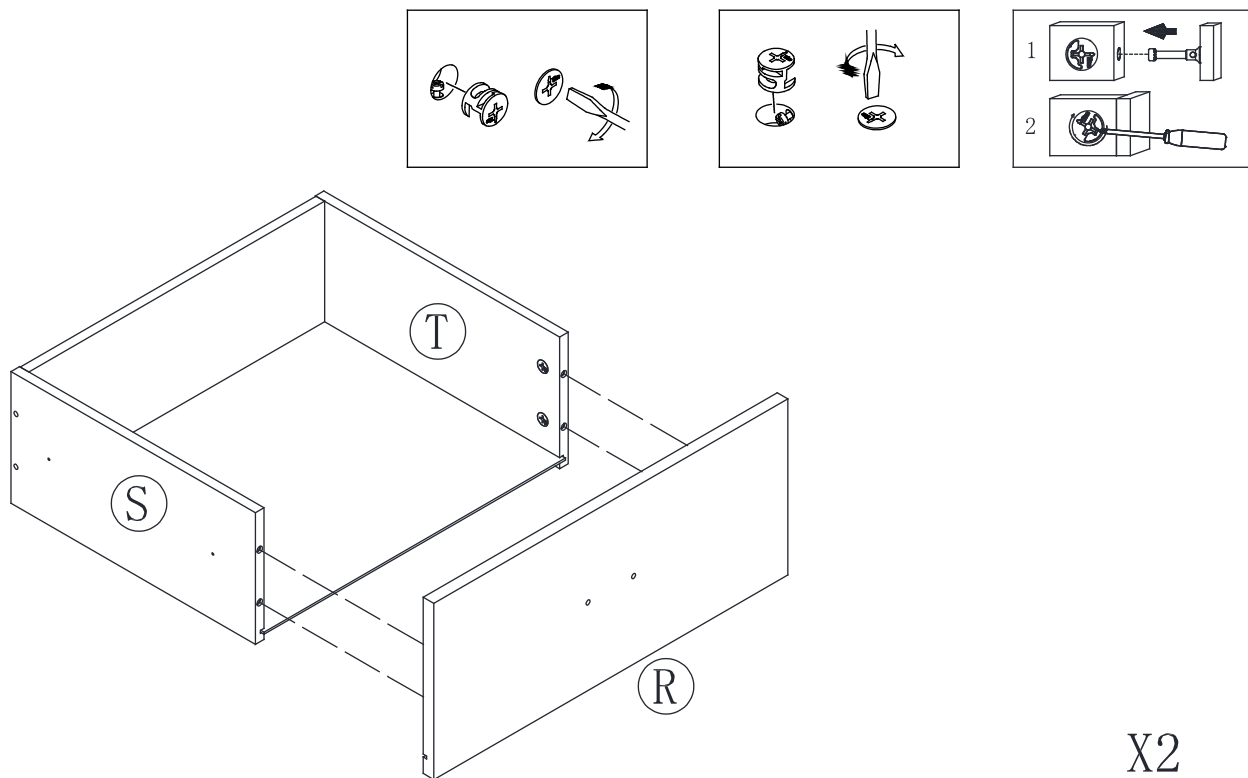


- ◆ Fasten the LEFT DRAWER FRONT (R) to the DRAWER SIDES (Z and S). Tighten four HIDDEN CAMS.
- ◆ Be sure the DRAWER BOTTOM inserts into the DRAWER FRONT groove.

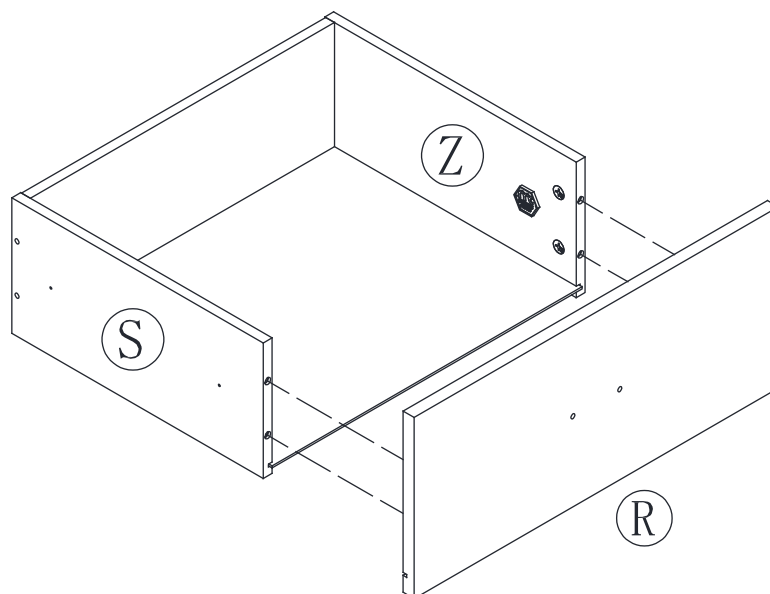

- ◆ Separate the EXTENSION SLIDES (2) from the EXTENSION RAILS (1) as shown in the upper diagram. Be prepared, the parts are greasy.
- ◆ Fasten two EXTENSION SLIDES (2) to the DRAWER SIDES (S and T). Use four FLAT HEAD SCREWS (17) through the exact holes shown.
- ◆ NOTE: Please repeat this step for another drawer.

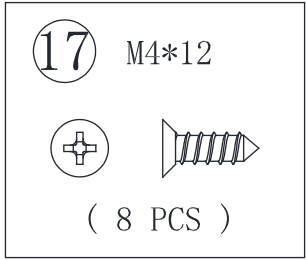



- 

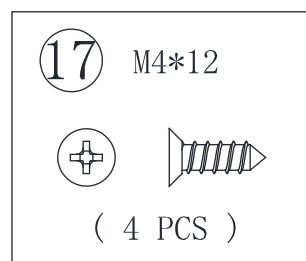



## Step 8


- ◆ Fasten the PULL (6) to the DRAWER FRONT (R). Use two PAN HEAD SCREWS (16).
- ◆ NOTE : Please repeat this step for another drawers.

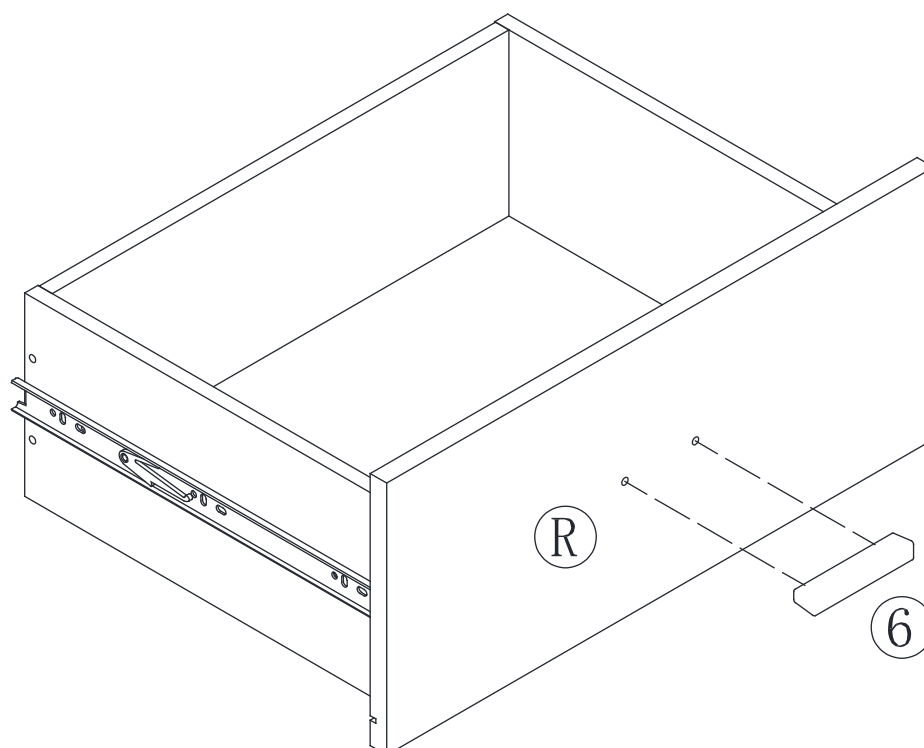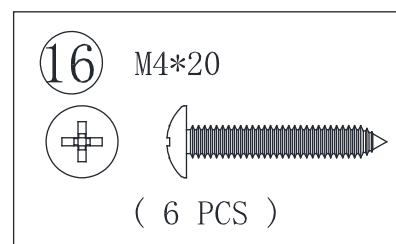

X3






## Step 9

- ◆ Fasten six EXTENSION RAILS (1) to the UPRIGHT (E and F). Use twelve FLAT HEAD SCREWS (17) through the exact holes shown.

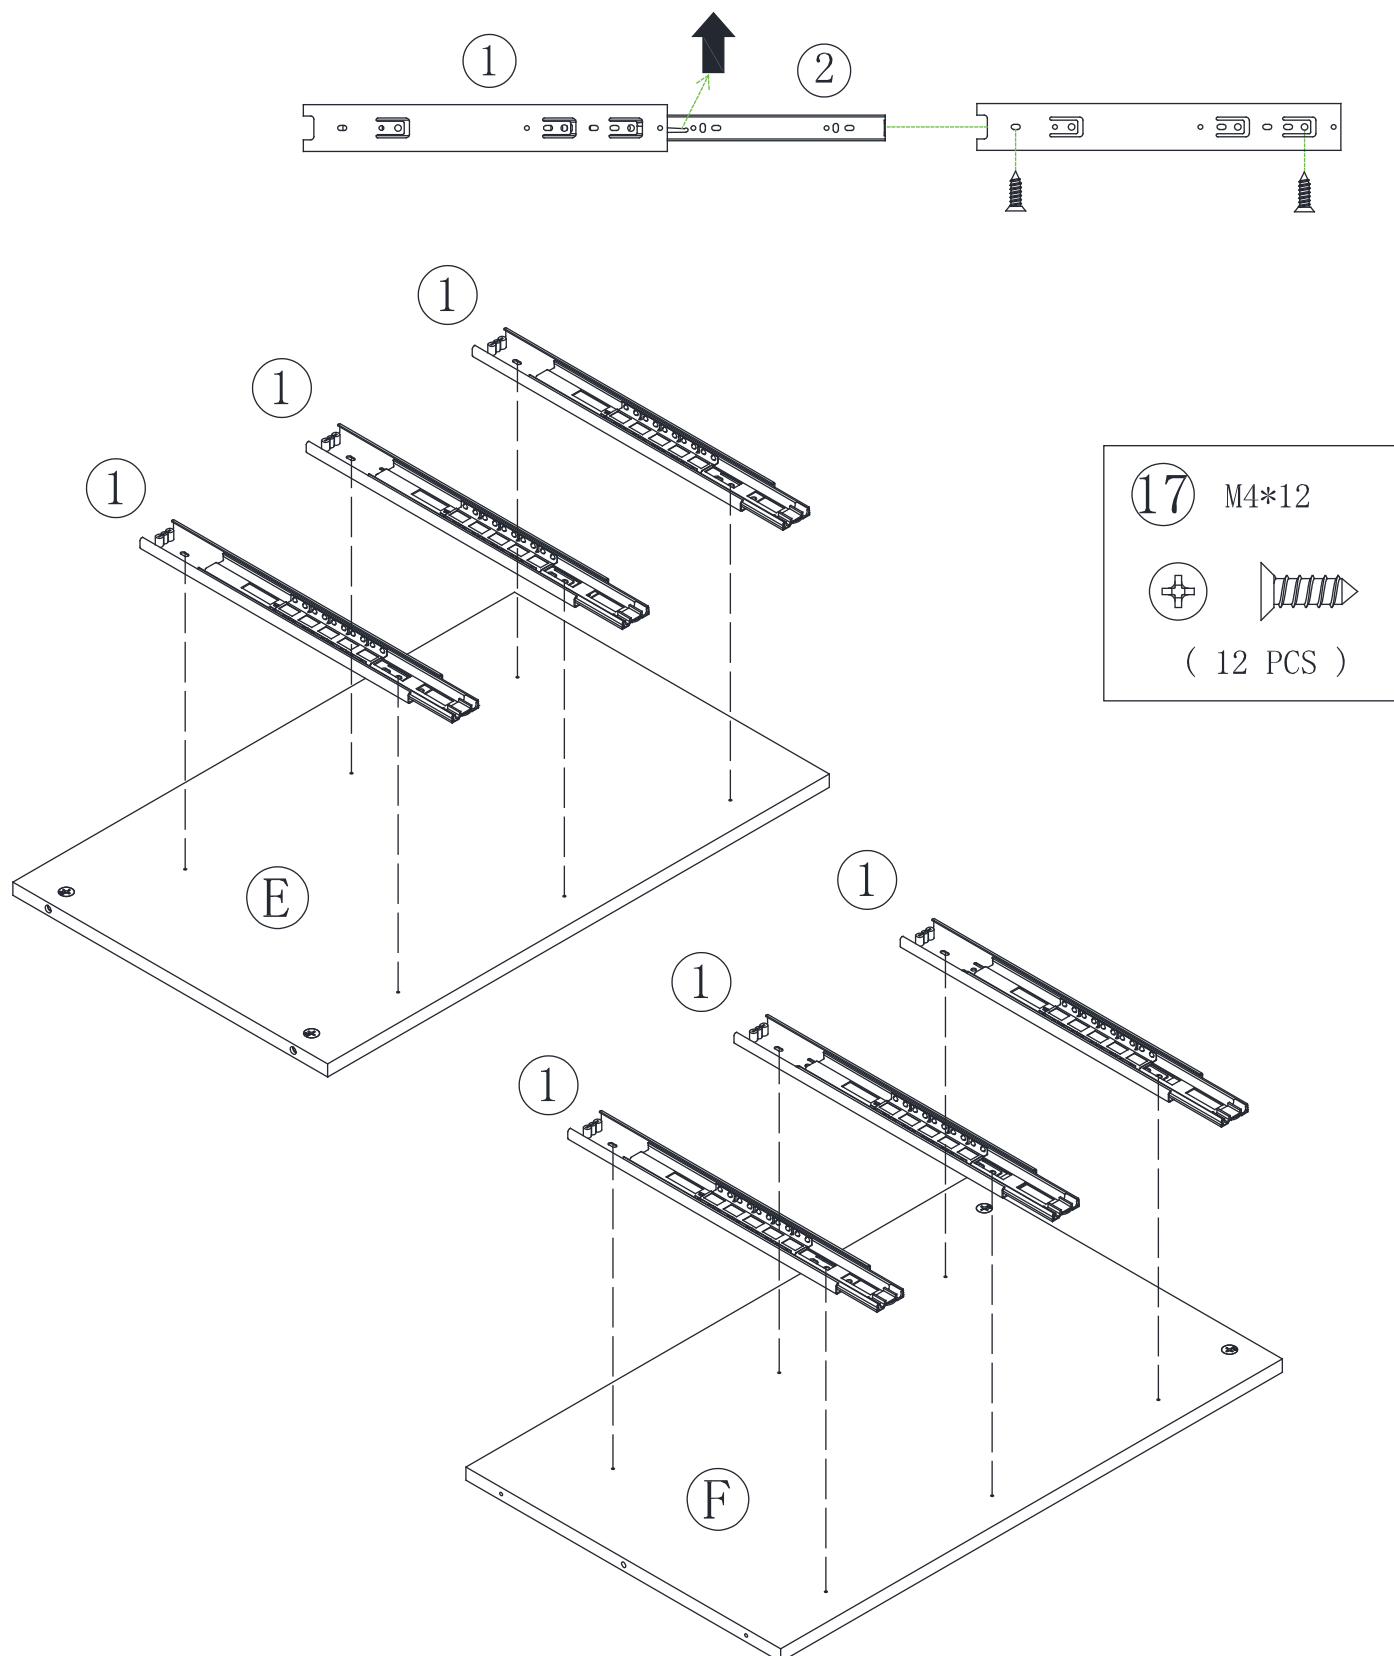





# Step 10

- ◆ Insert three WOOD DOWELS (10) to the TOP (A).
- ◆ Fasten the BACK(H) to the TOP (A). Tighten four HIDDEN CAMS

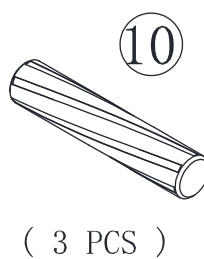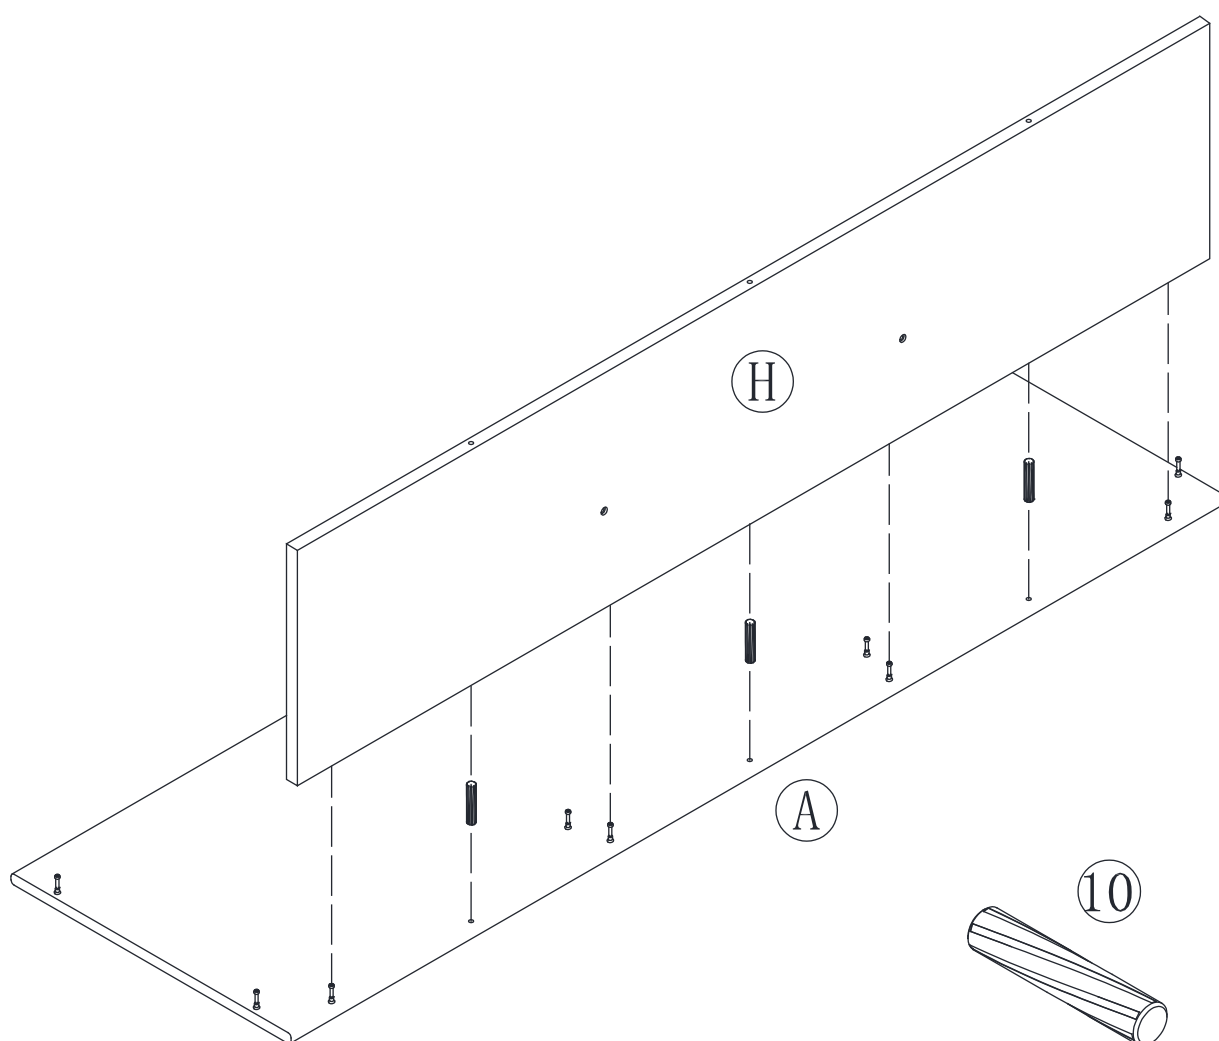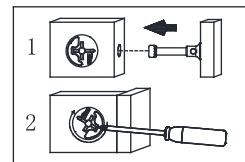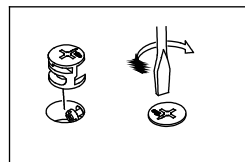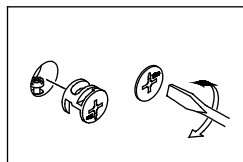


# Step 11

- ◆ Fasten the UPRIGHTS (E and F) to the TOP (A). Tighten four HIDDEN CAMS.

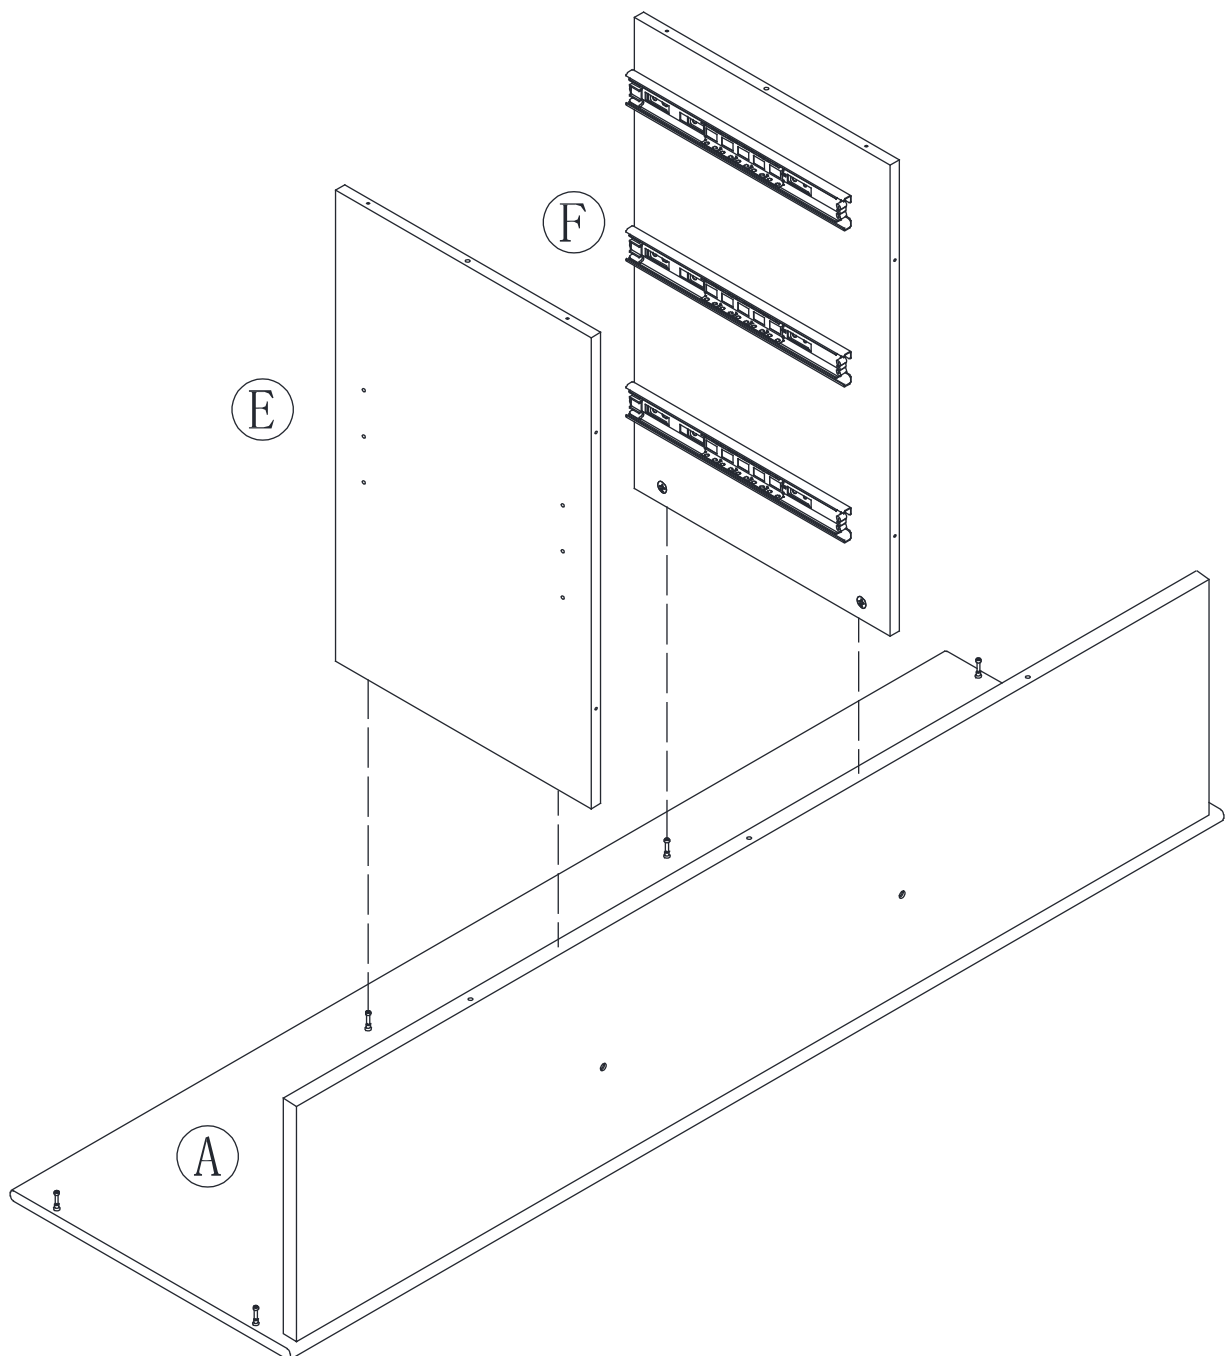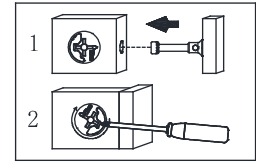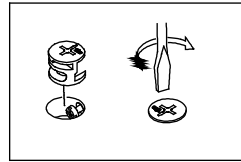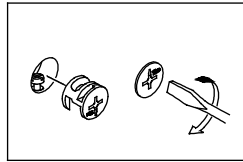


# Step 12

- ◆ Fasten the BACK (H) to the UPRIGHT (E and F). Use two PAN HEAD SCREWS (20)

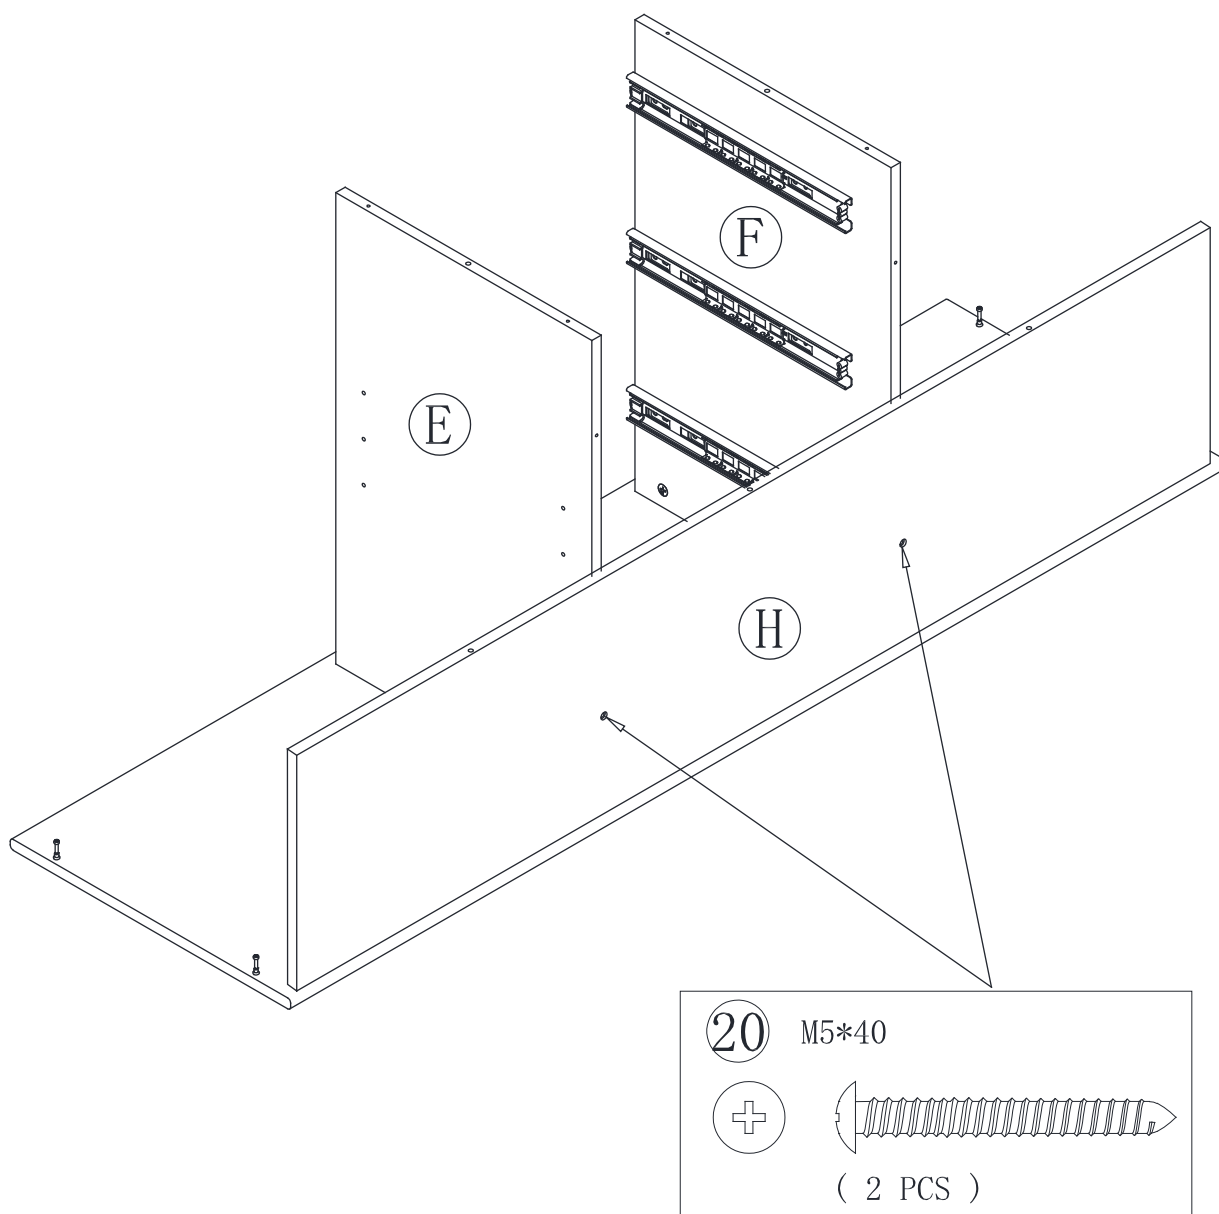


## Step 13

- ◆ Insert three WOOD DOWELS (10) to the UPPER BACK (H).  
Attached the LOWER BACK to the UPPER BACK (H).

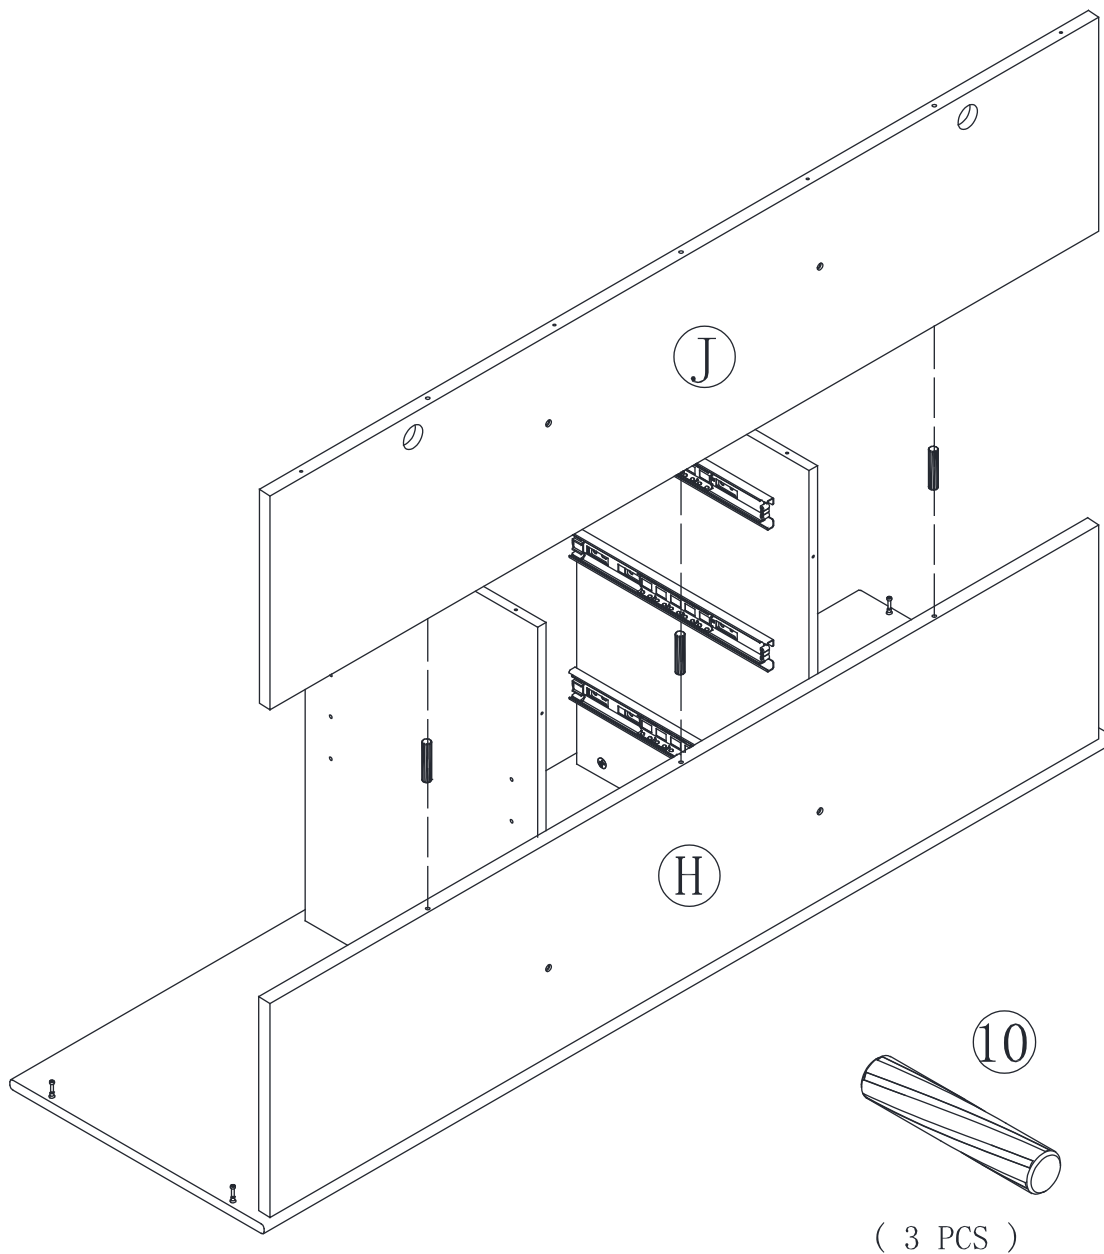





# Step 14

- ◆ Fasten the UPPER BACK to the UPRIGHTS (E and F). Use two PAN HEAD SCREWS (20).

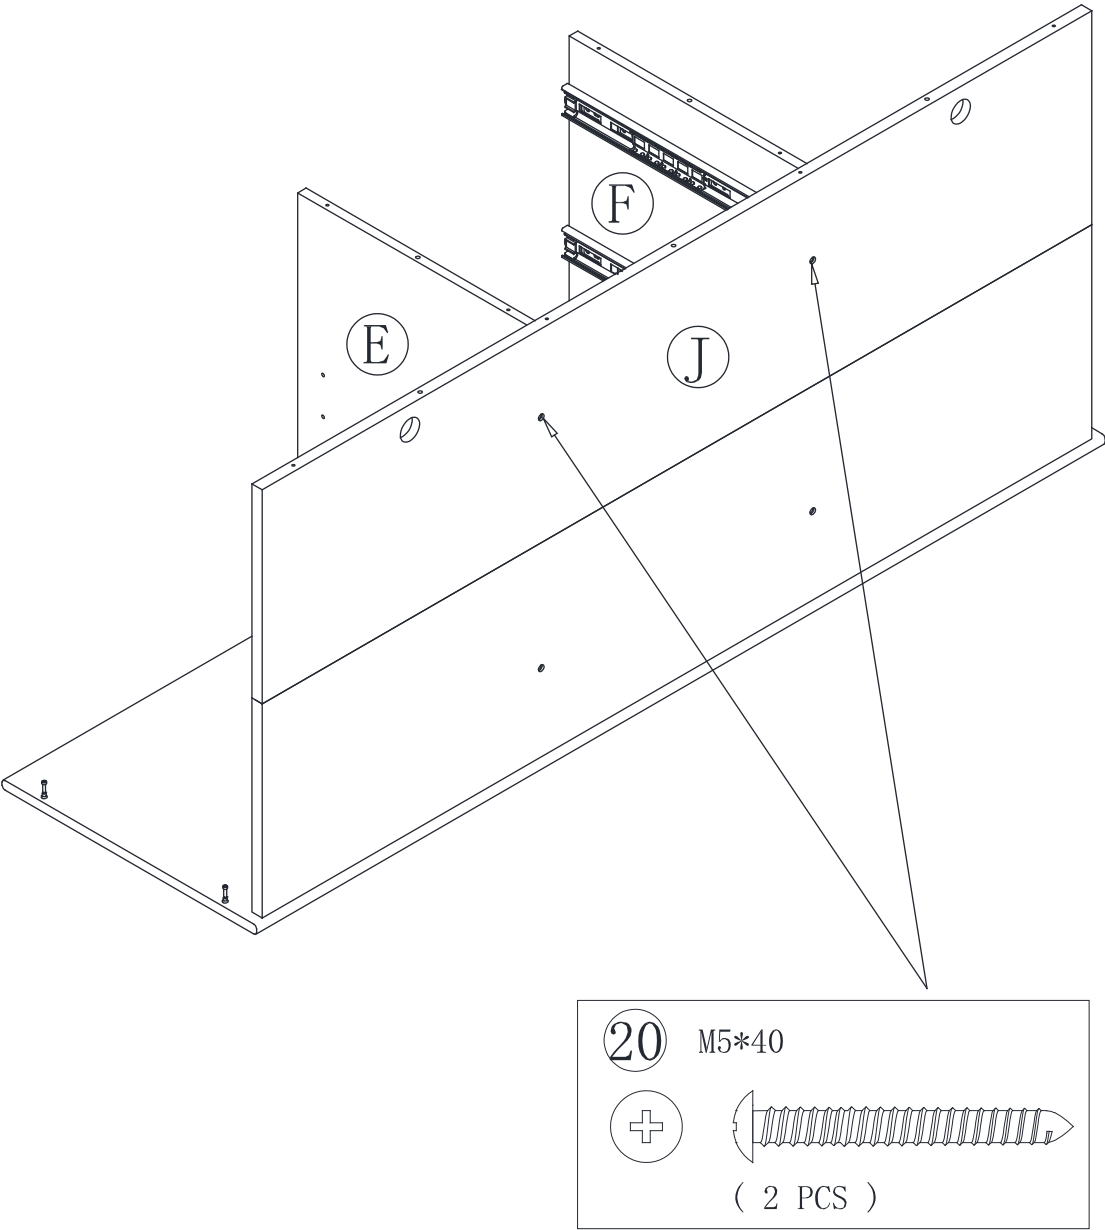

# Step 15


◆ Fasten the ENDS (C and D) to the TOP (A). Tighten four HIDDEN CAMS.

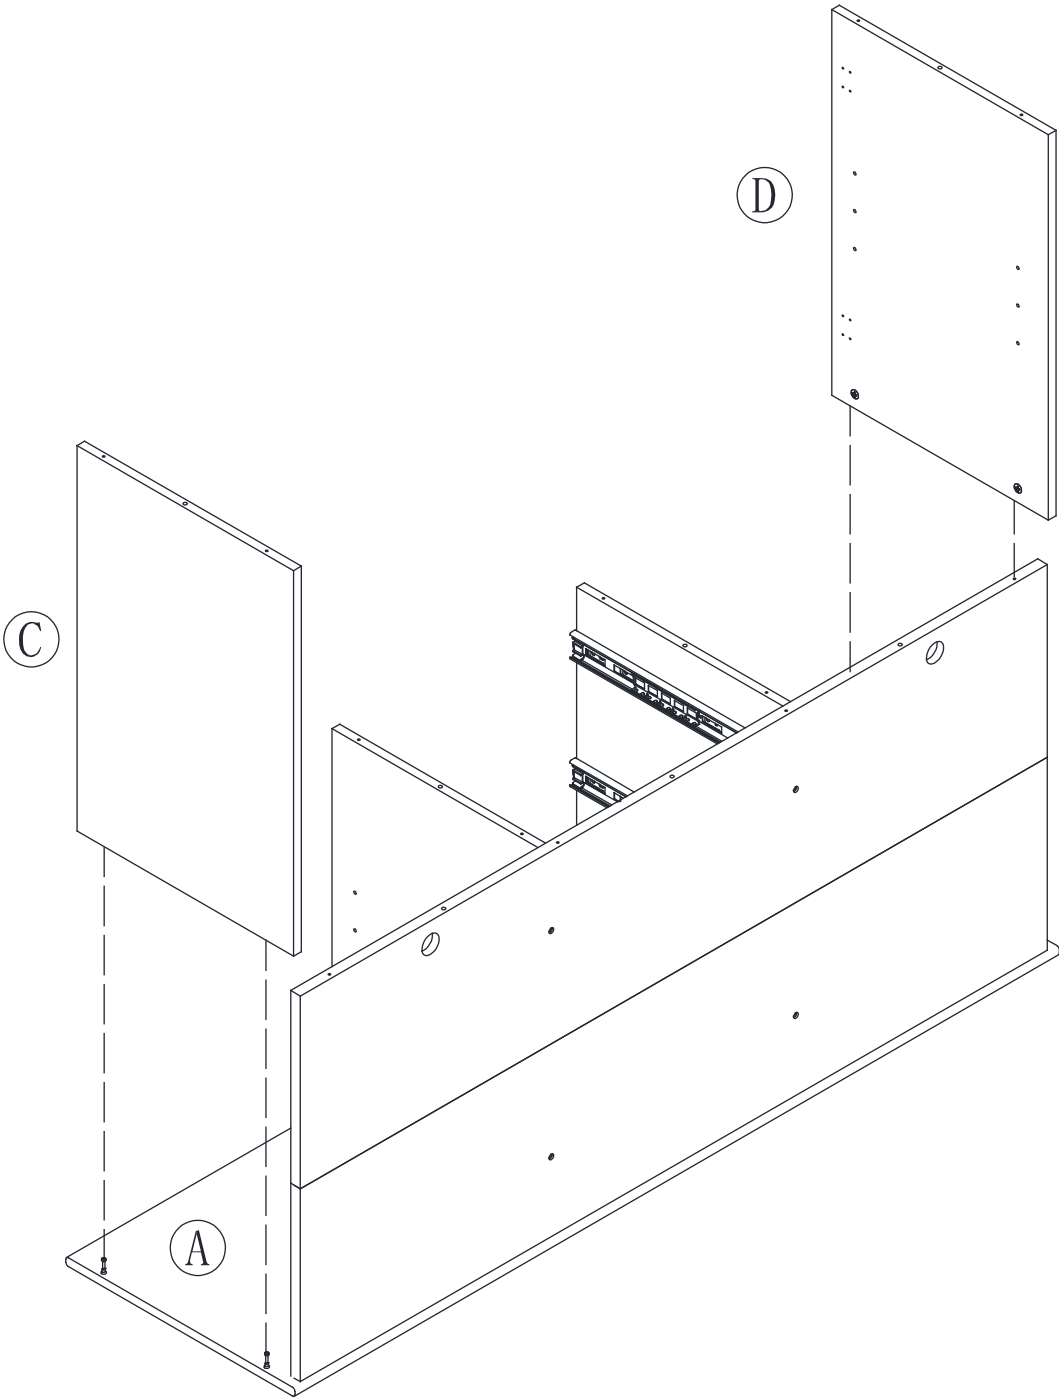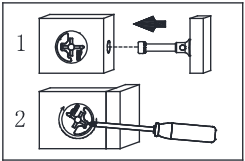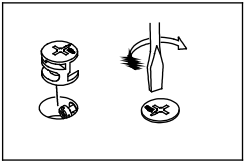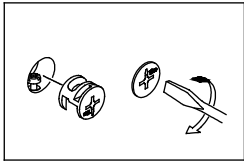





# Step 16

- ◆ Fasten the FEET (P) to the BOTTOM (B). Tighten two HEX HEAD SCREWS (15) using the L-WRENCH (11)
- ◆ Insert seven WOOD DOWELS (10) to the BACK (J), ENDS (C and D) and the UPRIGHTS (E and F)
- ◆ Fasten the BOTTOM (B) to the BACK (J), ENDS (C and D) and the UPRIGHTS (E and F). Use twelve PAN HEAD SCREWS (14).

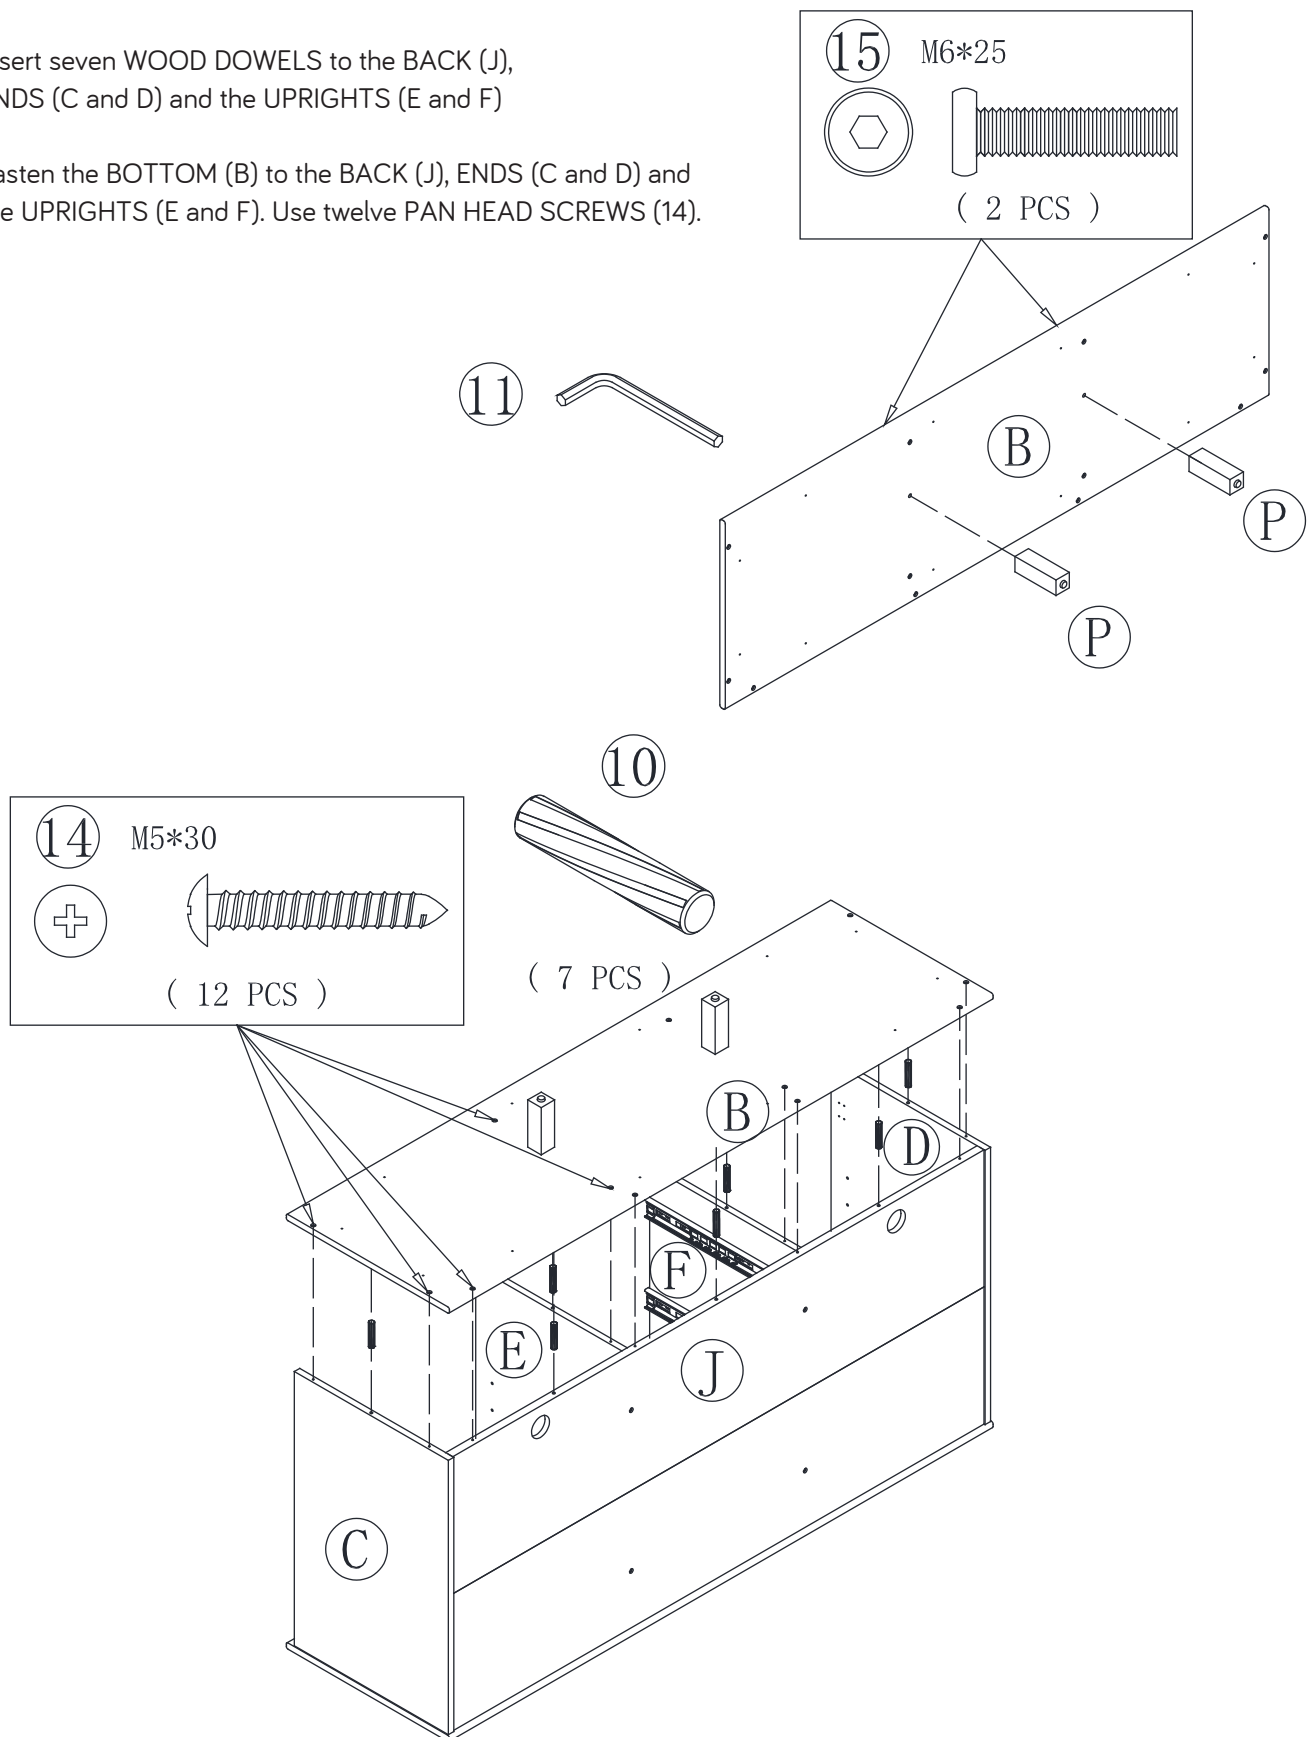


## Step 17

- ◆ Fasten four METAL PLATE (7) to the FEET (O and Y) and the LONG BRACES (K).  
Use sixteen PAN HEAD SCREWS (18)

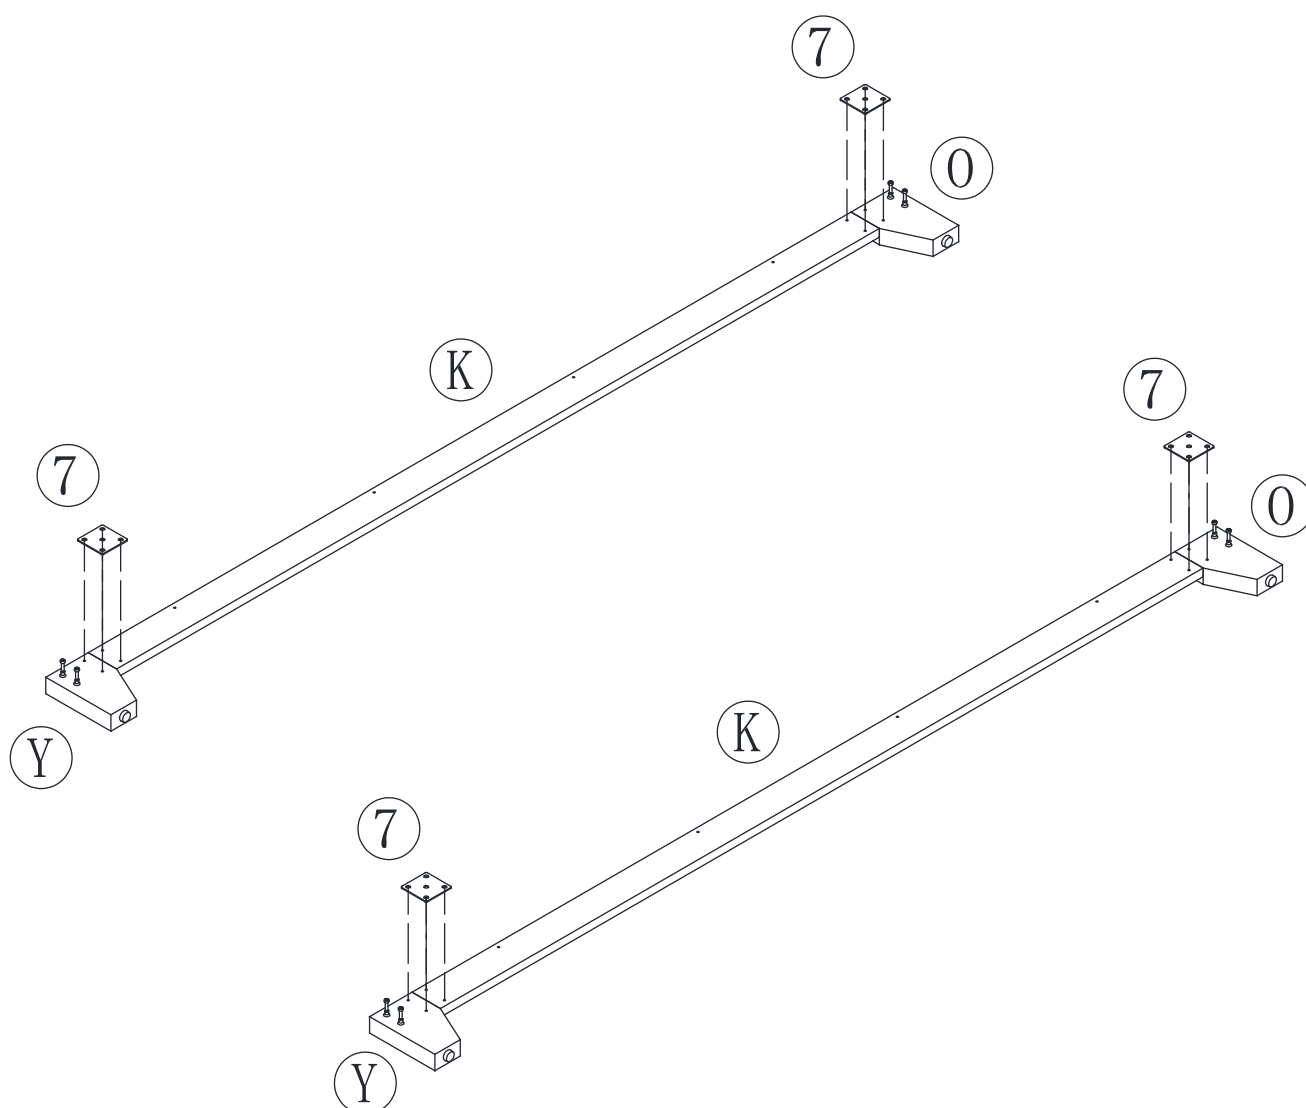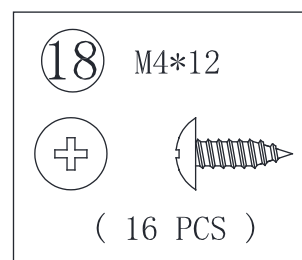





# Step 18

- ◆ Fasten twelve BRACKETS (9) to the LONG BRACES (K) and the SHORT BRACES (L). Use twelve PAN HEAD SCREWS (18)

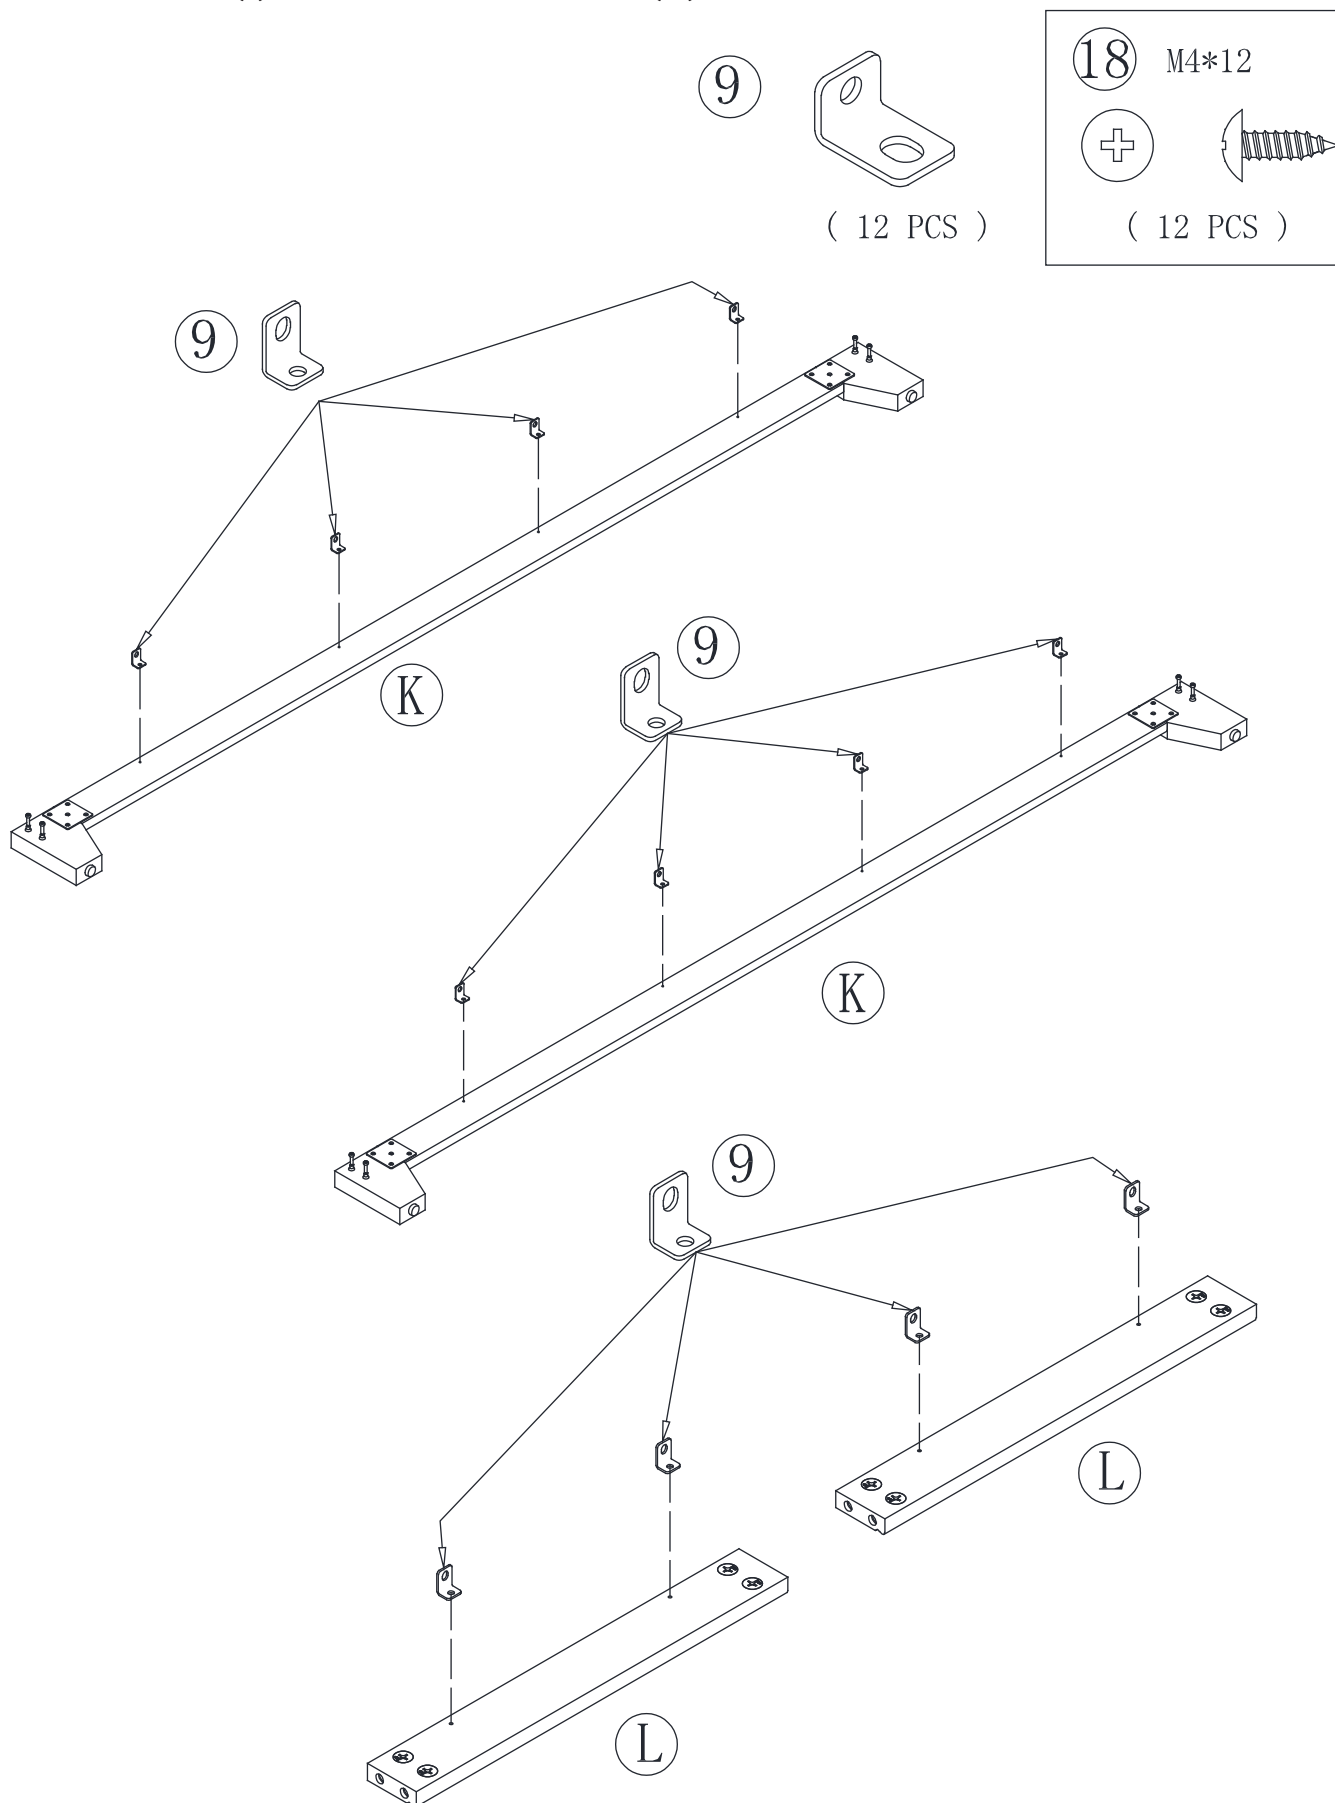



# Step 19

- ◆ Fasten two SHORT BRACES (L) to the FEET (Y and O). Tighten eight HIDDEN CAMS.

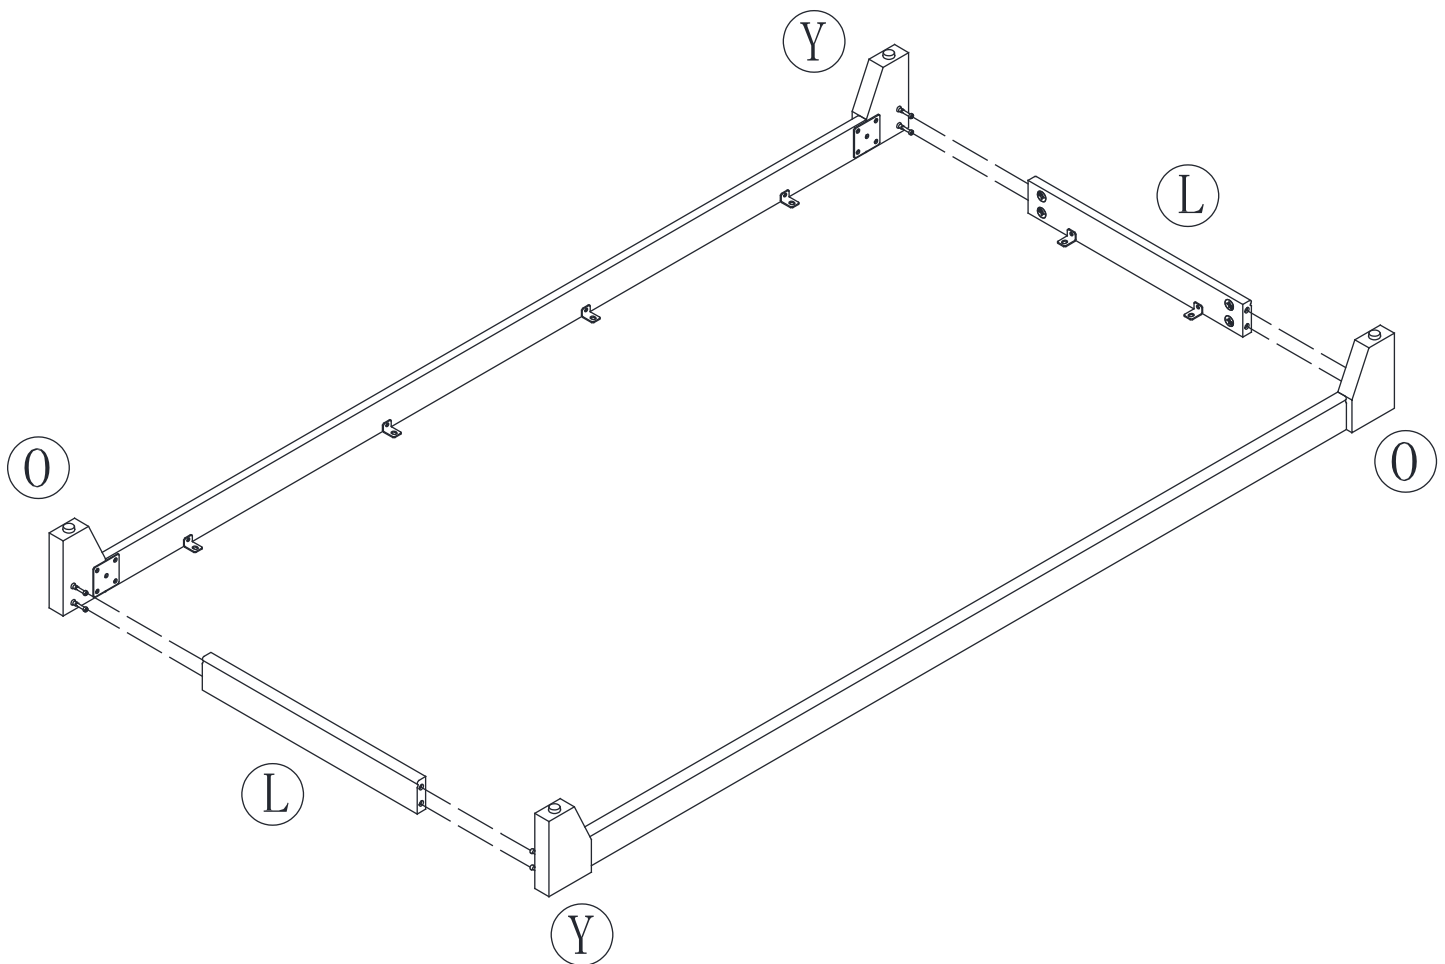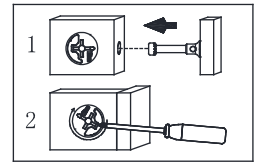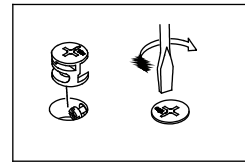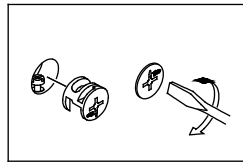



## Step 20

- ◆ Fasten the BASE to the BOTTOM (B). Use twelve PAN HEAD SCREWS (18)
- ◆ Push two GROMMETS (19) into the BACK (J).

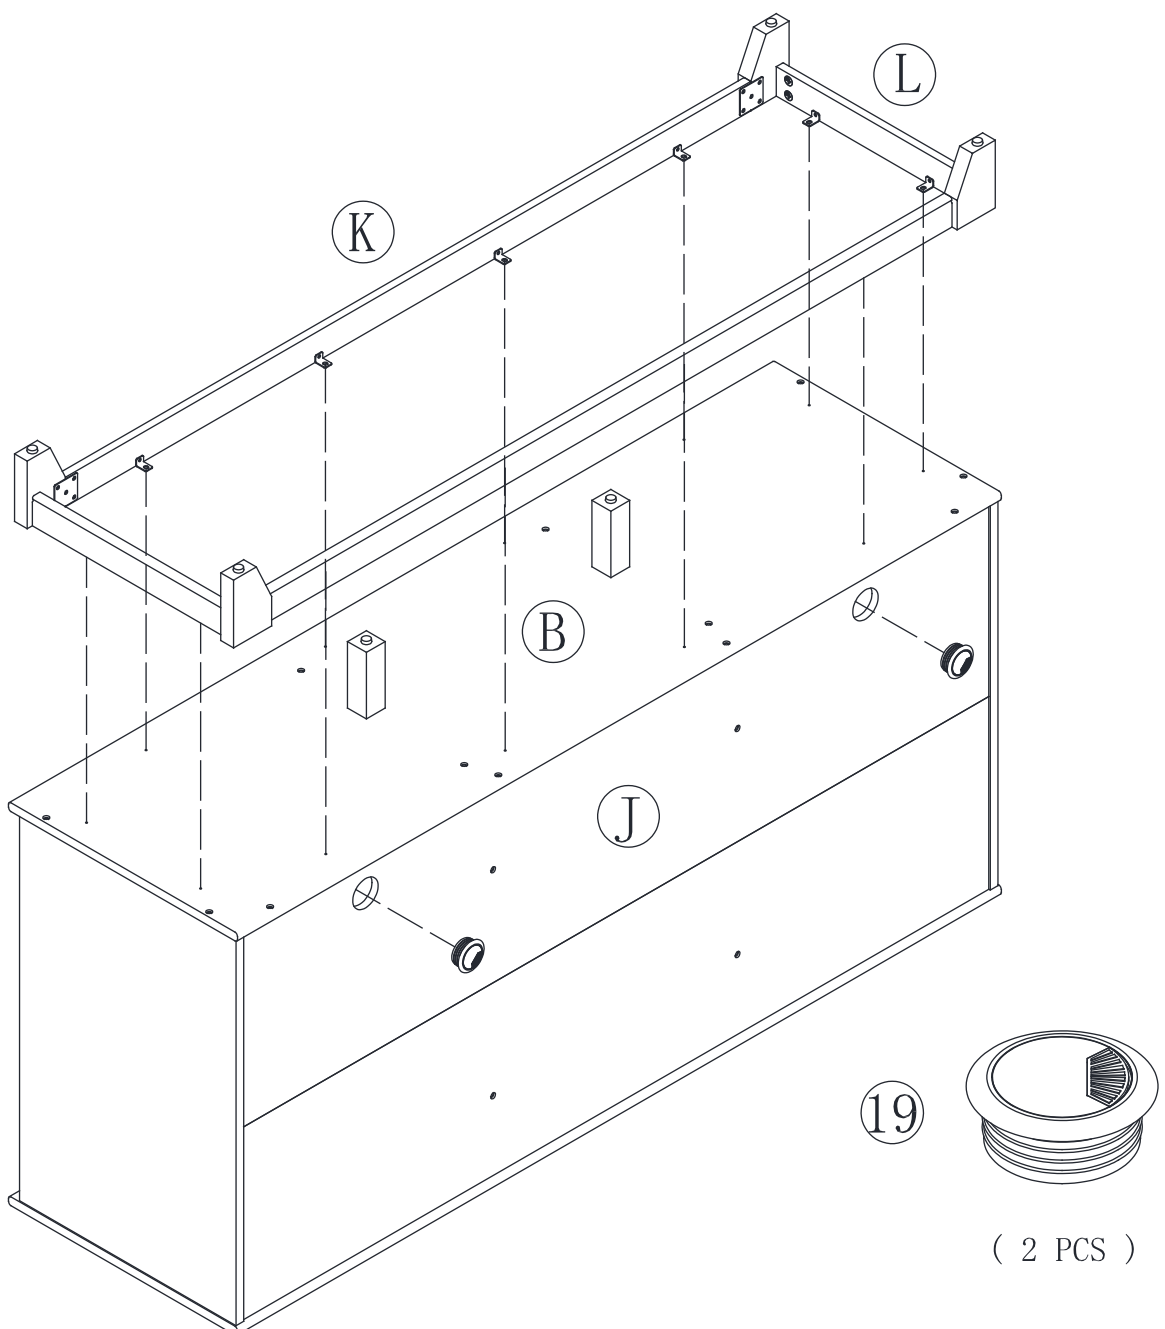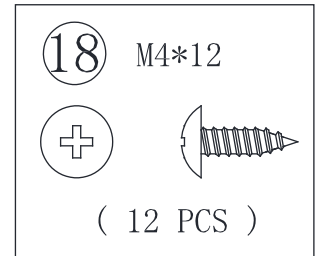


# Step 21

◆ To insert the Drawers into your unit, line up the EXTENSION SLIDES on the drawer with the EXTENSION RAILS on the unit and push the drawer into the unit until the drawer is fully inserted. The drawer will push in hard until it is all the way in, then it will slide in and out easier.

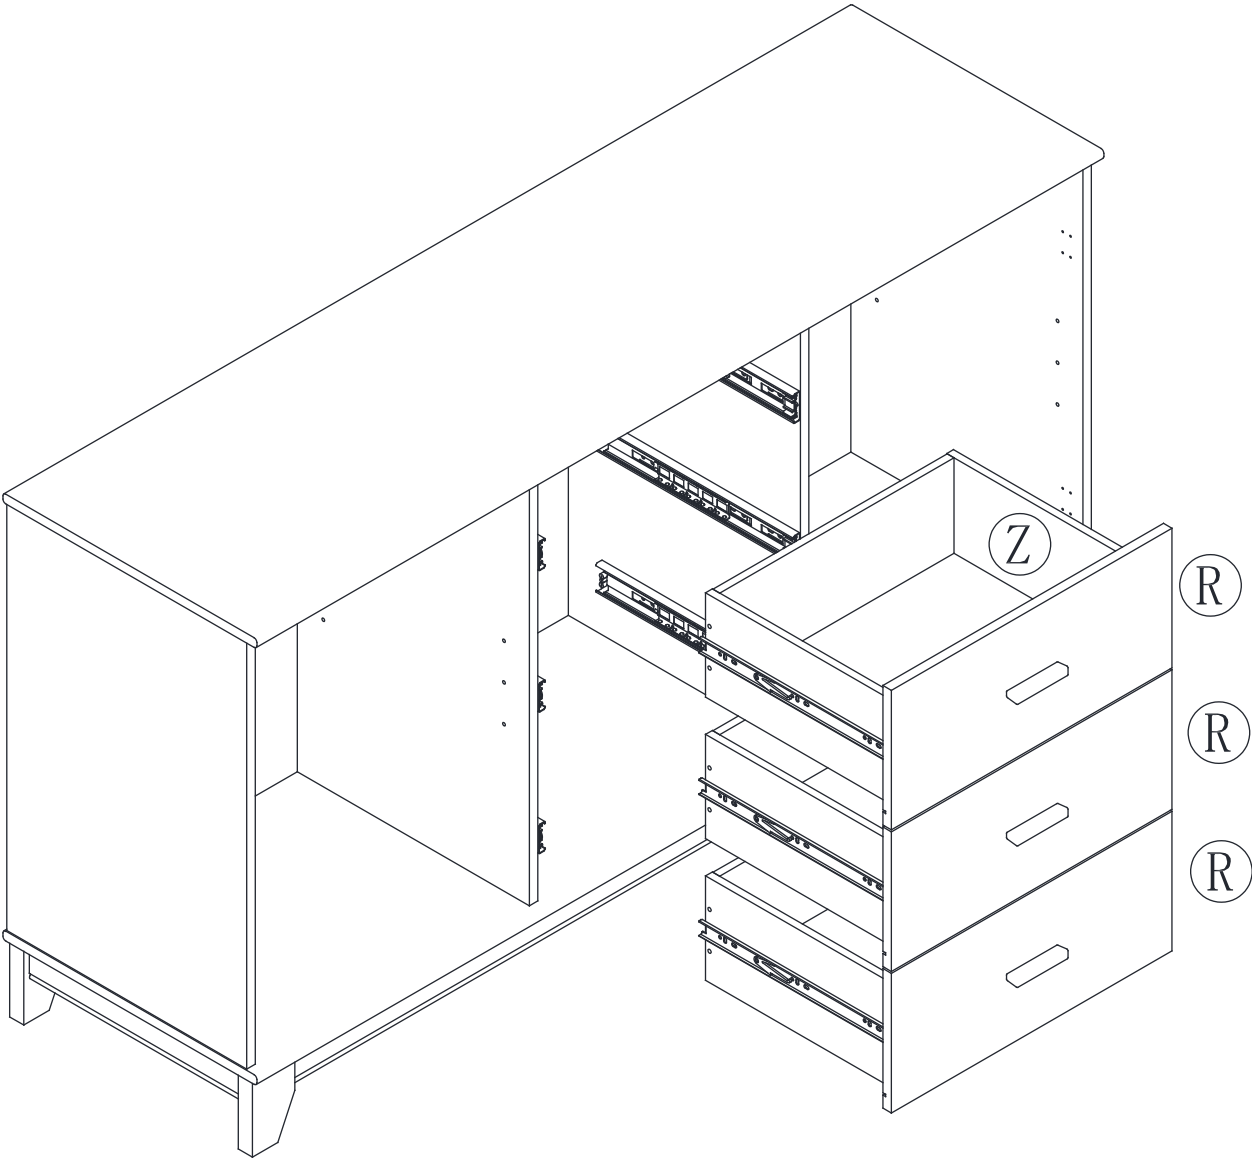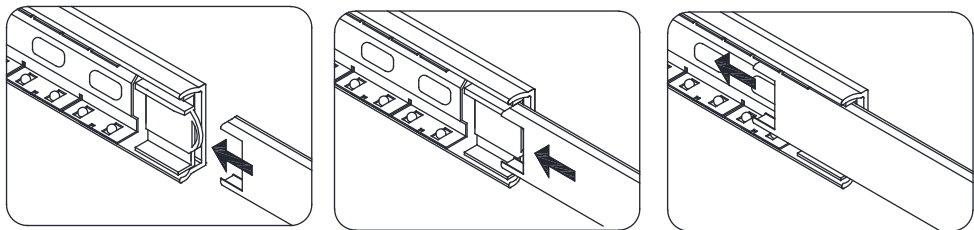


## Step 22

- ◆ Insert eight METAL PINS (8) into the hole locations of your choice in the ENDS (C and D) and UPRIGHTS (E and F).
- ◆ Set the ADJUSTABLE SHELVES (G) onto the METAL PINS (8)

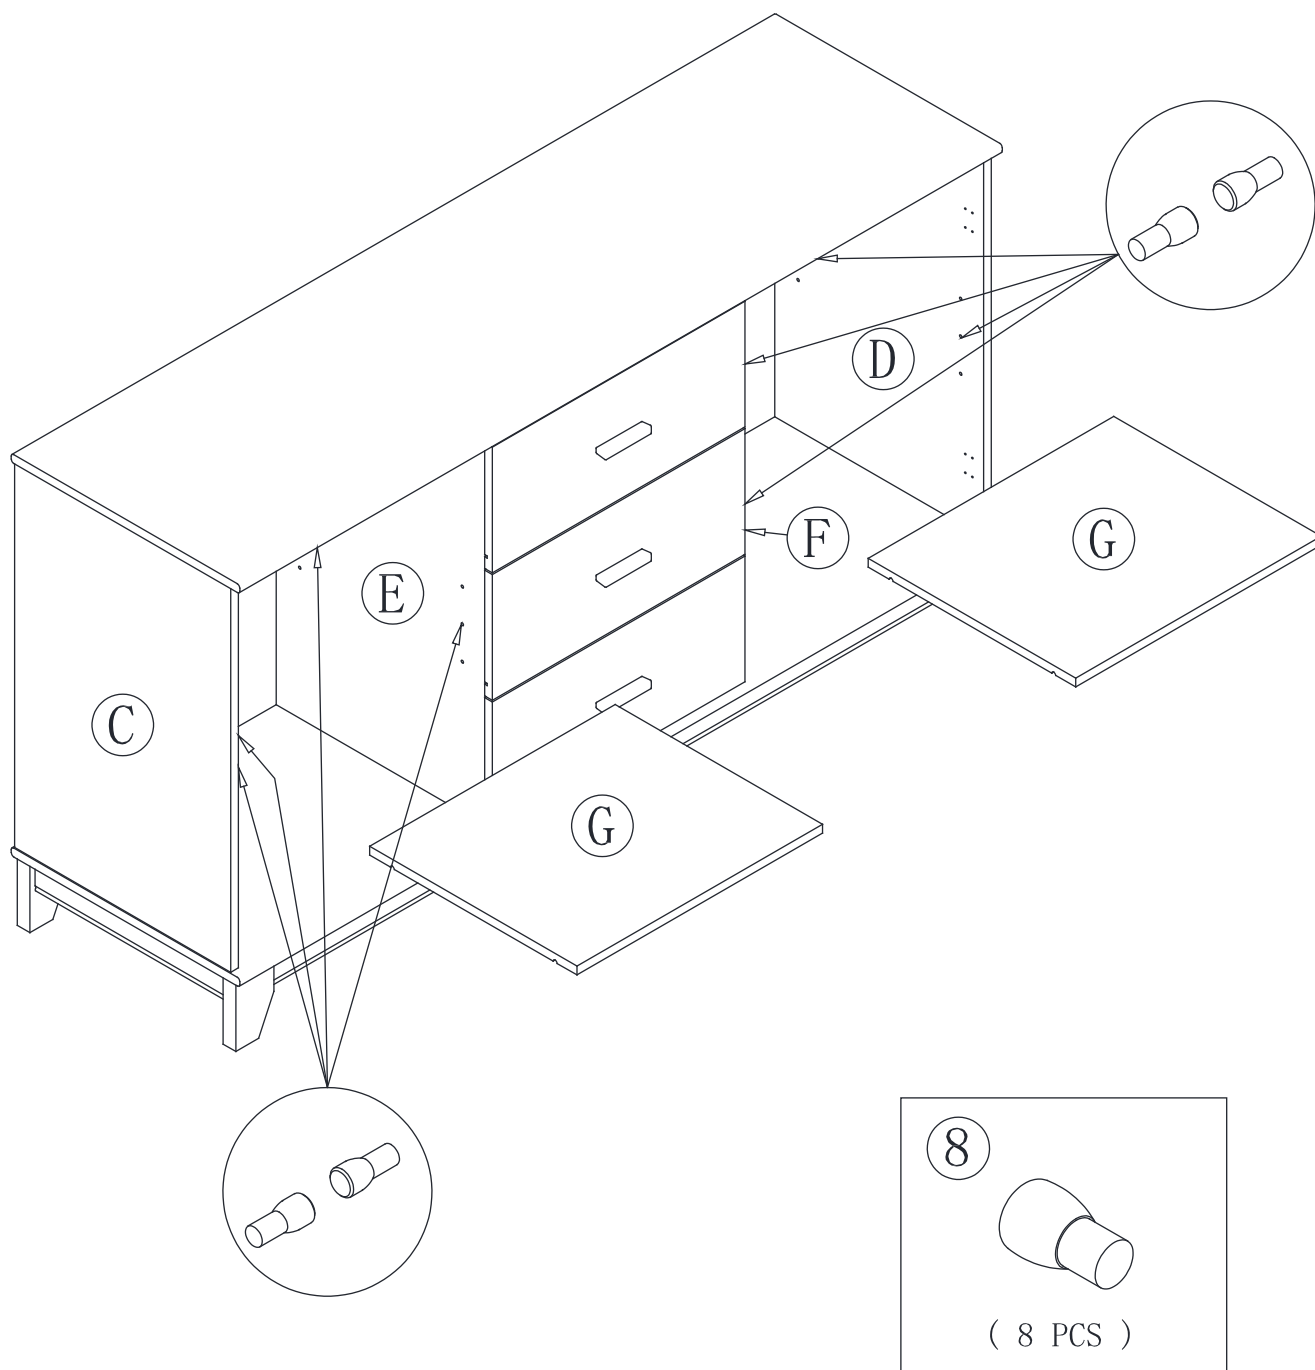

## Step 23


- ◆ Fasten the HINGE (13) to the DOORS (Q). Use eight FLAT HEAD SCREWS (17).
- ◆ Fasten the PULLS (6) to the DOORS (Q). Use four PAN HEAD SCREWS (16)

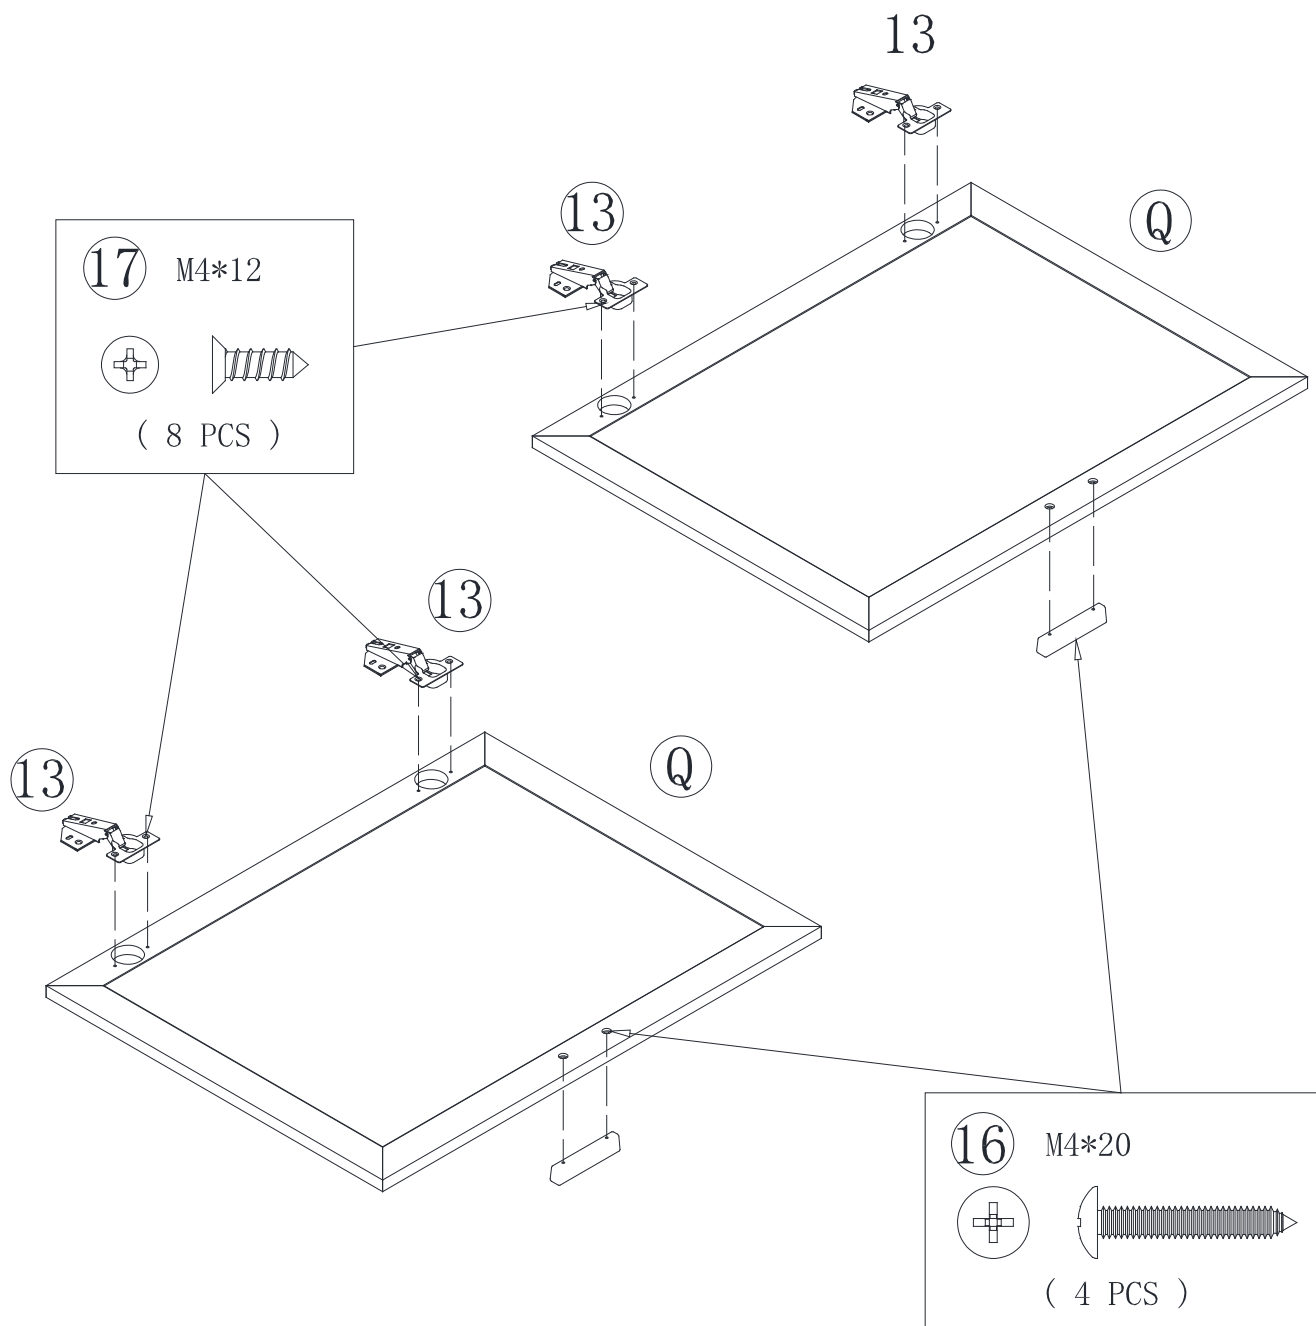




## Step 24

- ◆ Fasten the DOOR (Q) to the ENDS (C and D). Use sixteen FLAT HEAD SCREWS (17) through the round holes in each HINGE.
- ◆ Peel the BUMPERS from the BUMPER CARDS (12) and stick them onto the edges of the Shelves (G)

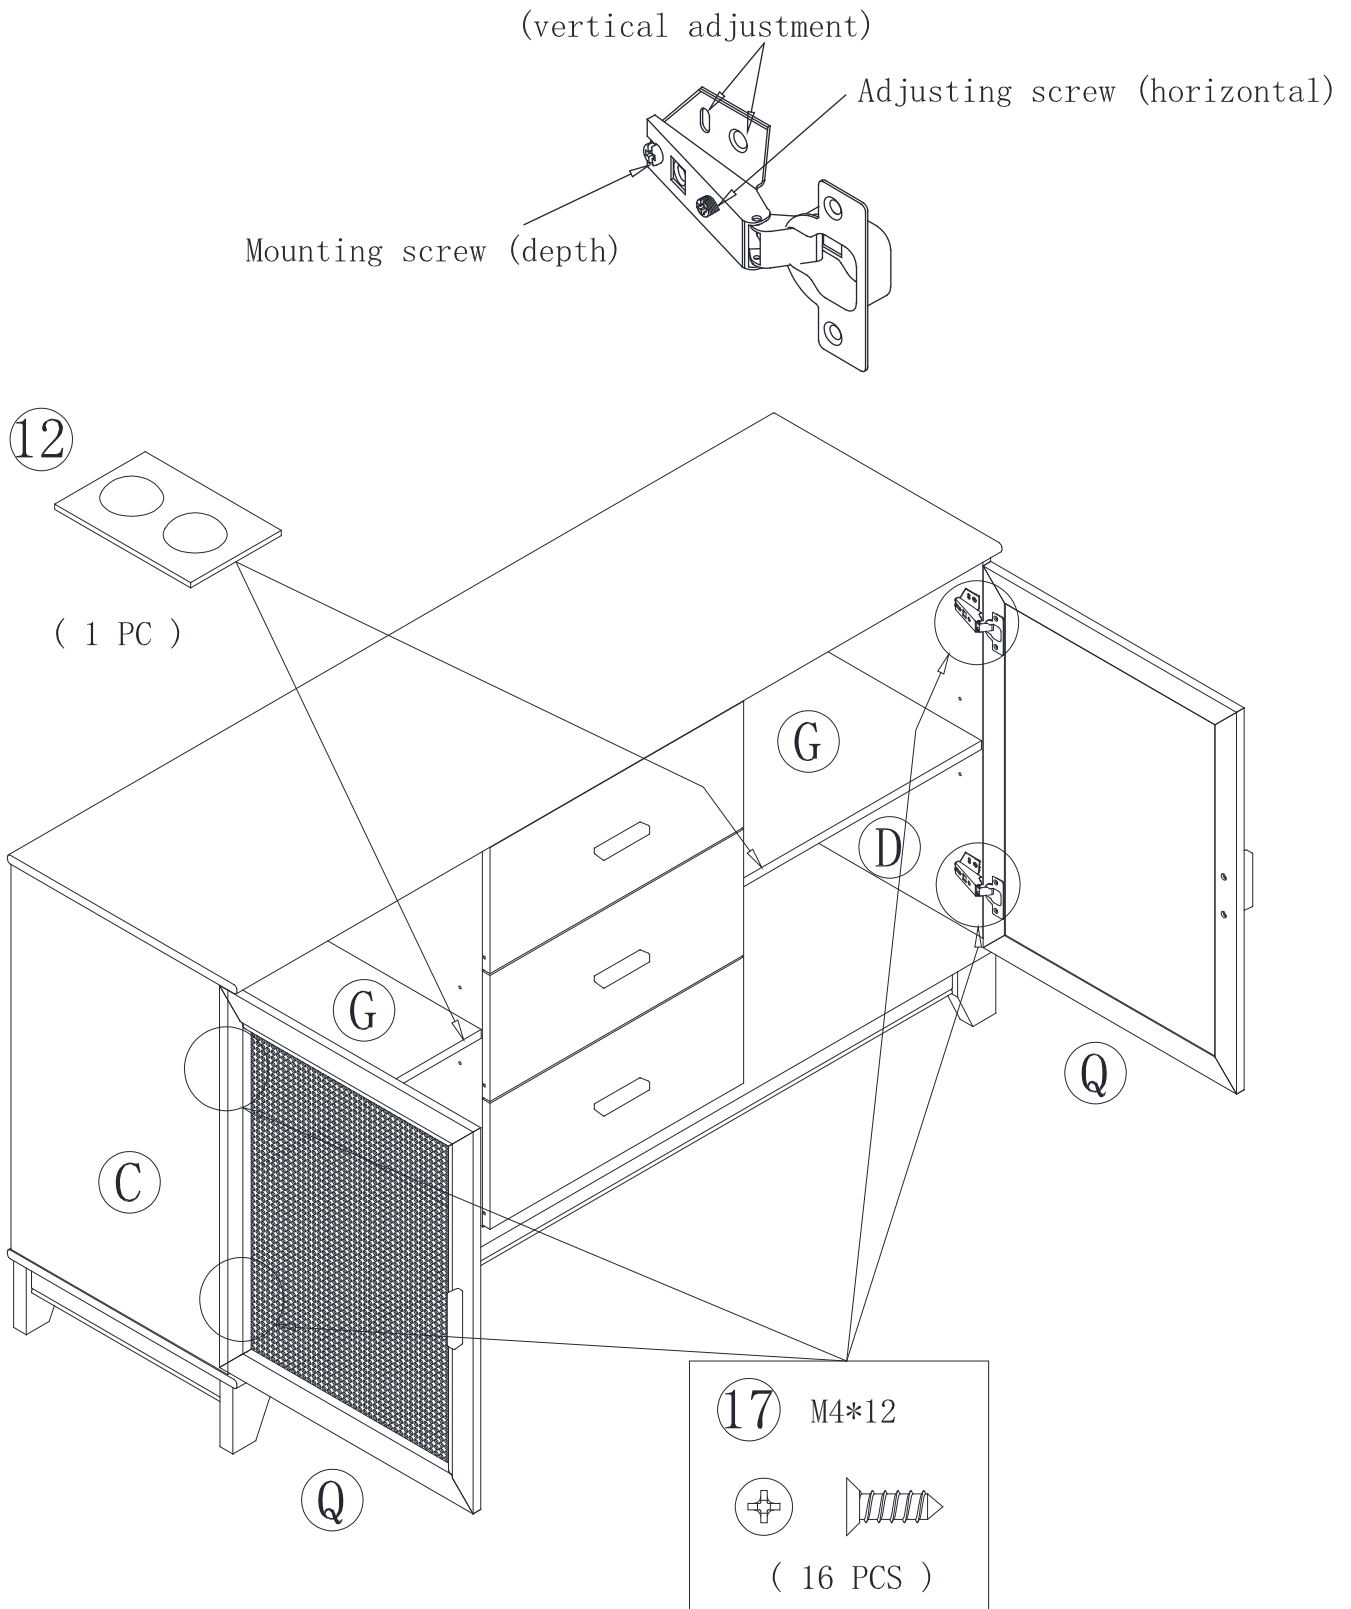

# Step 25

- ◆ Peel APPLIQUES from the APPLIQUE CARDS (5) and stick them onto each visible HIDDEN CAM.

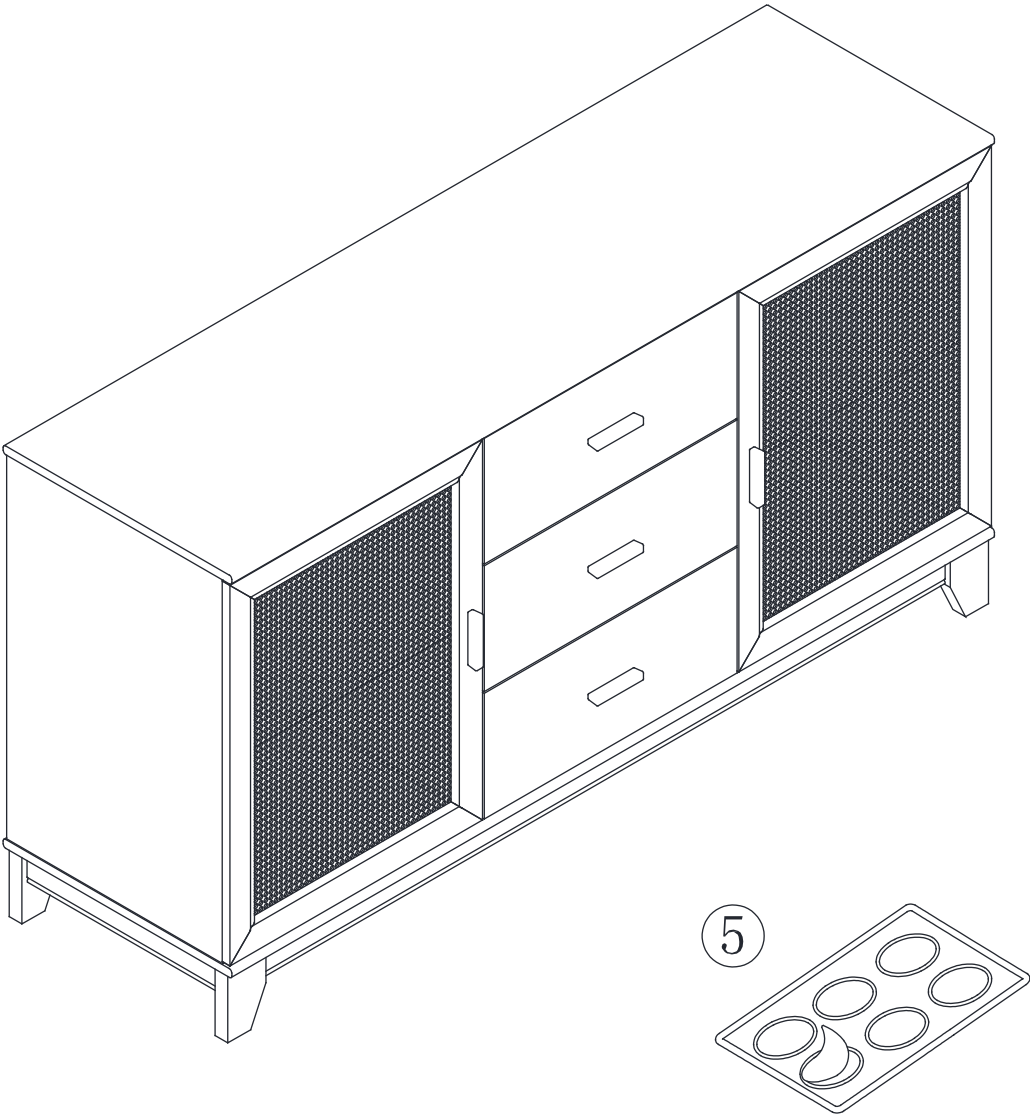

# Step 26

---

