


ASSEMBLY INSTRUCTION

XL SOFA SET

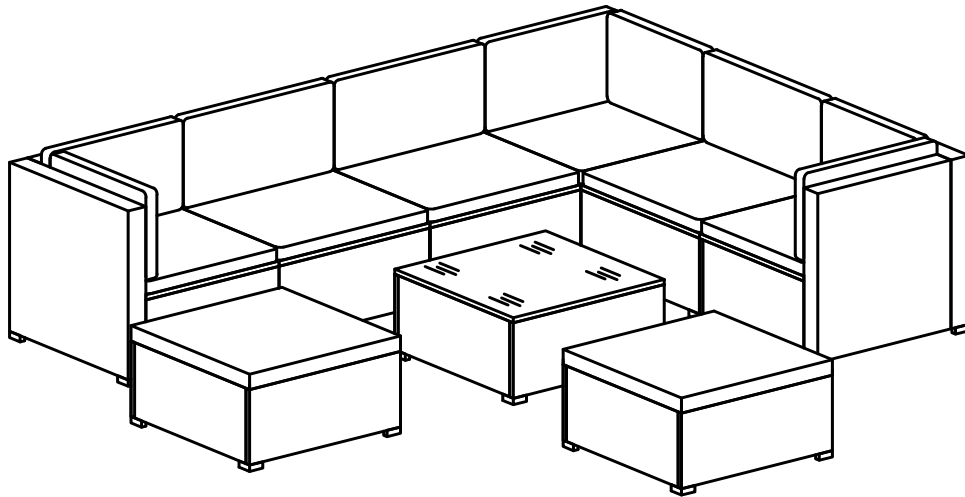


**WF198985; WF198986; WF198987;
WF198988**

Notice:

- 1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.**
- 2. Place the item on a flat ground to adjust and make sure it remains stable.**
- 3. Tighten up all screws with tools gradually.**
- 4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.**
- 5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.**
- 6. Note: If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.**


PART LIST

A

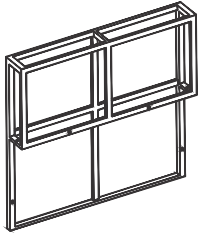


Chair back frame (3 pcs)

B

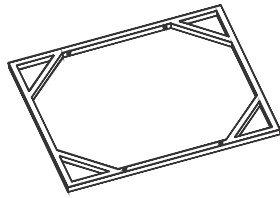


Chair seat frame (3 pcs)

C

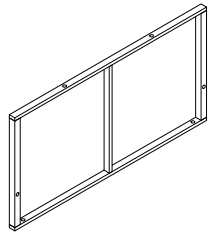


Front frame (9 pcs)

D

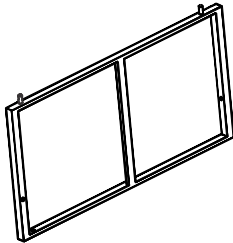


Side frame (15 pcs)

E

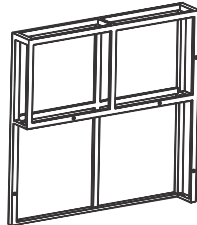


Corner back frame (3 pcs)

F

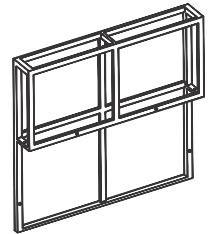


Corner armrest frame (3 pcs)

G

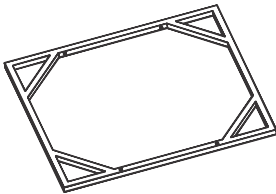

Corner seat frame (3 pcs)

H

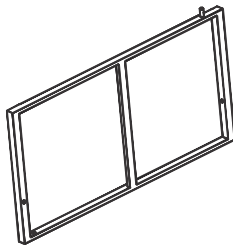

Corner front frame (3 pcs)

I


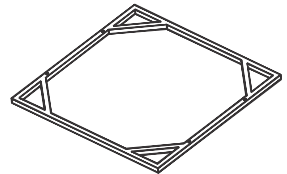



Table top frame (1 pcs)

J

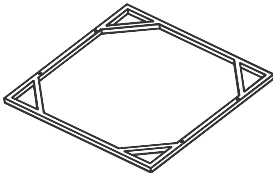


Stool top frame (2 pcs)

K

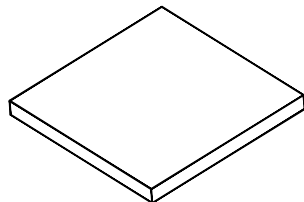


Chair seat cushion (3 pcs)

L

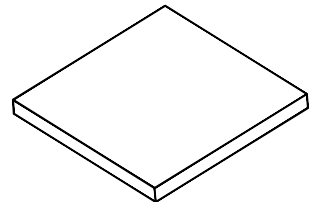


Corner seat cushion (3 pcs)

M

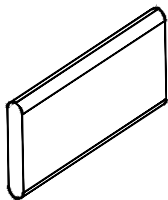


Chair back Cushion (3 pcs)

N

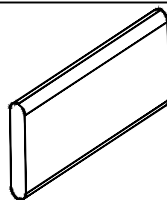


Corner long back cushion (3 pcs)

O

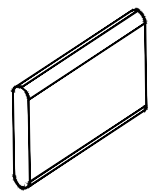


Corner short back cushion (3 pcs)

P

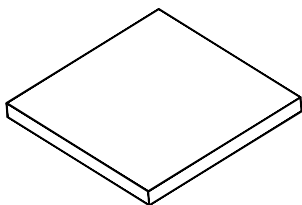

Stool Seat Cushion (2 pcs)


Q

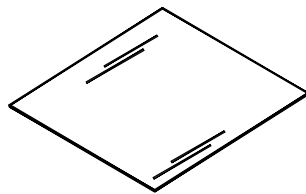

Tabel glass (1 pc)


HARDWARE

1

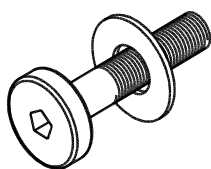


Bolt M6 x 55 mm
24 + 2 pcs (extra 2 pcs)

2

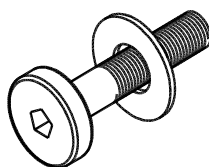


Bolt M6 x 40 mm
(3 pcs)

3

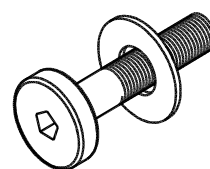


Bolt M6 x 30 mm
51 + 3 pcs (extra 3 pcs)

4

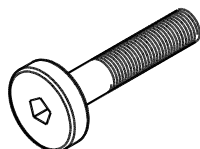


Bolt M6 x 30 mm
72 + 3 pcs (extra 3 pcs)

5

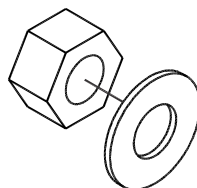


Eru
24 + 2 pcs (extra 2 pcs)

6

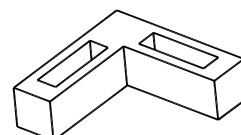


Plastic feet
(36 pcs)

7

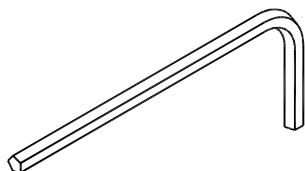


Allen
(2 pcs)

8

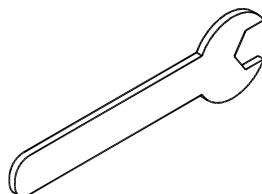






Spanner
(2 pcs)

9

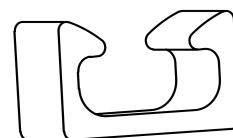







Connector plastic
(10 pcs)

WF198958

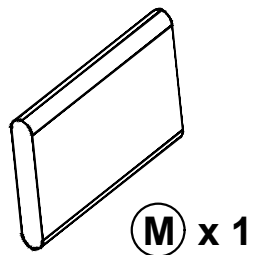
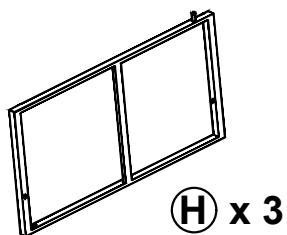
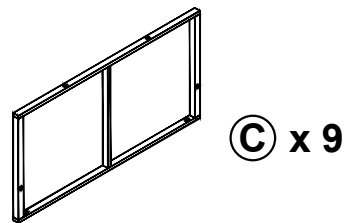
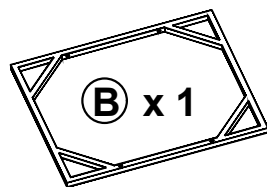
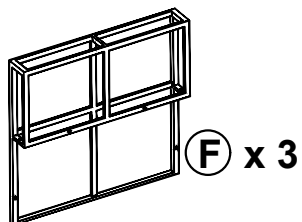


HARDWARE








WF198986

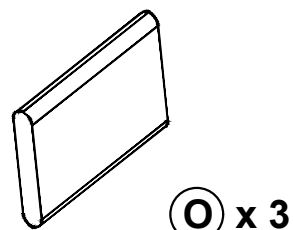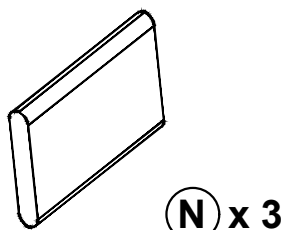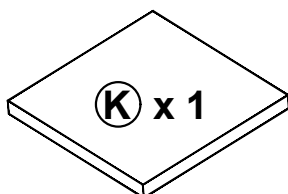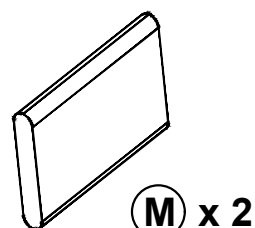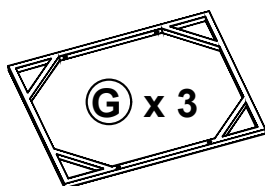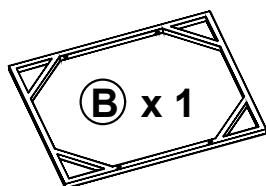

WF198987

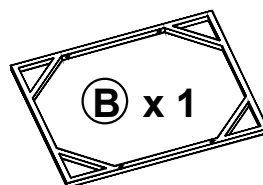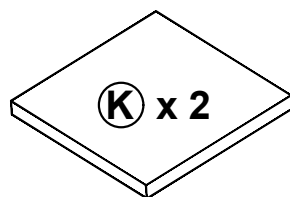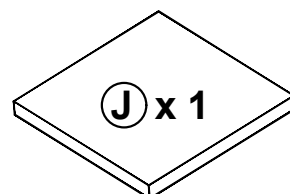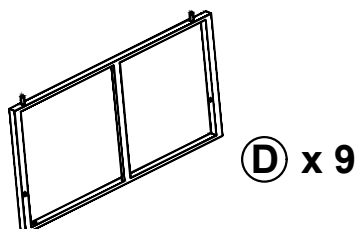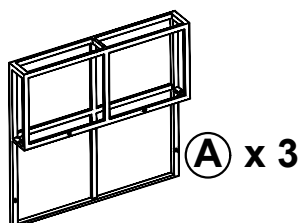


WF198988

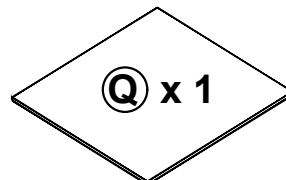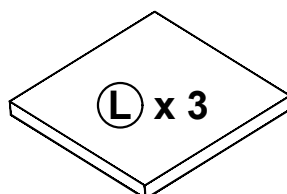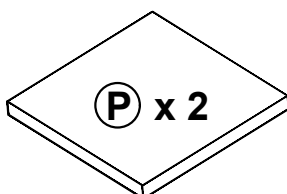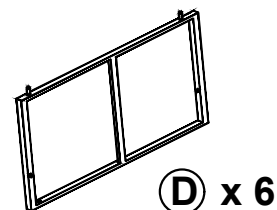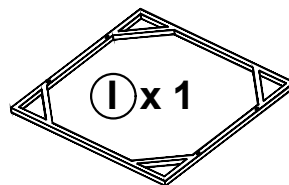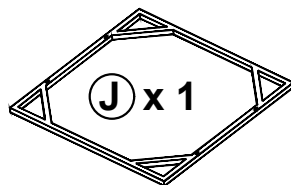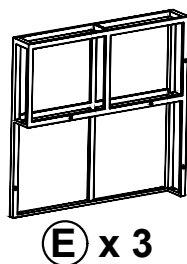


STEP 1

Connect 2 pcs Side Frame (D) & Chair Back Frame (A) with Bolt (3) .

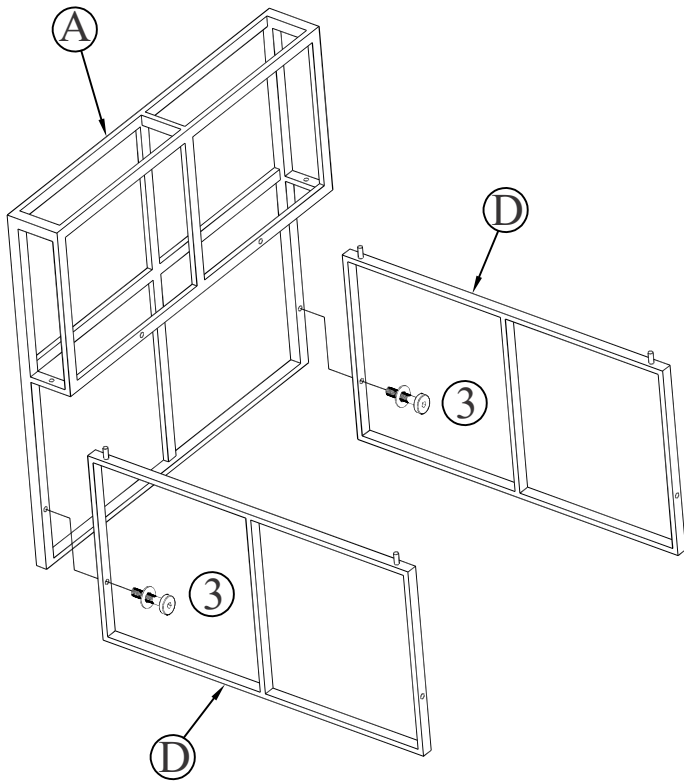


STEP 2

Connect part from Step 1 & Front Frame (C) with Bolt (3) .

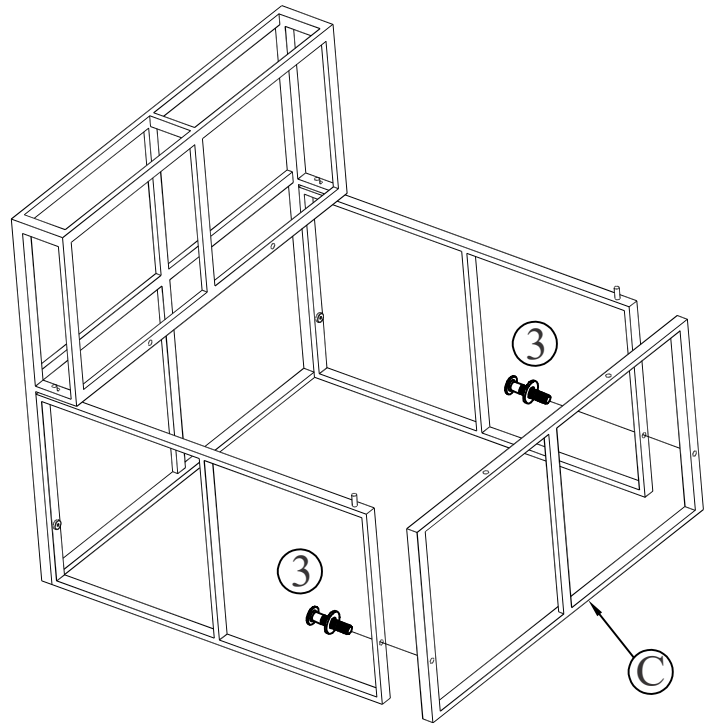


STEP 3

Connect part from Step 2 & Chair Seat Frame (B) with Bolt (3), Bolt (1) & Eru (5).

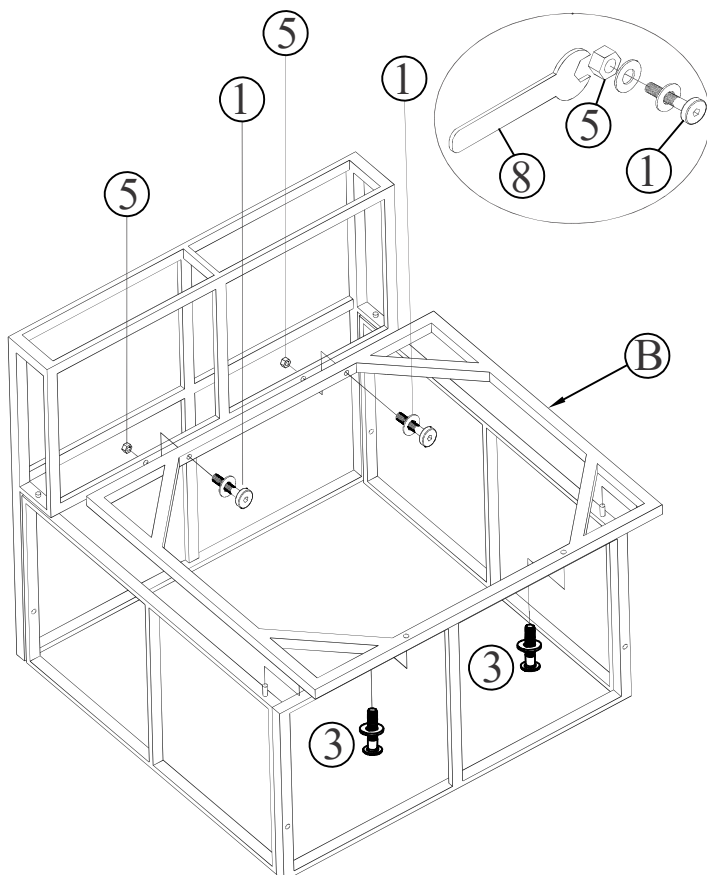


STEP 4

Connect part from Step 3 & Plastic Feet (6) with Bolt (4).

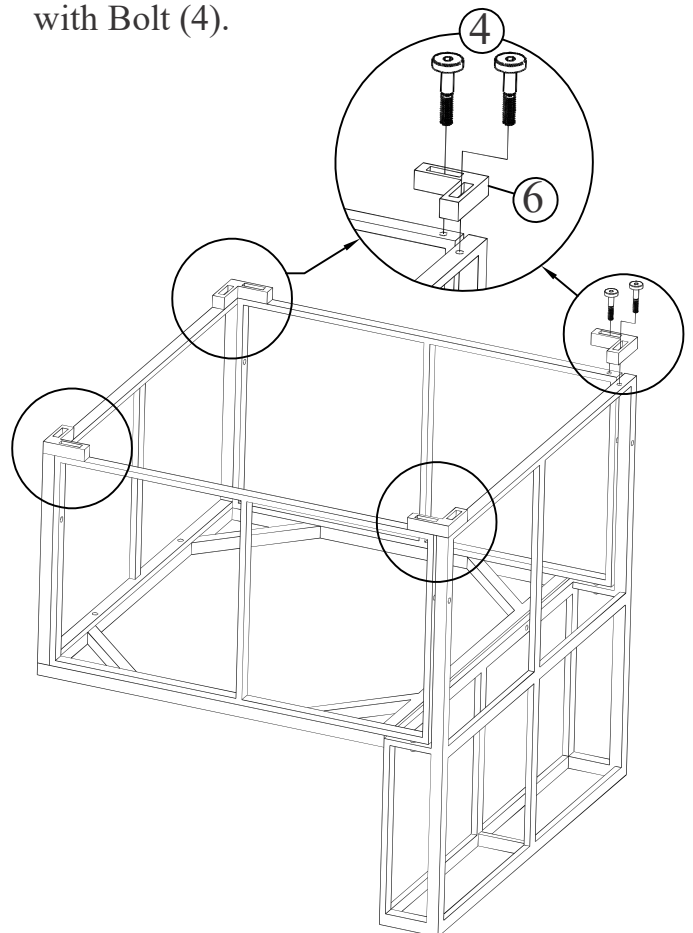


STEP 5

Put on Chair Seat Cushion (K) & Chair Back Cushion (M) to complete Chair.

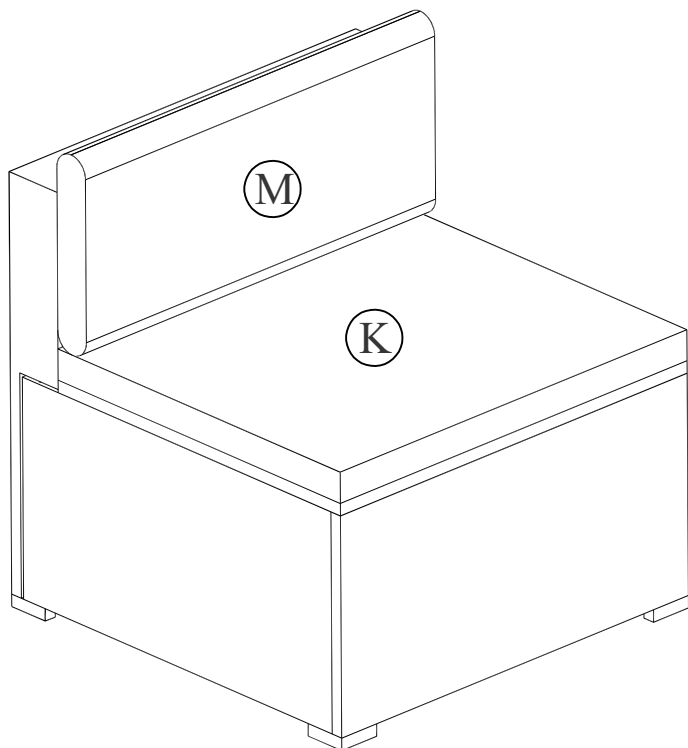


STEP 6

Connect Corner Back Frame (E) & Corner Armrest Frame (F) with Bolt (1) Bolt (3) & Nut (5).

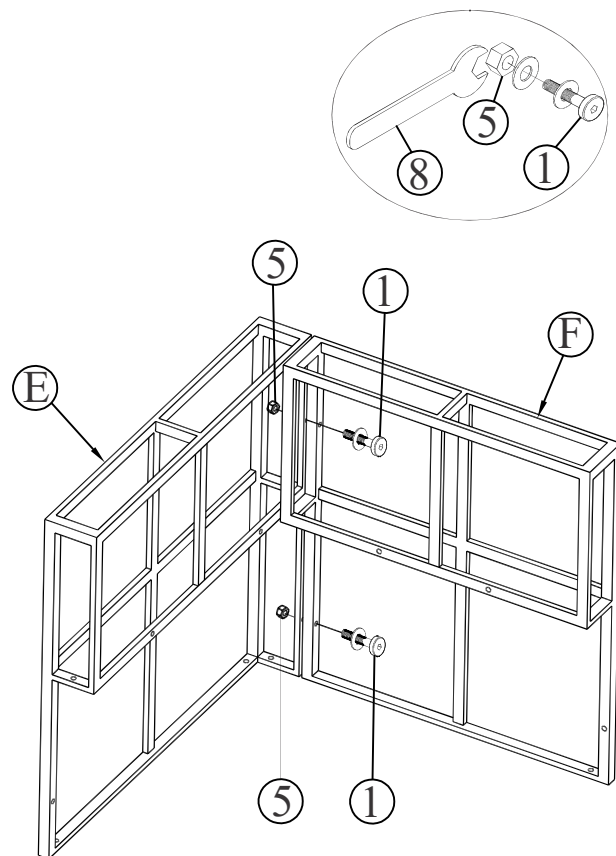


STEP 7

Connect Side Frame (D) & Corner Front Frame (H) with Bolt (3)

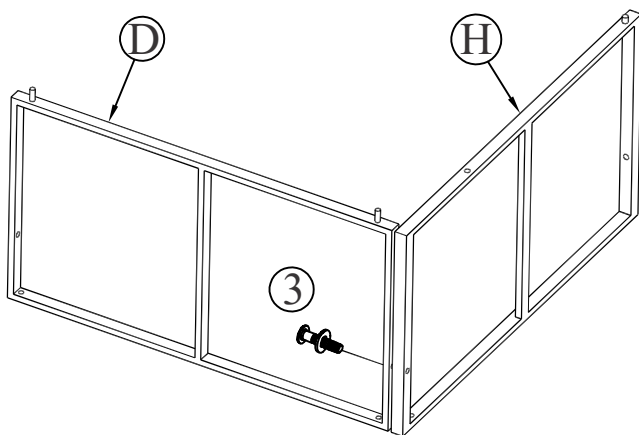


STEP 8

Connect part from Step 6 & Step 7 with Bolt (2) Bolt (3)

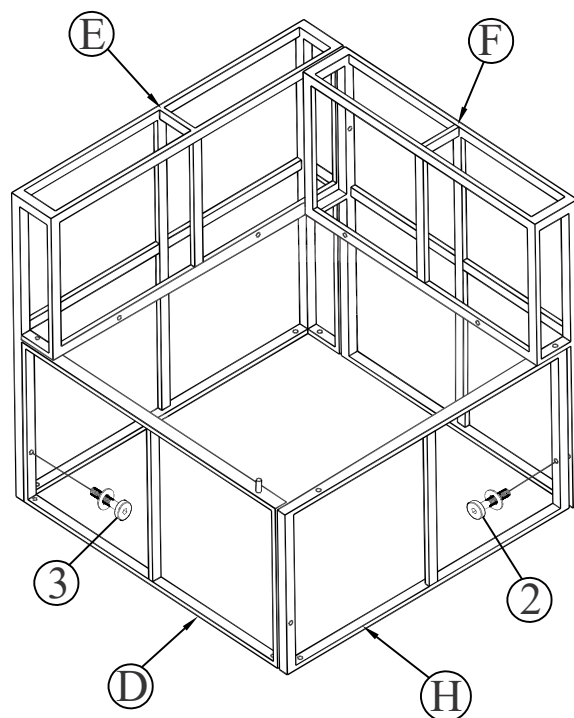


STEP 9

Connect part from Step 8 & Corner Seat Frame (G) with Bolt (3), Bolt (1) & Nut (5).

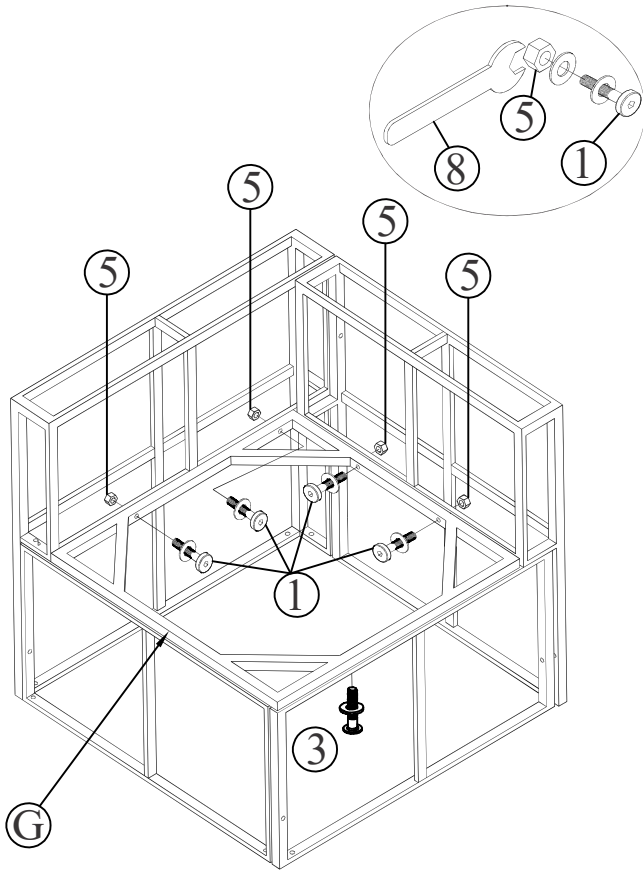


STEP 10

Connect part from Step 9 & Plastic Feet (6) with Bolt (4).

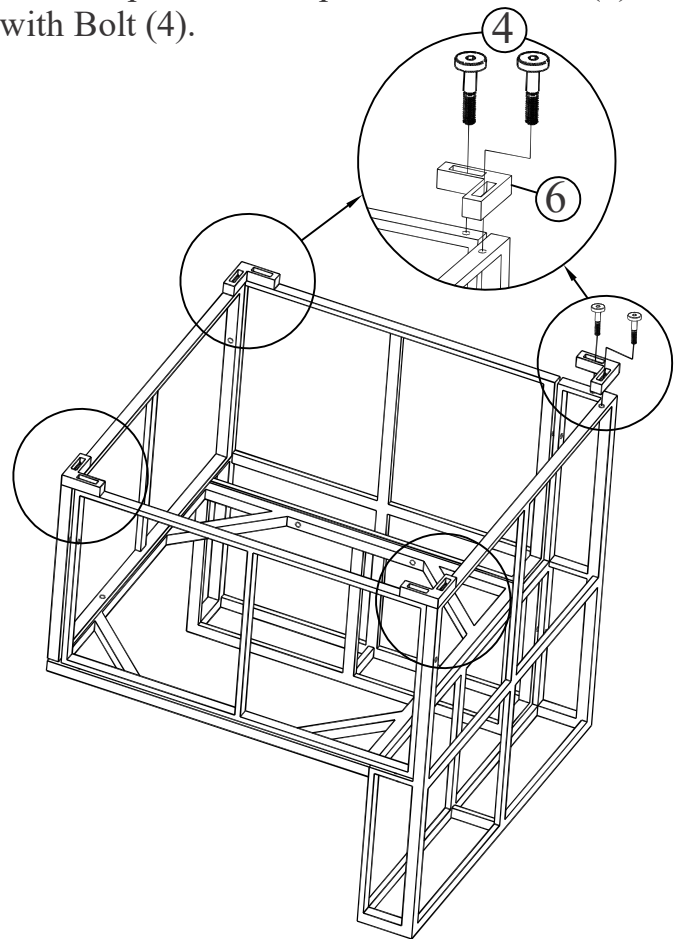


STEP 11

Put on Corner Seat Cushion (L), Corner Long Back Cushion (N) & Corner Short Back Cushion (O) to complete Chair.

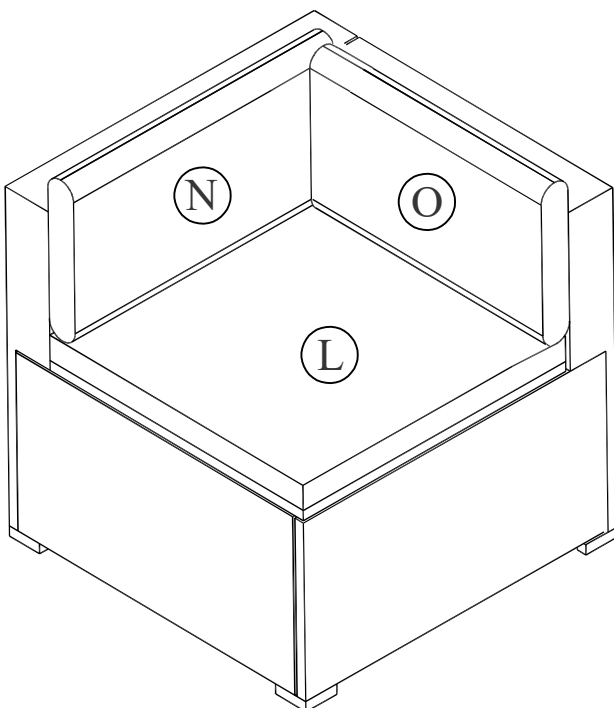


STEP 12

Connect Table Top Frame (I), Front Frame (C) & Side Frame (D) with Bolt (3).

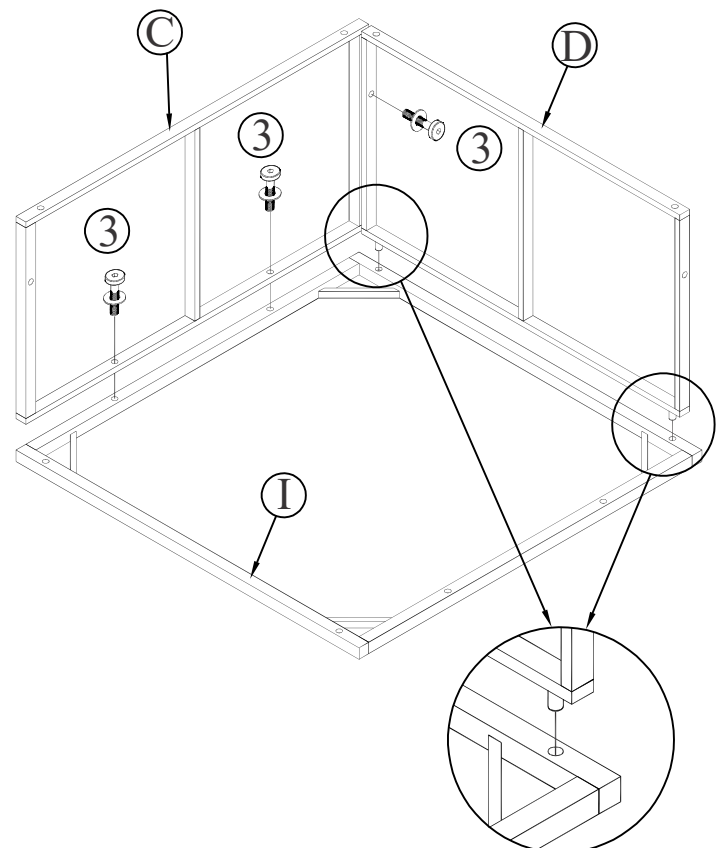


STEP 13

Connect part from Step 12 & Side Frame (D) with Bolt (3).

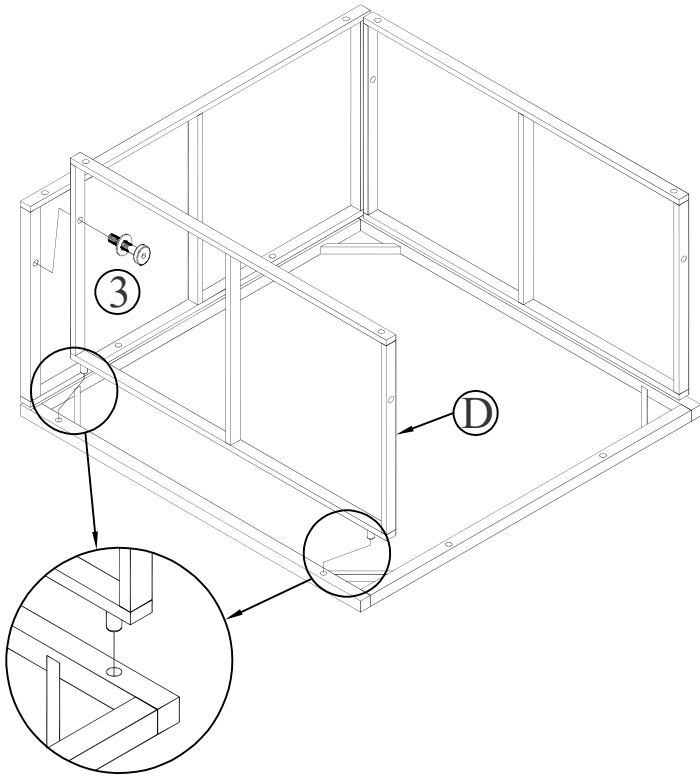


STEP 14

Connect part from Step 13 & Front Frame (C) with Bolt (3).

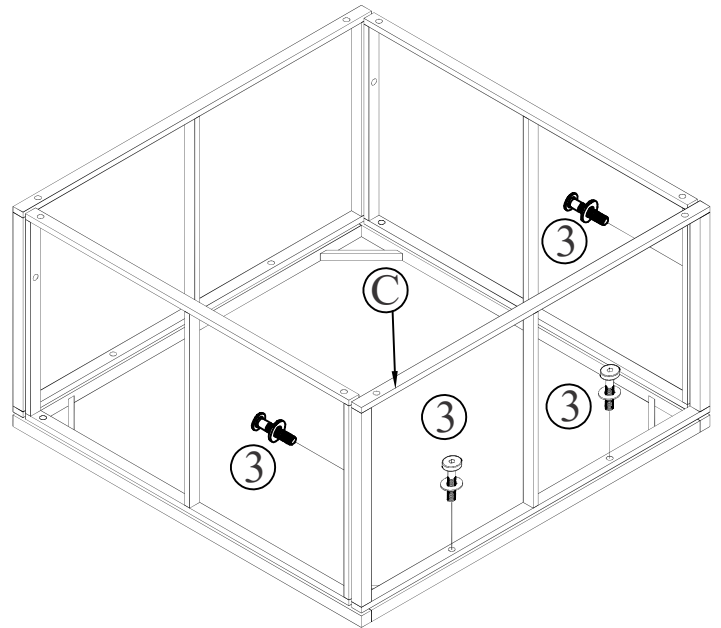


STEP 15

Connect part from Step 14 & Plastic Feet (6) with Bolt (4).

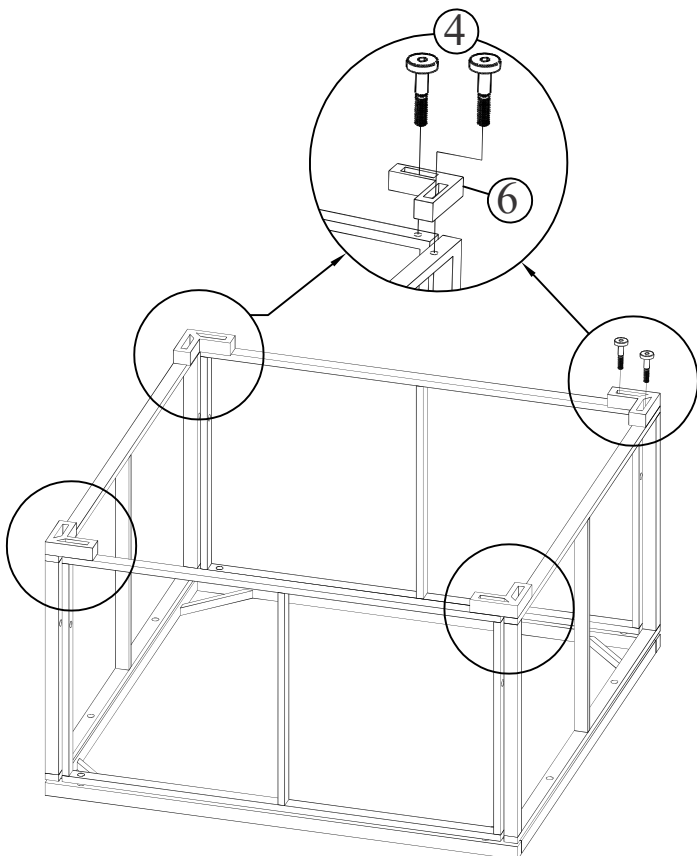


STEP 16

Put on Glass Table (Q) to complete Table

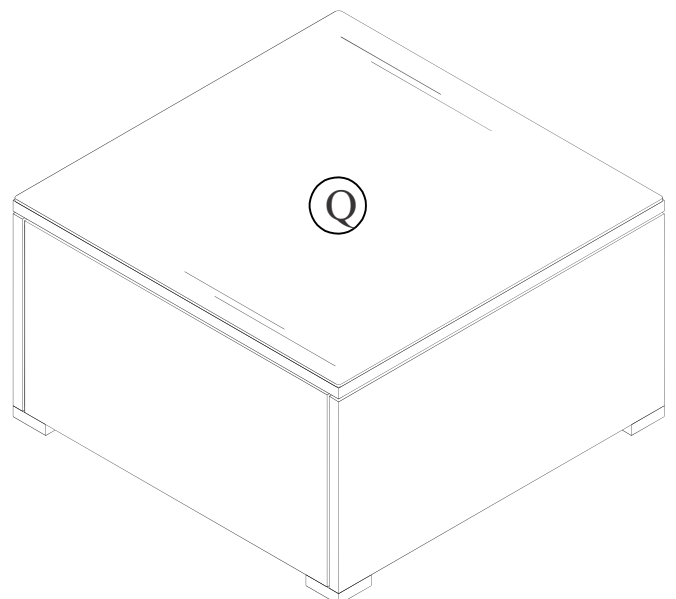


STEP 17

Connect Stool Top Frame (J), Front Frame (C) & Side Frame (D) with Bolt (3).

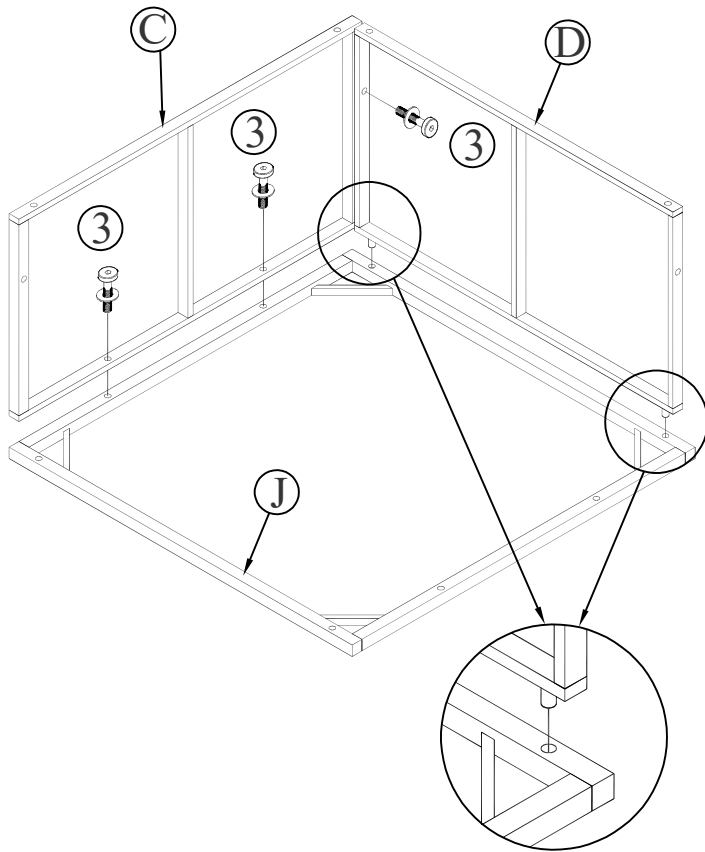


STEP 18

Connect part from Step 17 & Side Frame (D) with Bolt (3).

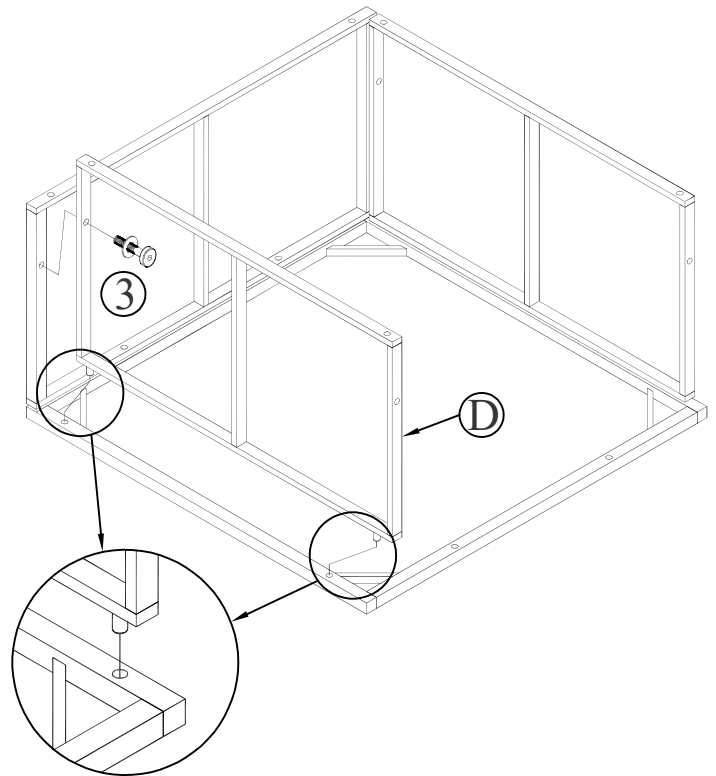


STEP 19

Connect part from Step 18 & Front Frame (C) with Bolt (3).

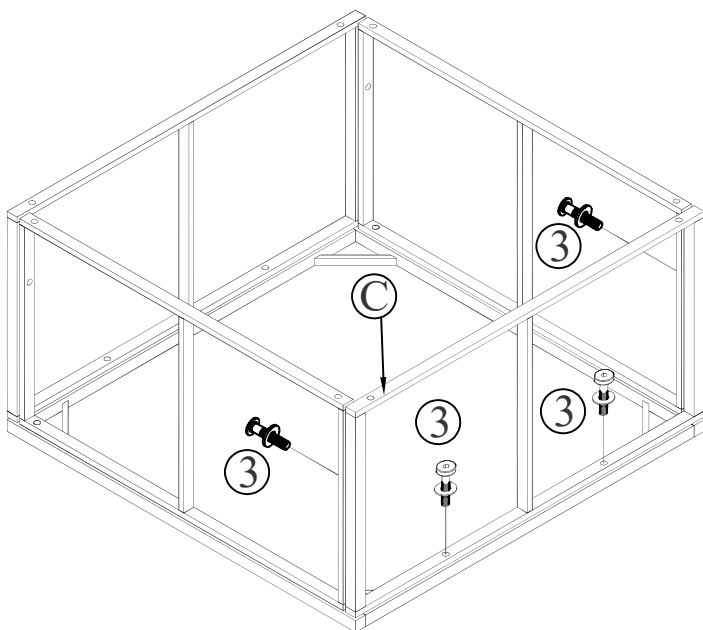


STEP 20

Connect part from Step 19 & Plastic Feet (6) with Bolt (4).

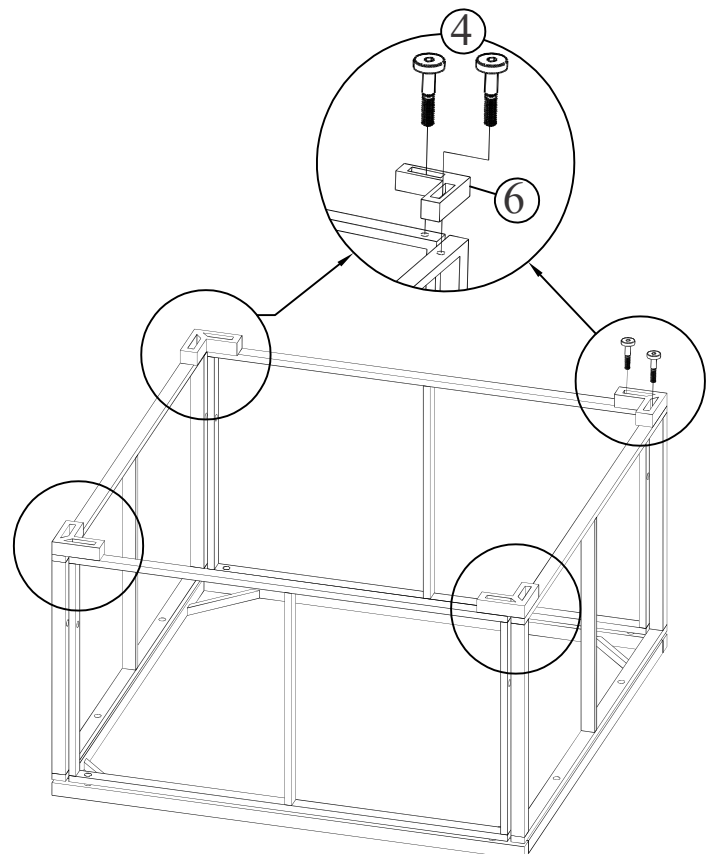

STEP 21

Put on Stool Seat Cushion (P) to complete Stool.

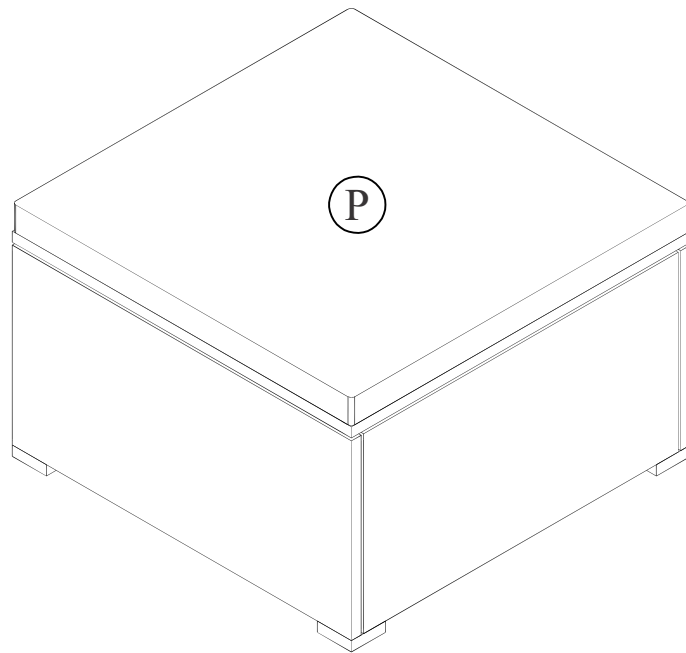

STEP 22

Connect chairs with chairs corner by Connector plastic (9)

