



ASSEMBLY AND INSTALLATION INSTRUCTIONS

T0218

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THESE INSTRUCTIONS.

Hardware Package (included):

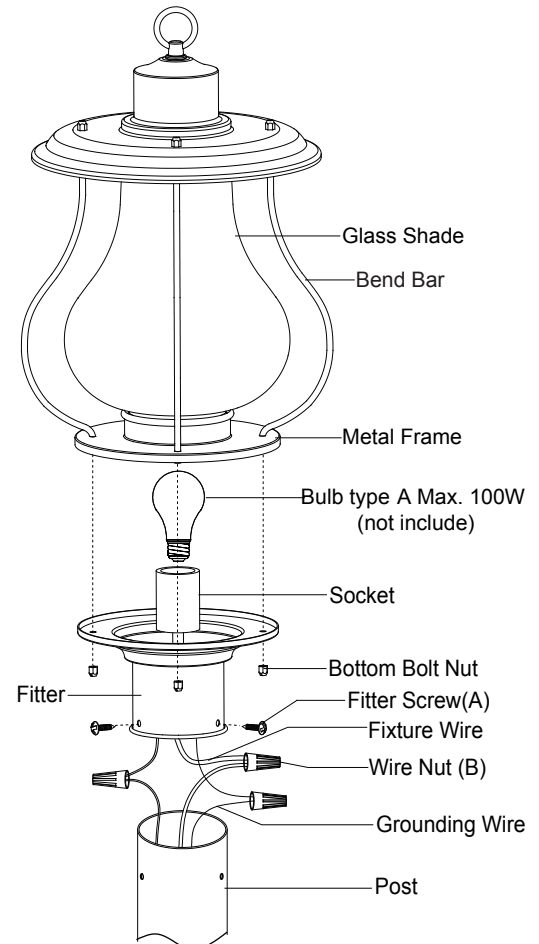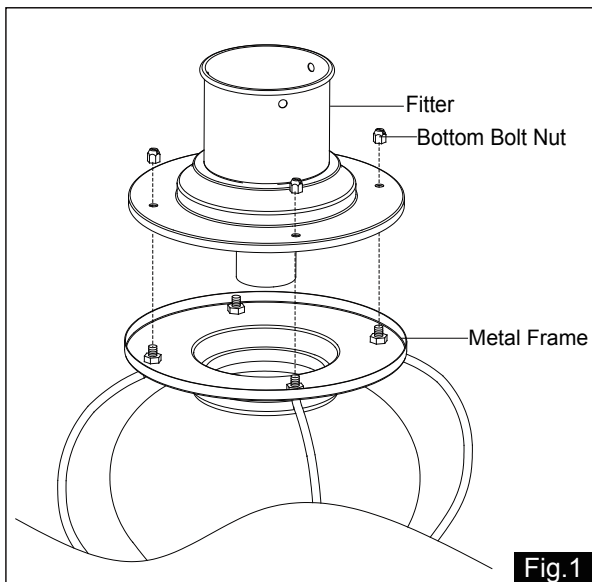

Installation Steps

Turn off the power at fuse or circuit box.

1. Remove the EVA plugged between glass shade and bend bars.
2. Unscrew four bottom bolt nuts to remove the metal frame from the fixture, using a flathead screwdriver if necessary (not included).
3. Install a bulb (not included). Check relamping label at socket area or packaging for maximum allowed wattage.
4. Attach the metal frame back to the fixture, and then secure it with four bottom bolt nuts, using a flathead screwdriver if necessary (not included). (See Fig.1)
5. Pull out the source wires from the post. Make wire connections using wire nuts as follows:
 - Connect the hot wire (usually black insulation) from the fixture to the black wire from the post
 - Connect the neutral wire (usually white insulation) from the fixture to the white wire from the post
 - Attach the fixture grounding wire (usually green insulation or bare wire) to the grounding wire from the post.Carefully put the wires back into the post.
6. Place the fitter on the post, and then secure it with the fitter screws.


Turn on the power at fuse or circuit box

The following parts are available for re-order if damaged or missing.


Spare Parts List:




Assembly Kit
5497MM (1 SET)

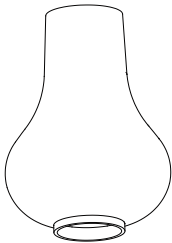

Glass Shade
9799C(1PC)



Bottom Bolt Nut
5506BB(4PCS)

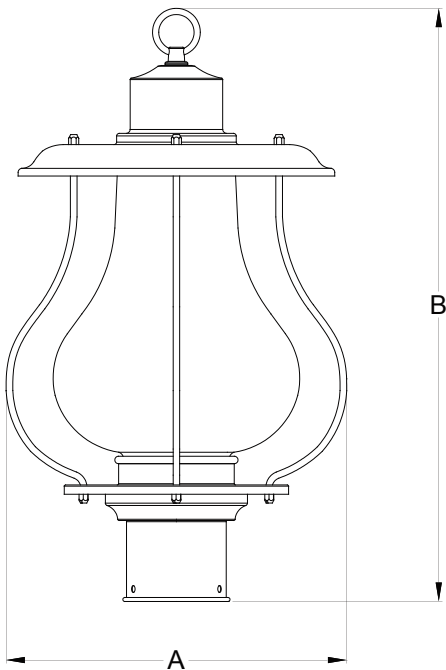

A: 10"

B: 18-1/2"