




DESIGNED FOR LIFE

Assembly Instructions

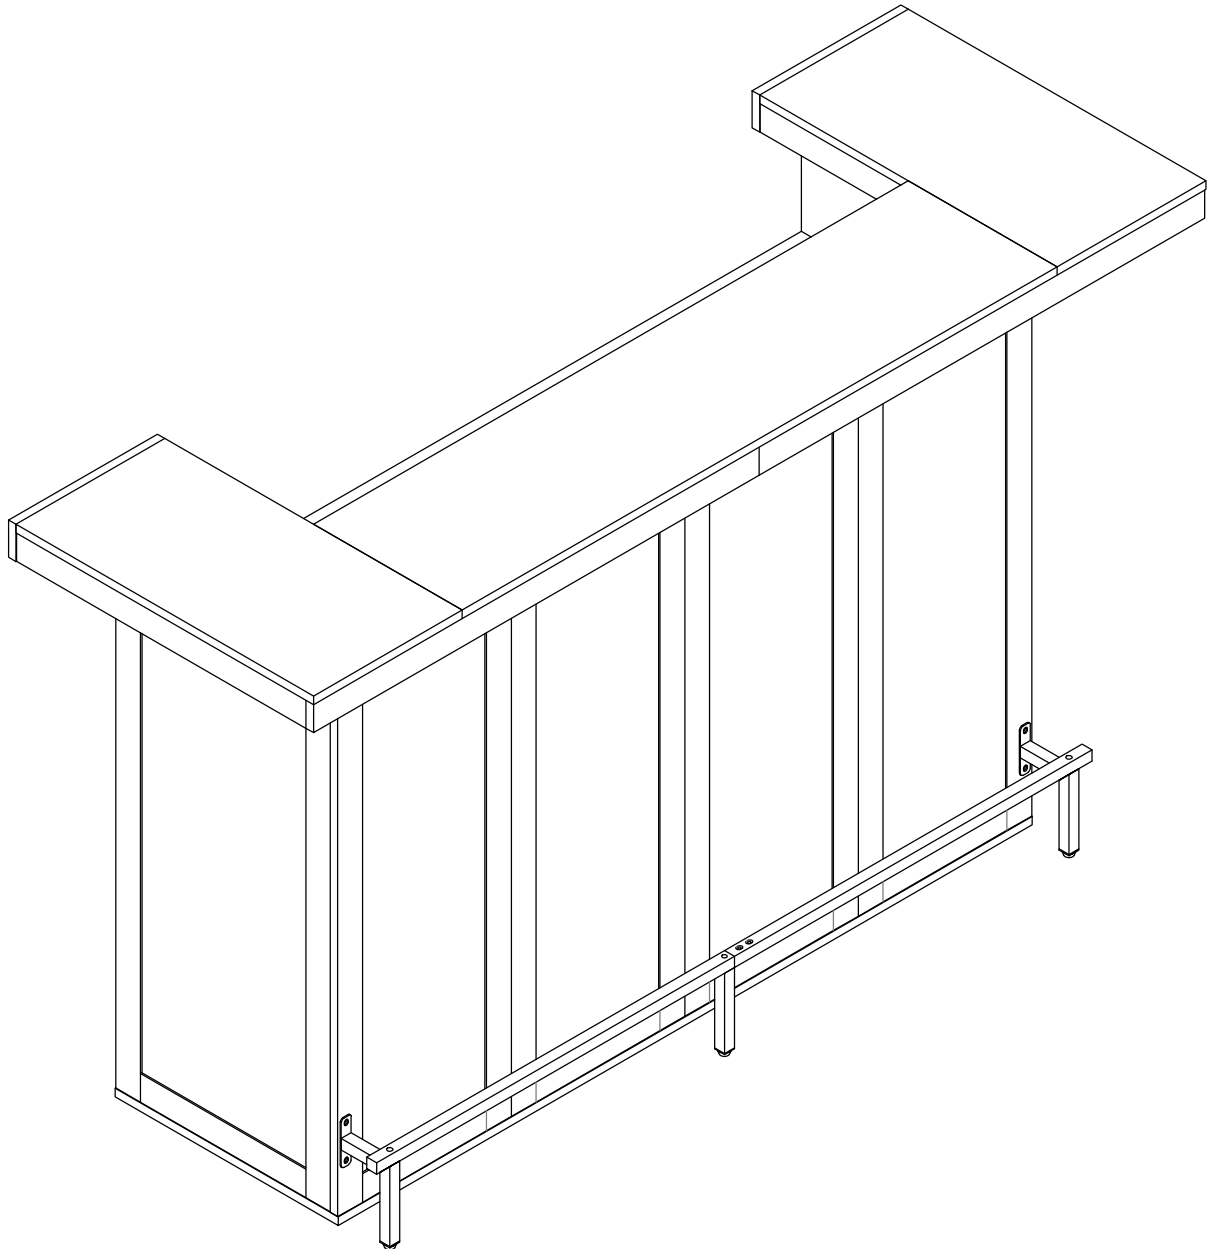

Front Desk

Model No.
HOGA-YS 0319



LITTLE TREE
Little Tree by Tribesigns

www.tribesigns.com

Contact Us

We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

How to Get the Assembly Video

Step 1


Scan the QR code.





Installation Video



Step2

Search with the Model No.
(on the bottom left corner of the title page)

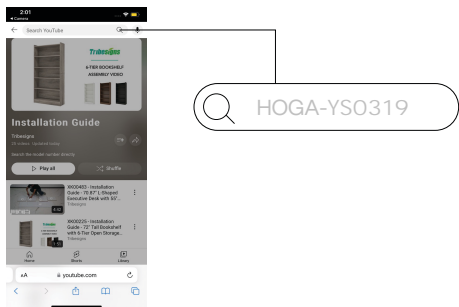

Note: If you can't find the assembly video, please contact us.












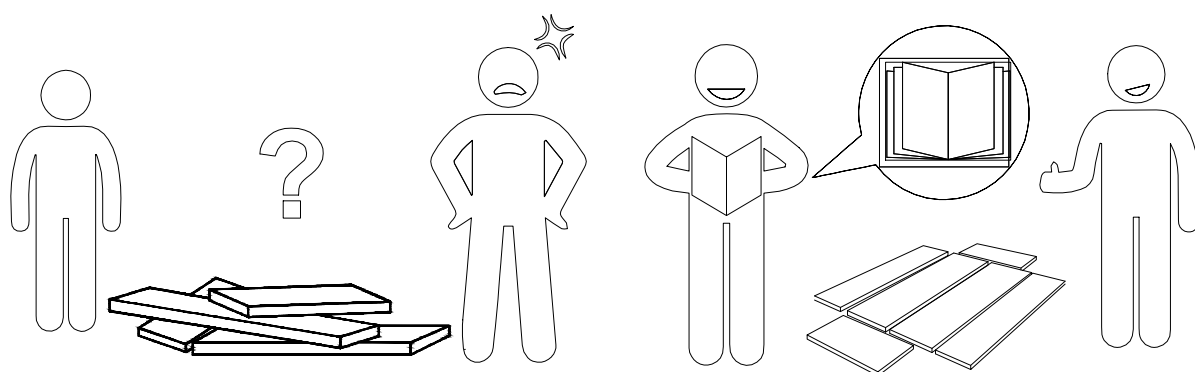
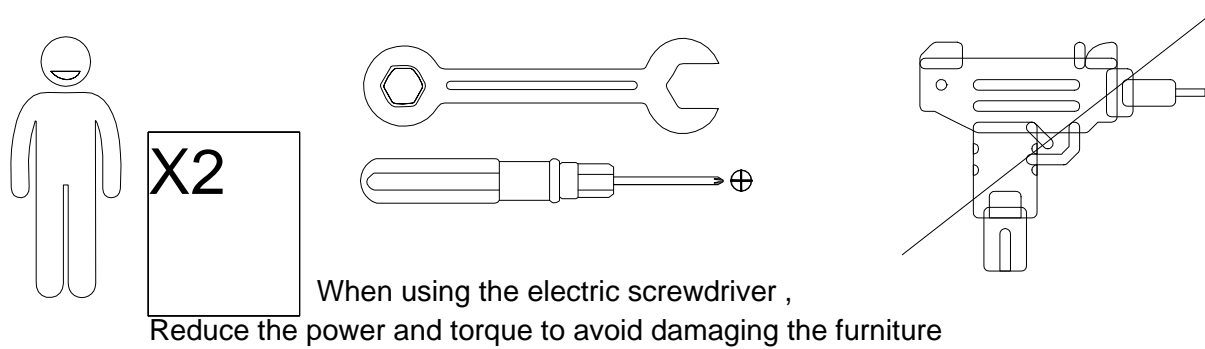


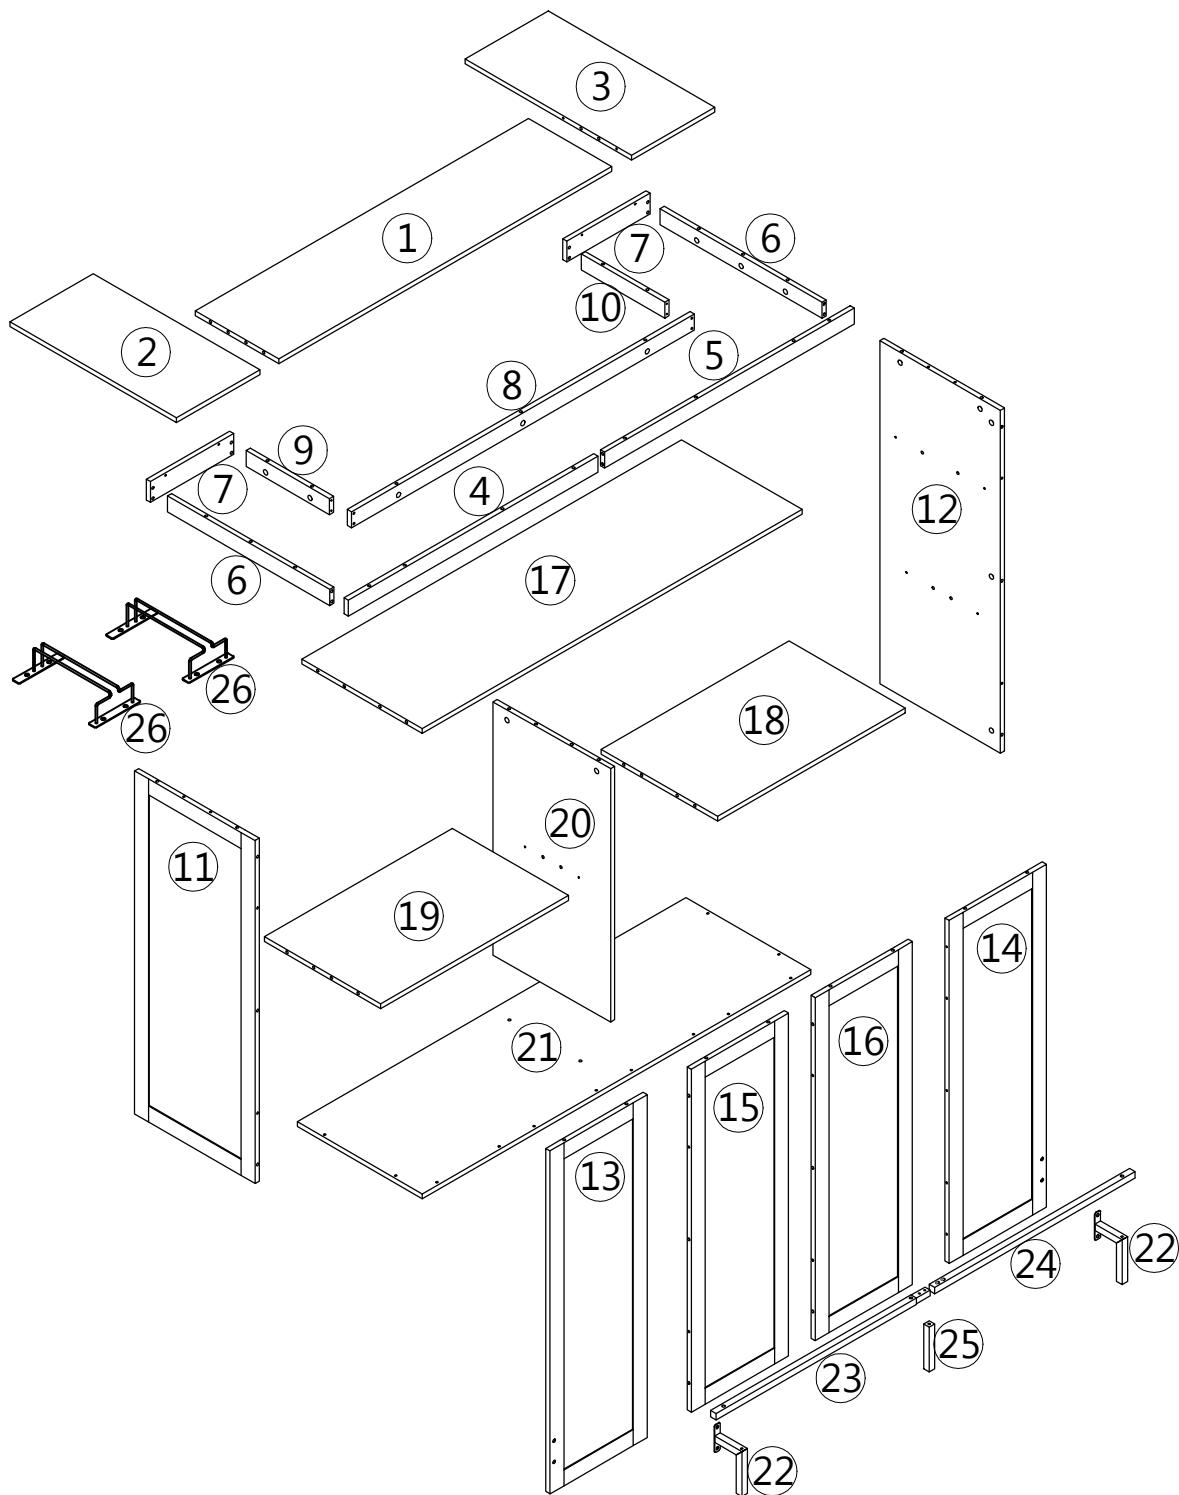













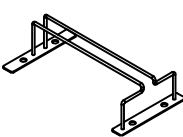
Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for free replacement if having damaged or missing parts.







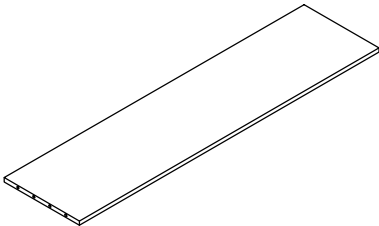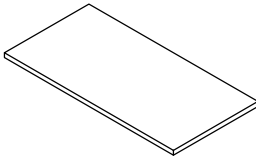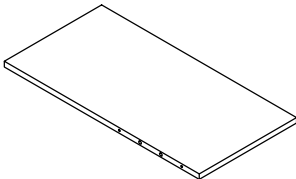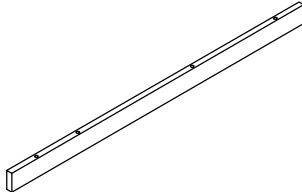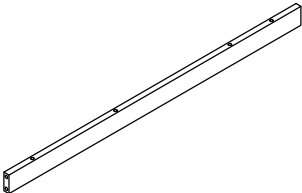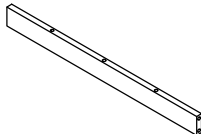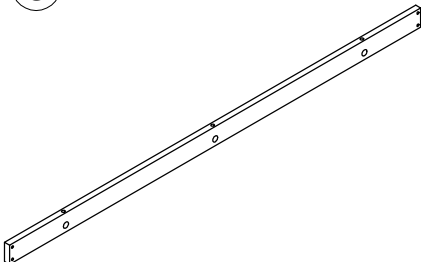

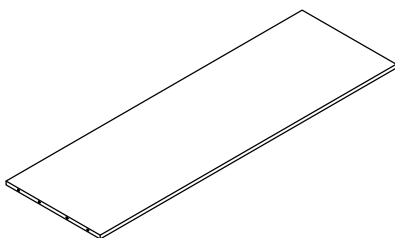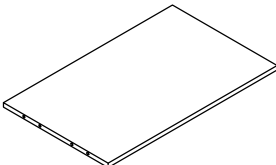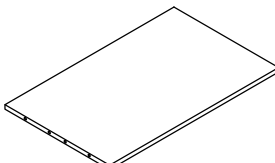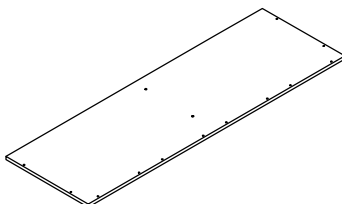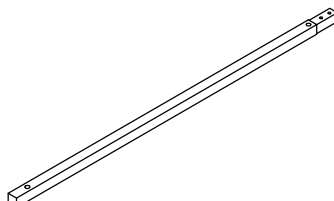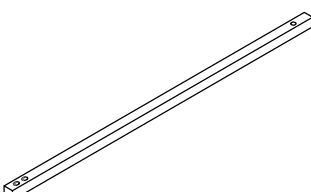



Parts List

<div>①</div> <div></div> <div>1pc</div>	<div>②</div> <div></div> <div>1pc</div>	
<div>③</div> <div></div> <div>1pc</div>	<div>④</div> <div></div> <div>1pc</div>	
<div>⑤</div> <div></div> <div>1pc</div>	<div>⑥</div> <div></div> <div>2pcs</div>	<div>⑦</div> <div></div> <div>2pcs</div>
<div>⑧</div> <div></div> <div>1pc</div>	<div>⑨</div> <div></div> <div>1pc</div>	<div>⑩</div> <div></div> <div>1pc</div>
<div>⑪</div> <div></div> <div>1pc</div>	<div>⑫</div> <div></div> <div>1pc</div>	<div>⑬</div> <div></div> <div>1pc</div>

Parts List


<div>14</div> <div></div> <div>1pc</div>	<div>15</div> <div></div> <div>1pc</div>	
<div>16</div> <div></div> <div>1pc</div>	<div>17</div> <div></div> <div>1pc</div>	
<div>18</div> <div></div> <div>1pc</div>	<div>19</div> <div></div> <div>1pc</div>	<div>20</div> <div></div> <div>1pc</div>
<div>21</div> <div></div> <div>1pc</div>	<div>22</div> <div></div> <div>2pcs</div>	<div>23</div> <div></div> <div>1pc</div>
<div>24</div> <div></div> <div>1pc</div>	<div>25</div> <div></div> <div>1pc</div>	<div>26</div> <div></div> <div>2pcs</div>

Hardware List


A	B	C
		
M6X10MM	M6X40MM	ST5X40MM
14+1pcs	3pcs	18+1pcs
D	E	F
  ▽9.5		
ST6X40MM	Ø6 x 35MM	M8
70+5pcs	14+1pcs	3pcs
G		
	 →70	
Ø8 x 35MM		4#
32+2pcs	1pc	1pc
		
3#		
1pc	1pc	

Installation of Cams and Pins


Screw the pin into the hole. To set the cams correctly, ensure that the arrow on the cam is opening to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

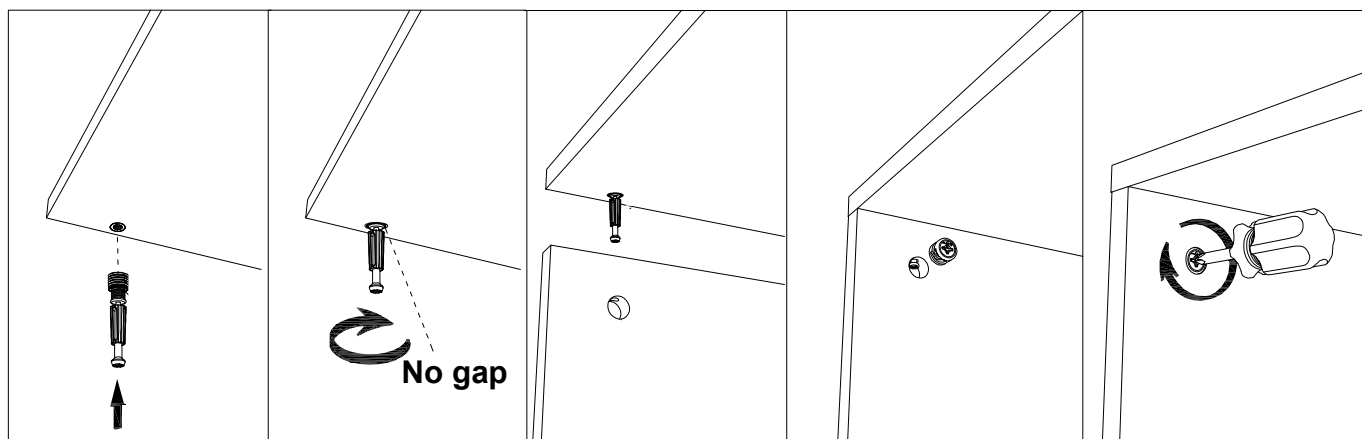


Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

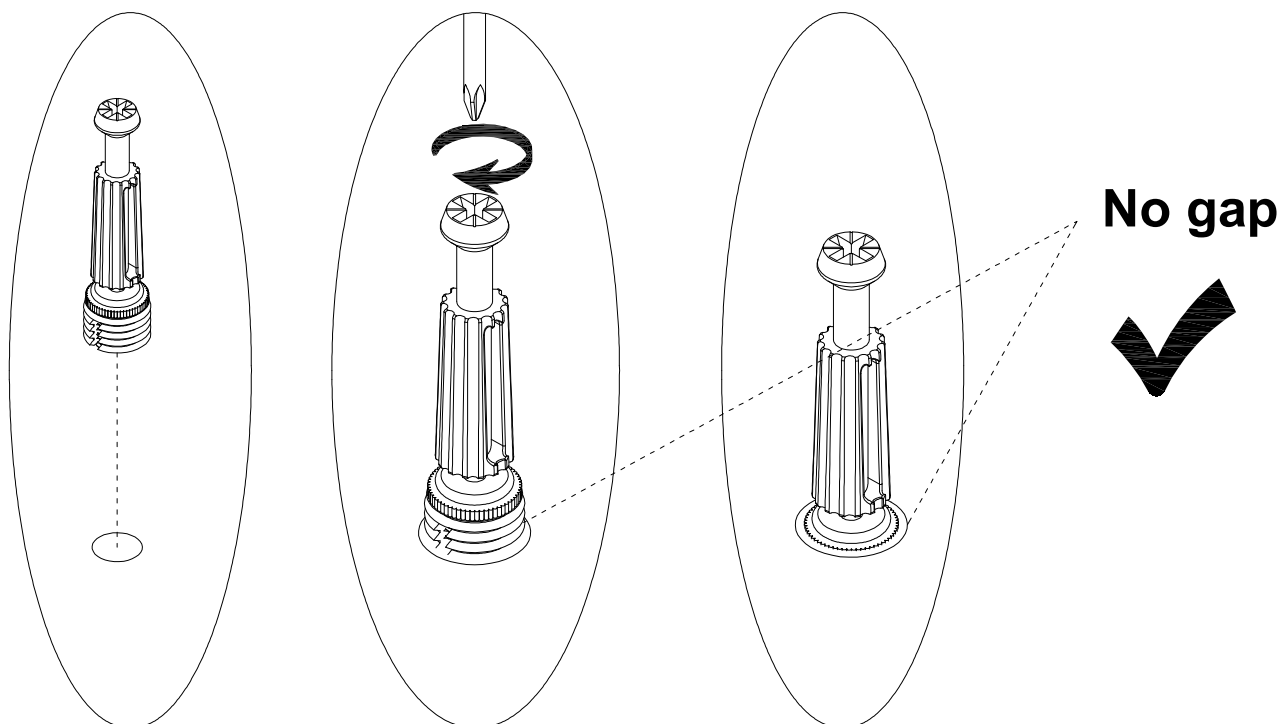


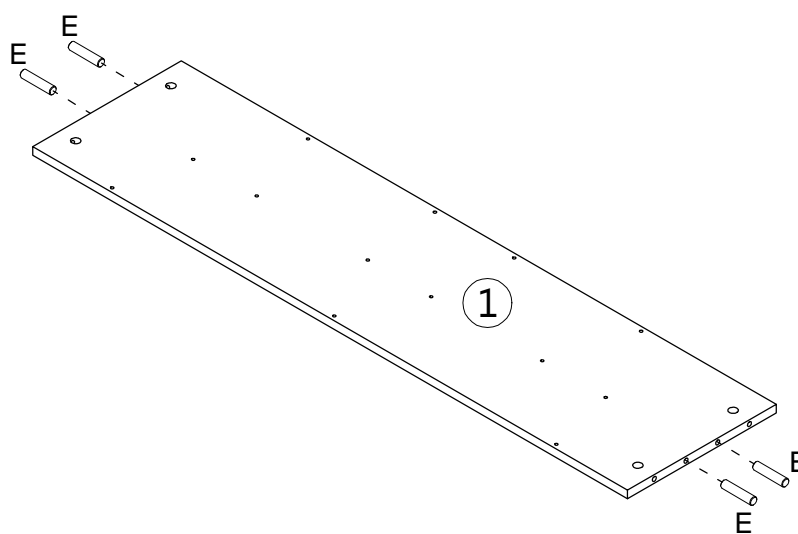
1

D

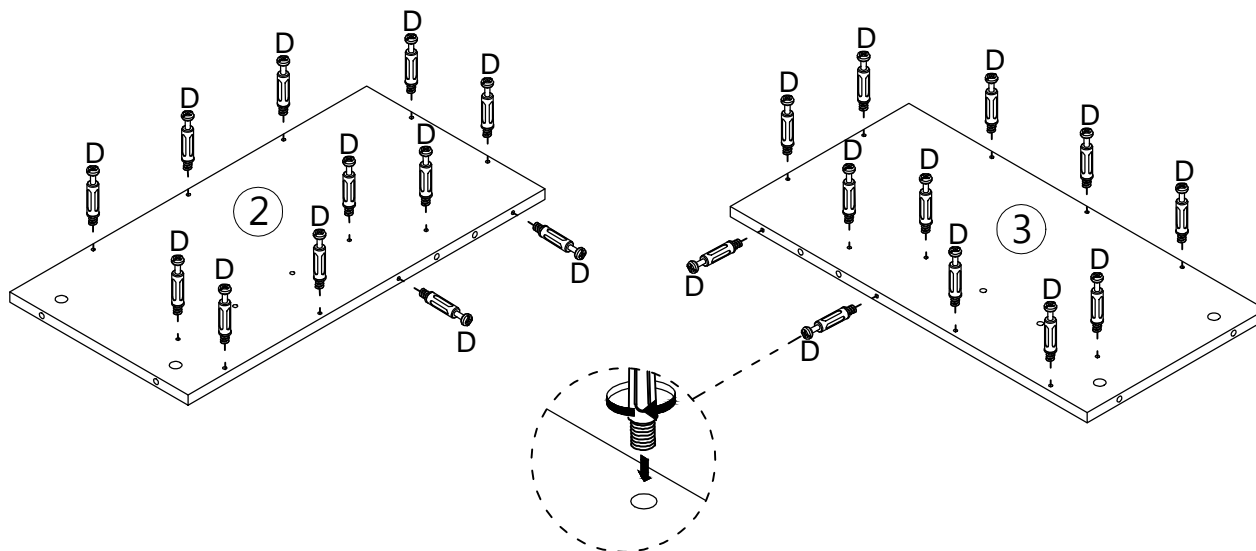ST6X40MM
24 PCS





2

G

8X35MM
4 PCS




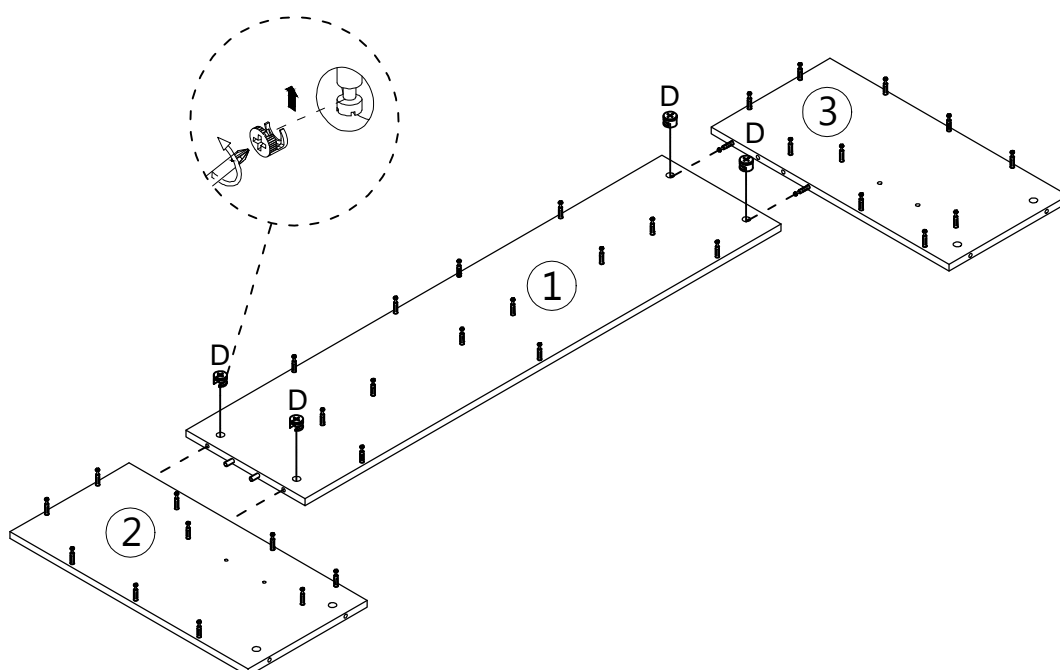
3

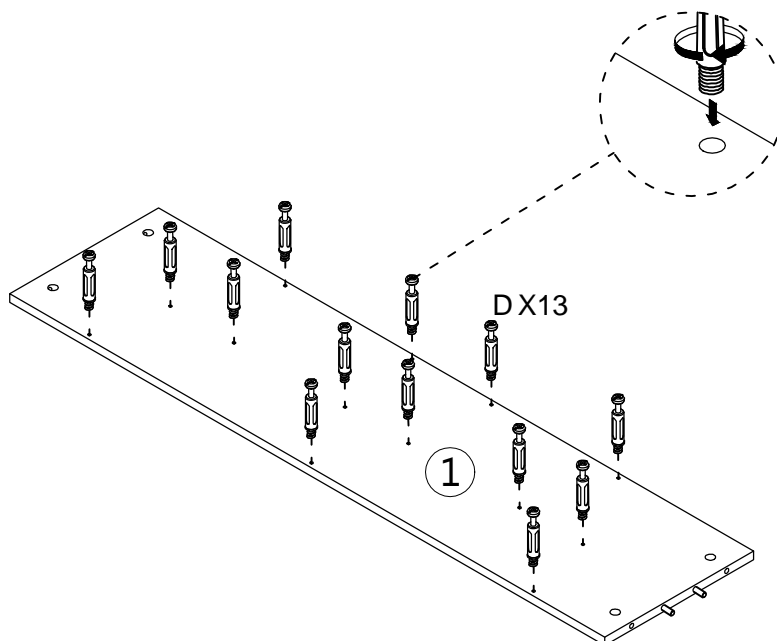D

ST6X40MM
13 PCS




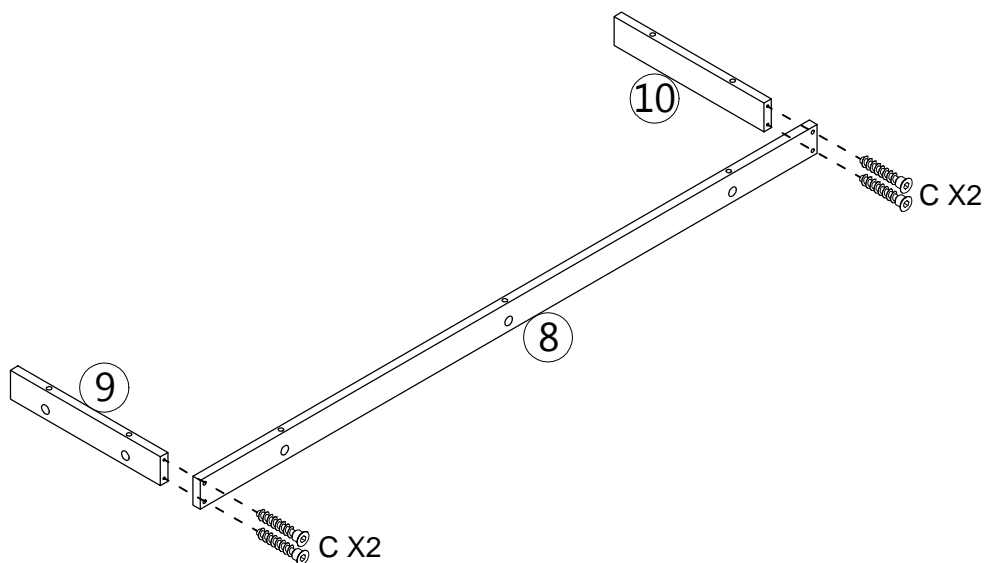
4

D

9.5
4 PCS




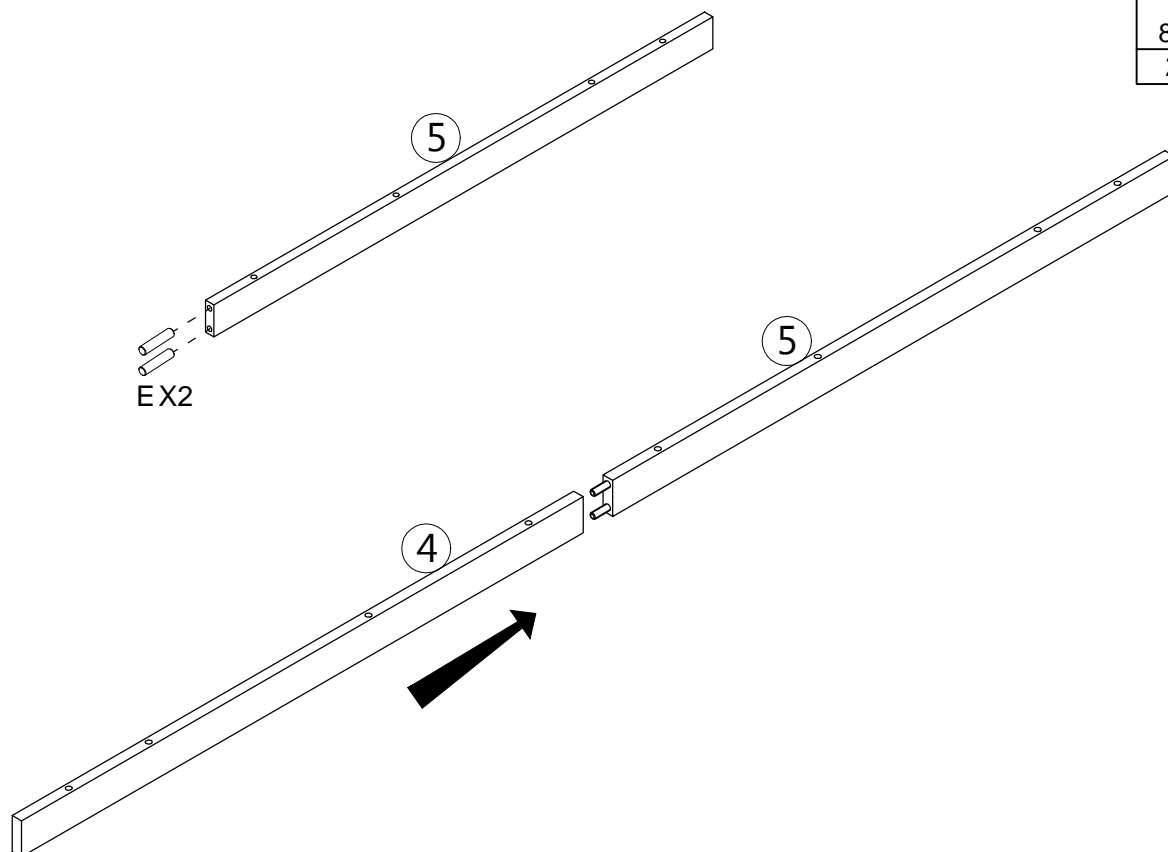
5

C

ST5X40MM
4 PCS




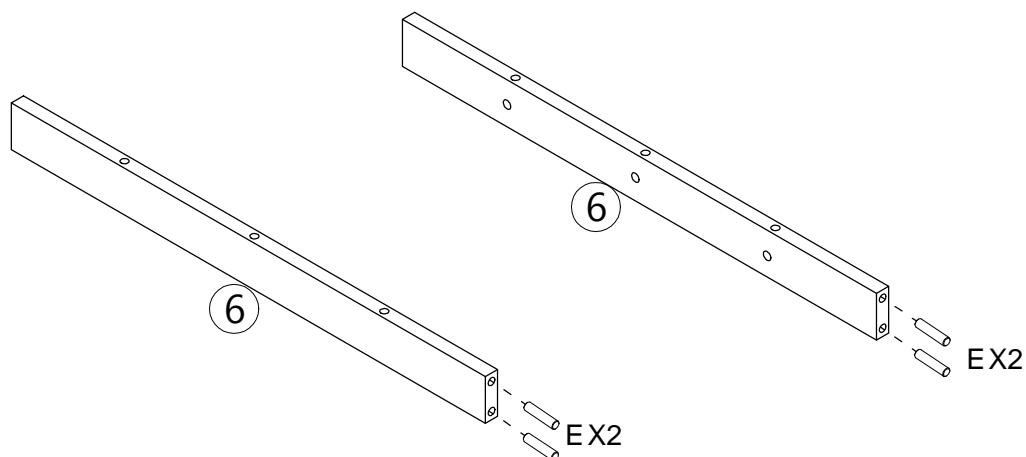
6

G

8X35MM
2 PCS




7


G

8X35MM
4 PCS

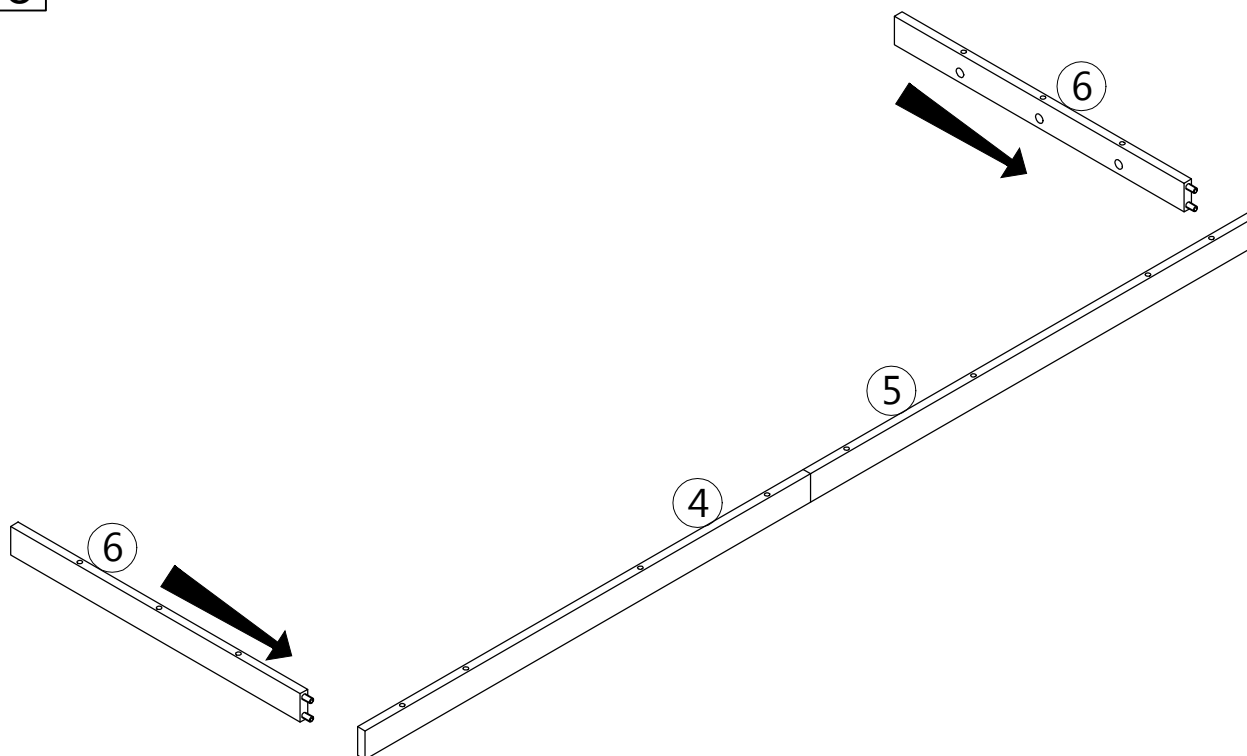


8




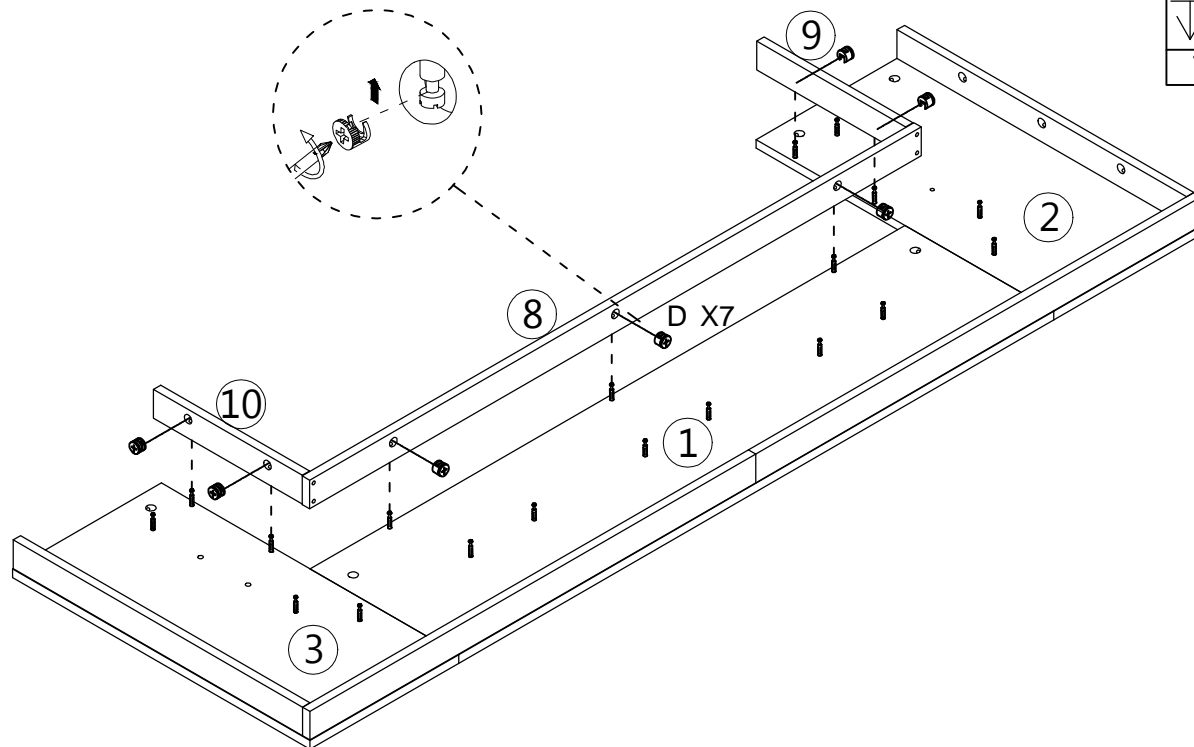
9

D

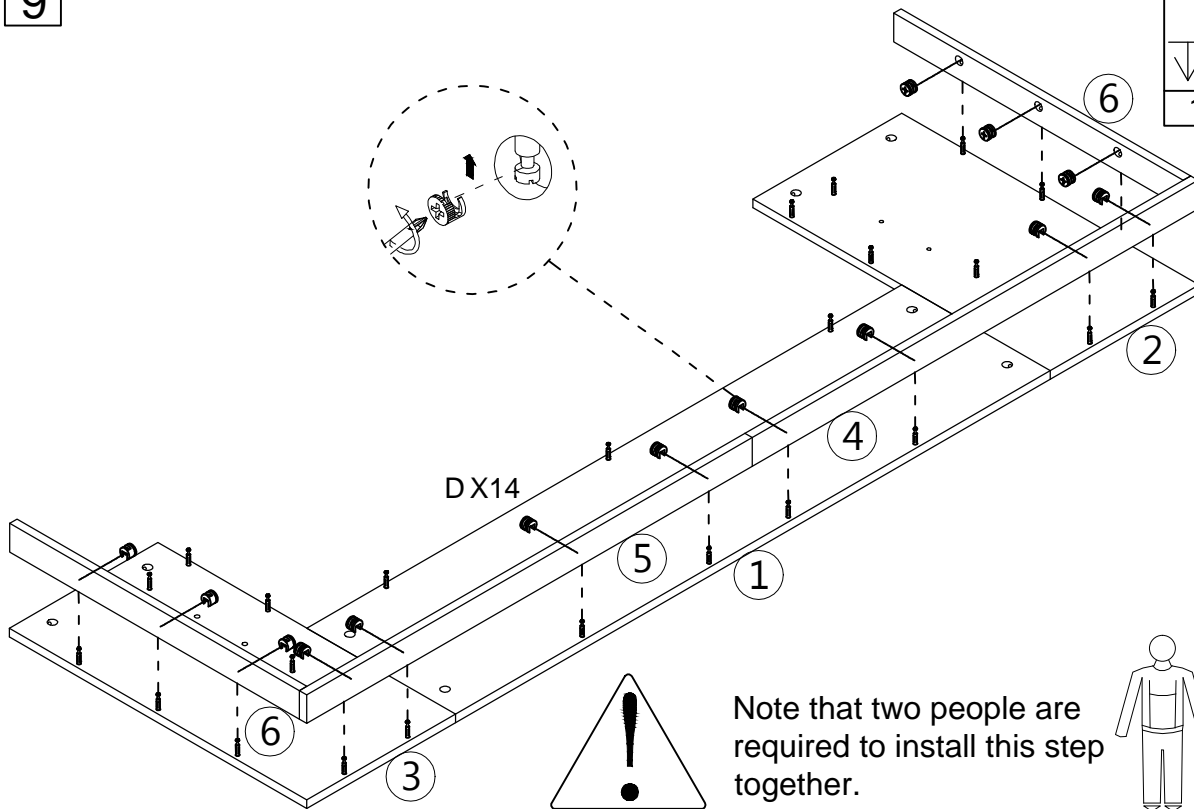9.5
14 PCS






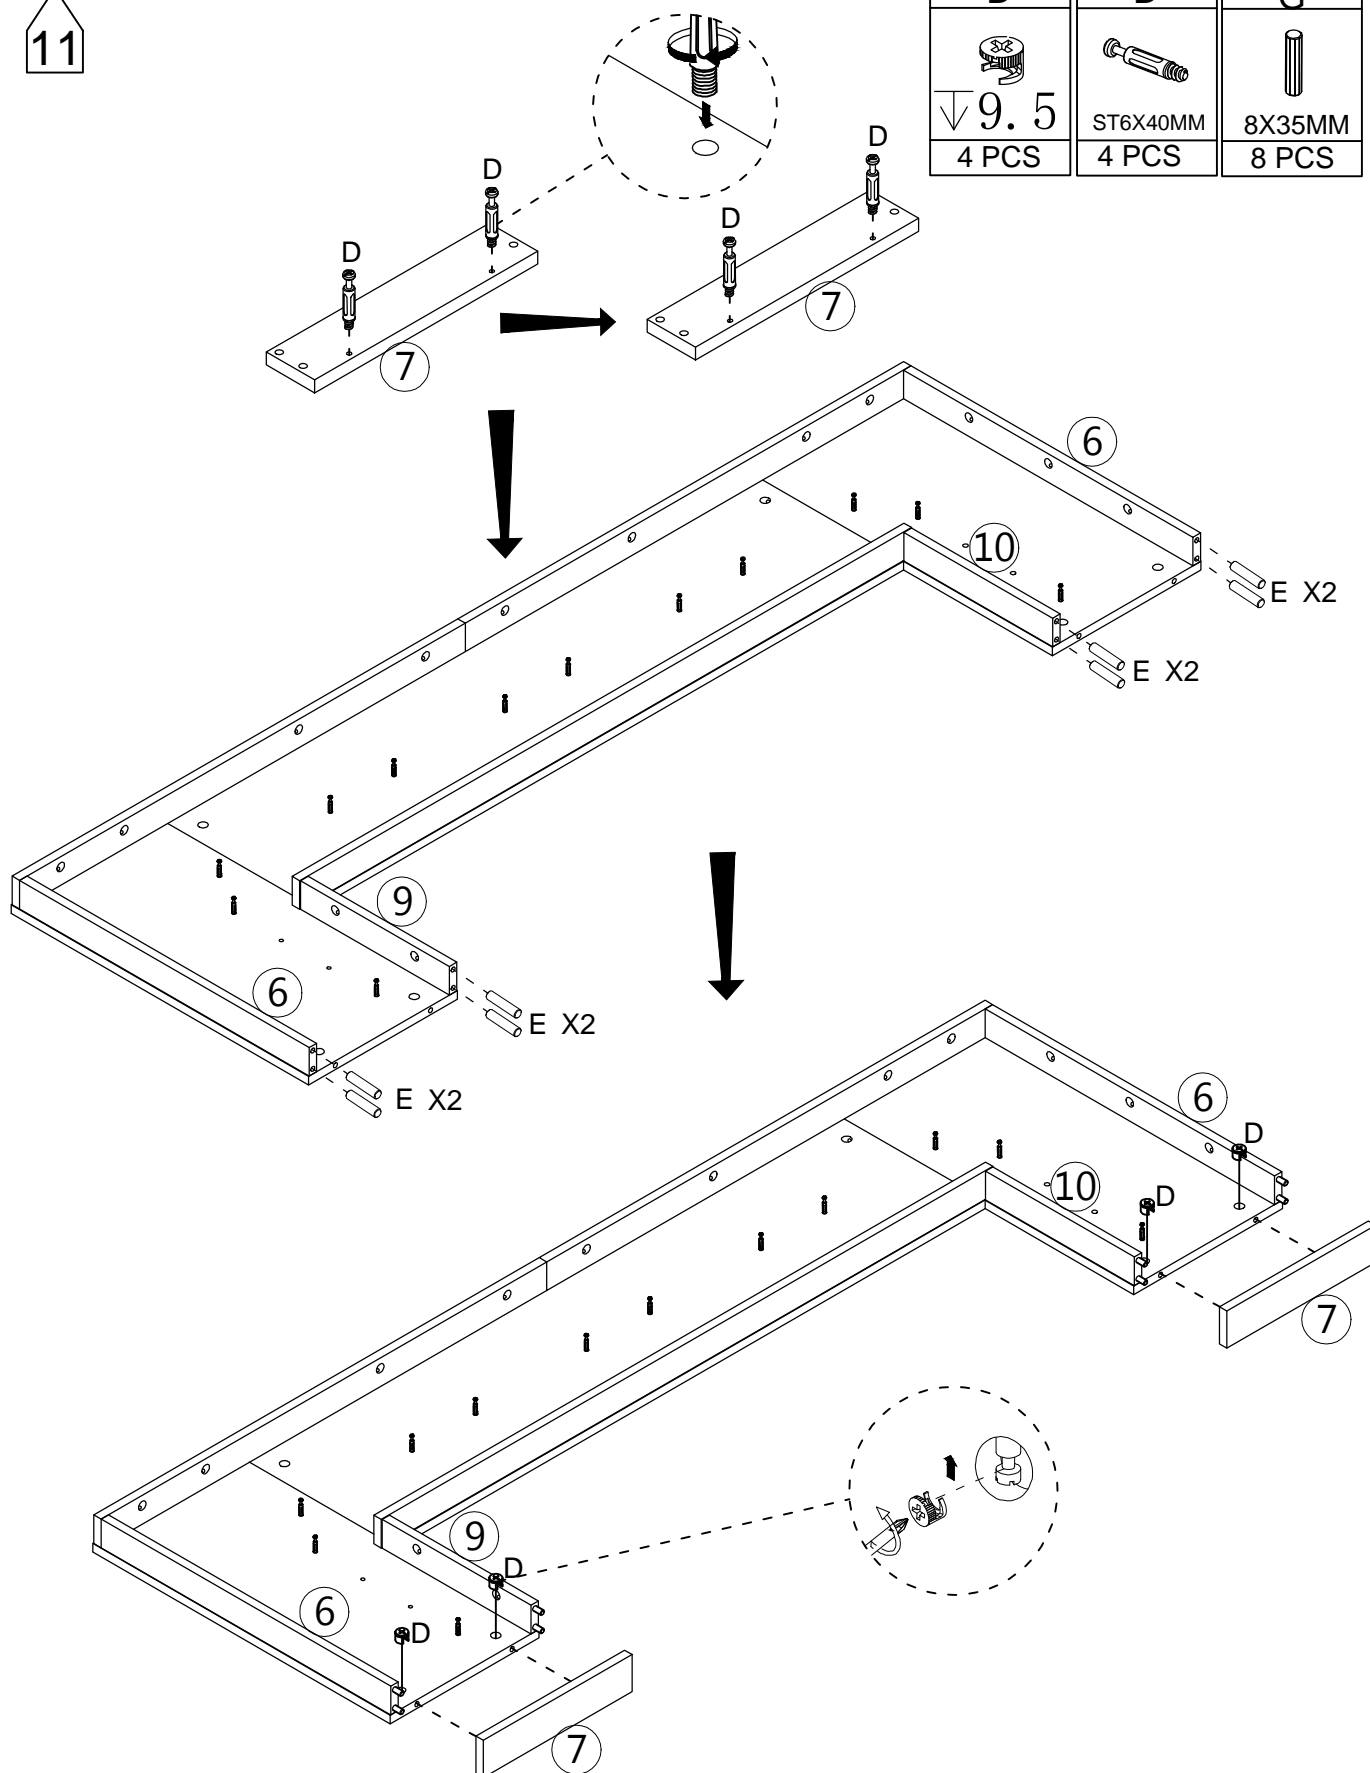
10

D

9.5
7 PCS





11

D	D	G
		
9.5	ST6X40MM	8X35MM
4 PCS	4 PCS	8 PCS





12

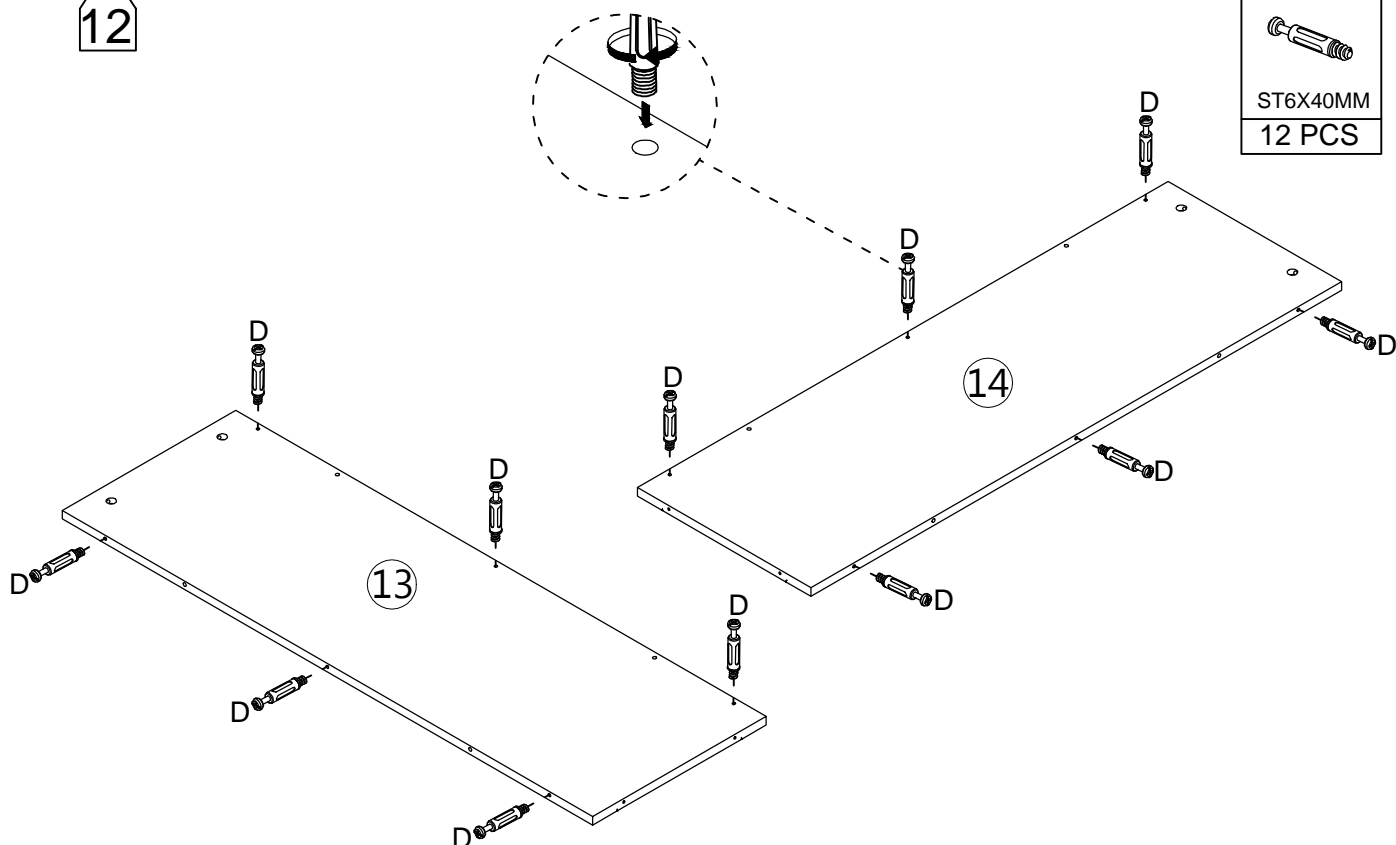



D

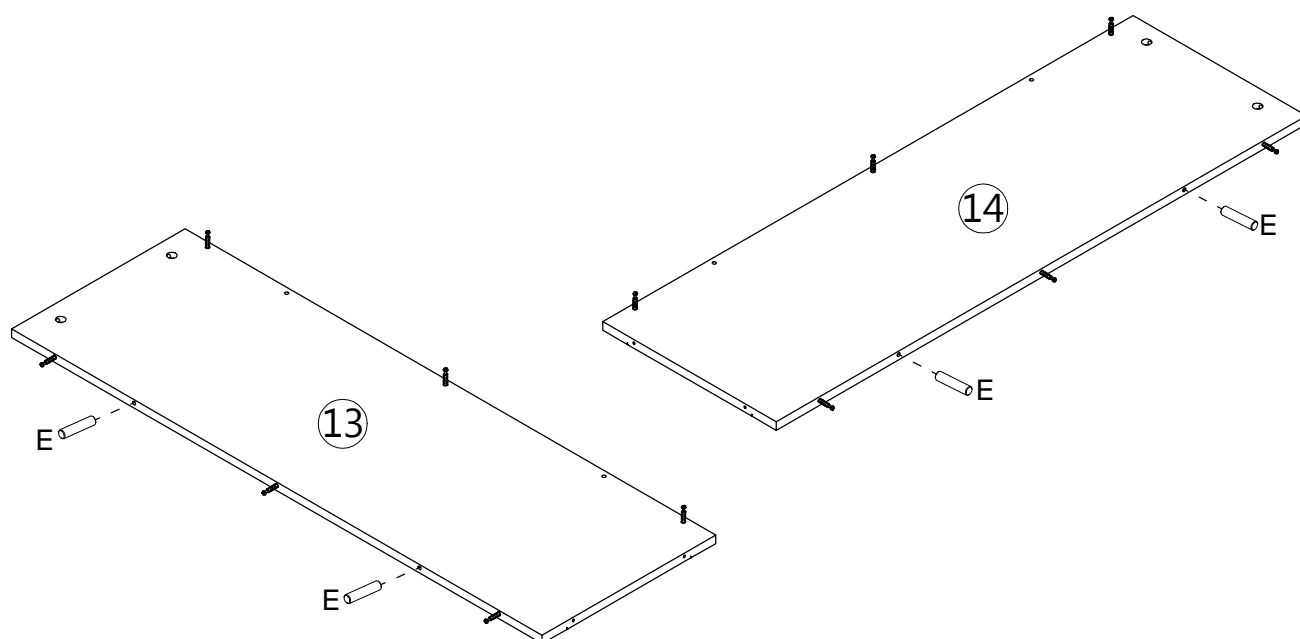ST6X40MM
12 PCS


13




E

6X35MM
4 PCS


14

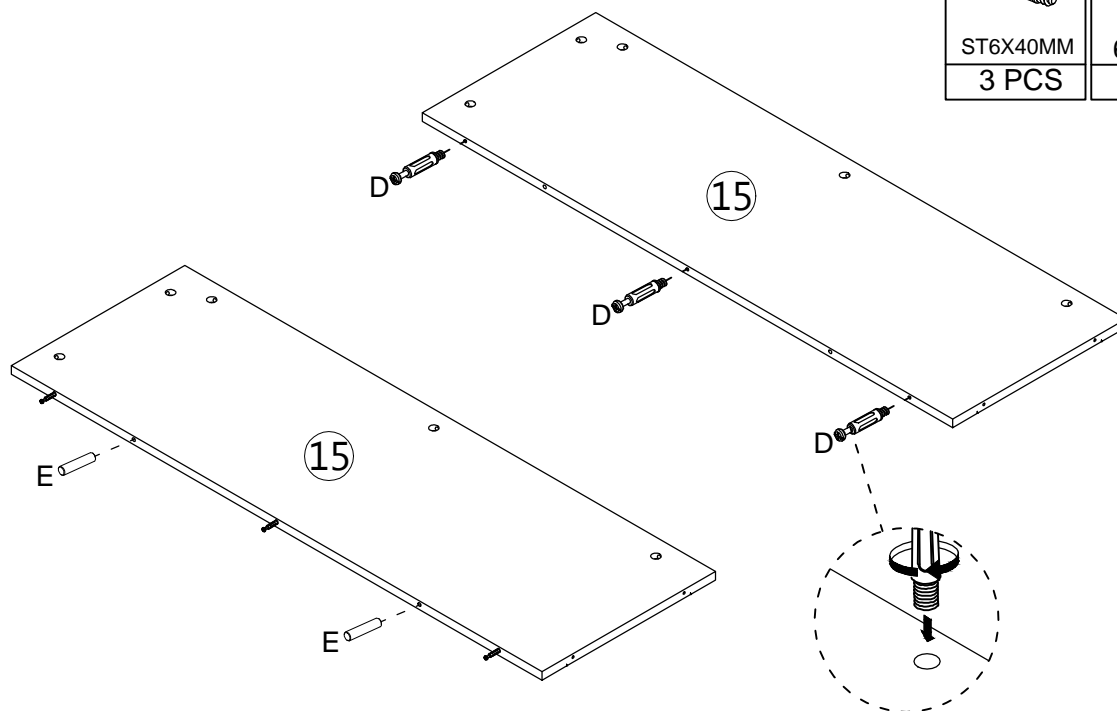D	E
	
ST6X40MM	6X35MM
3 PCS	2 PCS




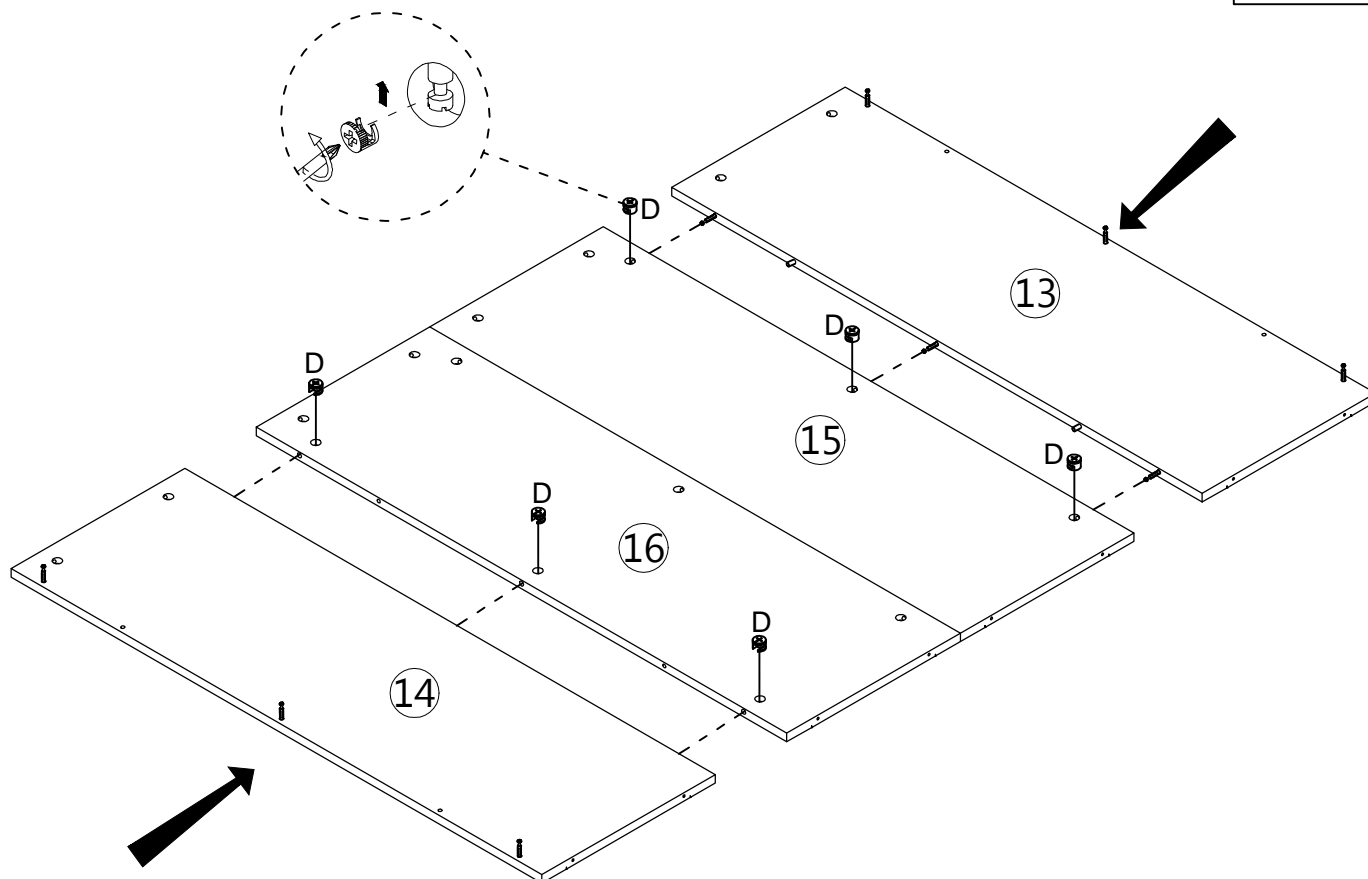
15

D

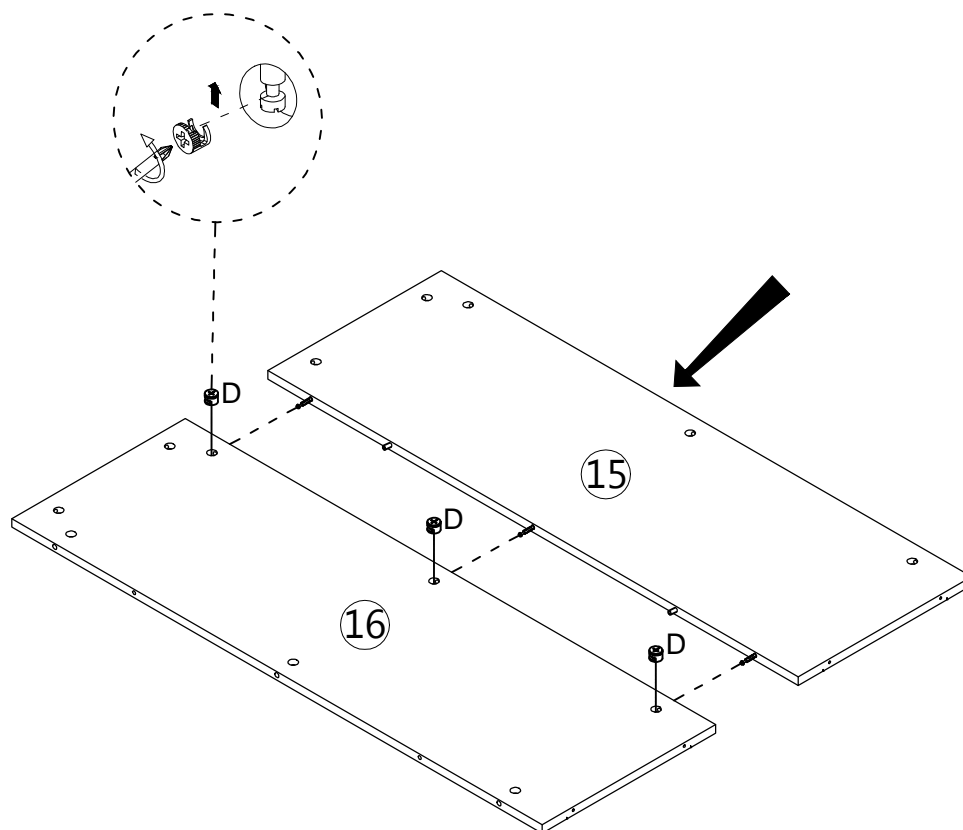↓9.5
3 PCS





16

D

↓ 9.5
6 PCS

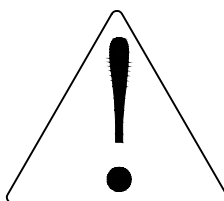


17




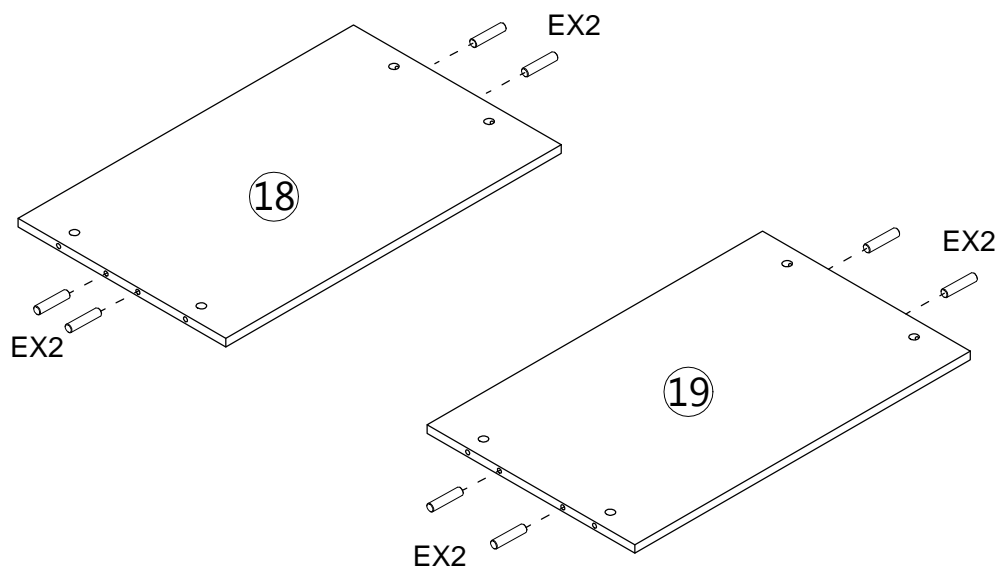
D

ST6X40MM
4 PCS

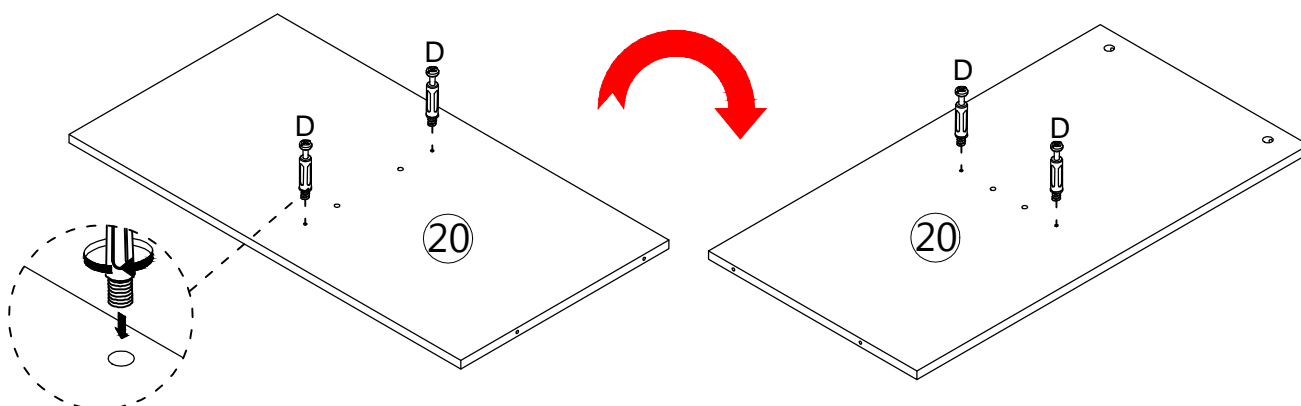When installing the No. 20 board, it should be noted that the reverse side also needs to install D screws at the same time.




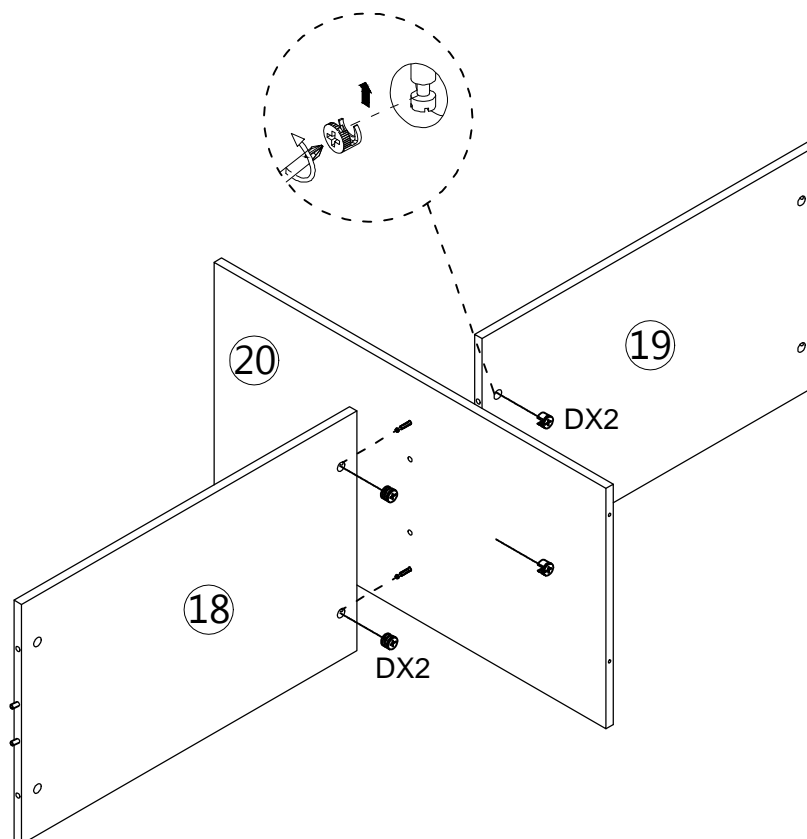
18

G

8X35MM
8 PCS





19

D

9.5
4 PCS

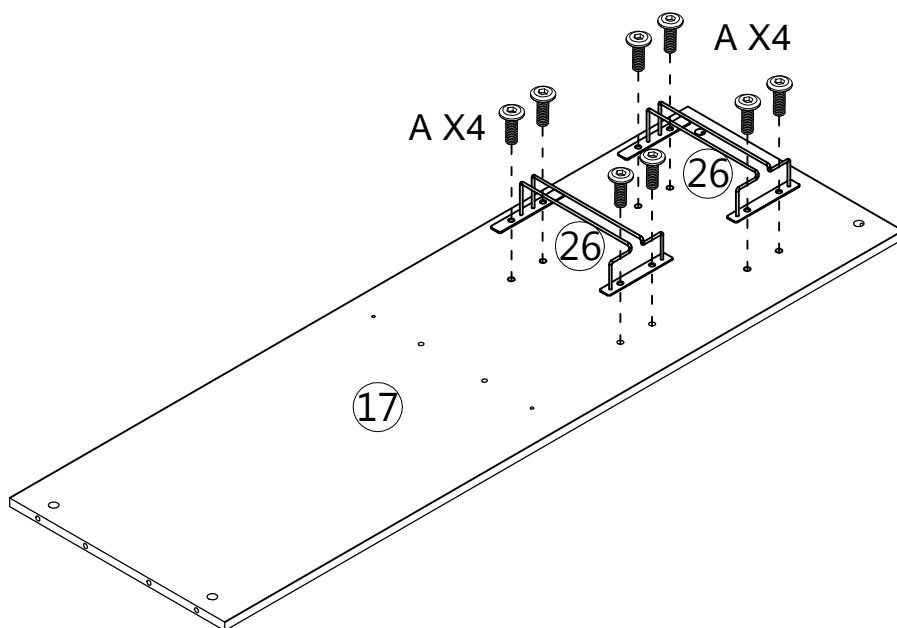



20




A

M6X10MM
8 PCS

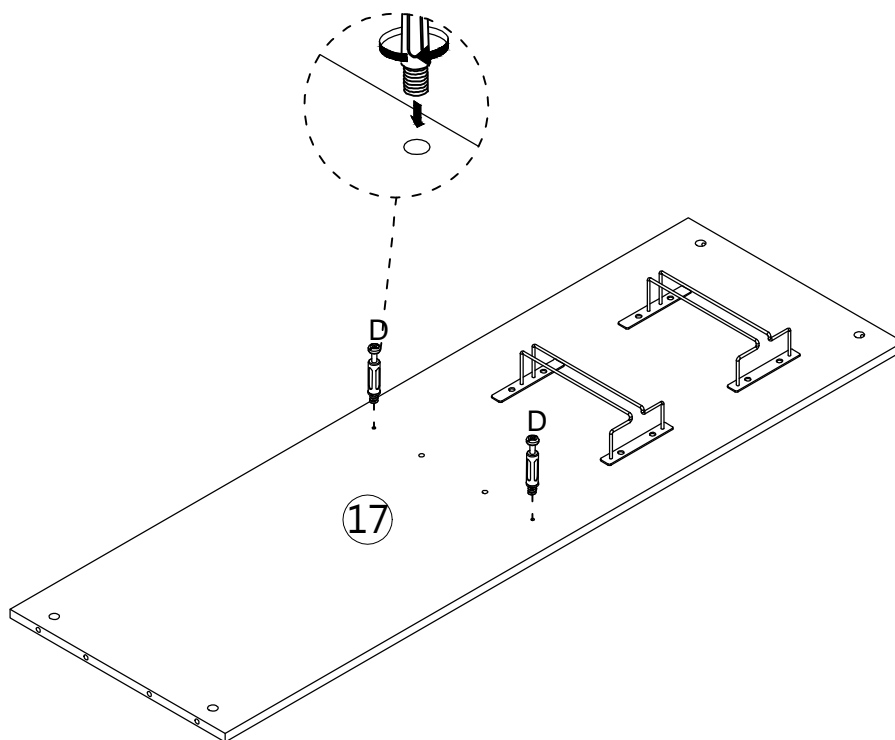
21




D

ST6X40MM
2 PCS


22

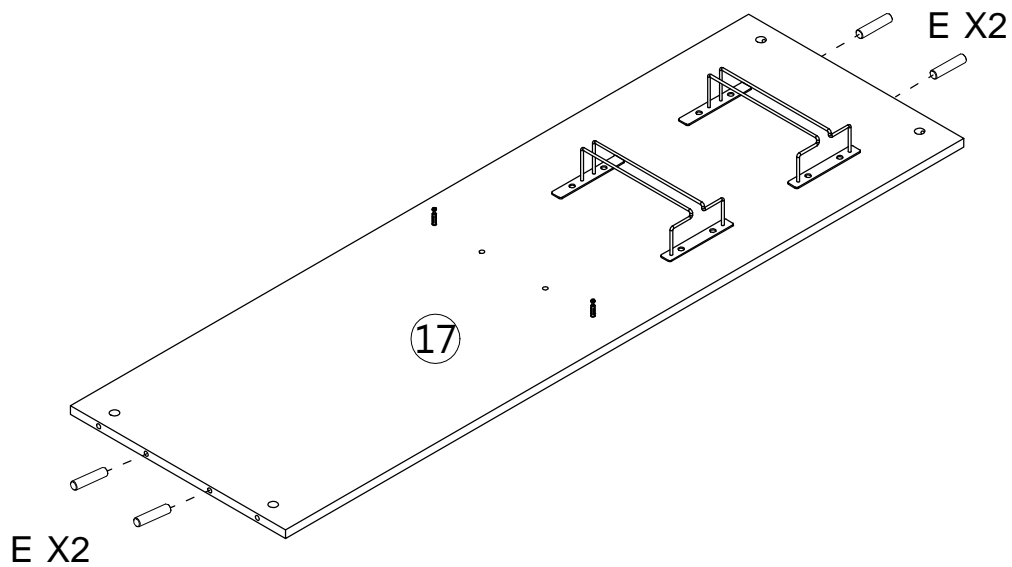G

8X35MM
4 PCS





23

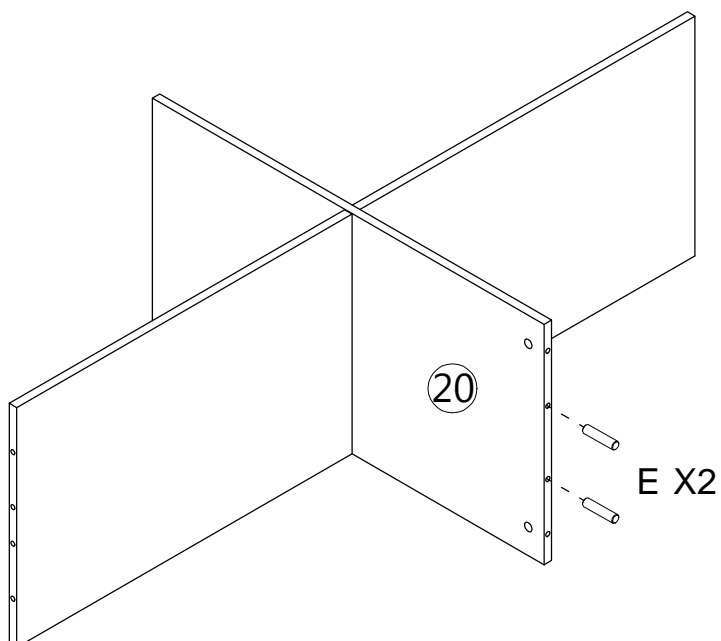G

8X35MM
2 PCS

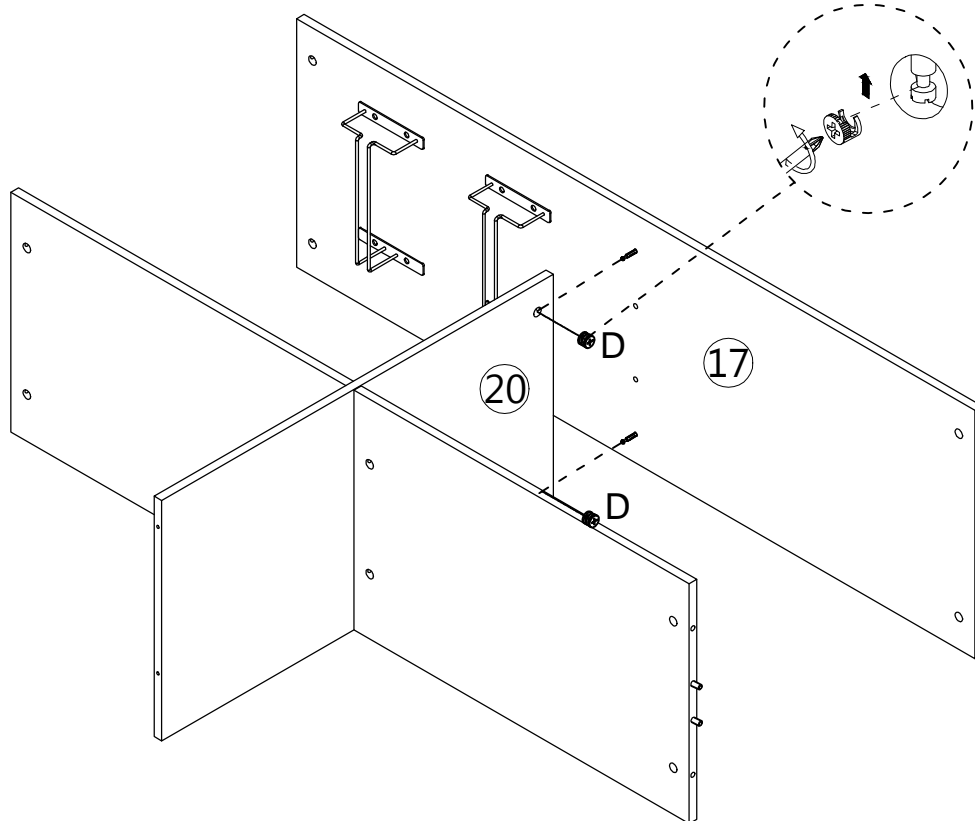



24




D

↓ 9.5
2 PCS

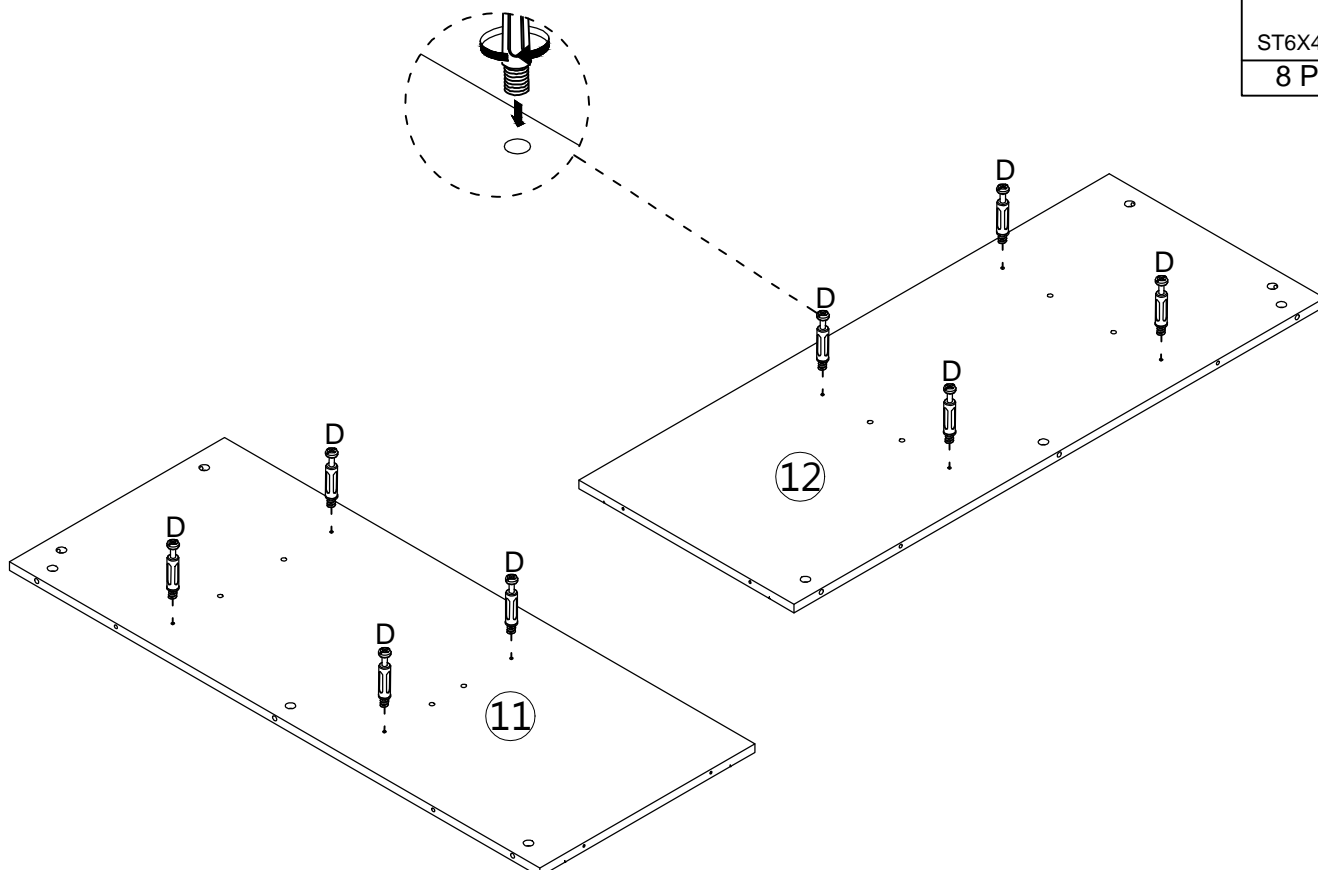
25




D

ST6X40MM
8 PCS


26

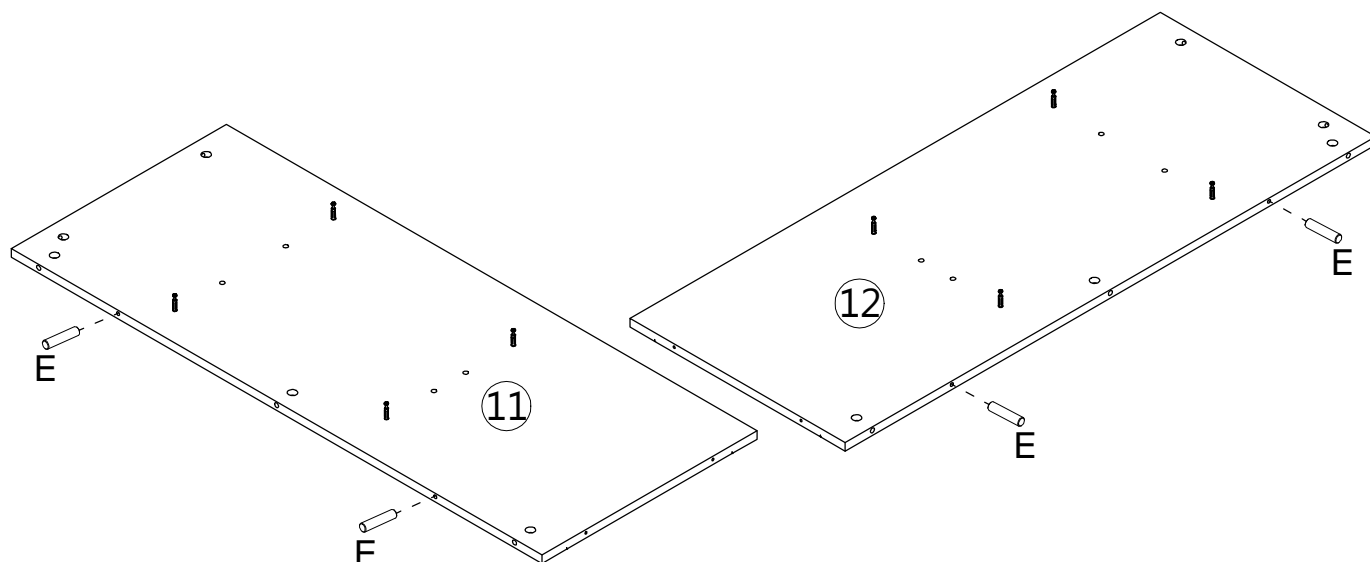E

6X35MM
4 PCS




27

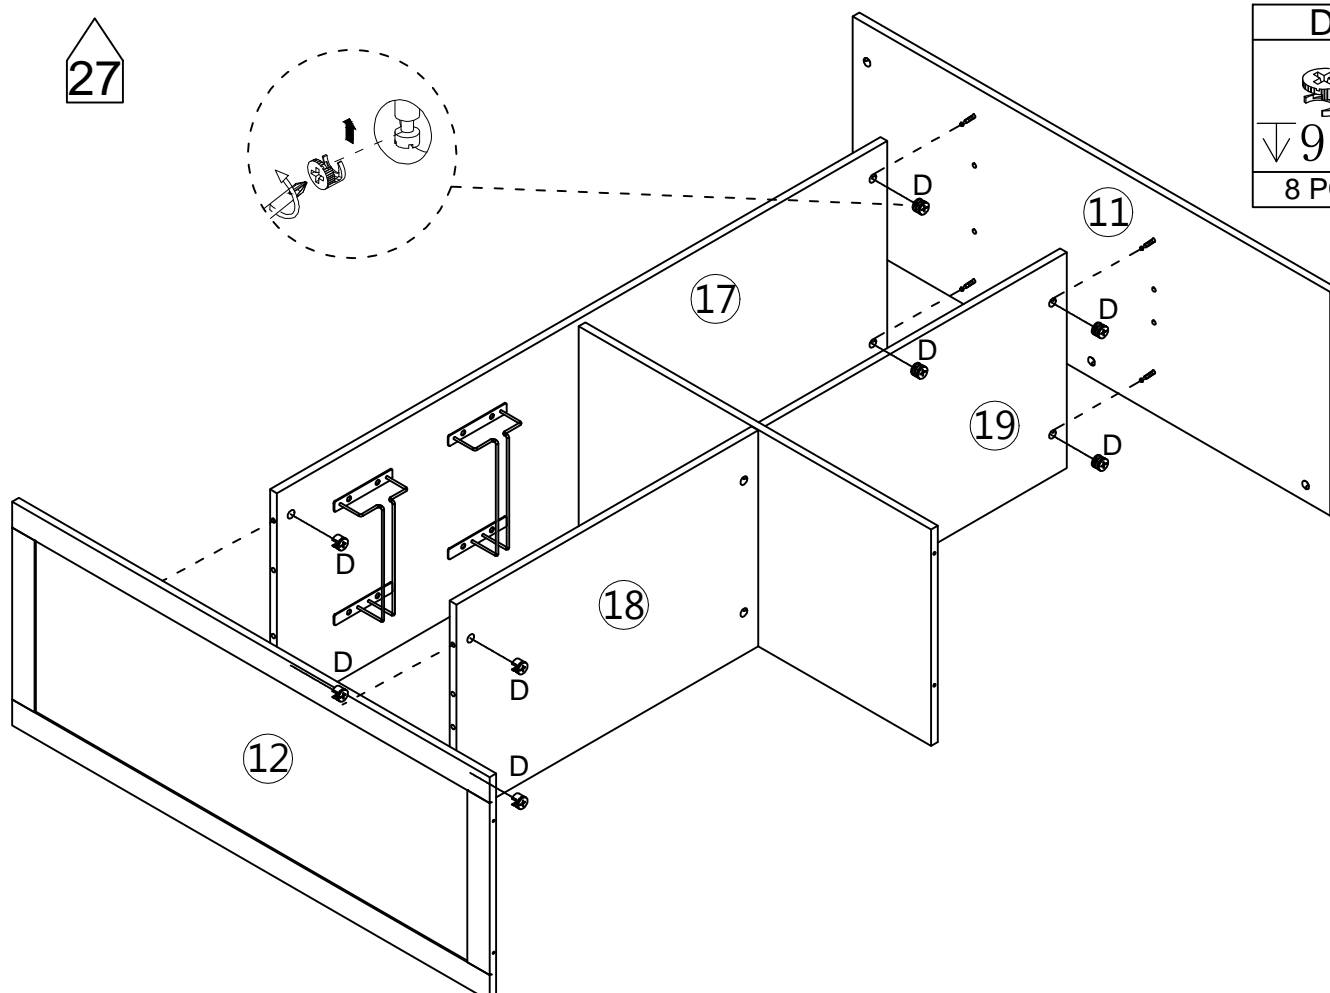
D

9.5
8 PCS

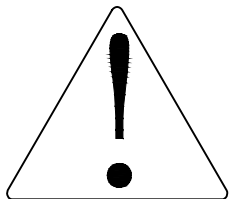


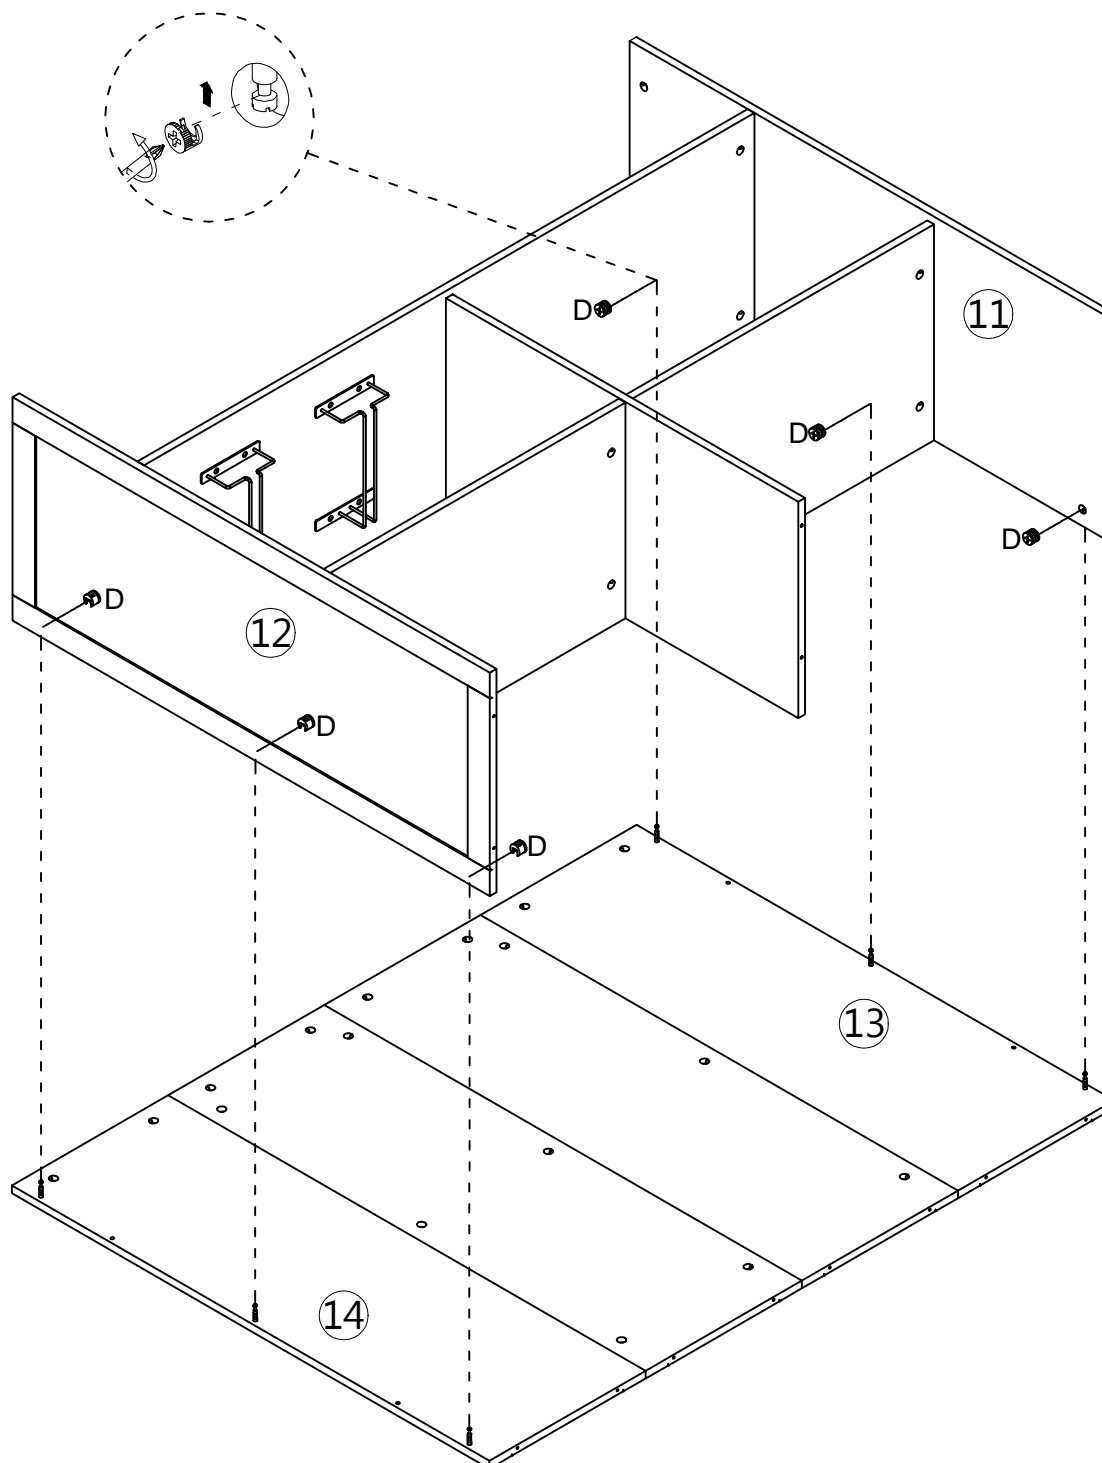
28

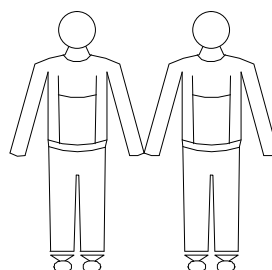


Note that two people are required to install this step together.




D

√ 9.5
6 PCS




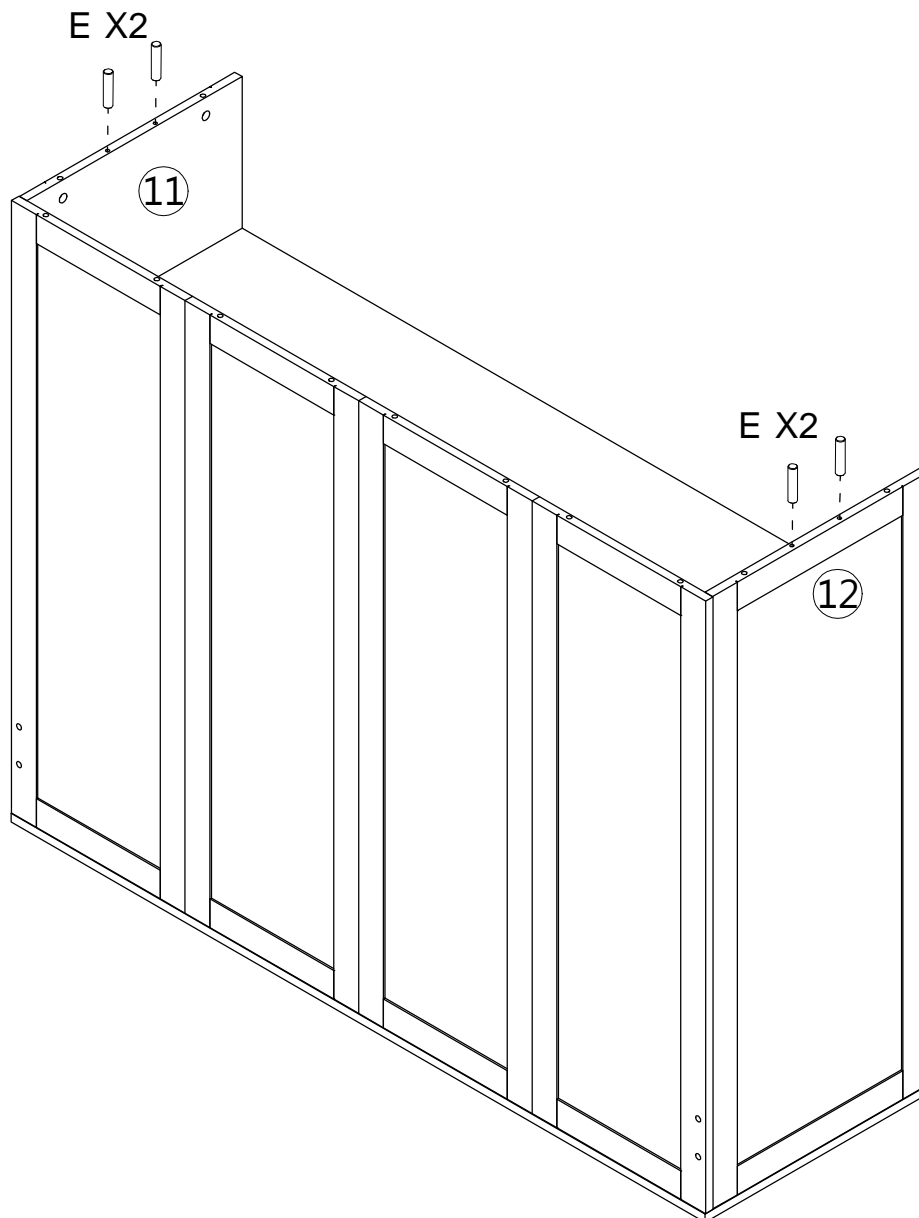
29

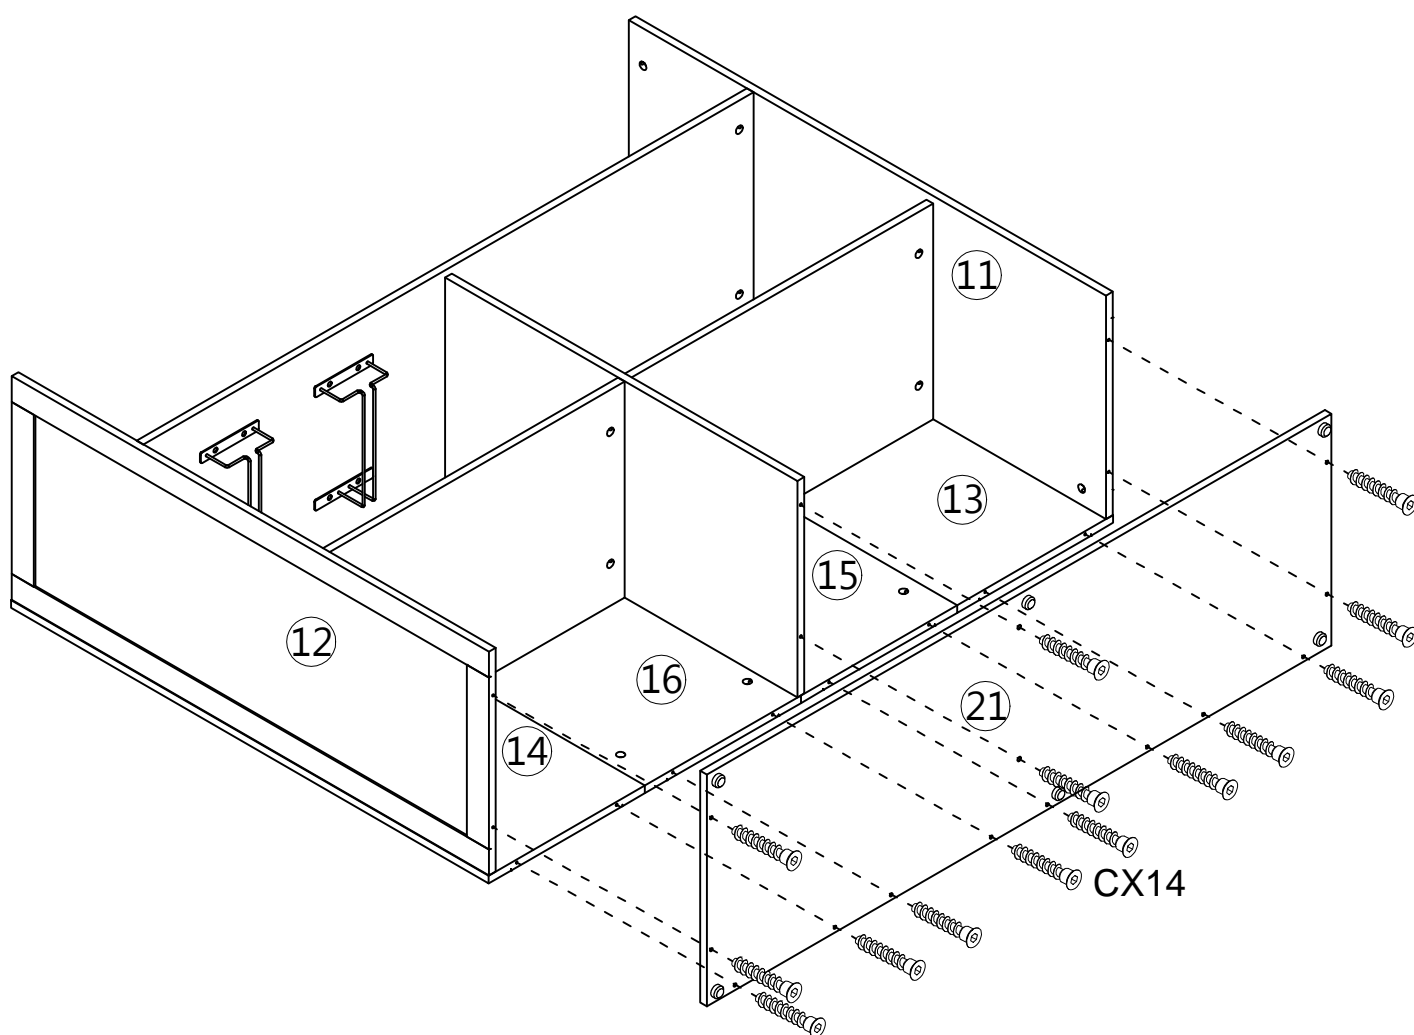C

ST5X40MM
14 PCS




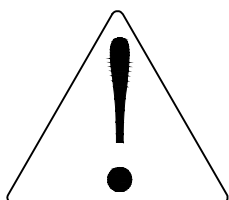
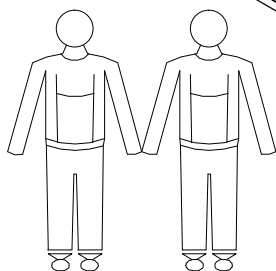
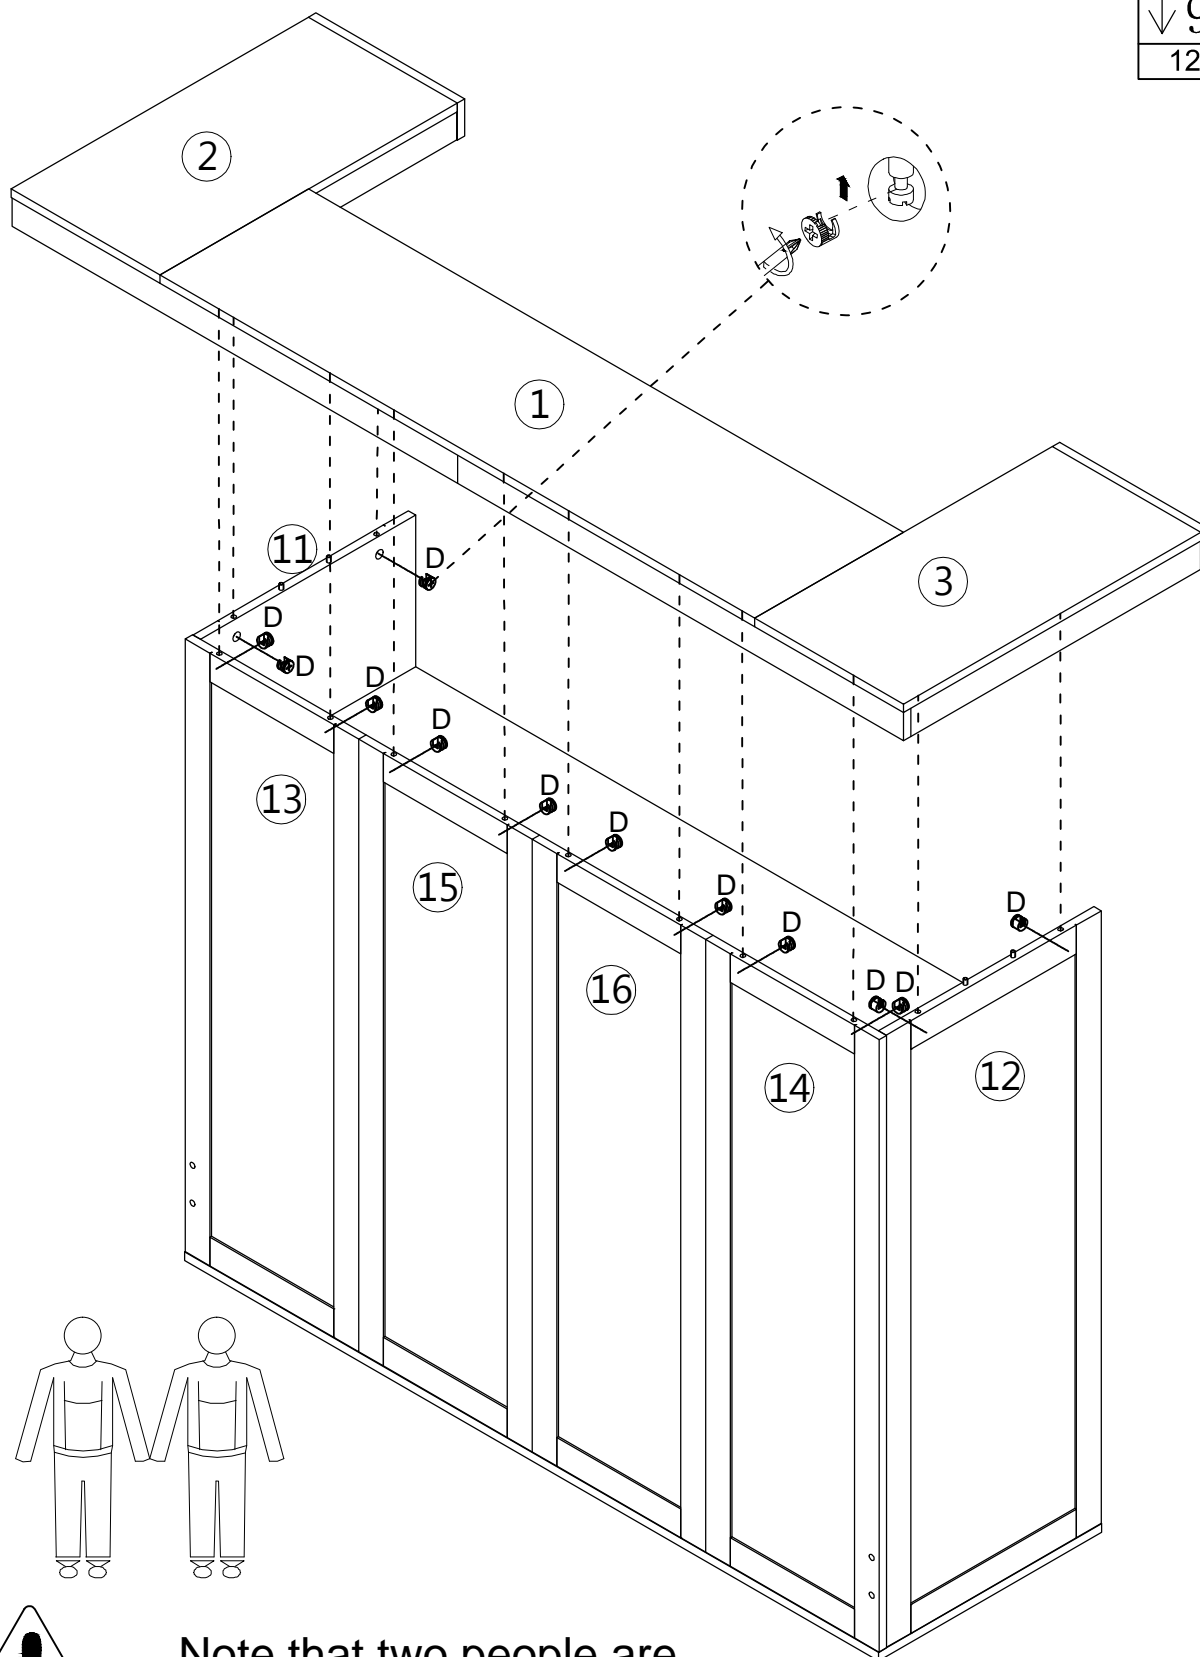
30

E

6X35MM
4 PCS






31



D

▽ 9.5
12 PCS




Note that two people are required to install this step together.


32



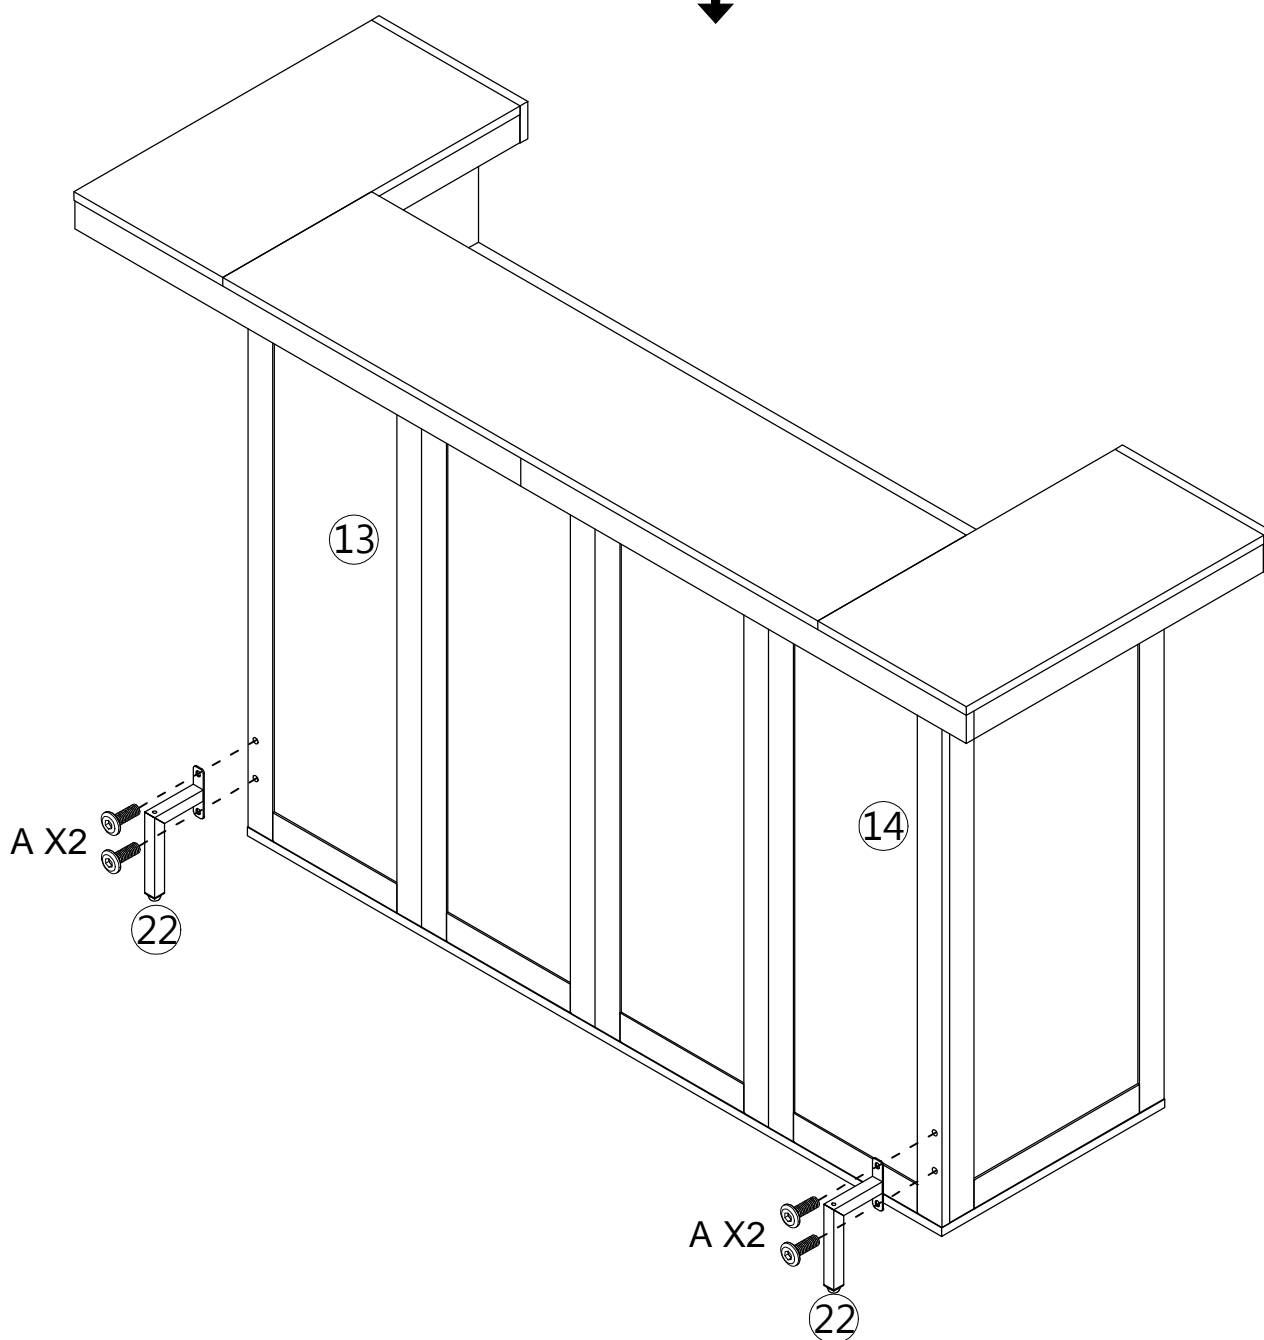

A	F
	
M6X10MM	M8
4 PCS	3 PCS

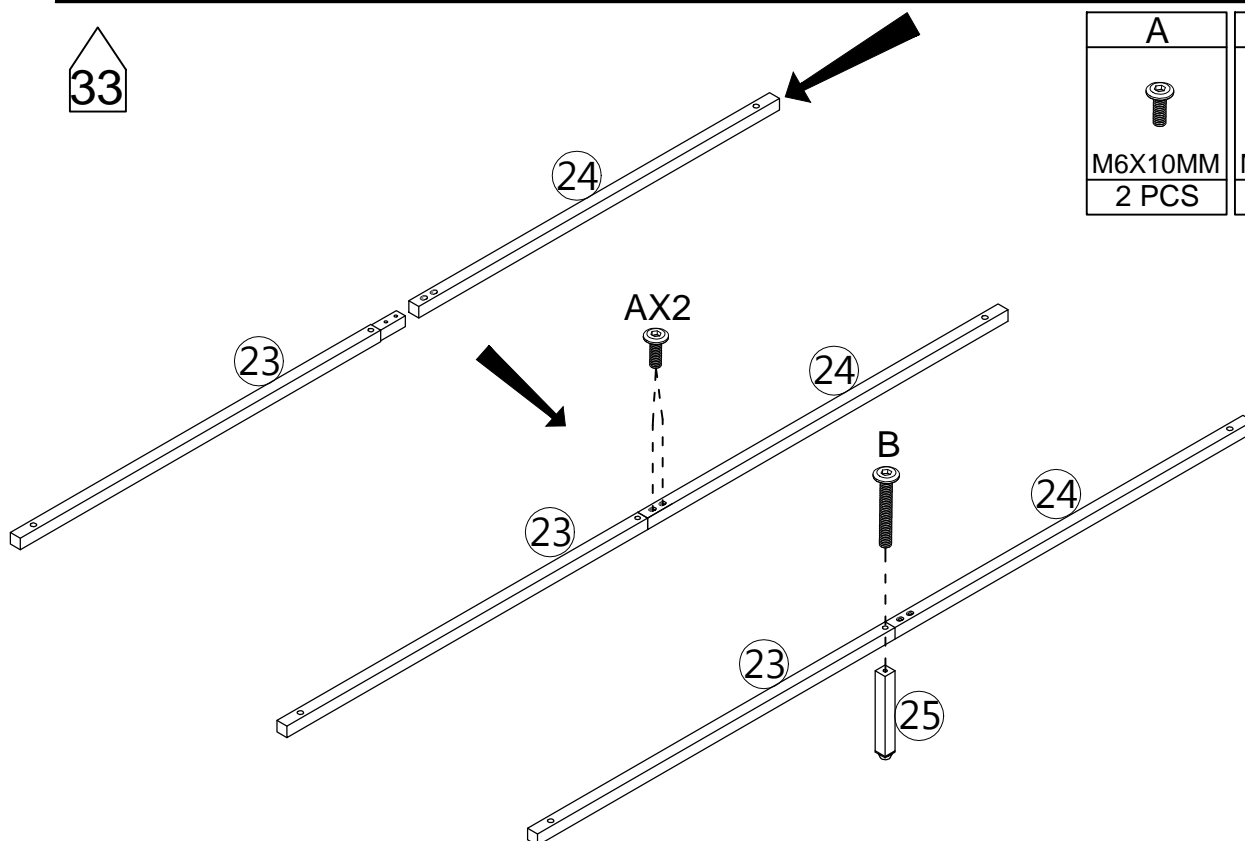



33



A	B
	
M6X10MM 2 PCS	M6X40MM 1 PC

34

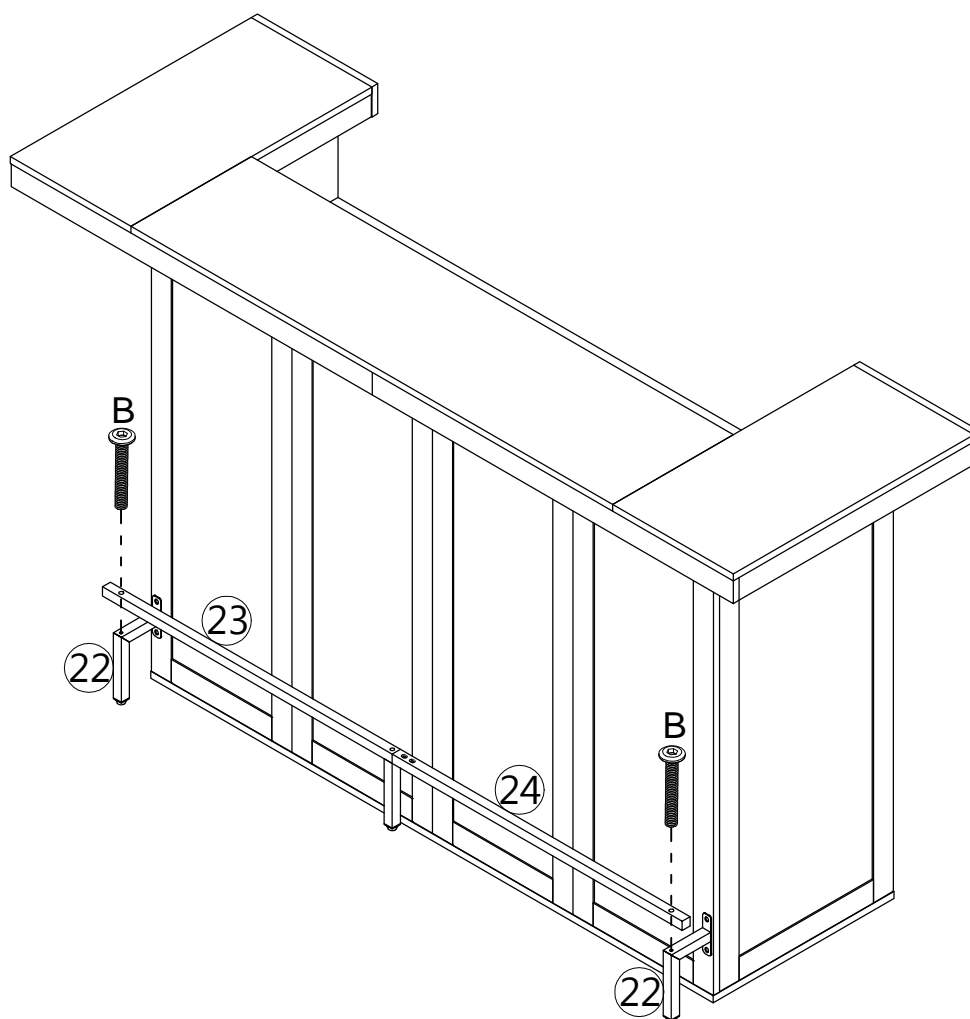


B

M6X40MM 2 PCS



DESIGNED FOR LIFE

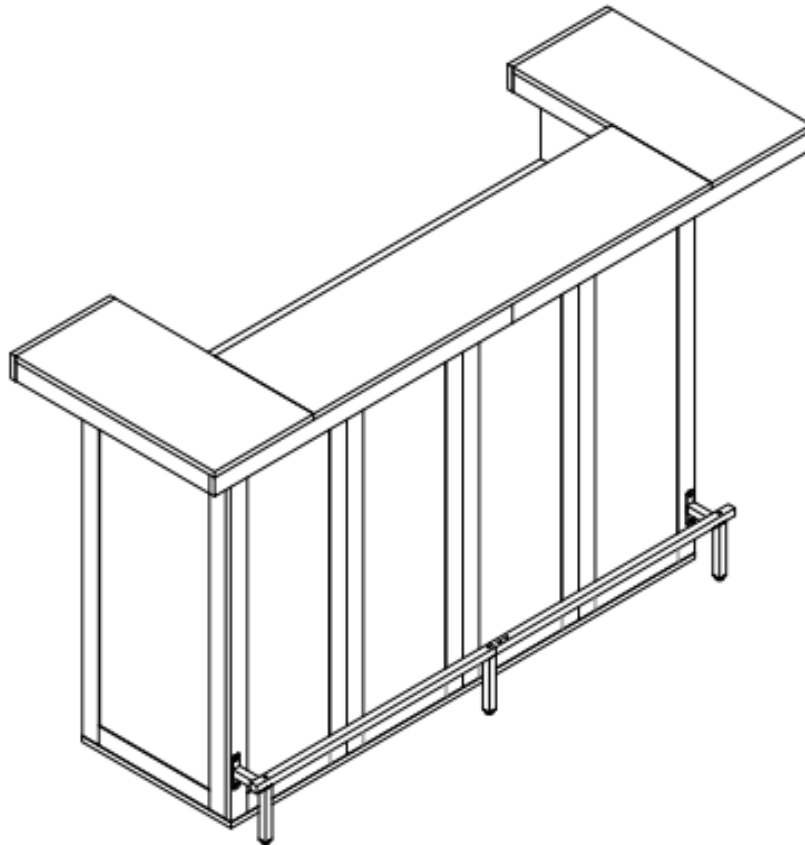Thank you for your support!



Contact our customer service team



support@tribesigns.com
www.tribesigns.com



1-424-220-6888

Contact us anytime except
12:00 AM to 8:00 AM EST.

Follow Tribesigns



Facebook



Instagram




Pinterest



Twitter



YouTube

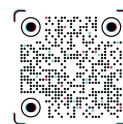

TikTok



WhatsApp