



Product dimensions

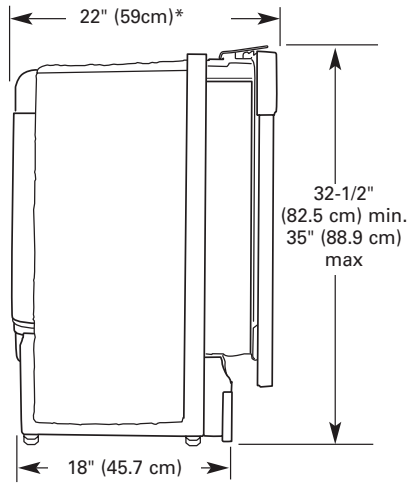


* to front of door frame

SIDE VIEW

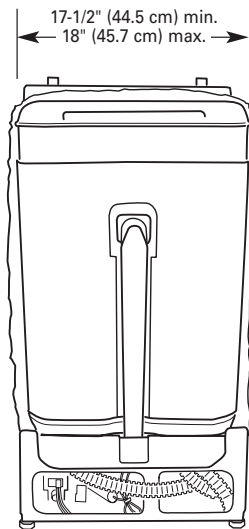

REAR VIEW

Cutout dimensions

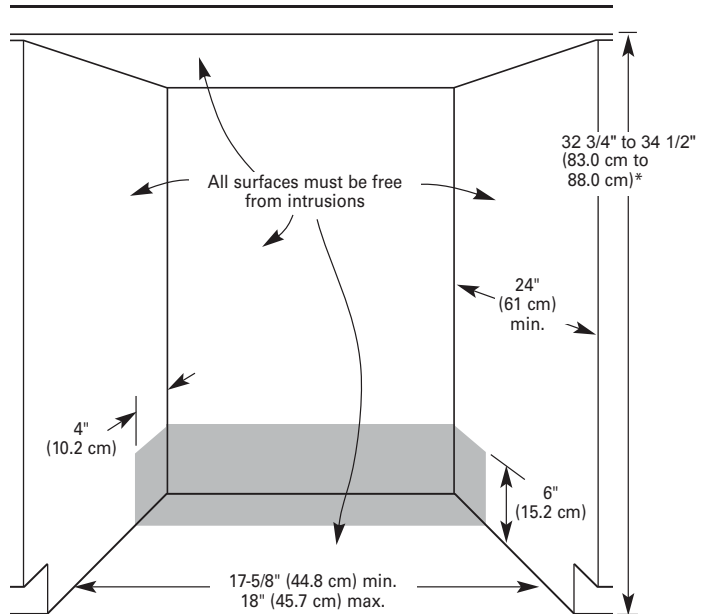


*Underside of countertop to floor.

Cut holes in shaded area of cabinet walls or floor for plumbing and electrical service.

Note: ADA installation, 32-1/2" (82.5 cm) beneath 34" (86.4 cm) high countertops may be accomplished by adjusting the toekick and leveling legs.

● Custom panel dimensions and installation

- 1 The custom panel should be constructed according to the next Figure.

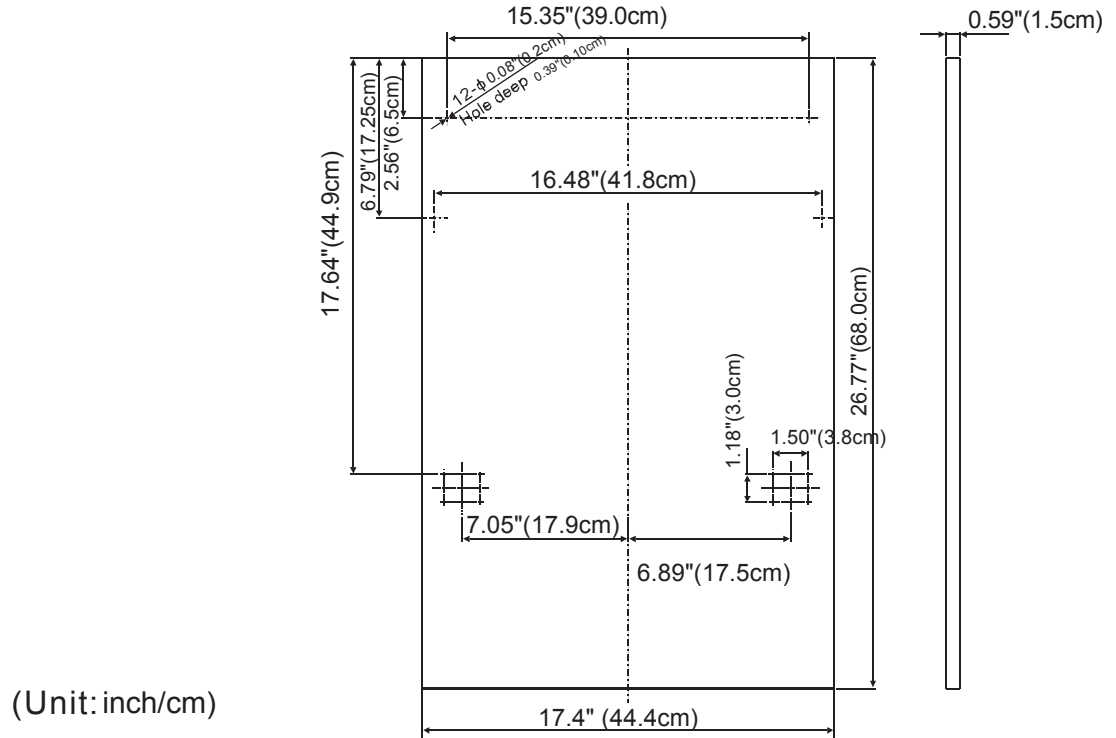

Install the hook on the custom wooden panel and put the hook into the slot of the outer door of dishwasher. After positioning of the panel, fix the panel onto the outer door by screws and bolts.