



Assembly Instruction

Please check that you have all the parts listed before you start assembling, if you do find that something is missing, do not continue assembly, please contact us immediately.


NOTE: Please do not completely tighten all the hardware until the entire assembly is complete!

If you have any questions, please feel free to contact us.


Email: lowes.team@qualfurn.net

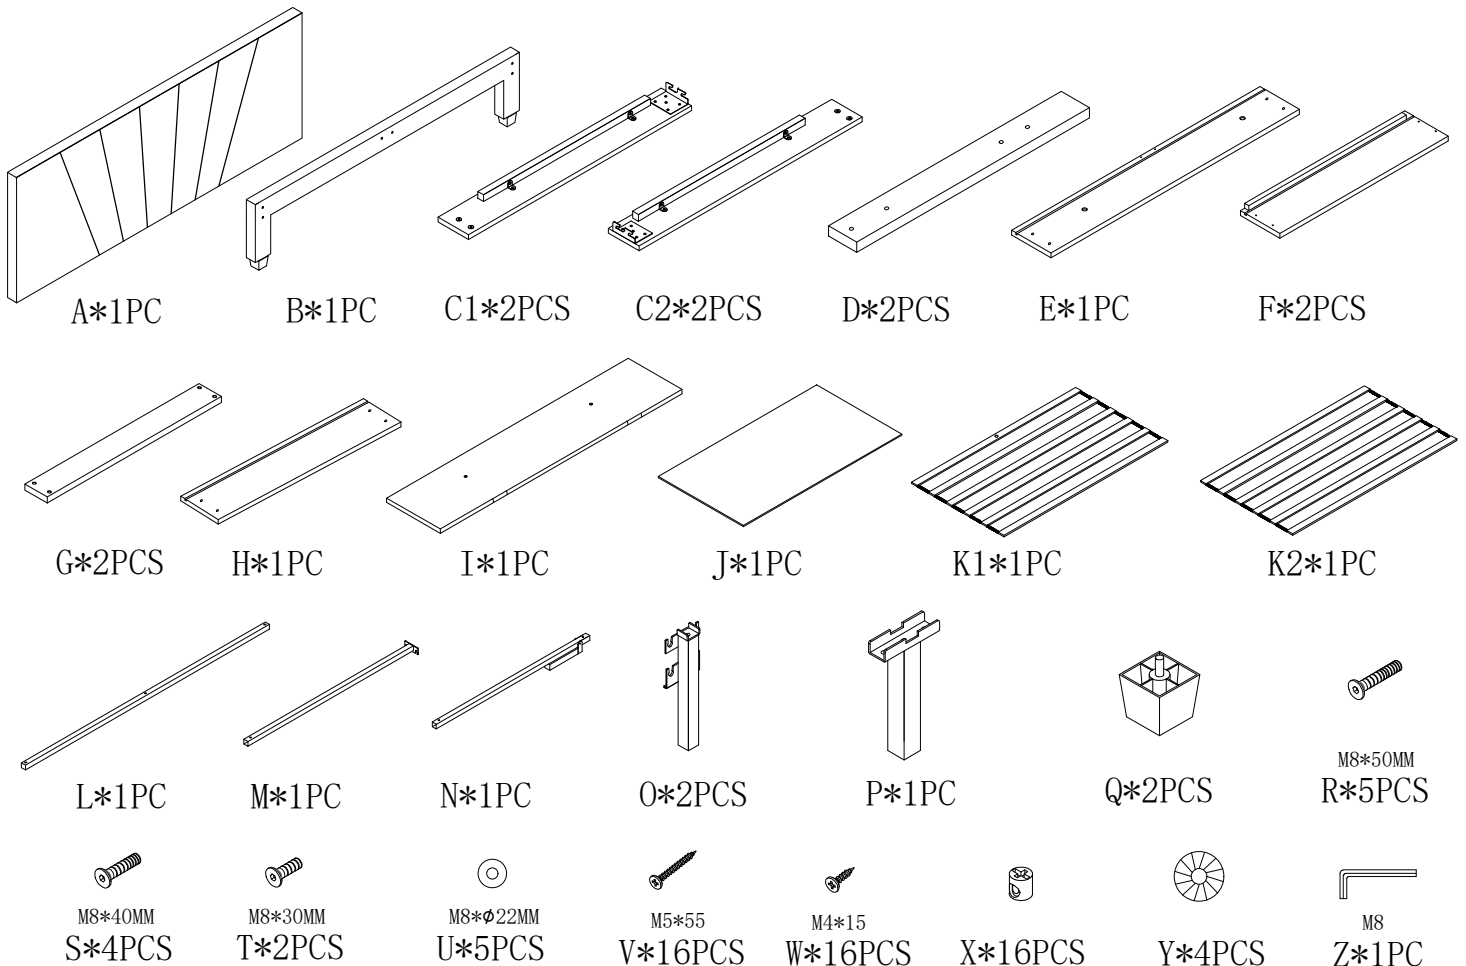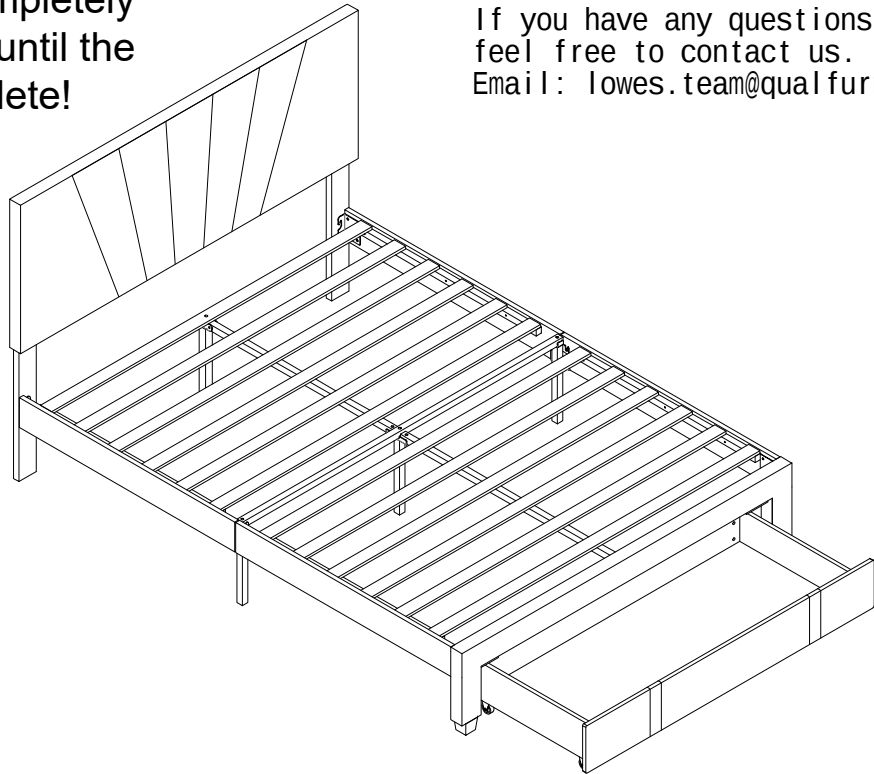

step1

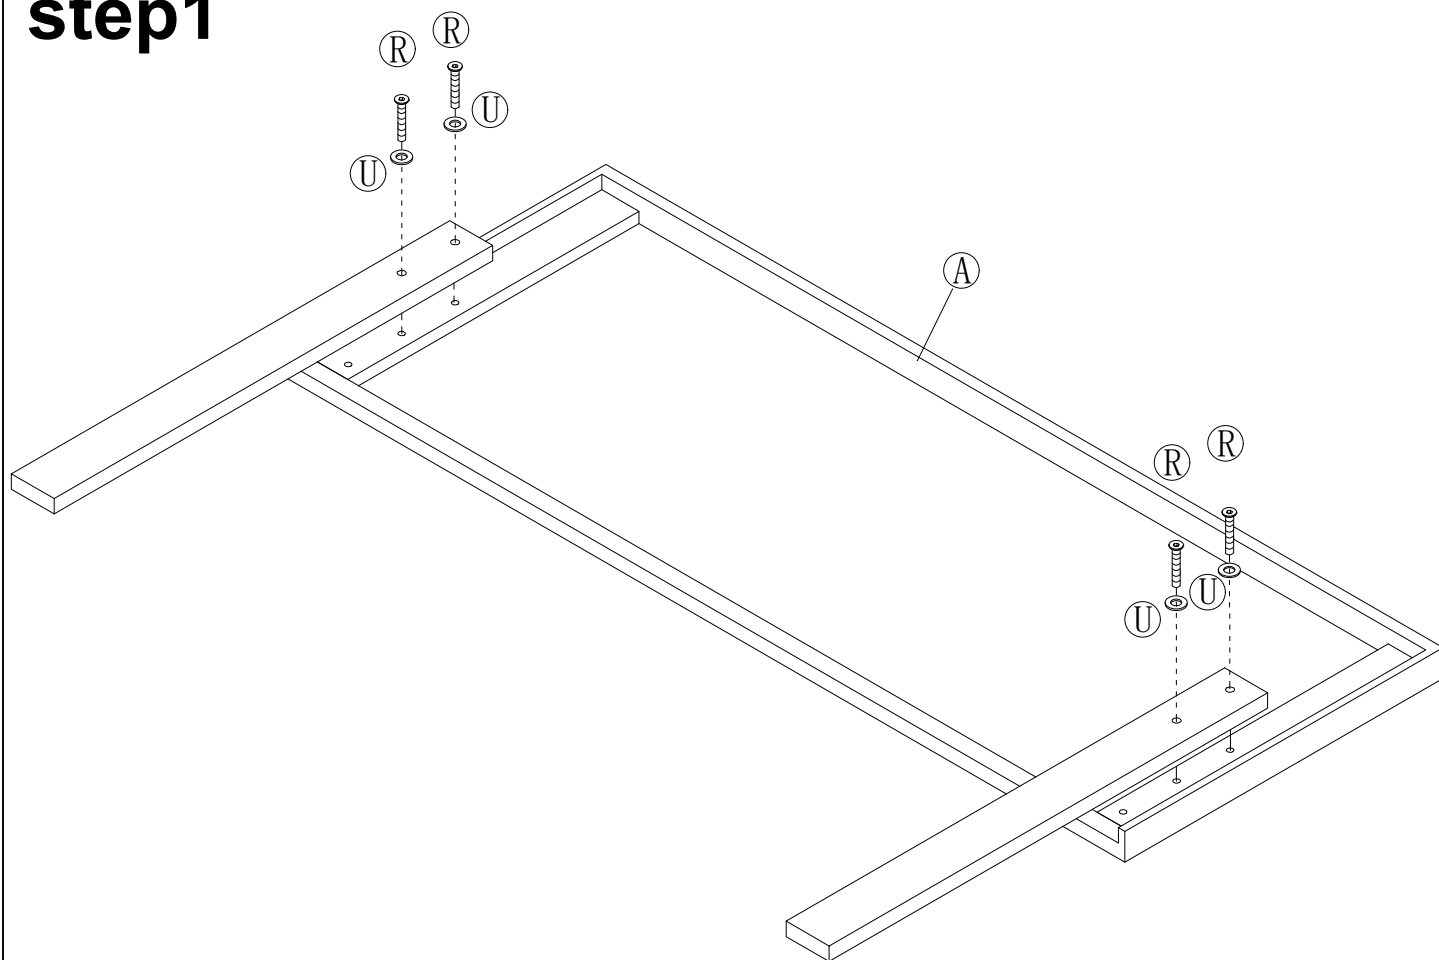


step2

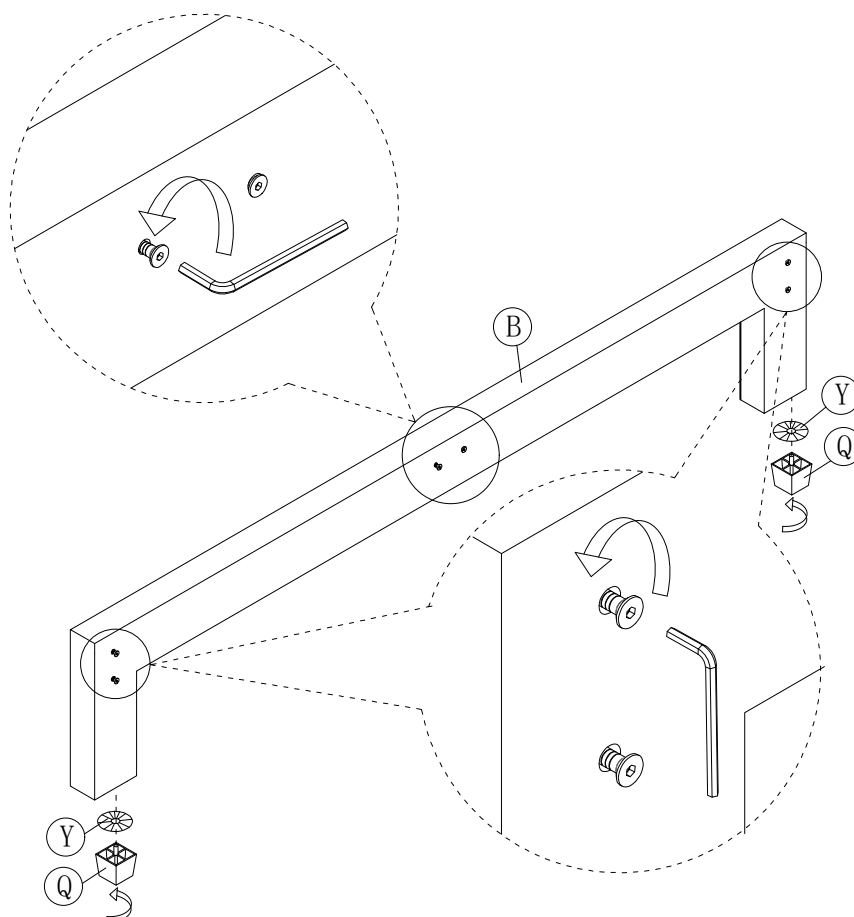


Loosen the pre locked screws and lock it.

step3

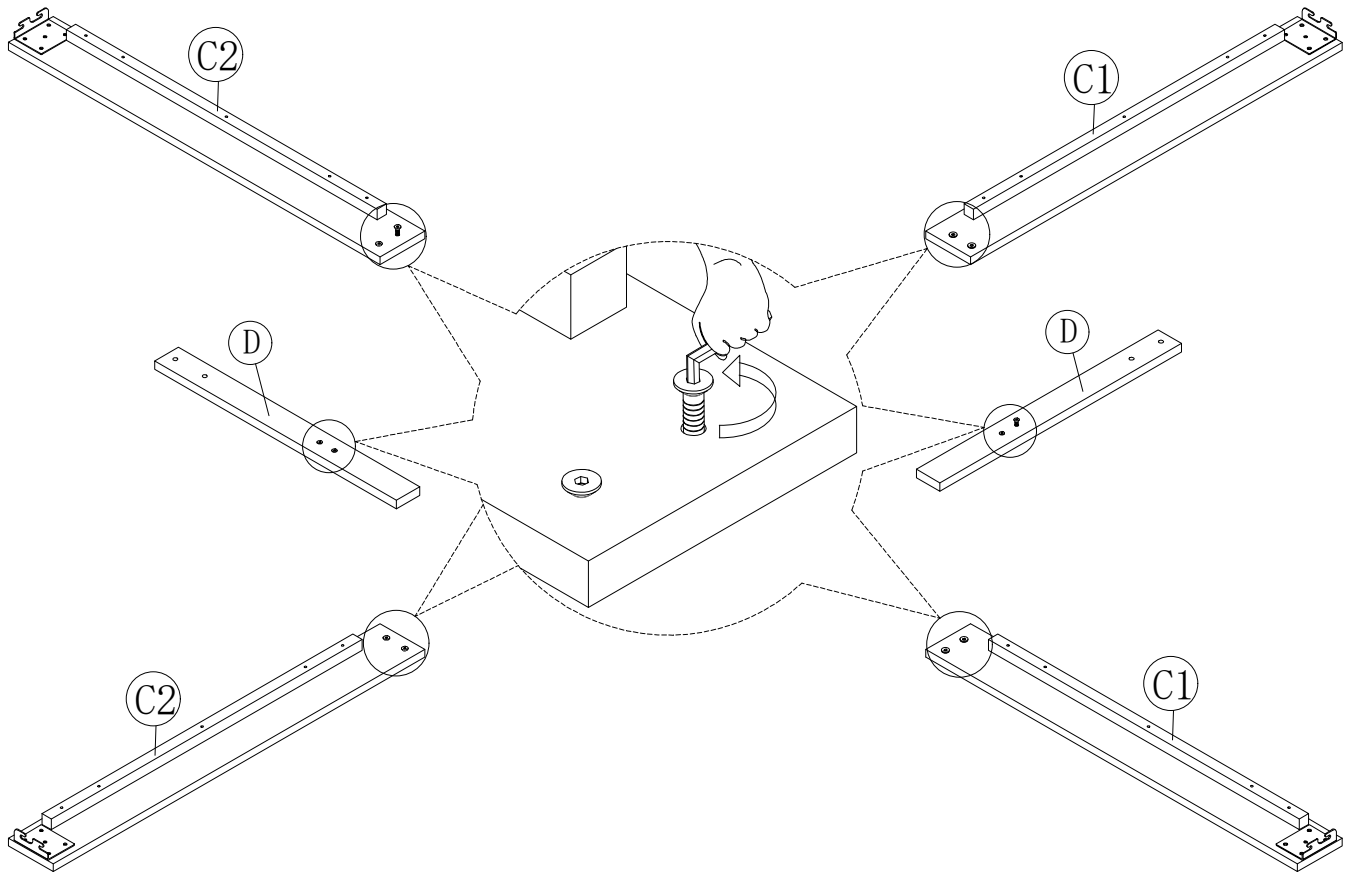


Loosen the pre locked screws.

step4

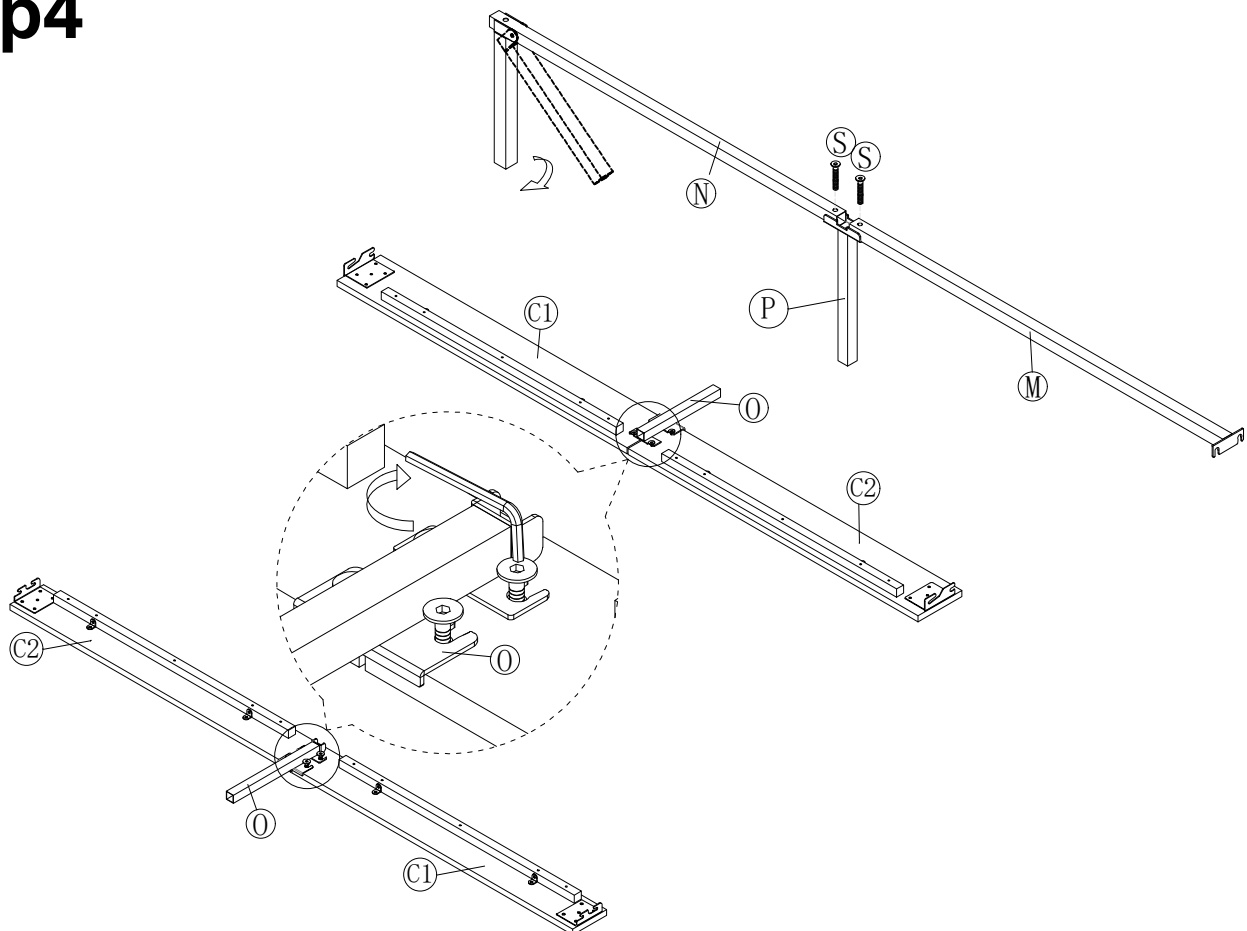


Put the part "O" on part "C1" and part "C2".

step5

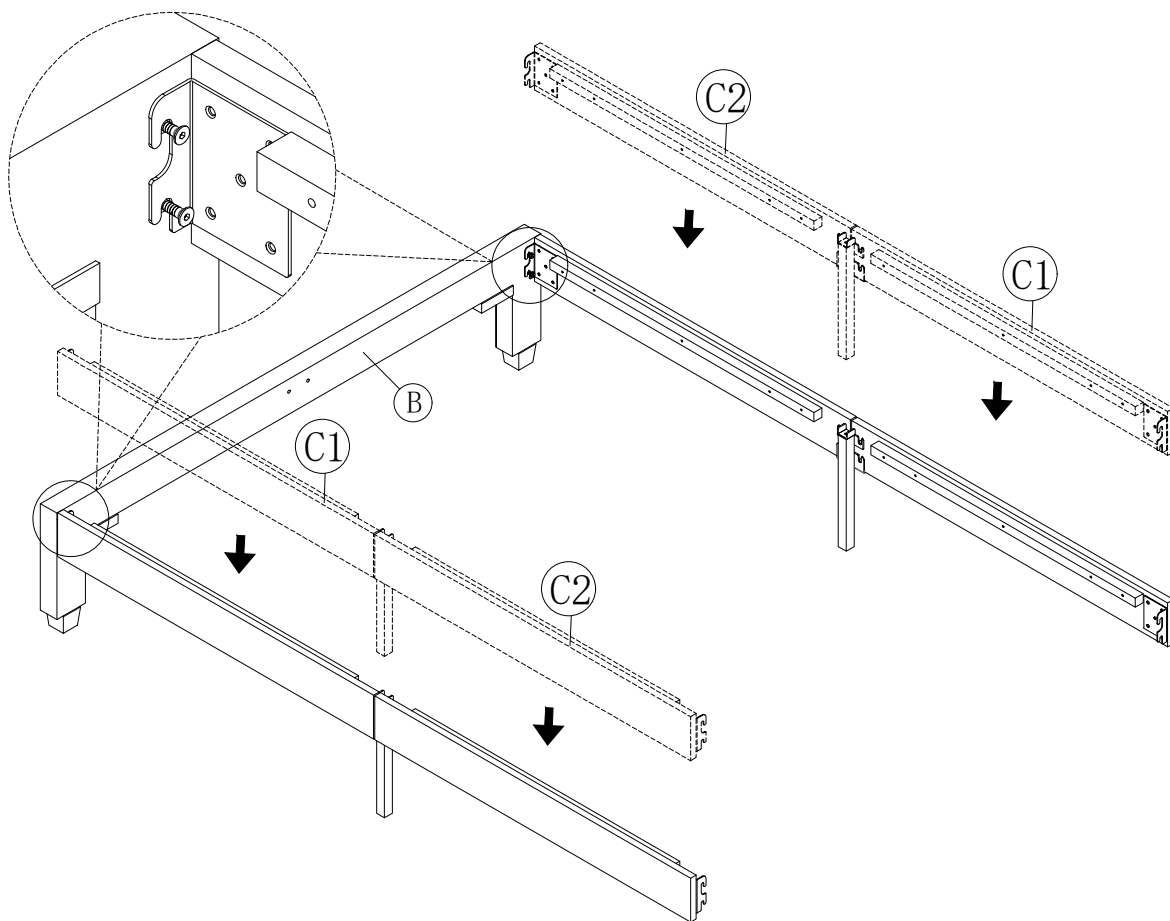


Put the part "C1"and"C2"on part "B".

step6

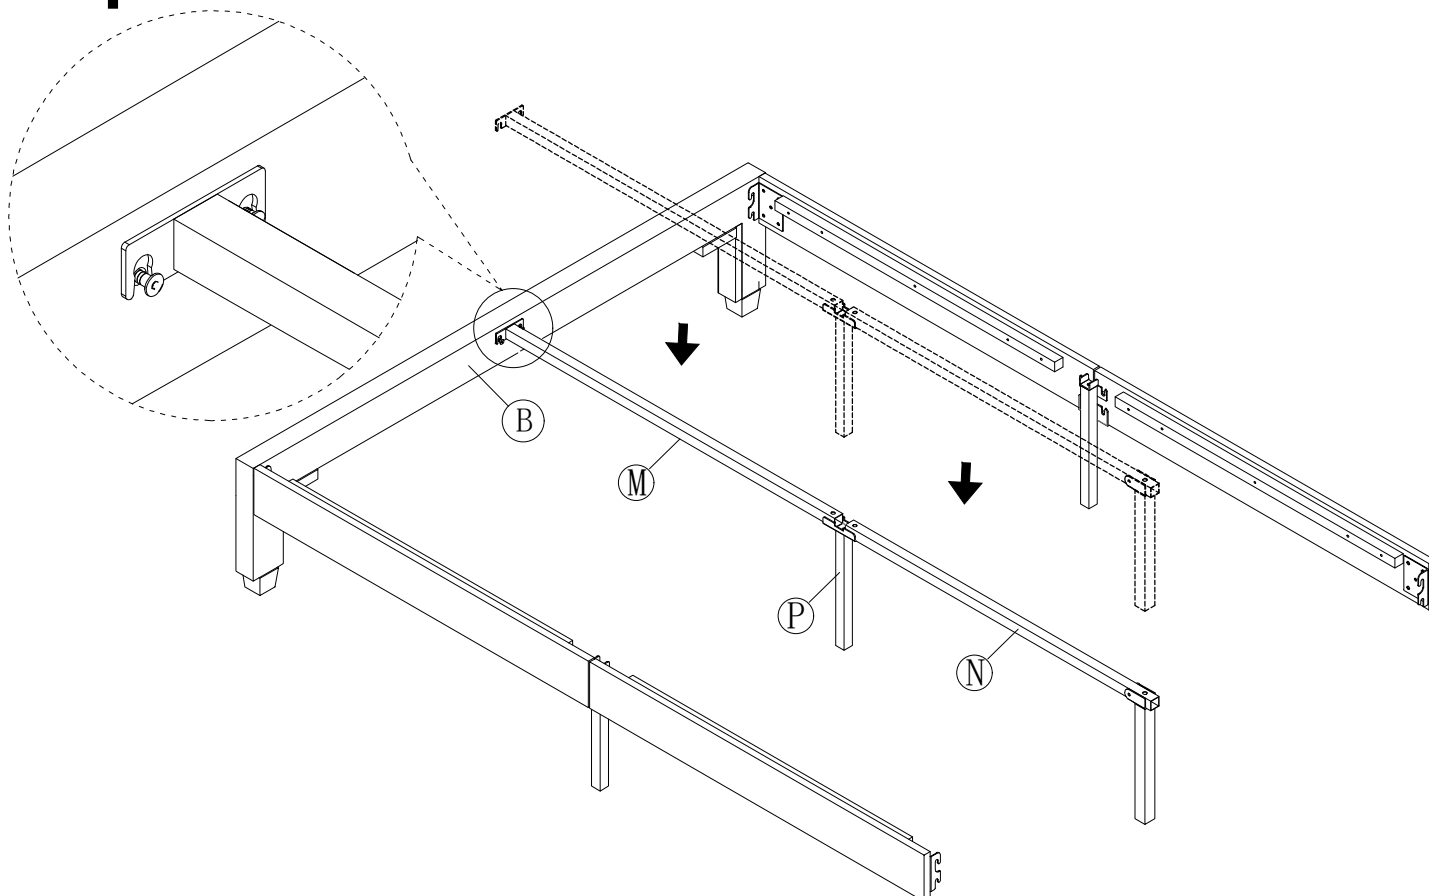


Put the part "M"on part "B".

step7

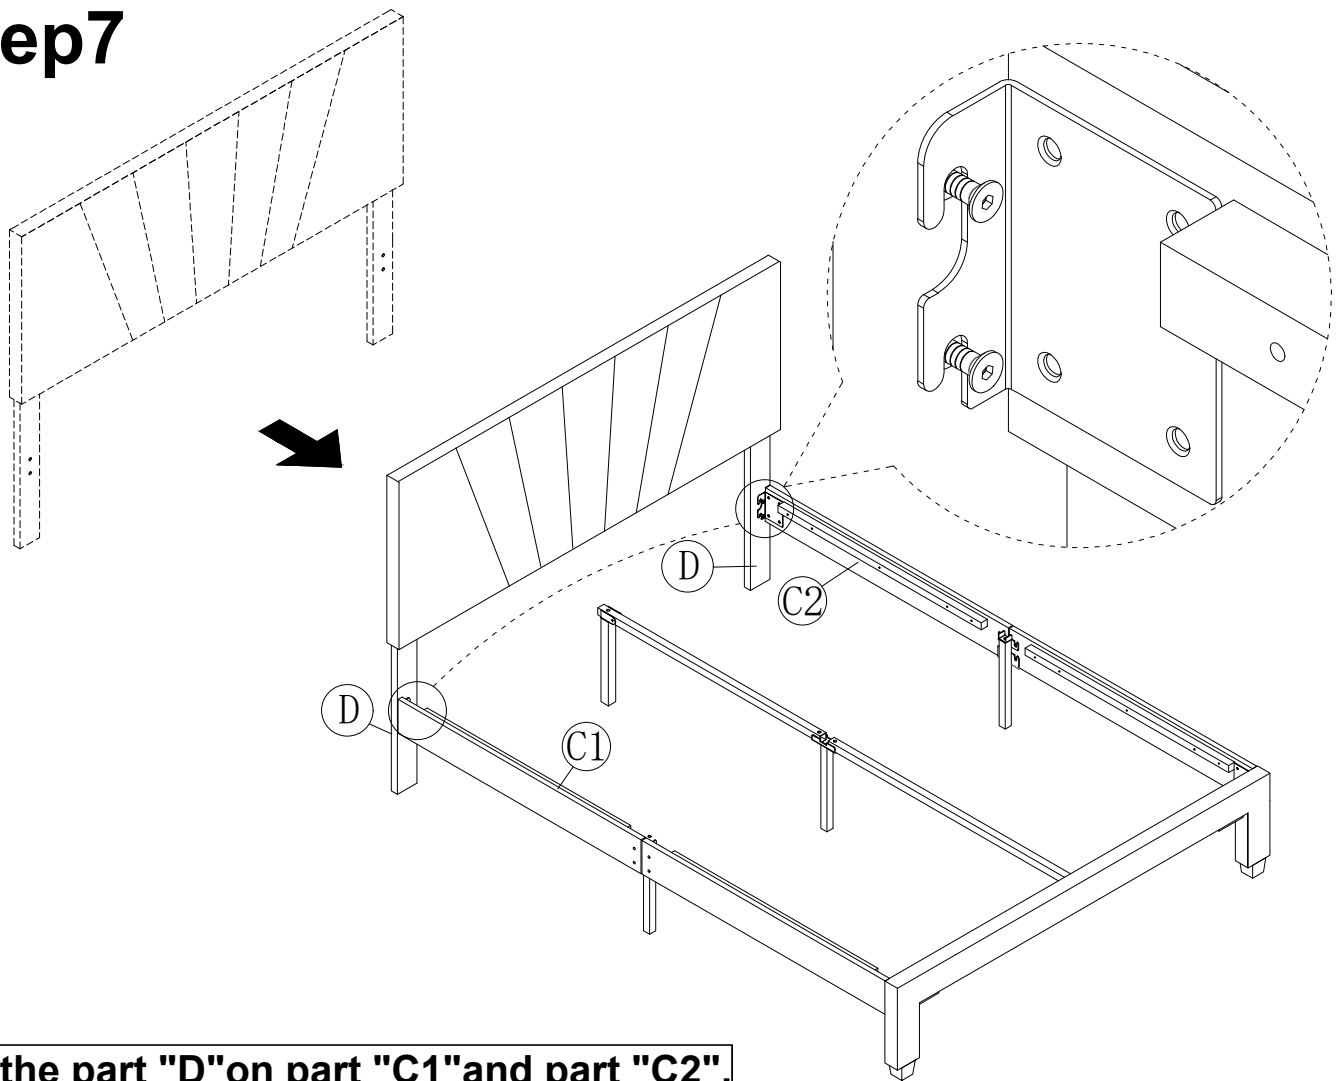


Put the part "D" on part "C1" and part "C2".

step8

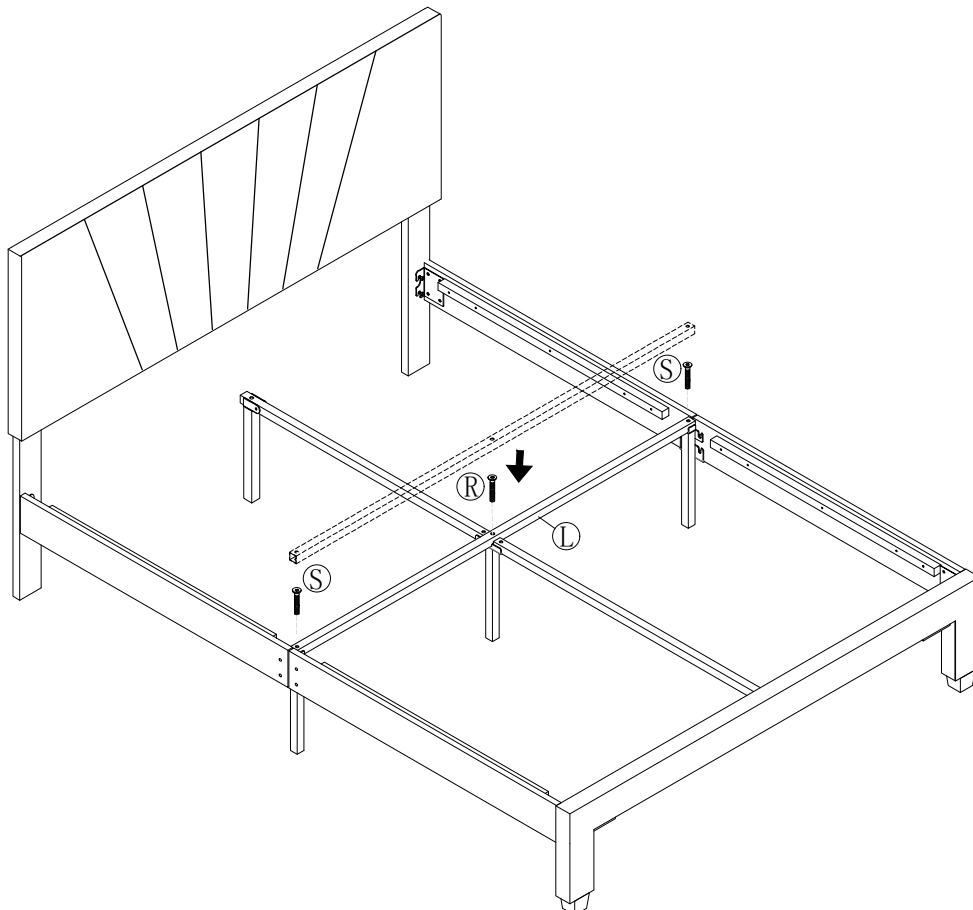


Then tighten all the pre -locked screws.

step9

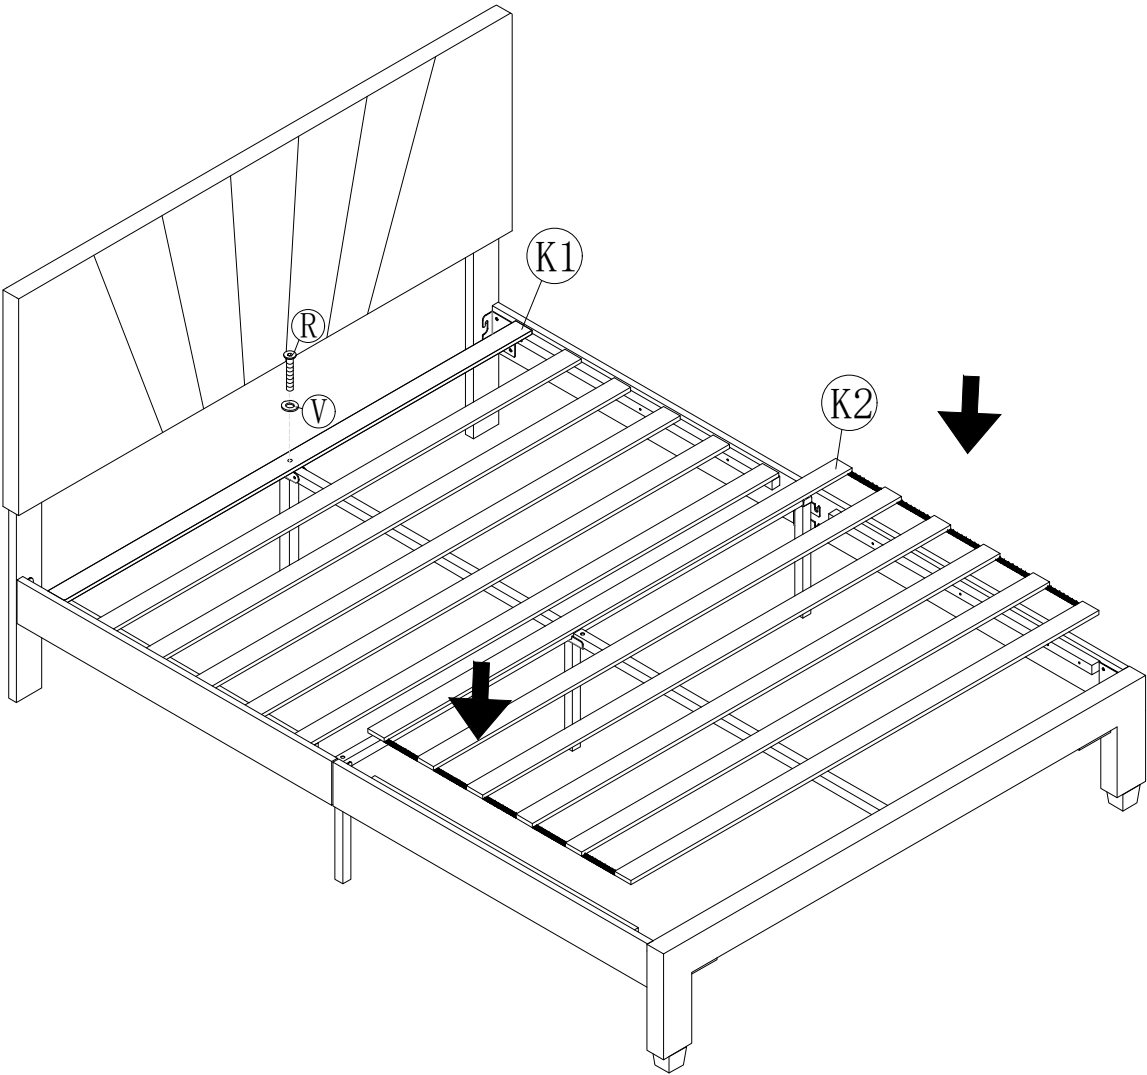


step10

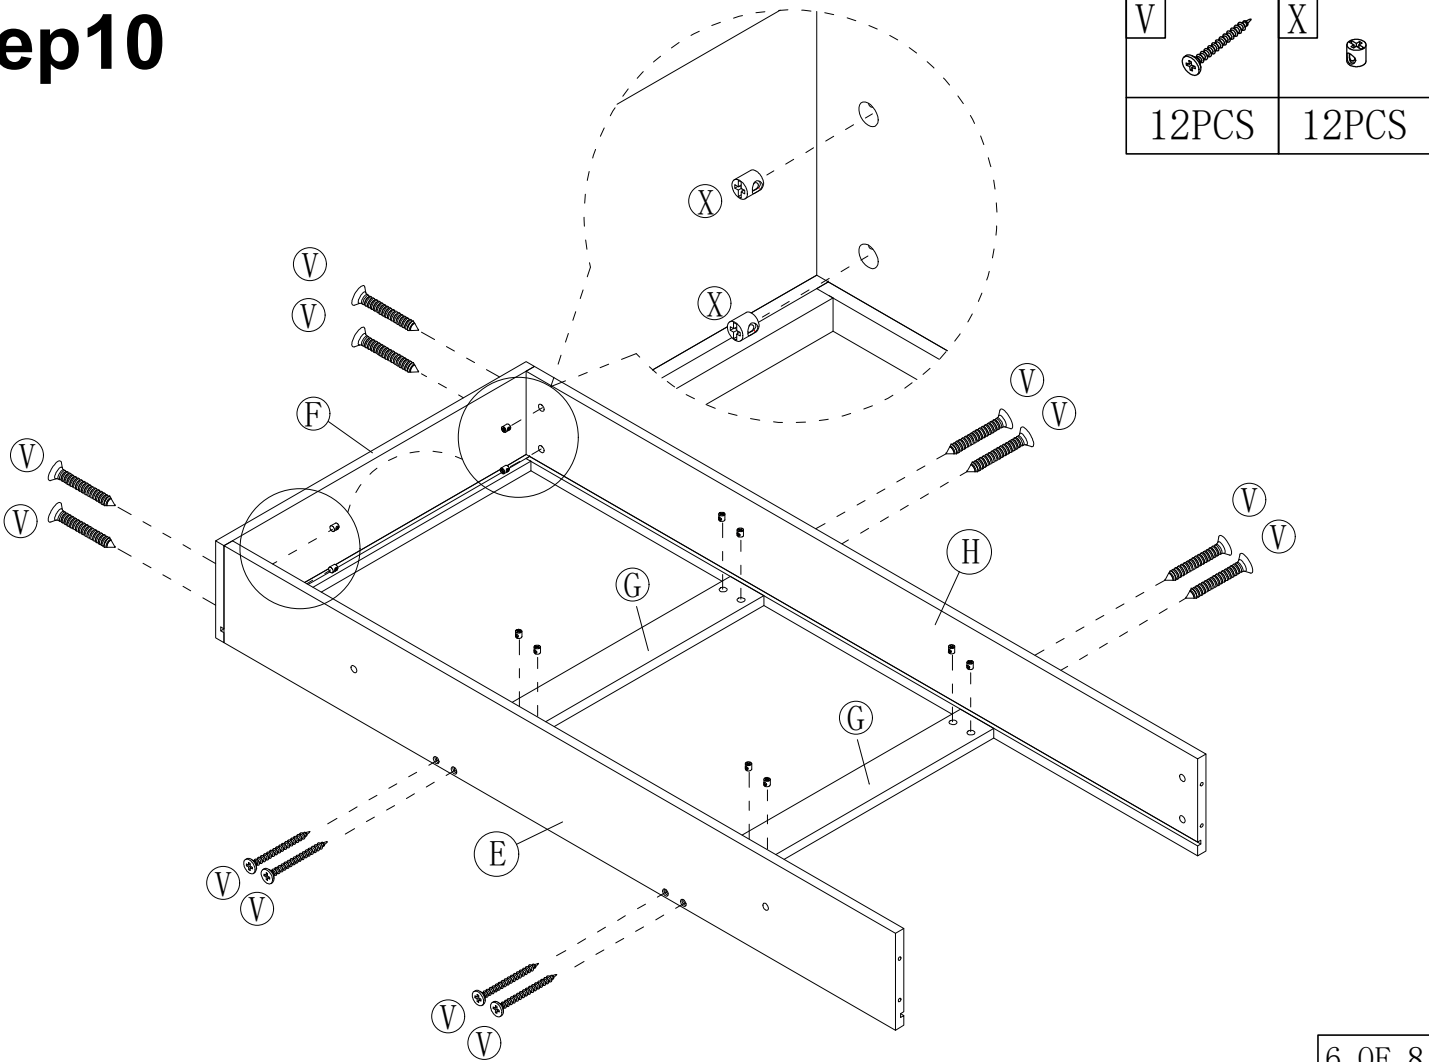

step11


V	X
	
4PCS	4PCS

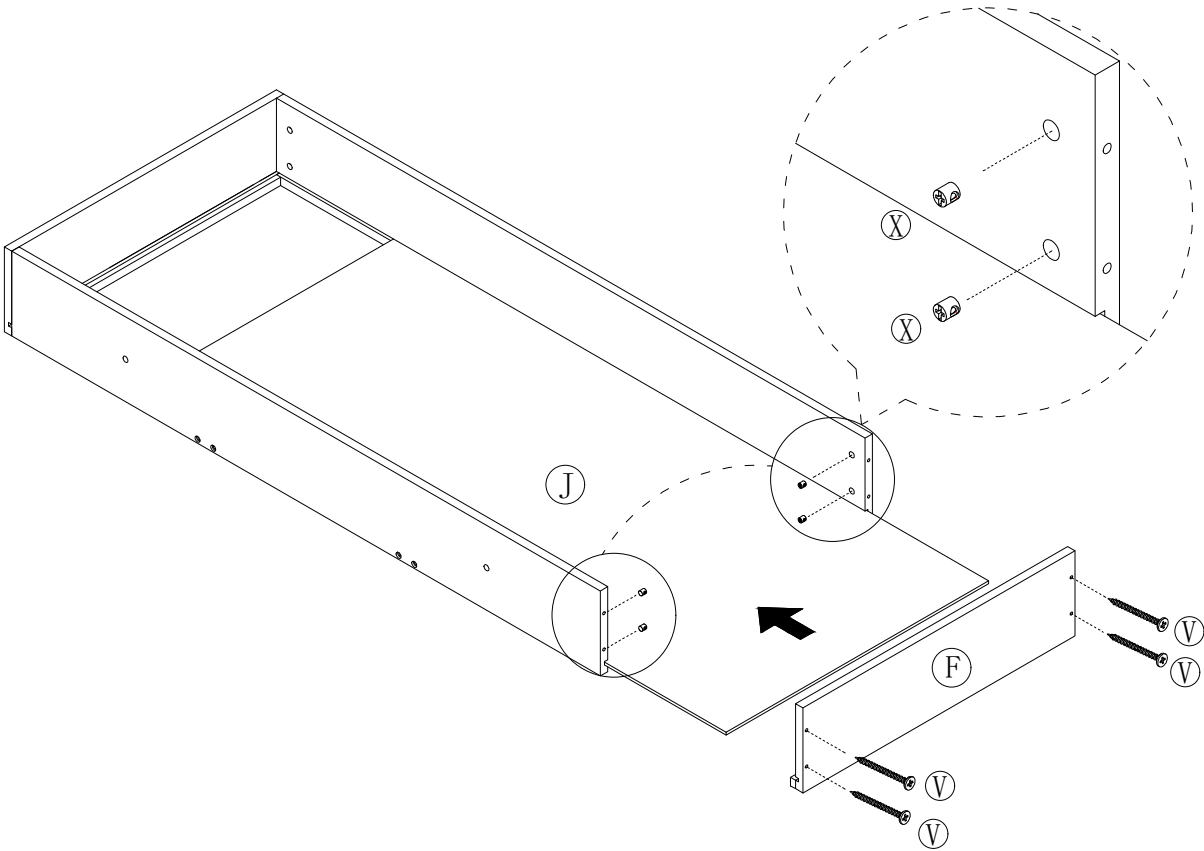

step12

W

16PCS

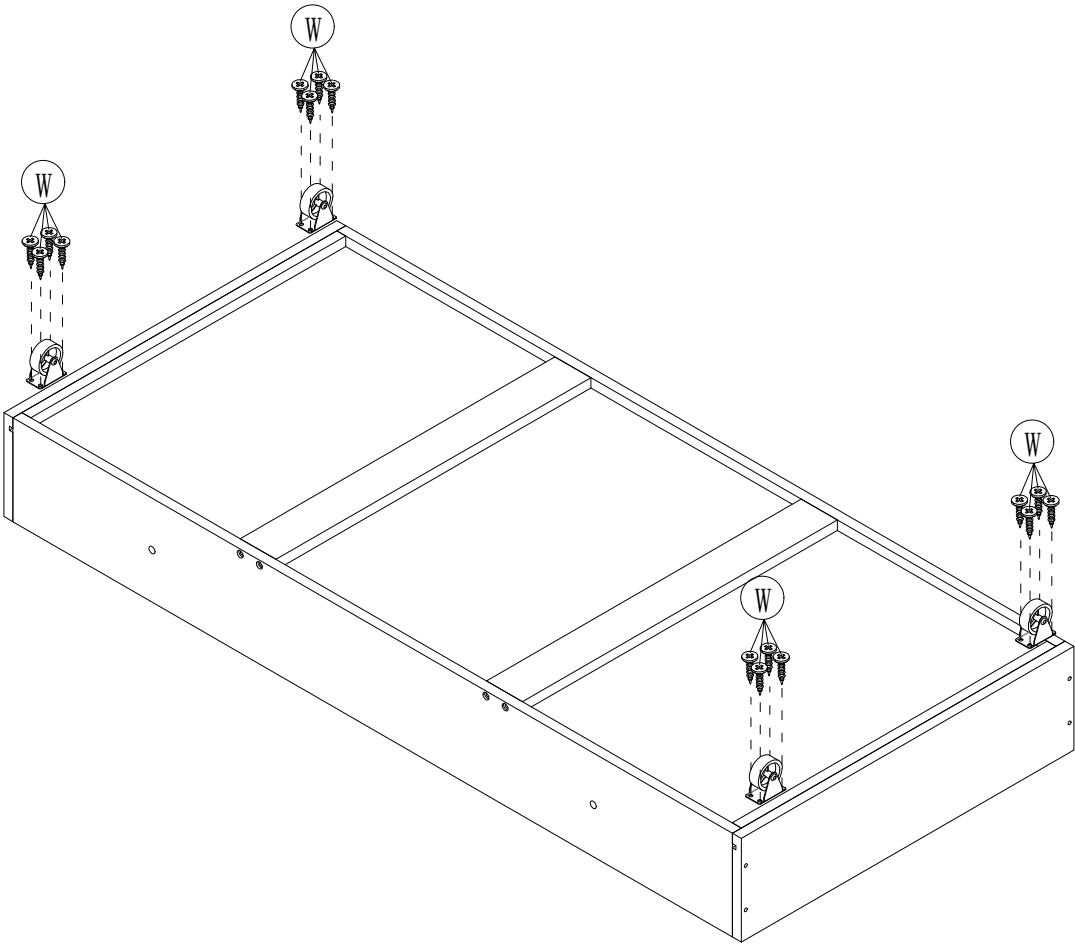


step13

T



2PCS

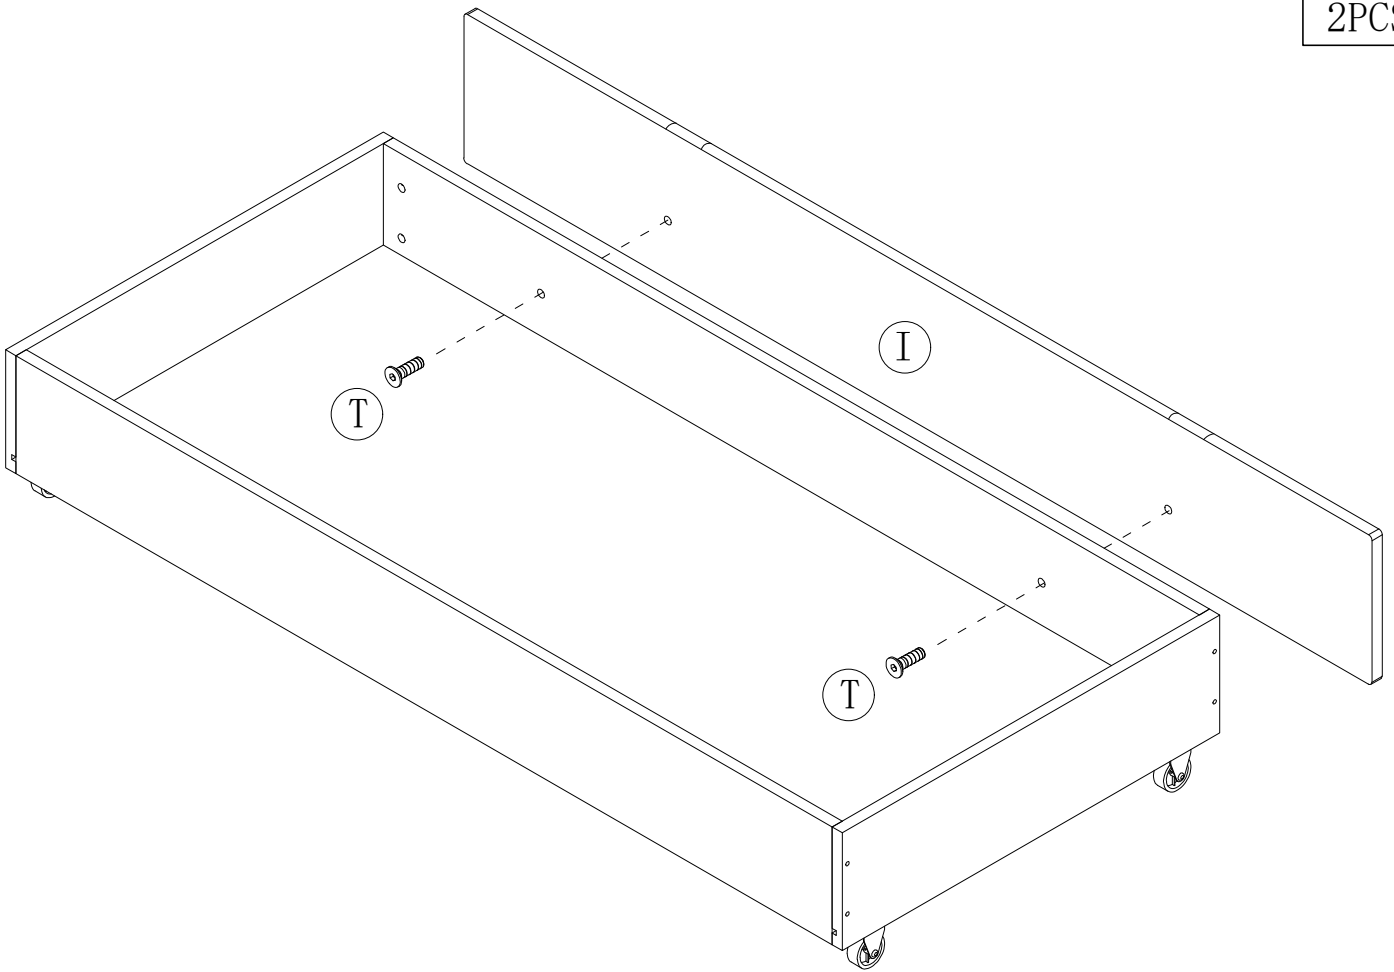

step14

