



# INSTALLATION | SHADOW RAIL CONNECTOR™ Level

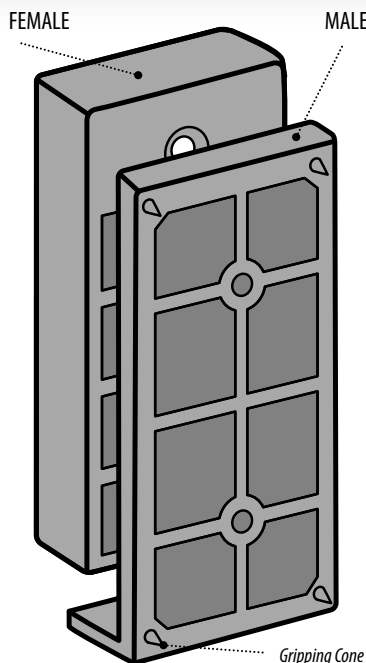


SHADOW RAIL CONNECTOR™  
LEVEL ASSEMBLY

## 1 START

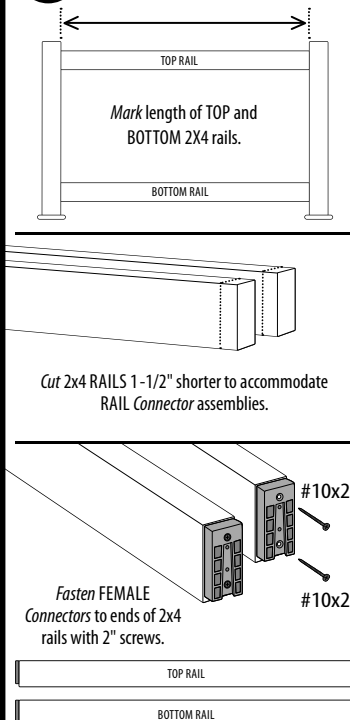


## 2

### BOTTOM RAIL INSTALLATION

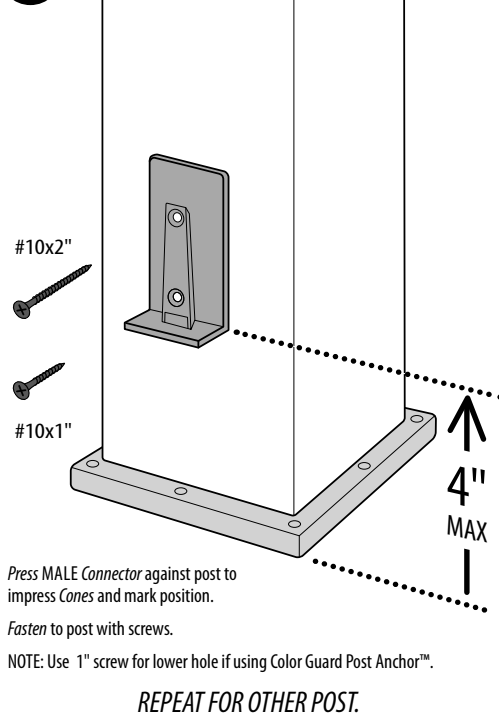


## 3

Slide BOTTOM RAIL  
Into  
MALE Connectors.

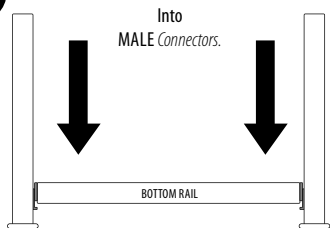


## 4

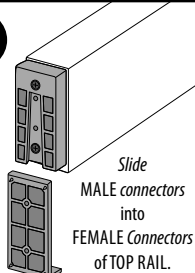

## 5

### TOP RAIL INSTALLATION

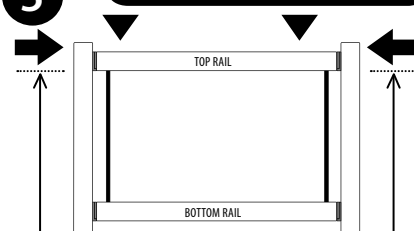

Fasten 2 balusters on BOTTOM RAIL to determine desired height of TOP RAIL.


Position TOP RAIL with Connectors into place.

Squeeze the top of posts slightly to leave impressions from gripping cones.

## 6

Fasten MALE Connector to top area of wood post using 2" screws.

REPEAT FOR OTHER POST.




#10x2"

#10x2"

## 7


Install remaining BALUSTERS to BOTTOM RAIL. Slide TOP RAIL down into place to lock up with MALE Connectors.

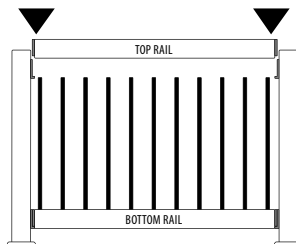

## 8

### FINISH

Optional 2x4 CAP RAIL

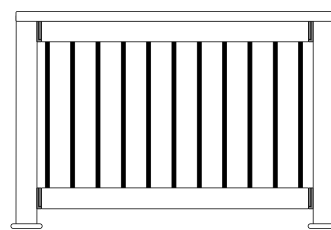

TOLL FREE 1-866-577-8868

titanbuildingproducts.com

**TITAN**®  
THE ART OF BUILDING

