

# Assembly Instruction Sheet #IS-5081P20C

## For Style 5081P20C

**Tools Required:** Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

**Light Source:** (3) GU10 35W Maximum (Not Include).


**Estimated Assembly Time:** 10-20 minutes

**Preparation:** Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

### Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.


### Package Contents

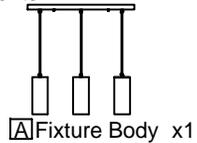

- |              |              |
|--------------|--------------|
| ● 14mmx6pcs  | ● 14mmx14pcs |
| ● 20mmx1pcs  | ● 20mmx1pcs  |
| 1 Crystal x3 | 2 Crystal x6 |
| ● 14mmx8pcs  | ● 14mmx10pcs |
| ● 20mmx1pcs  | ● 20mmx1pcs  |
| 3 Crystal x6 | 4 Crystal x6 |
| ● 14mmx12pcs | ● 14mmx16pcs |
| ● 20mmx1pcs  | ● 20mmx1pcs  |
| 5 Crystal x6 | 6 Crystal x3 |

### Hardware Contents

PART	DESCRIPTION	QUANTITY
BB	Wire nut	2pcs
CC	Screw	2pcs



### STEP 1 - Release Crossbar from Ceiling Canopy


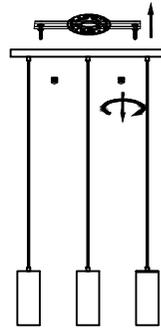


Figure 1

### STEP 2 - Attach Crossbar to Outlet Box.

A. Pass the supply wires through the Mounting bracket (EE). Attach the Mounting bracket (EE) to the Outlet Box (CC) with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (not included). Tighten until snug.

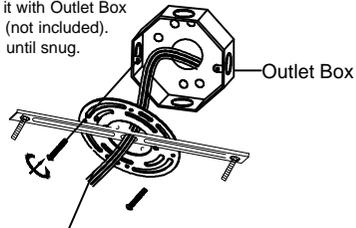

Supply Wires with Outlet Box Screws Ground Wire

Figure 2

### STEP 3 - Wire Connections

A. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

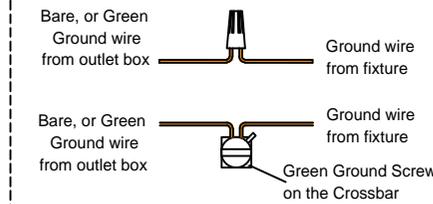
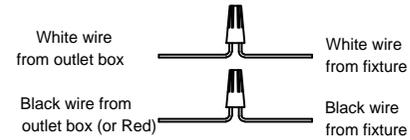


Figure 3

### STEP 4 - Install Ceiling Canopy to Ceiling



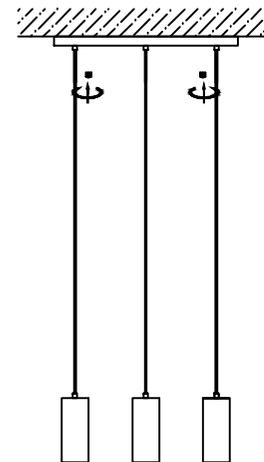


Figure 4

### STEP 5 - Install Crystal and Bulbs.

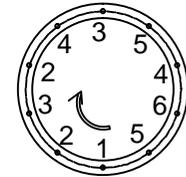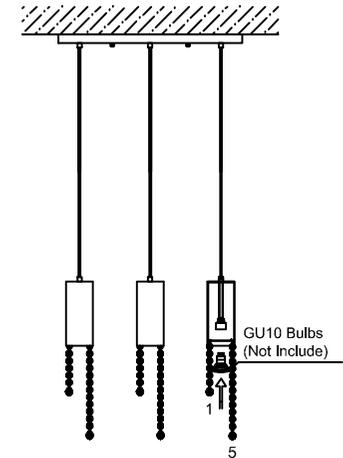

- |              |              |
|--------------|--------------|
| ● 14mmx6pcs  | ● 14mmx14pcs |
| ● 20mmx1pcs  | ● 20mmx1pcs  |
| 1 Crystal x3 | 2 Crystal x6 |
| ● 14mmx8pcs  | ● 14mmx10pcs |
| ● 20mmx1pcs  | ● 20mmx1pcs  |
| 3 Crystal x6 | 4 Crystal x6 |
| ● 14mmx12pcs | ● 14mmx16pcs |
| ● 20mmx1pcs  | ● 20mmx1pcs  |
| 5 Crystal x6 | 6 Crystal x3 |

Figure 5