


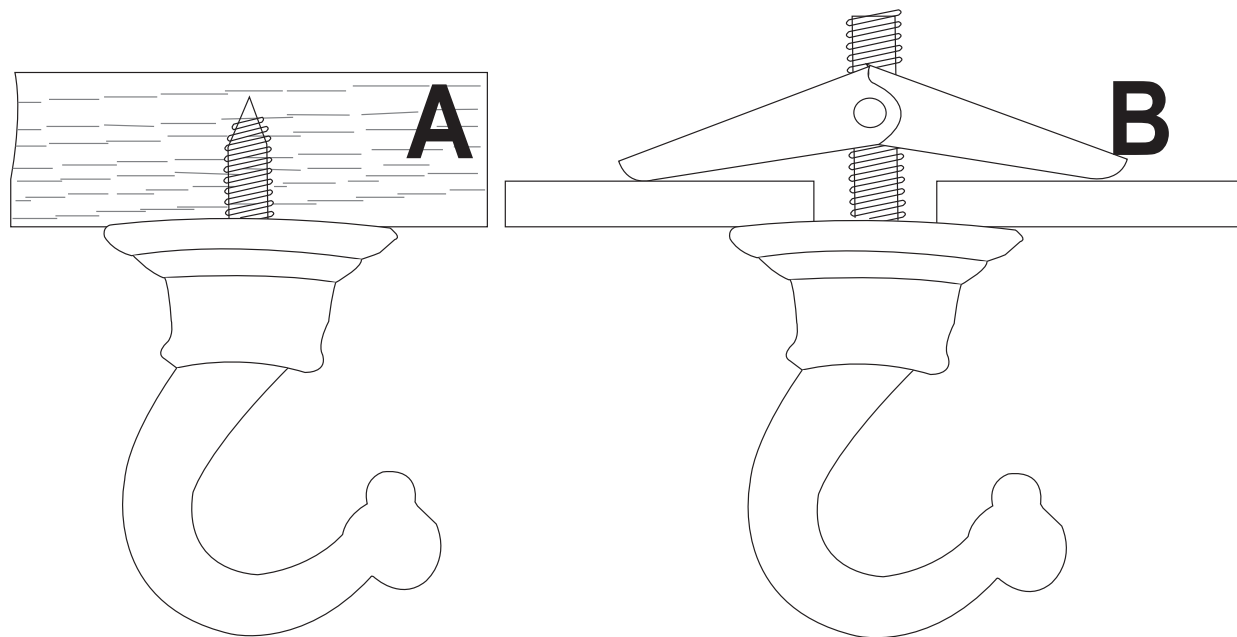

INSTRUCTIONS:

1. If drill strikes a wood joist, drill 1/8" diameter hole at desired location. Assemble screw to hook as shown in figure A. Screw hook into joist until flush with ceiling.
2. If drill goes through plaster or wallboard, drill hole to 5/8" diameter. Assemble hook and toggle bolt, as shown in figure B. Fold wings of toggle bolt down and insert into ceiling until wings snap open above ceiling. Apply slight downward pressure to hook and tighten until flush with ceiling.

PARA INSTALAR:

1. Para vigas sólidas: Inserte el colgador de tornillo en la parte de atrás del gancho. Taladrar un agujero de 0,30 cm en la locación deseada. Taladre un agujero de 0,31 cm para guía y apriete baciendo girar el gancho.
2. Para techos buecos: Ensamble el fiador y el perno. Taladre un agujero de 1,55 cm para guiarse. Apriete las aletas para juntarlas e instale.