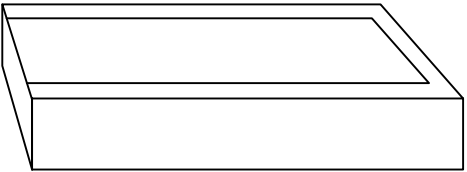
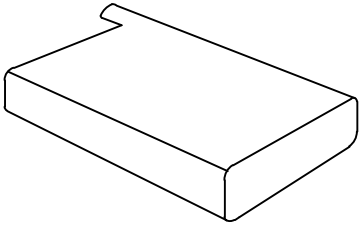
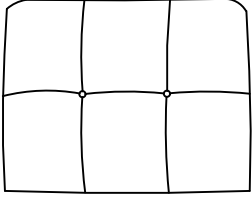
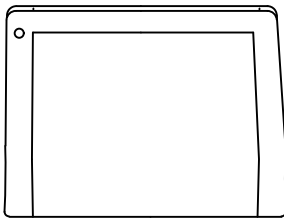
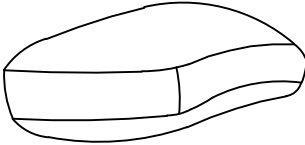







YMX-30

Accessories list







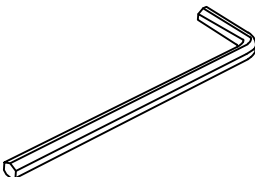



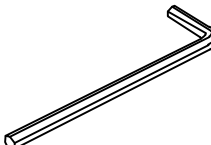




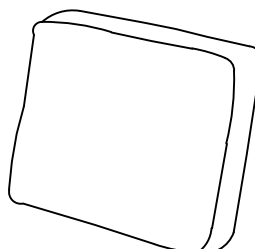
Carton 1/3

A	B	C	D	E
				
Left seat frame(1)	Left seat cushion(1)	Backrest cushion(1)	Left backrest(1)	Left armrest soft bag(1)

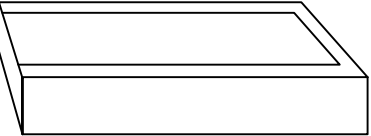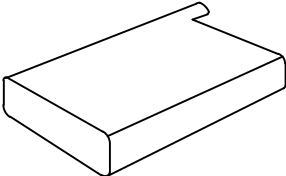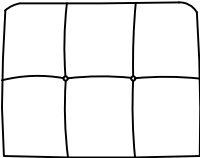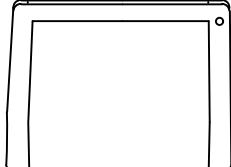
Carton 2/3

F	G	C	H	X
				
Right seat frame(1)	Right seat cushion(1)	Backrest cushion(1)	Right backrest(1)	Right armrest soft bag(1)

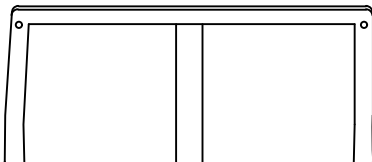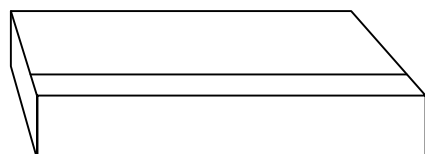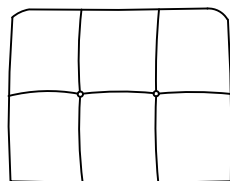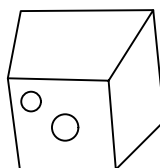
Carton 3/3

I	J	C	K	L	M
					
Middle backrest(1)	Double seat frame(1)	Backrest cushion(2)	8*80mm Leg(12)	8*95 Screw(12)	17mm Gasket(12)
N	O	P	Q	R	
					
M5*100*40mm Wrench(1)	50 Metal plate(2)	6*25 Screw(4)	13mm Gasket(4)	M4*65*23Wrench(1)	
S	T	U	V	W	
					
Hardware(6)	6*35 Screw(24)	17mm Gasket(24)	U connector(2)	Seat cushion(2)	

STEP 1:
Connect the sofa seat frame with U hooks

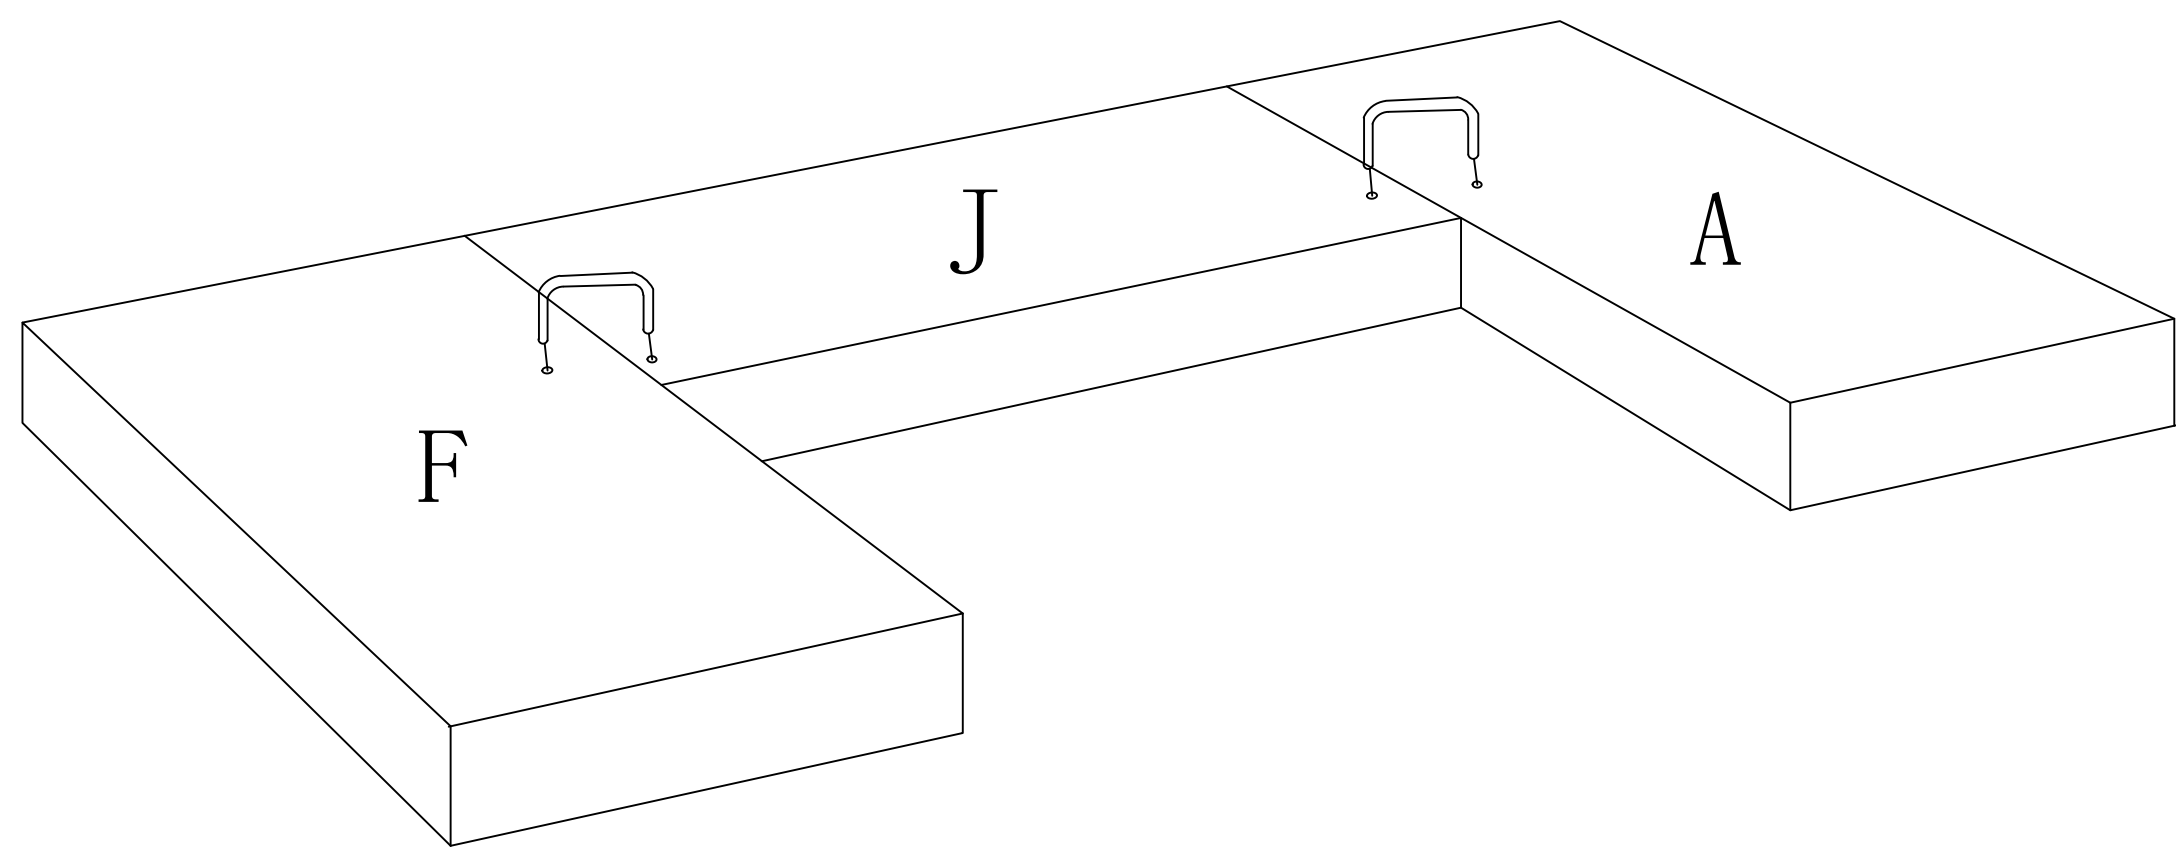


STEP 2:
Install the backrest hardware on the seat frame of the sofa

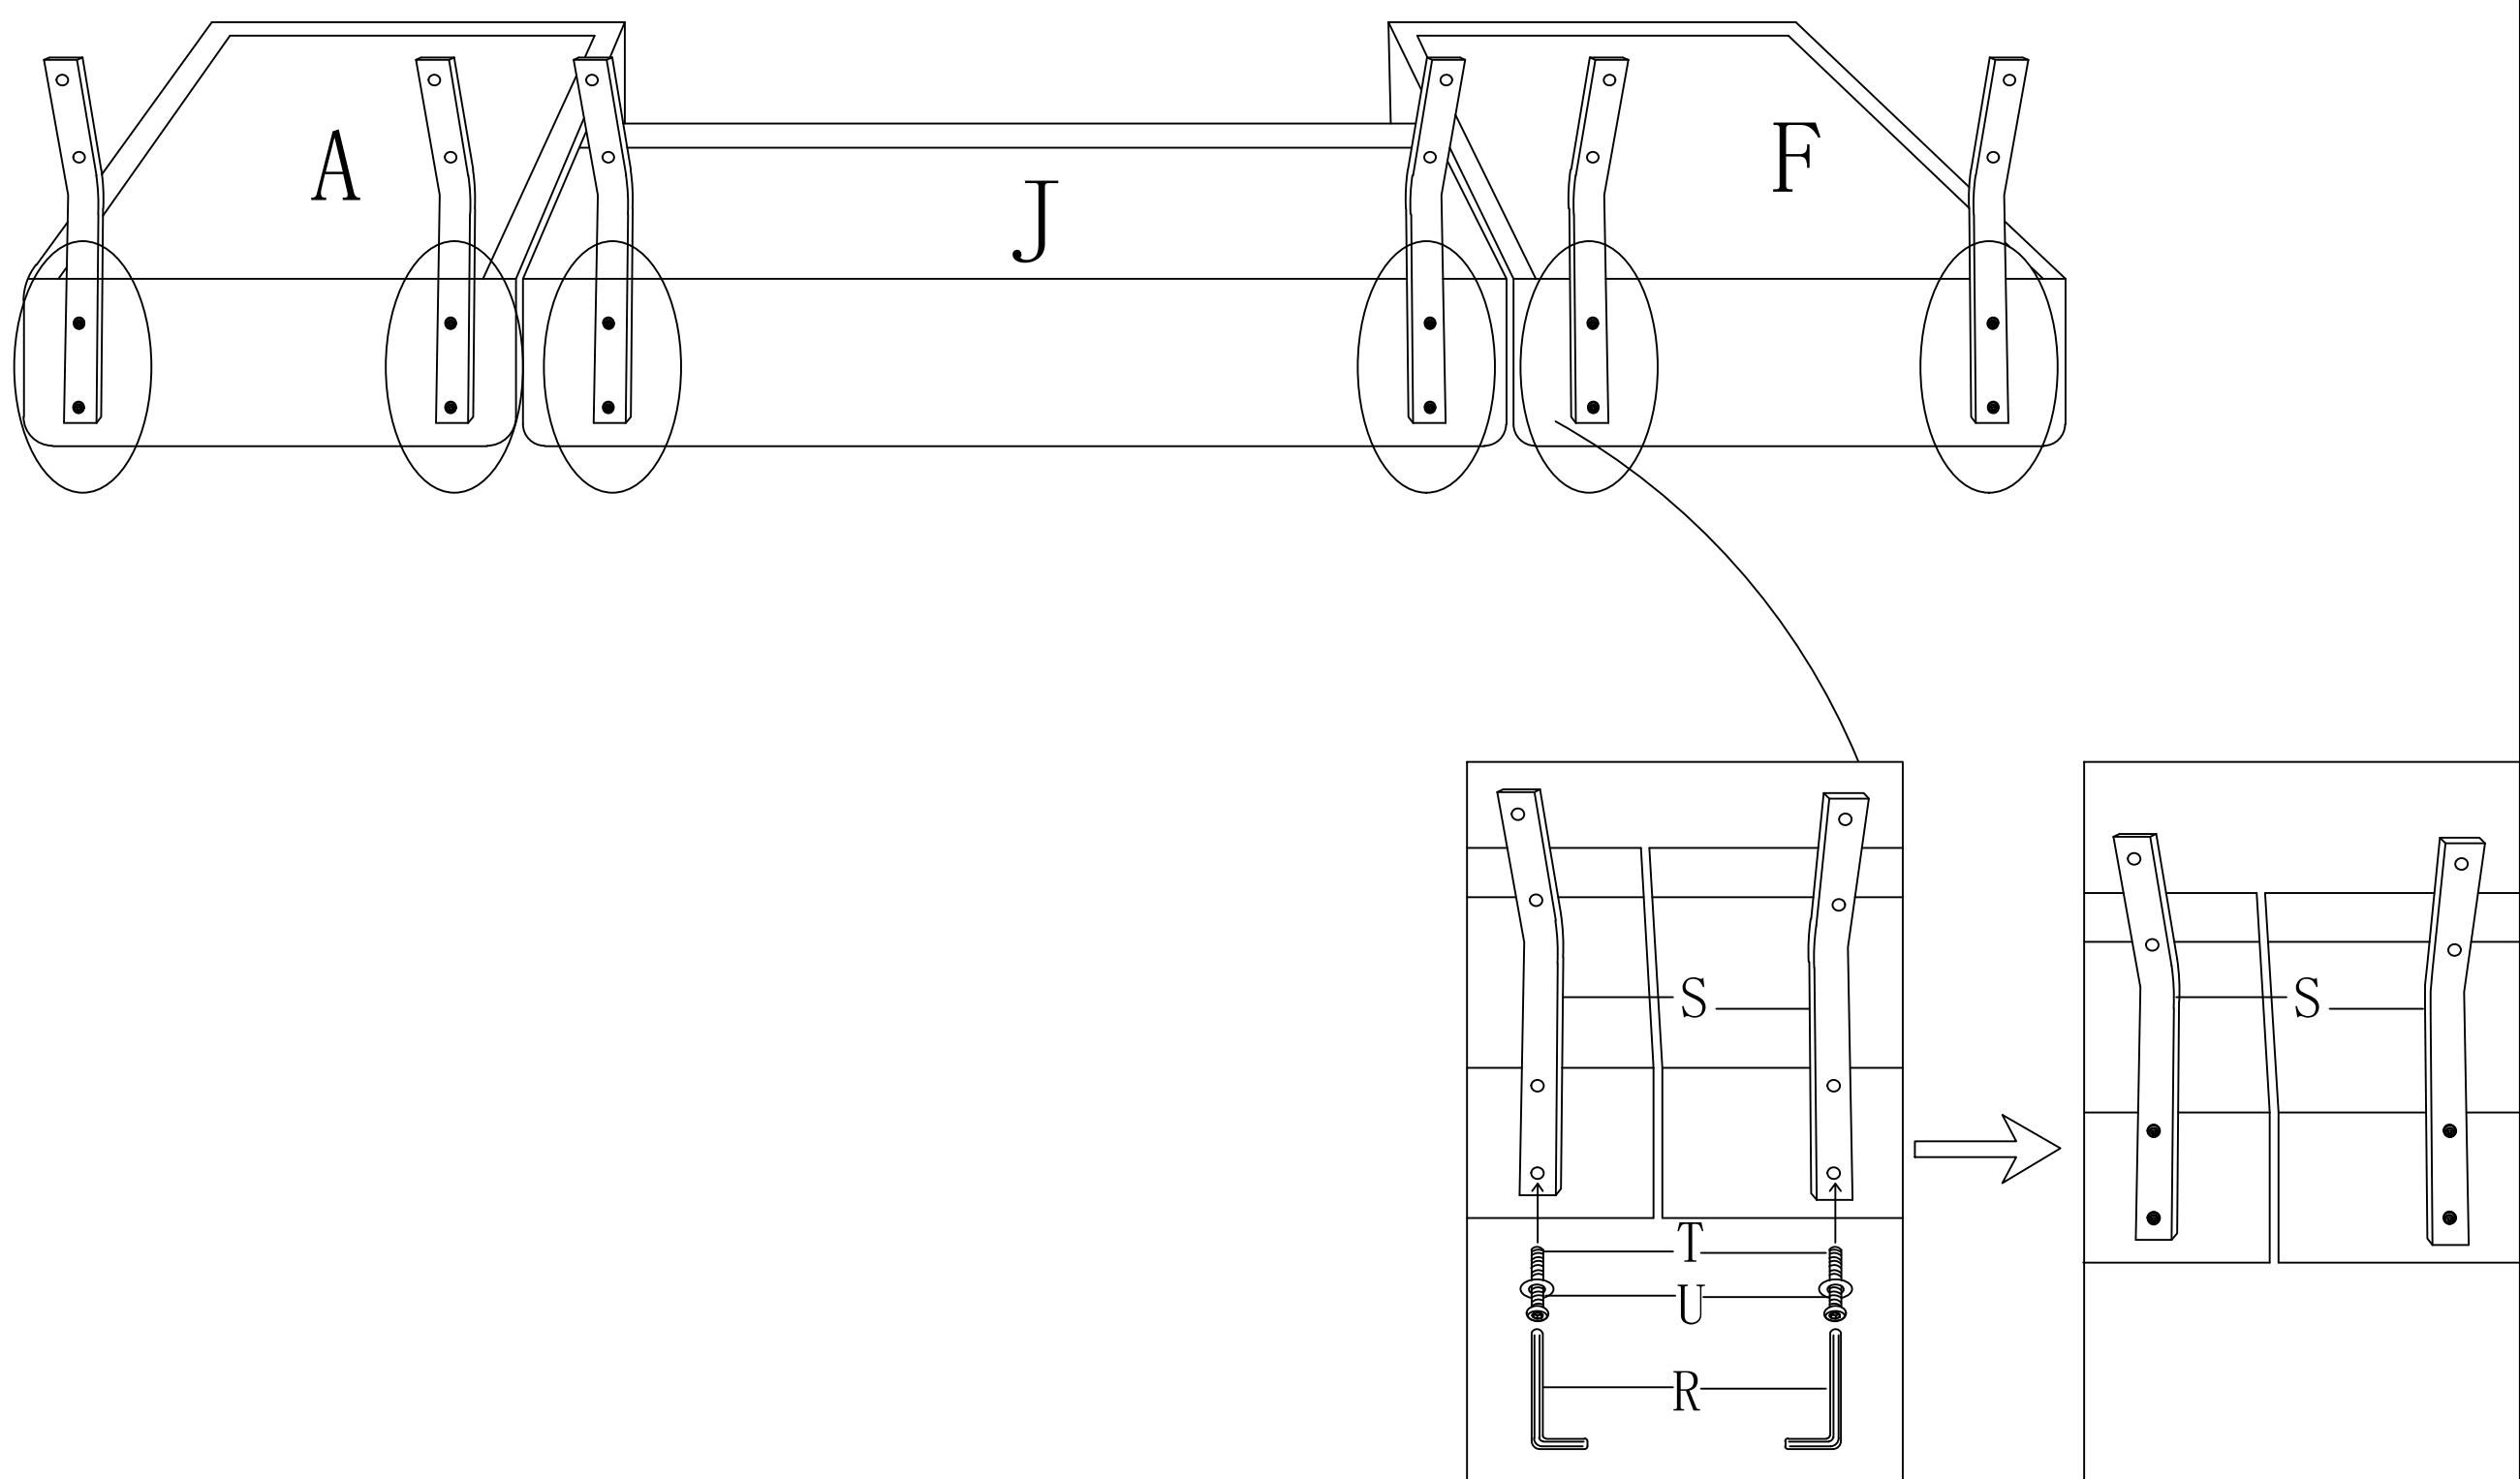


STEP 3:

Align the installing holes of the sofa backrest with the hardware holes



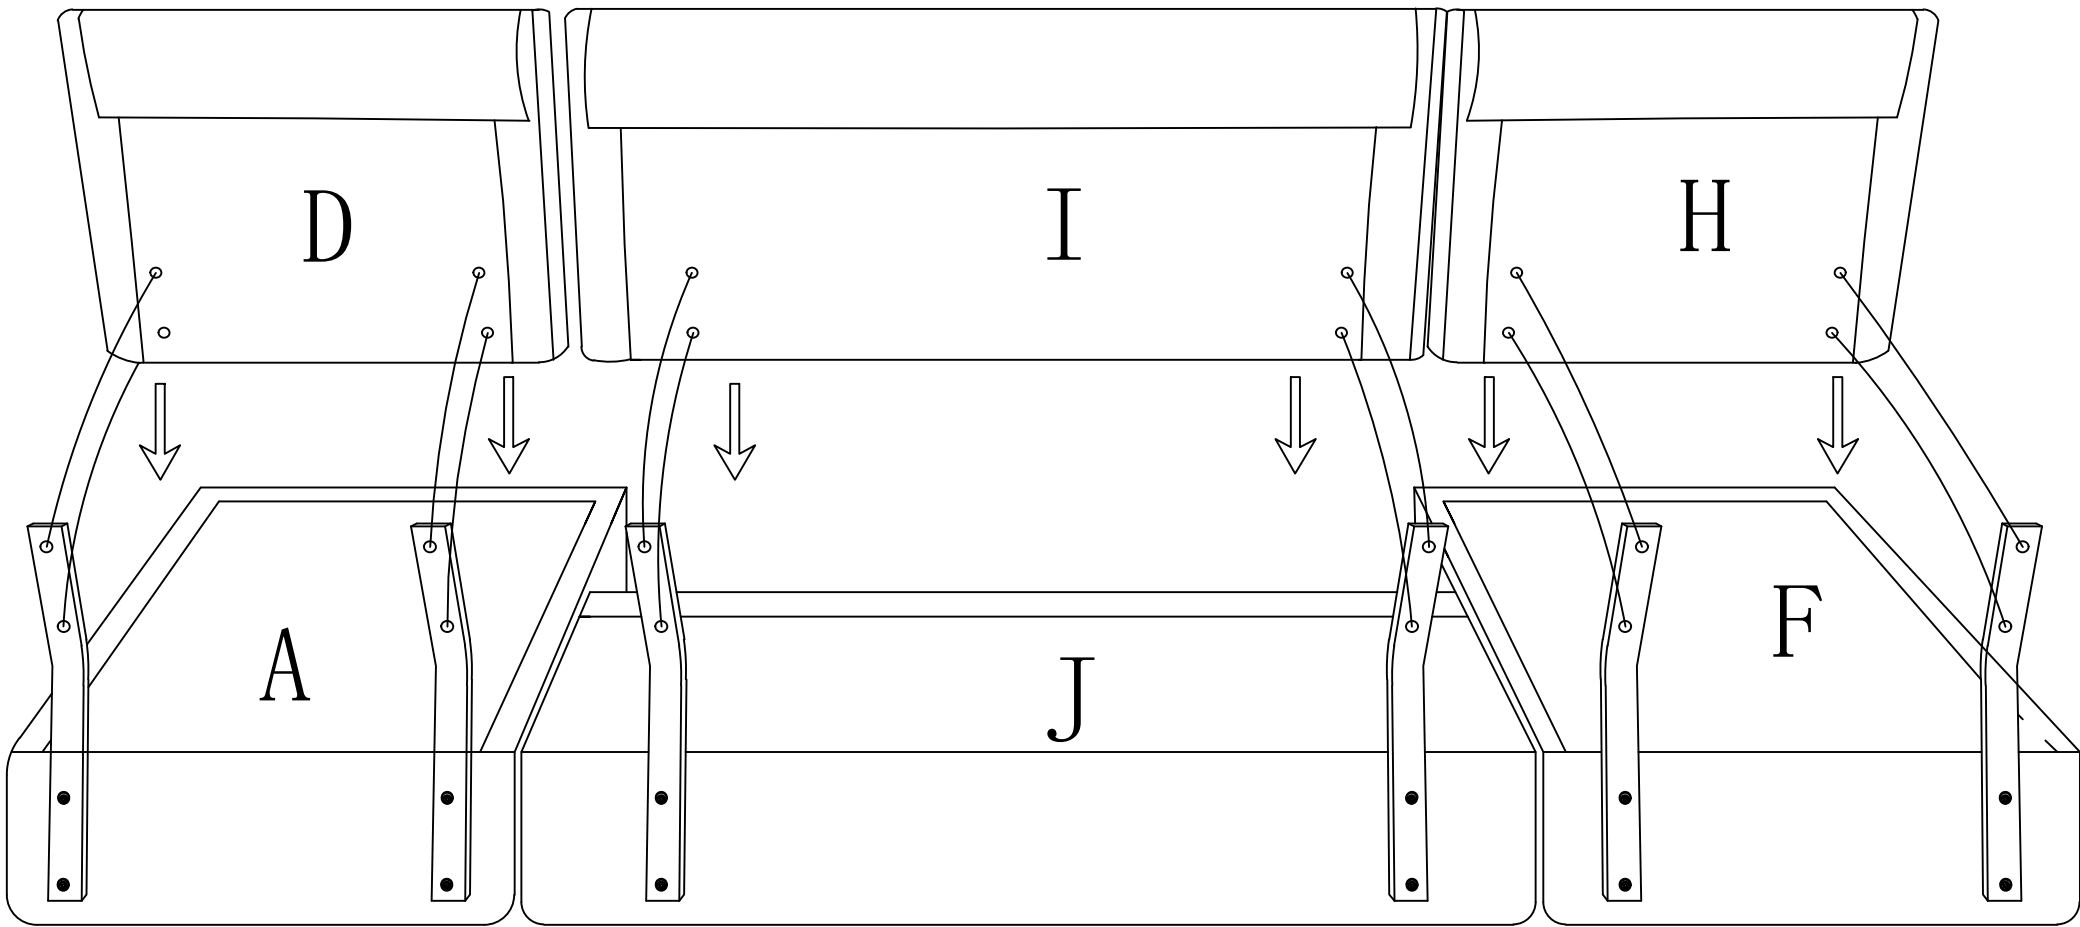


STEP 4:


Install screws to lock the sofa backrest

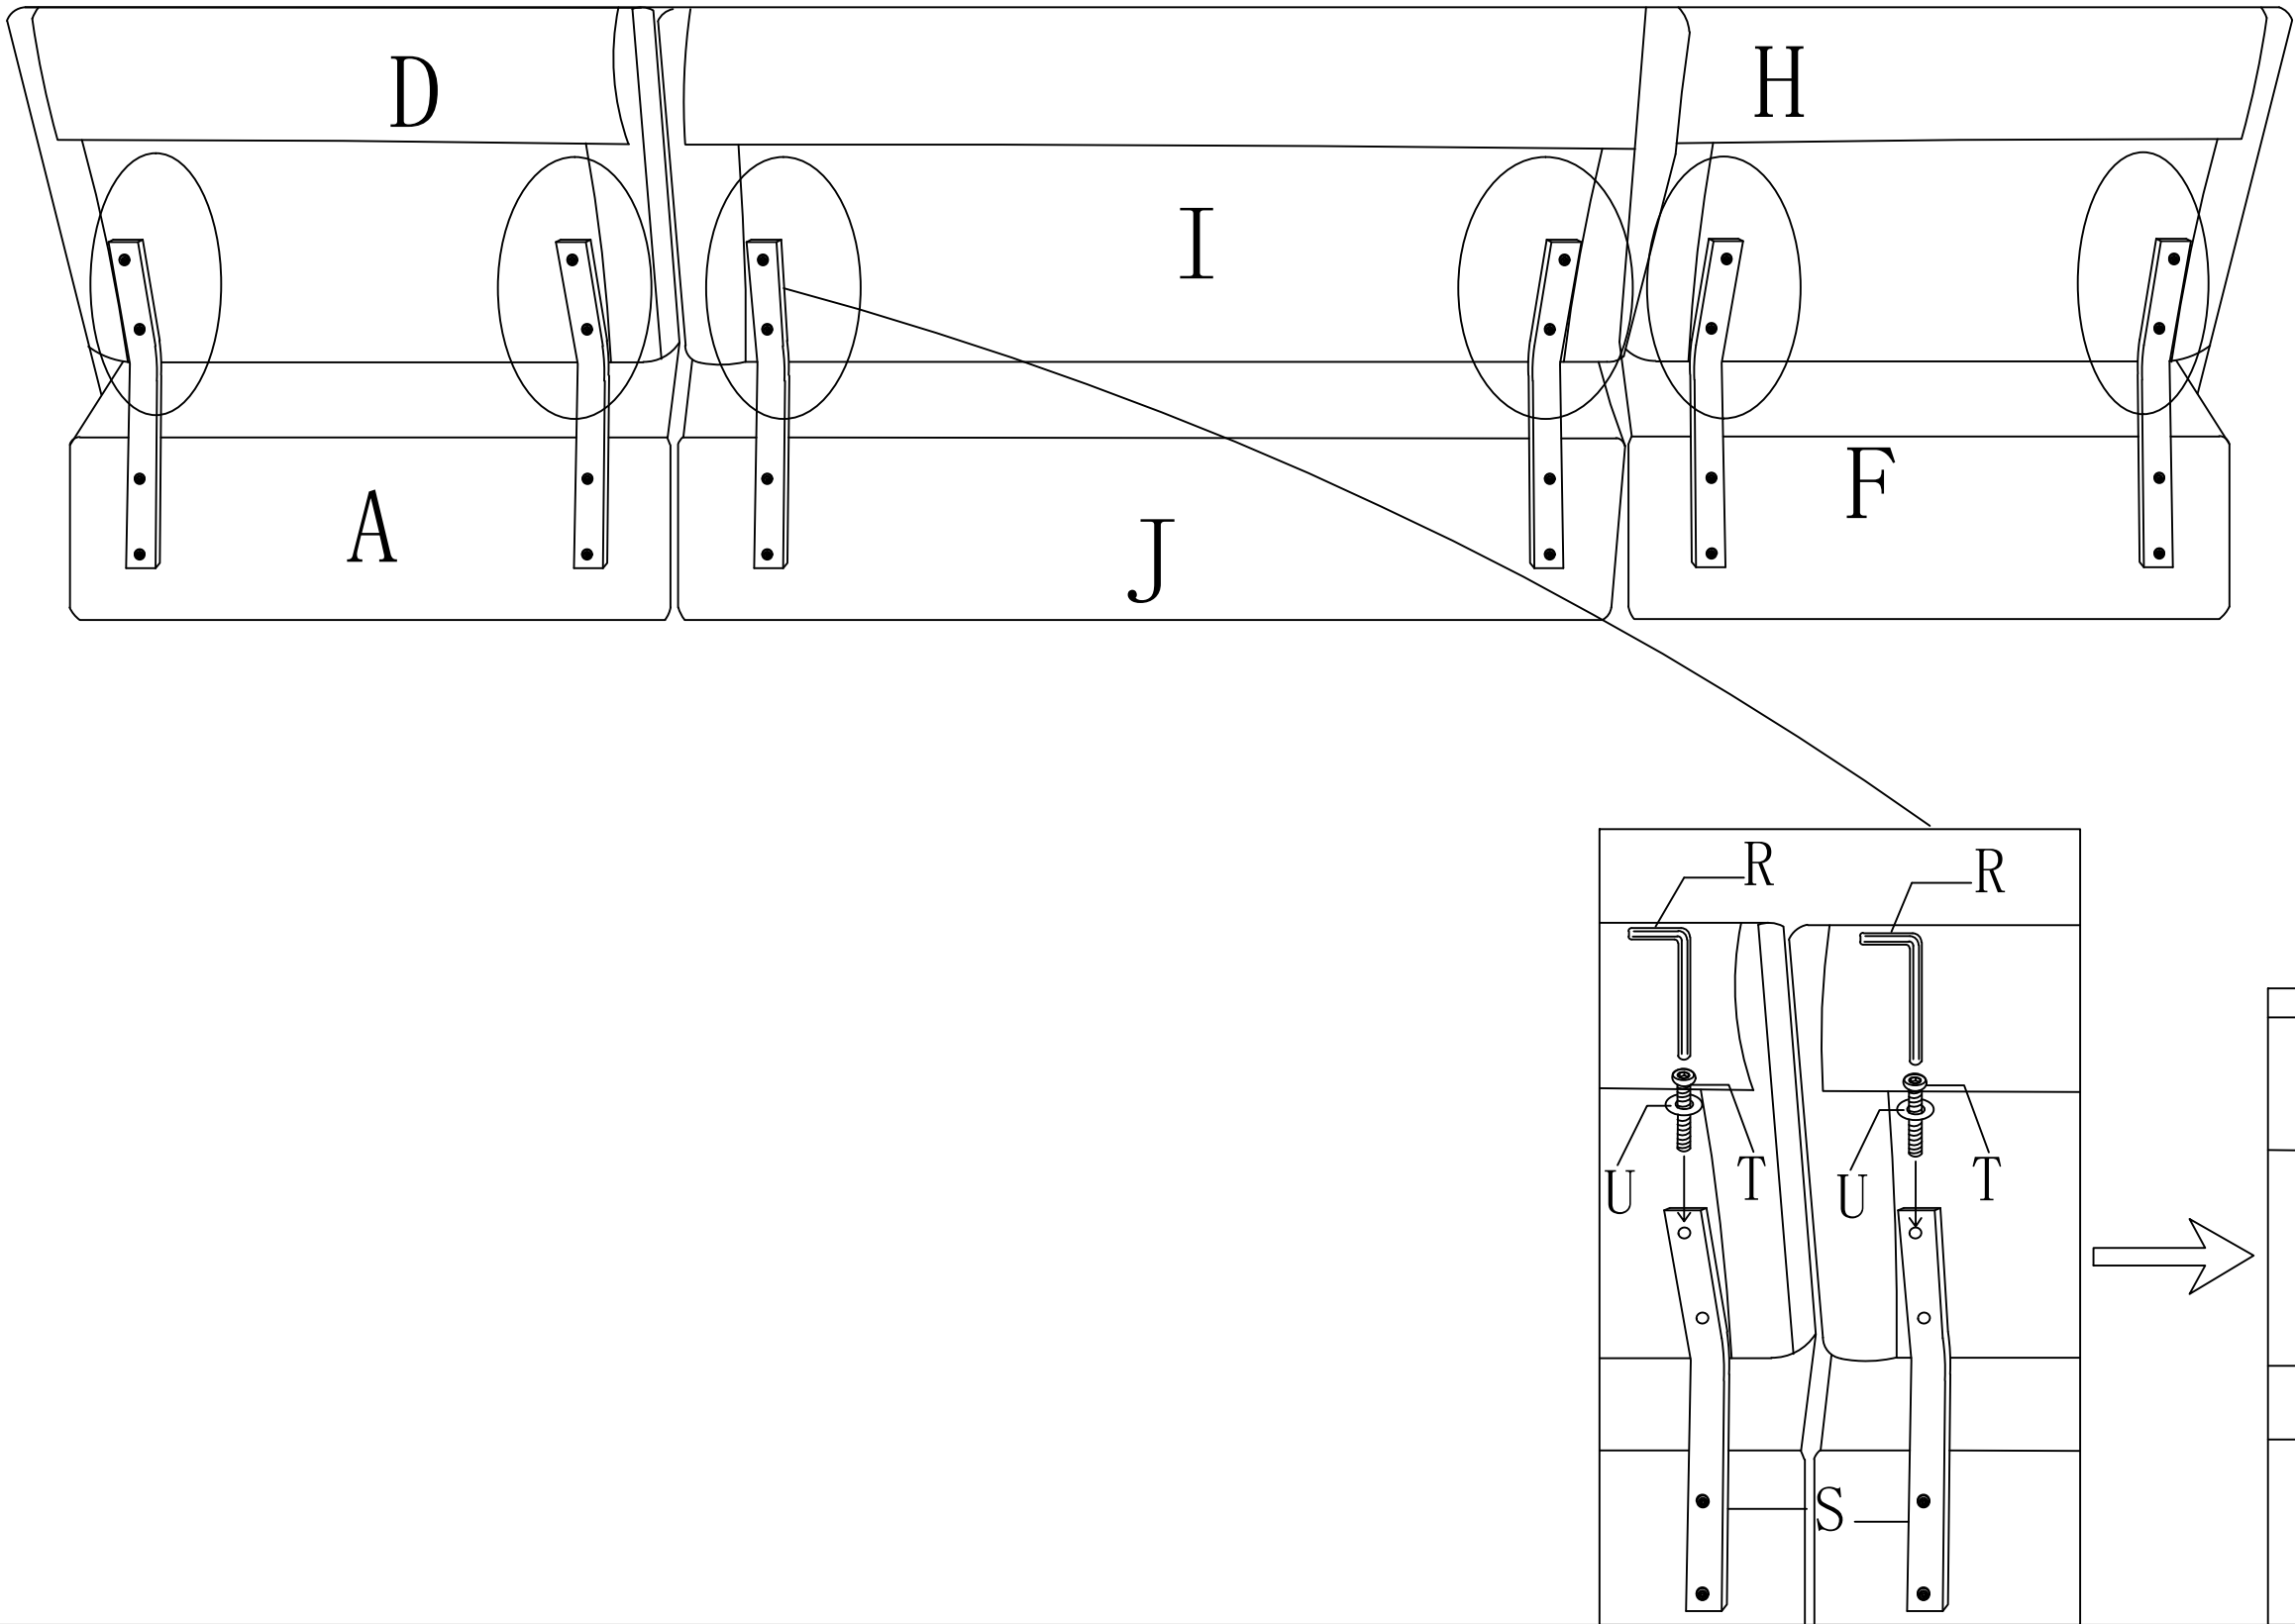


STEP 5:
Stick the Velcro on the back cloth of the sofa under the seat frame

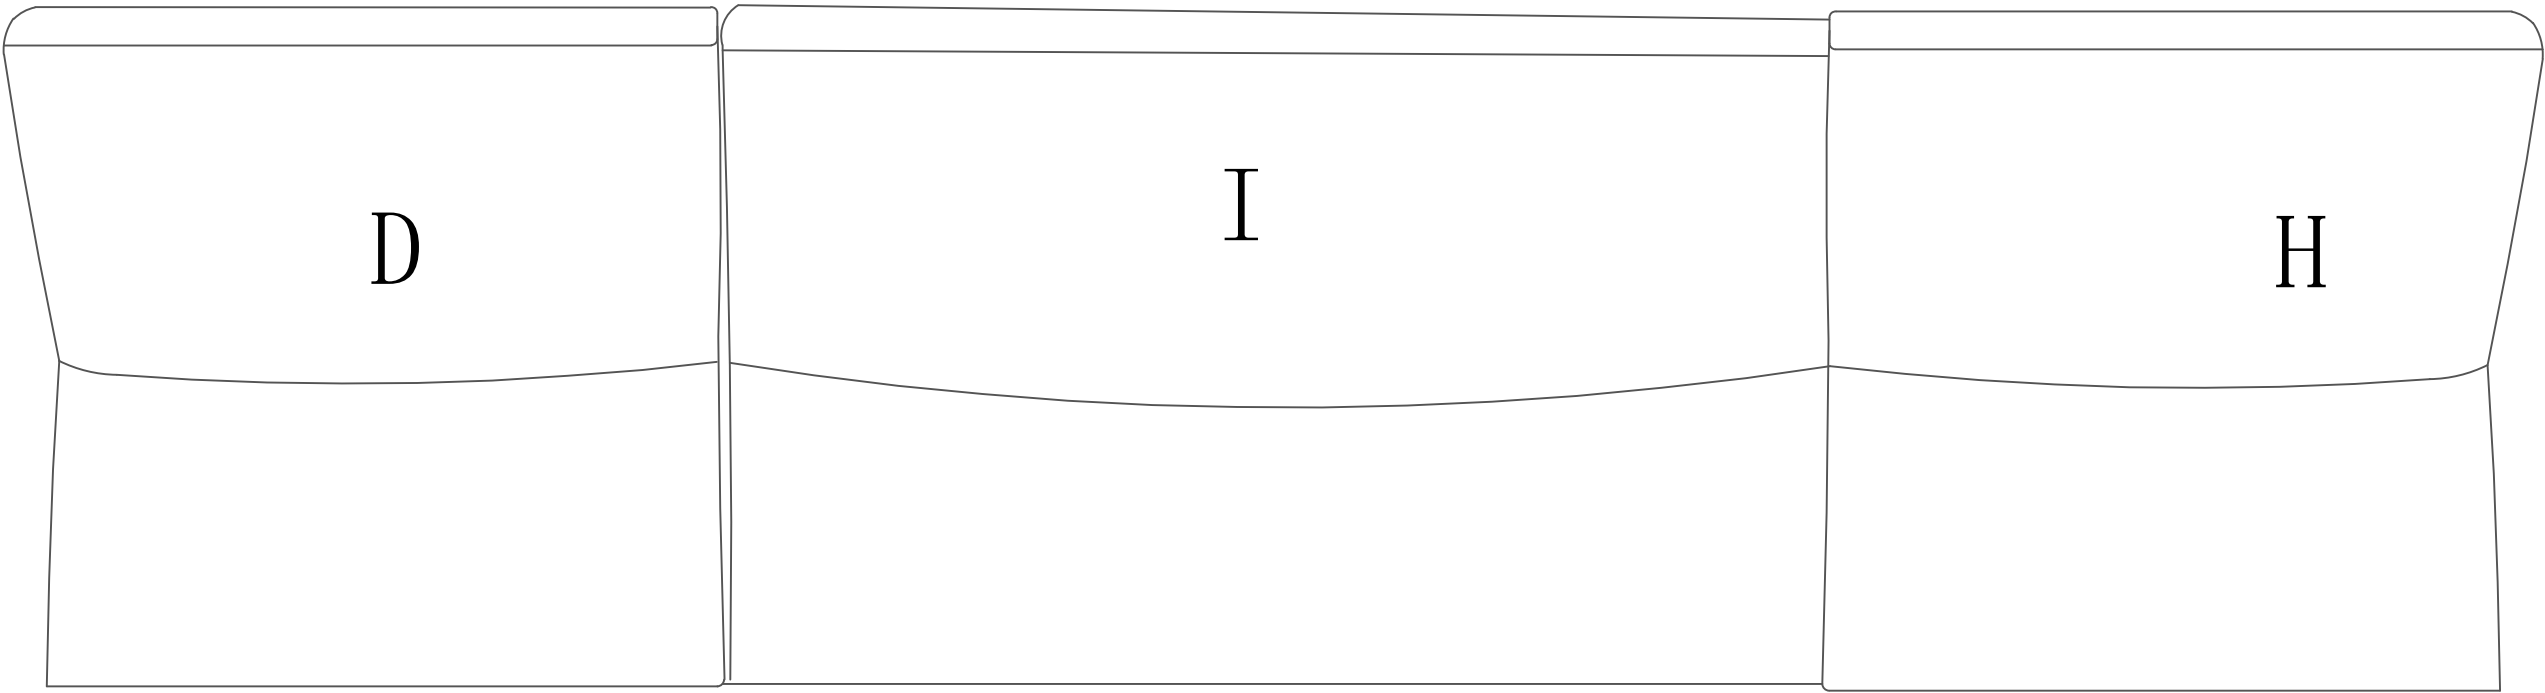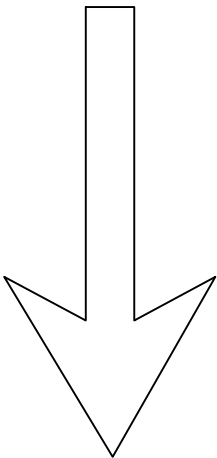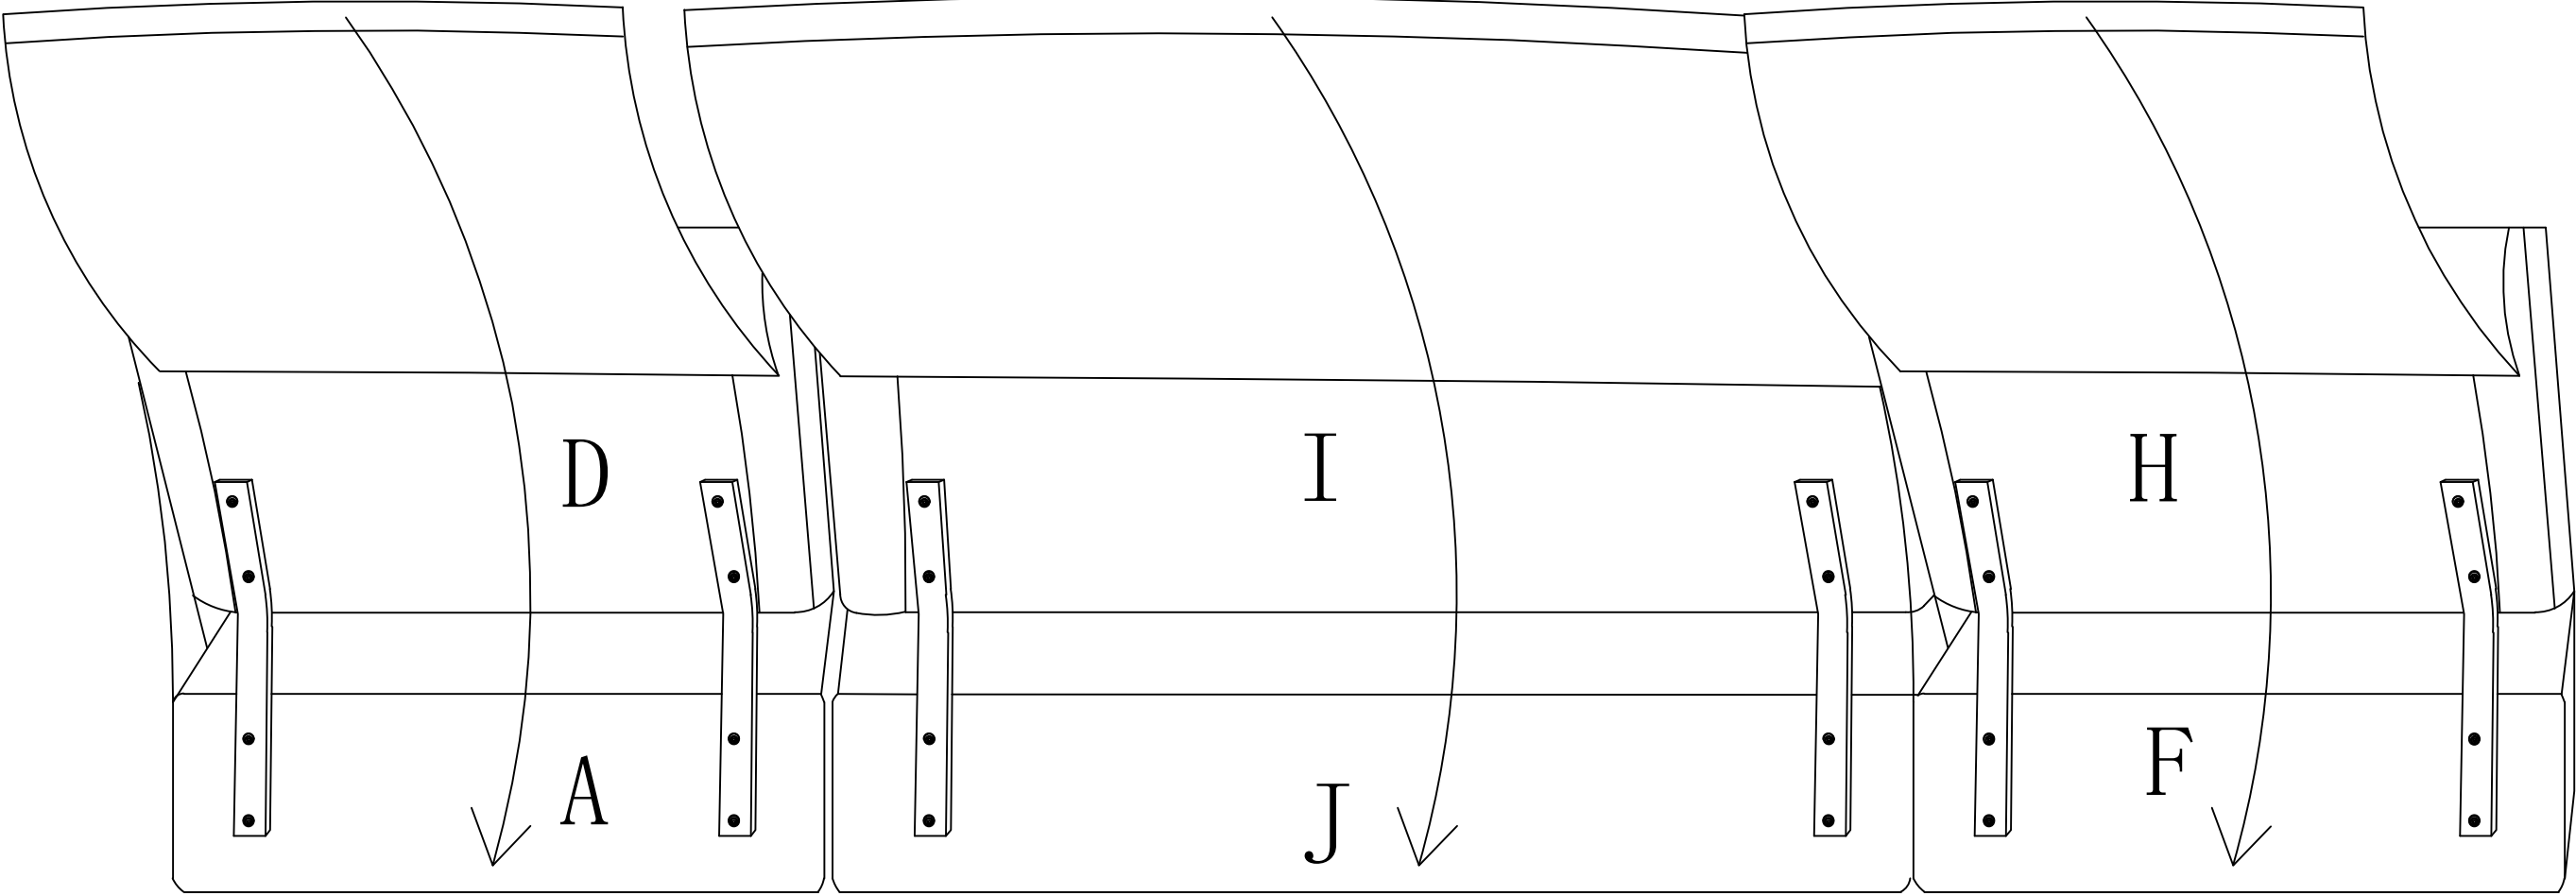

STEP 6:
Lock the backrest with the metal plate

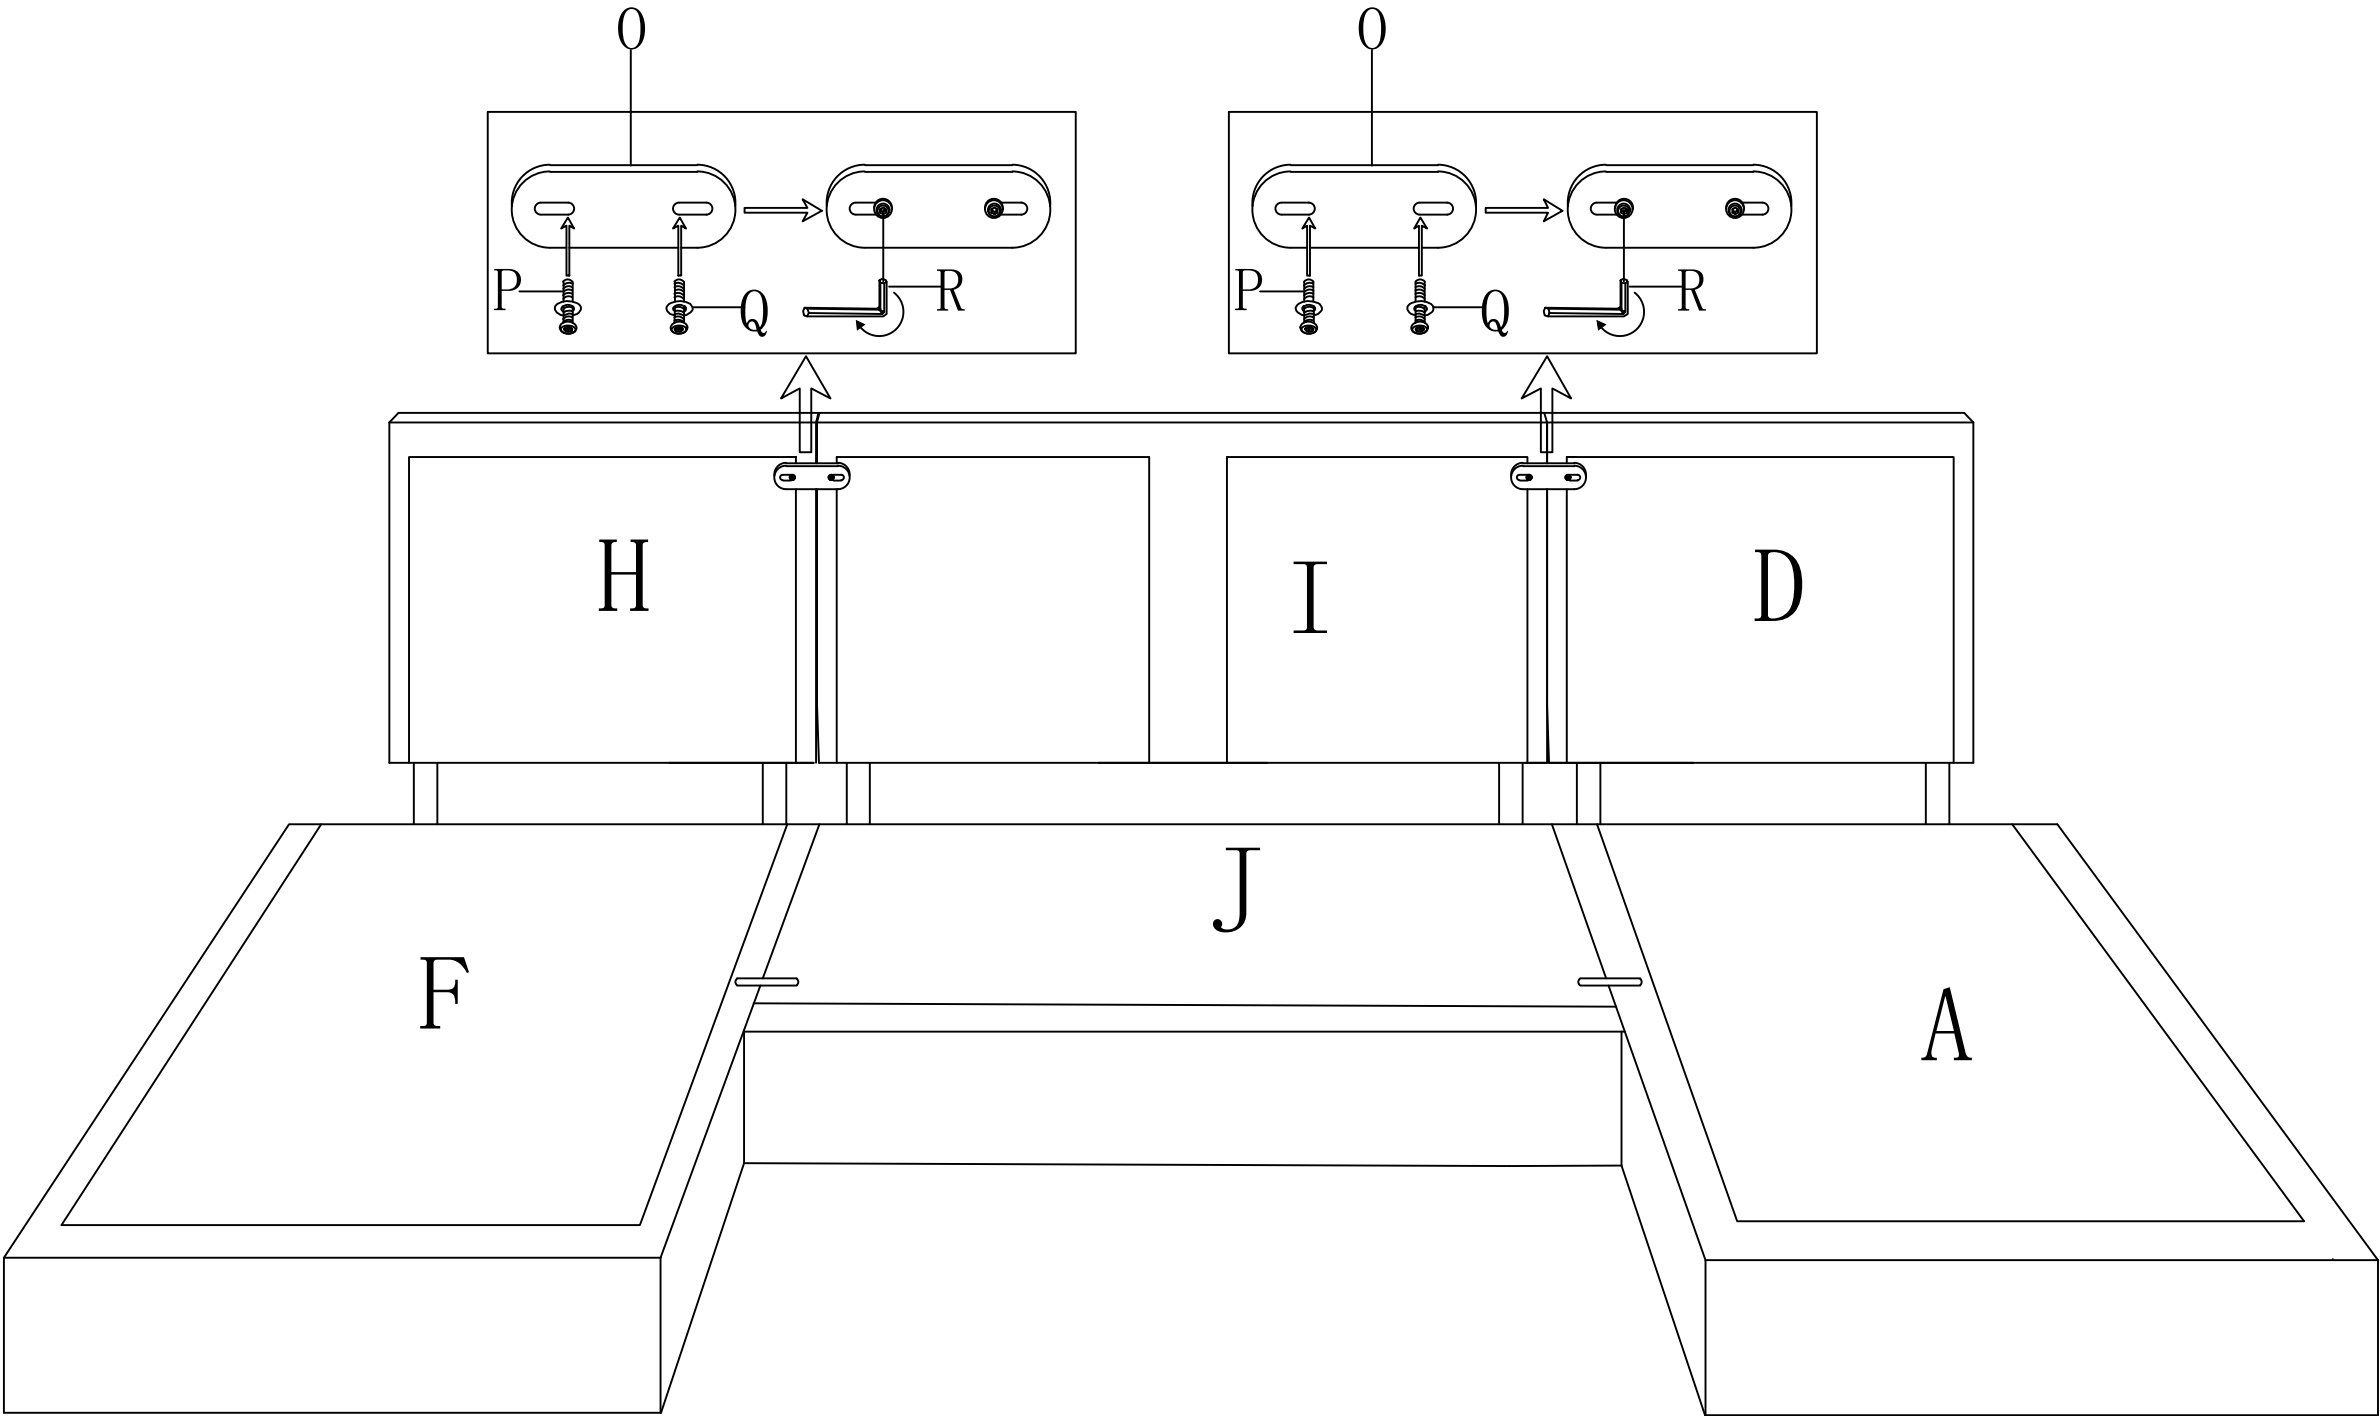


STEP 7:
Install the 12 legs under the seat frame

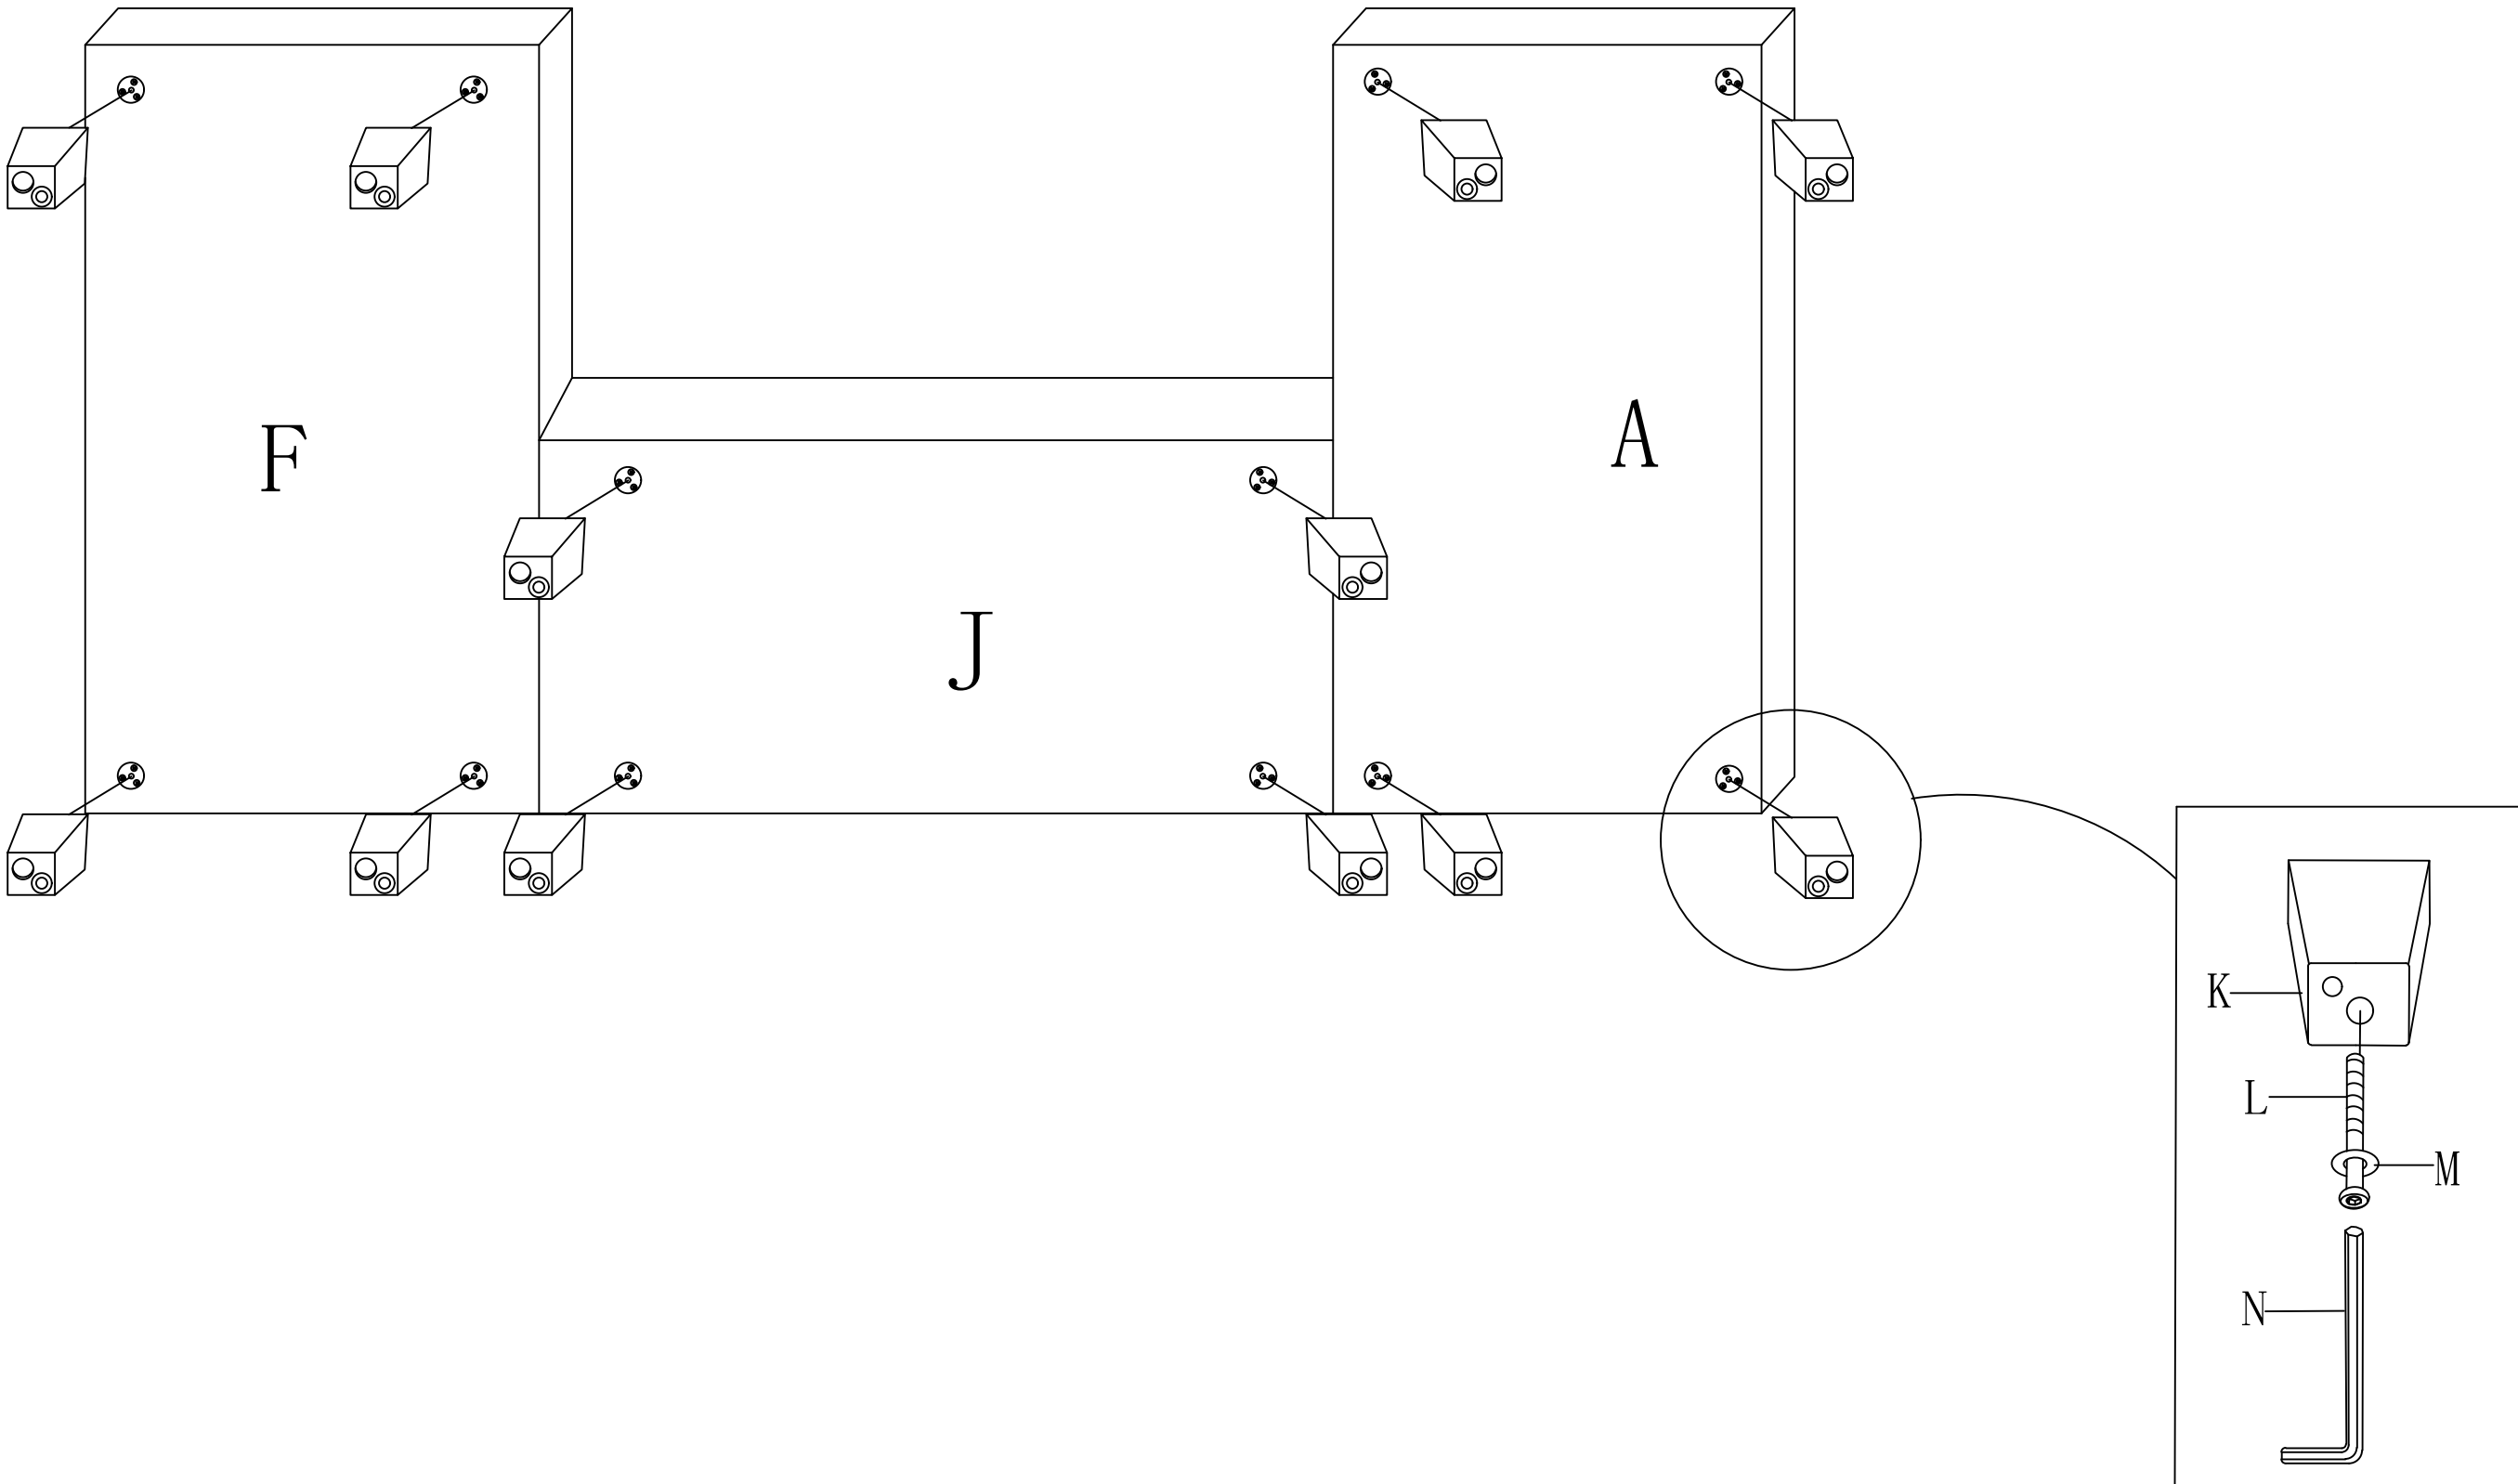


STEP 8:


Open the compression bags with the scissor(Notice: if you don' t like the sofa assembled and want to return it, please don' t open the compression bags, it' s hard to pack back, thanks)

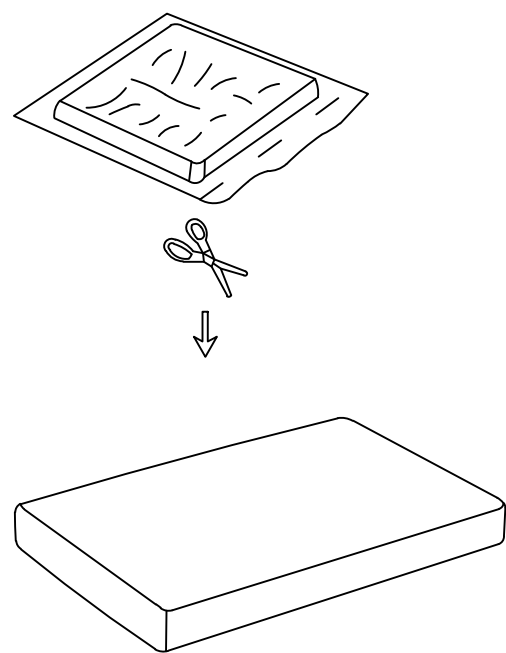


Left seat frame*1

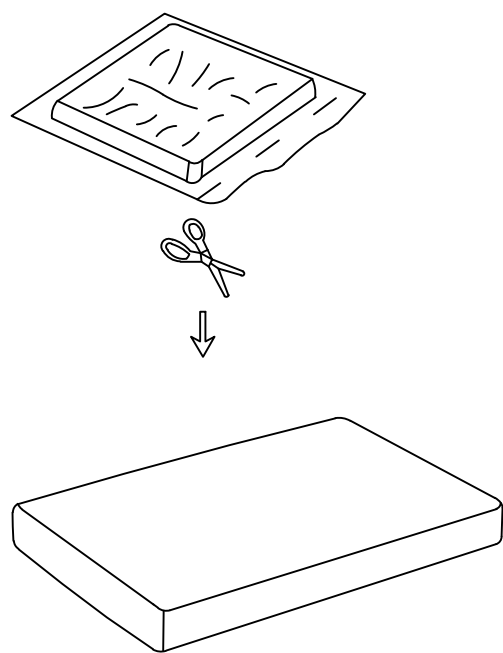

Right seat frame*1

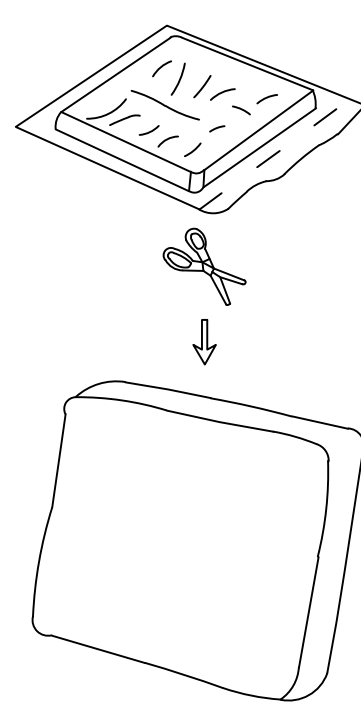


Seat cushion*2

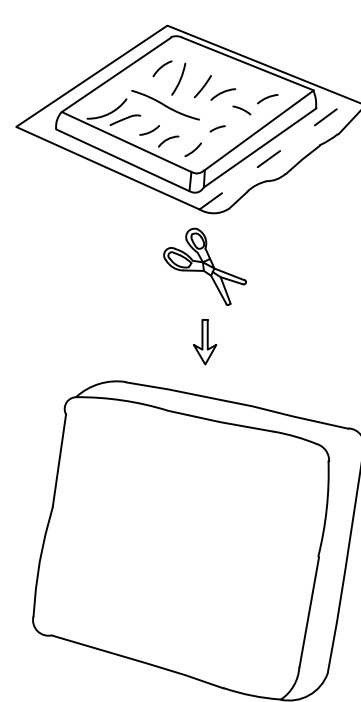

Back Cushion*4

STEP 9:

Zip the armrest pillows to the armrest

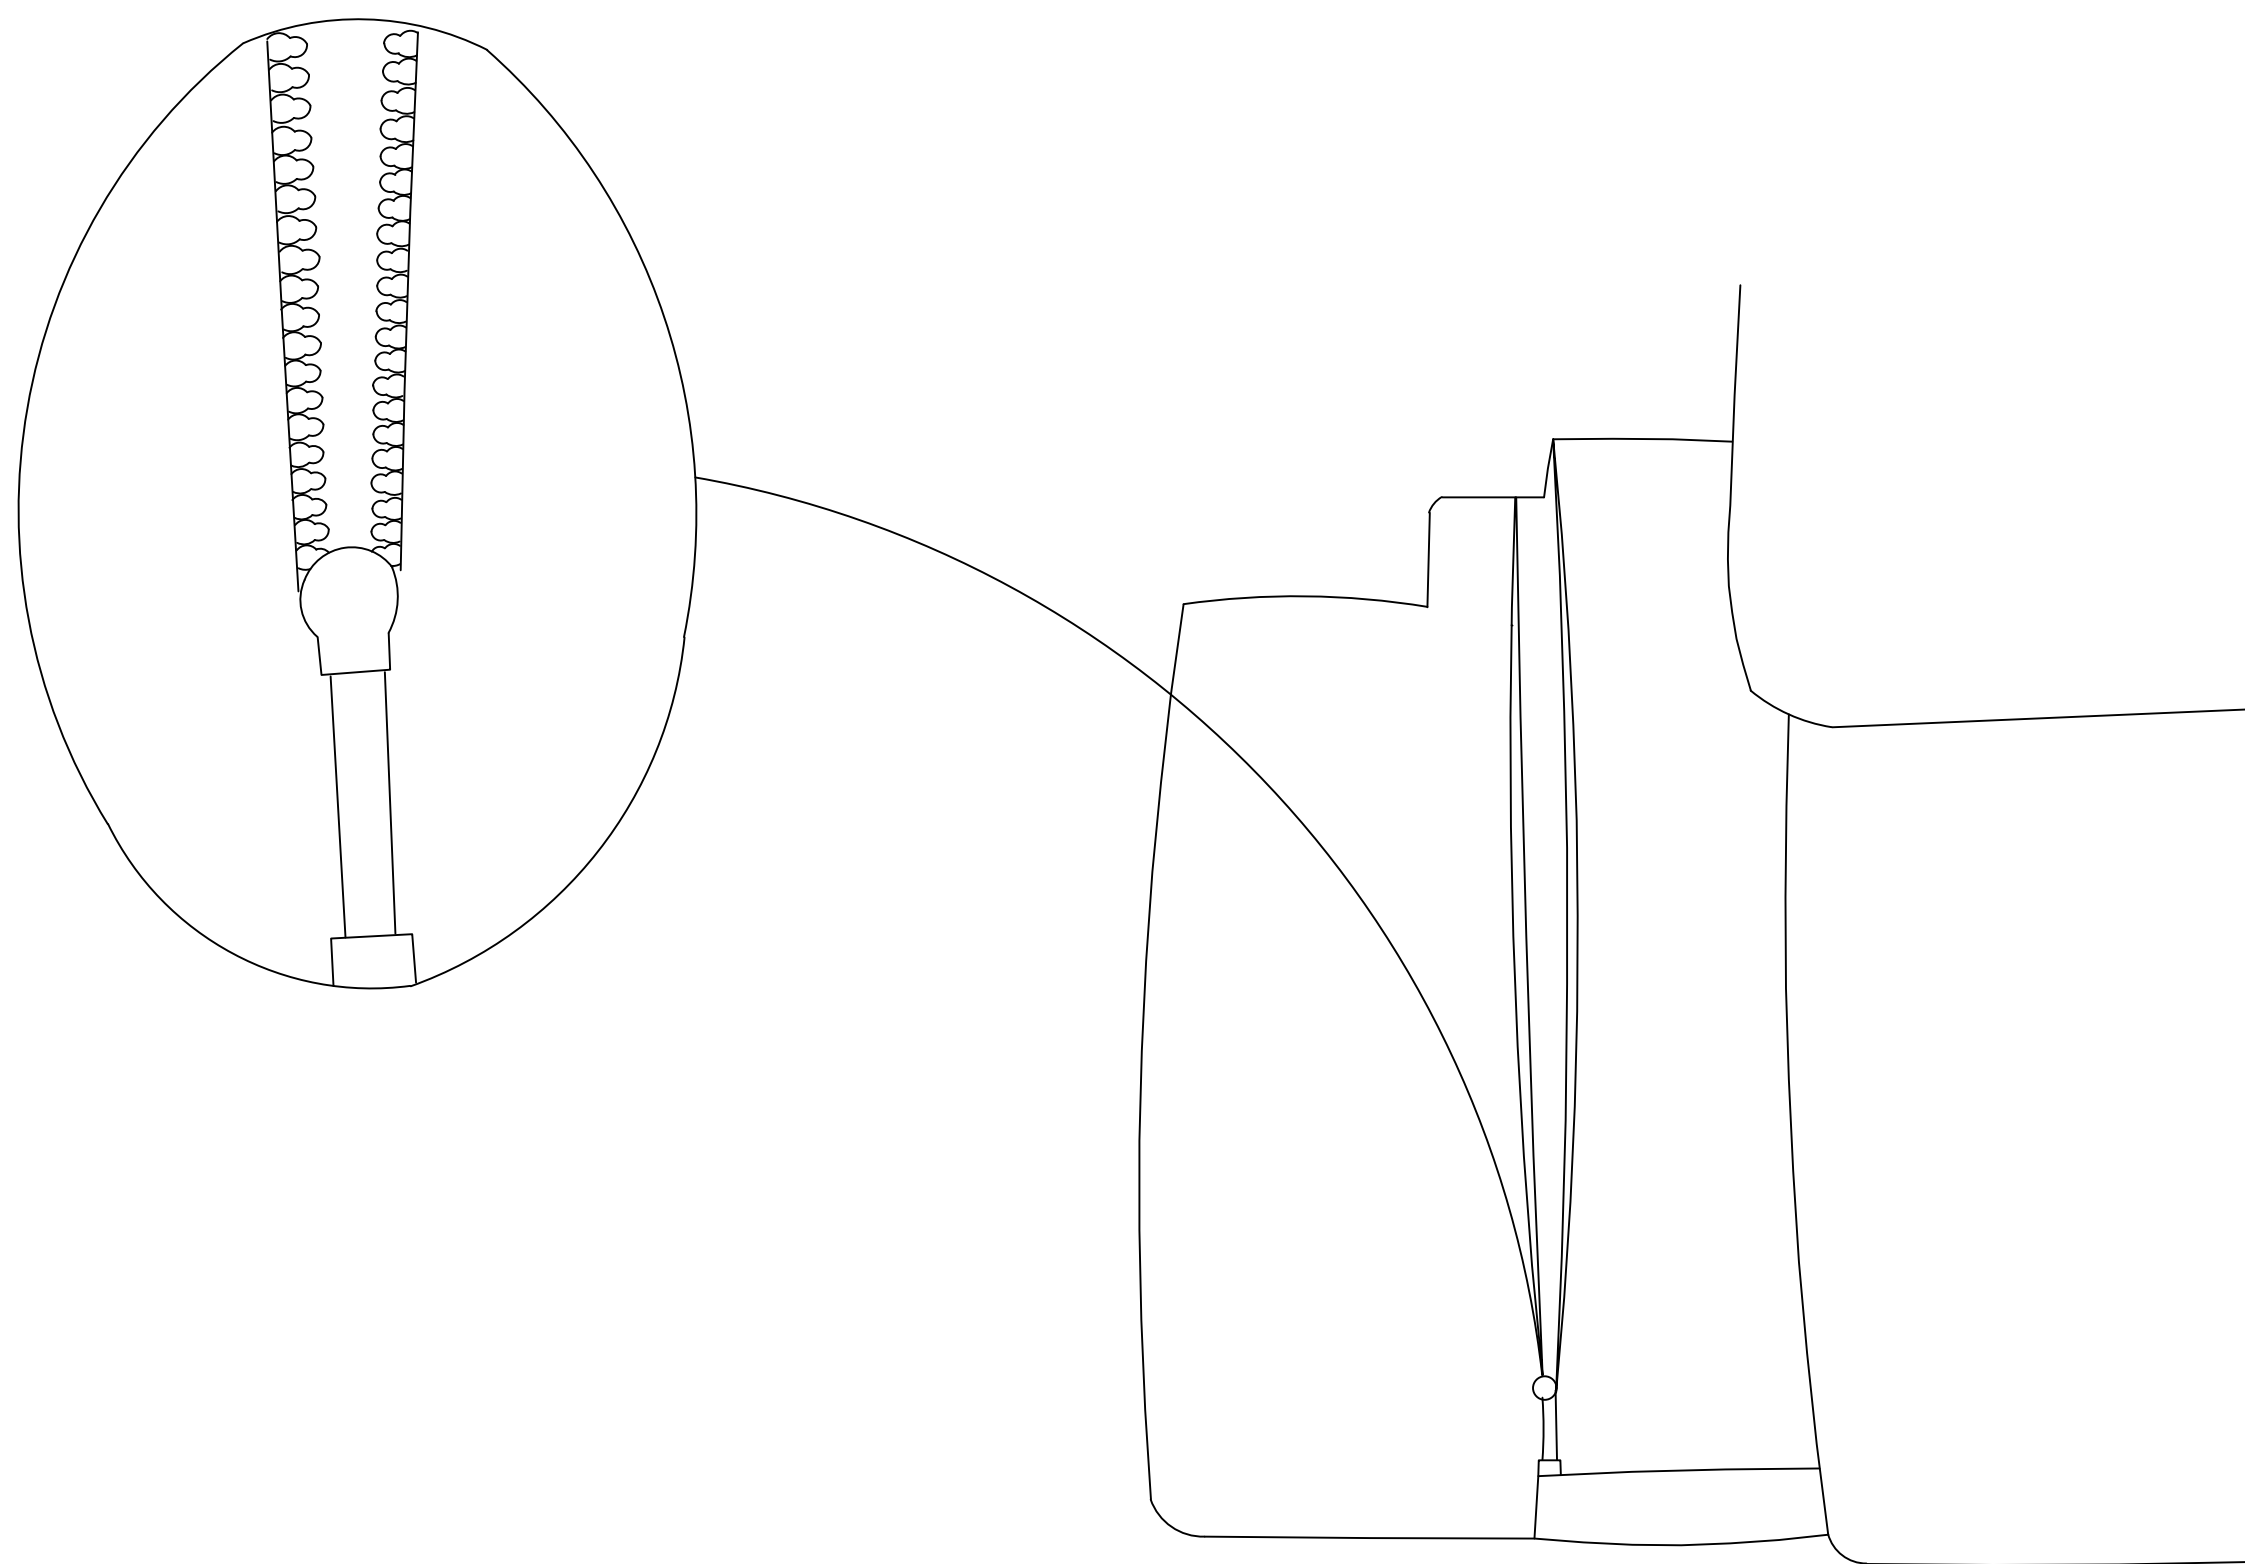

STEP 10:
Assembly completed

