


Out-of-Plumb: ▶▶

Your walls are Out-of-Plumb if the side walls of the shower enclosure are not vertically level and lean or bow in any direction.

Plumb vs Out-of-Plumb: ▶▶

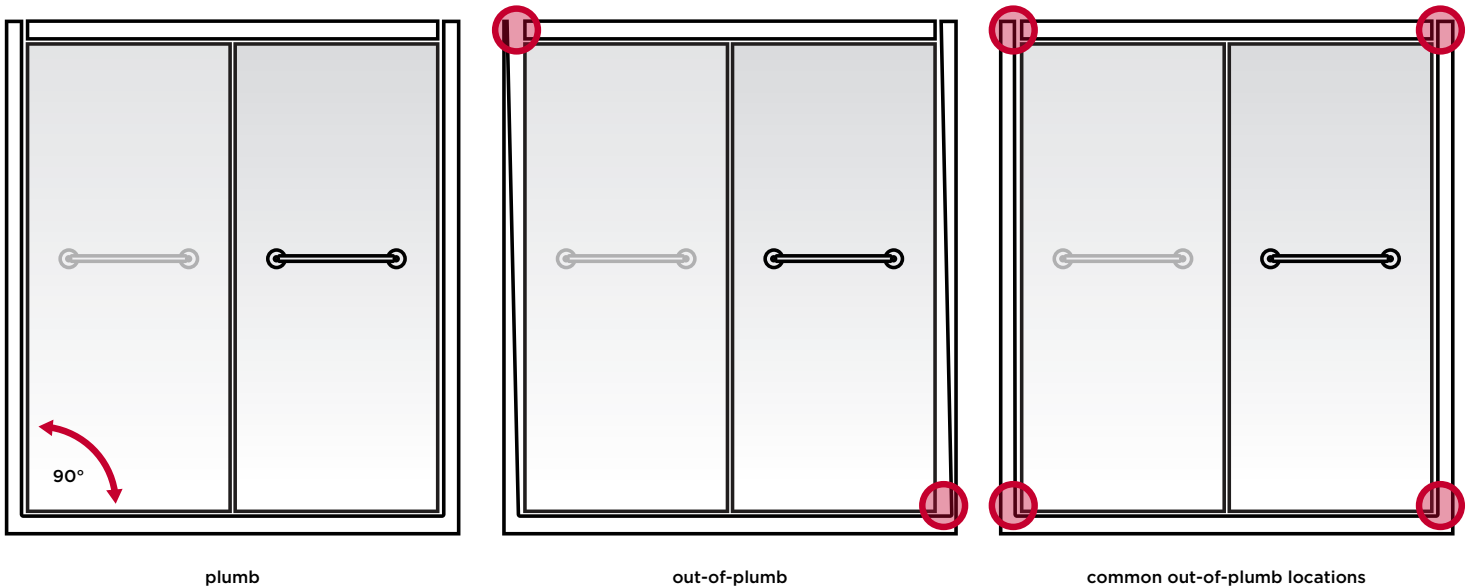

Most **Delta Shower Doors** are designed to accommodate out-of-plumb conditions up to 3/8". If needed for proper alignment, each roller can be individually adjusted from inside the shower enclosure. Always follow the safety guidelines, and for more detailed instructions, refer to installation guide or contact our Delta Shower Doors Customer Care with questions 800-964-4850.

