


YMX-03

1seater



Seat frame with
armrest (1)



Backrest (1)



Back cushion (1)



Sofa foot (4)

A

B



6*25 Screw (8)

C







M4*65*23 Wrench (1)

D




18*18mm Gasket (8)

STEP 1: Turn over the sofa base and
install the sofa feet

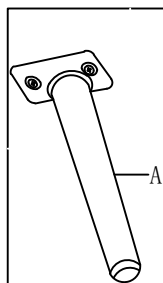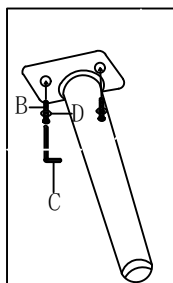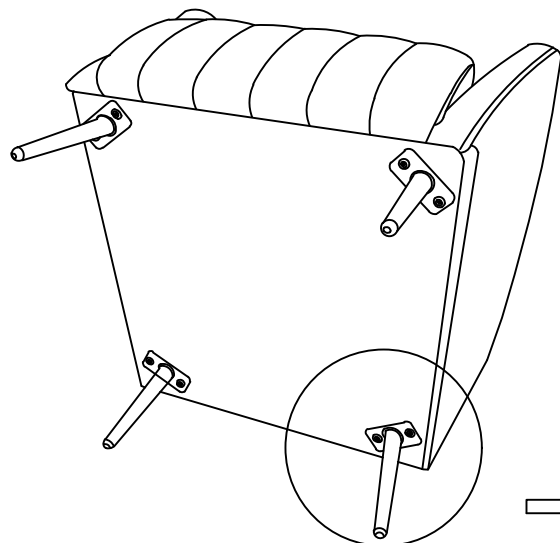

STEP 2: Insert the backrest into the
seat frame with armrest

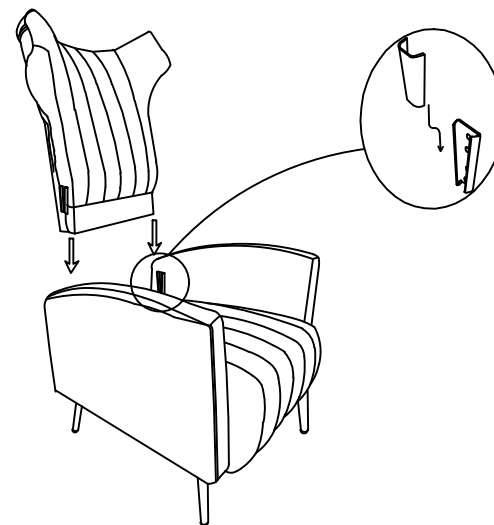

STEP 3: Assembly completed

