



# CUCULIDAE

CEILING FAN

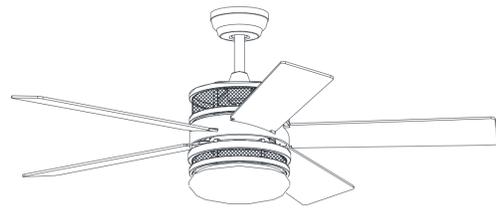

## 52-INCH DEROCATE CEILING FAN USE AND CARE GUIDE


### Installation of the hanging bracket

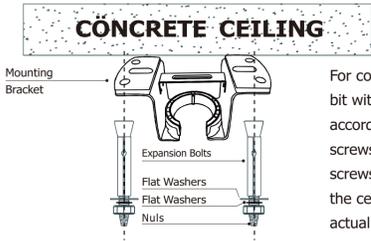

For concrete ceiling, use the percussion bit with diameter 8mm to drill holes according to the length of expansion screws. Then use the attached expansion screws to fix the hanging bracket onto the ceiling (selection is made according to actual requirements of the customers).

**STEP 1 A-CONCRETE CEILING**  
SWITCH OFF THE ELECTRICAL MAINS AT THE CIRCUIT BREAKER FUSE BOX.  
1) Use the Mounting Bracket as a guide, mark the spots where the 4 Expansion Bolts will be drilled.  
2) Remove the Mounting Bracket, drill 2 holes and insert 2 Expansion Bolts into the concrete ceiling, install the mounting bracket and secure with Flat Washers, Spring Washers and Nuts.


**IMPORTANT : SCREWS & NUTS MUST BE TIGHTENED TILL SNUG**

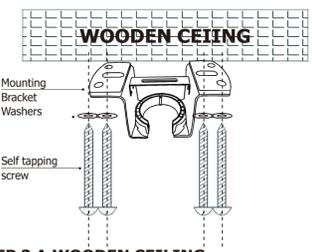

For wooden ceiling, use wood screw to drill on the wooden beam or the "junction box" to fix the hanging bracket(selection is made according to actual requirements of the customers)

**STEP 2 A-WOODEN CEILING**  
SWITCH OFF THE ELECTRICAL MAINS AT THE CIRCUIT BREAKER FUSE BOX.  
1) Use the Mounting Bracket as a guide, mark the spots where the 4 Self Tapping Screws will be drilled.  
2) Remove the Mounting Bracket, drill 4 holes for 3MM diameter, install the mounting bracket onto wooden ceiling with the 4 Self Tapping Screws & Washers

### Pre-Installation

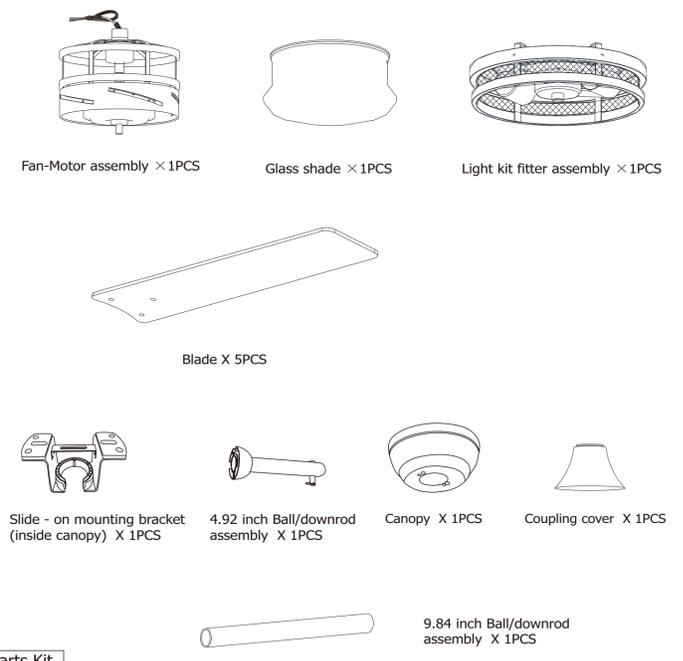

**Parts Kit**

<b>AA</b> Mounting screws ×4	<b>BB</b> Expansion bolts ×2	<b>CC</b> Plastic wire nut (not to scale) ×3	<b>DD</b> Blade attachment screw ×16	<b>EE</b> Paper Washers ×16
<b>FF</b> blade arm screw and lock washer ×1	<b>GG</b> Balance sheet ×2	<b>HH</b> Balance the clip ×1	<b>LL</b> Shade attachment screw ×6	

**NOTE** Hardware not shown to actual size.

### Fastening the blade arms to the motor

**DD** Blade attachment screw ×16  
**EE** Paper Washers ×16  
**D** Blade X 5PCS

Phillips screwdriver

**EE**  
**DD**

- Attach a blade to the fan motor housing by first inserting the blade into the slot in the side of the fan motor housing.
- Insert a screw into the bracket. Repeat for the two remaining screws.
- Tighten each screw securely.
- Repeat these steps for the remaining blades.

**Finish**

### Assembly-Attaching the Lights

**Light kit screw** ×3PCS (unscrew form motor)  
**Motor kit**: White ×3PCS, Blue ×3PCS  
**Light kit**: White, Blue

- Insert the "white" line in the switching box of the motor into the "white" line of the light and tie insulated rubber tape.
- Insert the "blue" line in the switching box of the motor into the "blue" line of the light and tie insulated rubber tape.

**LL** Shade attachment screw ×6

- Screw the glass lampshade into the lamp assembly
- Note that a screwdriver cannot be used here

### Install downrod assembly

- Carefully feed the motor wires up through the downrod
- Align the holes and replace hanger pin and locking pin.
- Tighten the two collar setscrews.
- Slip coupling cover, canopy cover and canopy onto the downrod.

### Hang the fan

- Lift the fan motor assembly up to the mounting bracket and seat the hanger ball in the mounting bracket socket. Rotate the fan motor assembly until the check groove drops into the registration slot and seats firmly. The downrod should not rotate if this is done correctly

### Install canopy

- Ensure the loosened screws is inserted into the key holes on the mounting bracket.
- Carefully raise the canopy up to the mounting bracket. Rotate the canopy clockwise.
- Secure the canopy by replacing the screws previously removed and tightening the screw previously loosened
- Place the canopy cover (if applicable) and rotate the canopy cover clockwise until it locks into position.

### Making the electrical connections

**WARNING** Each wire not supplied with this fan is designed to accept up to one 12-gauge house wire and two wires from the fan. If you have larger than 12-gauge house wiring or more than one house wire to connect to the fan wiring, consult an electrician for the proper size wire nuts to use.

**IMPORTANT**: Use the plastic wire connectors(BB) supplied with your fan. Secure the connectors with electrical tape and ensure there are no loose strands or connections.

**WARNING**: Remove the rubber motor stops on the bottom of the fan before installing the blades or testing the motor.

**IMPORTANT**: Use the plastic wire connectors(BB) supplied with your fan. Secure the connectors with electrical tape and ensure there are no loose strands or connections.

**From CEILING FAN**: BLACK, BLUE, WHITE  
**From controller**: BLACK, BLUE, WHITE  
**FOR AC IN L**: Black, White  
**FOR AC IN N**: White

**remote control(transmitter) X 1PCS** (R-T)  
**remote control(receiver) X 1PCS** (R-R)

**SWITCH OFF THE ELECTRICAL MAINS AT THE CIRCUIT BREAKER FUSE BOX**  
1) Connect wires from receiver to terminal block properly as instruction diagram

### Assembly - Hanging the Fan(continued)

**Preparing for mounting**

**Install remote control**

**Preparing for mounting**

- Carefully push the canopy to the bottom of the mounting bracket, make two sliding holes aligned to the two prominent screws on the mounting bracket, and then turn clockwise until tight.
- Push the canopy ring to the bottom of the canopy, slide the inner holes aligned to the two prominent screws on the mounting bracket again, and turn the canopy ring clockwise until tight.
- Remove the mounting bracket from the canopy by loosening the two canopy screws located in the L shaped slots
- Remove and save the two canopy screws in the round holes. This will enable you to remove the mounting bracket

### Use of remote control

Med Level  
Low Level  
Fan On/Off  
Auto off after 1hr-8hr

Hi Level  
LIGHT ON/OFF

**LOW** FanSpeed Low Level  
**MED** FanSpeed Middle Level  
**HI** FanSpeed High level  
**STOP** FanSTOP

**LIGHT ON/OFF** LIGHT NO/OFF

**1H** Auto off after 1hr  
**2H** Auto off after 2hr  
**4H** Auto off after 4hr  
**8H** Auto off after 8hr

Y52DAC4004R-SN/FB