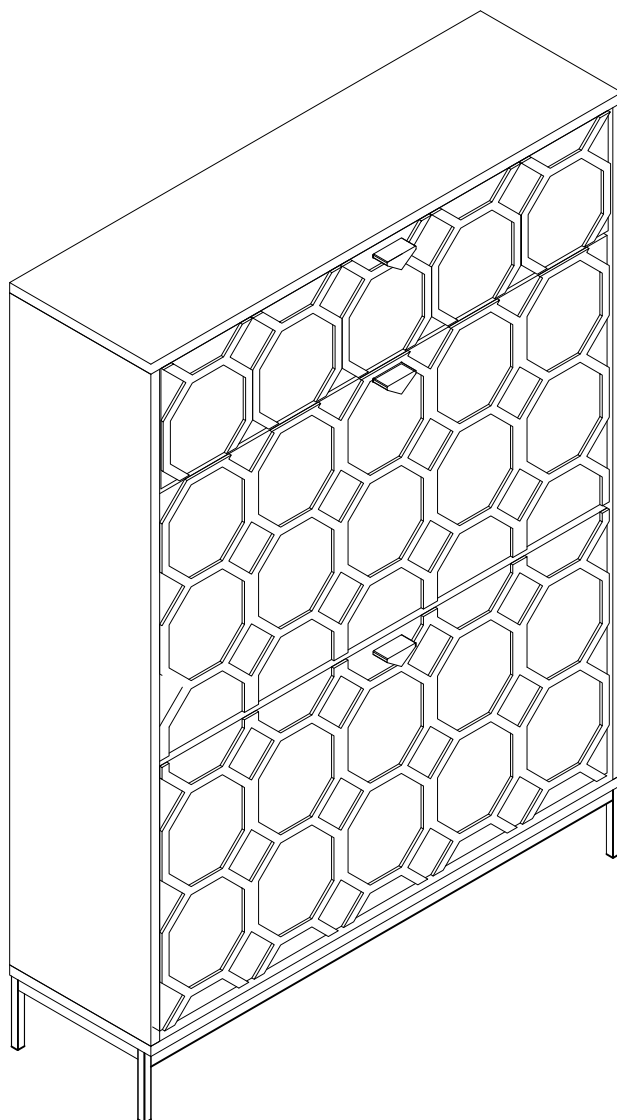


ASSEMBLY INSTRUCTIONS



It is normal for the sealed environment
to smell, not a product quality problem.

Phone number: 303-747-4421

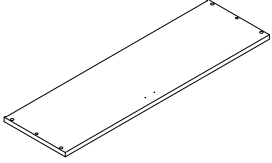
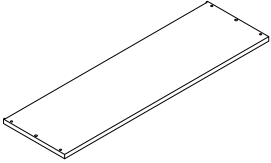
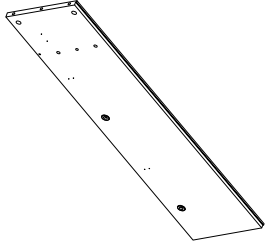
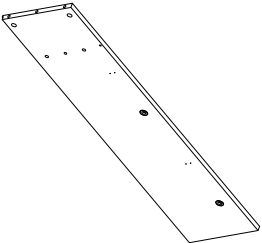
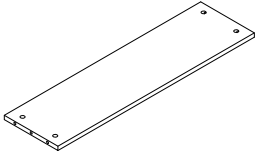
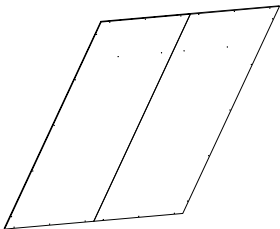
(951)213-4743

service@clihome.net

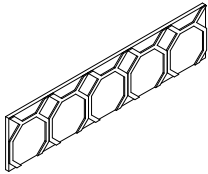
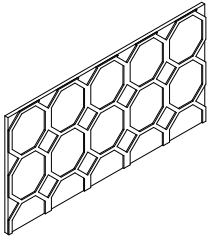
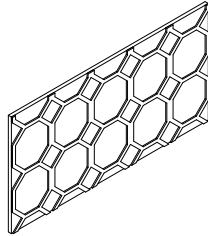
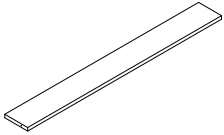
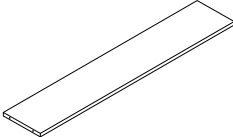
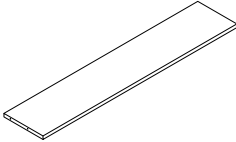
Web:www.clihome.net

ASSEMBLY INSTRUCTIONS

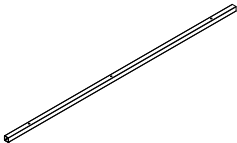
Part List:

ITEM	DESCRIPTION	PART	QTY
1	Top panel		1
2	Bottom panel		1
3	Left side panel		1
4	Right side panel		1
5	Shelf		1
6	Back panel		1


Part List:

ITEM	DESCRIPTION	PART	QTY
7	Upper door panel		1
8	Lower door panel		1
9	Lower door panel		1
10	Bottom lamination		2
11	Back lamination		2
12	Middle lamination		2

Part List:













ITEM	DESCRIPTION	PART	QTY
13	Metal Strip		2

Part List:















ITEM	DESCRIPTION	PART	QTY
14	Metal Leg		2

ASSEMBLY INSTRUCTION

Hardware List:

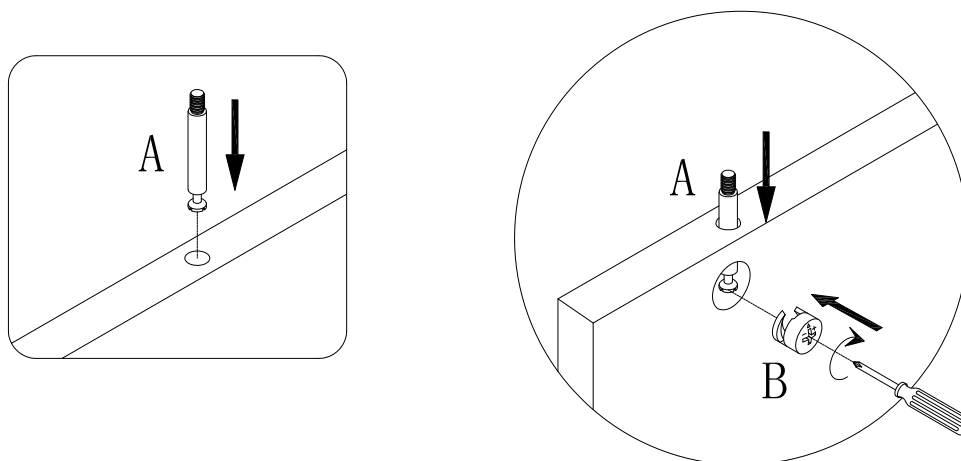
ITEM	DESCRIPTION	PART	QTY
A	Camlock bolt		8
B	Camlock		8
C	Wooden dowel	 Φ8*30mm	6
D	Bolt	 Φ1/4"*1 1/8"	8
E	Bolt	 Φ1/4"*1 1/2"	4
F	Allen wrench		1
G	Handle		3
H	Machine screw	 Φ5/32"*3/4"	6
I	Magnet		1
J	Wood screw	 Φ3*15mm	22
K	Wood screw	 Φ3*12mm	18
L	Left bracket		2

Hardware List:

ITEM	DESCRIPTION	PART	QTY
M	Right bracket		2
N	Screw button		4
O	Screw	 Φ4*10mm	4
P	Stopper		4
Q	Safety hinge		1
R	Left hinge		1
S	Right hinge		1
T	Back screw	 Φ3*12mm	26
U	Safety wall strap		2
V	Plastic anchor		2
W	Mounting screw	 Φ4*38mm	2
X	Washer		2
Y	Wood screw	 Φ3*12mm	4
Z	Wood screw	 Φ3*19mm	8

- * Required screwdriver & mallet, not included.
- * Before discarding packing materials, please check to make sure that all parts and hardware is present.
- * Two people needed for assembly.
- * Please follow the instructions closely; do not over tighten screws or bolts unless instructed.
- * After a few days from initial assembly, the product may have acclimated to the new environment. Please retighten the hardware.

Guideline For Assembling of Cam Lock(A & B)





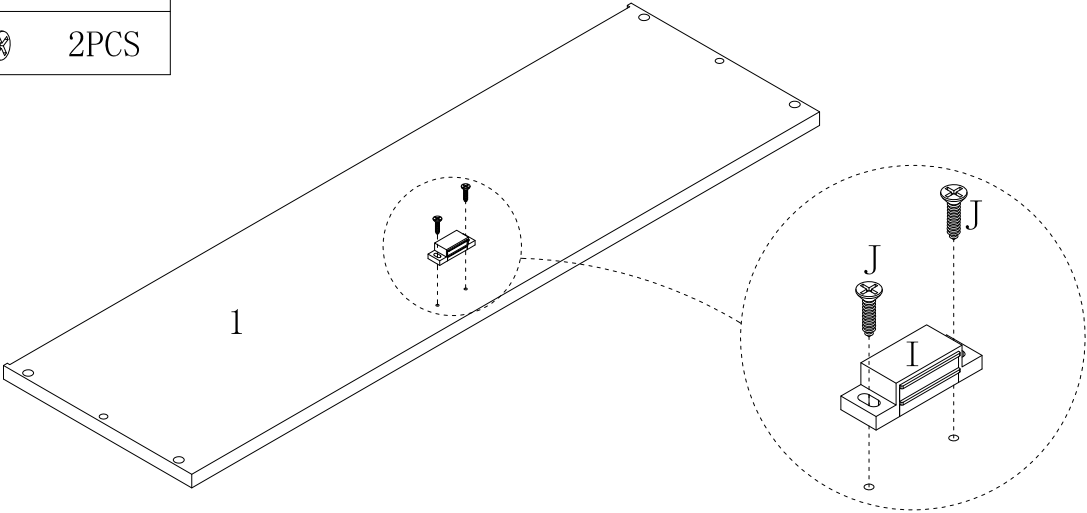
Screw camlock bolt (A) to wood part.

Do not assemble camlock (B) unless instructed.



To assemble camlock (B), ensure long side of the + is facing the bolt (A) before inserting into hole.

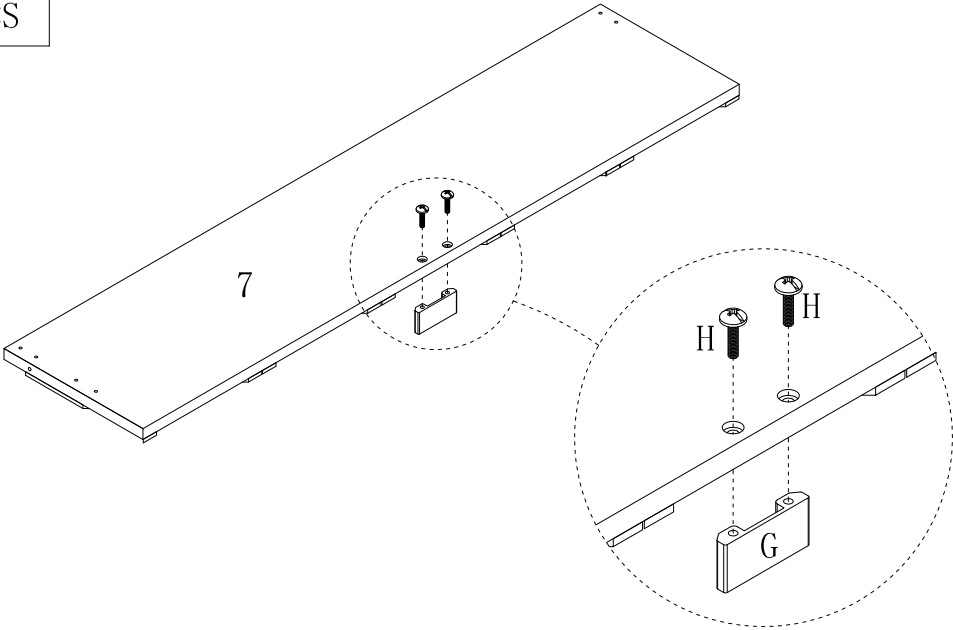
STEP 1

I:		1PC
J:		2PCS









STEP 2

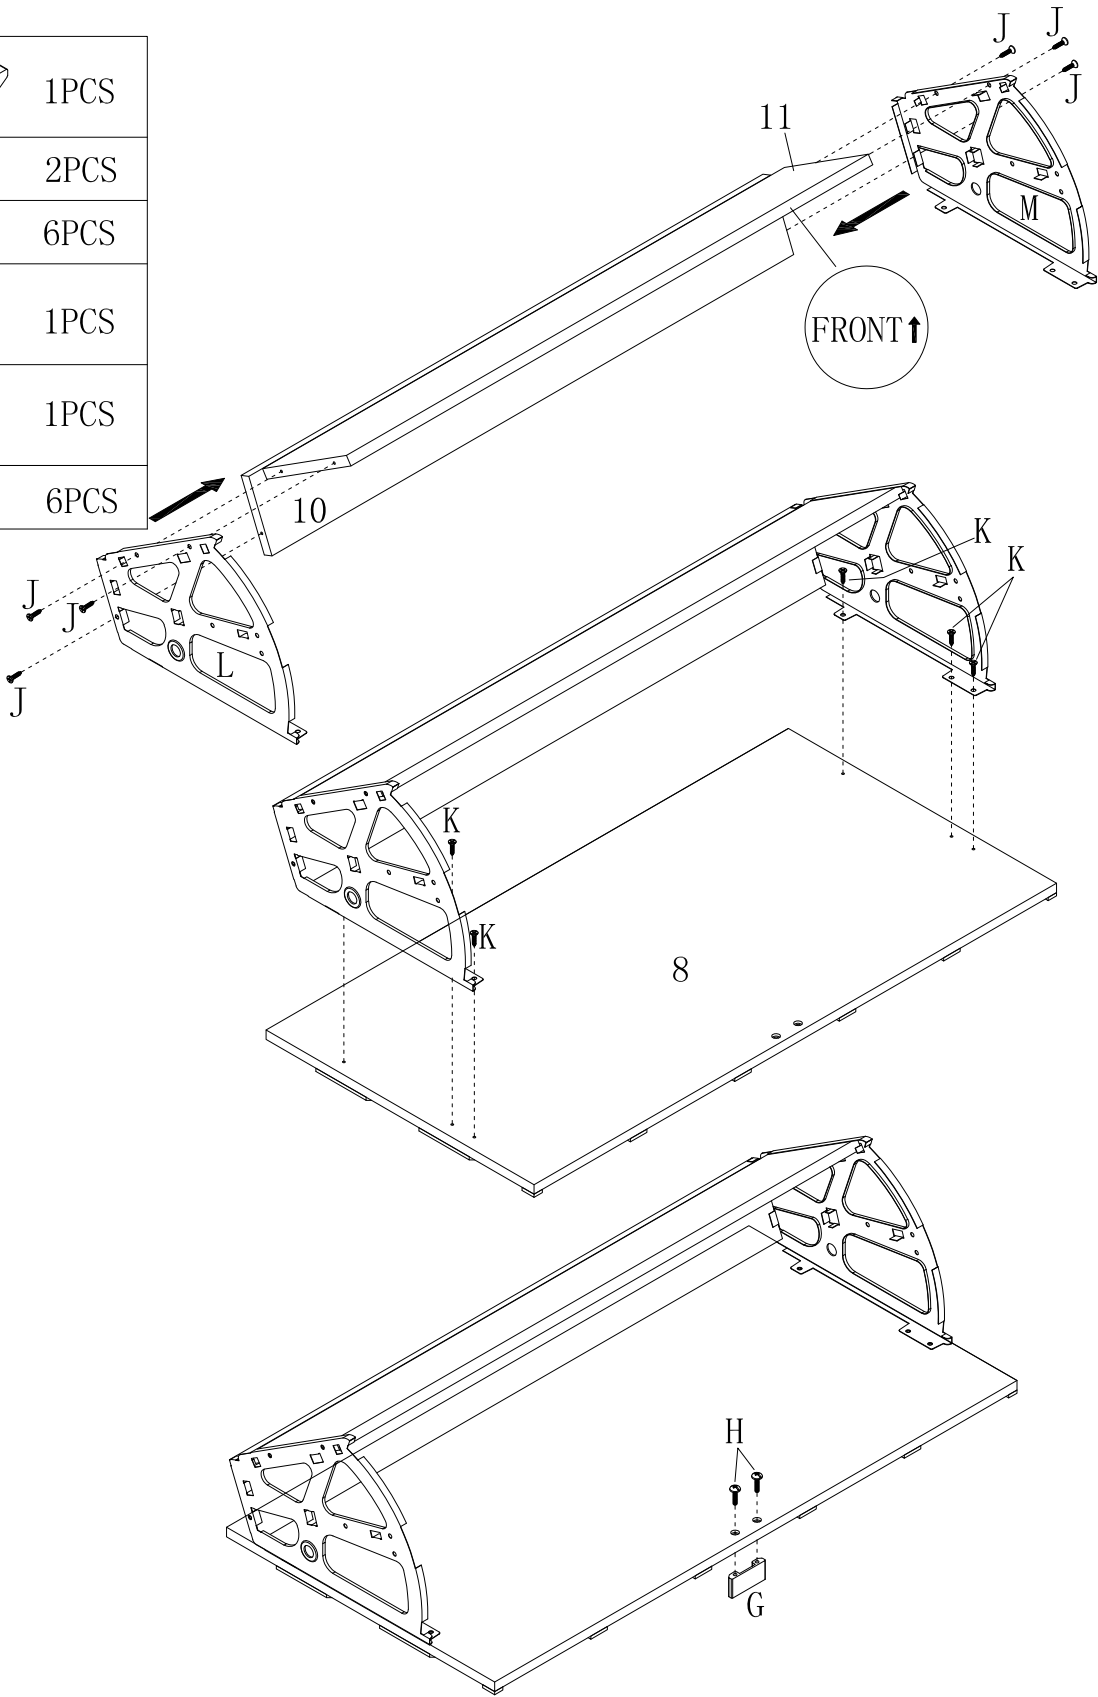
G:		1PC
H:		2PCS



ASSEMBLY INSTRUCTION







STEP 3

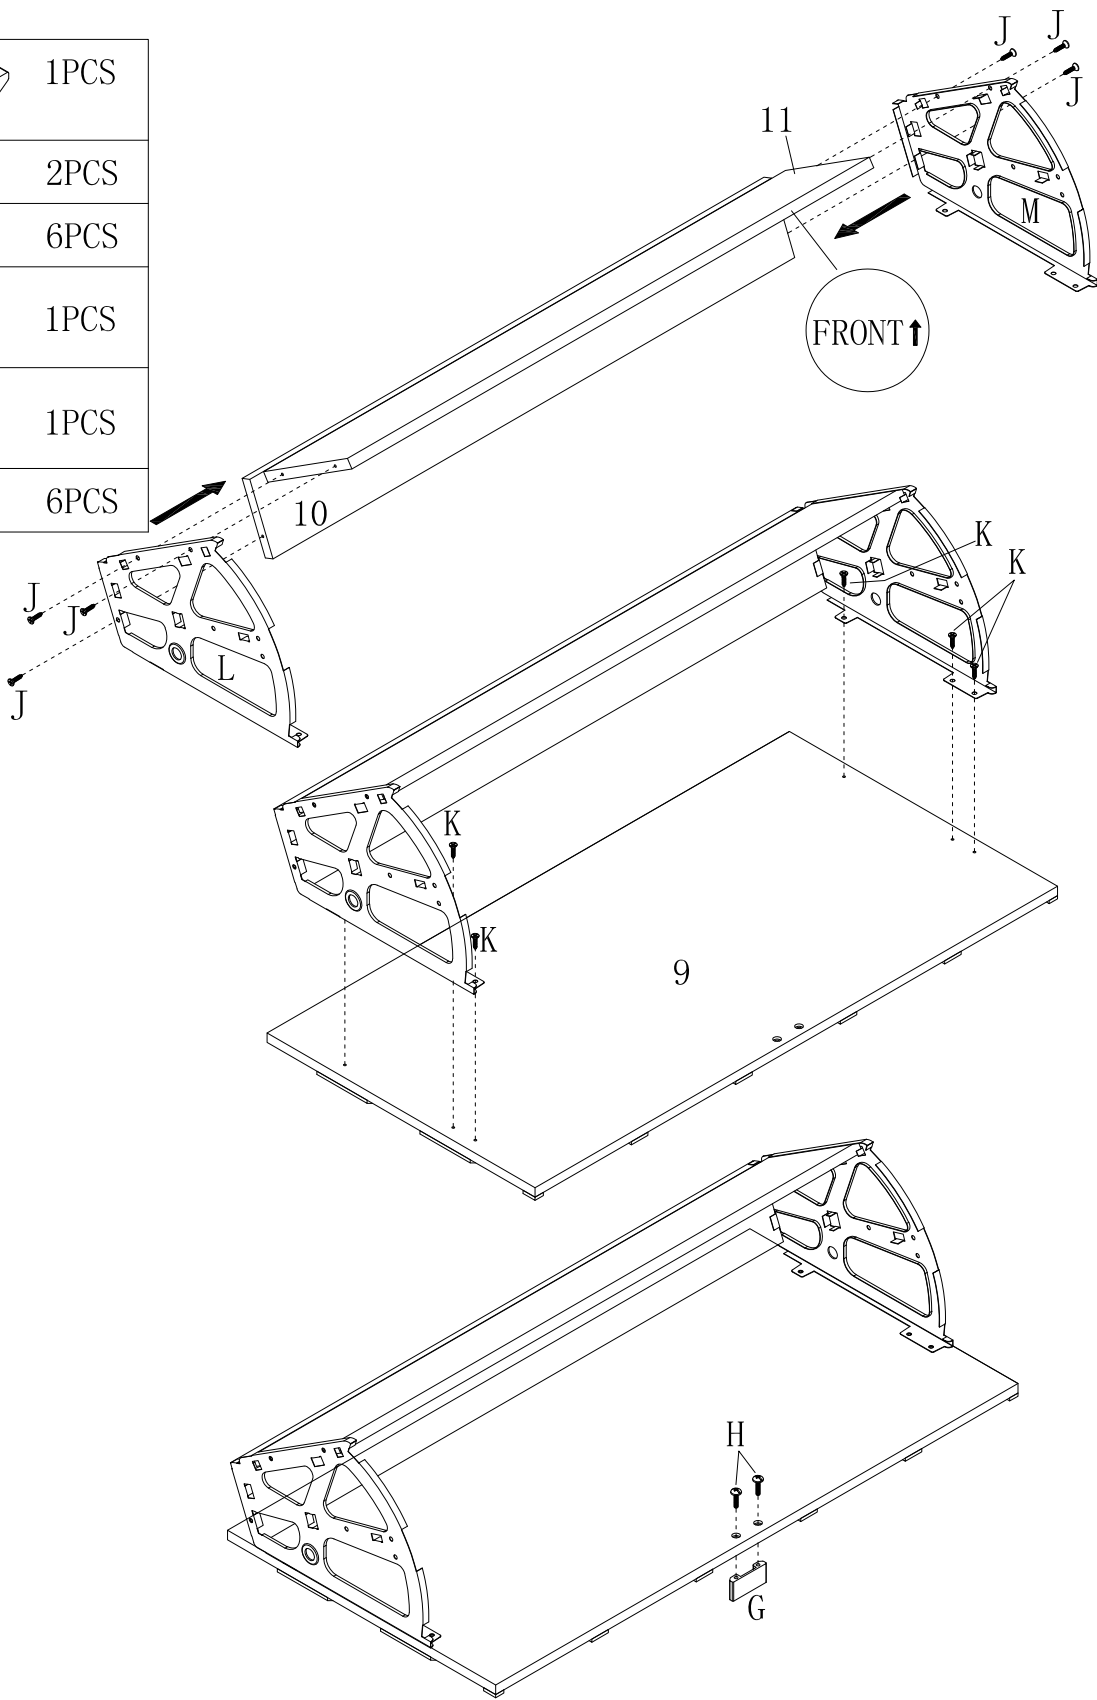
G:		1PCS
H:		2PCS
J:		6PCS
L:		1PCS
M:		1PCS
K:		6PCS






ASSEMBLY INSTRUCTION

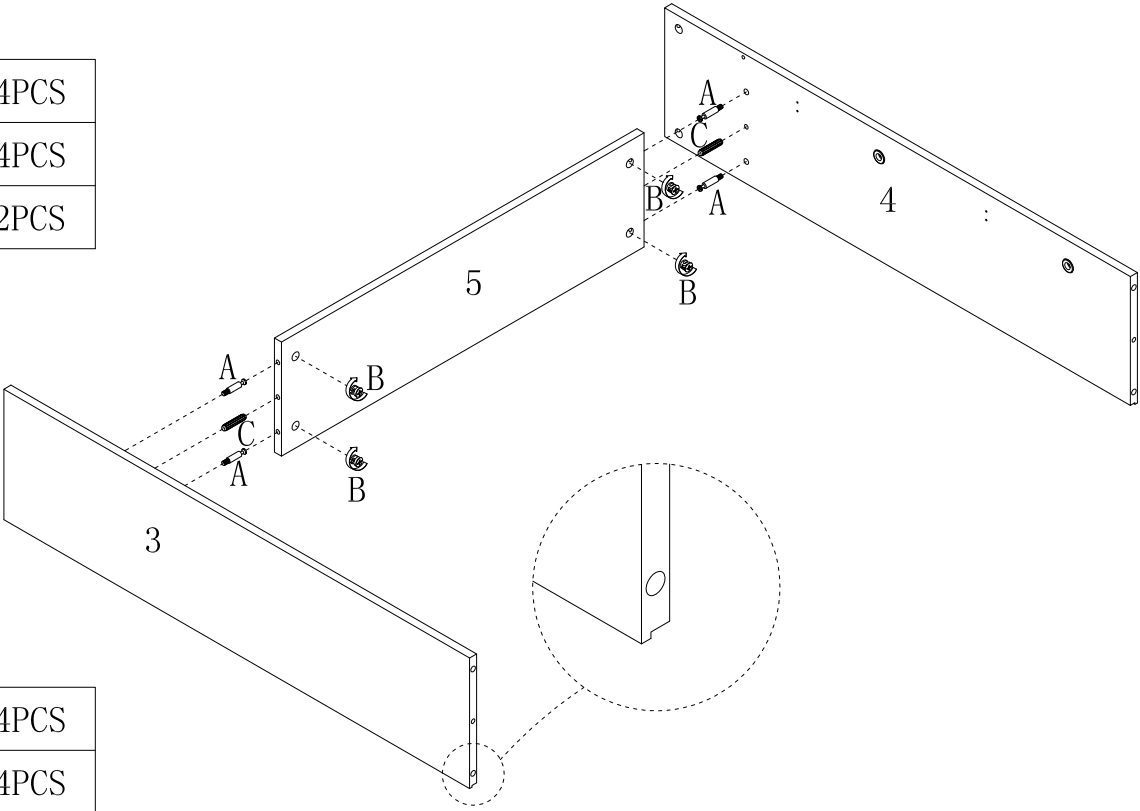
STEP 4

G:		1PCS
H:		2PCS
J:		6PCS
L:		1PCS
M:		1PCS
K:		6PCS








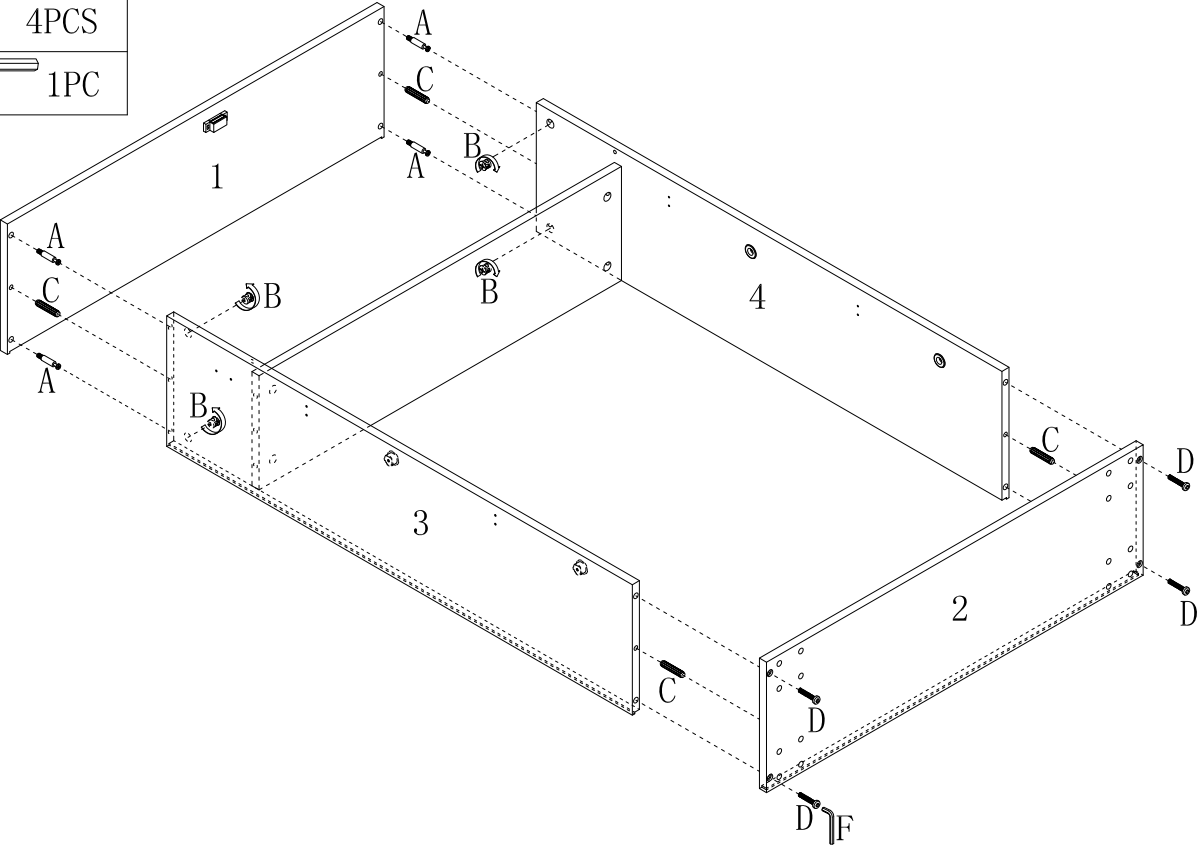
STEP 5

A:		4PCS
B:		4PCS
C:		2PCS



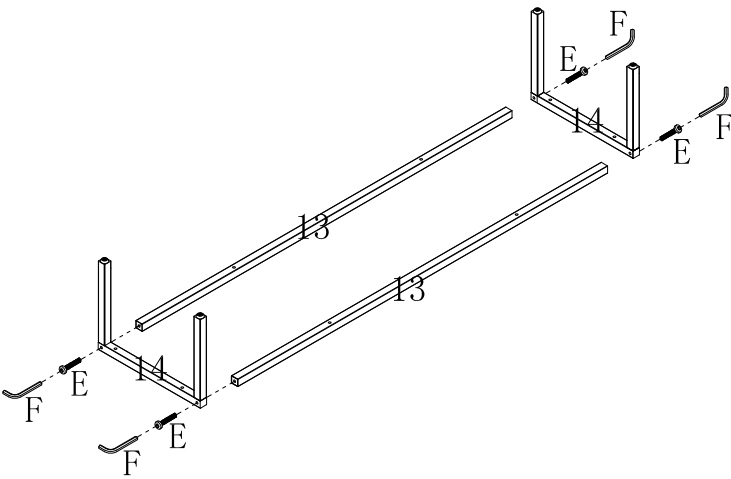
STEP 6

A:		4PCS
B:		4PCS
C:		4PCS
D:		4PCS
F:		1PC




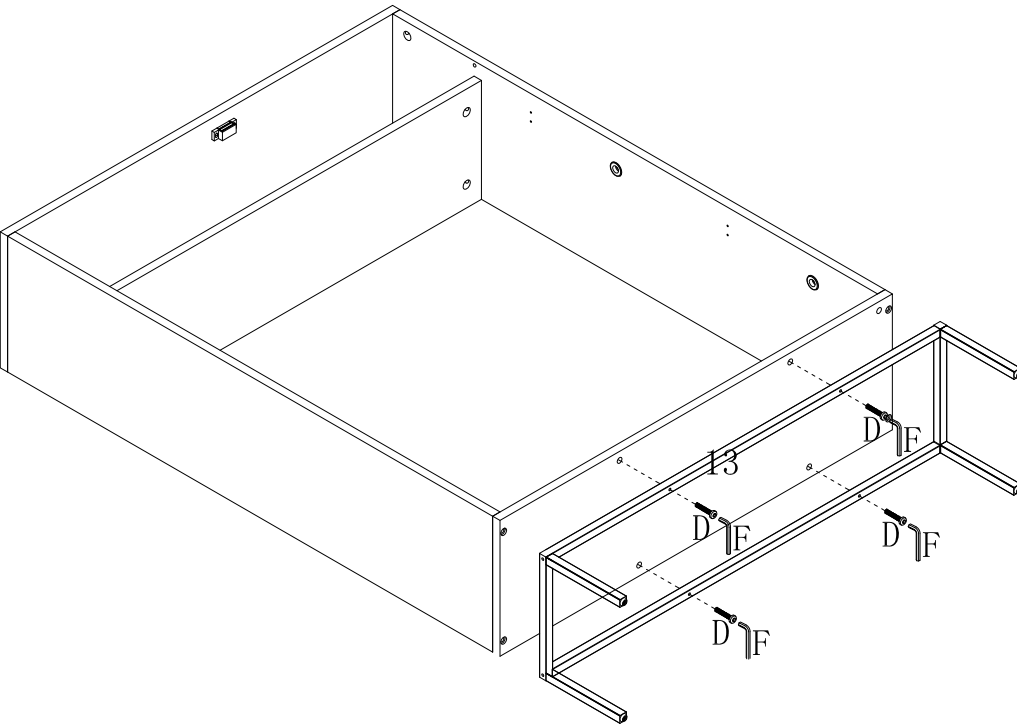
STEP 7

E:  4PCS





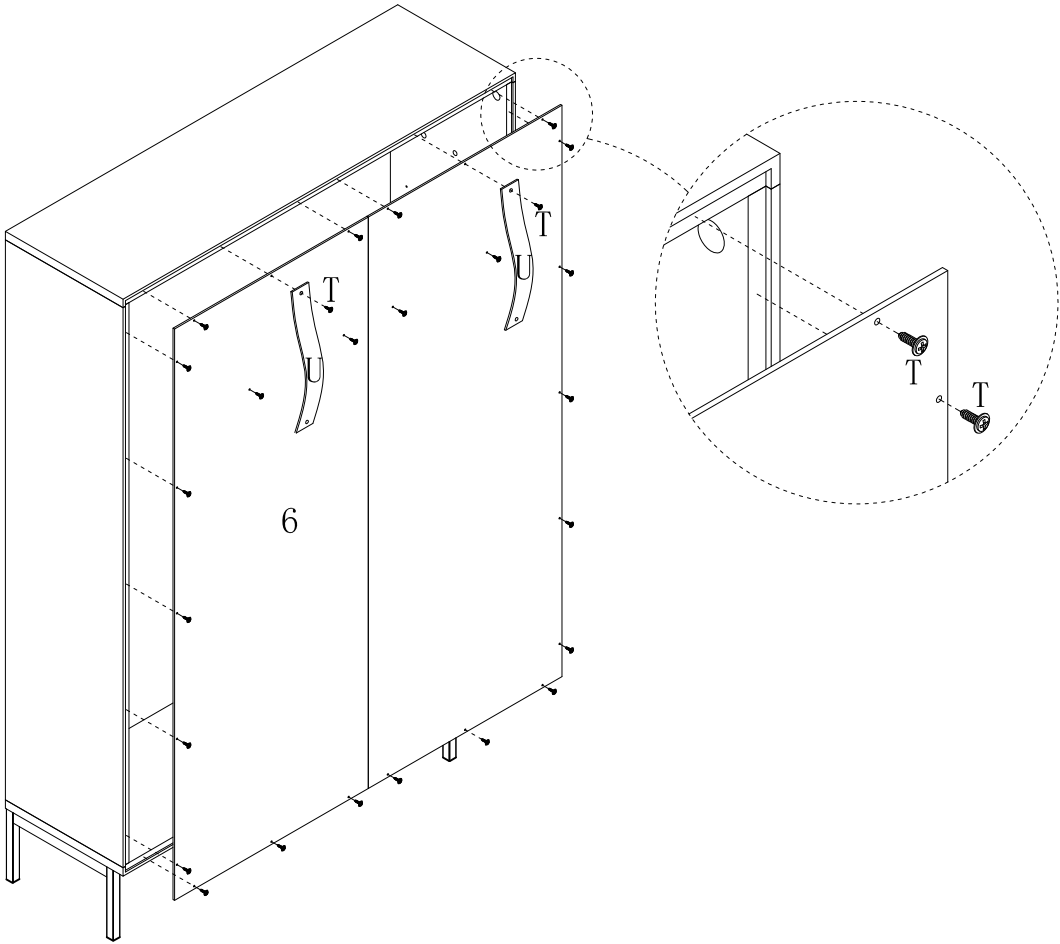
STEP 8

D:  4PCS



STEP 9






T:		26PCS
U:		2PCS

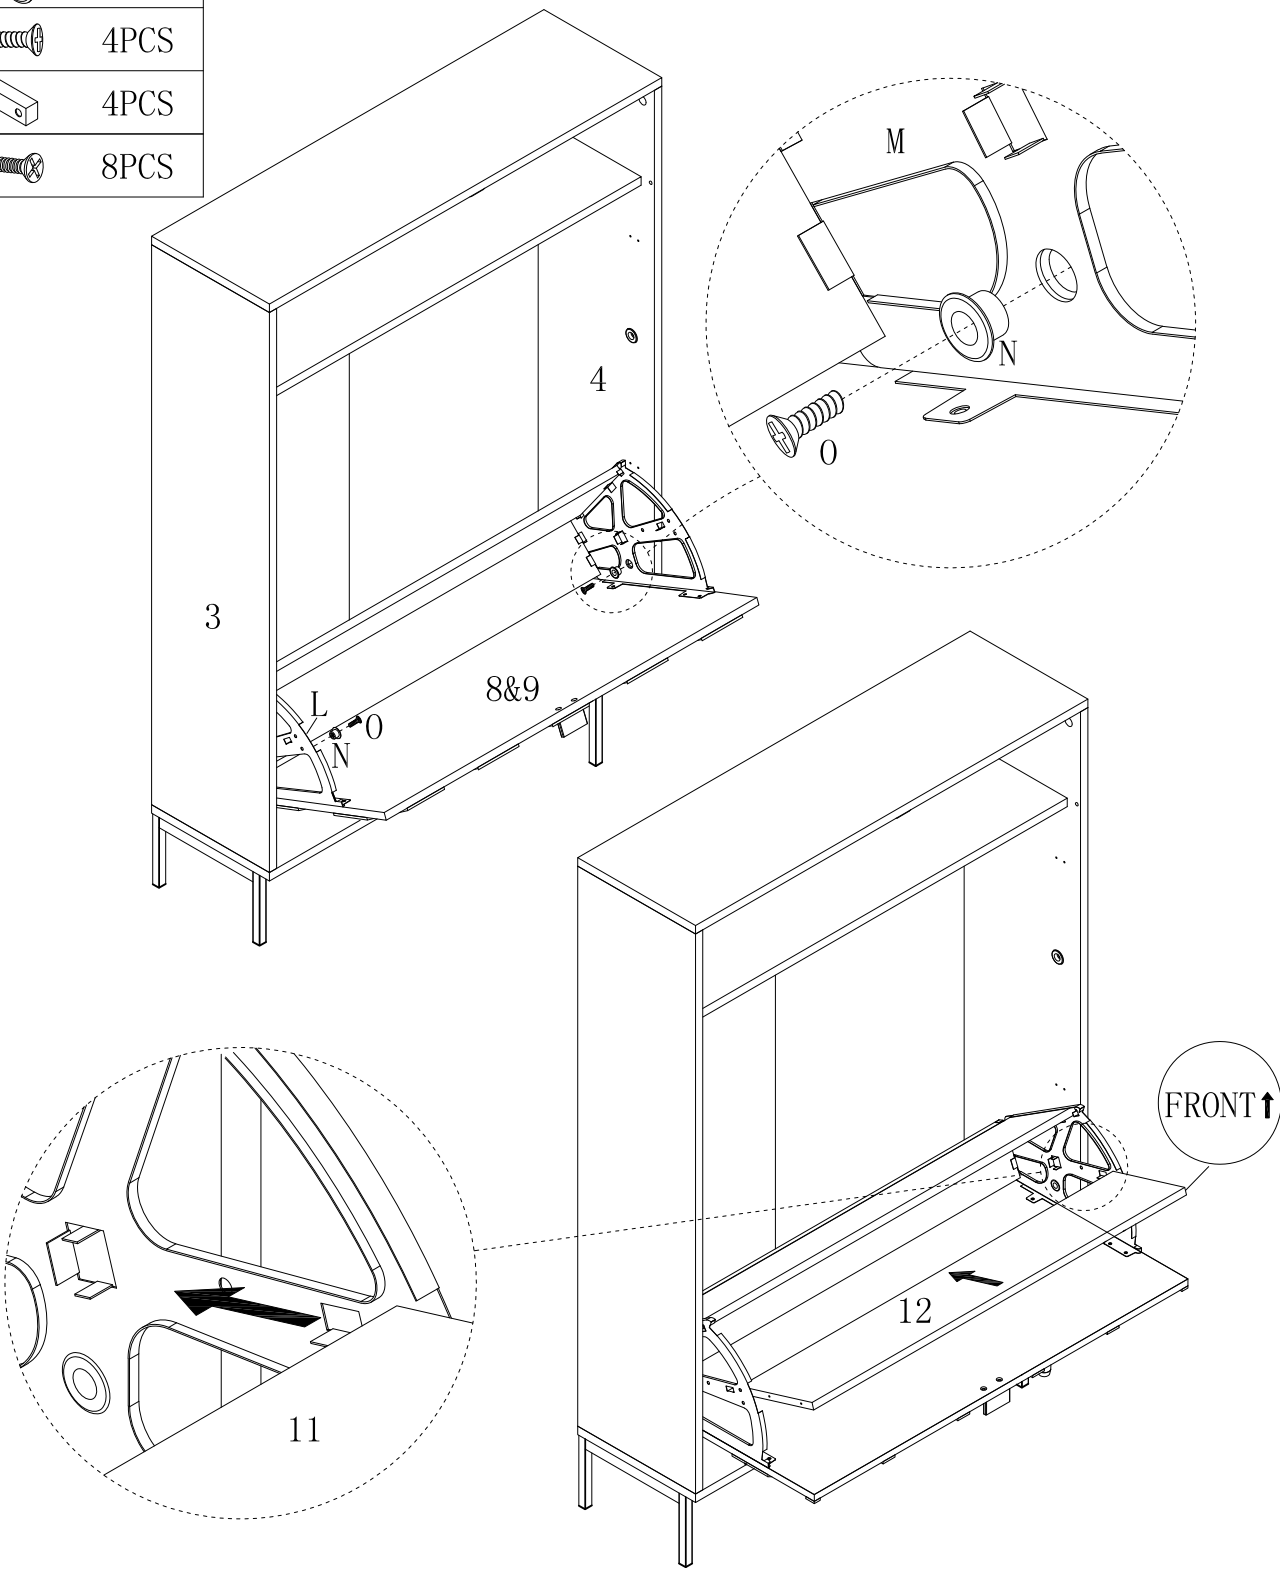


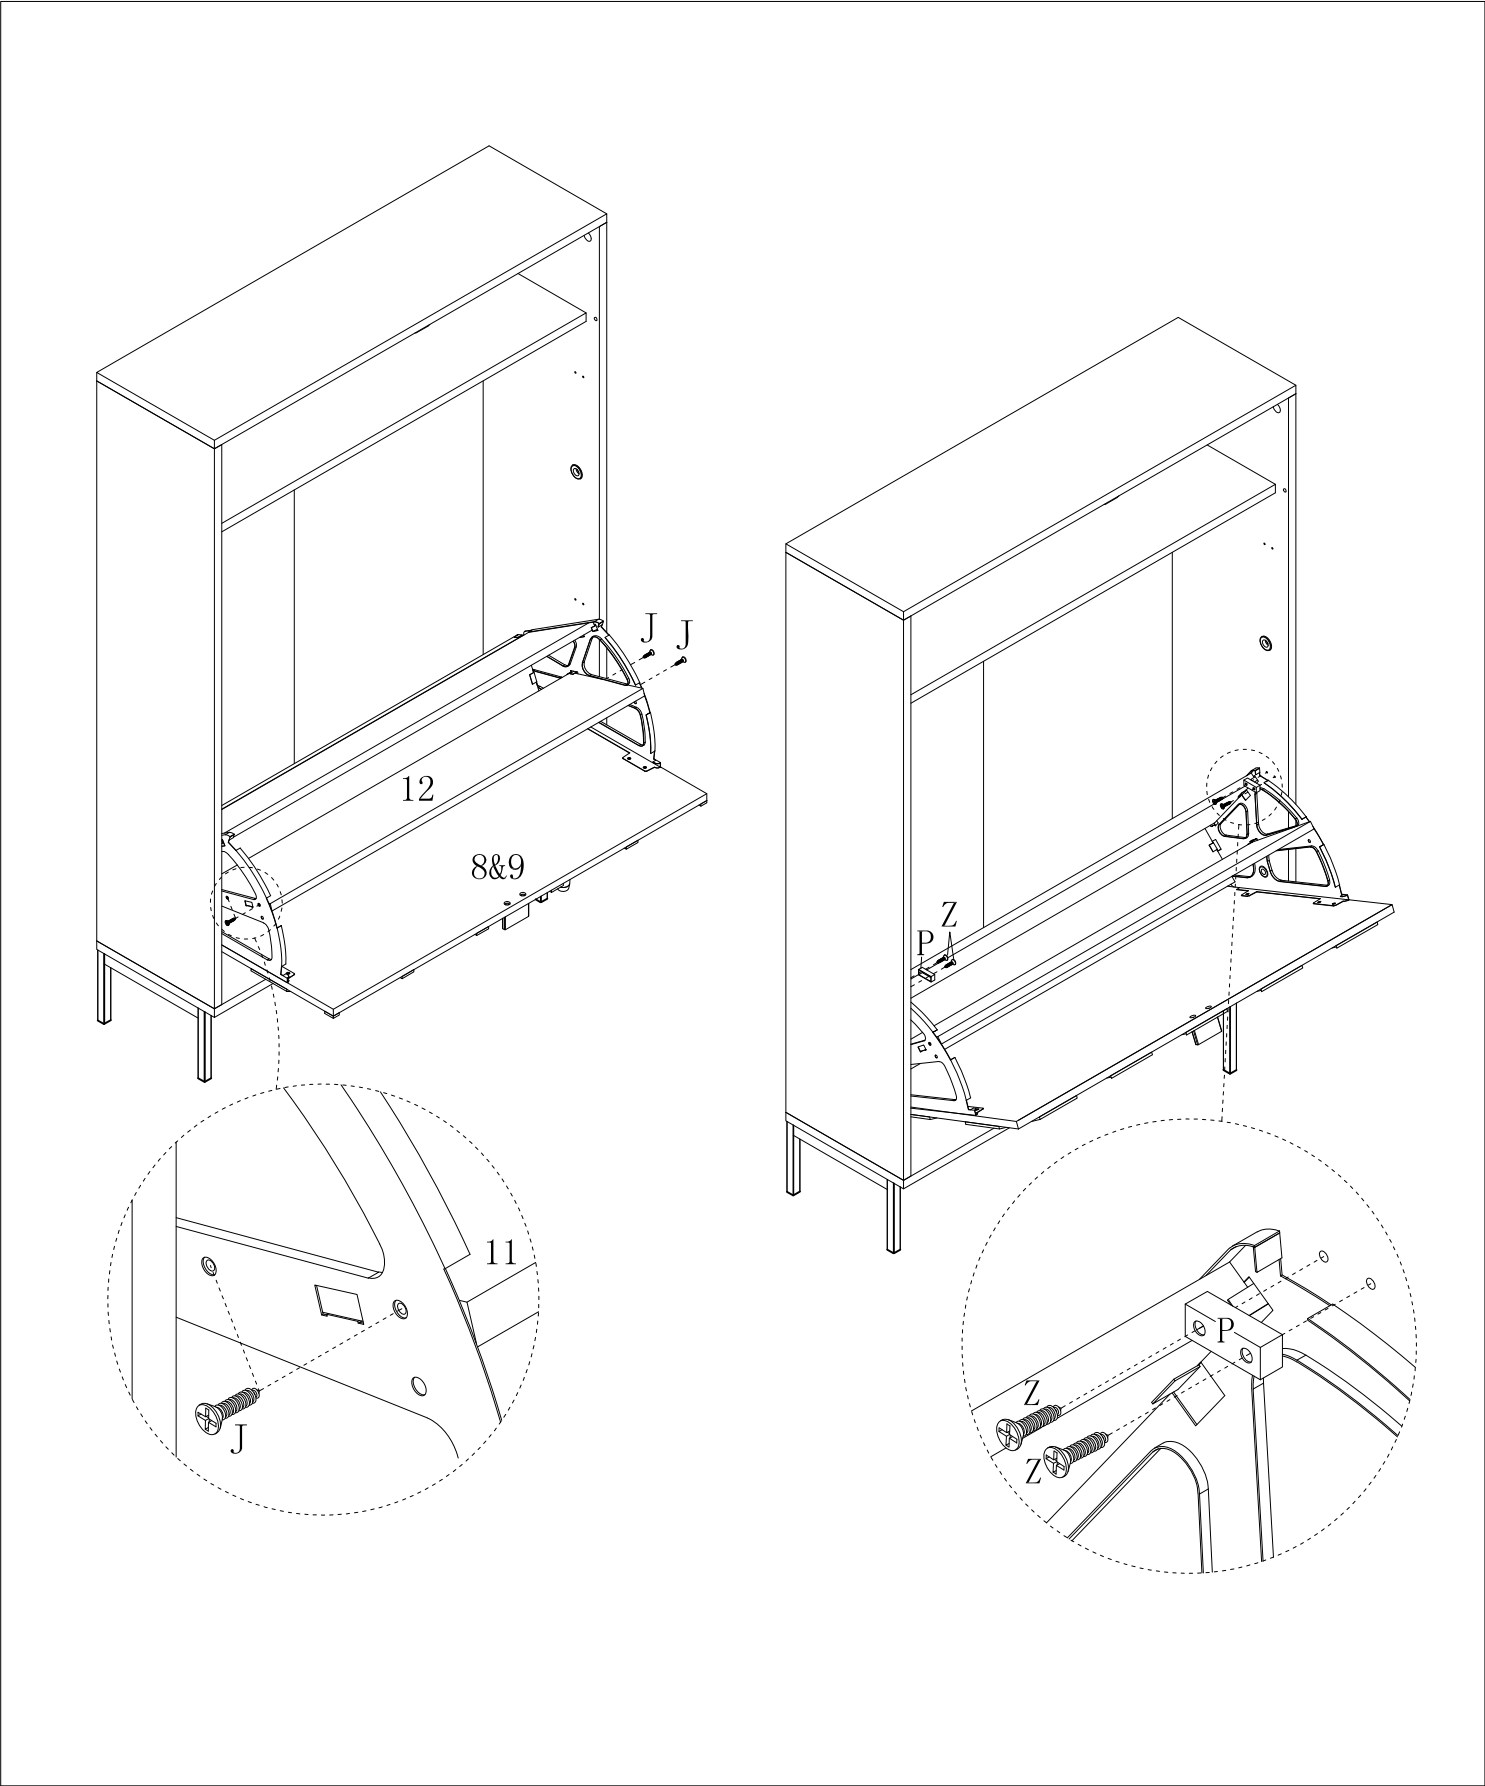
ASSEMBLY INSTRUCTION

STEP 10

Repeat step 8 for the other shoe storage.




J:		8PCS
N:		4PCS
O:		4PCS
P:		4PCS
Z:		8PCS

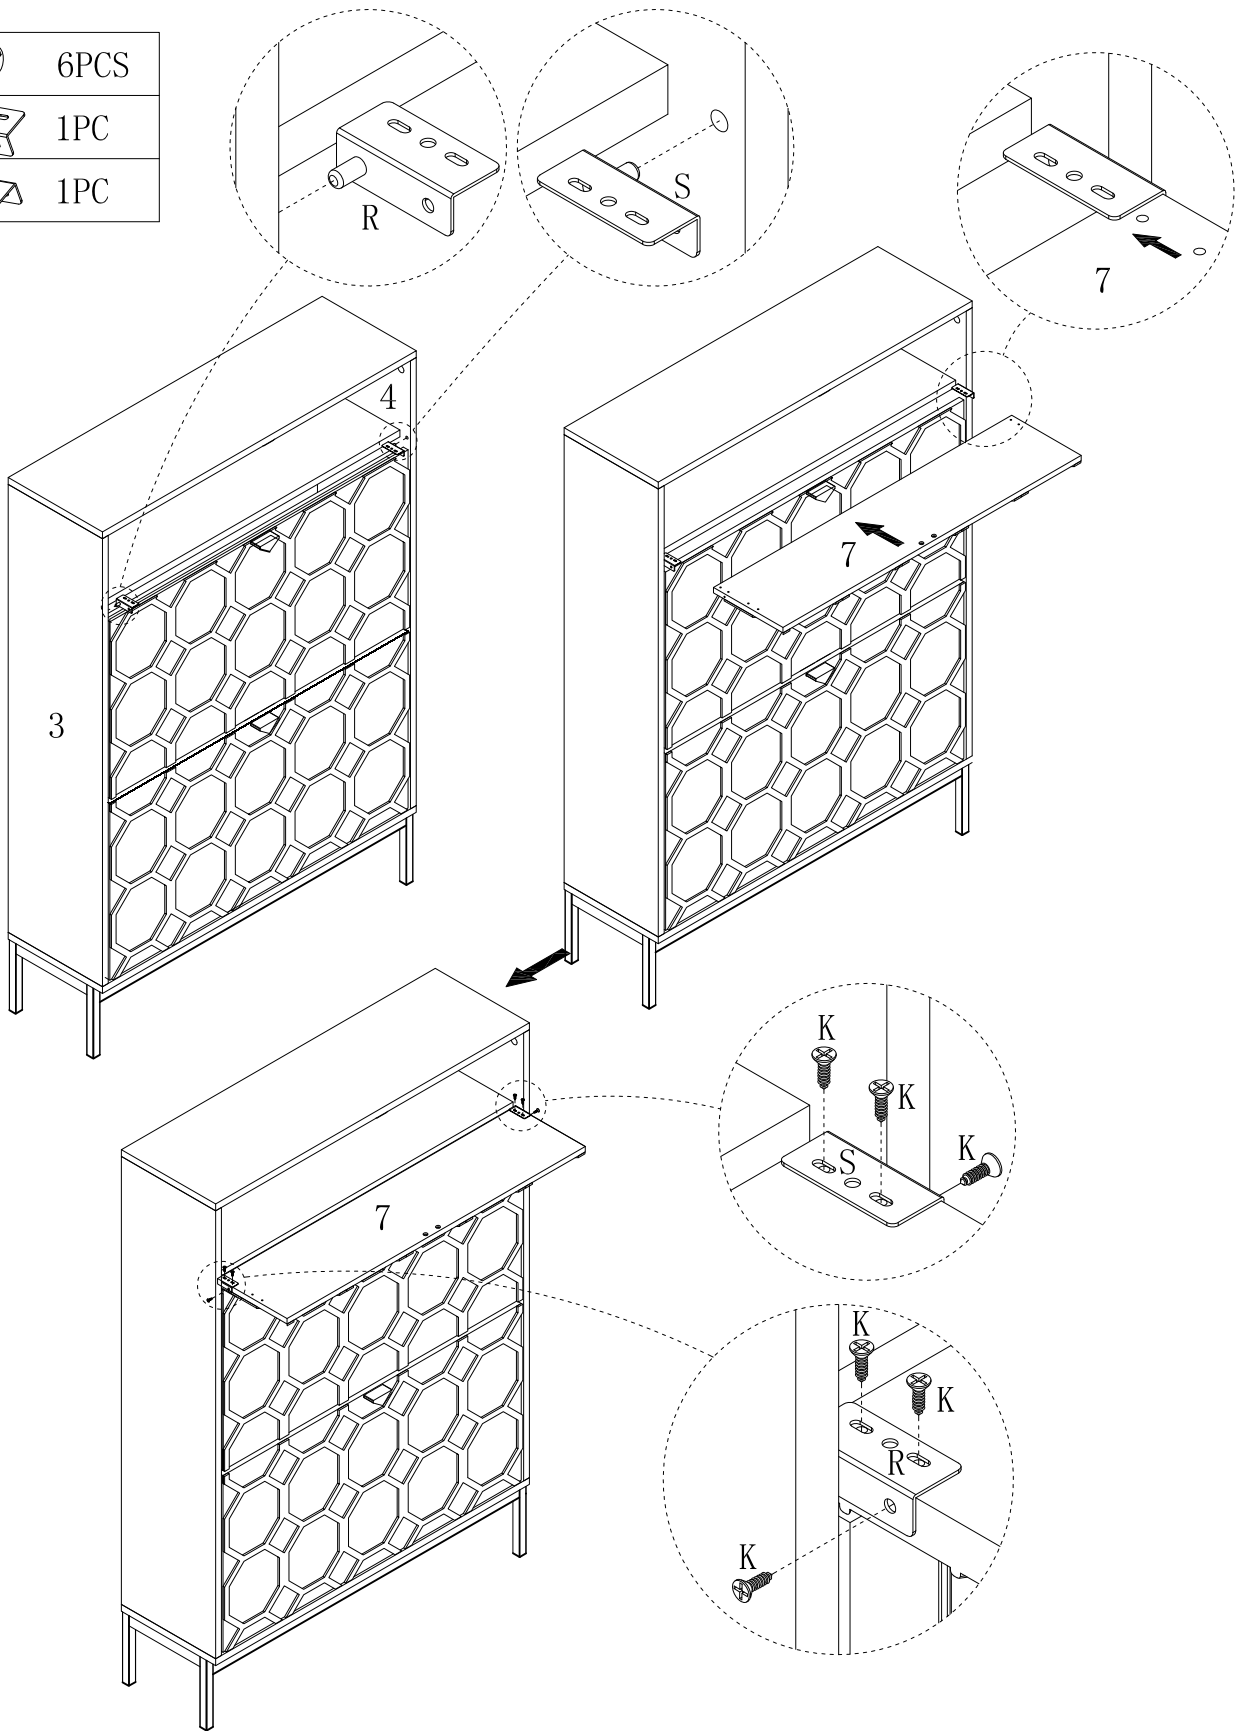






ASSEMBLY INSTRUCTION

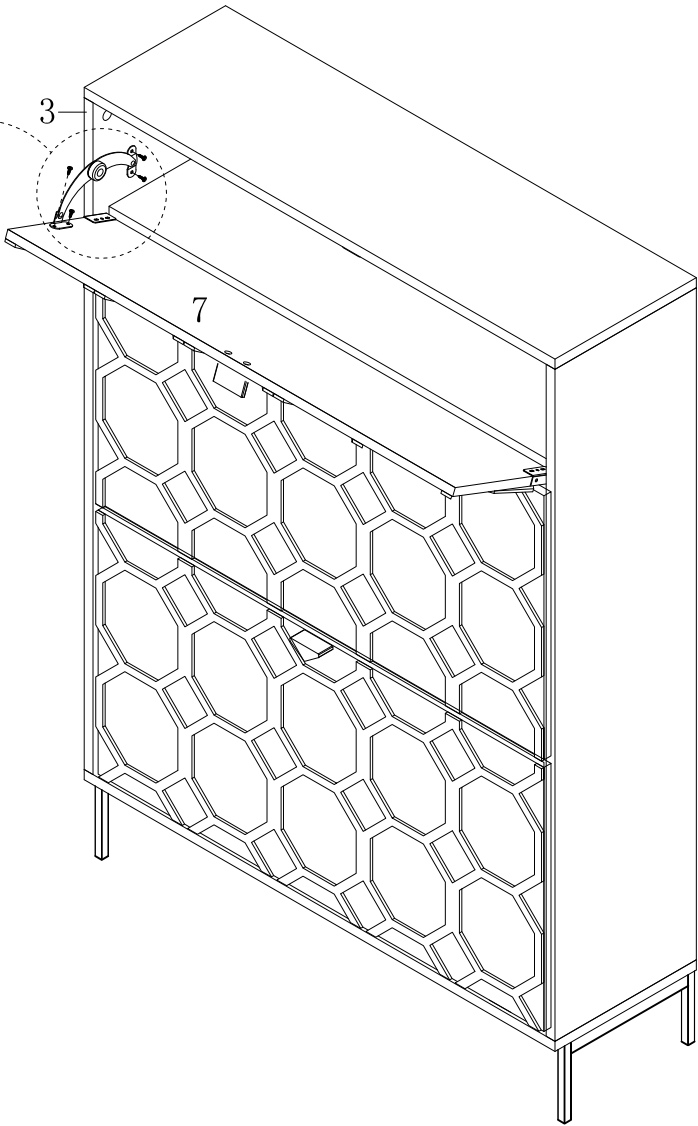
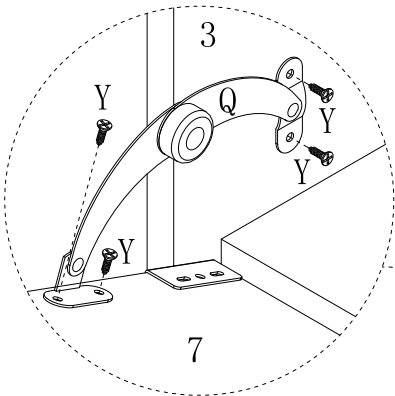
STEP 11

K:		6PCS
R:		1PC
S:		1PC






STEP 12

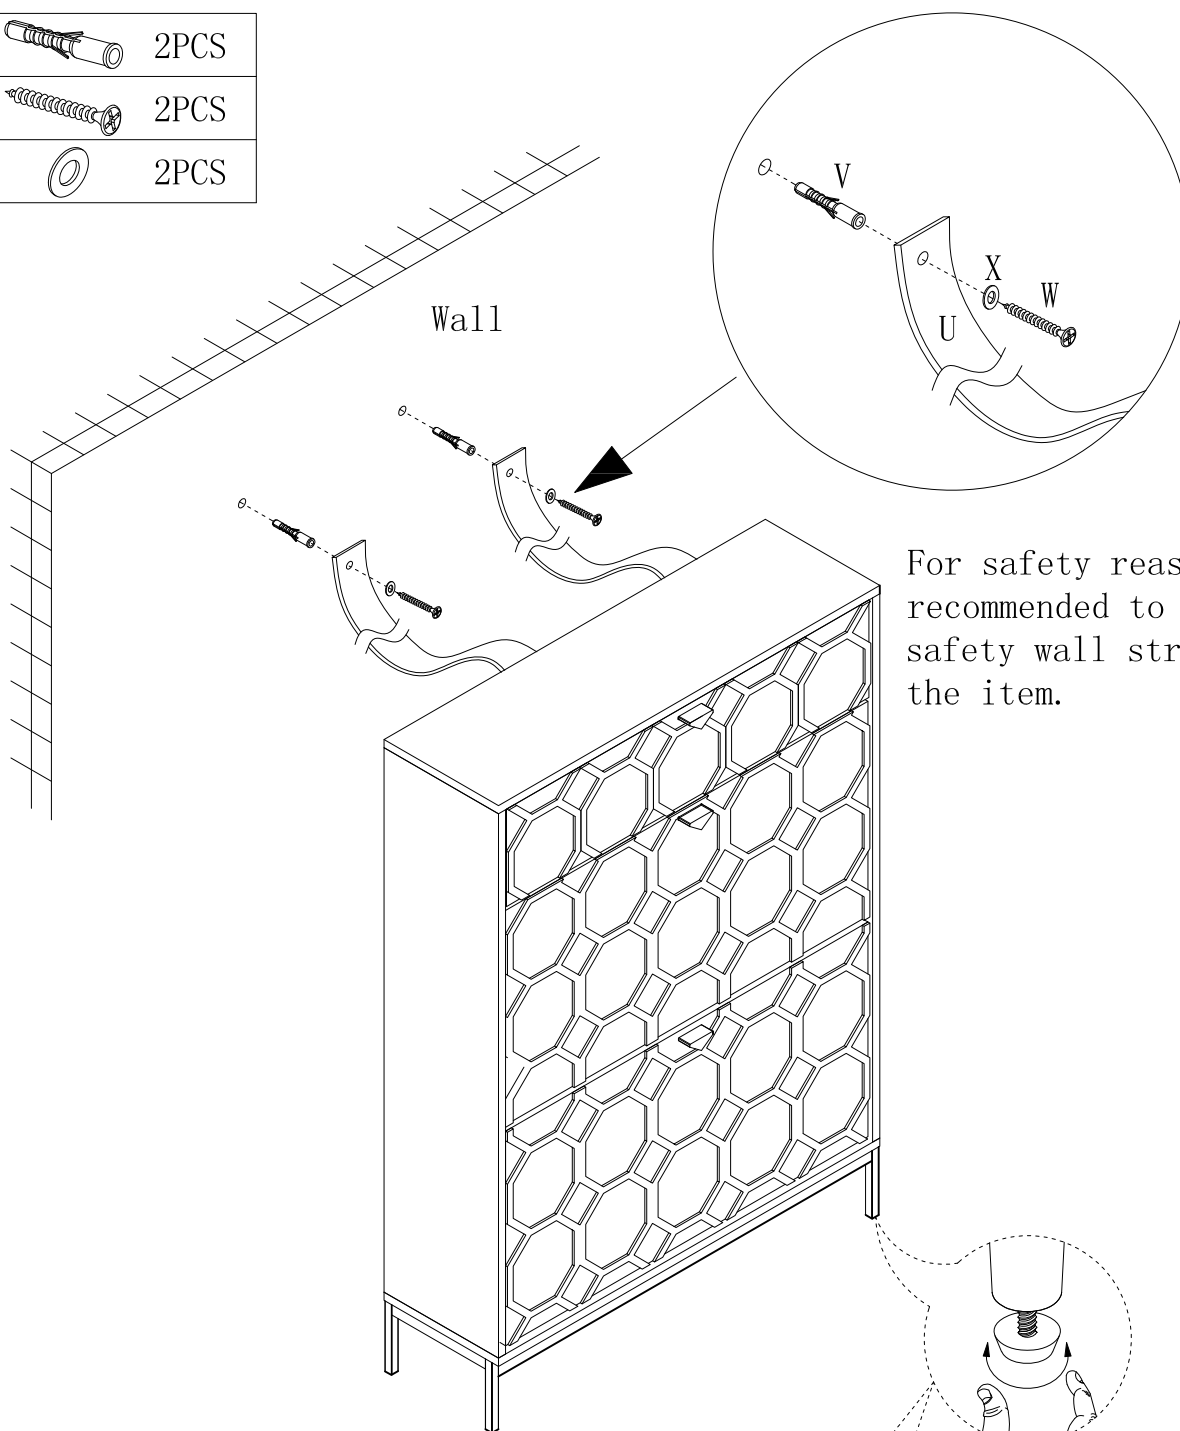
Y:		4PCS
Q:		1PC



ASSEMBLY INSTRUCTION

STEP 13

V:		2PCS
W:		2PCS
X:		2PCS



For safety reasons, it is recommended to install safety wall strap to fix the item.

After installation, adjust the adjustable foot to keep the cabinet balanced and align the door.