


ASSEMBLY INSTRUCTIONS

DINING CHAIR

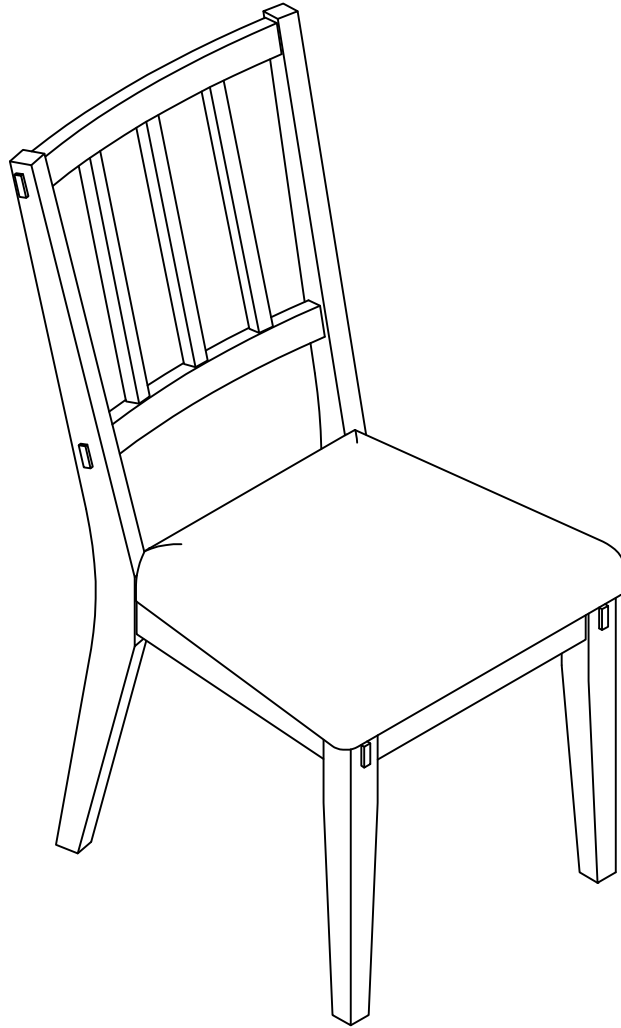


WF309348







If you have any questions, please feel free to contact us.
Email: lowes.team@qualfurn.net

IMPORTANT NOTE :


- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP.

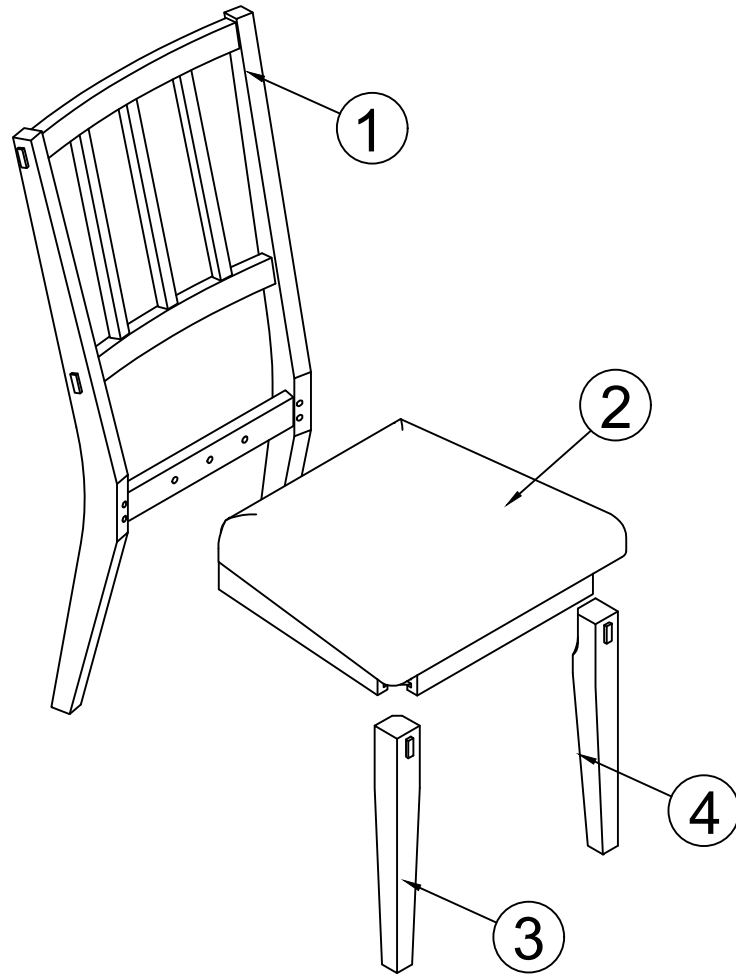


Hardware List For One Chair

<p>(A)</p>  <p>Ø1/4" x 70mm</p>	<p>(B)</p>  <p>Ø1/4" x 50mm</p>
<p>BOLT (4PCS)</p>	<p>BOLT (4PCS)</p>
<p>(C)</p>  <p>Ø1/4" x 38mm</p>	<p>(D)</p>  <p>Ø1/4" x 11mm</p>
<p>BOLT (2PCS)</p>	<p>LOCK WASHER (10PCS)</p>
<p>(E)</p>  <p>Ø1/4" x 18mm</p>	<p>(F)</p>  <p>4MM</p>
<p>FLAT WASHER (10PCS)</p>	<p>ALLEN (1PC)</p>


Part List For One Chair

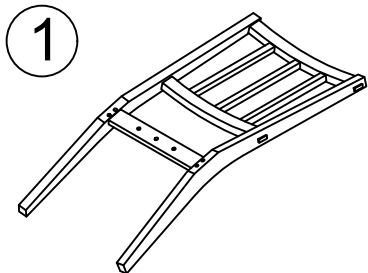


BACK FRAME (1PC)

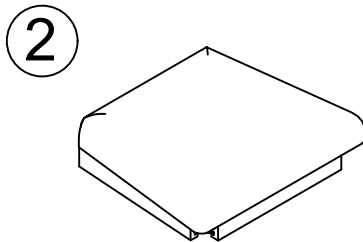

SEAT FRAME (1PC)

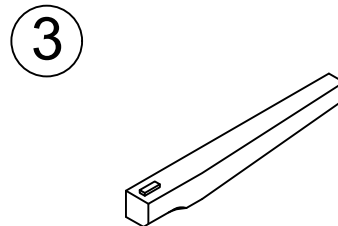


FRONT LEGS LEFT (1PC)

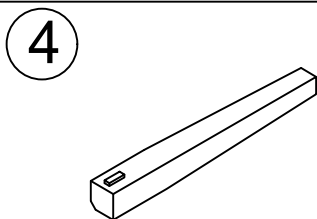

FRONT LEGS RIGHT (1PC)

STEP 1:

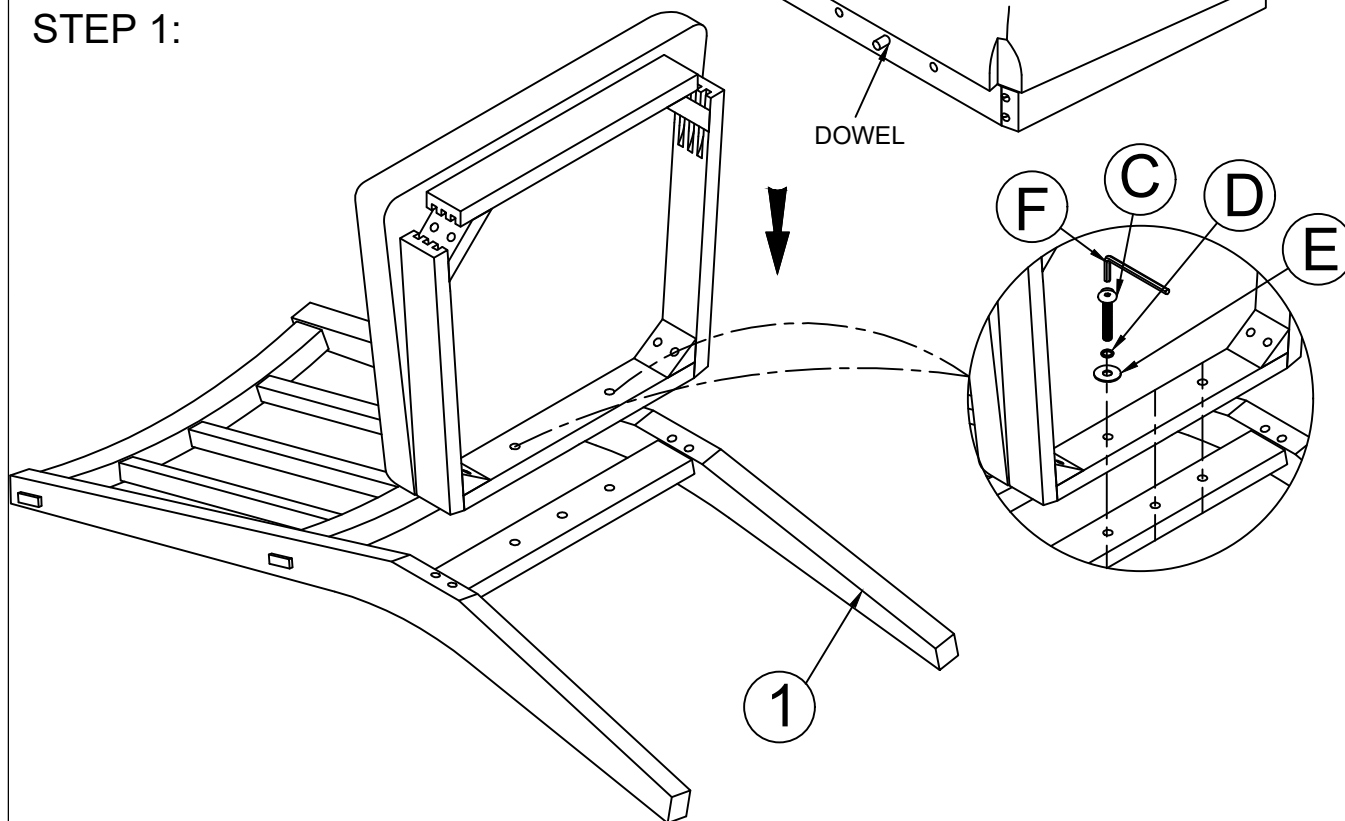


C Ø1/4"x38mm  2pcs





E Ø1/4"x18mm  2pcs

D Ø1/4"x11mm  2pcs

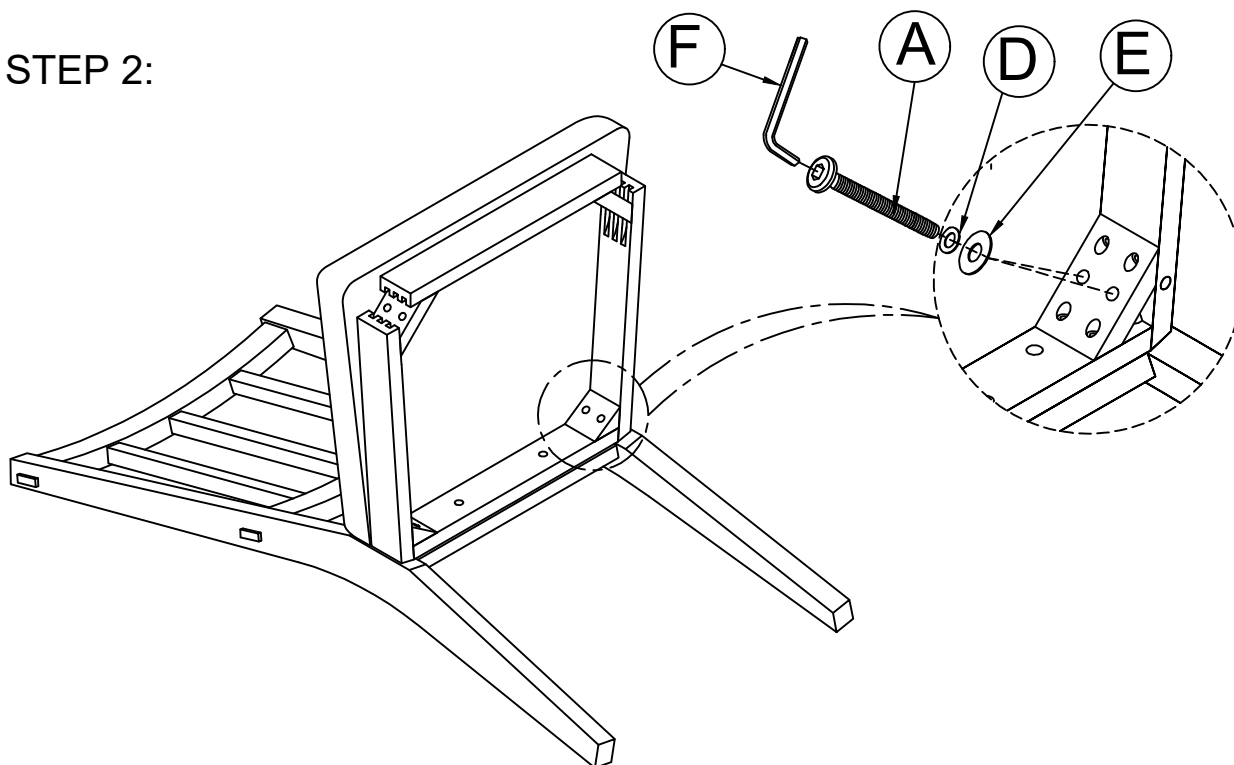
F 4mm  1pc





STEP 2:

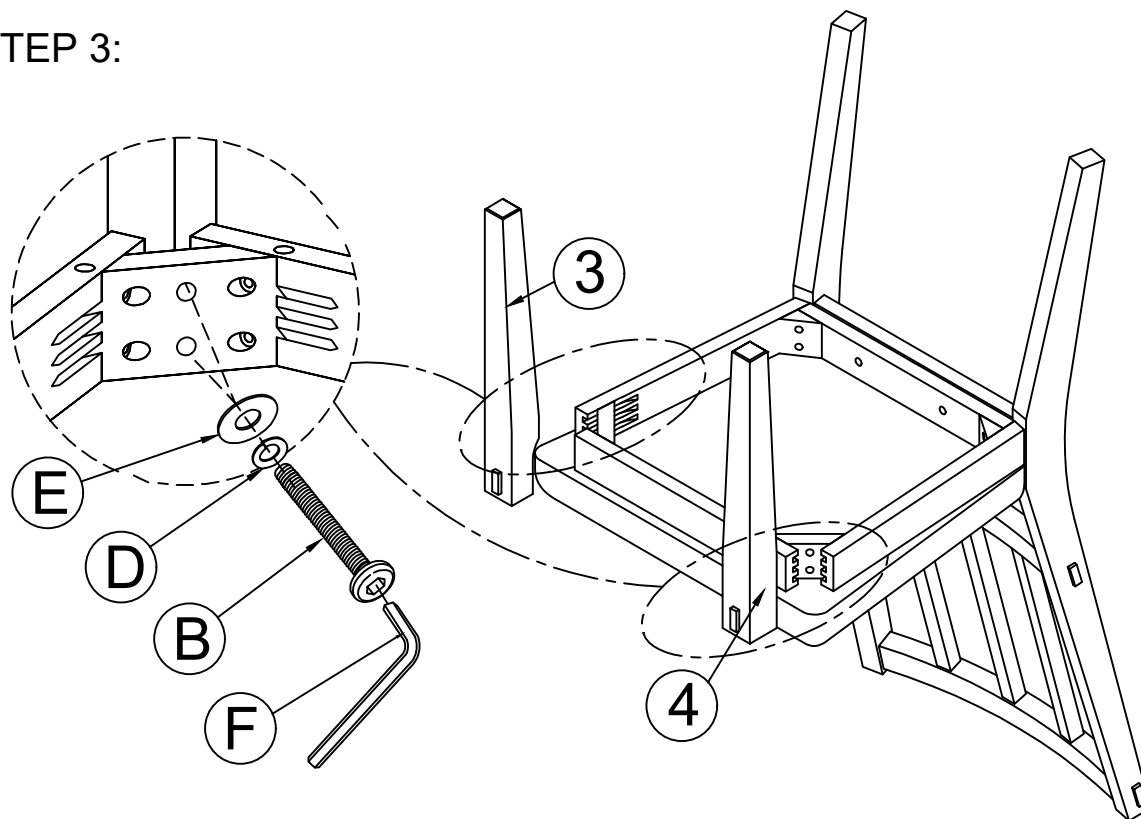

A	Ø1/4"x70mm		4pcs	D	Ø1/4"x11mm		4pcs
E	Ø1/4"x18mm		4pcs	F	4mm		1pc

STEP 3:



B	Ø1/4"x50mm		4pcs	D	Ø1/4"x11mm		4pcs
E	Ø1/4"x18mm		4pcs	F	4mm		1pc

STEP 4:

