

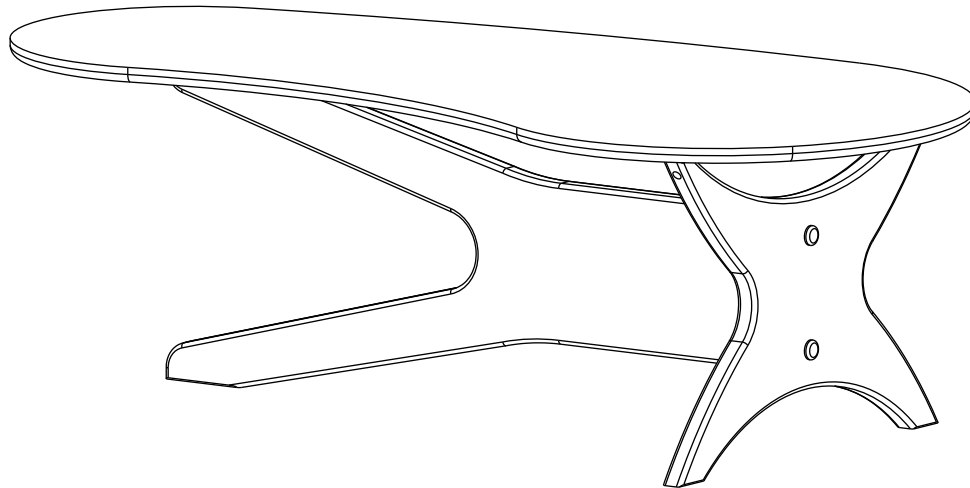


ASSEMBLY INSTRUCTIONS

MID CENTURY - COFFEE TABLE

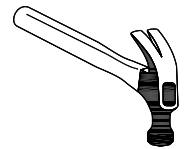


00:30 Hs

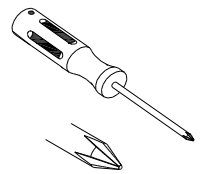

To protect the furniture, please assemble it on a soft, clean surface, such as a blanket or the cardboard carton.

HARDWARE INCLUDED



A - 8,0x30 Wood Dowel
Qty. 02



B - 4,0x30 Screw
Qty. 03



C - 7,0x70 Screw
Qty. 02




**D - Wood Hole
Cover - Qty. 02**





E - Hex Key
Qty 01

PARTS INCLUDED


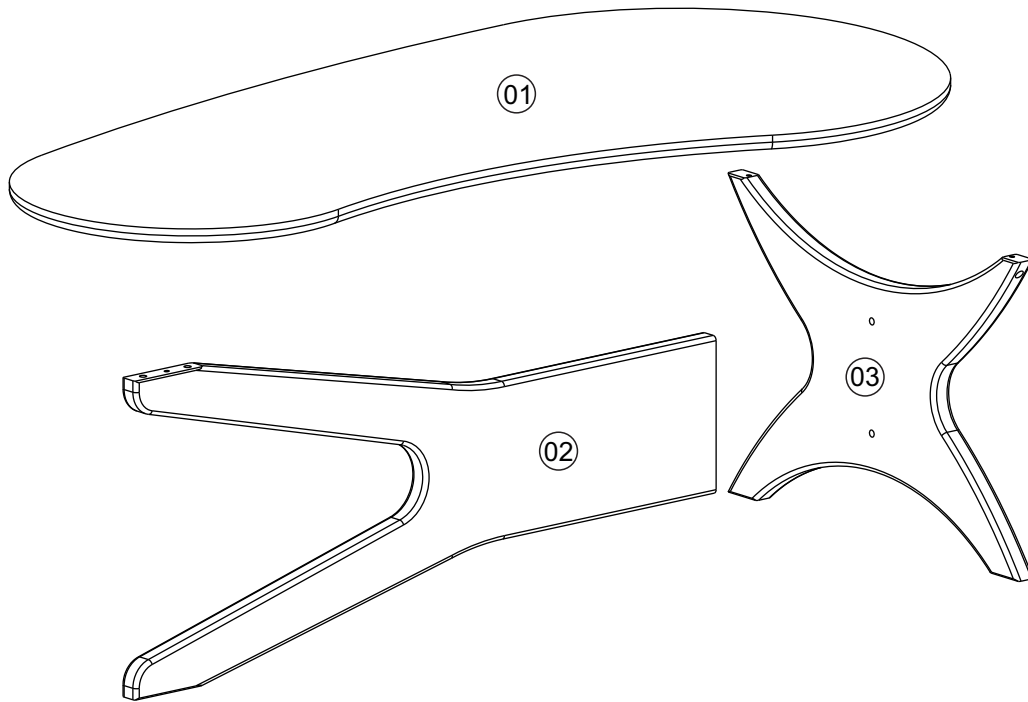


STEP 1



If the holes are too tight,
use a hammer to gently place
wooden dowel pegs in the holes.

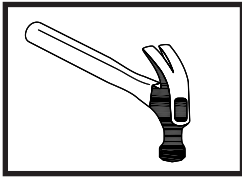

A - 8,0x30 Wood Dowel
Qty. 66

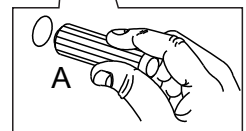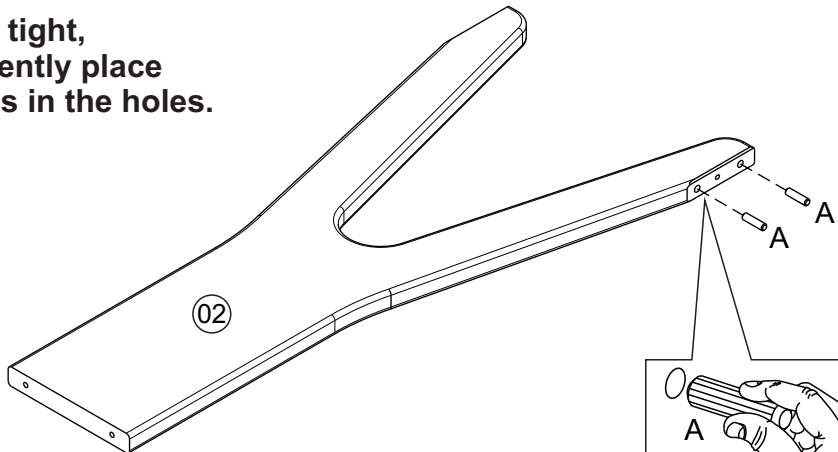


STEP 2

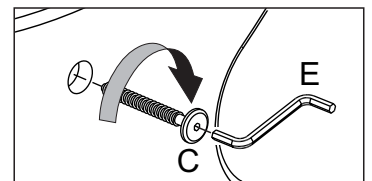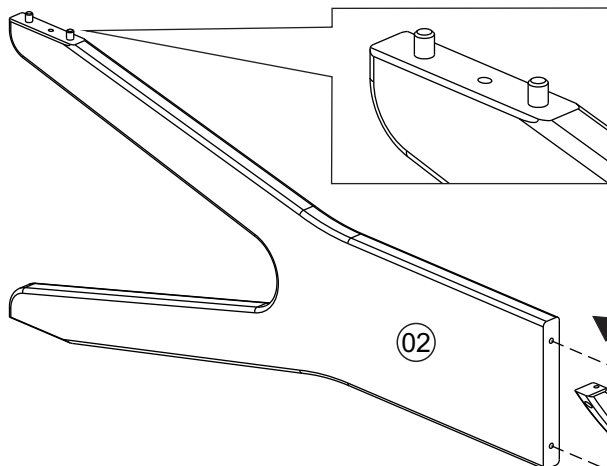

C - 7,0x70 Screw
Qty. 02




E - Hex Key
Qty 01

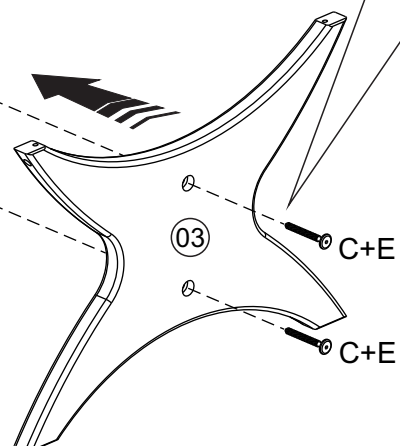

STEP 3




D - Wood Hole
Cover - Qty. 02

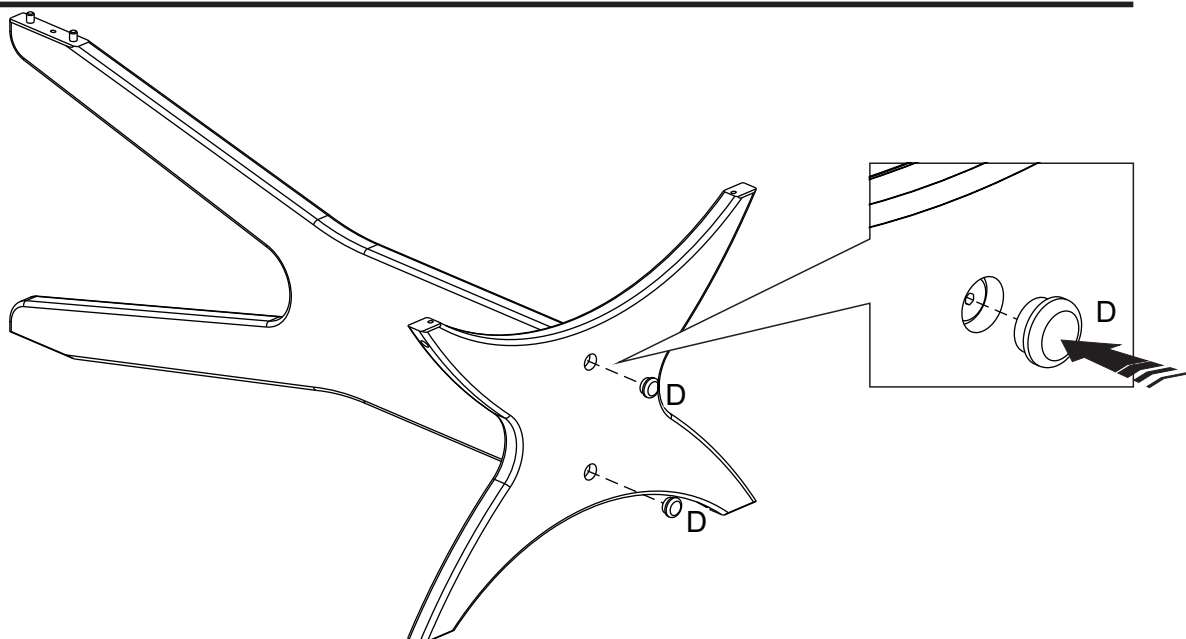


STEP 4



B -4,0x30 Screw
Qty. 03

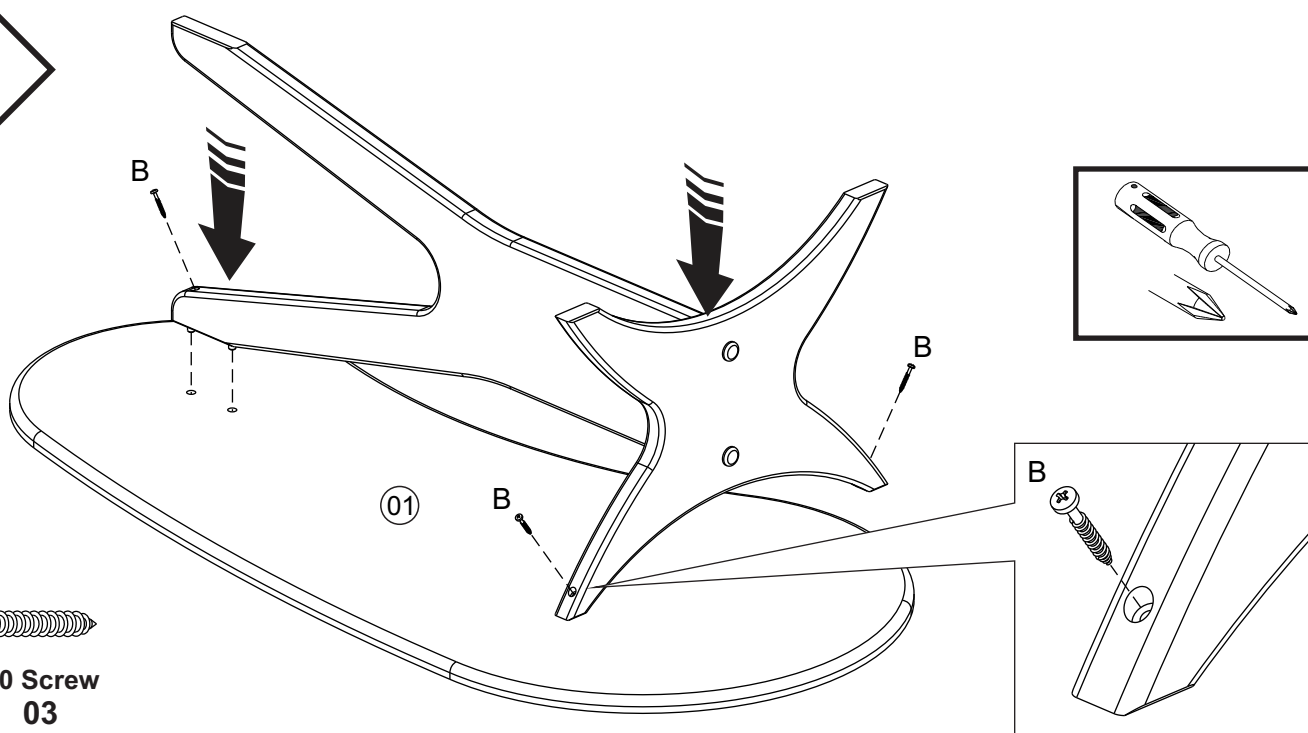

STEP 5

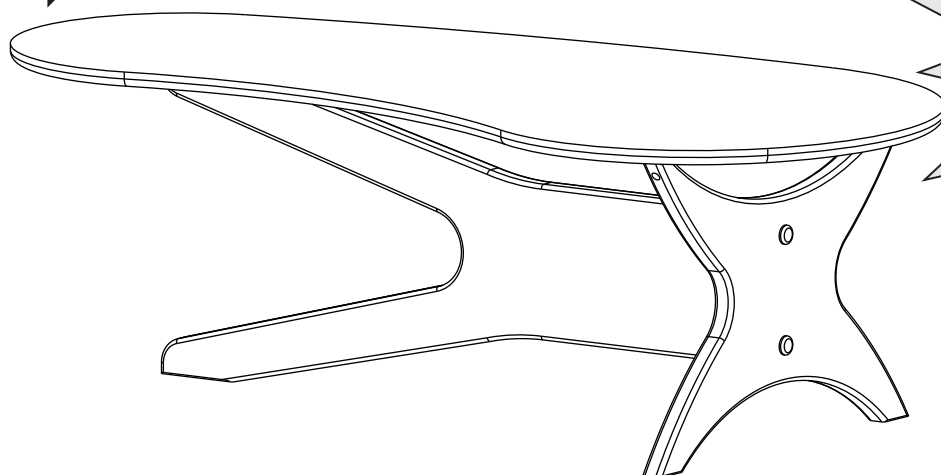

Do not sit on the
coffee table, as it is
not designed to
support excessive
weight.