


 **WARNING:** The metal (galvanized and aluminum) vents contain sheet metal components that may contain sharp edges. Work gloves with an ANSI A5 or EN 388:2016E cut resistance rating or greater must be worn when handling/installing this product.

These vents are ideal for use where traditional framing members (studs) are 16" on center.

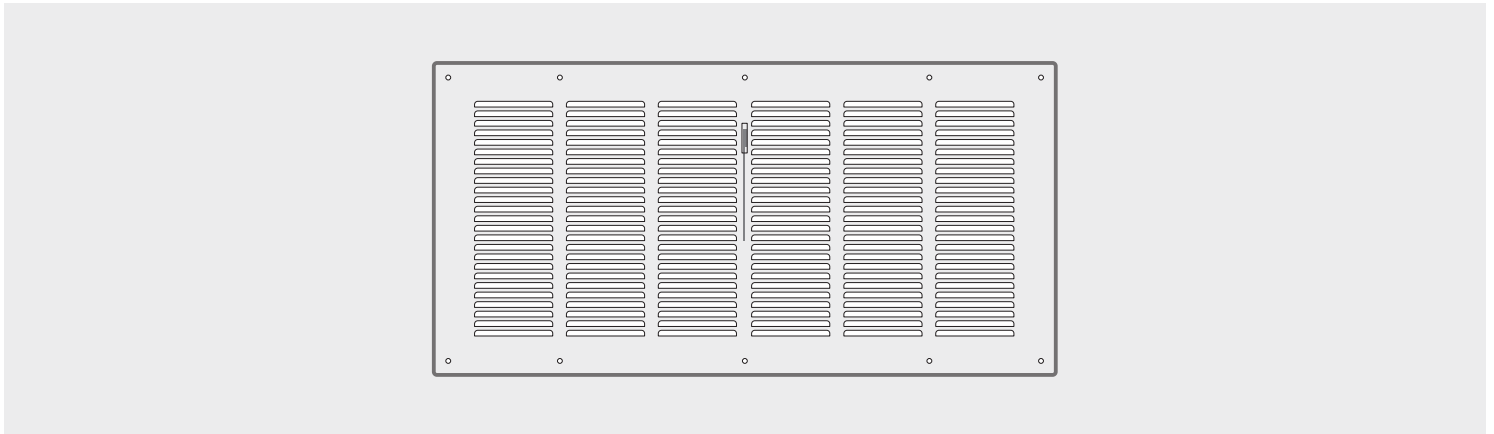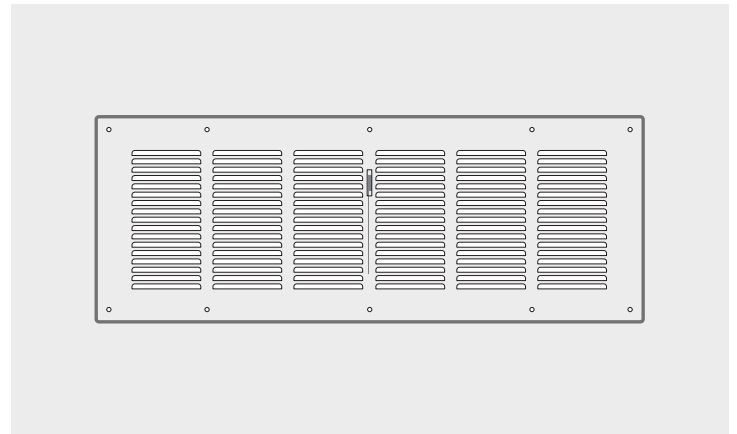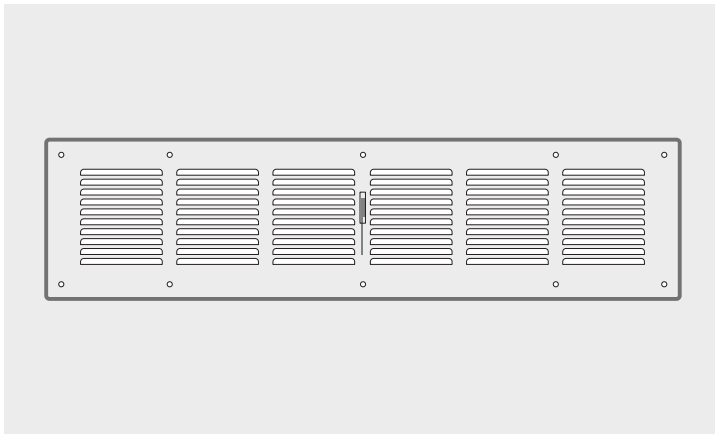

1. Rough opening measurements must be at least 1 inch smaller than the vent size.
2. Remove the old vent and any loose debris from opening.
3. Fasten vent with nails or screws using the pre-punched fastener holes (4-6 per vent).

These installation guidelines are for use with typical or standard applications. It is always recommended to seek advice from a licensed professional, and to check with your local building inspector or building permit office for approvals and possible variations that may apply.