

ASSEMBLY AND INSTALLATION INSTRUCTIONS

T0266

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THESE INSTRUCTIONS.

Hardware Package (included):




Installation Steps

Turn off the power at fuse or circuit box

1. Install a bulb (not included). Check relamping label at socket area or packaging for maximum allowed wattage.
2. Place the glass shade into the metal cover carefully, and then attach the assembly to the fixture using two bolt nuts.
3. Pull out the wires and grounding wire from the post.
Make wire connections using the wire nuts:
---The black wire from the fixture to the black wire from the post.
---The white wire from the fixture to the white wire from the post.
---The grounding wire from the fixture to the grounding wire from the post.
Carefully put the wires back into the post.


4. Place the post cap on the post, and then secure it with three set screws.

Turn on the power at fuse or circuit box

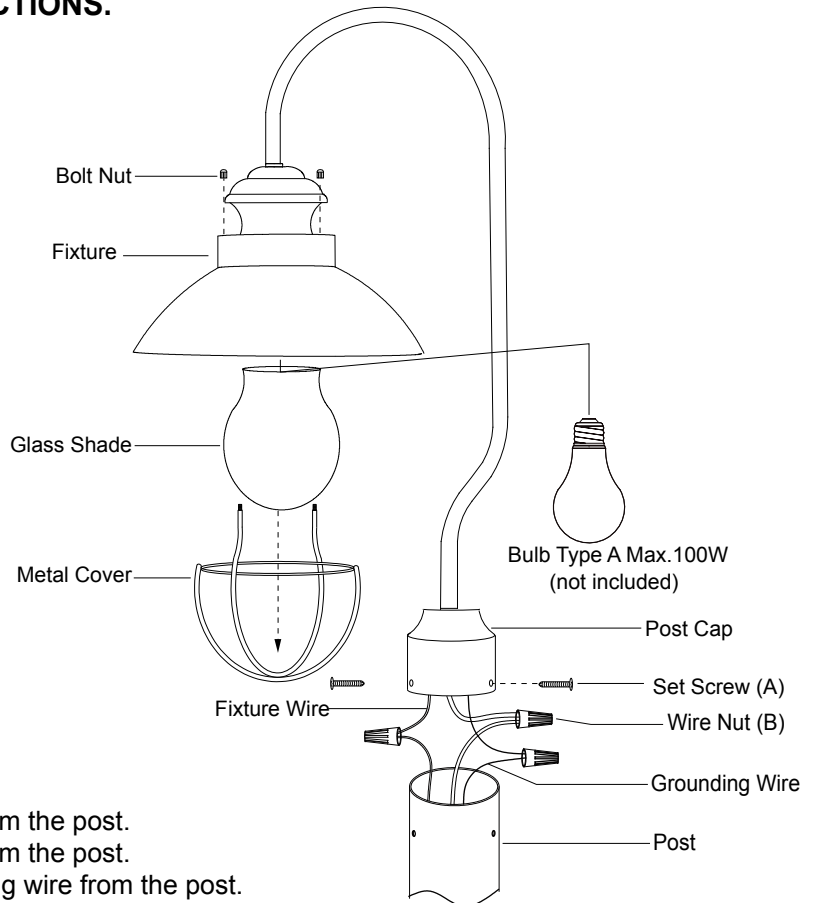

The following parts are available for re-order if damaged or missing.

Spare Parts List:

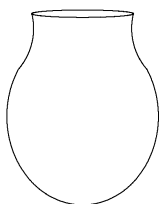

Glass Shade
921501S

