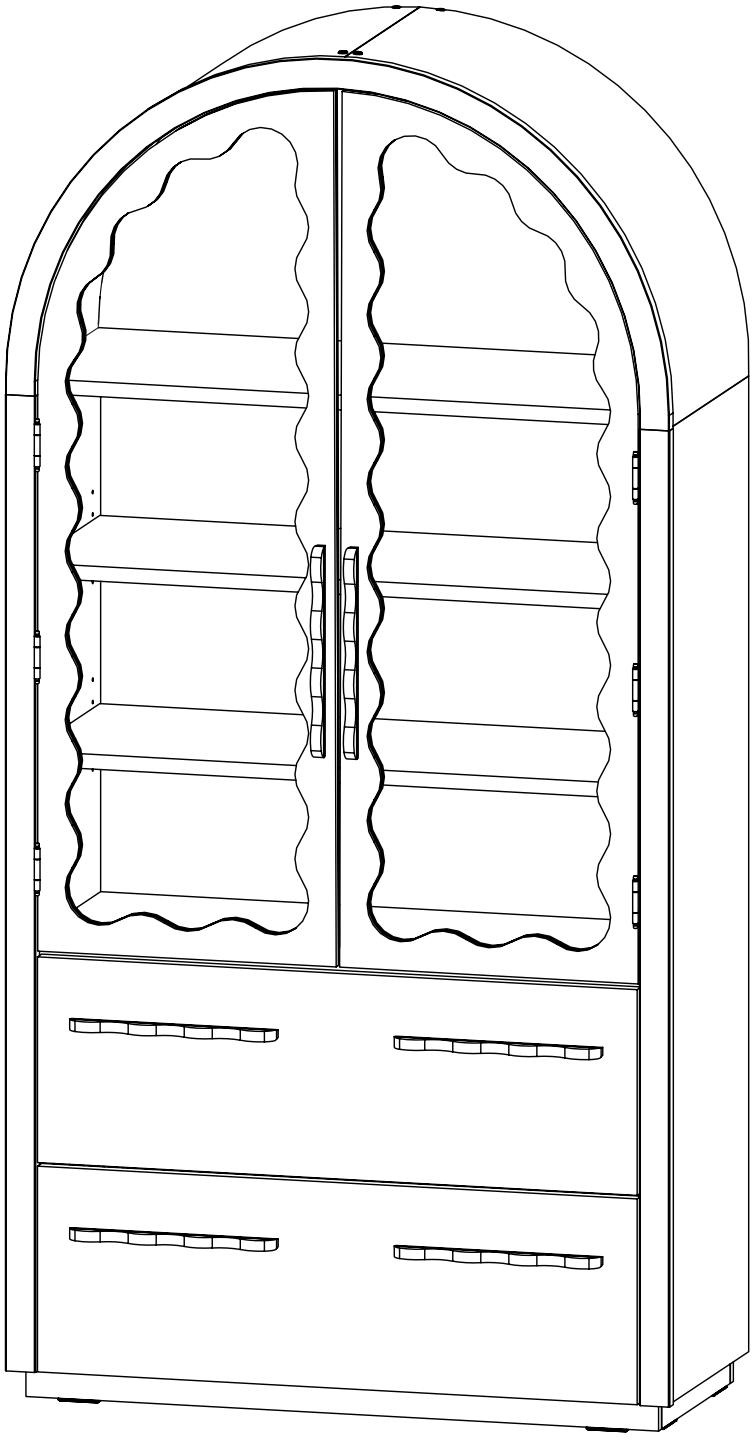


ASSEMBLY INSTRUCTIONS

Display Cabinet

EEI-7589 / V1.06.11.26

modway

Questions? Contact us!
609.256.9000
cs@modway.com

Welcome.
Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 90 minutes.** Consider having a friend help you!

Only use hand tools to assemble this item
Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.



Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Care instructions are listed in the last step of this manual.


WAIT!

Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!

HARDWARE INCLUDED IN THE BOX:

A		Cam Bolt Ø6 x 35 mm	x42
B		Cam Lock Ø15 mm	x32
C		Cam Lock Ø12 mm	x10
D		Wood Dowel Ø8 x 30 mm	x53
E		Wood Dowel Ø6 x 30 mm	x20
F		Wood Dowel Ø8 x 20 mm	x4
G		Screw M 3 x 15.5 mm	x18
H		Screw M 6.4 x 25 mm	x18
I		Screw M 7 x 70 mm	x10
J		Wedge	x32
K		Screw M 3.5 x 15.5 mm	x32
L		Cam Bolt Ø6 x 19.5 mm	x8
M		Screw M 4 x 25 mm	x12
N		Joining Strip	x3
O		Bracket	x2
P		Screw M 12 x 10 mm	x2
Q		Screw M 4.5 x 12.5 mm	x30
R		Screw M 4 x 39 mm	x13
S		Screw M 6 x 10.5 mm	x8
T		Screw M 3.5 x 13 mm	x12
U		Screw Cap Ø15 mm	x8
V		Floor Glide	x8
W		Screw M 7 x 50 mm	x2
NMH21A		Hinge	x6
HGL4		Hand Grip + Allen Key	1 SET
RM35A		Drawer Runner	x2


WHAT YOU NEED:



Phillips Head Screwdriver

FURNITURE COMPONENTS INCLUDED IN THE BOX:

All parts are numbered with a sticker according to this list.

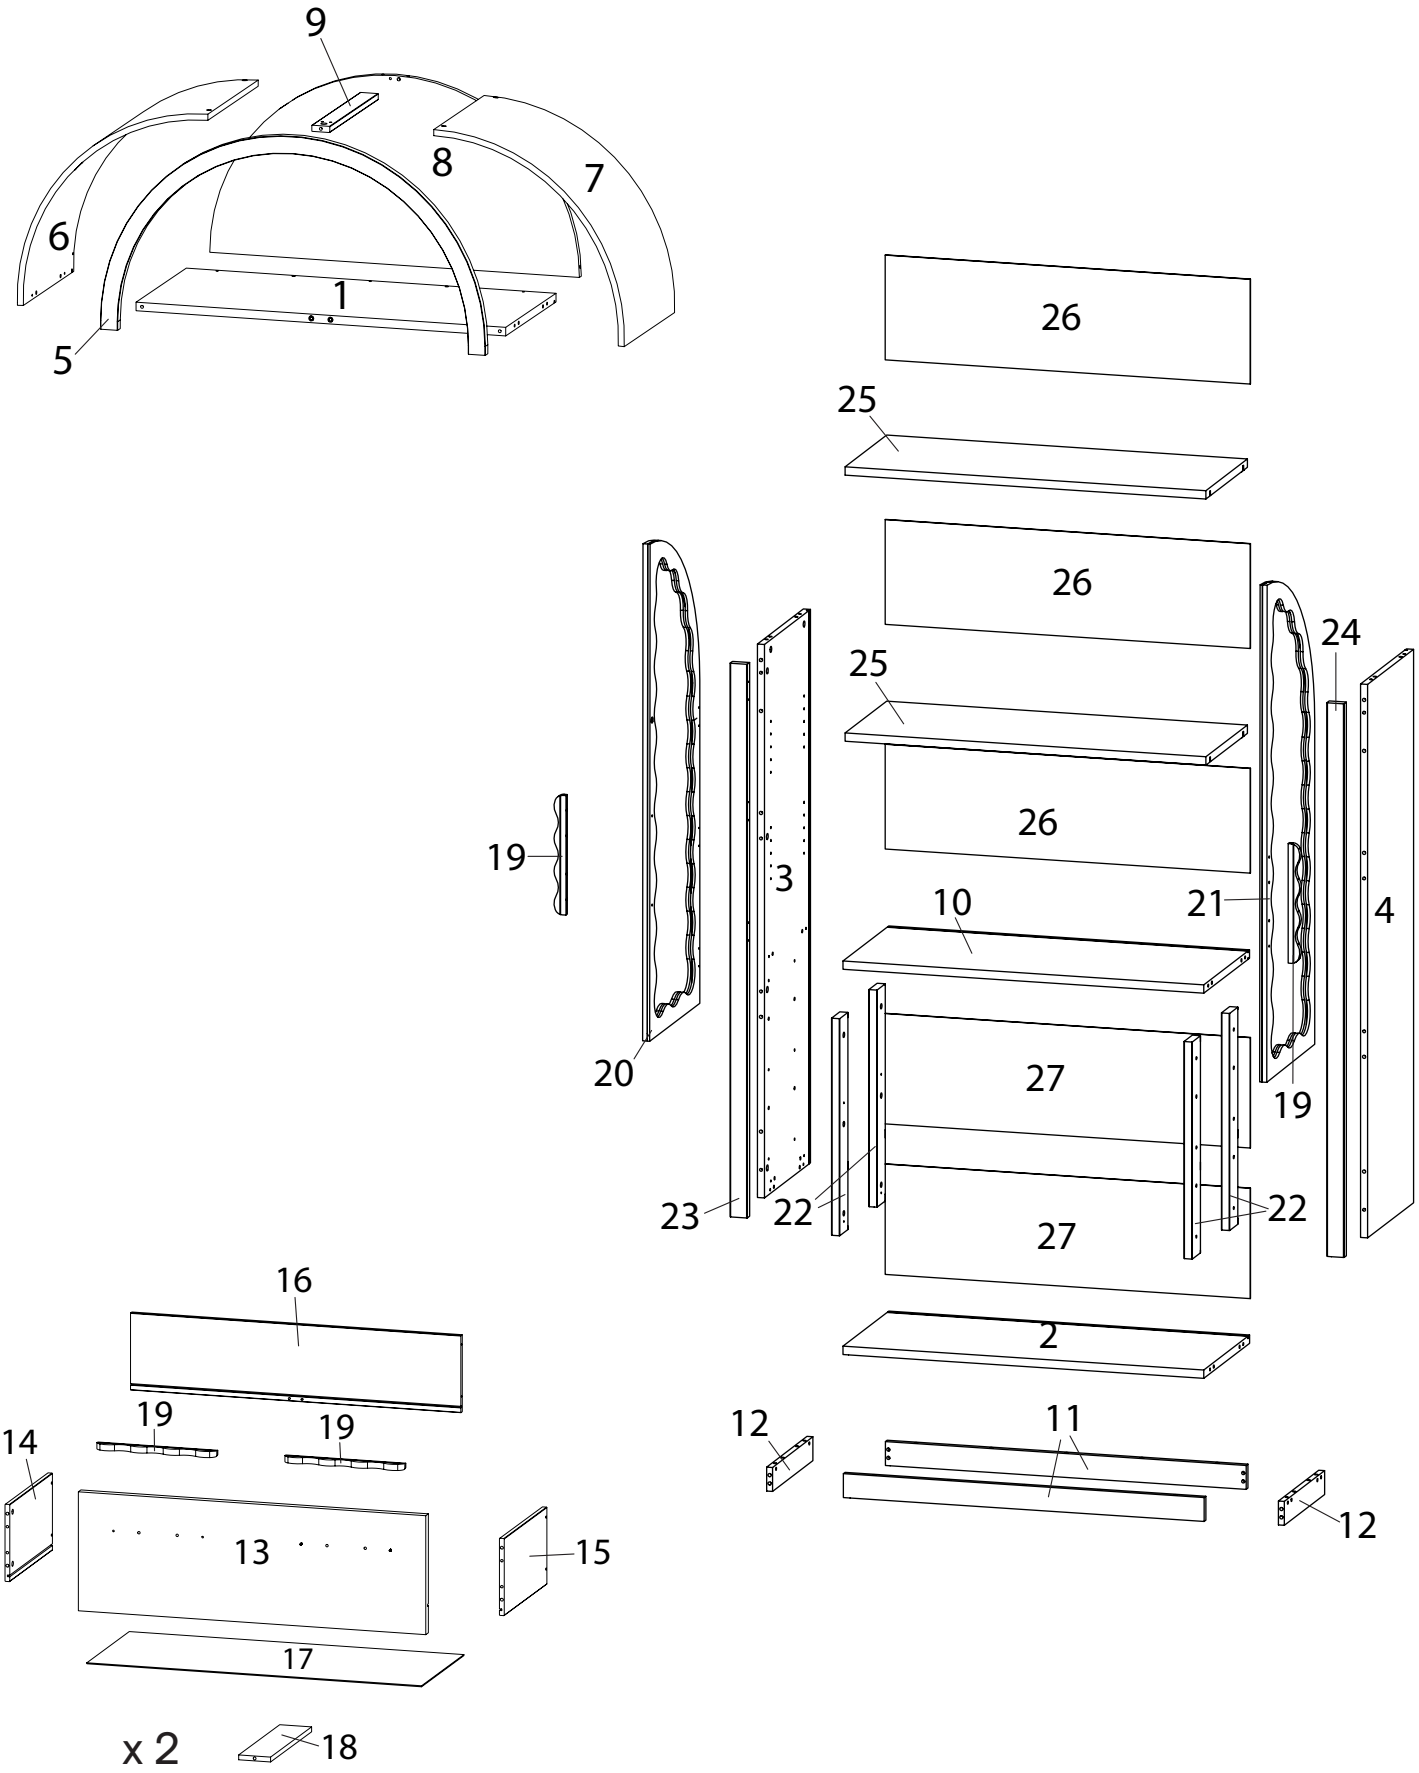

FURNITURE COMPONENTS INCLUDED IN THE BOX:

All parts are numbered with a sticker according to this list.

1 Top Board x1	11 Bottom Skirt 1 x2	21 Door Right x1
2 Bottom Board x1	12 Bottom Skirt 2 x2	22 Support Board x4
3 Side Board Left x1	13 Front Drawer x2	23 Front Skirt Left x1
4 Side Board Right x1	14 Side Drawer Left x2	24 Front Skirt Right x1
5 Front Board x1	15 Side Drawer Right x2	25 Adjustable Shelf x2
6 Left Hutch Panel x1	16 Back Drawer x2	26 Back Board 1 x3
7 Right Hutch Panel x1	17 Bottom Drawer x2	27 Back Board 2 x2
8 Back Board Hutch x1	18 Support Drawer x2	
9 Support Board Hutch x1	19 Handle x6	
10 Fixed Shelf x1	20 Door Left x1	

COMPONENTS CARTON PLACEMENT

Carton 1 Of 2

Label	Description	Qty
1	Top Board	x1
2	Bottom Board	x1
5	Front Board	x1
6	Left Hutch Panel	x1
7	Right Hutch Panel	x1
8	Back Board Hutch	x1
9	Support Board Hutch	x1
10	Fixed Shelf	x1
13	Front Drawer	x2
19	Handle	x6
22	Support Board	x4
25	Adjustable Shelf	x2
	Hardware Pack	x1

Carton 2 Of 2


Label	Description	Qty
3	Side Board Left	x1
4	Side Board Right	x1
11	Bottom Skirt 1	x2
12	Bottom Skirt 2	x2
14	Side Drawer Left	x2
15	Side Drawer Right	x2
16	Back Drawer	x2
17	Bottom Drawer	x2
18	Support Drawer	x2
20	Door Left	x1
21	Door Right	x1
23	Front Skirt Left	x1
24	Front Skirt Right	x1

Label	Description	Qty
26	Back Board 1	x3
27	Back Board 2	x2
N	Joining Strip	x3


HAND GRIP POSITION ADJUSTMENT

HARDWARE


HGL4 **Hand Grip + Allen Key**

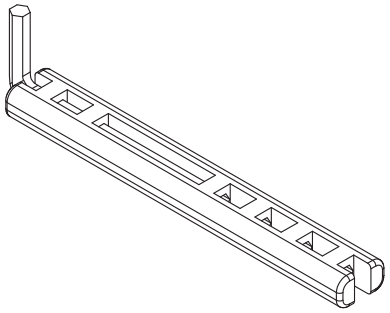

POSITION 1

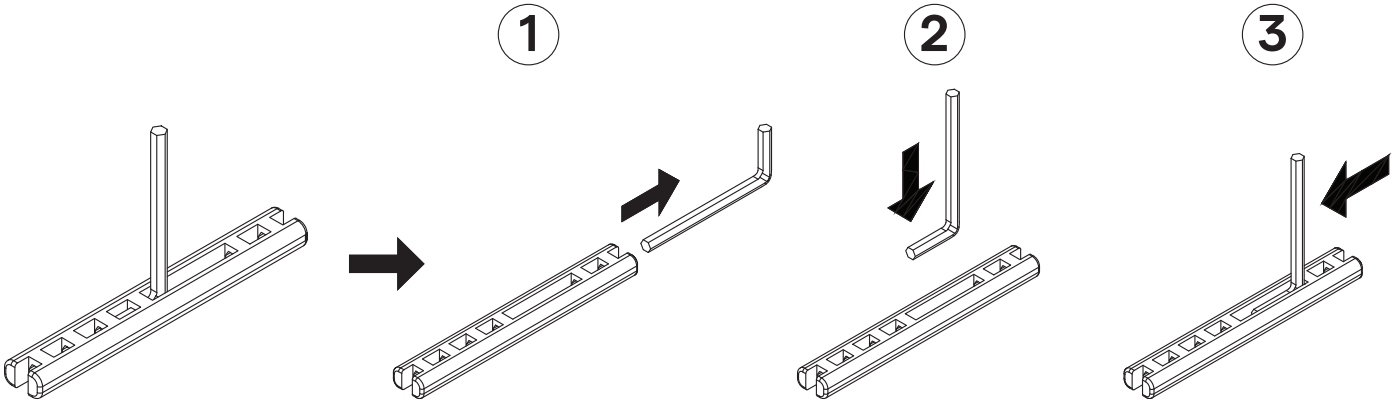

POSITION 2

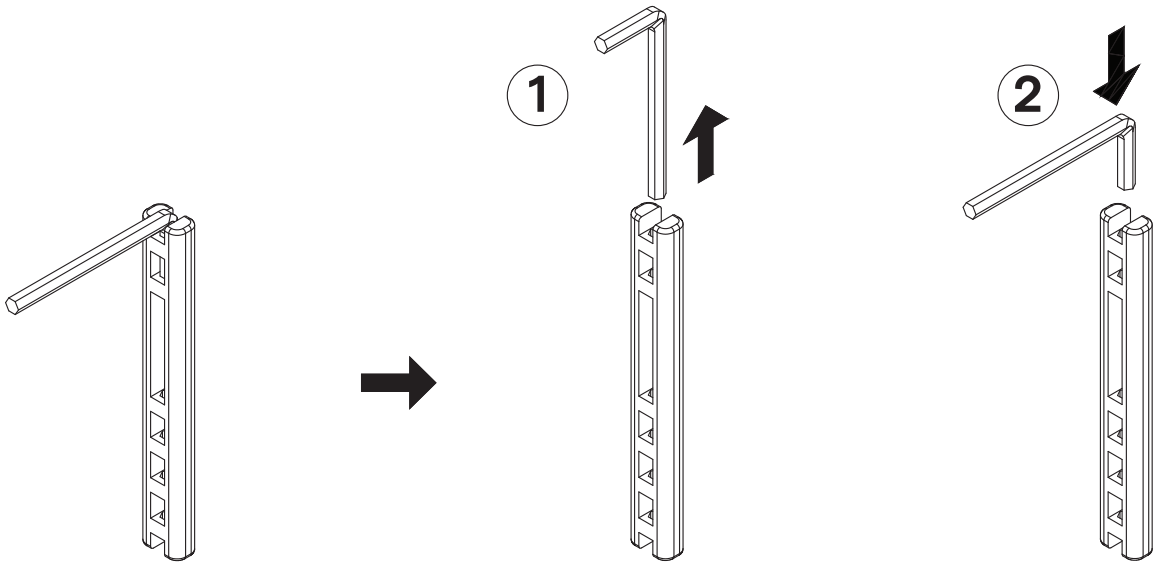

HARDWARE


A	**Cam Bolt Ø6 x 35 mm**	**x10**
E	**Wood Dowel Ø6 x 30 mm**	**x16**


COMPONENTS


13	**Front Drawer**	**x2**
14	**Side Drawer Left**	**x2**
15	**Side Drawer Right**	**x2**
19	**Handle**	**x4**


1.1 Insert Cam Bolt Ø6 x 35 mm (A) into Front Drawer (13), then tighten using screwdriver. Position as shown in the figure.

1.2 Insert Wood Dowel Ø6 x 30 mm (E) into Side Drawer Left (14), Side Drawer Right (15) and Handle (19). Position as shown in the figure.

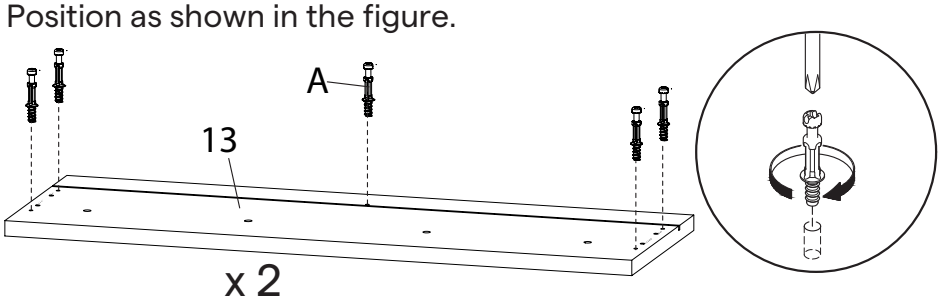

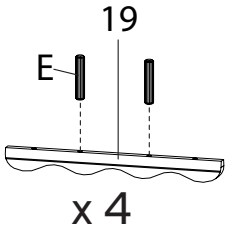

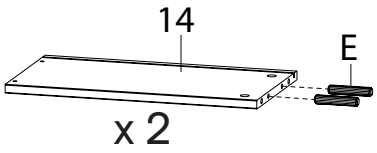

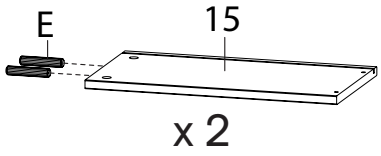

STEP 02

HARDWARE


C	**Cam Lock Ø12 mm**	**x10**


COMPONENTS

13	**Front Drawer**	**x2**
14	**Side Drawer Left**	**x2**
15	**Side Drawer Right**	**x2**
17	**Bottom Drawer**	**x2**
18	**Support Drawer**	**x2**

2.1 Attach Side Drawer Left (14), Side Drawer Right (15) and Support Drawer (18) to Front Drawer (13) secure with Cam Lock Ø12 mm (C), then tighten using screwdriver.

2.2 Insert Bottom Drawer (17) into Front Drawer with laminated face facing upward. Position as shown in the figure.

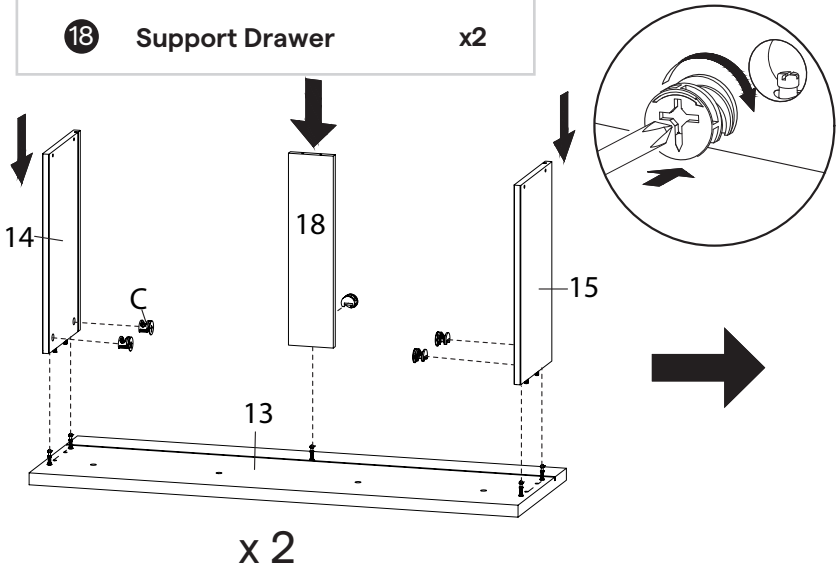

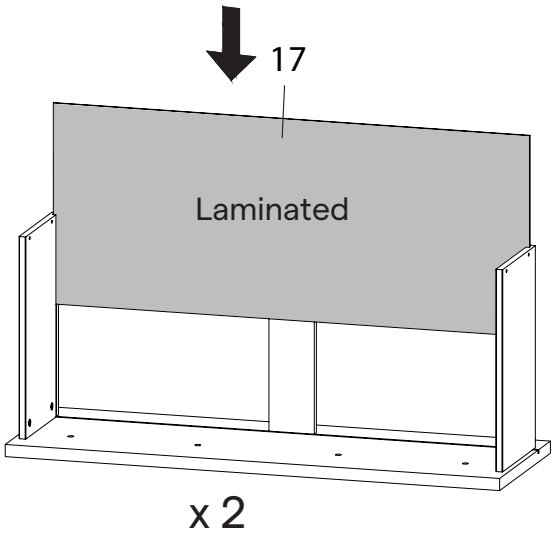

HARDWARE


M	**Screw M 4 x 25 mm**	**x8**
R	**Screw M 4 x 39 mm**	**x12**

COMPONENTS

16	**Back Drawer**	**x2**
19	**Handle**	**x4**

3.1 Insert Back Drawer (16) into Assembly Drawer from previous step, secure with Screw M 4 x 39 mm (R) then tighten using screwdriver, position as shown in the picture.

3.2 Attach Handle (19) to Front Drawer, secure with Screw M 4 x 25 mm (M) tighten using screwdriver, position as shown in the picture.

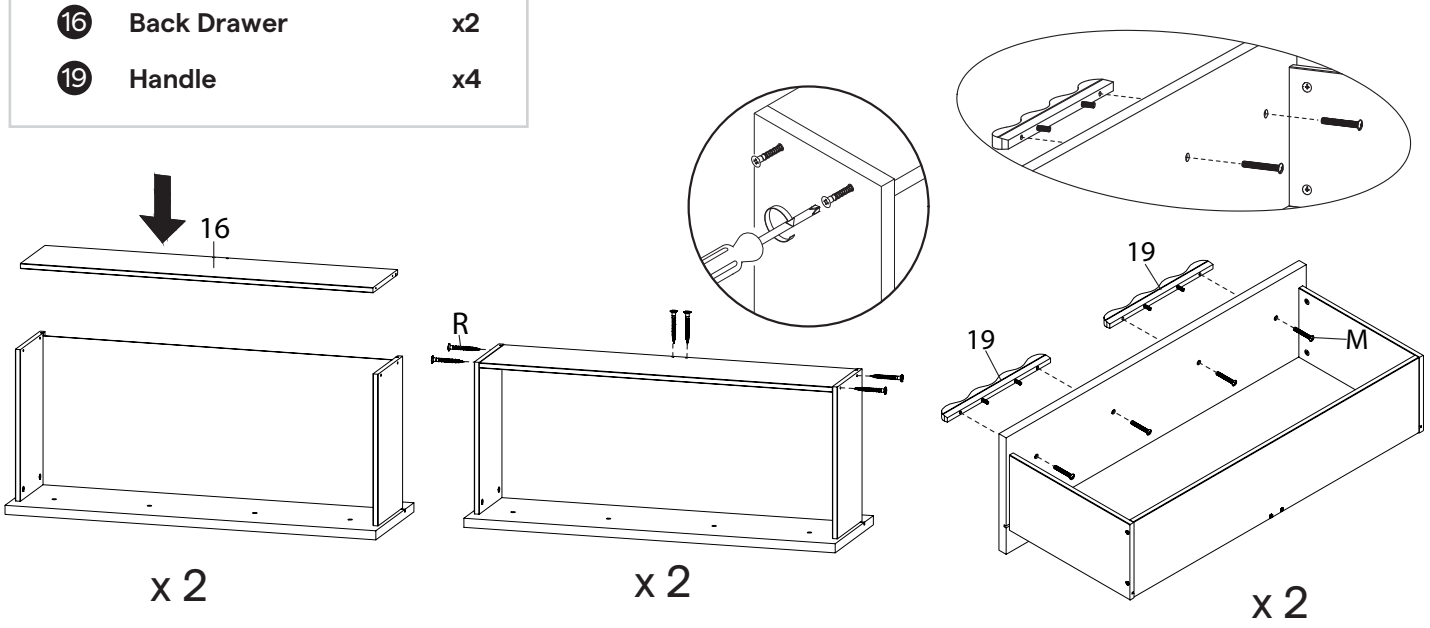


STEP 04

HARDWARE

J	**Wedge**	**x8**
K	**Screw M 3.5 x 15.5 mm**	**x8**
T	**Screw M 3.5 x 13 mm**	**x12**
RM35A	**Drawer Runner**	**x2**

4.1 Install Part of Drawer Runner (RM35A) to Side Drawer. Secure with Screw M 3.5 x 13 mm (T), then tighten using screwdriver.

4.2 Insert Wedge (J) into Bottom of the Drawer, secure with Screw M 3.5 x 15.5 mm (K), then tighten using screwdriver. Ensure the position of Wedge (J) correct below detail.

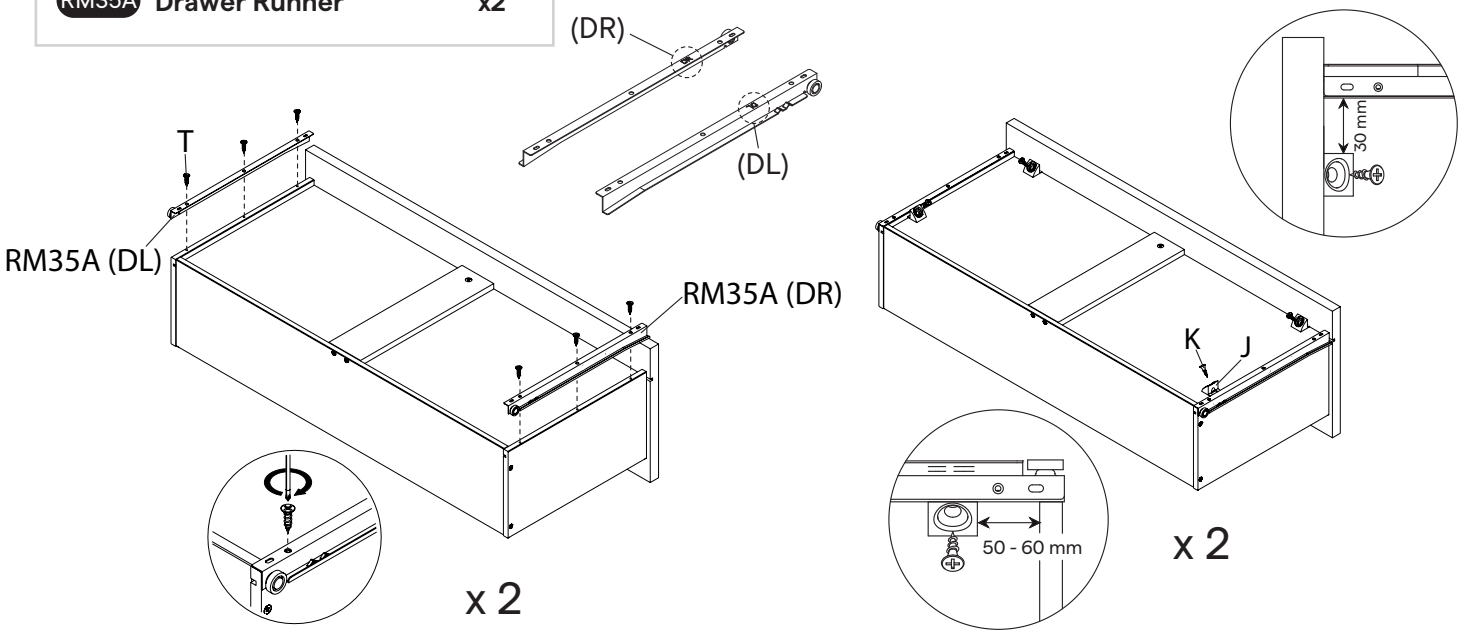


HARDWARE

D	**Wood Dowel Ø8 x 30 mm**	**x24**

COMPONENTS

2	**Bottom Board**	**x1**
10	**Fixed Shelf**	**x1**
11	**Bottom Skirt 1**	**x2**
12	**Bottom Skirt 2**	**x2**

5.1 Insert Wood Dowel Ø8 x 30 mm (D) into Bottom Board (2), Fixed Shelf (10), Bottom Skirt 1 (11) and Bottom Skirt 2 (12). Position as shown in the figure.

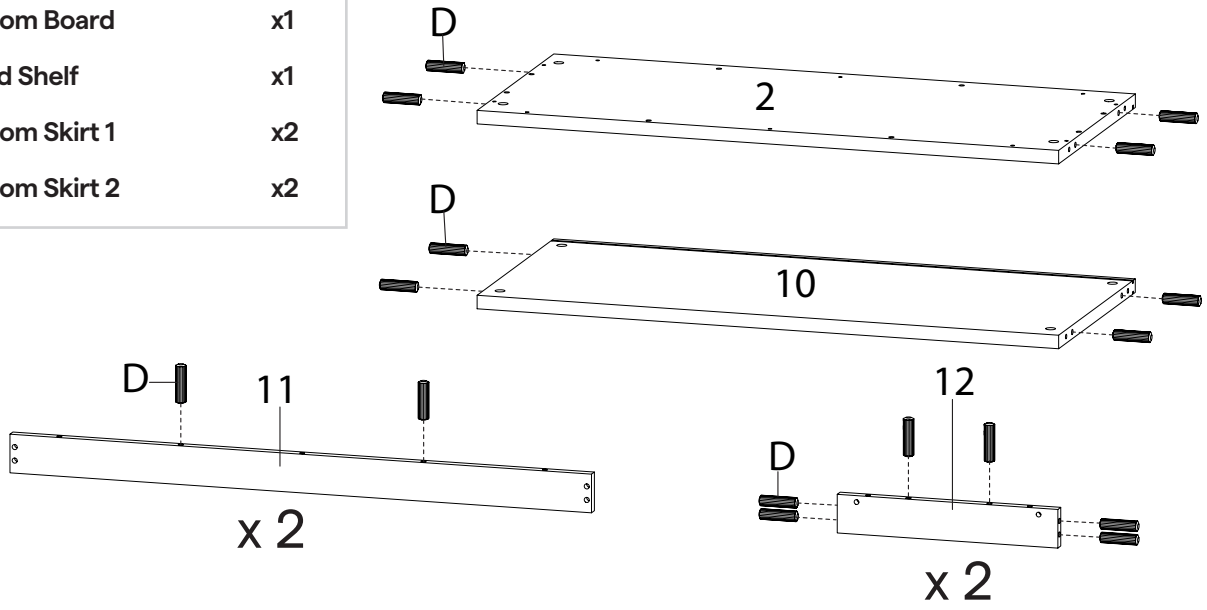


STEP 06

COMPONENTS

11	**Bottom Skirt 1**	**x2**
12	**Bottom Skirt 2**	**x2**

6.1 Combine Bottom Skirt 1 (11) and Bottom Skirt 2 (12). Position as shown in the figure.

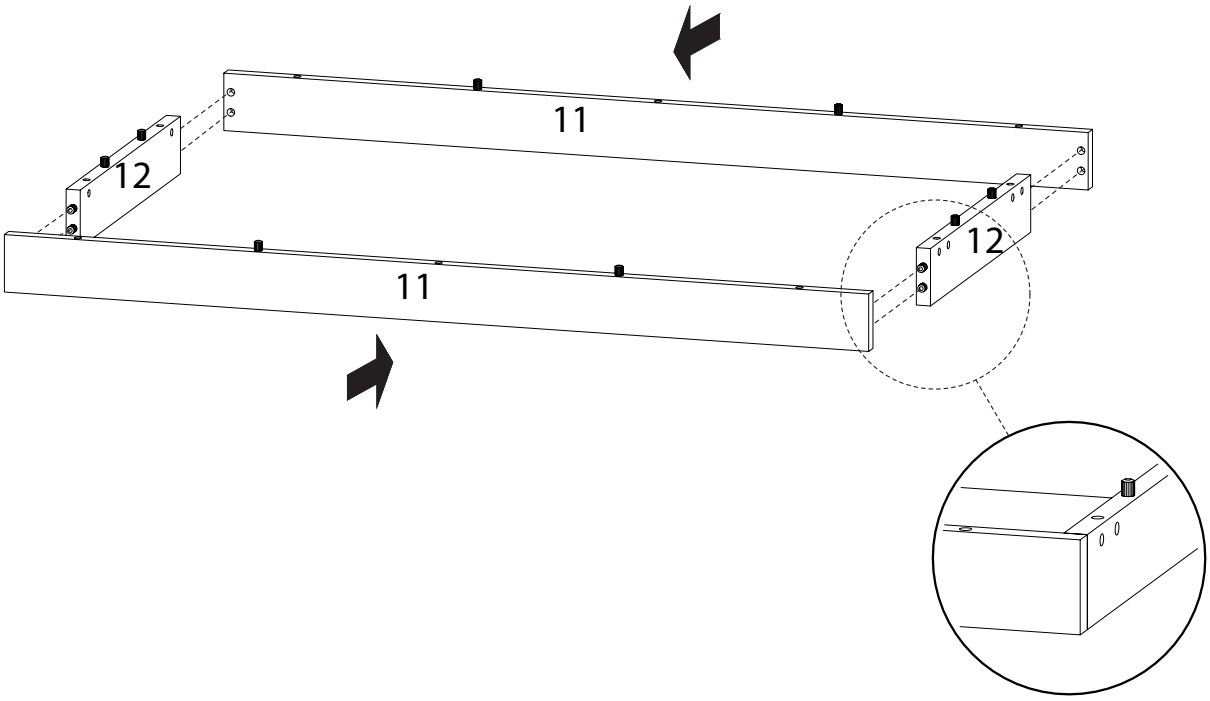


HARDWARE


I	**Screw M 7 x 70 mm**	**x10**
HGL4	**Hand Grip + Allen Key**	**x1**

COMPONENTS

2	**Bottom Board**	**x1**

7.1 Attach Assembly Bottom Skirts from previous step to Bottom Board (2), secure with Screw M 7 x 70 mm (I), tighten screws using Hand Grip + Allen Key (HGL4). Position as shown in the figure.

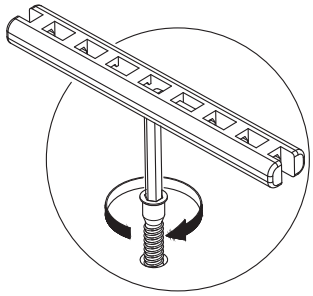

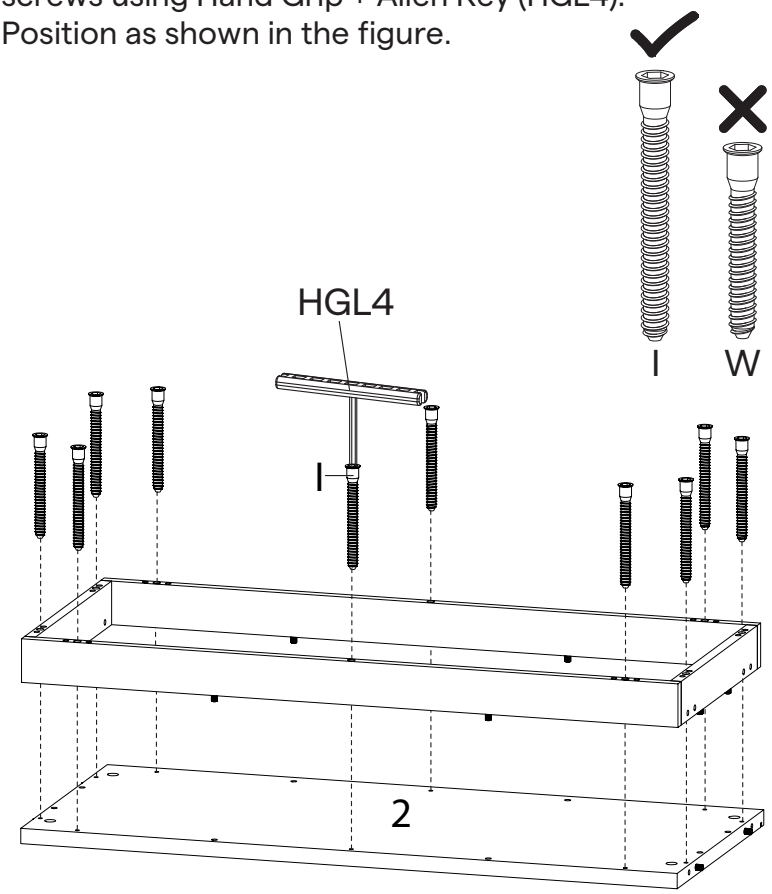



STEP 08


HARDWARE

F	**Wood Dowel Ø8 x 20 mm**	**x4**

8.1 Insert Wood Dowel Ø8 x 20 mm (F) to Bottom Skirt 2 from previous step. Position as shown in the figure.

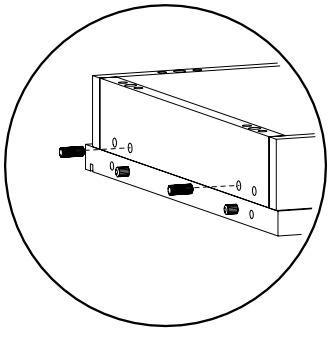

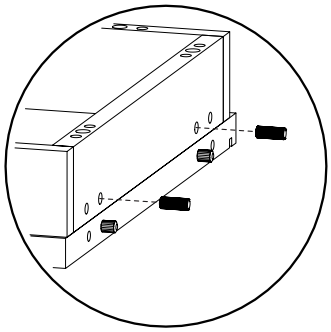

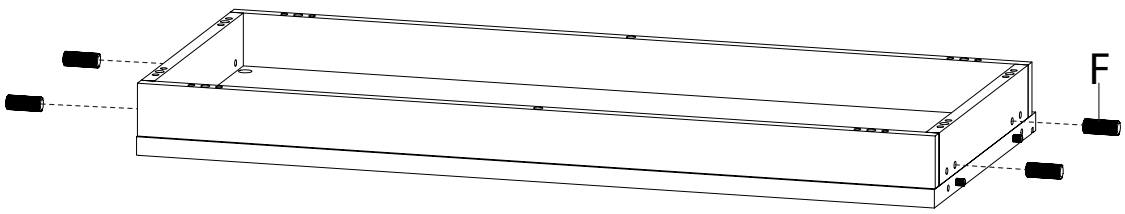

HARDWARE


A	Cam Bolt Ø6 x 35 mm	x8
D	Wood Dowel Ø8 x 30 mm	x14
L	Cam Bolt Ø6 x 19.5 mm	x8

COMPONENTS

3	Side Board Left	x1
4	Side Board Right	x1

9.1 Insert Cam Bolt Ø6 x 35 mm (A) and Cam Bolt Ø6 x 19.5 mm (L) into Side Board Left (3) and Side Board Right (4), then tighten using screwdriver. Position as shown in the figure.

9.2 Insert Wood Dowel Ø8 x 30 mm (D) into Side Board Left (3) and Side Board Right (4). Position as shown in the figure.

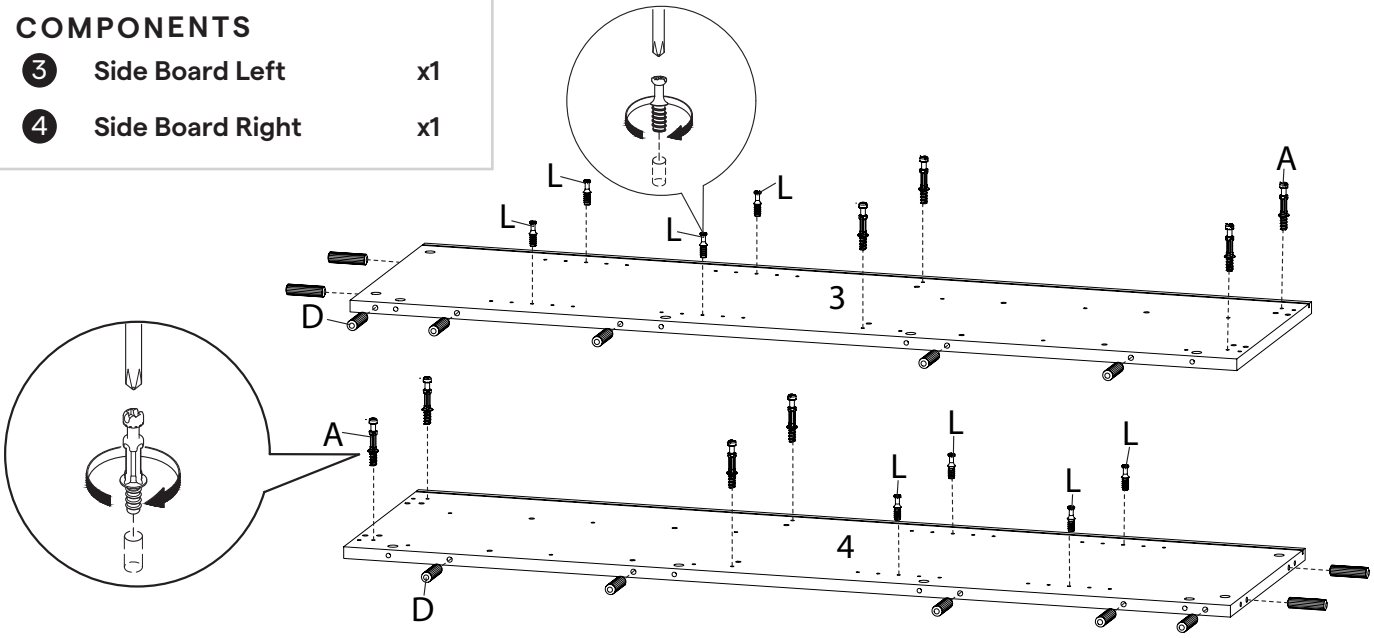

STEP 10


HARDWARE

B	Cam Lock Ø15 mm	x4

COMPONENTS

2	Bottom Board	x1
4	Side Board Right	x1
10	Fixed Shelf	x1


10.1 Attach Assembly Bottom Board from step 08 and Fixed Shelf (10) to Side Board Right (4), secure with Cam Lock Ø15 mm (B), then tighten using screwdriver. Position as shown in the figure.

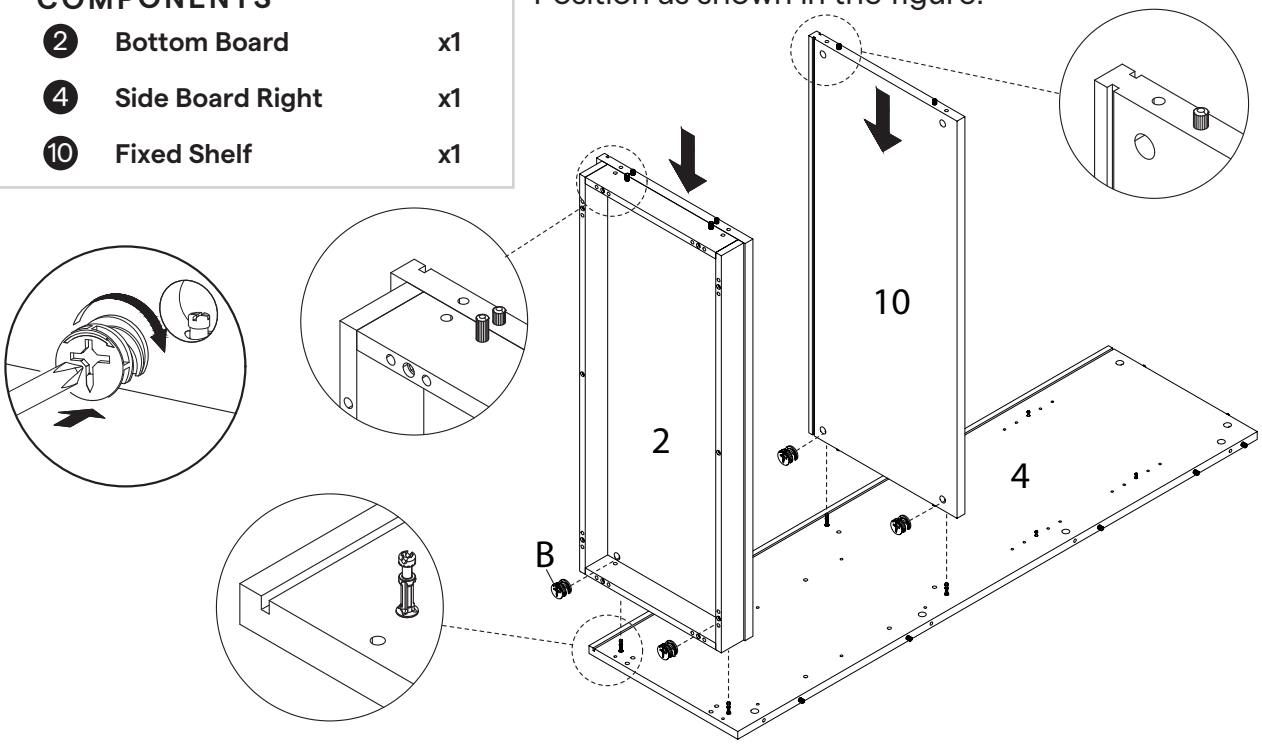


HARDWARE

H	**Screw M 6.4 x 25 mm**	**x2**
HGL4	**Hand Grip + Allen Key**	**x1**

11.1 Insert Screw M 6.4 x 25 mm (H), tighten screws using Hand Grip + Allen Key (HGL4). Position as shown in the figure.

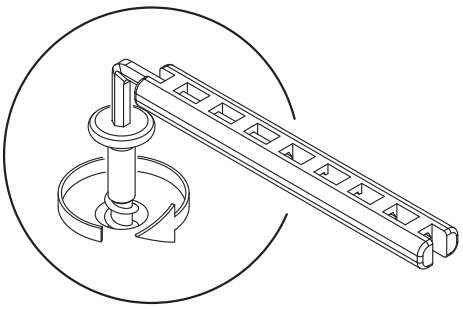

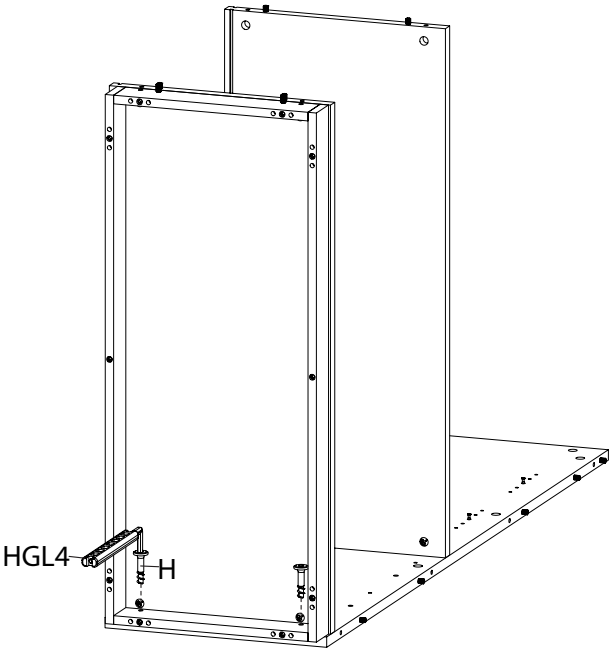

STEP 12


HARDWARE


N	**Joining Strip**	**x1**

COMPONENTS

27	**Back Board 2**	**x2**

12.1 Insert Back Boards 2 (27) into Side Board Right. Then insert Joining Strip (N) in between the Back Boards 2 (27).

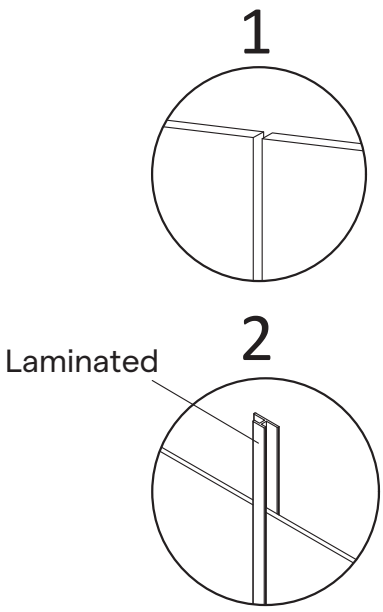

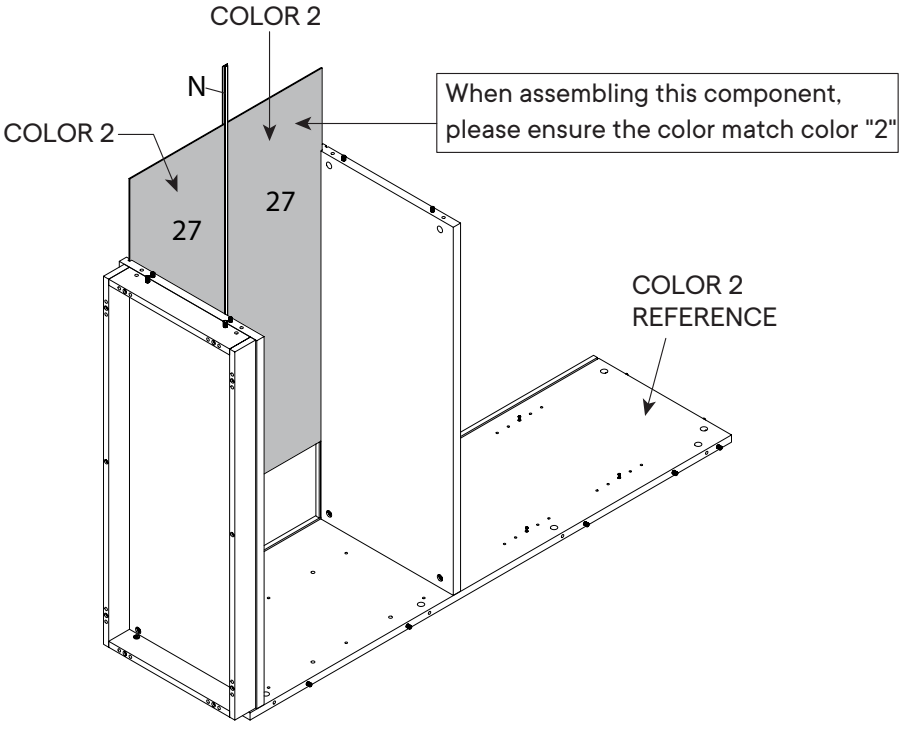


HARDWARE


B	**Cam Lock Ø15 mm**	**x4**
H	**Screw M 6.4 x 25 mm**	**x2**
HGL4	**Hand Grip + Allen Key**	**x1**

COMPONENTS

3	**Side Board Left**	**x1**

13.1 Attach Side Board Left (3) to Pre Assembly item from previous step, secure with Screw M 6.4 x 25 mm (H), then tighten using Hand Grip + Allen Key (HGL4). Insert Cam Lock Ø15 mm (B) to Fixed Shelf and Bottom Board, then tighten using screwdriver. Position as shown in the figure.

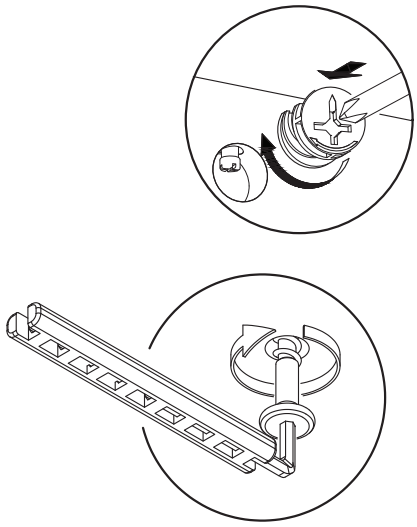

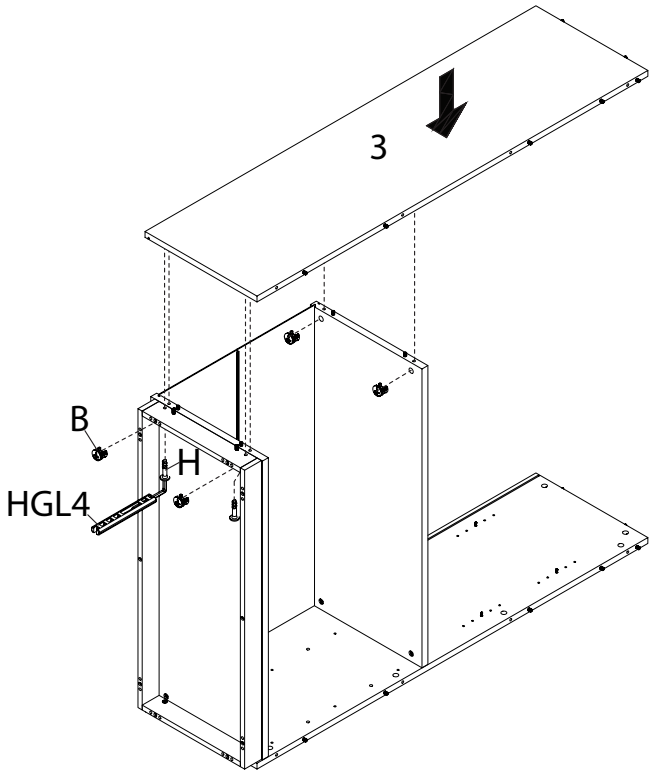



STEP 14

HARDWARE

V	**Floor Glide**	**x8**

14.1 Insert Floor Glide (V) to Bottom Skirts. Position as shown in the figure.

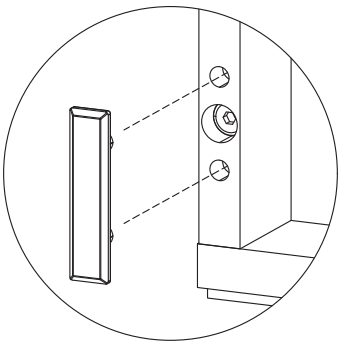

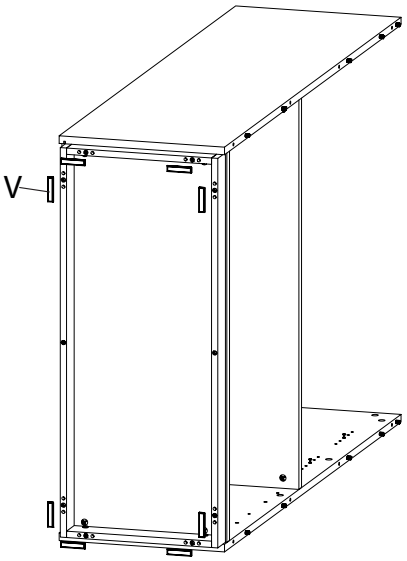

HARDWARE


A	**Cam Bolt Ø6 x 35 mm**	**x8**


COMPONENTS


23	**Front Skirt Left**	**x1**
24	**Front Skirt Right**	**x1**


15.1 Unplug dowel first before assembly the Front Skirt, as shown in the figure.


15.2 Insert Cam Bolt Ø6 x 35 mm (A) into Front Skirt Left (23) and Front Skirt Right (24), then tighten using screwdriver. Position as shown in the figure.

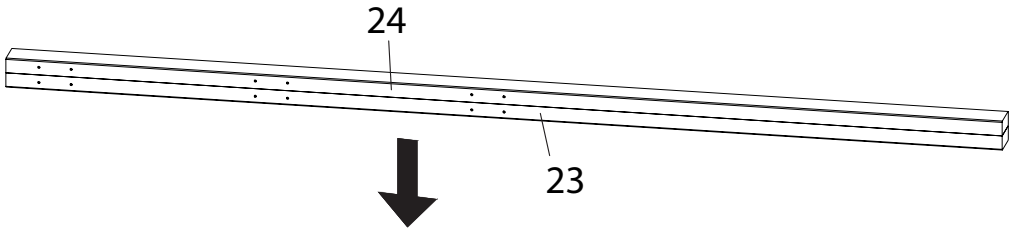

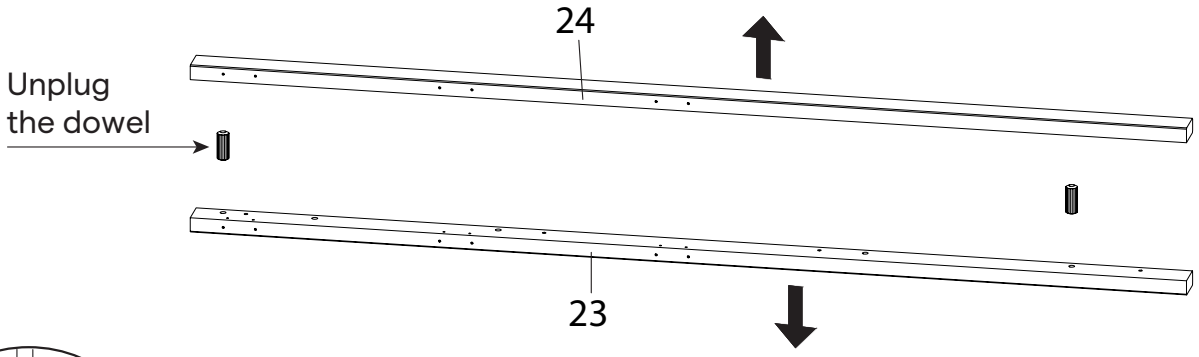

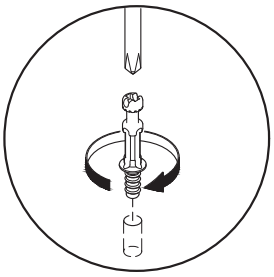

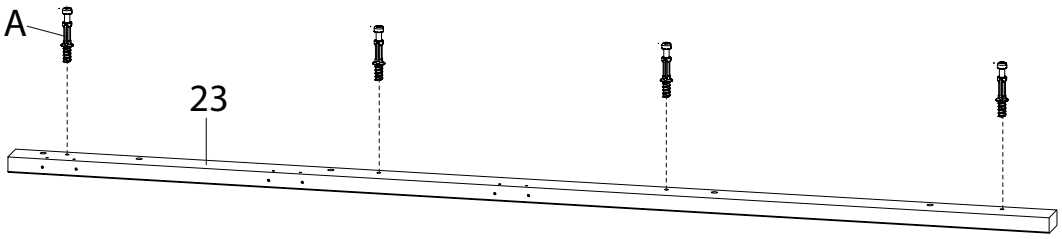

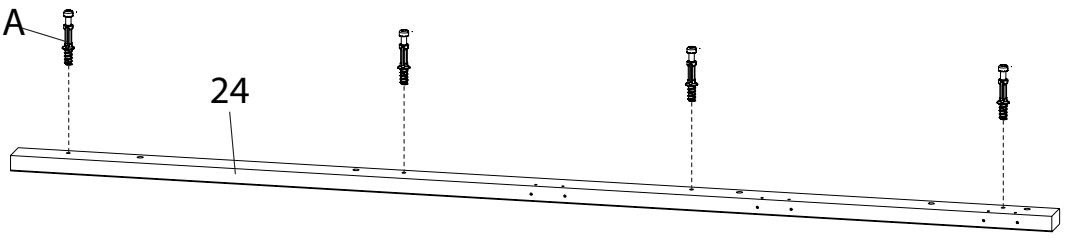


HARDWARE

G	**Screw M 3 x 15.5 mm**	**x12**
Q	**Screw M 4.5 x 12.5 mm**	**x12**
NMH21A	**Hinge**	**x6**

COMPONENTS

23	**Front Skirt Left**	**x1**
24	**Front Skirt Right**	**x1**

16.1 Install Hinge (NMH21A) to Front Skirt Left (23) and Front Skirt Right (24), secure with Screw M 3 x 15.5 mm (G) and Screw M 4.5 x 12.5 mm (Q),then tighten screw using screwdriver. Ensure position of Hinge correct below detail.

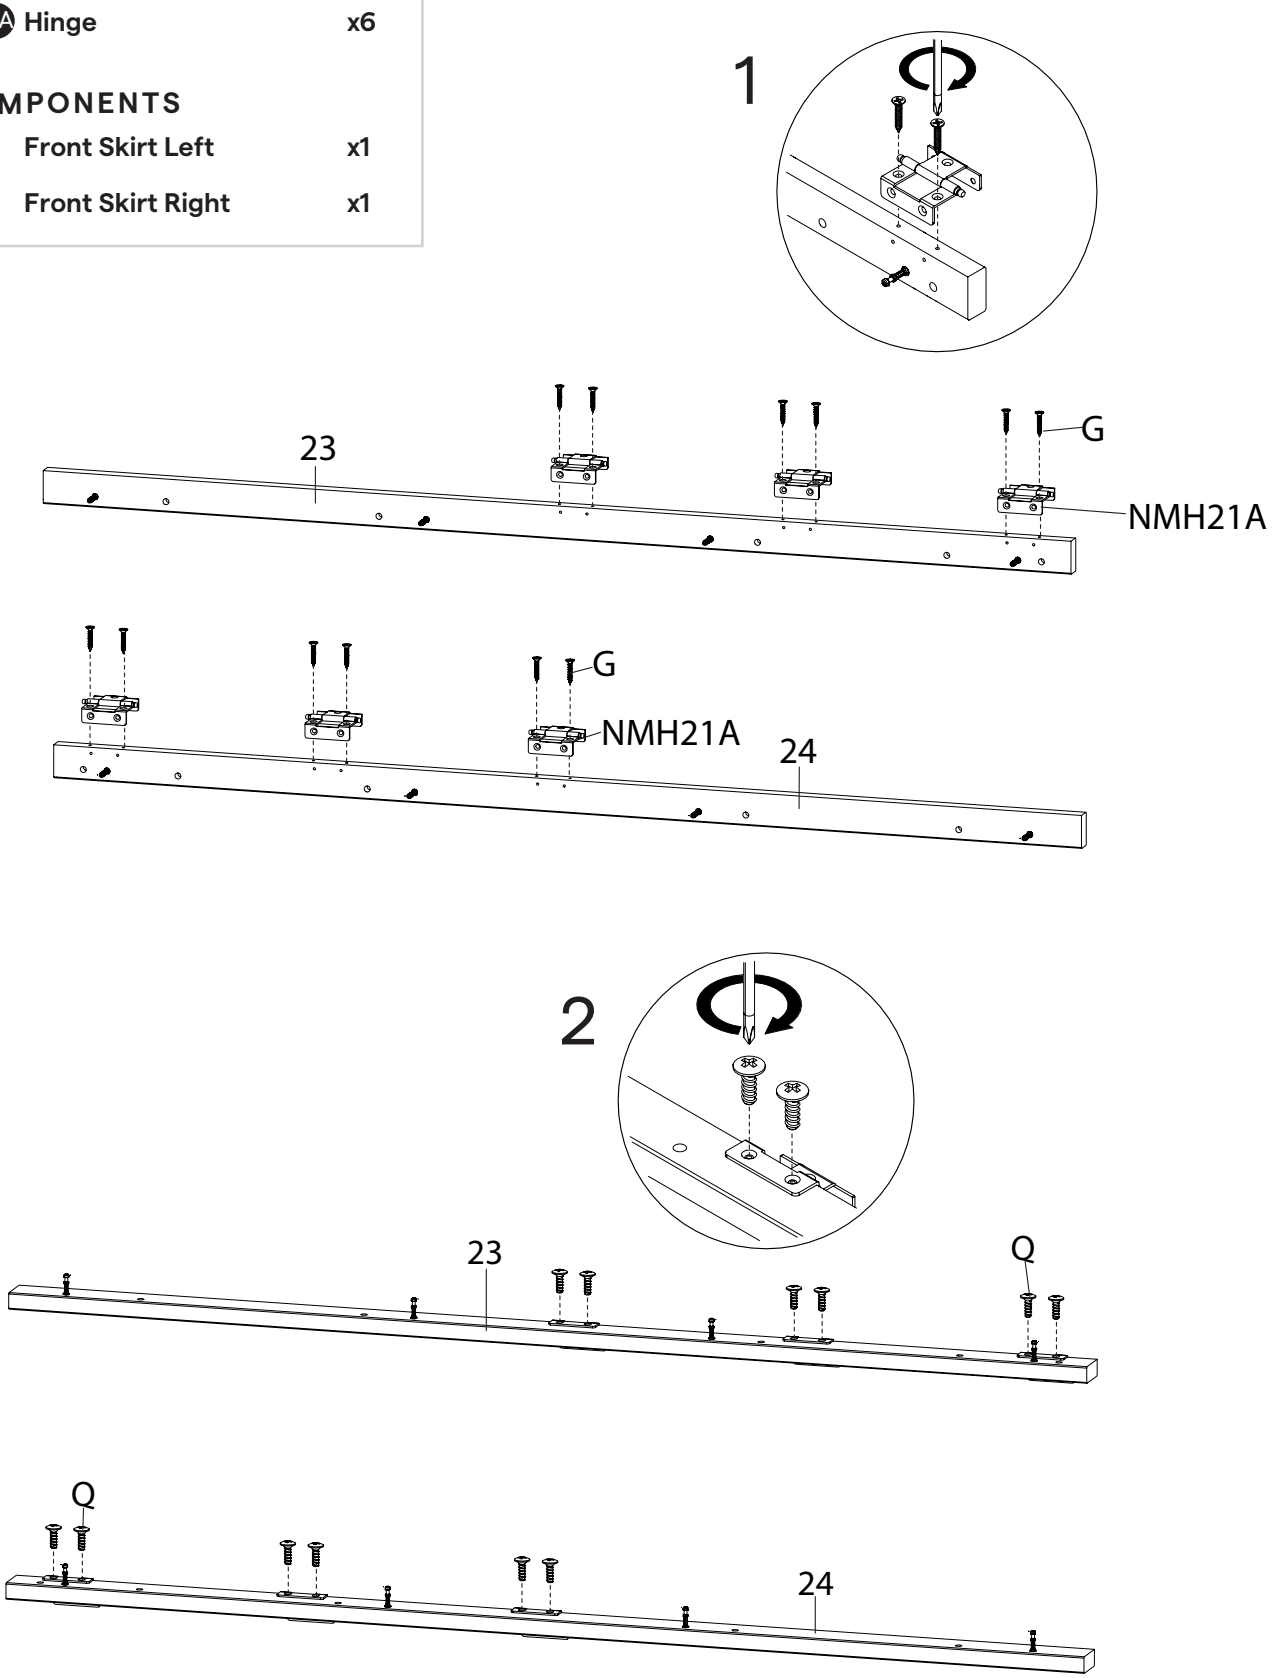

STEP 17


HARDWARE


B	Cam Lock Ø15 mm	x8
U	Screw Cap Ø15 mm	x4

COMPONENTS

23	Front Skirt Left	x1
24	Front Skirt Right	x1

17.1 Attach Front Skirt Left (23) and Front Skirt Right (24) to Side Board Left and Right, secure with Cam Lock Ø15 mm (B), then tighten using screwdriver. Put Screw Cap Ø15 mm (U) to Cam Lock on Side Boards. Position as shown in the figure.

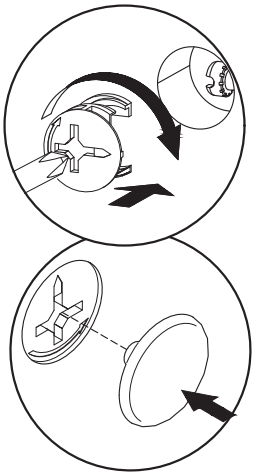

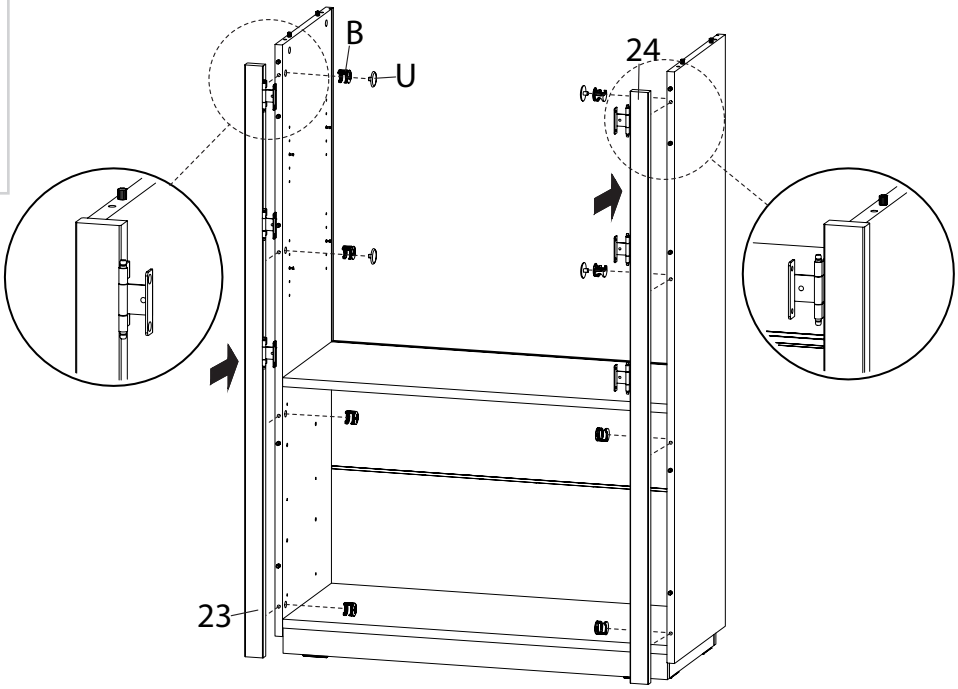

STEP 18


HARDWARE


N	Joining Strip	x2

COMPONENTS

26	Back Board 1	x3

18.1 Insert Back Board 1 (26) into Fixed Shelf, then Insert Joining Strip (N) in between the Back Board 1 (26). Position as shown in the figure.

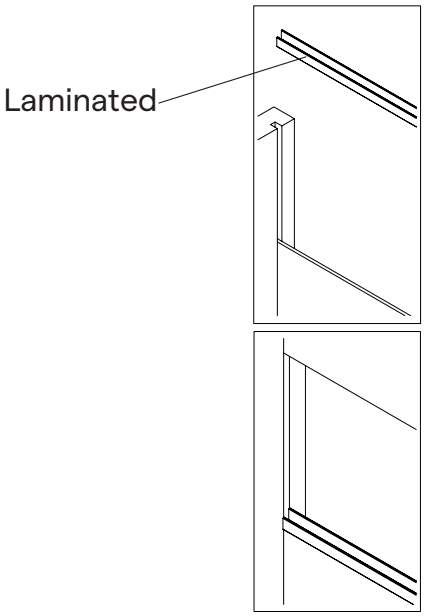

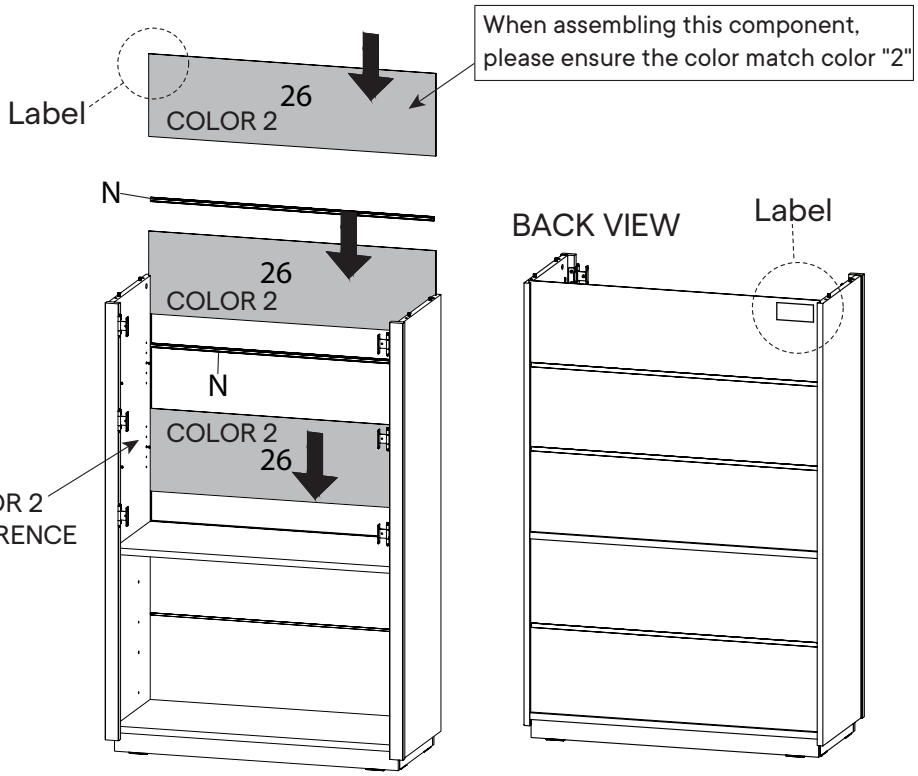

HARDWARE


A	Cam Bolt Ø6 x 35 mm	x3
D	Wood Dowel Ø8 x 30 mm	x7

COMPONENTS

1	Top Board	x1
8	Back Board Hutch	x1
9	Support Board Hutch	x1

19.1 Insert Cam Bolt Ø6 x 35 mm (A) into Top Board (1), then tighten using screwdriver. Position as shown in the figure.

19.2 Insert Wood Dowel Ø8 x 30 mm (D) into Top Board (1), Back Board Hutch (8) and Support Board Hutch (9). Position as shown in the figure.

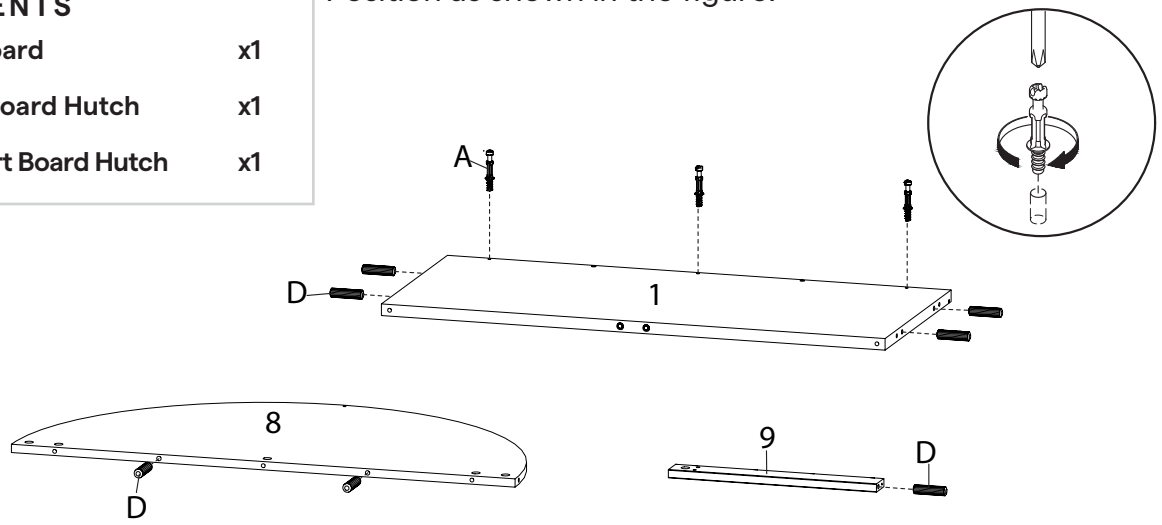

STEP 20

HARDWARE


B	Cam Lock Ø15 mm	x3
R	Screw M 4 x 39 mm	x1

COMPONENTS

1	Top Board	x1
8	Back Board Hutch	x1
9	Support Board Hutch	x1

20.1 Combine Top Board (1) and Back Board Hutch (8), secure with Cam Lock Ø15 mm (B), then tighten using screwdriver. Position as shown in the figure.

20.2 Attach Support Board Hutch (9) Back Board Hutch, secure with Screw M 4 x 39 mm (R), then tighten using screwdriver. Position as shown in the figure.

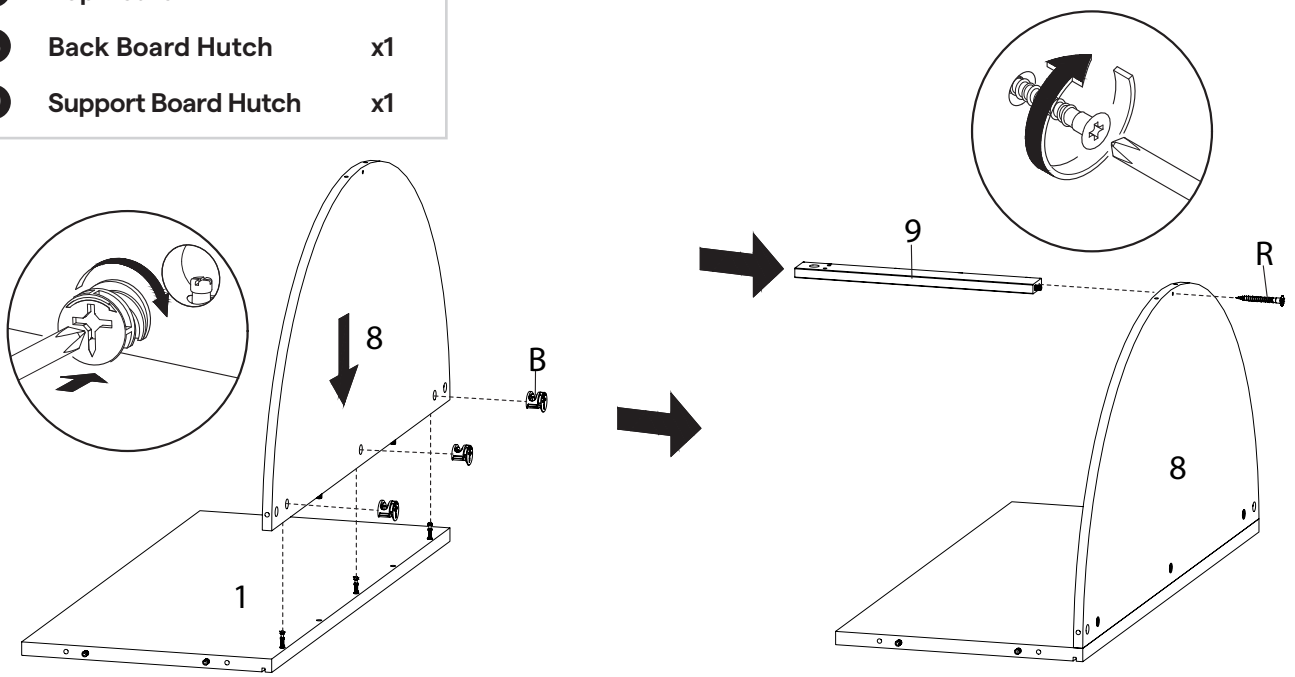

STEP 21


HARDWARE


A	**Cam Bolt Ø6 x 35 mm**	**x9**


COMPONENTS

5	**Front Board**	**x1**
6	**Left Hutch Panel**	**x1**
7	**Right Hutch Panel**	**x1**

21.1 Insert Cam Bolt Ø6 x 35 mm (A) into Front Board (5), Left Hutch Panel (6) and Right Hutch Panel (7), then tighten using screwdriver. Position as shown in the figure.

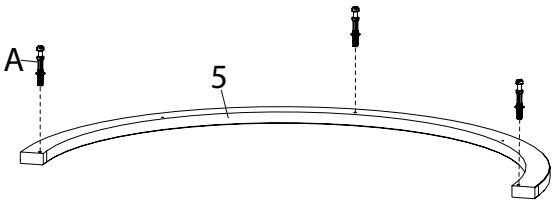

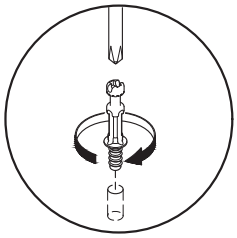

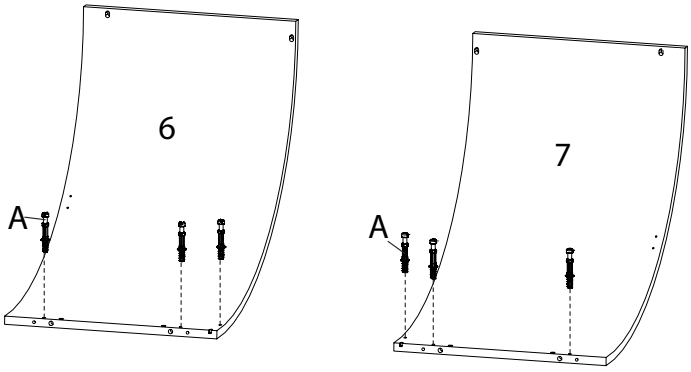

STEP 22


HARDWARE


B	**Cam Lock Ø15 mm**	**x1**

COMPONENTS

5	**Front Board**	**x1**

22.1 Attach Front Board (5) to Pre-Assembly component from step 20, secure with Cam Lock Ø15 mm (B) to Support Board Hutch, then tighten using screwdriver.

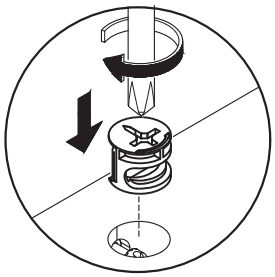


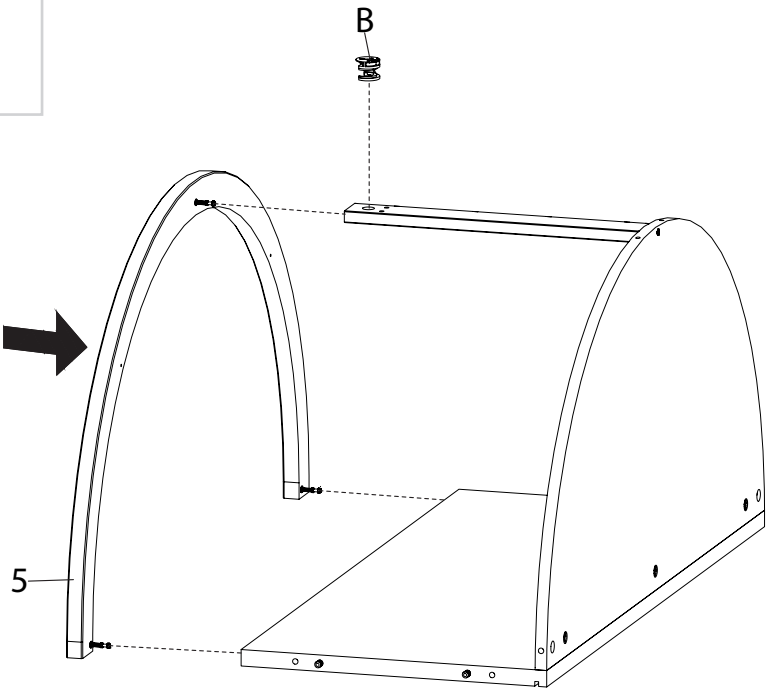

COMPONENTS

6	**Left Hutch Panel**	**x1**
7	**Right Hutch Panel**	**x1**

23.1 Attach Left Hutch Panel (6) and Right Hutch Panel (7) to pre-assembly from previous step.
Position as shown in the figure.

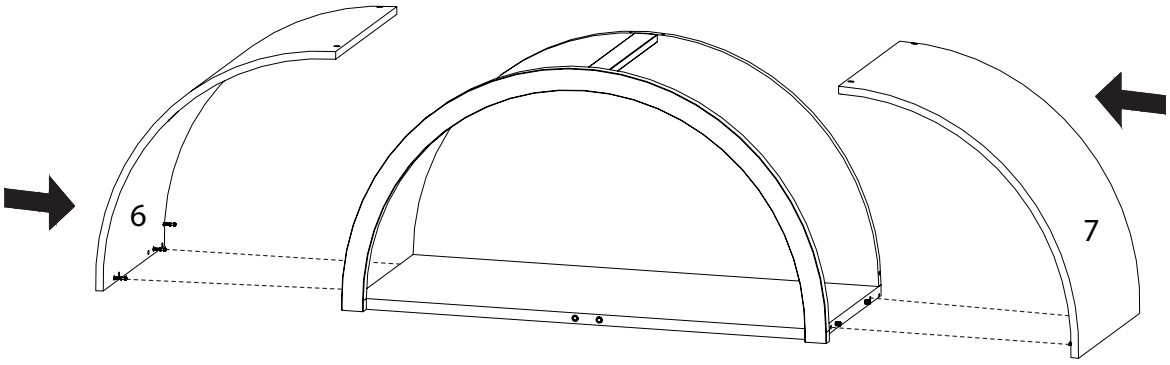


STEP 24

HARDWARE

H	**Screw M 6.4 x 25 mm**	**x2**
W	**Screw M 7 x 50 mm**	**x2**
HGL4	**Hand Grip + Allen Key**	**x1**

24.1 Insert Screw M 6.4 x 25 mm (H) and Screw M 7 x 50 mm (W) to Left & Right Hutch Panel, tighten screws using Hand Grip + Allen Key (HGL4). Position as shown in the figure.

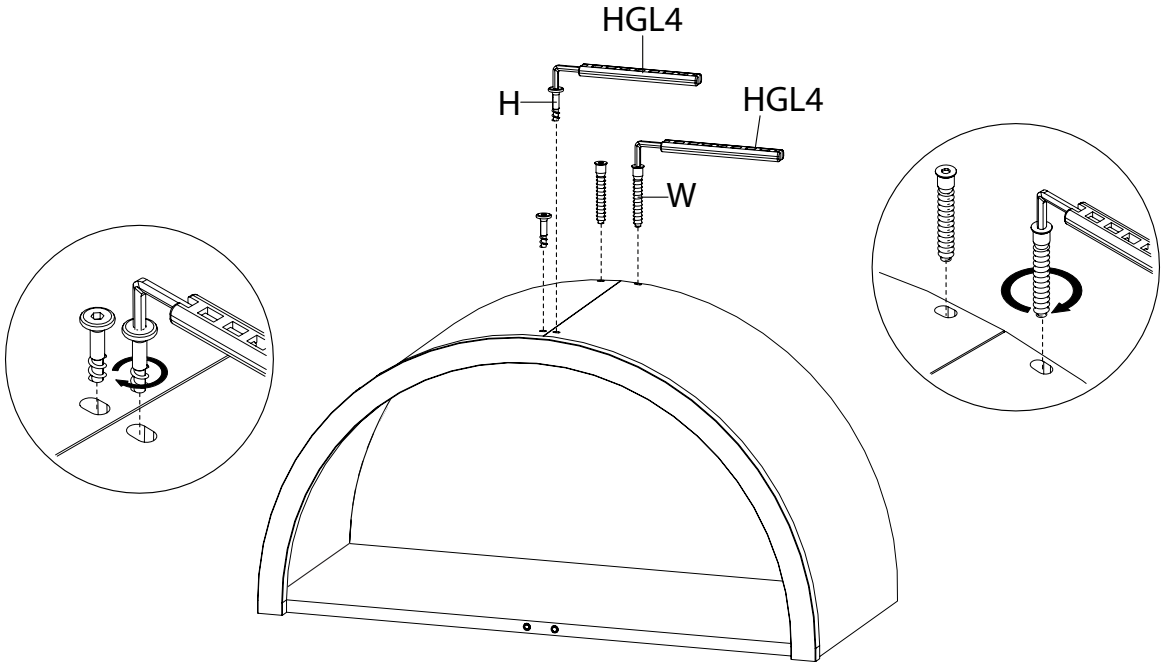


HARDWARE

B	**Cam Lock Ø15 mm**	**x6**
O	**Bracket**	**x2**
Q	**Screw M 4.5 x 12.5 mm**	**x6**

25.1 Insert Screw M 4.5 x 12.5 mm (Q) to Left & Right Hutch Panel. Do not overtighten screw yet, leave around 2mm gap. Then install Bracket (O) into screw has been installed. Position as shown in the figure.

25.2 Insert Screw M 4.5 x 12.5 mm (Q) to Bracket on Front Board then tighten using screwdriver for all screw. Position as shown in the figure.

25.3 Insert Cam Lock Ø15 mm (B) to Top Board, then tighten using screwdriver. Position as shown in the figure.

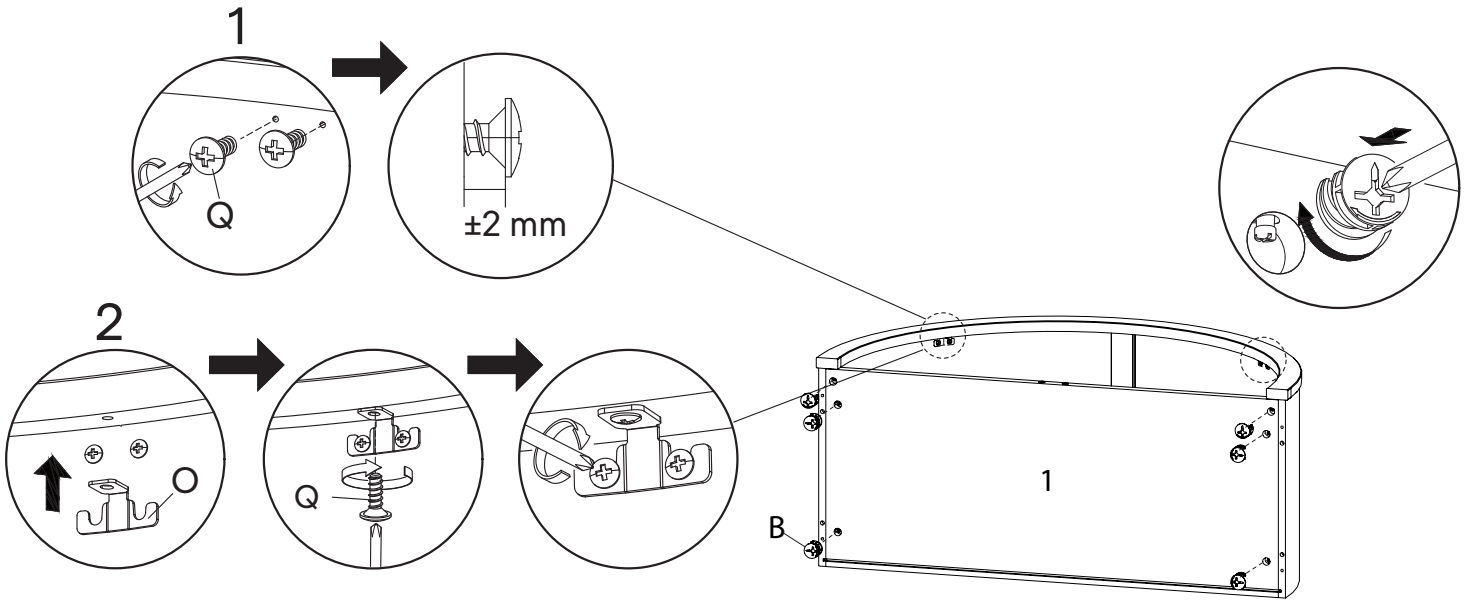


STEP 26

HARDWARE

A	**Cam Bolt Ø6 x 35 mm**	**x4**


26.1 Insert Cam Bolt Ø6 x 35 mm (A) to Top Board (1), then tighten using screwdriver. Position as shown in the figure.

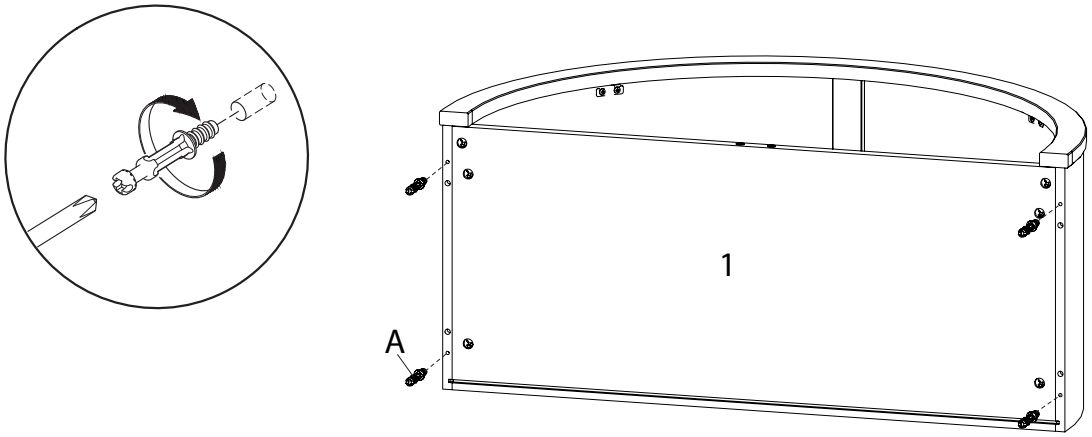


HARDWARE

B	**Cam Lock Ø15 mm**	**x4**
U	**Screw Cap Ø15 mm**	**x4**

27.1 Attach Assembly Top Board Hutch Component to Side Boards, secure with Cam Lock Ø15 mm (B) tighten using screwdriver, then Put Screw Cap Ø15 mm (U) to Cam Lock on Side Boards. Position as shown in the figure.

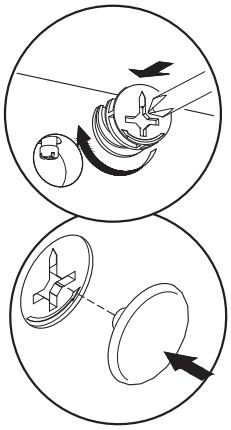

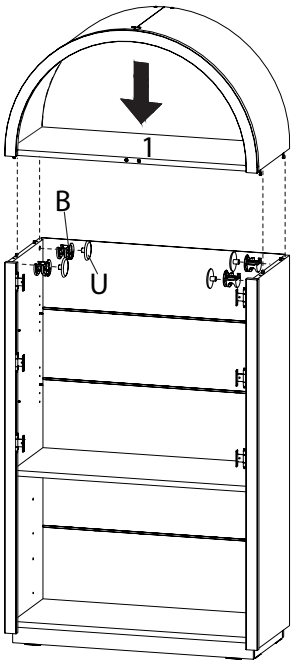



STEP 28

COMPONENTS

25	**Adjustable Shelf**	**x2**

28.1 Attach Adjustable Shelf (25) by aligning its hole with the Cambolt and inserting it securely. Position as shown in the figure.

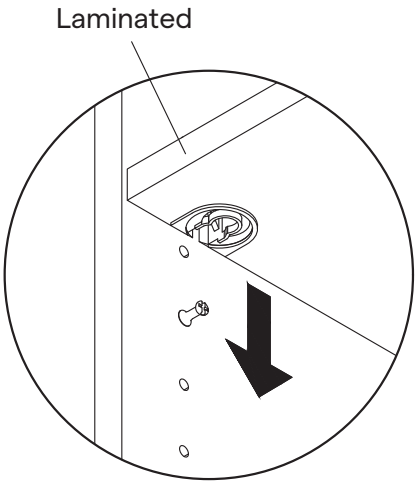

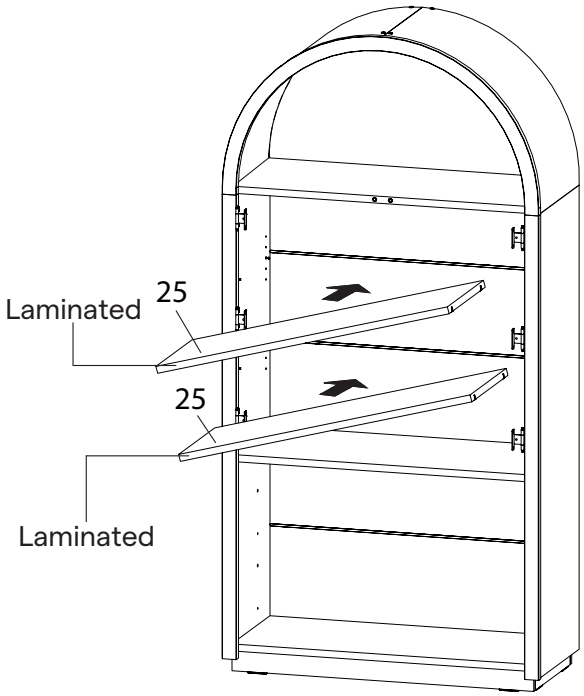


HARDWARE

D **Wood Dowel Ø8 x 30 mm x8**

COMPONENTS

22 **Support Board** **x4**

29.1 Insert Wood Dowel Ø8 x 30 mm (D) into Support Board (22).

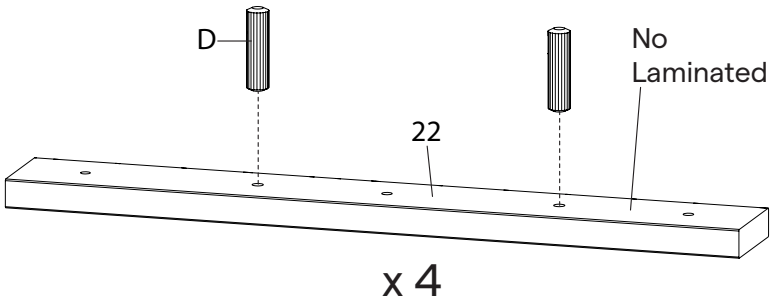

x 4

STEP 30

HARDWARE


H **Screw M 6.4 x 25 mm** **x12**


HGL4 **Hand Grip + Allen Key** **x1**


COMPONENTS

22 **Support Board** **x4**

30.1 Attach Support Board (22) to assembled cabinet body, secure with Screw M 6.4 x 25 mm (H), tighten screws using Hand Grip + Allen Key (HGL4). Position as shown in the figure.

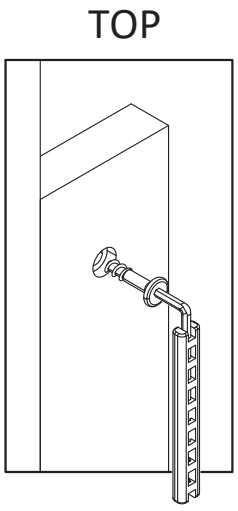

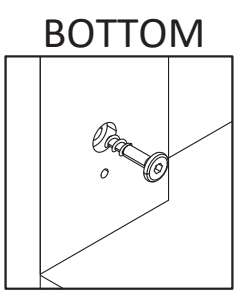


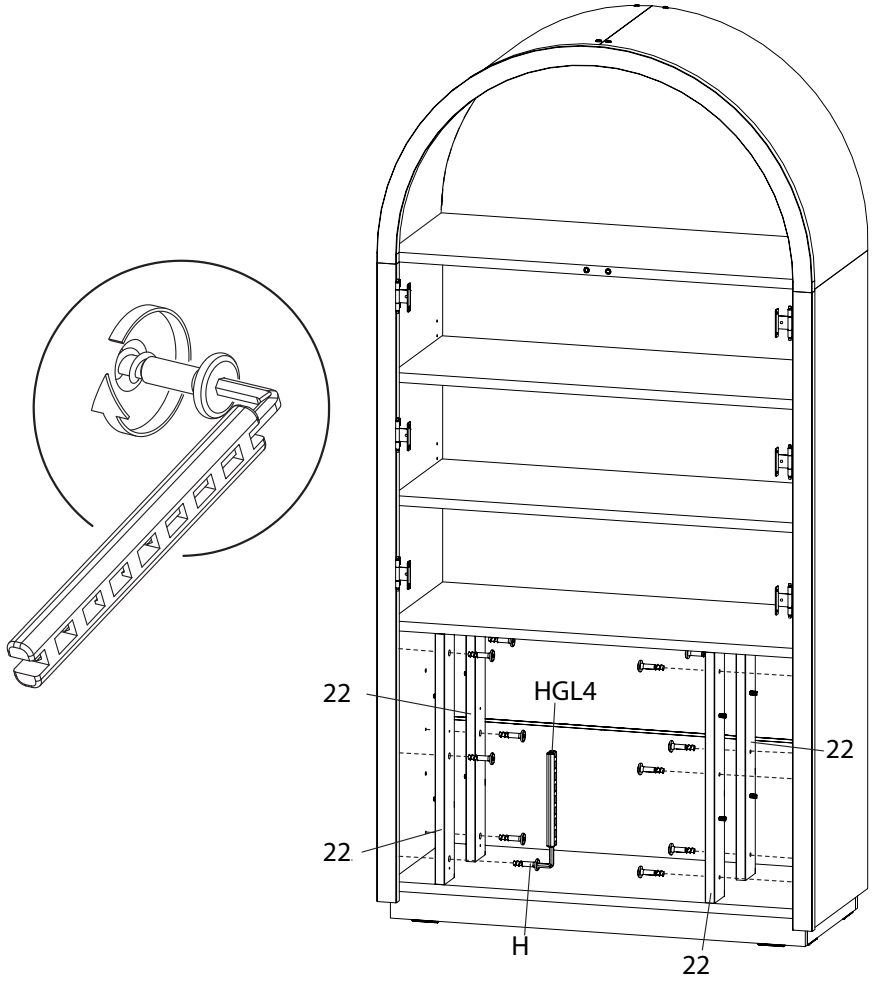



HARDWARE

S	**Screw M 6 x 10.5 mm**	**x8**
RM35A	**Drawer Runner**	**x2**

31.1 Install part of Drawer Runner (RM35A) (CL) to Support Board Left and Drawer Runner (RM35A) (CR) to support Board Right. Secure with Screw M 6 x 10.5 mm (S), then tighten using screwdriver. Position as shown in the figure.

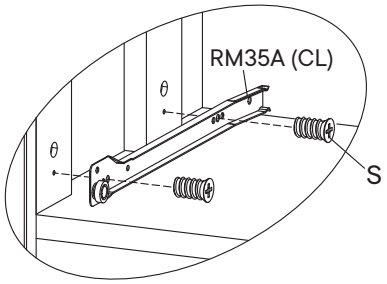

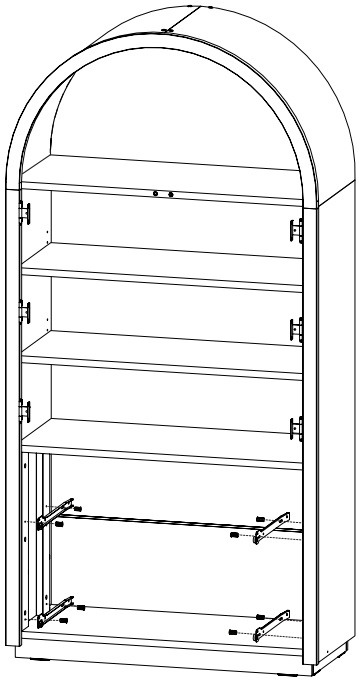

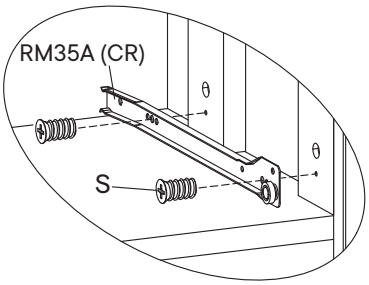

STEP 32


HARDWARE

P	**Screw M 12 x 10 mm**	**x2**


COMPONENTS


20	**Door Left**	**x1**
21	**Door Right**	**x1**

32.1 Insert Screw M 12 x 10 mm (P) into Door Left (20) and Door Right (21), tighten using screwdriver. Then Adjust the screws to align the door properly. Position as shown in the figure.

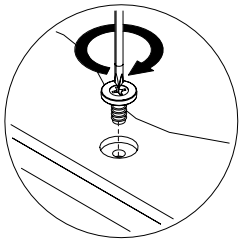

How to adjust Screw

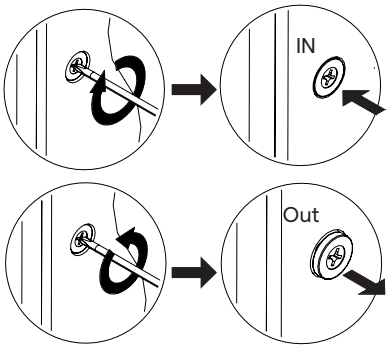

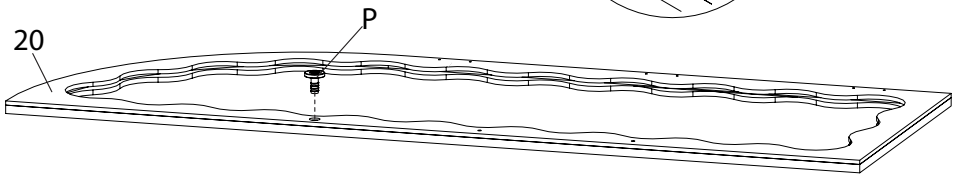




HARDWARE


G	**Screw M 3 x 15.5 mm**	**x6**
Q	**Screw M 4.5 x 12.5 mm**	**x12**

COMPONENTS

20	**Door Left**	**x1**
21	**Door Right**	**x1**

33.1 Install Door Left (20) and Door Right (21) to hinges, secure the hinges with Screw M 4.5 x 12.5 mm (Q) and Screw M 3 x 15.5 mm (G), then tighten using screwdriver. Position as shown in the figure.

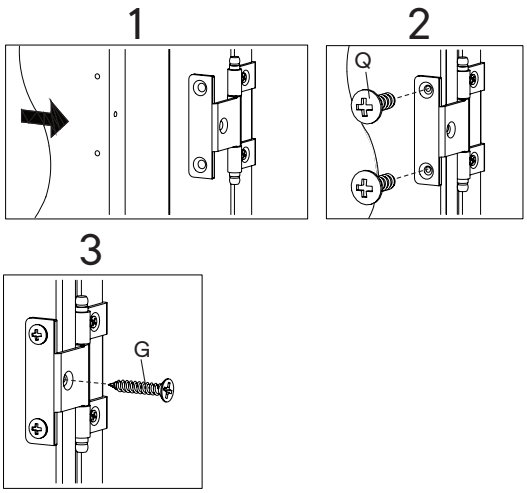

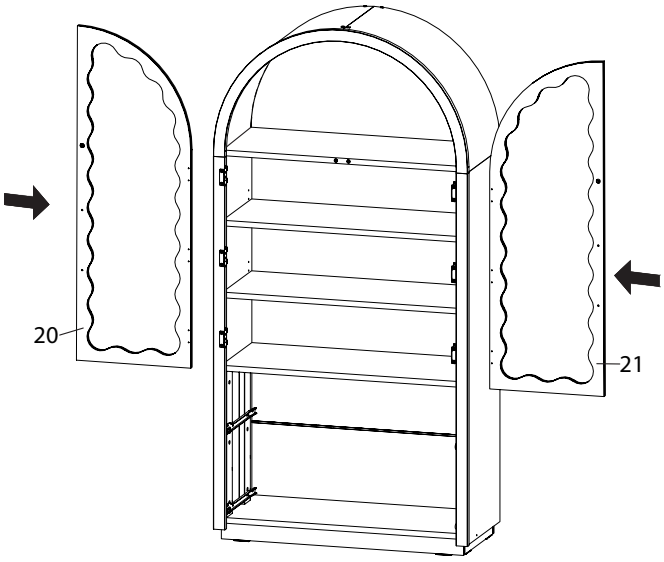

STEP 34

HARDWARE


E	**Wood Dowel Ø6 x 30 mm**	**x4**
M	**Screw M 4 x 25 mm**	**x4**


COMPONENTS


19	**Handle**	**x2**

34.1 Insert Wood Dowel Ø6 x 30 mm (E) into Handle (19). Position as shown in the picture.

34.2 Attach Handle (19) to Door Left and Door Right, secure with Screw M 4 x 25 mm (M) tighten using screwdriver, position as shown in the picture.

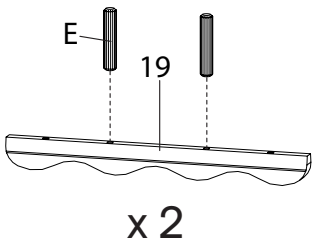


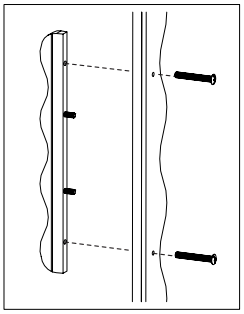


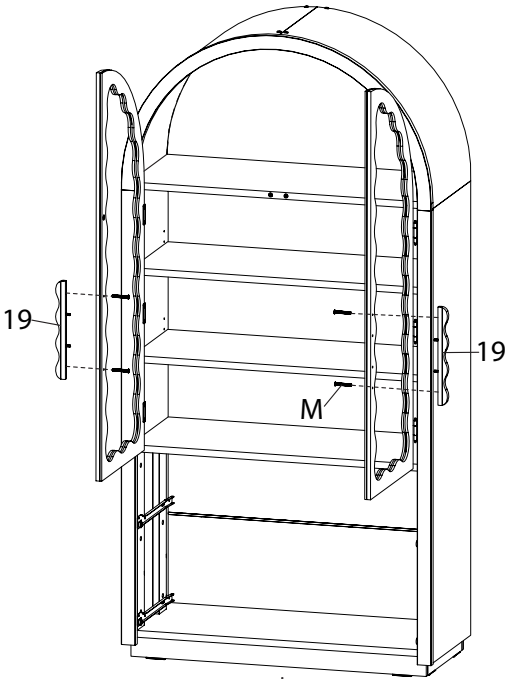

STEP 35

35.1 Hold the sides of drawer, position the wheel of rail at drawer back and the wheel of rail at Support boards, according to the image. Slide Drawer into the Display Cabinet.

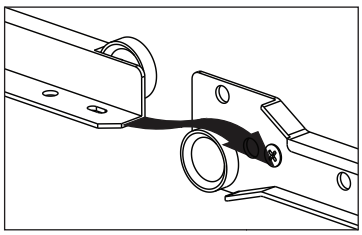

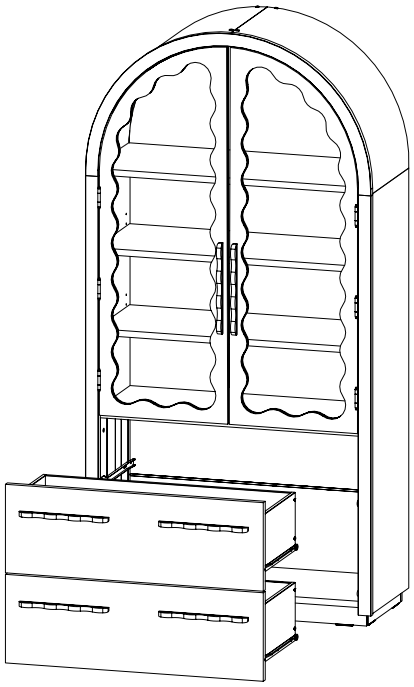


STEP 36

HARDWARE

B	**Cam Lock Ø15 mm**	**x2**
J	**Wedge**	**x24**
K	**Screw M 3.5 x 15.5 mm**	**x24**


36.1 Insert Cam Lock Ø15 mm (B) to Back Board Hutch, then tighten using screwdriver. Position as shown in the figure.

36.2 Use the Wedge (J) and Screw M 3.5 x 15.5 mm (K) to tighten the back of the Cabinet using screwdriver. Before securing the wedges (J), ensure that the top board, bottom board and Side Boards are aligned at a 90° angle against the Cabinet.

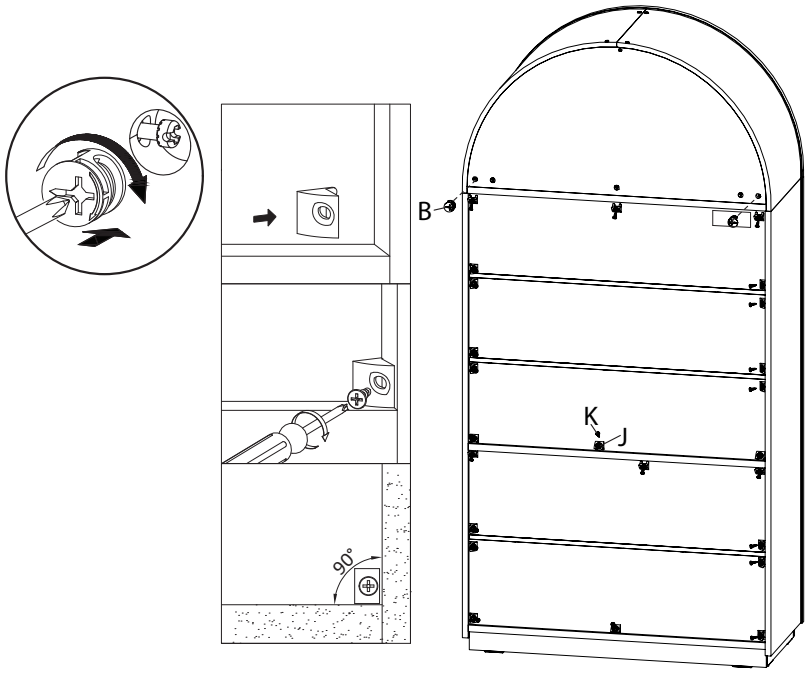

Great job!

Display Cabinet assembly is complete

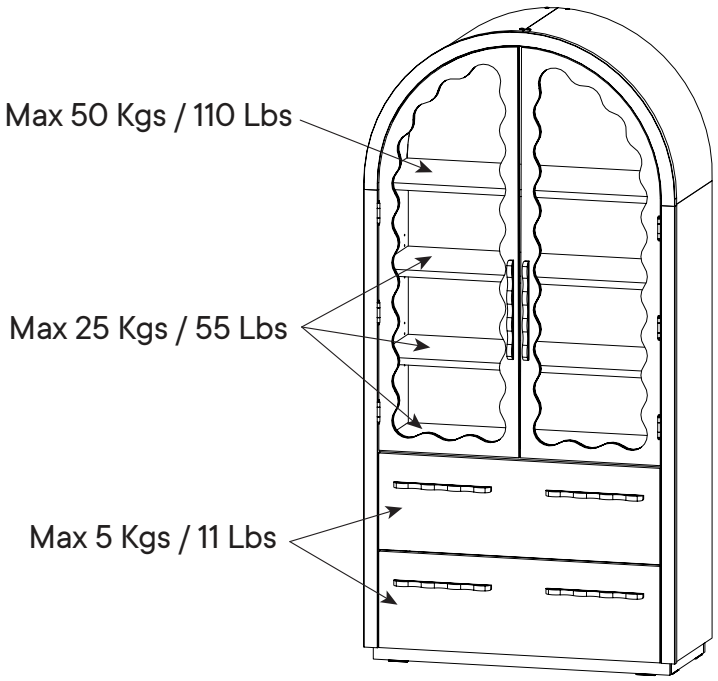

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

CONNECT WITH US!

Tag us **@modway.furniture** and **#MyModwayHome** for a chance to be featured.


modway


Questions? Contact us!
609.256.9000
cs@modway.com

*modway

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.
The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.
Please consult your local hardware store to ensure you are using the correct hardware for you wall type.

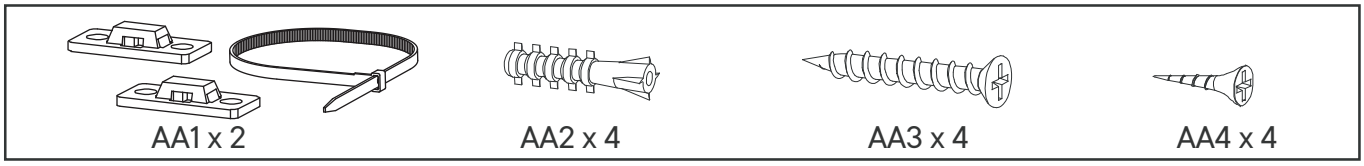

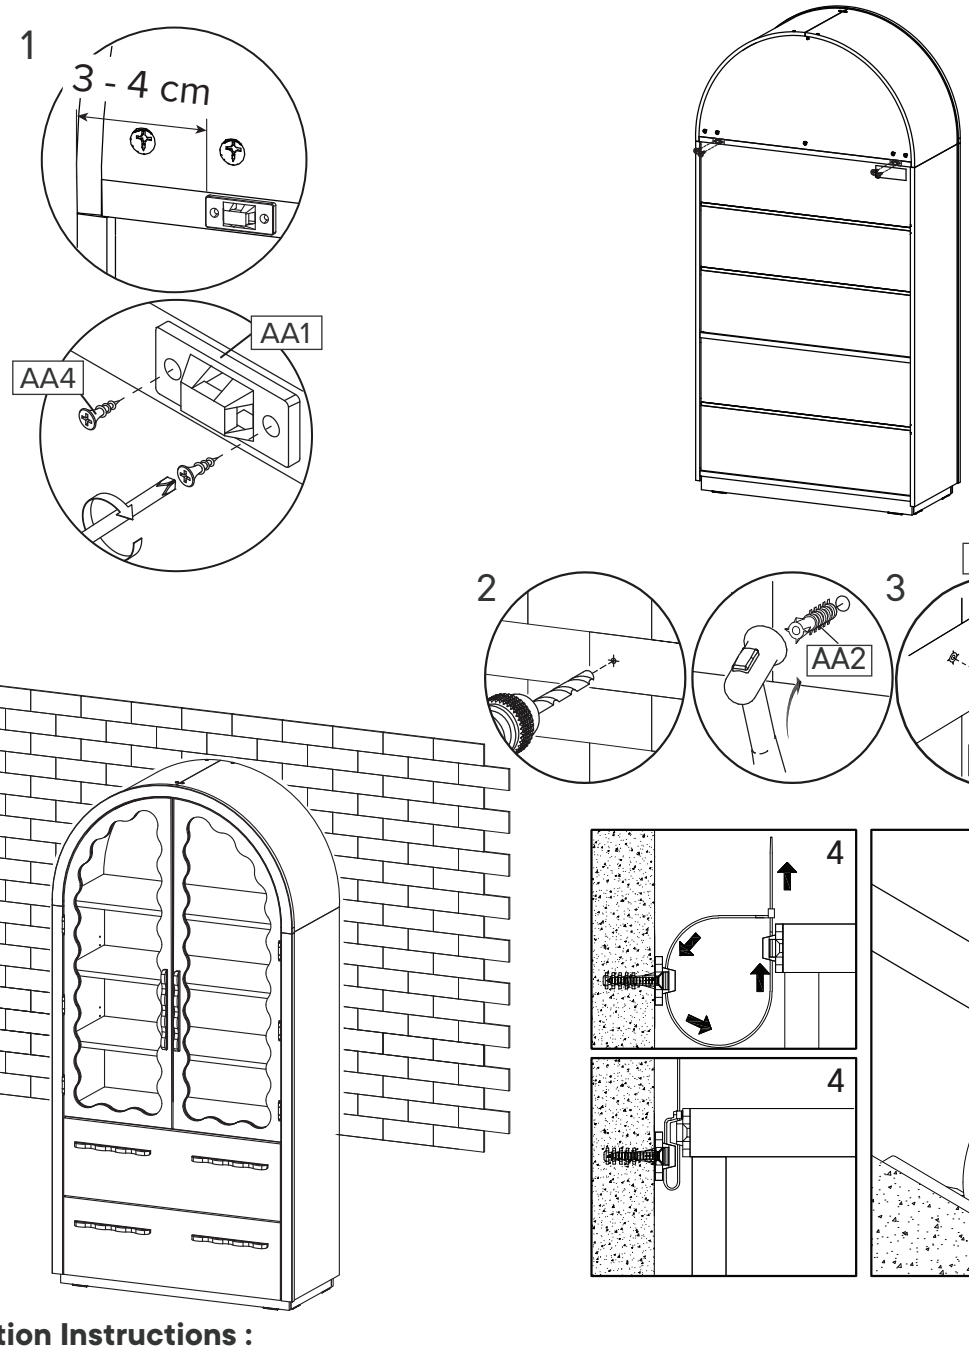

Installation Instructions :

1. Attach bracket (AA1) securely to the back top of the furniture using screw (AA4) provided. Allow 3 - 4 cm from each side.
2. Please make a hole for wall plugs position on the wall and minimum 15 mm below bracket secured to the back of unit. Attach the wall plugs (AA2).
3. Install the other bracket (AA1) on the wall over wall plugs (AA2), secure with screw (AA3). Place furniture into position so both brackets (AA1) are aligned.
4. Lace the end of the restrains strap through the larger hole in each bracket. Ensure the restrains strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Make sure that the strap is securely laced & locked.