CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly this item.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.

Part List and Hardware List


PIECE	DESCRIPTION	PICTURE	QUANTITY
А	Table Top		1X
В	Left Side Frame		1X
С	Right Side Frame		1X
D	Bottom Frame		1X
E	Side Board Mounted with USB Socket	[Free	1X
HW1	Allen Key		1X
HW2	Hex Bolt 1/4" x 1.2mm x 12mm		8X
HW3	Hex Bolt 1/4" x 1.2mm x 35mm	(9)))))))))	4X
HW4	Plastic Floor Stem		4X




Model# ACC8003A

Product Dimension: 20"L x 11.8"D x 23.74"H

Weight Capacity: 20lbs

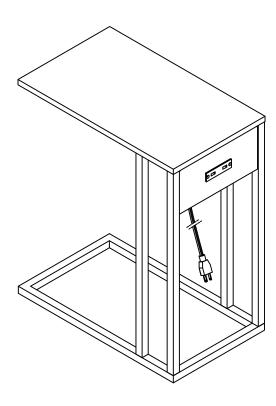


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list. If any part is missing or damaged, do not attempt to assemble the product. Estimated Assembly Time: 20 minutes.

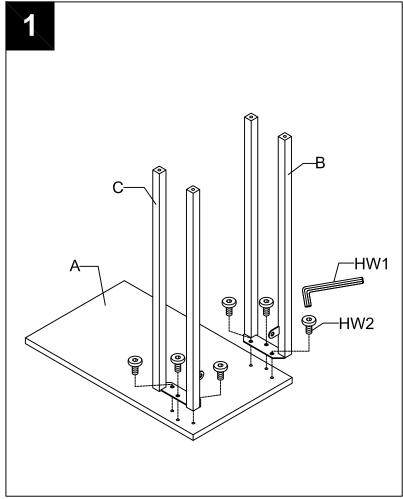




Assemble table top (A) and side frame (B,C) with hex bolt (HW2) by use of Allen key (HW1) as shown in drawing.

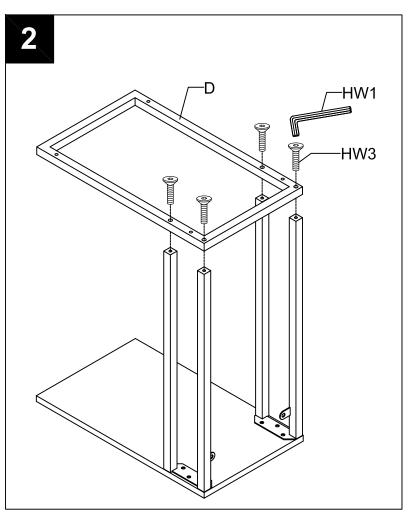

Step 2


Assemble bottom frame (D) and side frame (B,C) with hex bolt (HW3) by use of Allen key (HW1) as shown in drawing.

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list. If any part is missing or damaged, do not attempt to assemble the product. Estimated Assembly Time: 20 minutes.

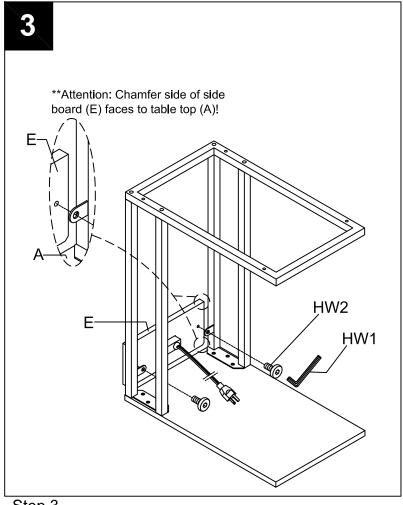

Step 3

Assemble side board (E) and side frame (B,C) with hex bolt (HW2) by use of Allen key (HW1) as shown in drawing.

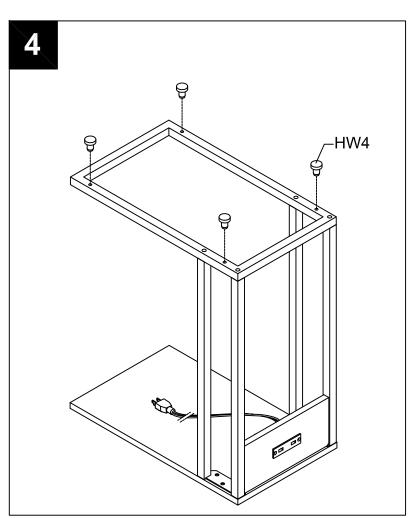

Step 4

Insert plastic floor stem (HW4) into the holes on bottom frame (D) as shown in drawing.