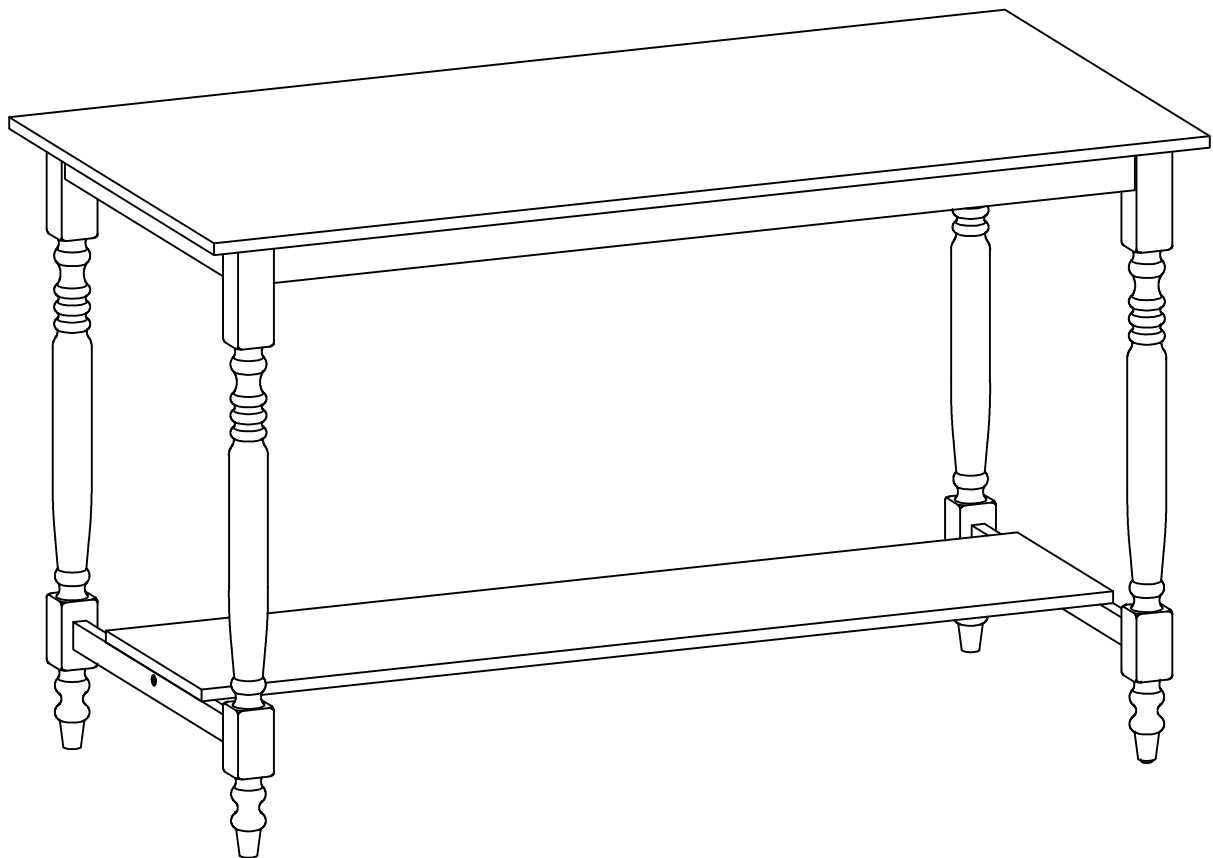


# ASSEMBLY INSTRUCTIONS

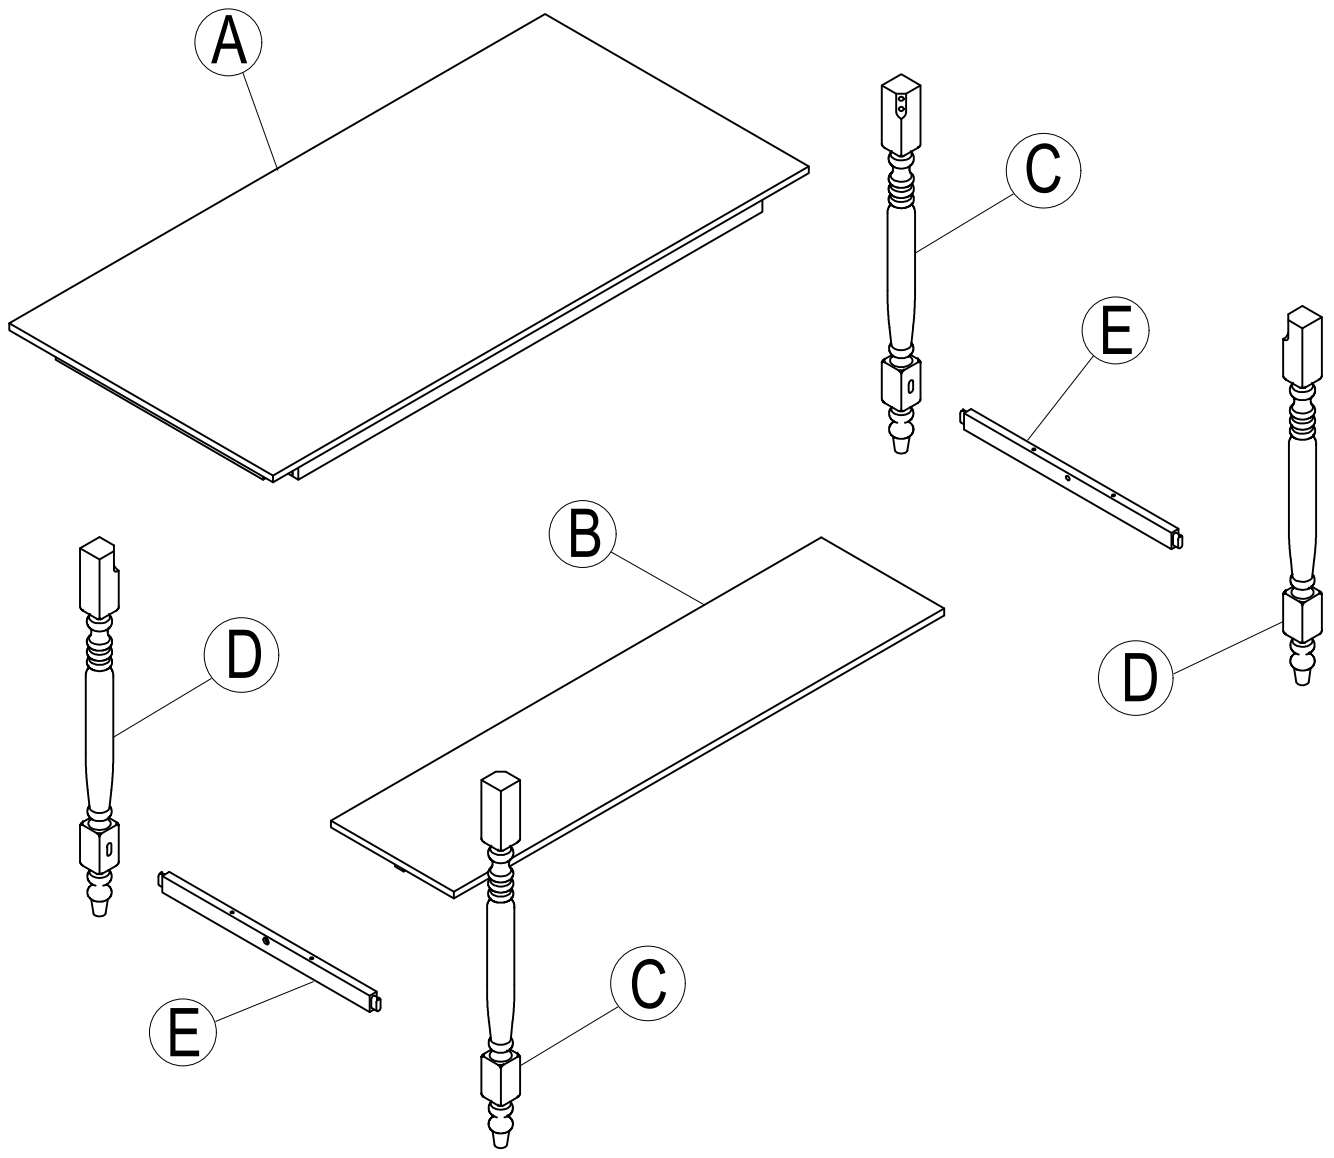
ITEM NO.WF290169

If you have any questions, please feel free to contact us.  
Email: [lowes.team@qualfurn.net](mailto:lowes.team@qualfurn.net)



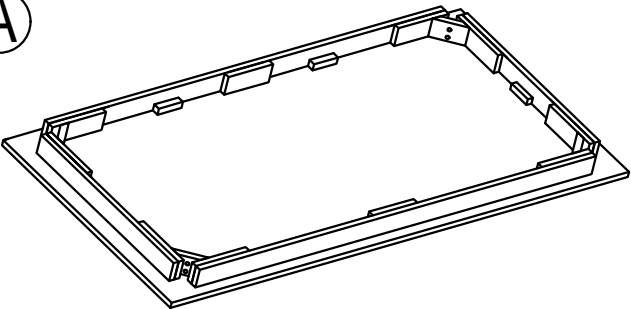
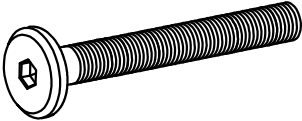
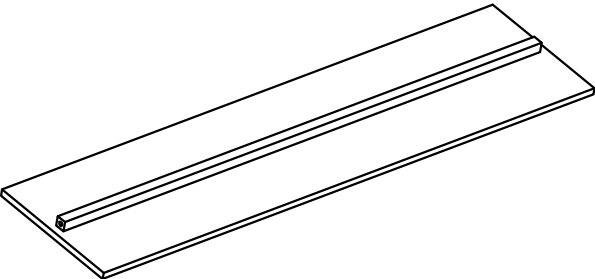

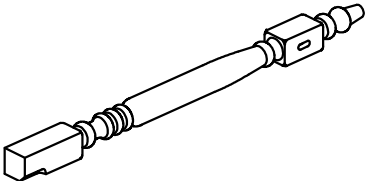

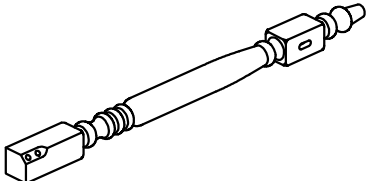

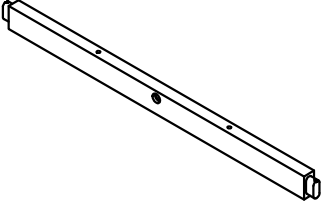


## IMPORTANT NOTE :

- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN,KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE TABLE IS FULLY SET-UP.

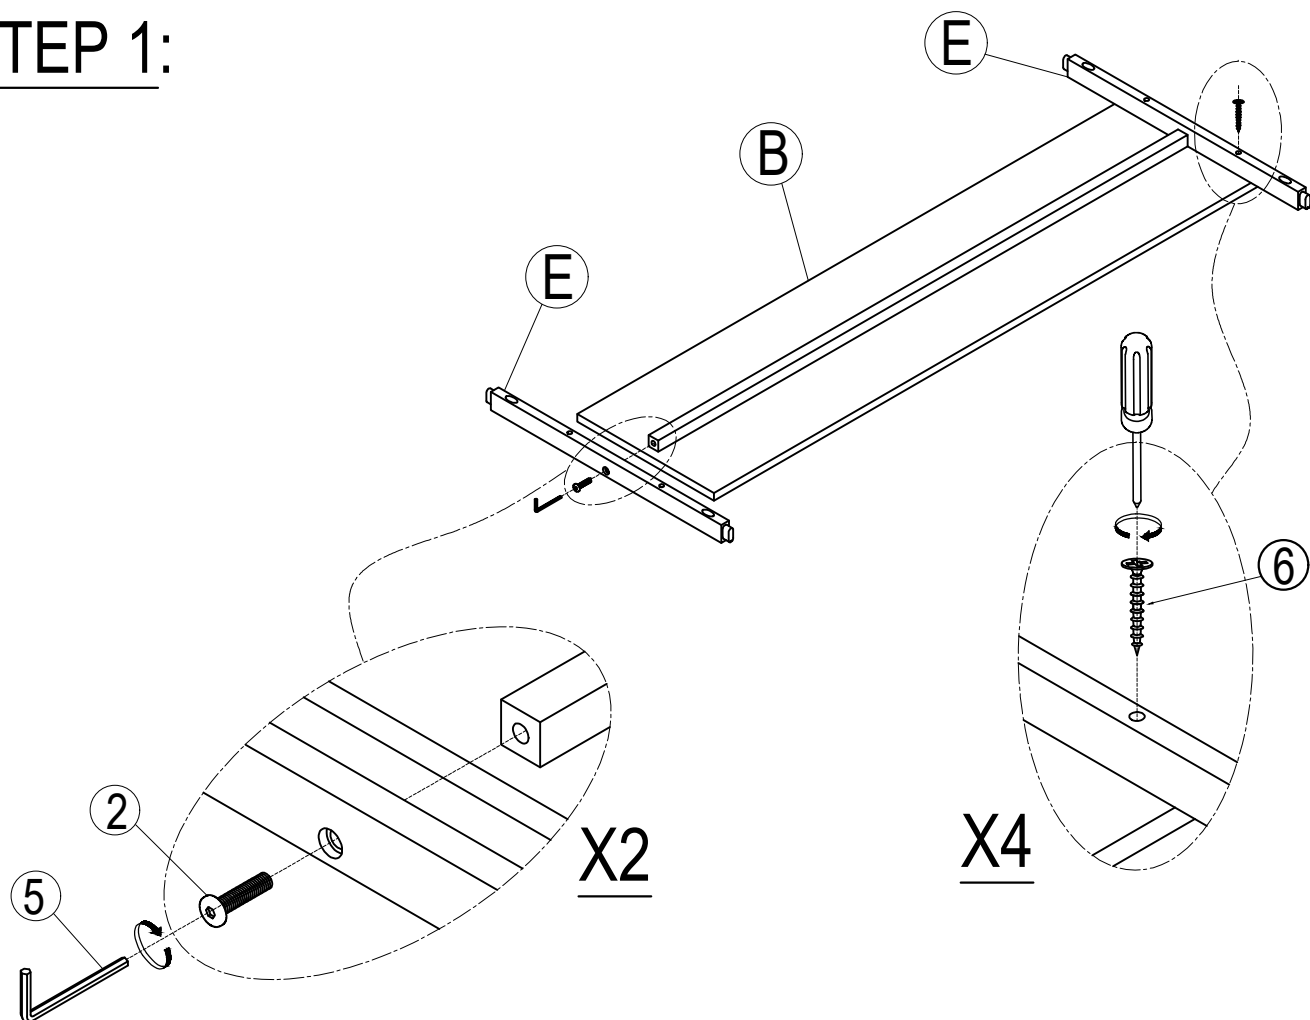


# Part List

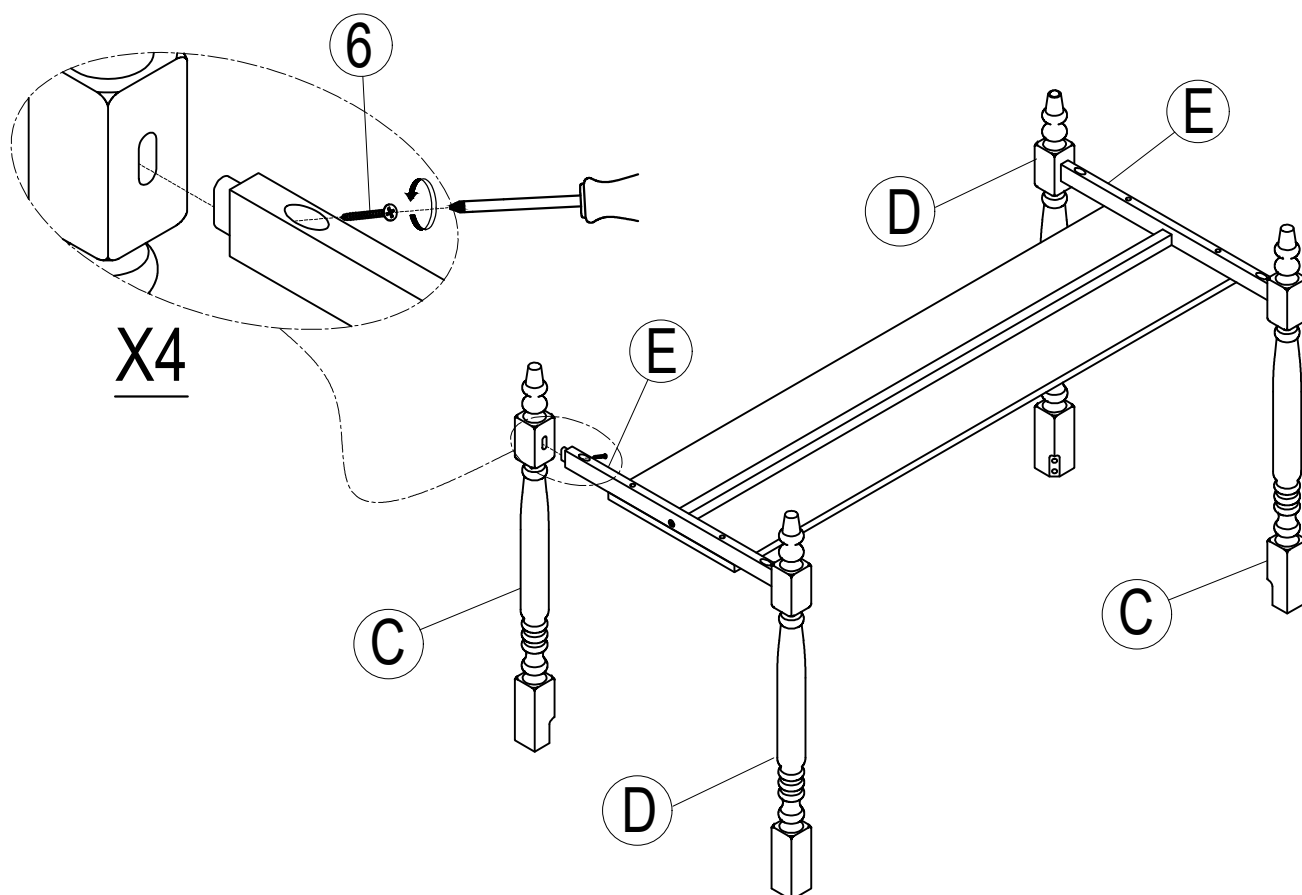
# Hardware List

<p><b>A</b></p>  <p>TOP TABLE (1 pc)</p>	<p><b>1</b></p>  <p>Ø 5/16" x 55 mm</p> <p>BOLT (8 pcs)</p>
<p><b>B</b></p>  <p>TABLE SHELVES (1 pc)</p>	<p><b>2</b></p>  <p>Ø 1/4" x 30 mm</p> <p>BOLT (2 pcs)</p>
<p><b>C</b></p>  <p>LEG LEFT (2 pcs)</p>	<p><b>3</b></p>  <p>Ø5/16" x 13 mm</p> <p>FLAT WASHER (8 pcs)</p>
<p><b>D</b></p>  <p>LEG RIGHT (2 pcs)</p>	<p><b>4</b></p>  <p>Ø5/16" x 19 mm</p> <p>LOCK WASHER (8 pcs)</p>
<p><b>E</b></p>  <p>STRETCHER (2 pcs)</p>	<p><b>5</b></p>  <p>4 mm</p> <p>ALLEN KEY (1 pc)</p> <p><b>6</b></p>  <p>Ø4 x 38 mm</p> <p>WOOD SCREWS (8 pcs)</p>

## STEP 1:



## STEP 2:



## STEP 3:

