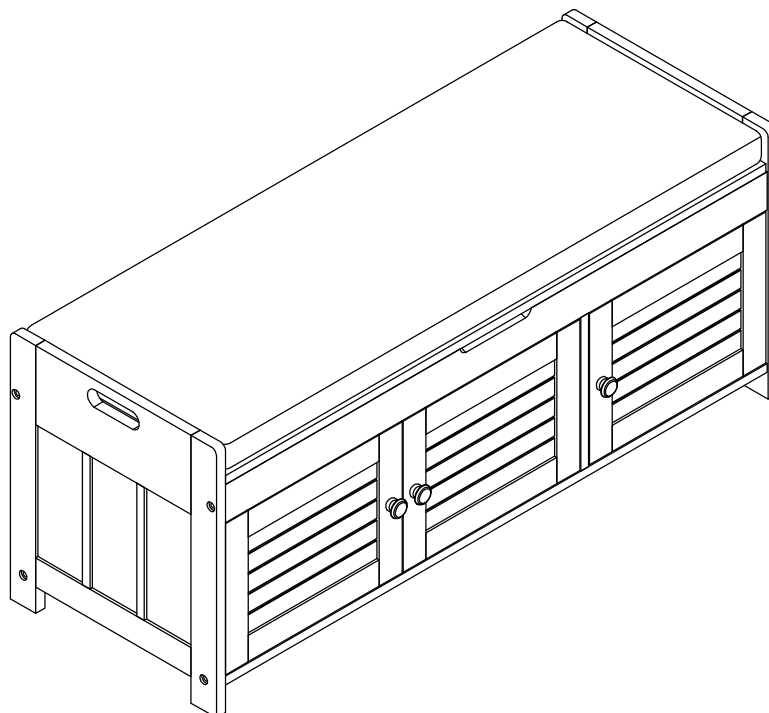


ASSEMBLY INSTRUCTIONS

CABINET

If you have any questions, please feel free to contact us.

Email: service@qualfurn.net



If you have any questions, please feel free to contact us.

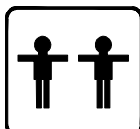
Email: service@qualfurn.net

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


*** Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!**
*** Please assemble on a clean soft surface to avoid damage.**




+

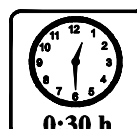

Tools Required



(Not included)



(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Thank you for buying our products.

Please read the installation manual carefully before installation,

we need you to follow the instructions on the accessories and hardware

step by step assembly complete, our instructions are very detailed.

Products are environmentally friendly products,

Please rest assured that you do not soak in water, do not place very heavy items,

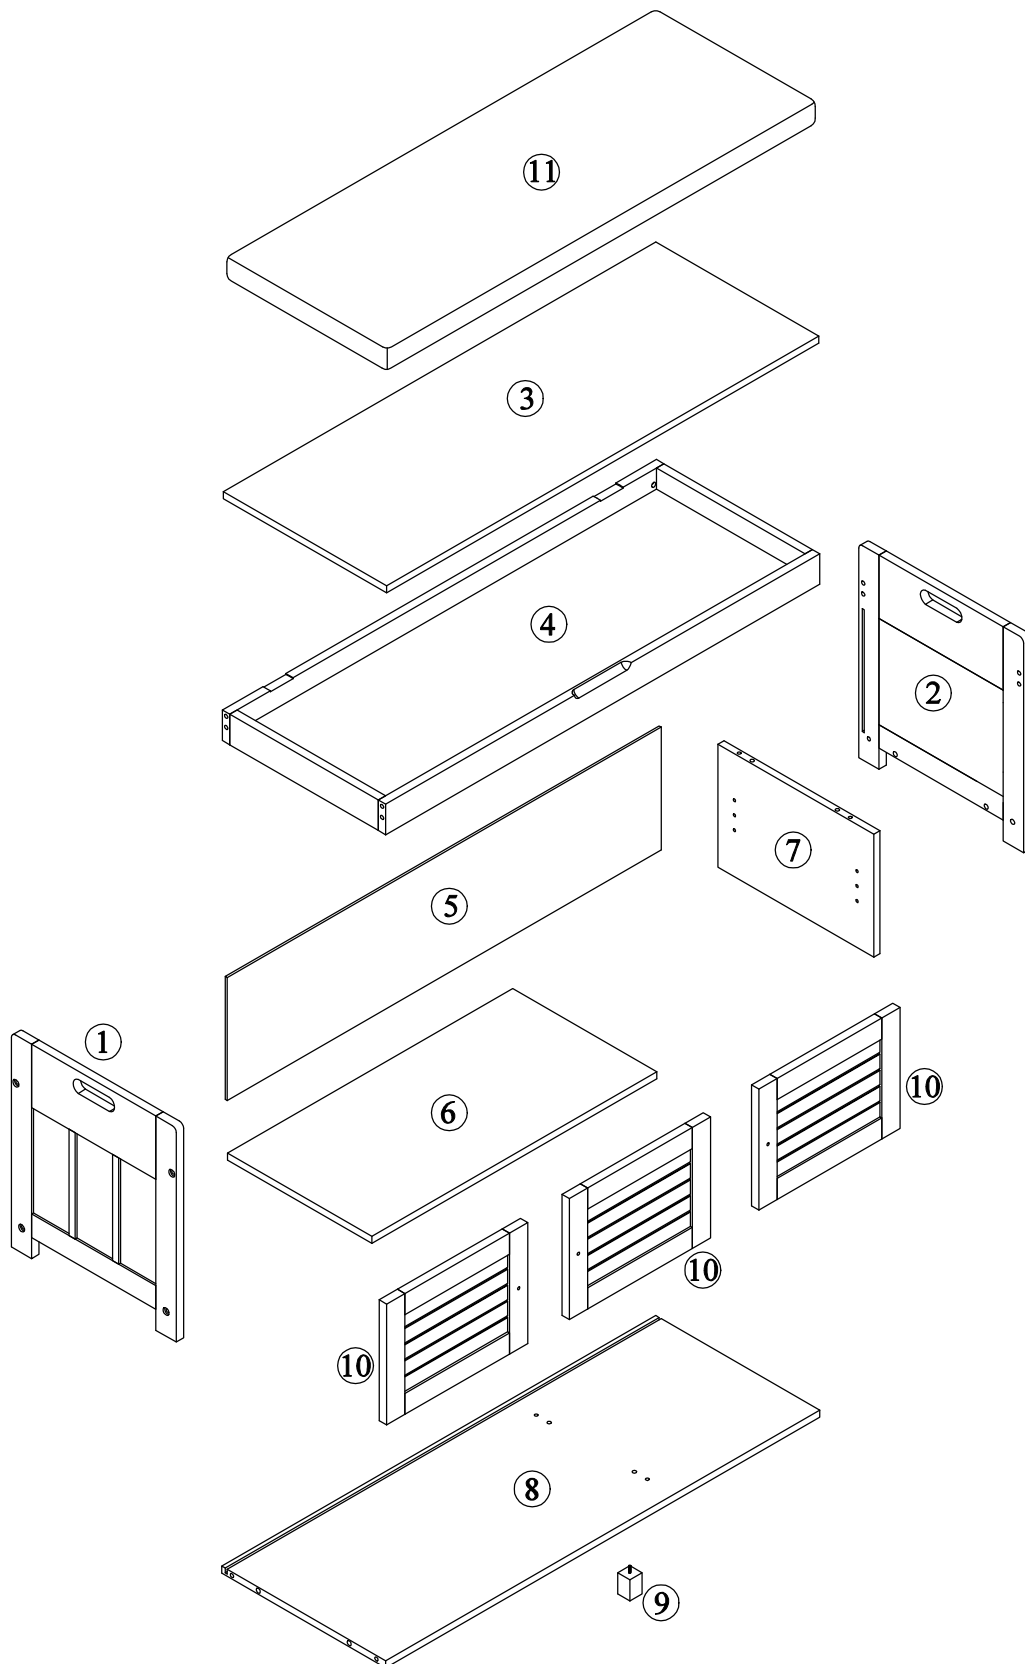
do not malicious push and pull,

if you have any problems in the process of assembly and use, please contact us.

Thank you again for your purchase of our products,



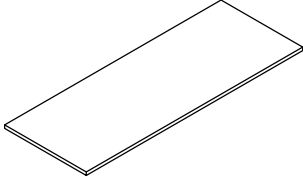
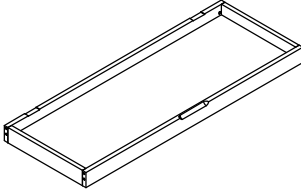
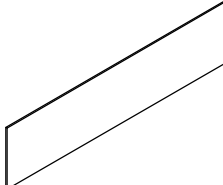
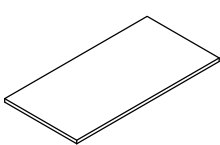

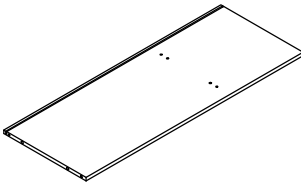


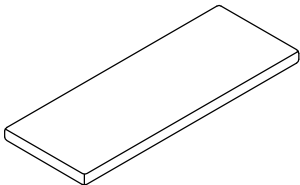
I wish you a happy life.

Detail View - CABINET





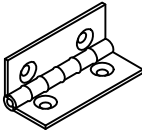












Identifying the Hardware-Identify the hardware using the illustrations below.


Part List—WF310529

<div data-bbox="217 322 245 353">1</div>  <p>Left side - 1pc</p>	<div data-bbox="829 322 858 353">2</div>  <p>Right side - 1pc</p>
<div data-bbox="217 564 245 595">3</div>  <p>Top panel - 1pc</p>	<div data-bbox="829 564 858 595">4</div>  <p>Top frames - 1pc</p>
<div data-bbox="217 806 245 837">5</div>  <p>Back panel - 1pc</p>	<div data-bbox="829 806 858 837">6</div>  <p>Mid panel - 1pc</p>
<div data-bbox="217 1048 245 1079">7</div>  <p>Middle vertical plate - 1pc</p>	<div data-bbox="829 1048 858 1079">8</div>  <p>Bottom panel - 1pc</p>
<div data-bbox="217 1290 245 1321">9</div>  <p>Support feet - 1pc</p>	<div data-bbox="817 1290 868 1321">10</div>  <p>Cabinet door - 3pcs</p>
<div data-bbox="204 1532 252 1572">11</div>  <p>Cushions - 1pc</p>	


Hardware List—WF310529

A	 ø13x1/4"x50mm Hex-Head bolts(8pcs)	B	 ø10x13mm Horizontal-Hole bolts(8pcs)	C	 ø6x35mm Three in one bolts(4pcs)
D	 ø14.5x12mm Three in one lock(4pcs)	E	 Damping hinge(6pcs)	G	 45x16x14mm Door magnet(2pcs)
H	 ø6xø3x12mm Round head screw(4pcs)	I	 35x12x1mm Magnetic iron sheet(3pcs)	J	 Hinges(2pcs)
K	 ø7xø3.5x12mm Flat head screw(35pcs)	L	 Laminate pad(4pcs)	M	 Handle(3pcs)
N	 ø5/32"x25mm Handle screw(3pcs)	O	 ø8x30mm Wood dowel(12pcs)	P	 4mm Allen key(1pc)

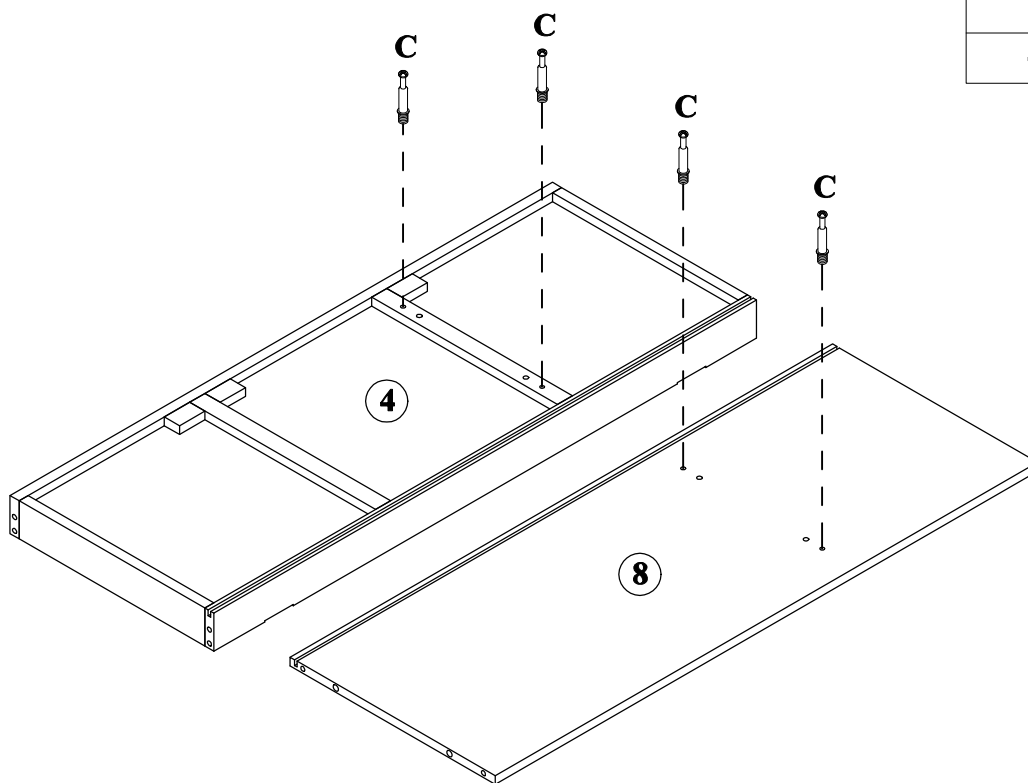STEP: 1




C



4PCS

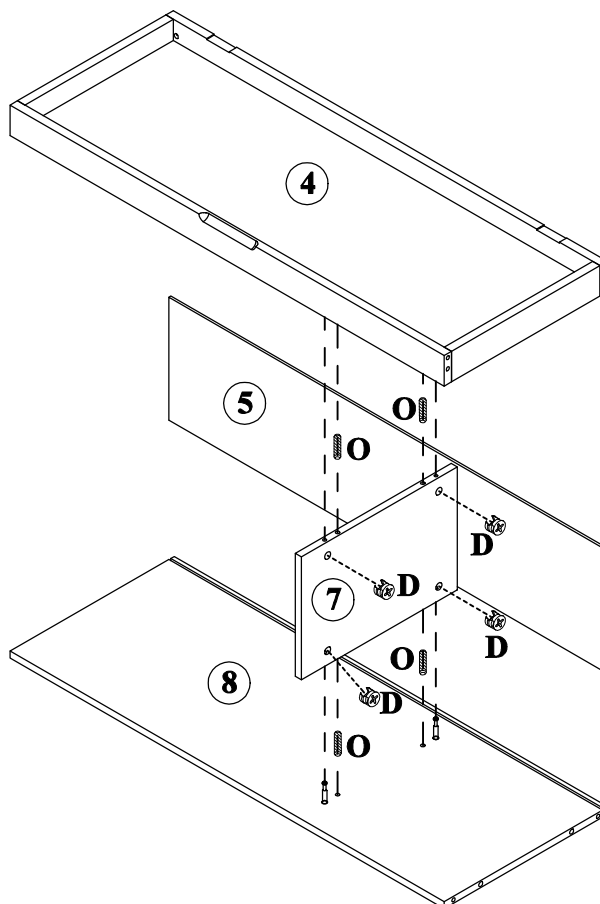STEP: 2



D



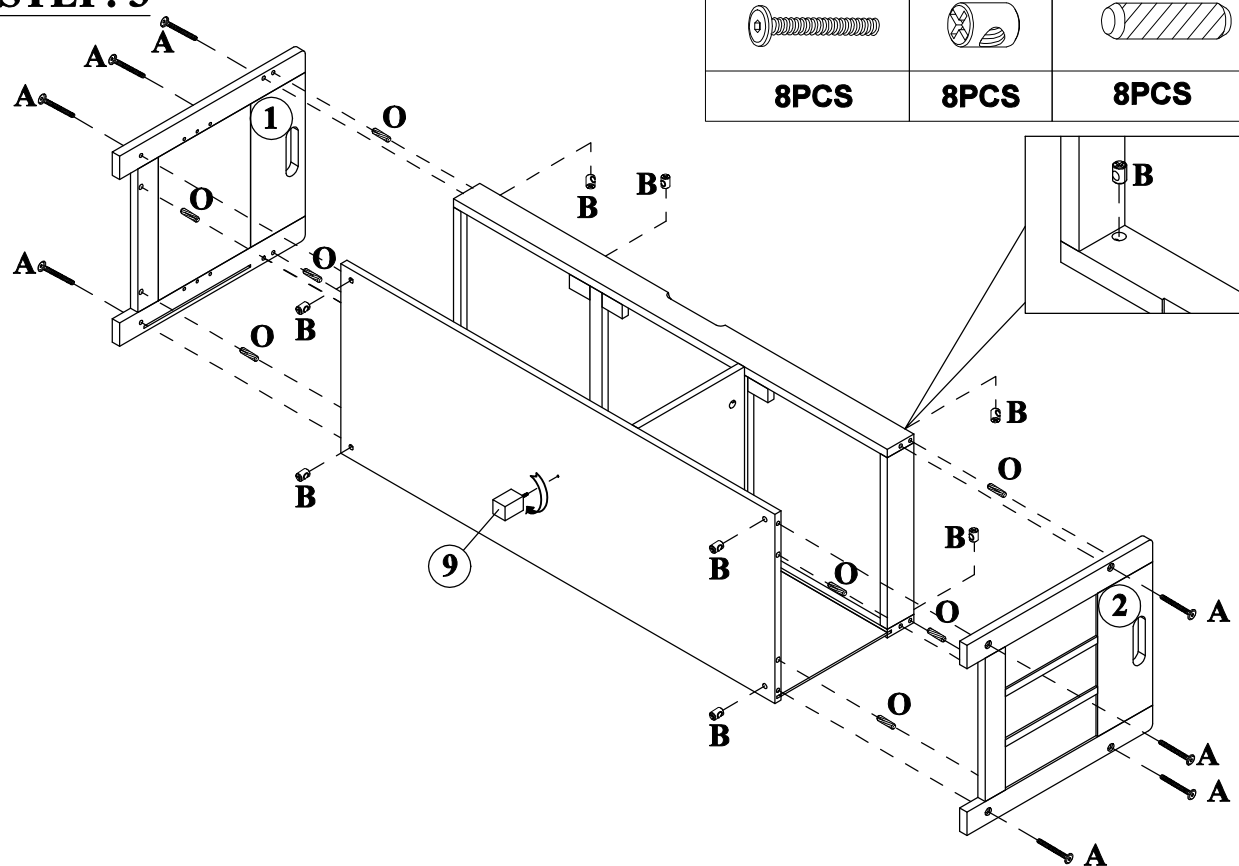
4PCS

O




4PCS


STEP: 3






STEP: 4

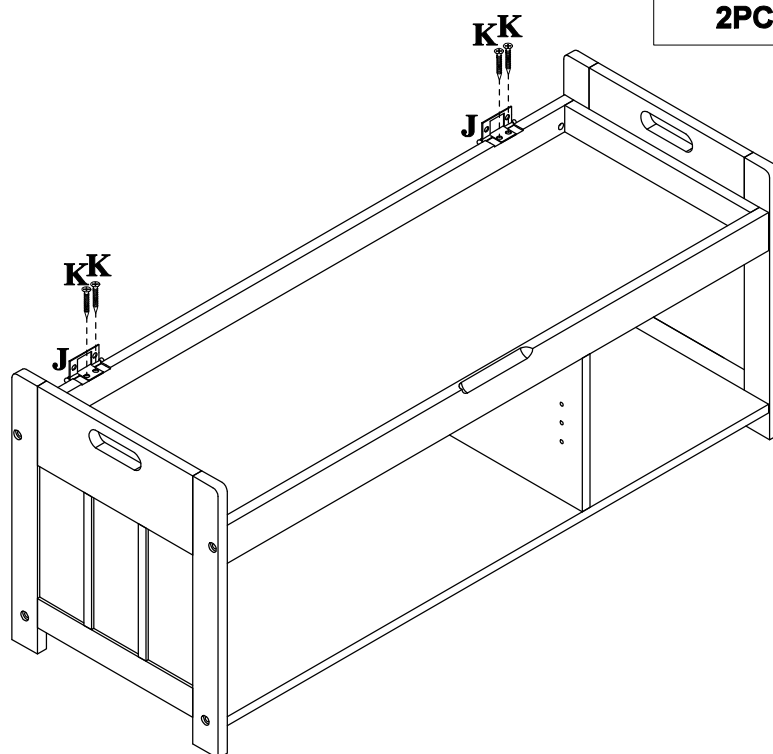


STEP: 5

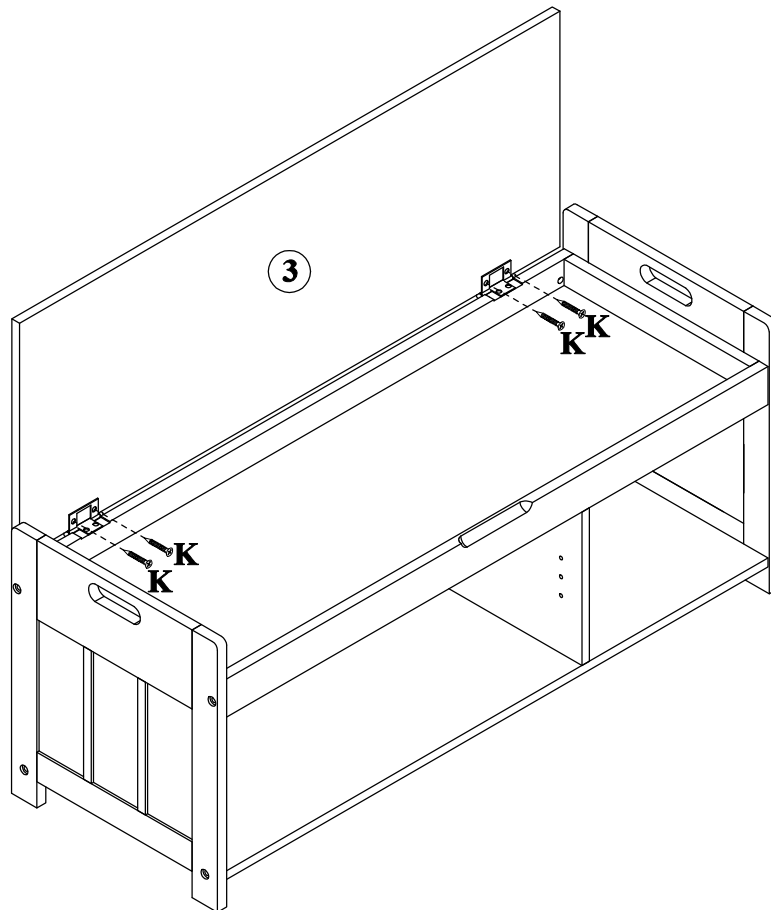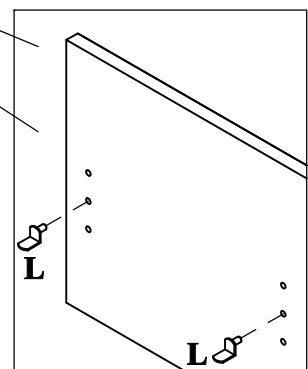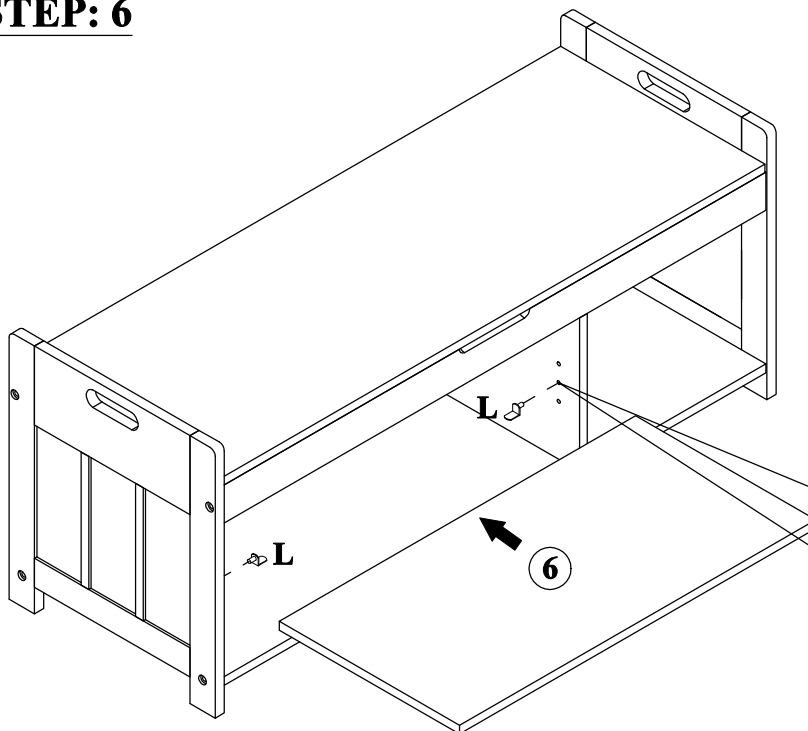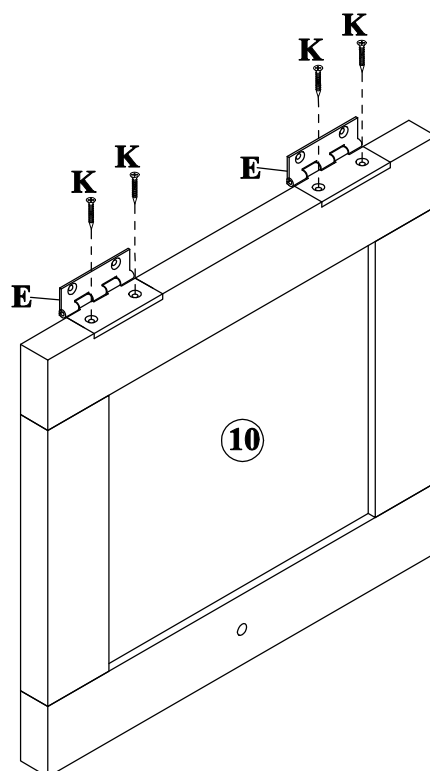

K**4PCS**

STEP: 6

L**4PCS**


STEP: 7




E		K	
6PCS		12PCS	

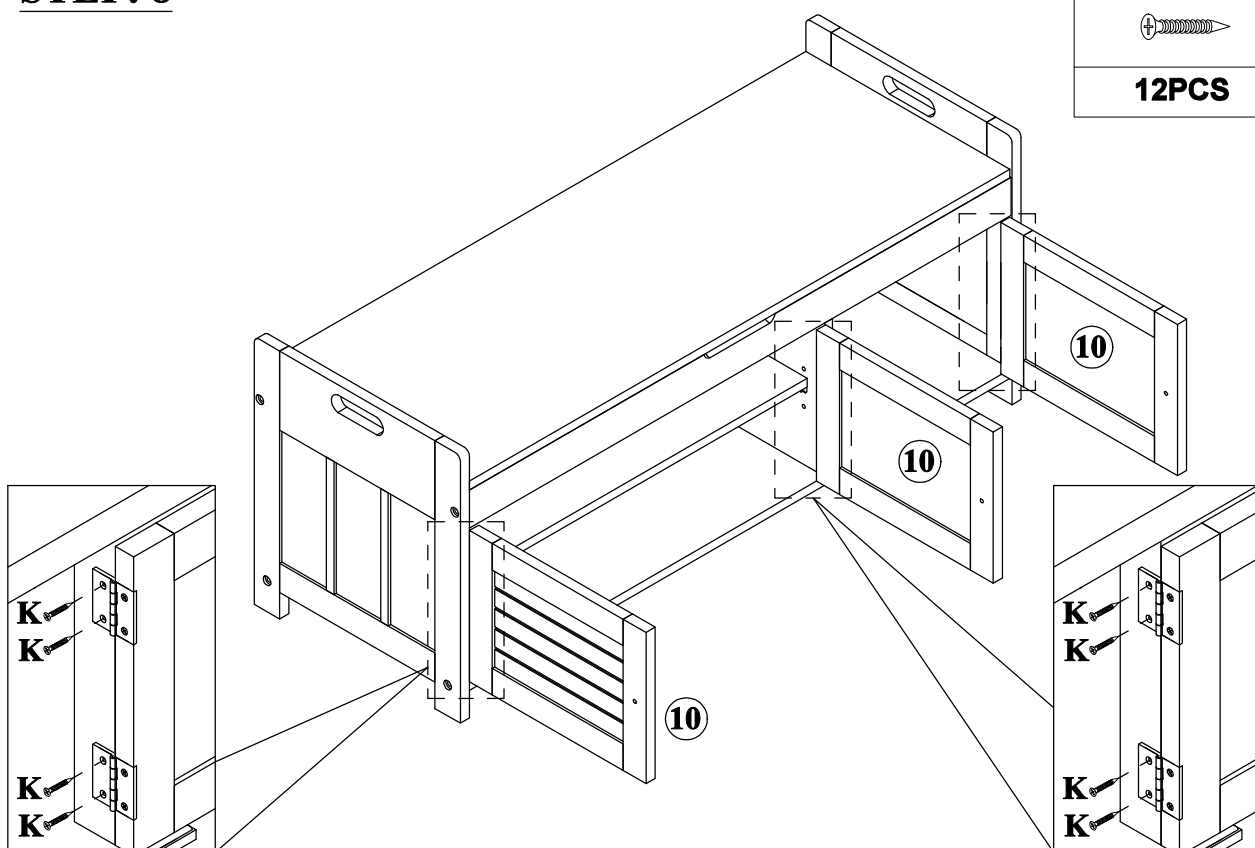

x3


STEP: 8







K	
12PCS	

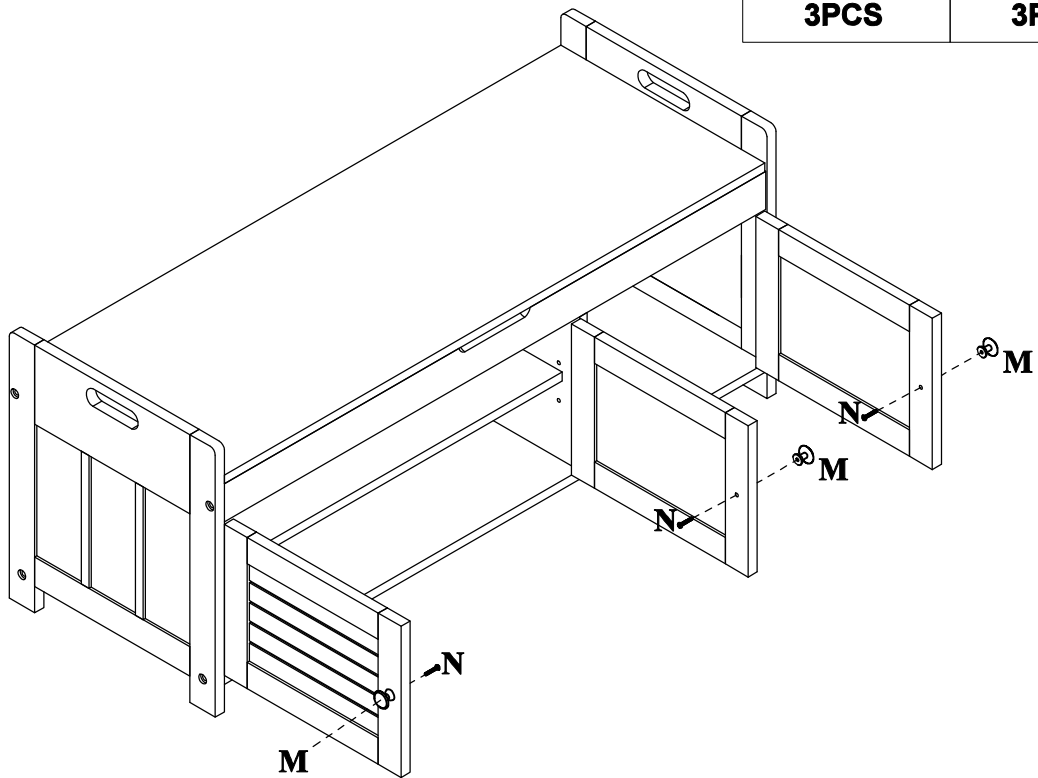
STEP: 9

M		N	
3PCS		3PCS	



STEP: 10

G	H	I	K
			
2PCS	4PCS	3PCS	3PCS

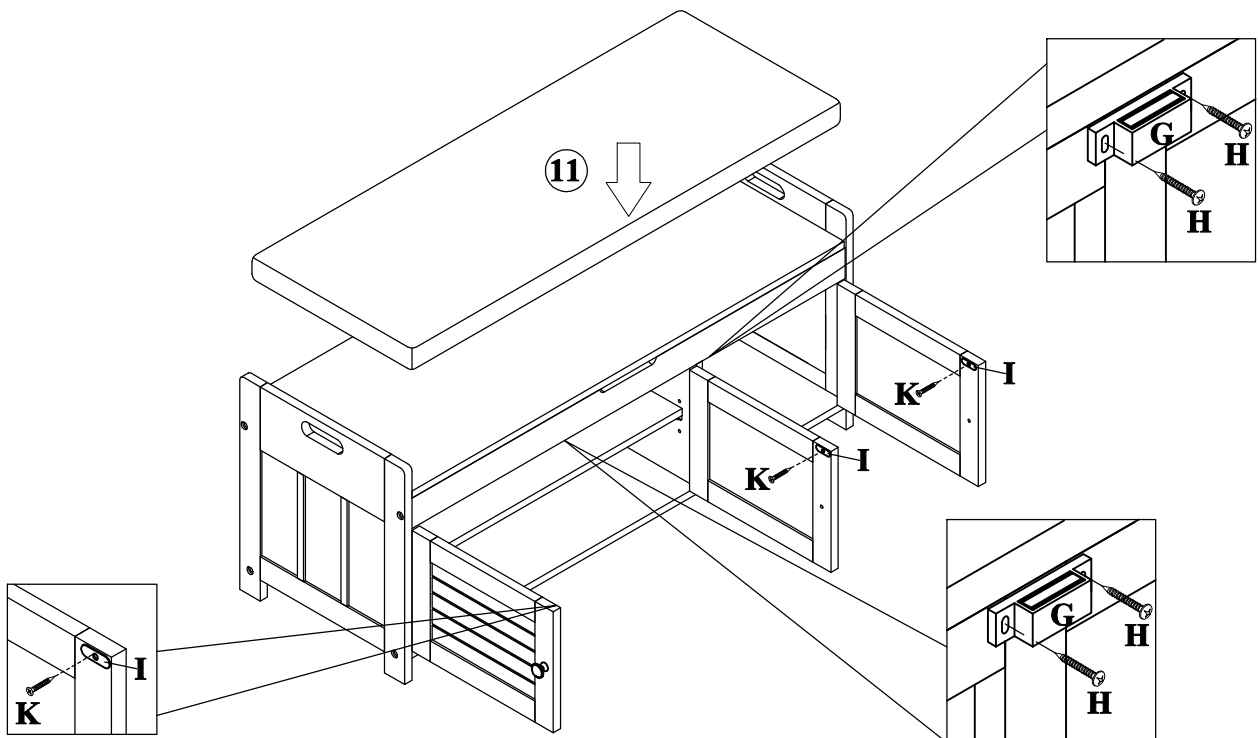

STEP: 11

