


ASSEMBLY INSTRUCTIONS


FULL BED WITH 2 DRAWERS BOOKCASE HEADBOARD

If you have
any questions
, please feel
free to
contact us.
Email :
lowestteam@
animalife.com

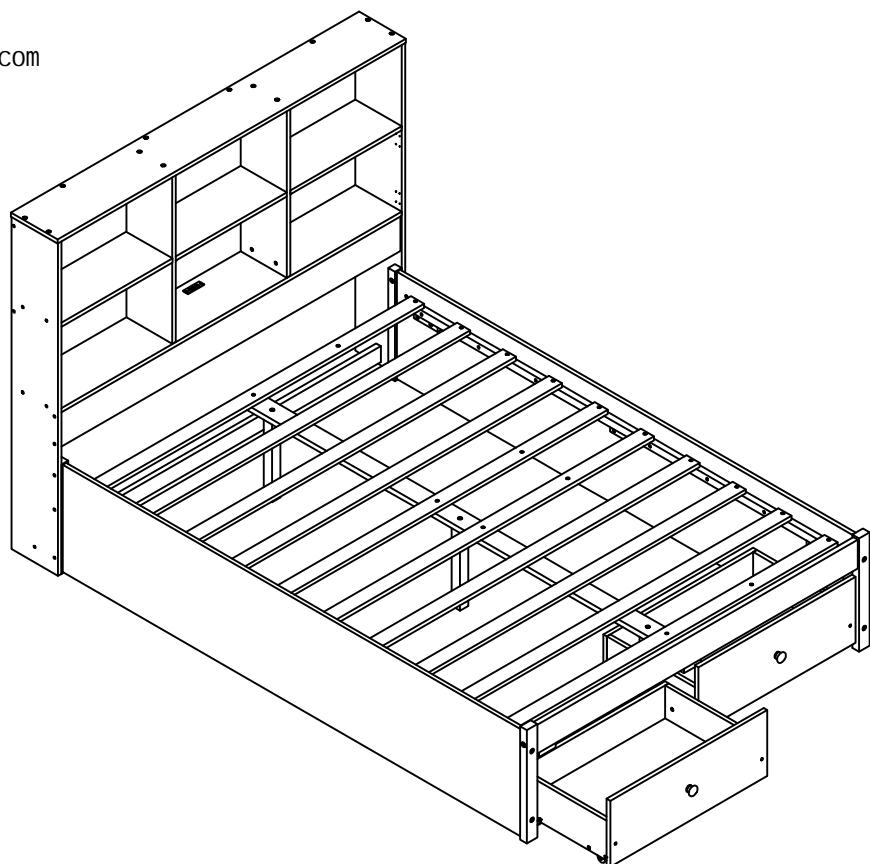










WF310890/WF310891

Detail View





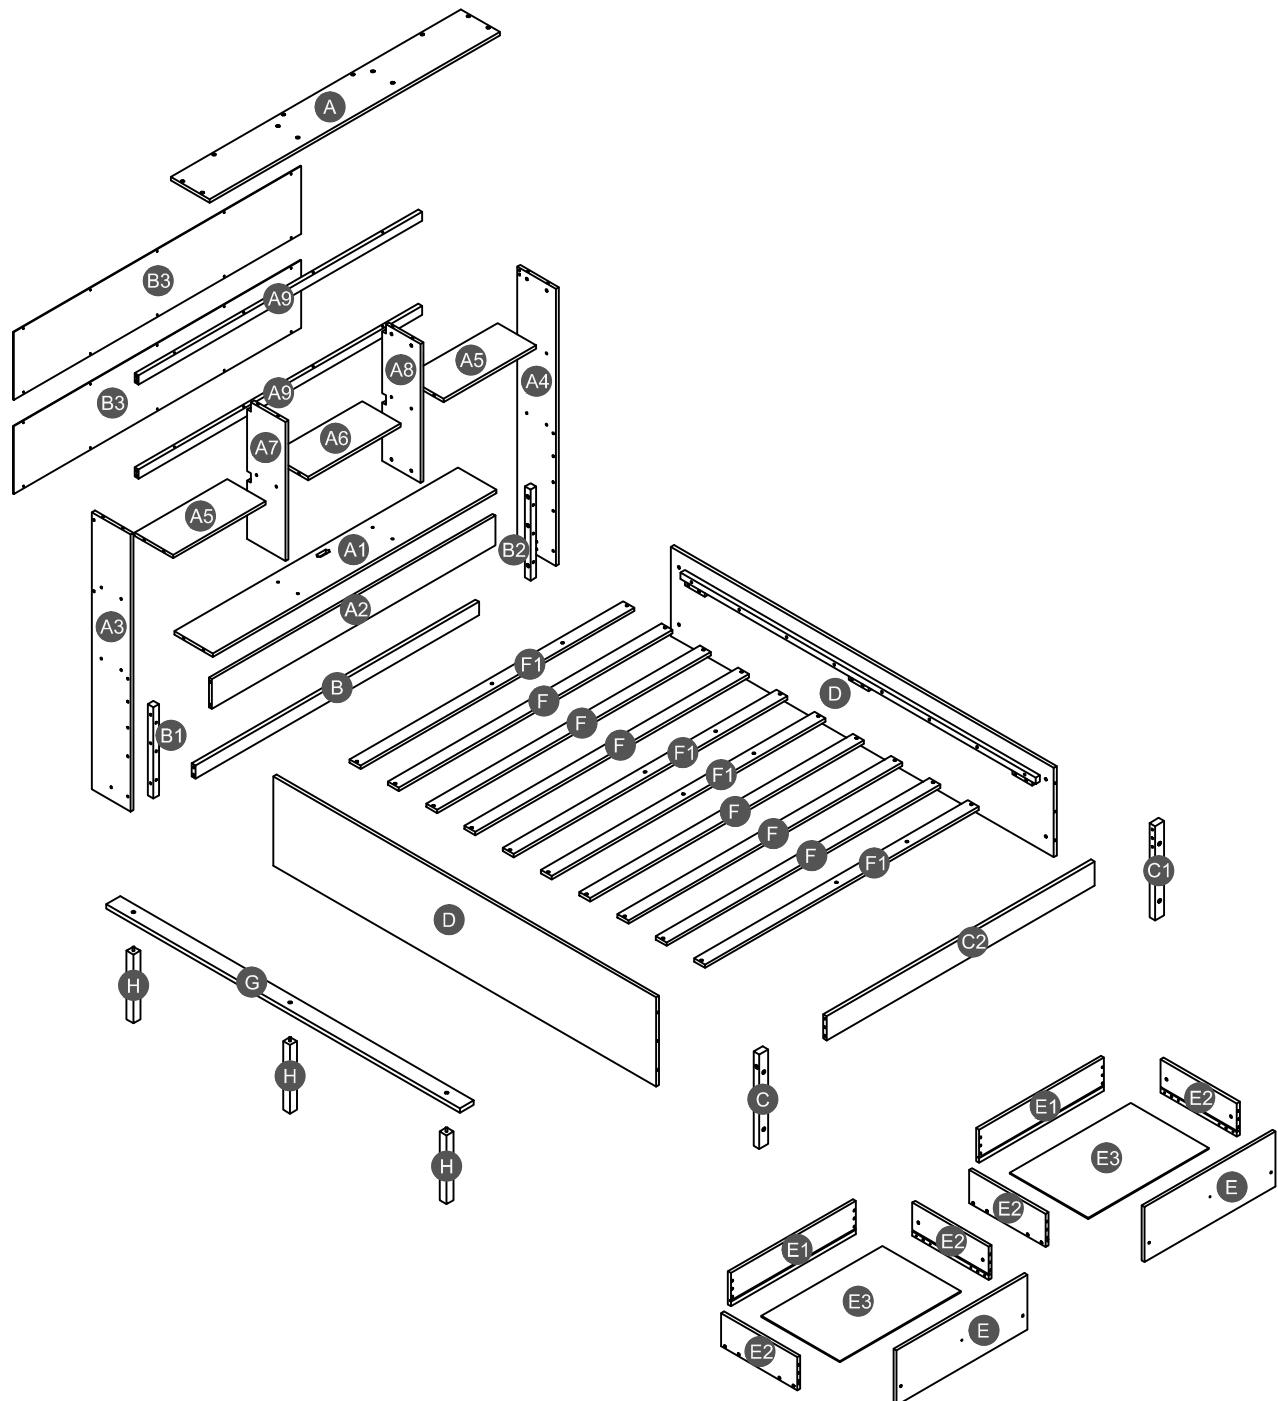


Part List




WF310890

A9  Upper horizontal HB (back) - 2pcs	B  Lower horizontal HB - 1pc	B1  Support HB (left) - 1pc
B2  Support HB (right) - 1pc	B3  Back panel - 2pcs	C  Leg FB (left) - 1pc
C1  Leg FB (right) - 1pc	C2  Horizontal FB - 1pc	D  Side rail - 2pcs
F  Slats - 6pcs	F1  Slats - 4pcs	G  Lower support slat - 1pc
H  Leg support - 3pcs		


WF310891 + Hardware inside

A  Top panel HB - 1pc	A1  Shelf panel HB - 1pc	A2  Horizontal bar HB - 1pc
A3  Side panel (left) - 1pc	A4  Side panel (right) - 1pc	A5  Shelf panel HB - 2pcs
A6  Divider shelf panel HB - 1pc	A7  Divider panel (left) - 1pc	A8  Divider panel (right) - 1pc
E  Front drawer panel - 2pcs	E1  Back drawer panel - 2pcs	E2  Left / right drawer panel - 4pcs
E3  Drawer bottom - 2pcs		

Hardware List WF310891



1		2		3	
	$\varnothing 8*30\text{mm}$		$(\varnothing 15)1/4''*80\text{mm}$		$(\varnothing 12)1/4''*70\text{mm}$
	Wood dowel (38pcs)		Hex-Head bolts (2pcs)		Hex-Head bolts (8pcs)
4		5		6	
	$(\varnothing 12)1/4''*60\text{mm}$		$(\varnothing 12)1/4''*40\text{mm}$		$1/4''*15\text{ (9.5mm)}$
	Hex-Head bolts (38pcs)		Hex-Head bolts (6pcs)		Horizontal-Hole bolts(48pcs)
7		8		9	
	$(1/4'')4.5*58\text{mm}$		$100*54*20\text{ mm}$		$\varnothing 38*31\text{mm}$
	Allen key (1pc)		Wheels (8pcs)		Pine Knob (2pcs)
10		11		12	
	$3/16''*25\text{mm}$		$\varnothing 3.5*15\text{mm}$		$(\varnothing 12)1/4''*40\text{mm}$
	Ph zinc(Knob) (2pcs)		Wood screws (2pcs)		Wood screw bolts (4pcs)
13		14		15	
	$\varnothing 4*30\text{mm}$		$\varnothing 3.5*15\text{mm}$		$\varnothing 10*20\text{mm}$
	Wood screws (46pcs)		Wood screws (20pcs)		Wood dowel (8pcs)
16		17			
	$70*50*19\text{ mm}$		$1500*68*30*22\text{mm}$		
	Drawer stopper (3pcs)		USB port (1set)		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)





PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !


STEP 1:

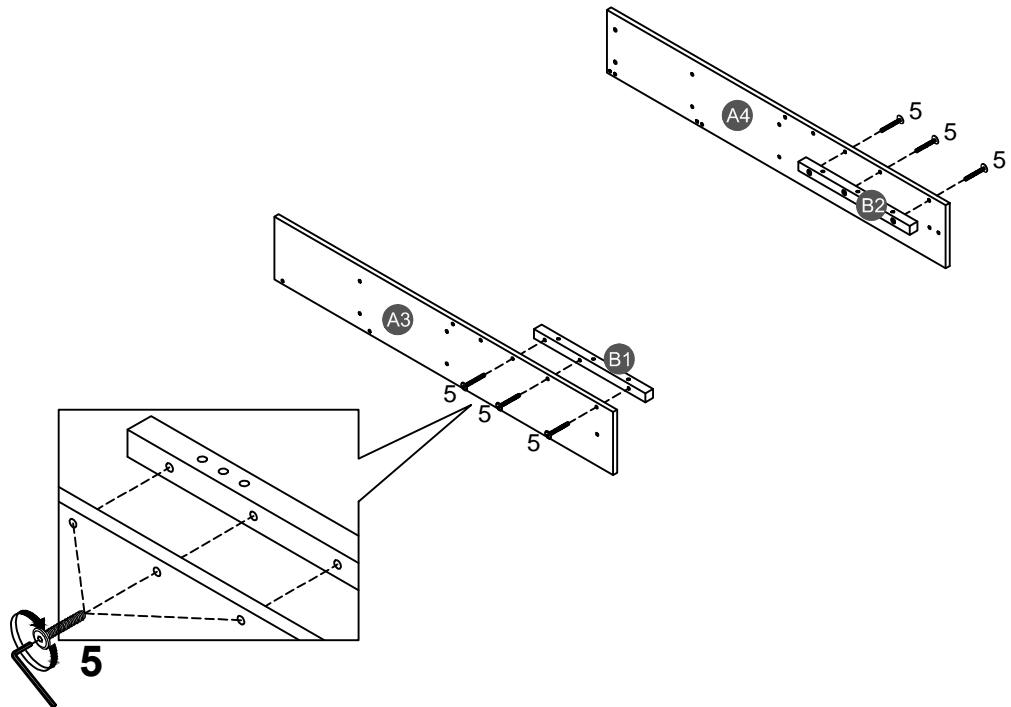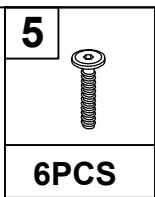


STEP 2:

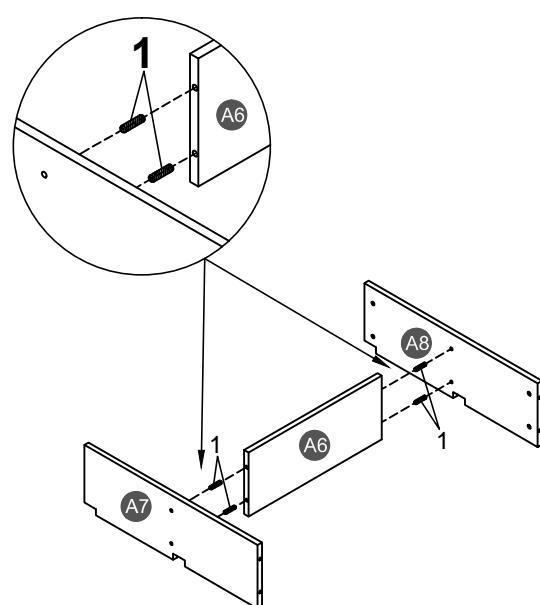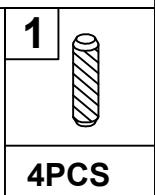


STEP 3:

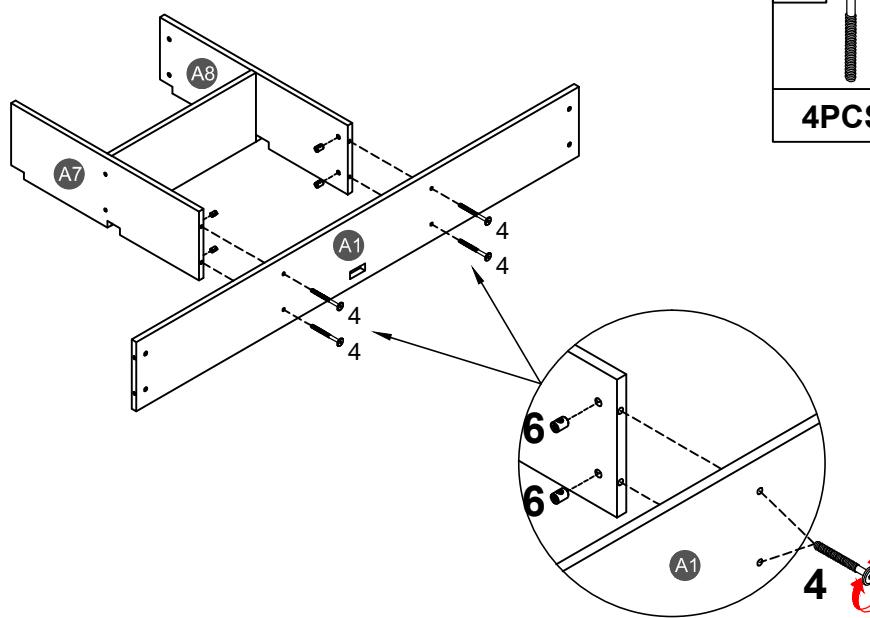


STEP 4:

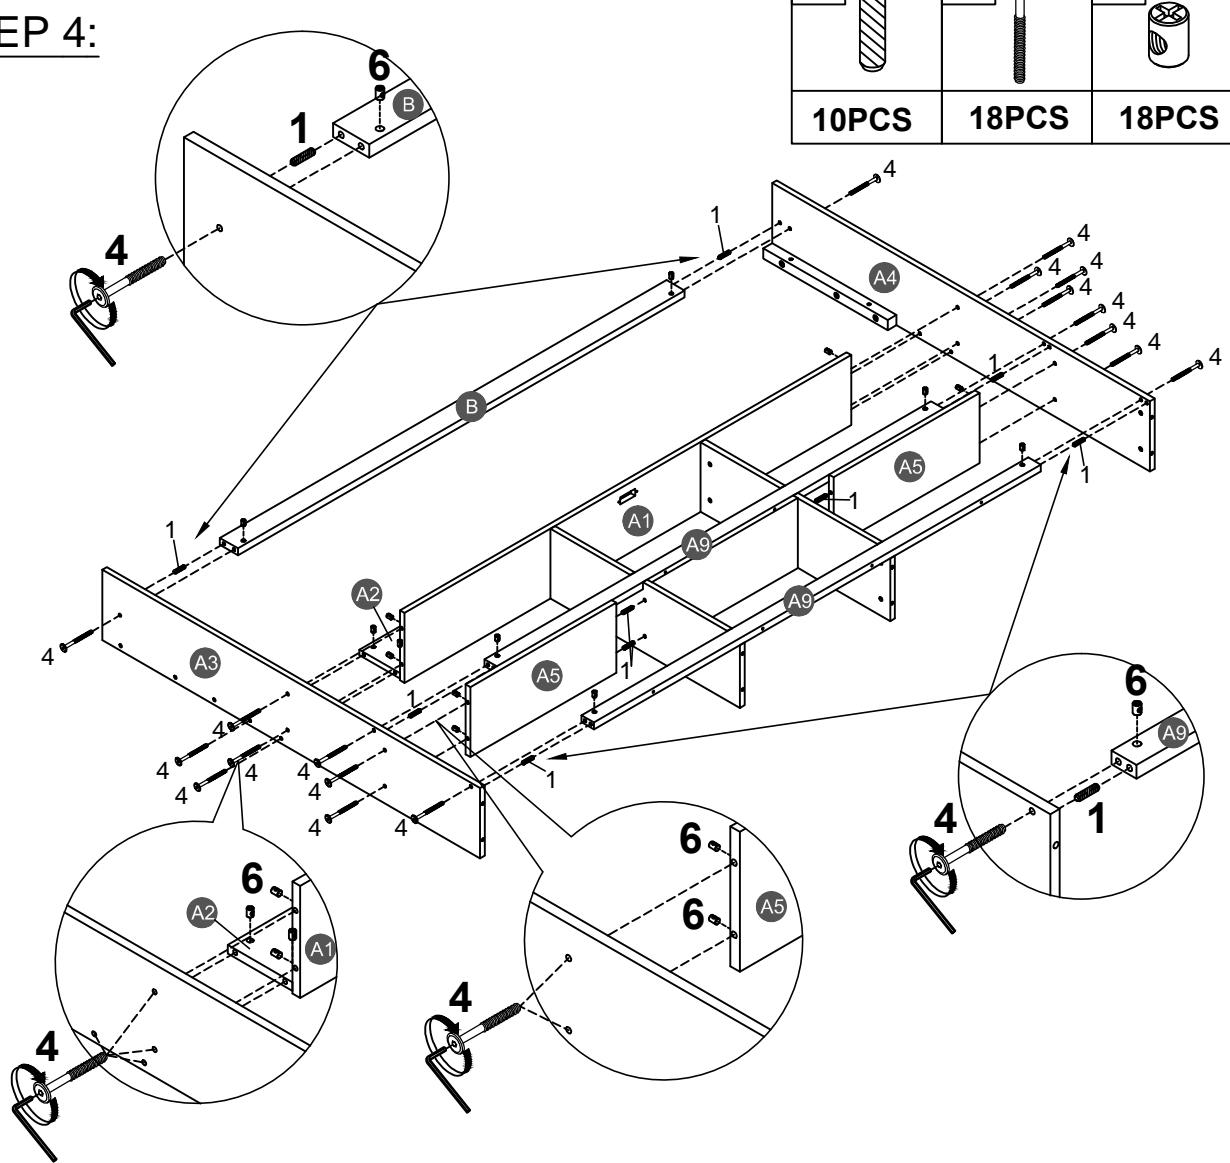

STEP 5:

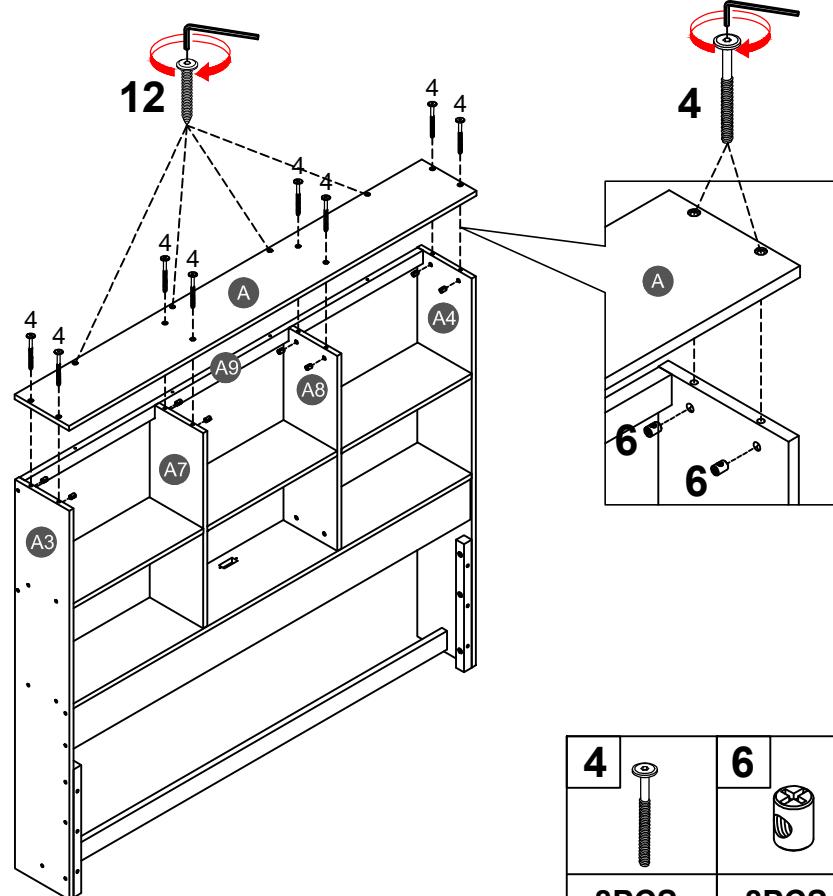


STEP 6:

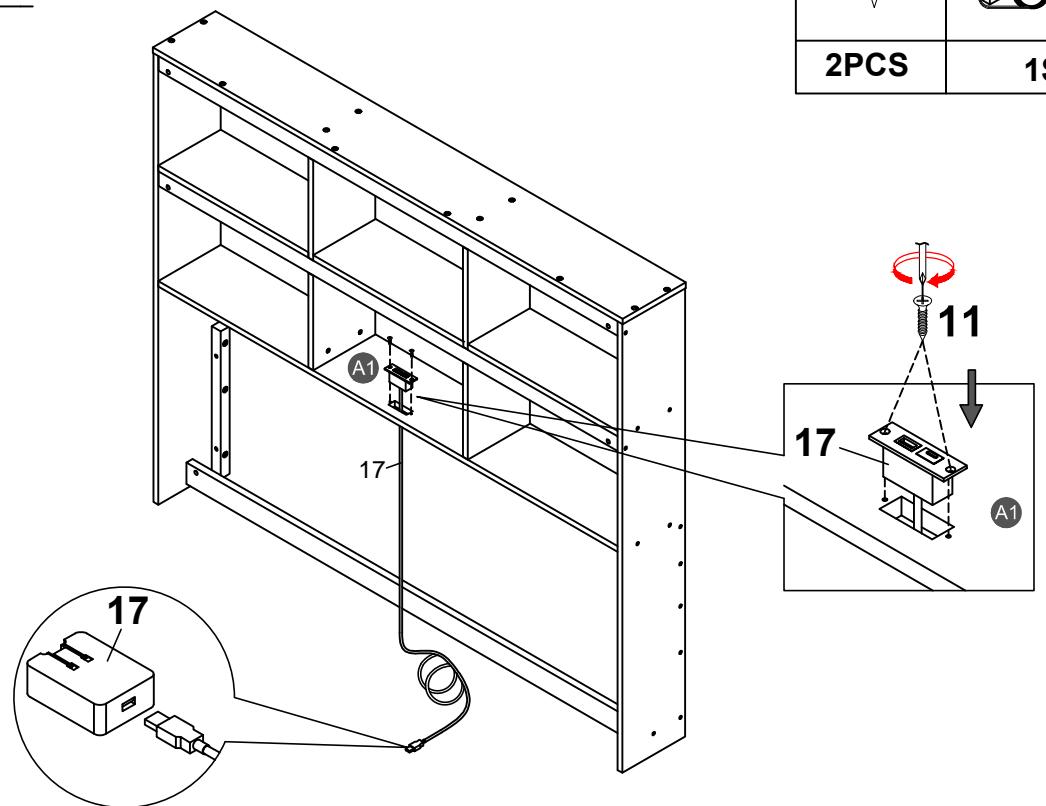


STEP 7:

14
20PCS

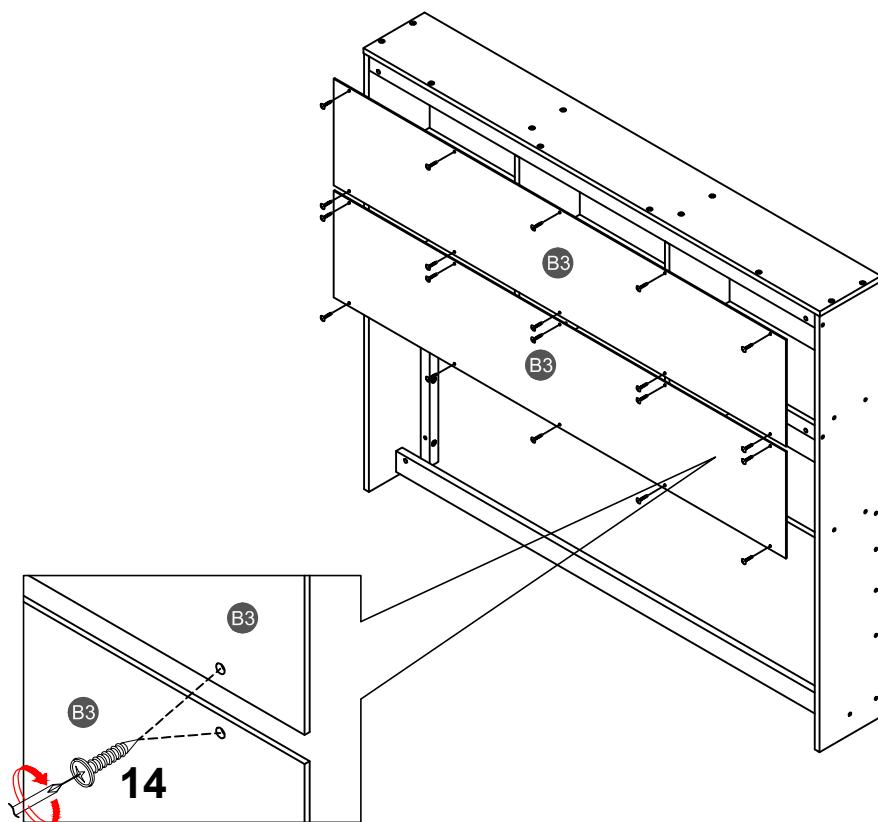


STEP 8:


13
16
6PCS
3PCS

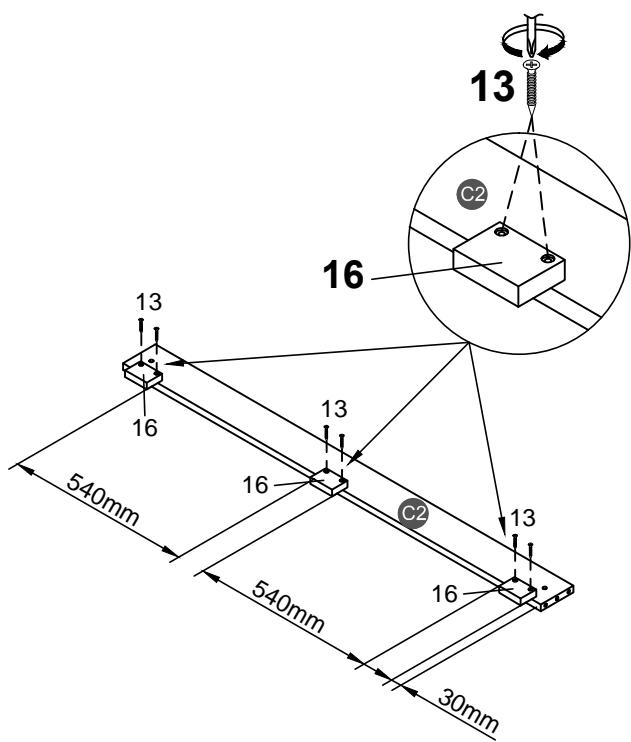


STEP 9:

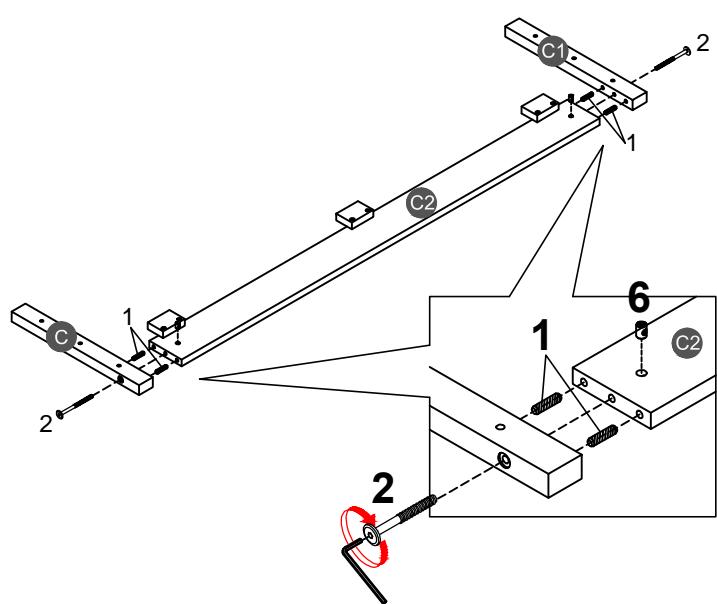


STEP 10:

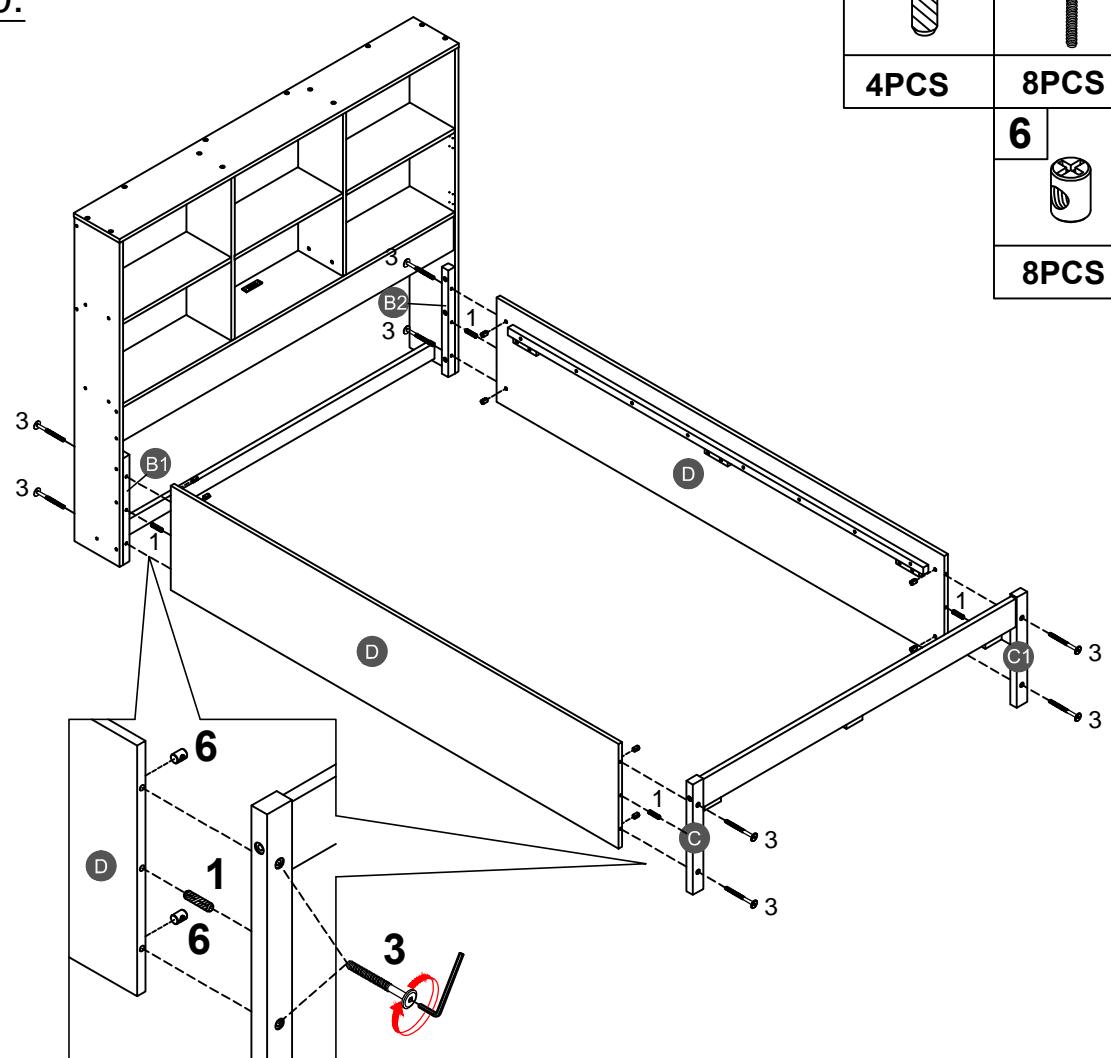

STEP 11:

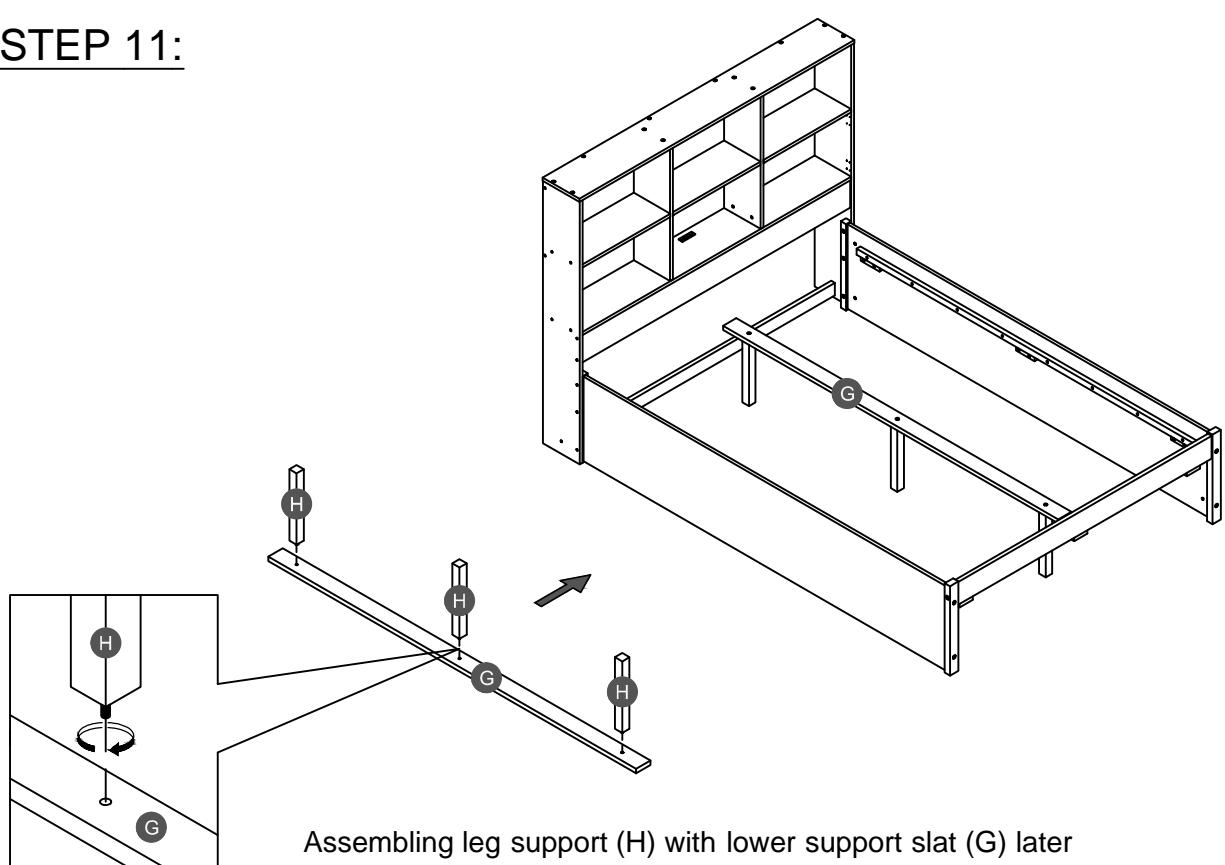


STEP 12:

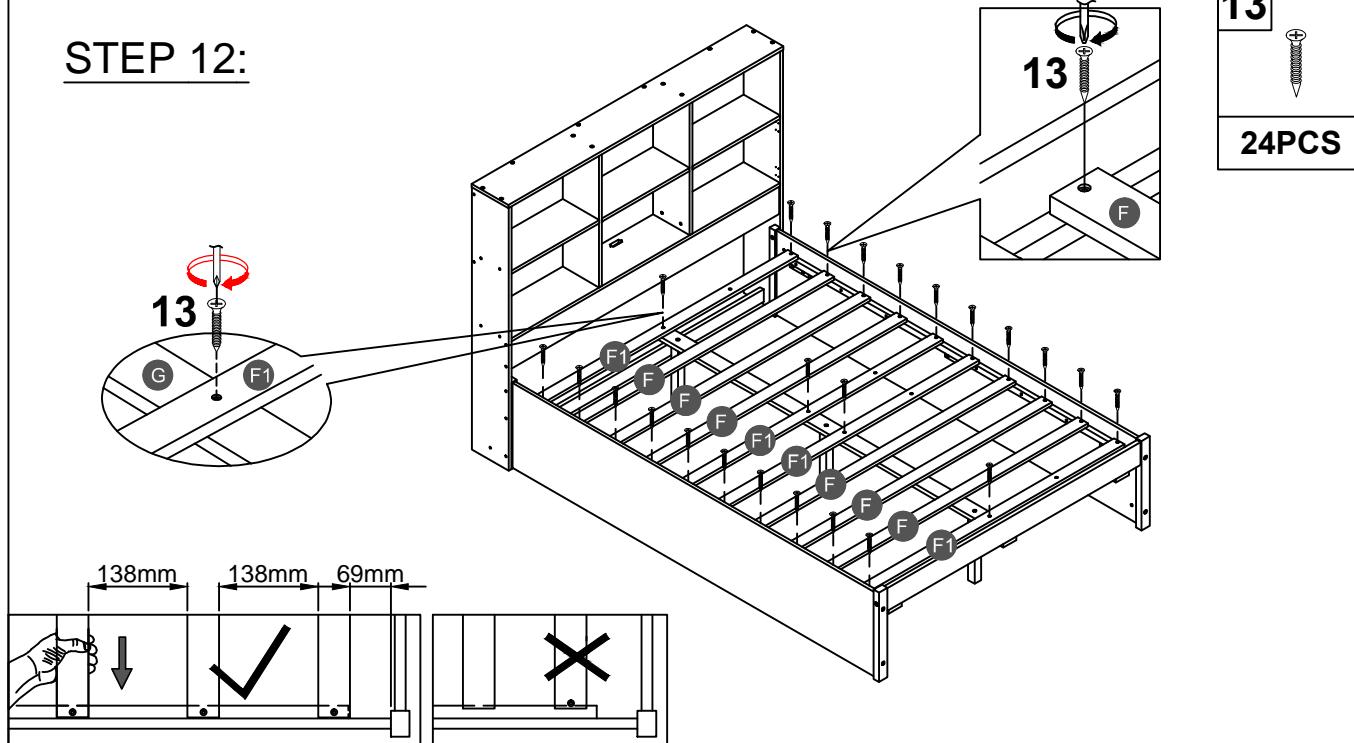

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.


STEP 13:

1	4	6
8PCS	4PCS	4PCS

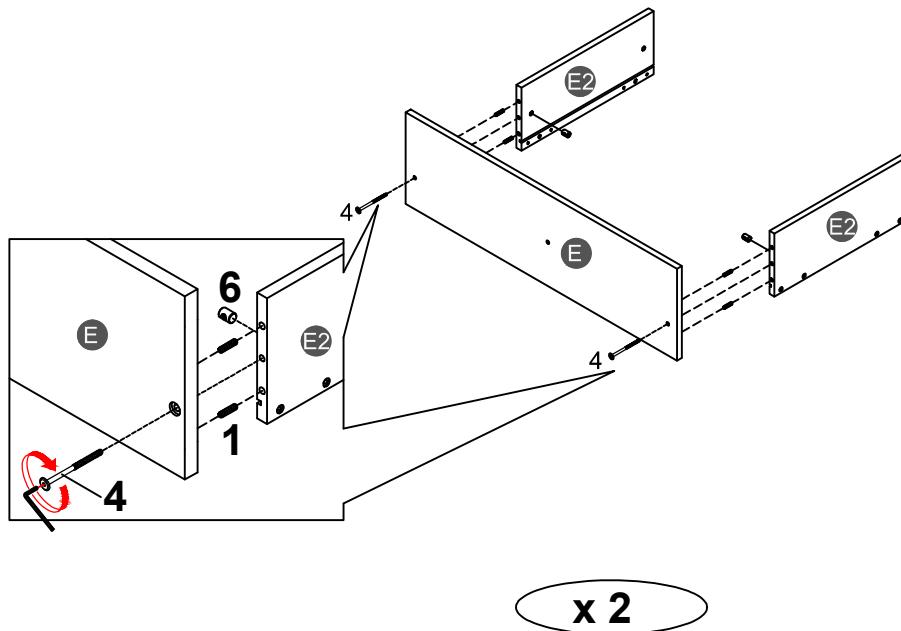


STEP 14:

1	4	6
8PCS	4PCS	4PCS

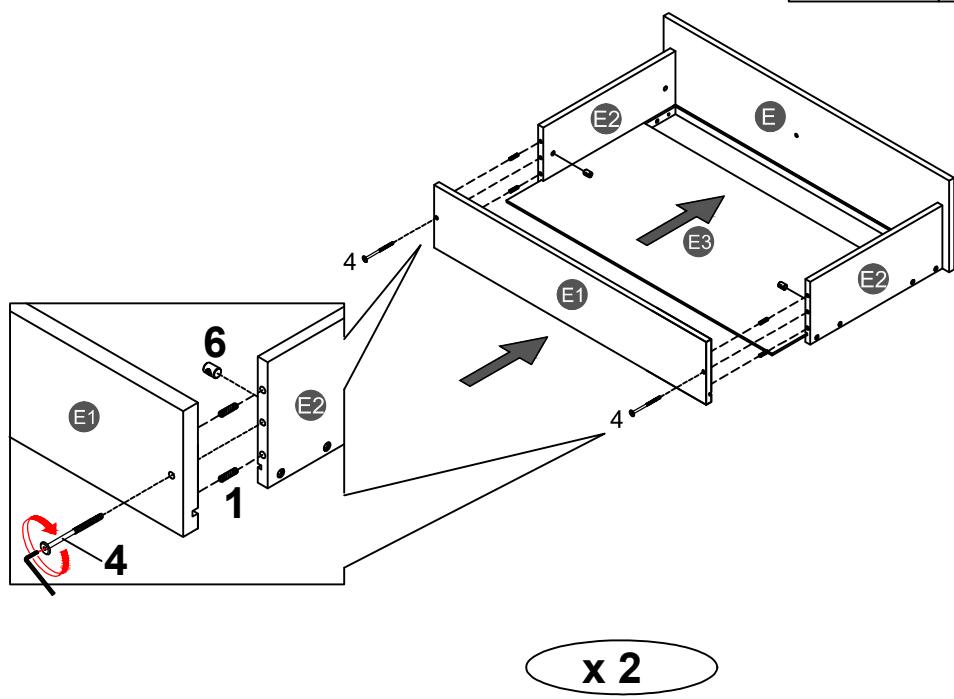


STEP 15:

8	13	15
8PCS	16PCS	8PCS

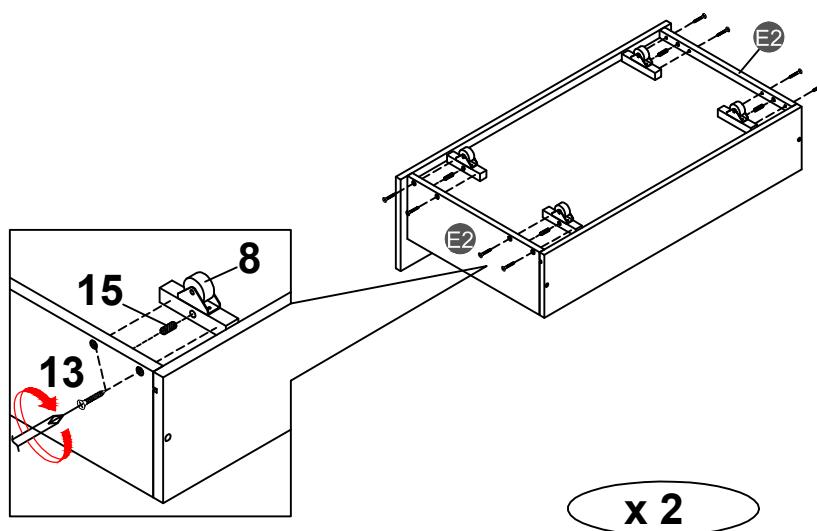


STEP 16:


9	10
2PCS	2PCS

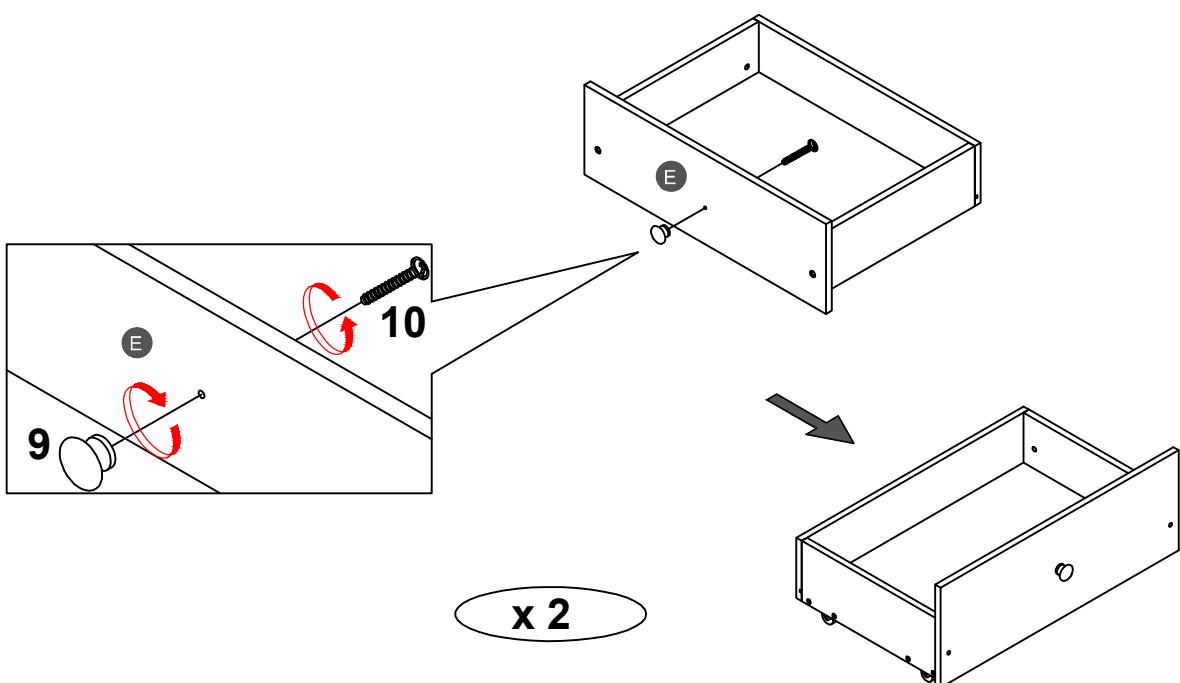

STEP 17:

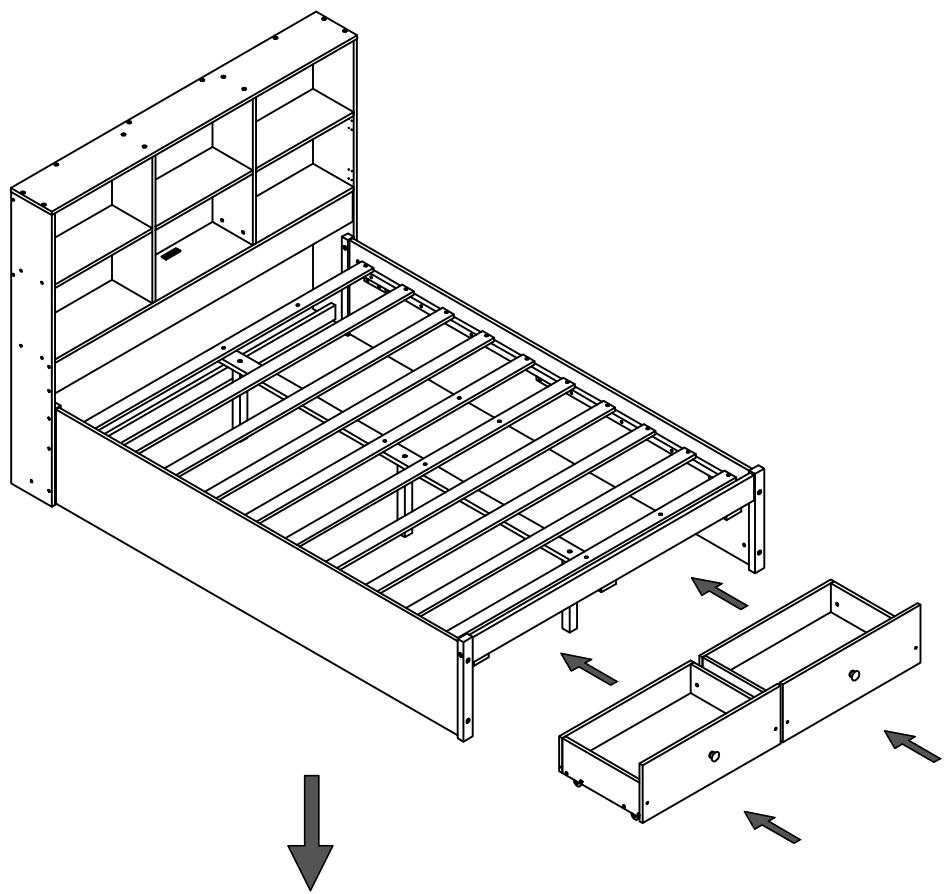

Push Drawer under the bottom of Bunk Bed.

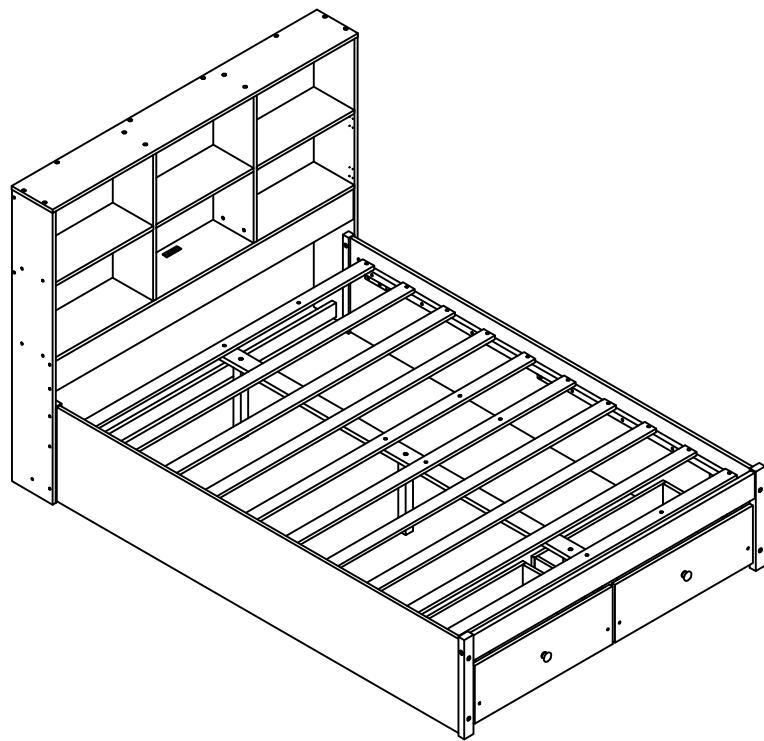

Make sure to tighten all the screws of the bed.