


ASSEMBLY INSTRUCTIONS

2 TWIN HOUSE BEDS WITH 2 DRAWERS


If you have any questions, please feel free to contact
US.

Email: lowes.team@qualfurn.net

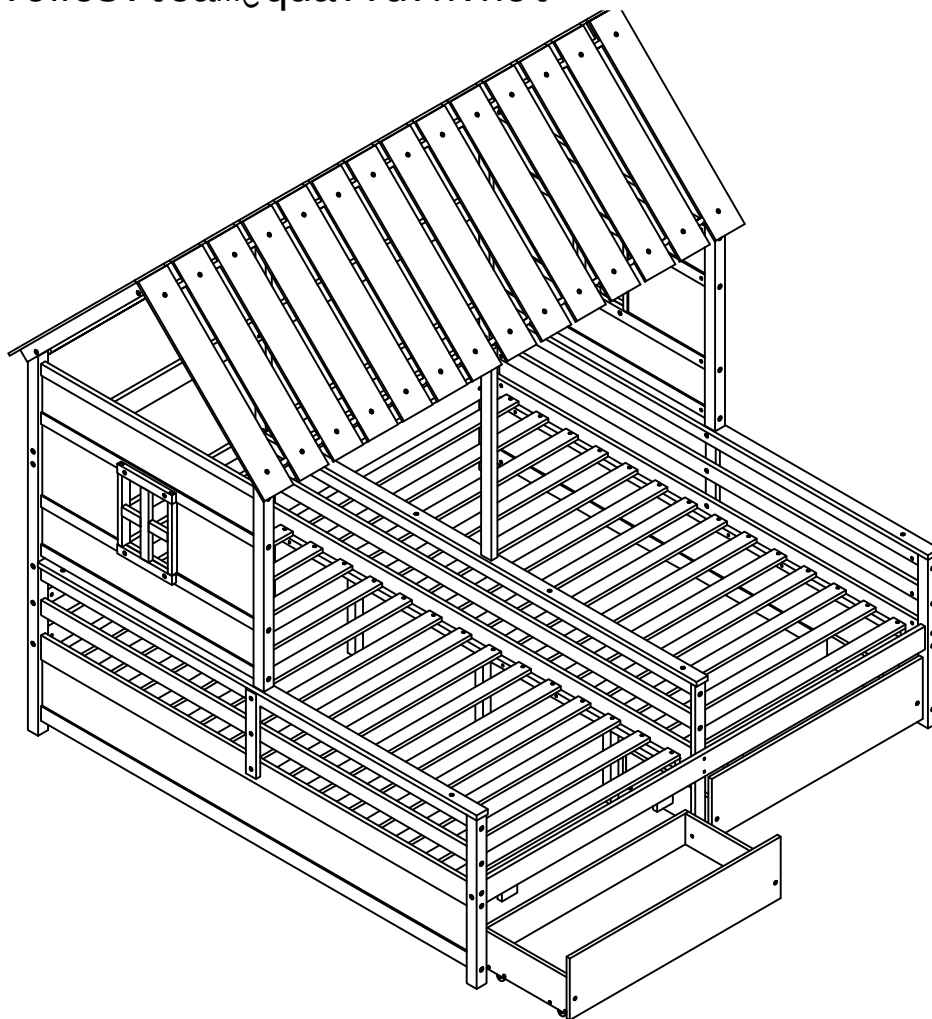






WF323653/WF323654

Detail View

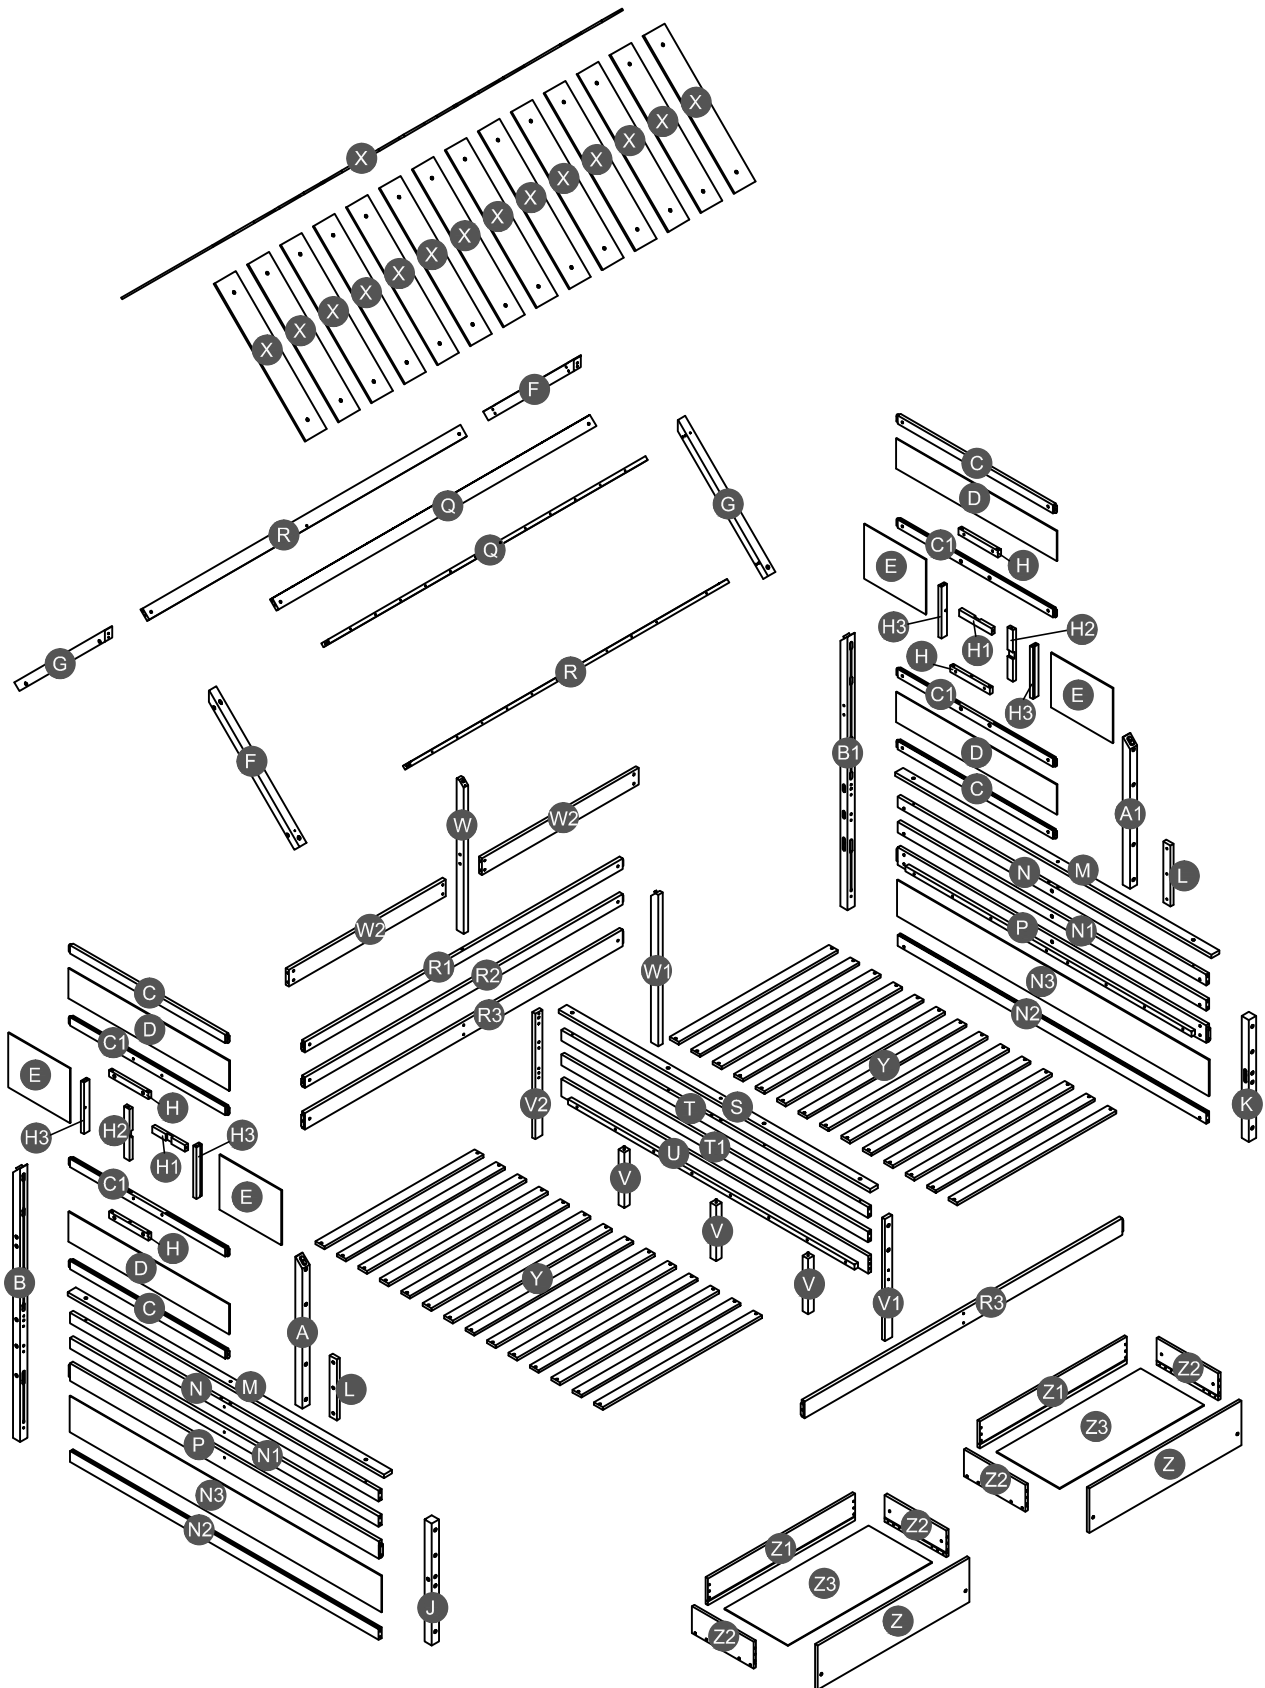











Part List

WF323653 - Hardware inside








B  Leg (Left Back) - 1pc	B1  Leg (Right Back) - 1pc	C  Horizontal bar - 4pcs
C1  Horizontal bar - 4pcs	D  Side panel - 4pcs	F  Upper (Left Front/Right Back) - 2pcs
G  Upper (Left Back/Right Front) - 2pcs	M  Cap for upper - 2pcs	N  Upper horizontal bar - 2pcs
N1  Divider horizontal bar - 2pcs	N2  Lower horizontal bar - 2pcs	N3  Lower side panel - 2pcs
P  Side rail (Front/Right) - 2pcs	Q  Upper horizontal bar - 2pcs	R  Upper horizontal bar (Front/Back) - 2pcs
R1  Upper horizontal bar (Back) - 1pc	R2  Divider horizontal bar (Back) - 1pc	R3  Horizontal bar (Front/Back) - 2pcs
S  Divider Cap for upper - 1pc	T  Upper horizontal bar - 1pc	T1  Divider horizontal bar - 1pc
U  Divider side rail - 1pc	W2  Upper horizontal bar (Back) - 2pcs	Z  Front drawer panel - 2pcs

Part List



WF323654

A  Upper leg (Left Front) - 1pc	A1  Upper leg (Right Front) - 1pc	E  Side panel - 4pcs
H  Horizontal bar - 4pcs	H1  Horizontal bar - 2pcs	H2  Vertical bar - 2pcs
H3  Vertical bar - 4pcs	J  Lower leg (Left Front) - 1pc	K  Lower leg (Right Front) - 1pc
L  Vertical guard rail - 2pcs	V  Leg support - 3pcs	V1  Divider leg (Front) - 1pc
V2  Divider leg (Back) - 1pc	W  Vertical bar (Back)- 1pc	W1  Vertical bar (Front)- 1pc
X  Top panel - 28pcs	Y  Slat - 28pcs	Z1  Back drawer panel - 2pcs
Z2  Left / right drawer panel - 4pcs	Z3  Drawer bottom - 2pcs	

Hardware List WF323653


1	 Ø10*40mm Wood dowel (16pcs)	2	 Ø10*20mm Wood dowel (8pcs)	3	 Ø8*30mm Wood dowel (47pcs)
4	 (Ø15)1/4"*100mm Hex-Head bolts (24pcs)	5	 (Ø15)1/4"*80mm Hex-Head bolts (40pcs)	6	 (Ø12)1/4"*60mm Hex-Head bolts (8pcs)
7	 (Ø12)1/4"*30mm Hex-Head bolts (14pcs)	8	 (Ø12)1/4"*15mm Hex-Head bolts (4pcs)	9	 1/4"*15 (9.5mm) Horizontal-Hole bolts(72pcs)
10	 (Ø12)1/4"*65mm Hex-Head bolts (6pcs)	11	 (Ø12)1/4"*40mm Hex-Head bolts (18pcs)	12	 (Ø12)1/4"*30mm Hex-Head bolts (56pcs)
13	 Ø4*30mm Wood screws (80pcs)	14	 Ø3.5*15mm Wood screws (8pcs)	15	 (1/4")4.5*58mm Allen key (1pc)
16	 Ø9*90mm Connecting bar (4pcs)	17	 (Ø10)1/4*76mm Connecting bar (2pcs)	18	 100*54*20 mm Wheels (8pcs)
19	 40*18*18*1.6mm Metal bracket (2pcs)	20	 70*70*19 mm Drawer stopper (4pcs)		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

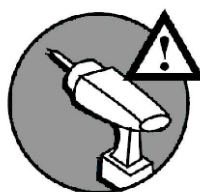



PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE
POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

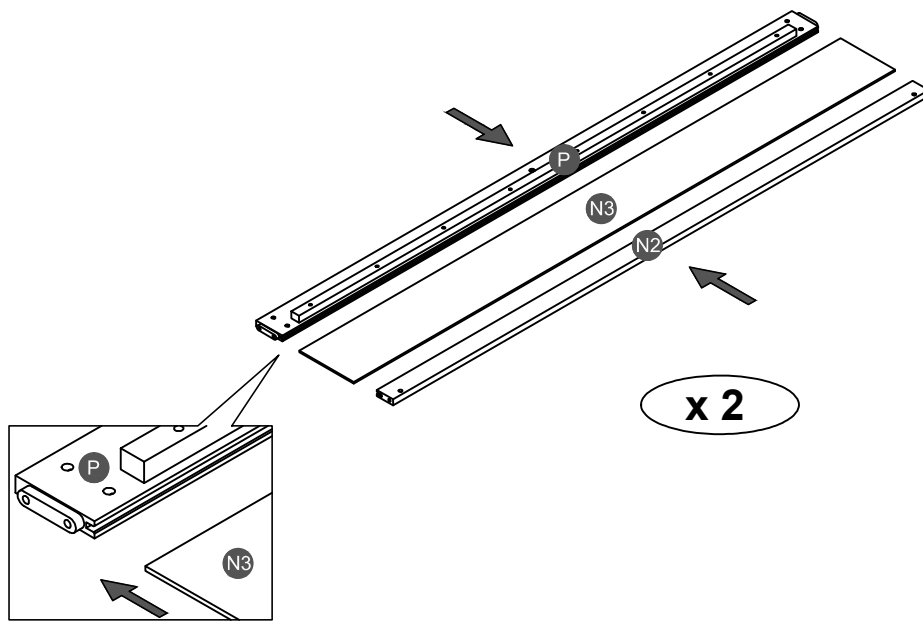


STEP 2:

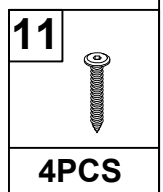
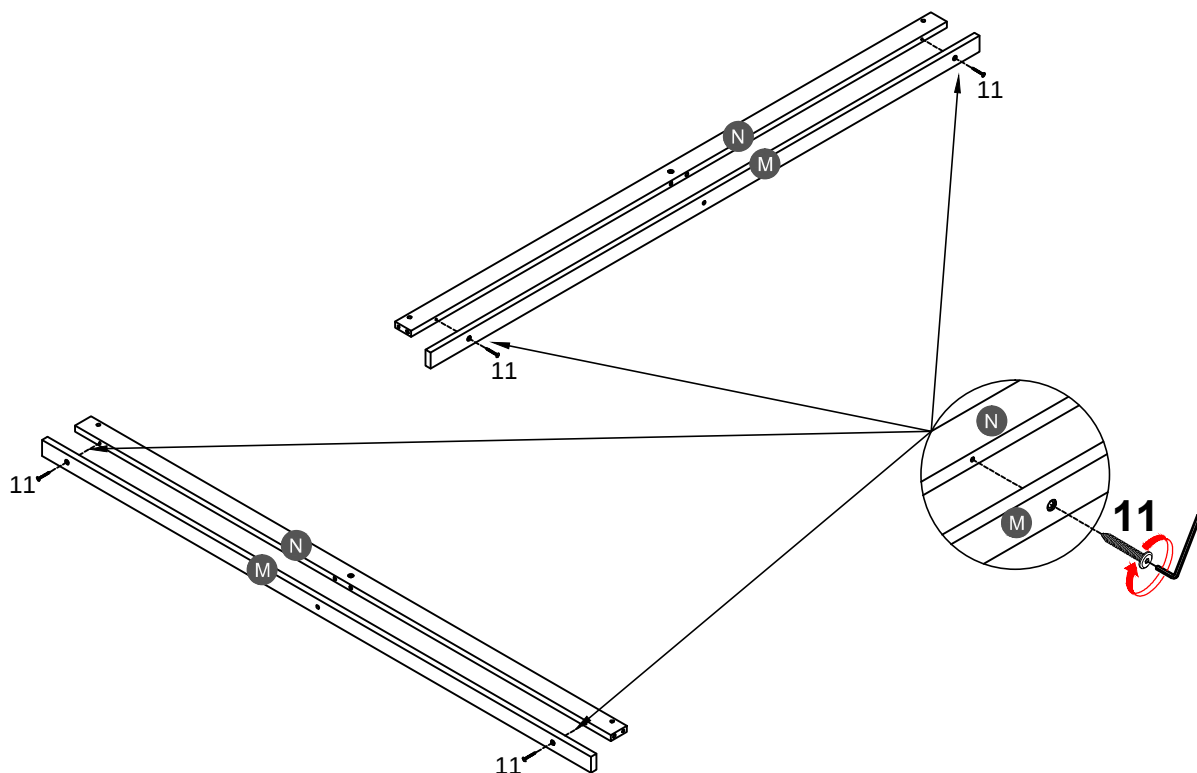


STEP 3:

1		4		9	
6PCS		10PCS		10PCS	

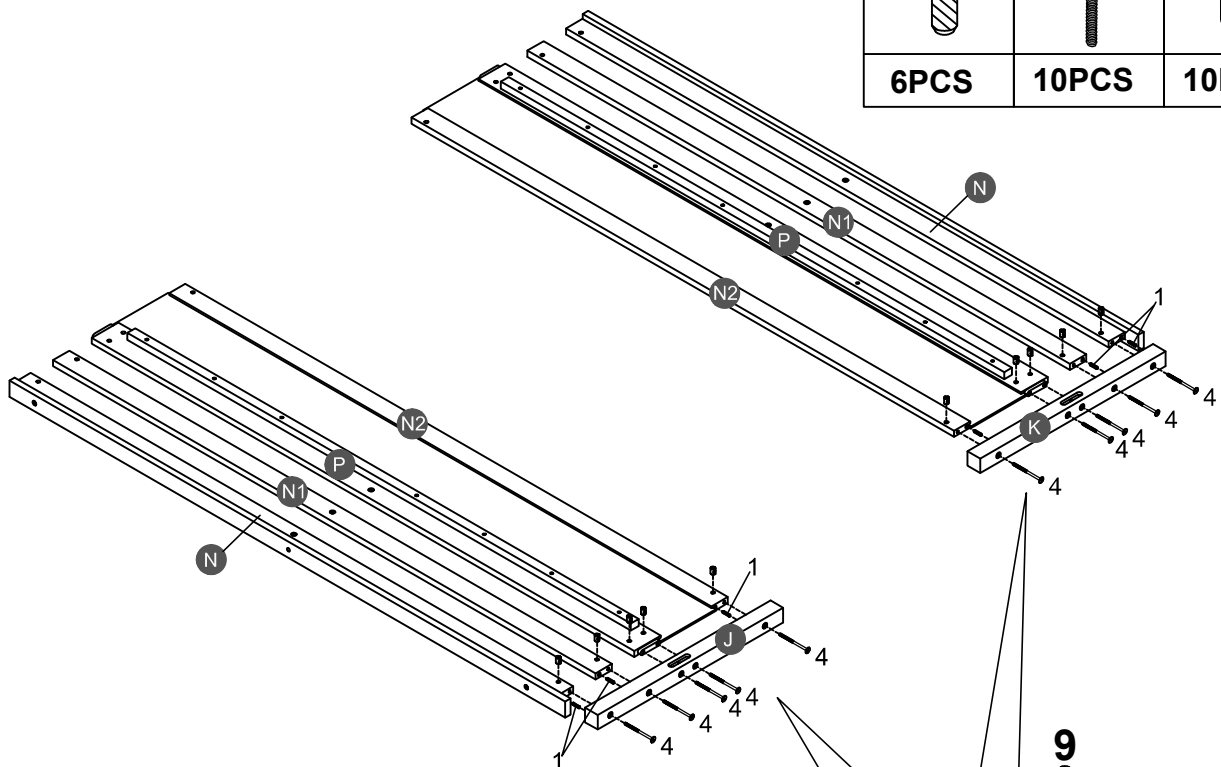


Note: Part 9 will face up with the "x" mark on it, otherwise it cannot be tightened

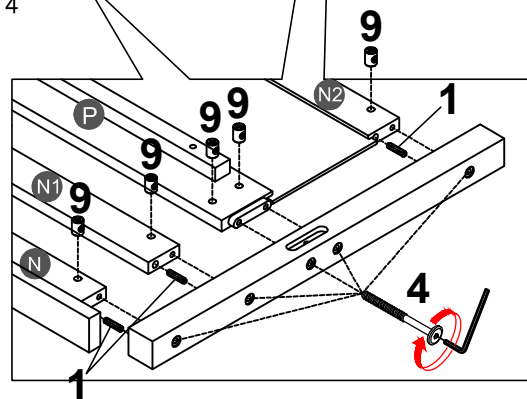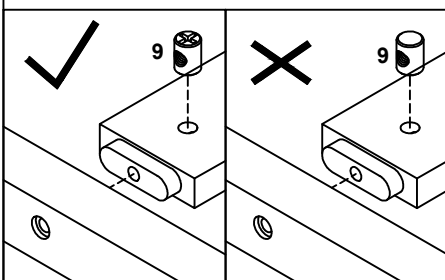


STEP 4:


3	
4PCS	

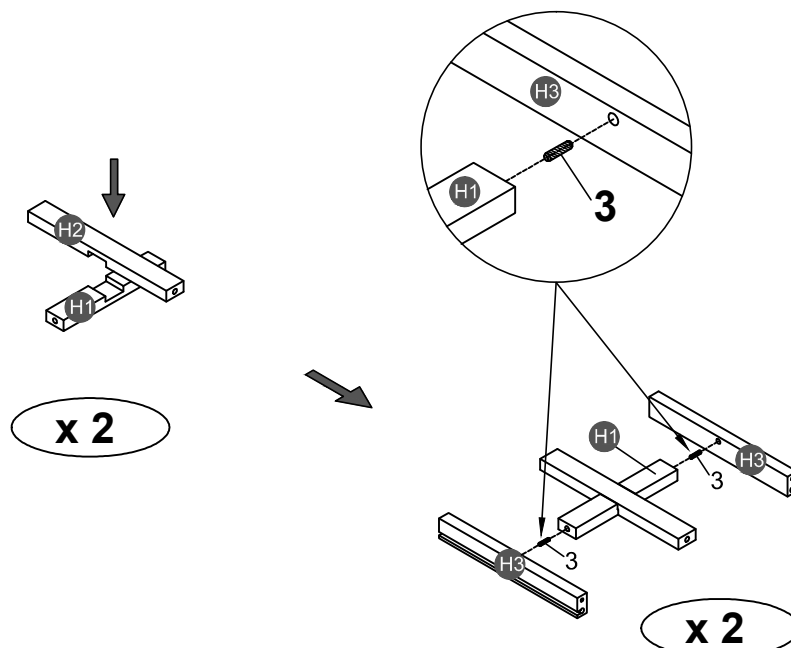


STEP 5:

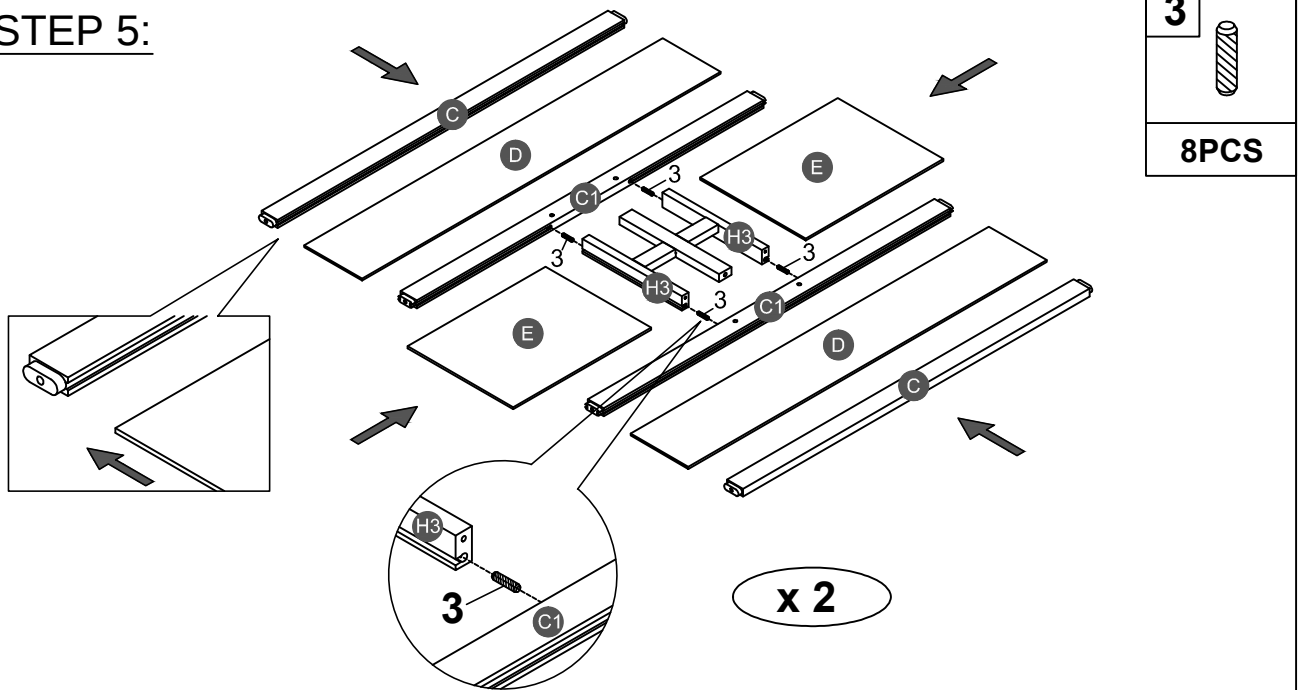


STEP 6:

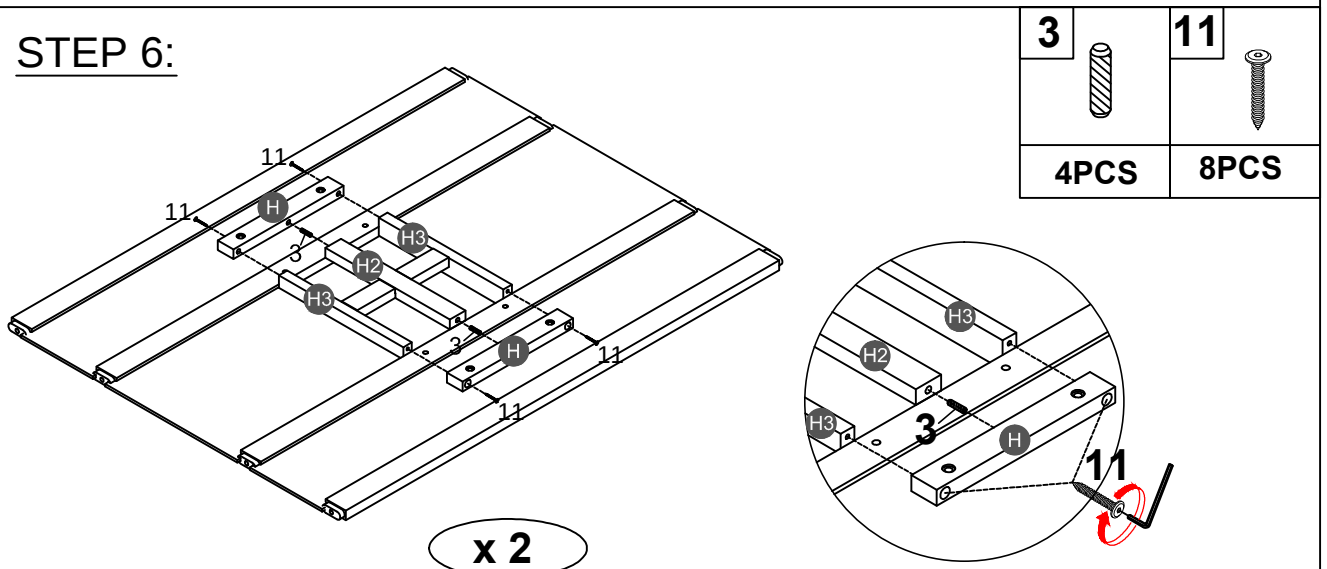


STEP 7:

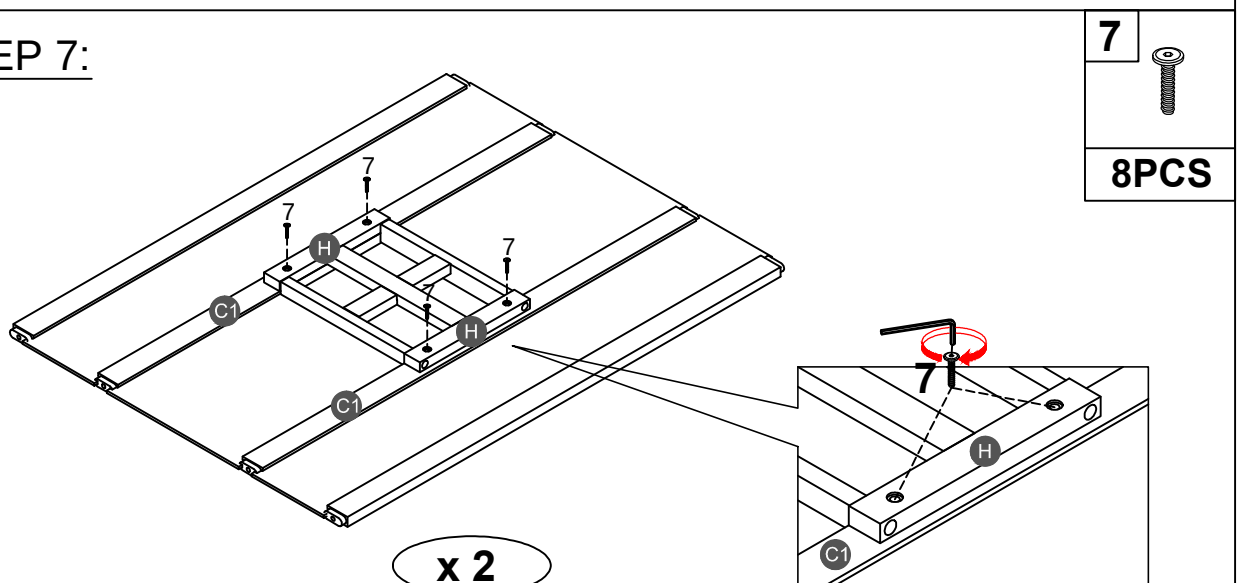


STEP 8:

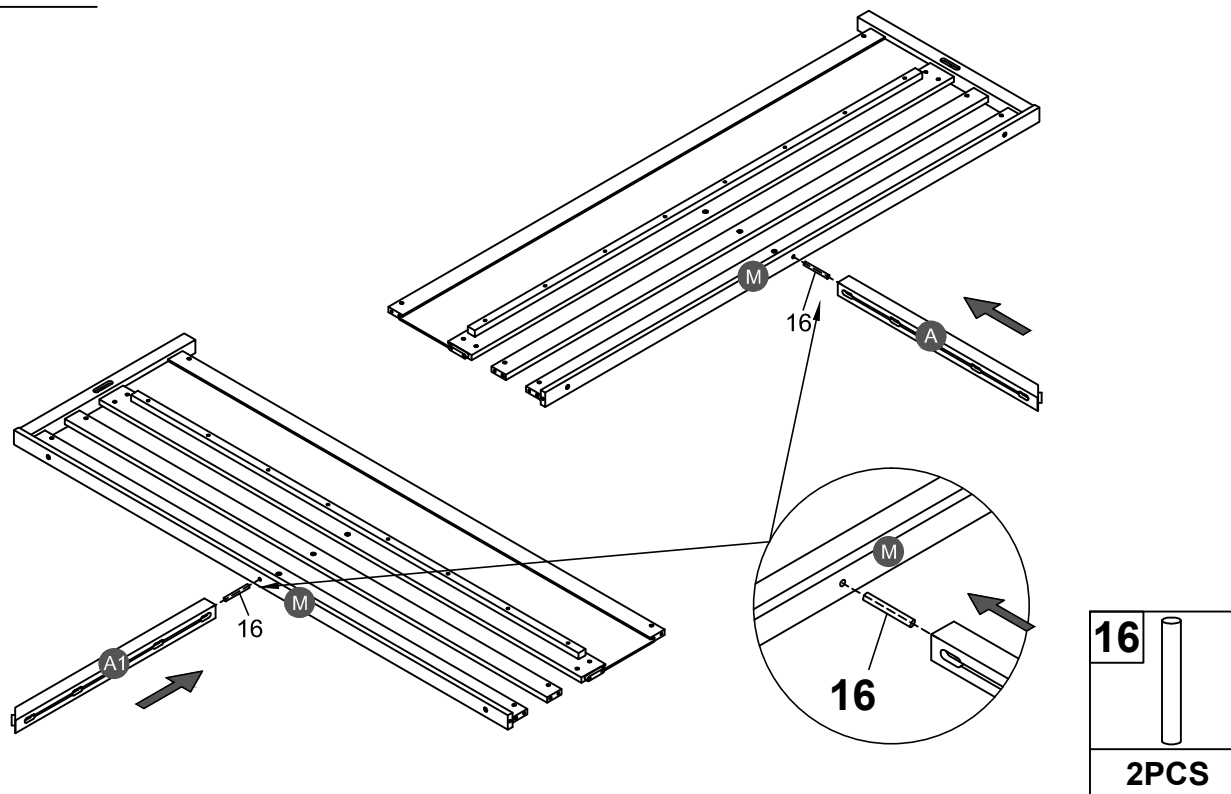


STEP 9:

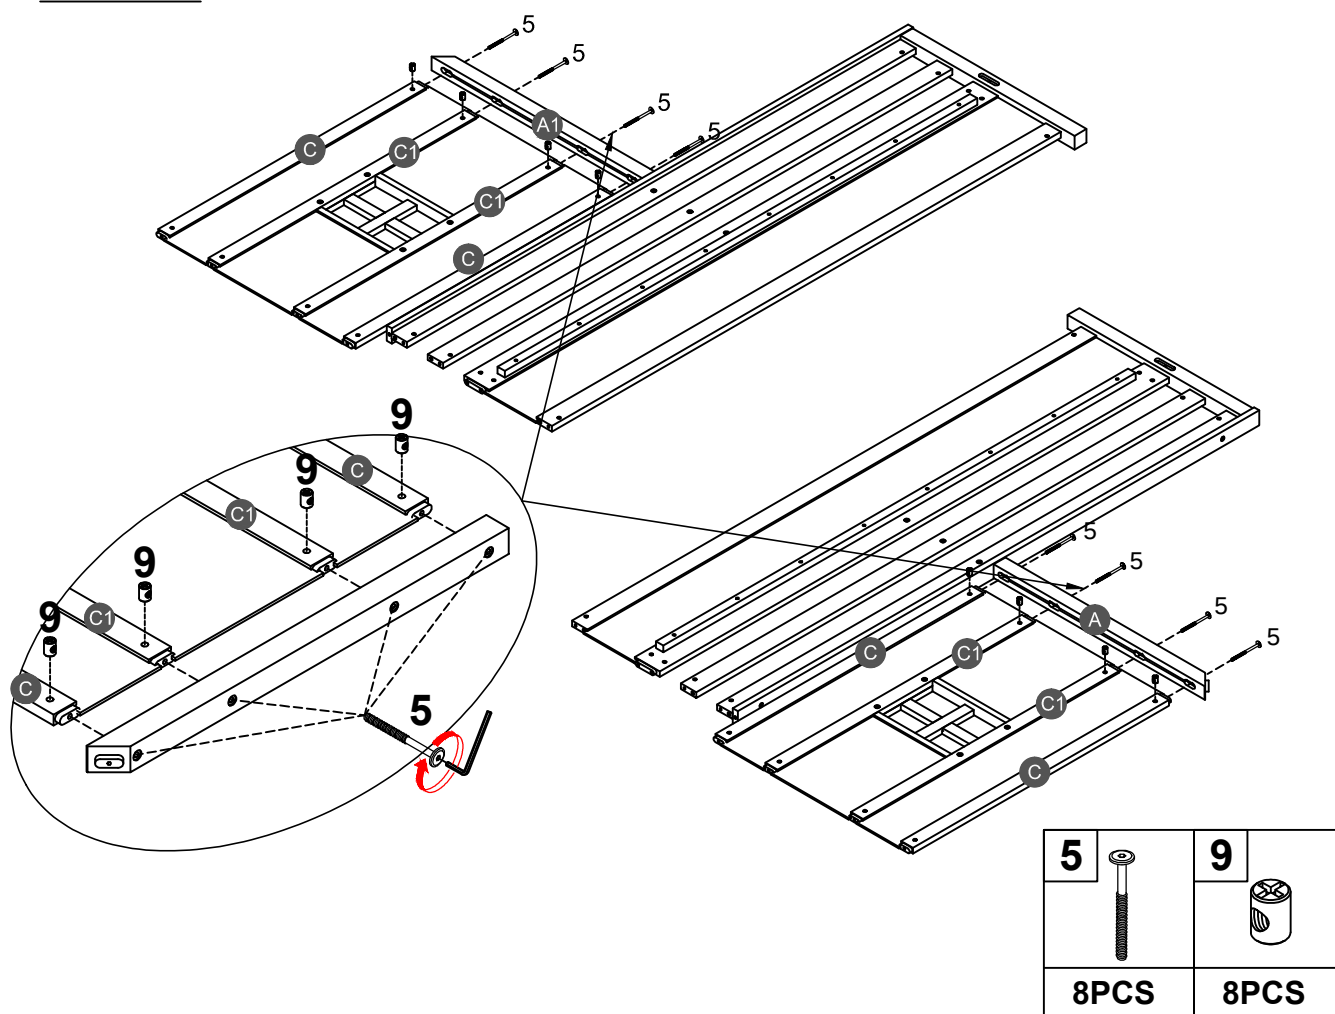


STEP 10:

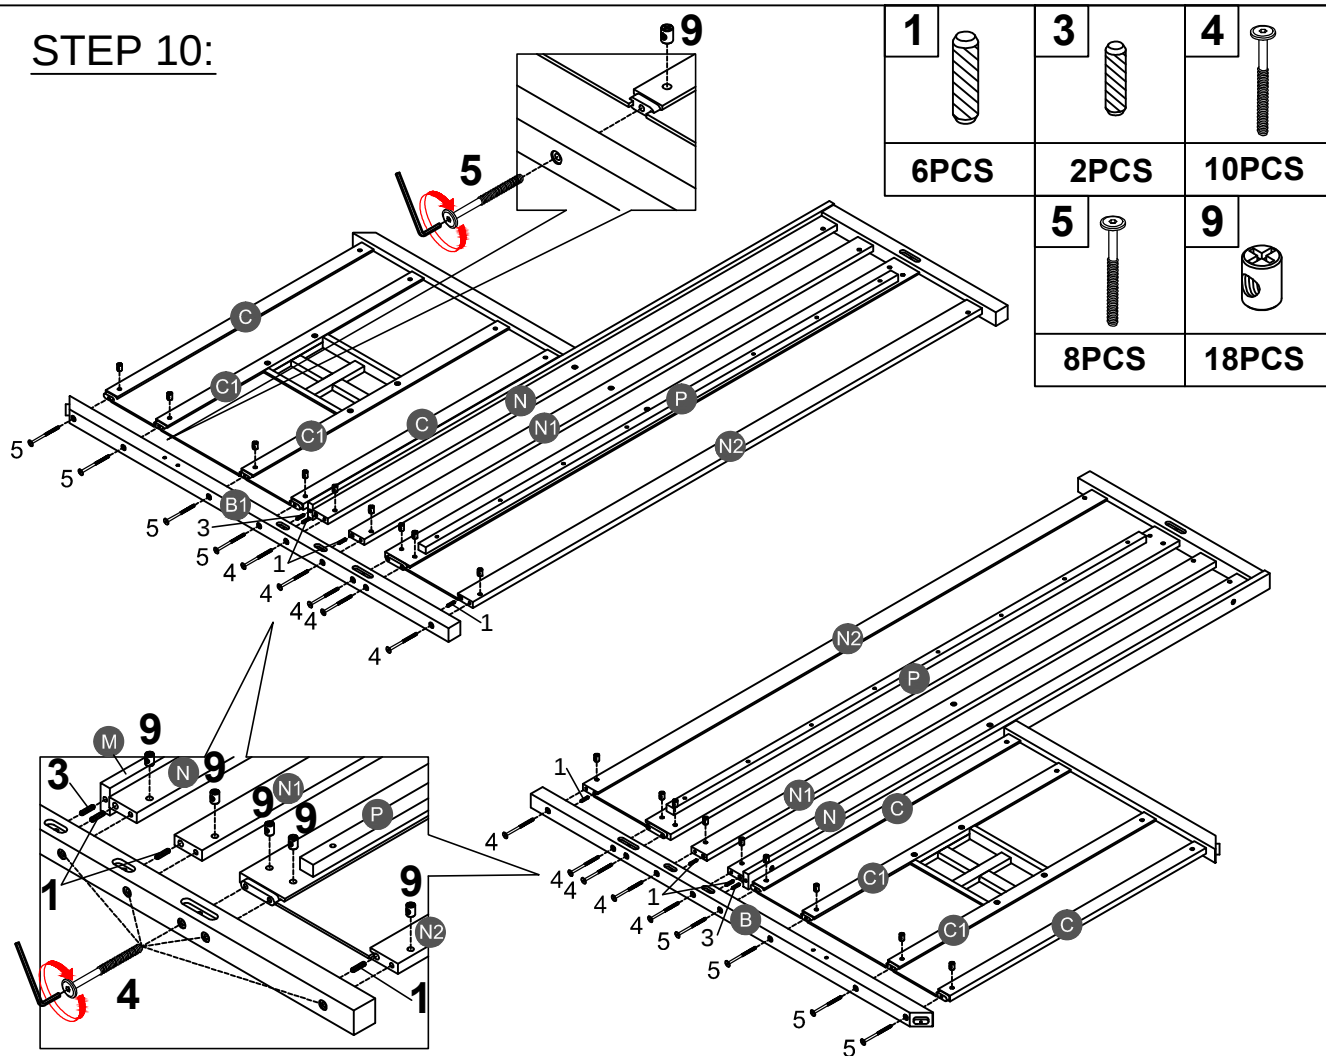

STEP 11:

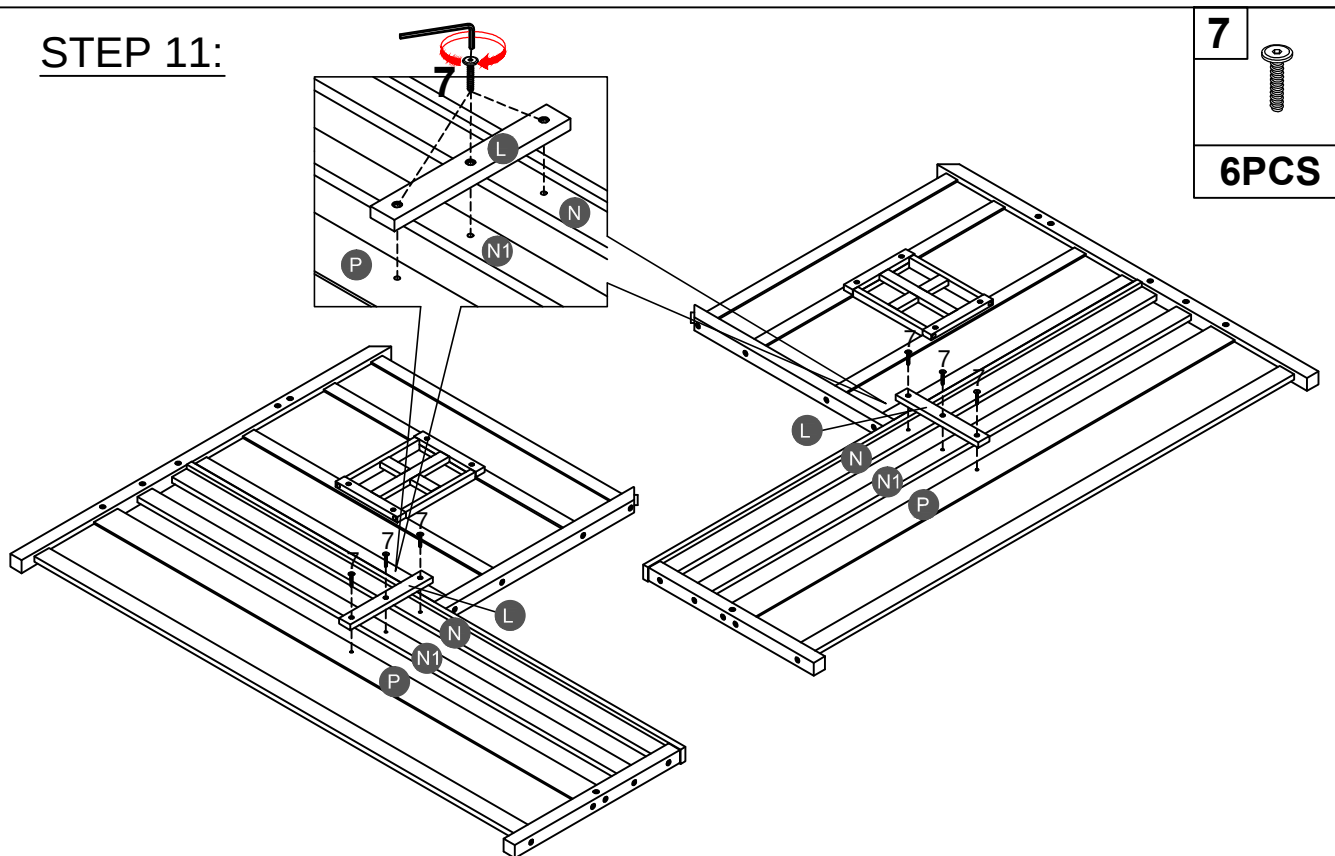


STEP 12:

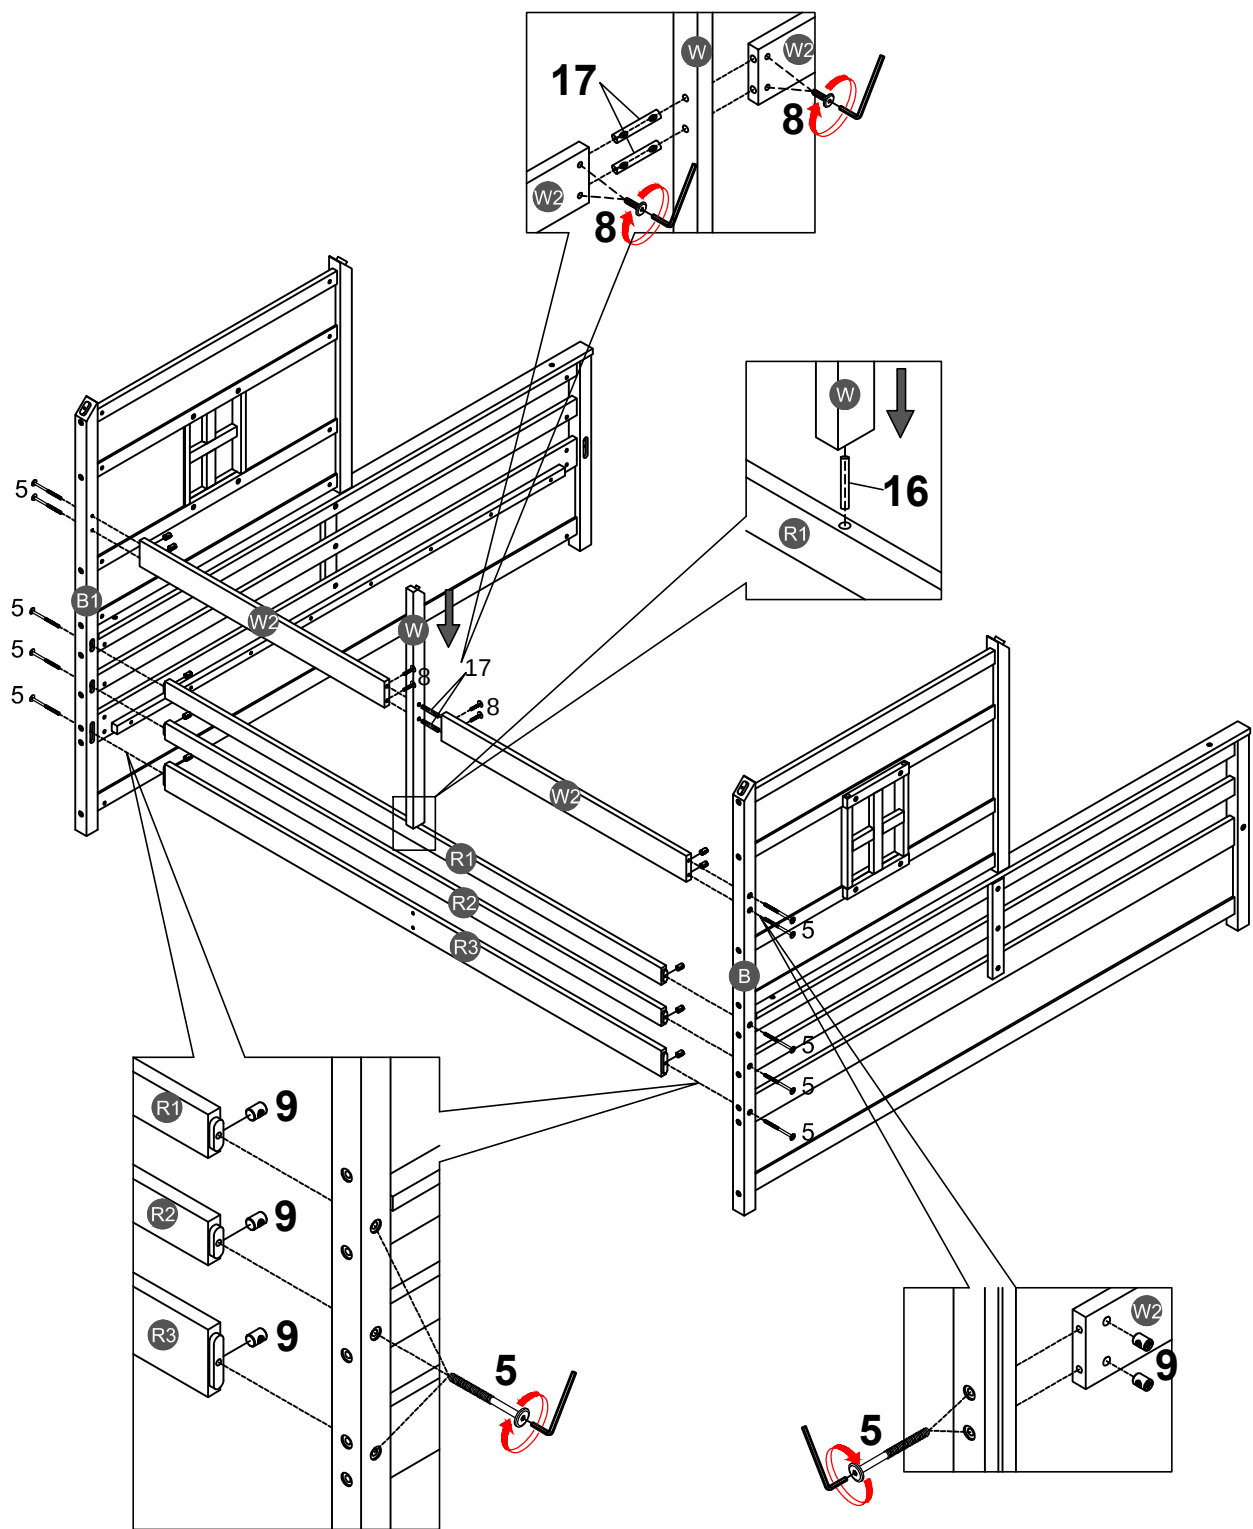

5	8	9	16	17
				
10PCS	4PCS	10PCS	1PC	2PCS


STEP 13:

1		3		5		9	
4PCS		2PCS		4PCS		4PCS	

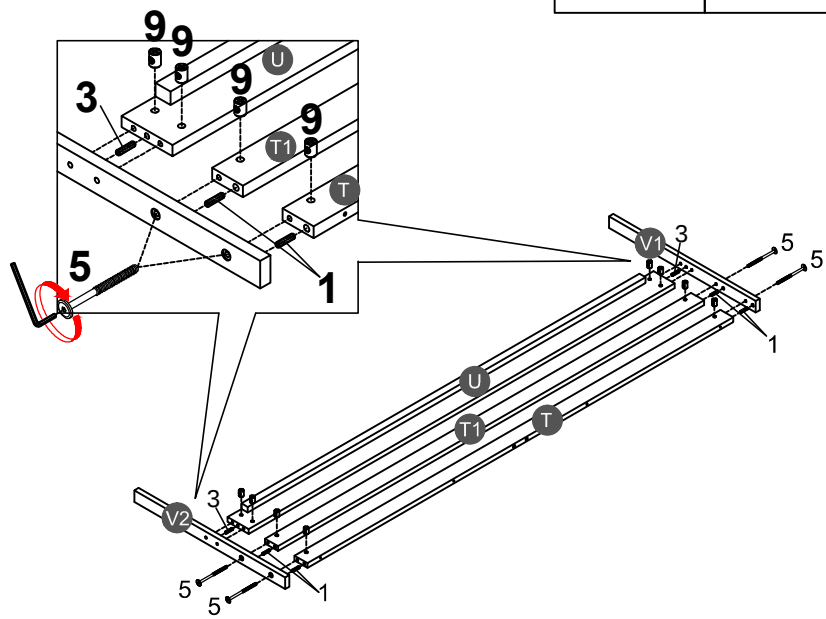


STEP 14:


3		11	
1PC		4PCS	

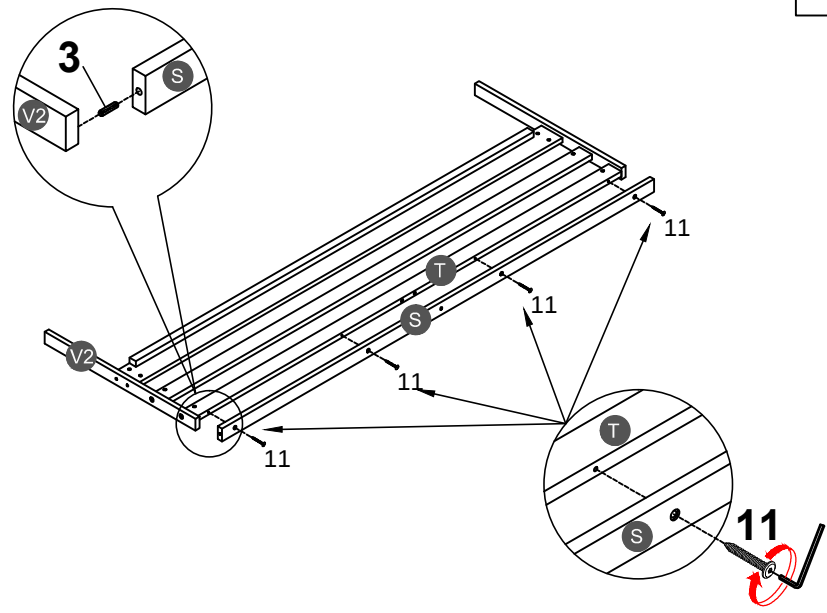

STEP 15:

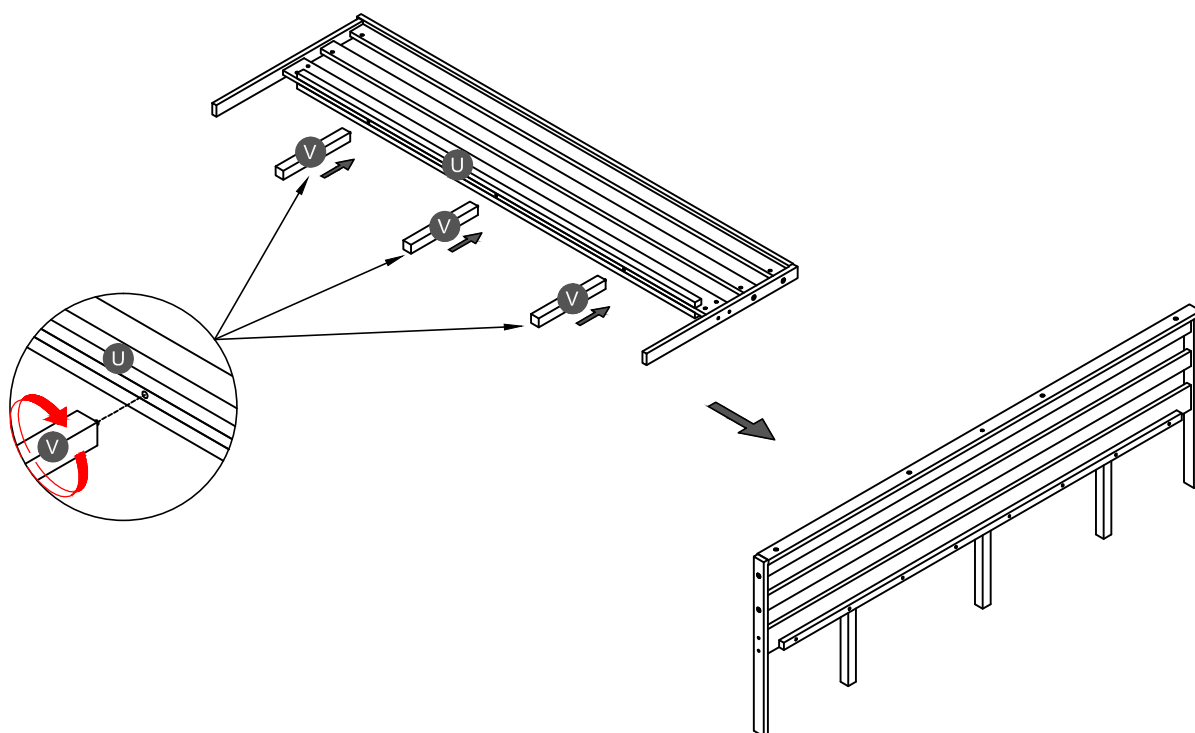


STEP 16:

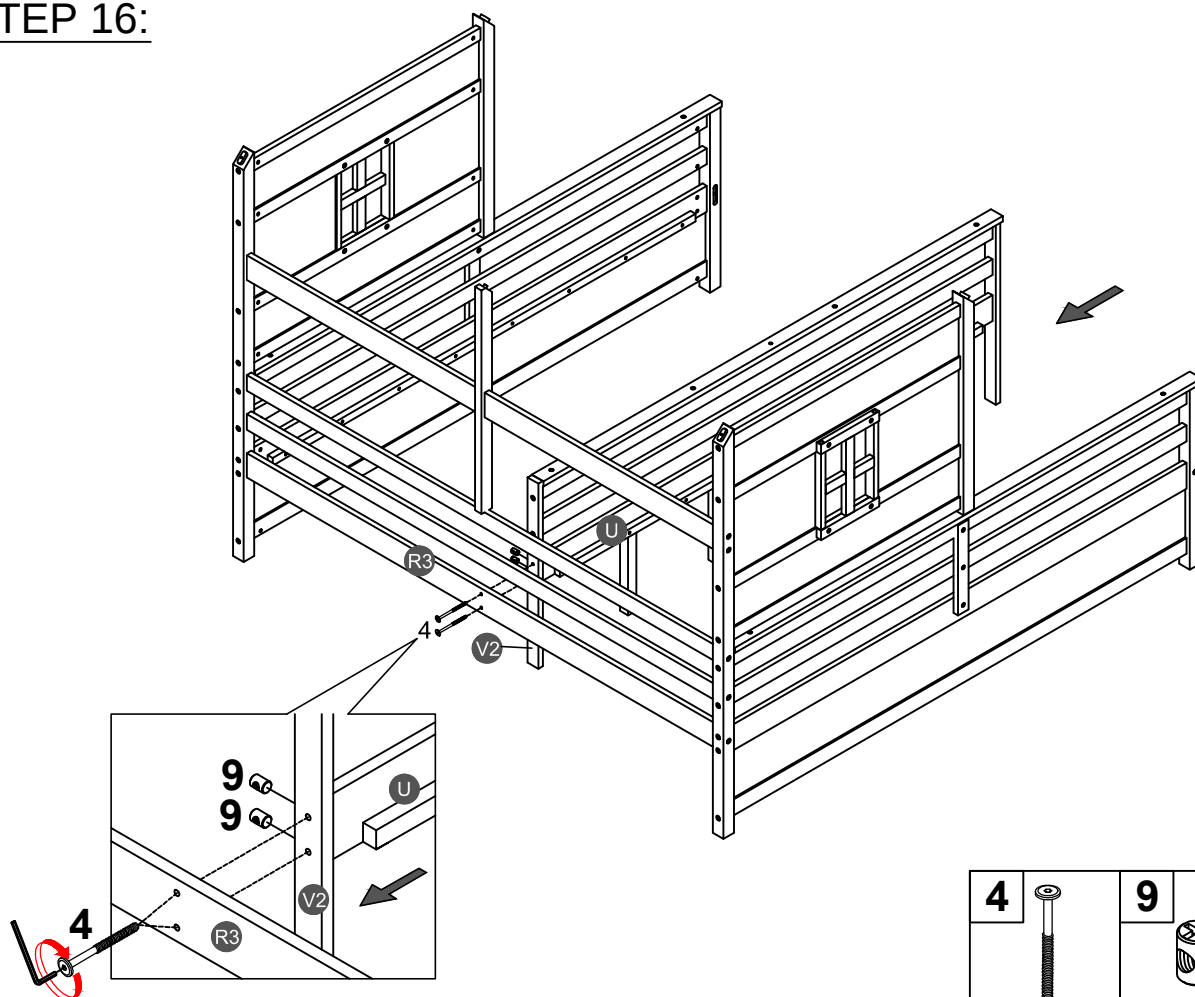


4		9	
2PCS		2PCS	


STEP 17:

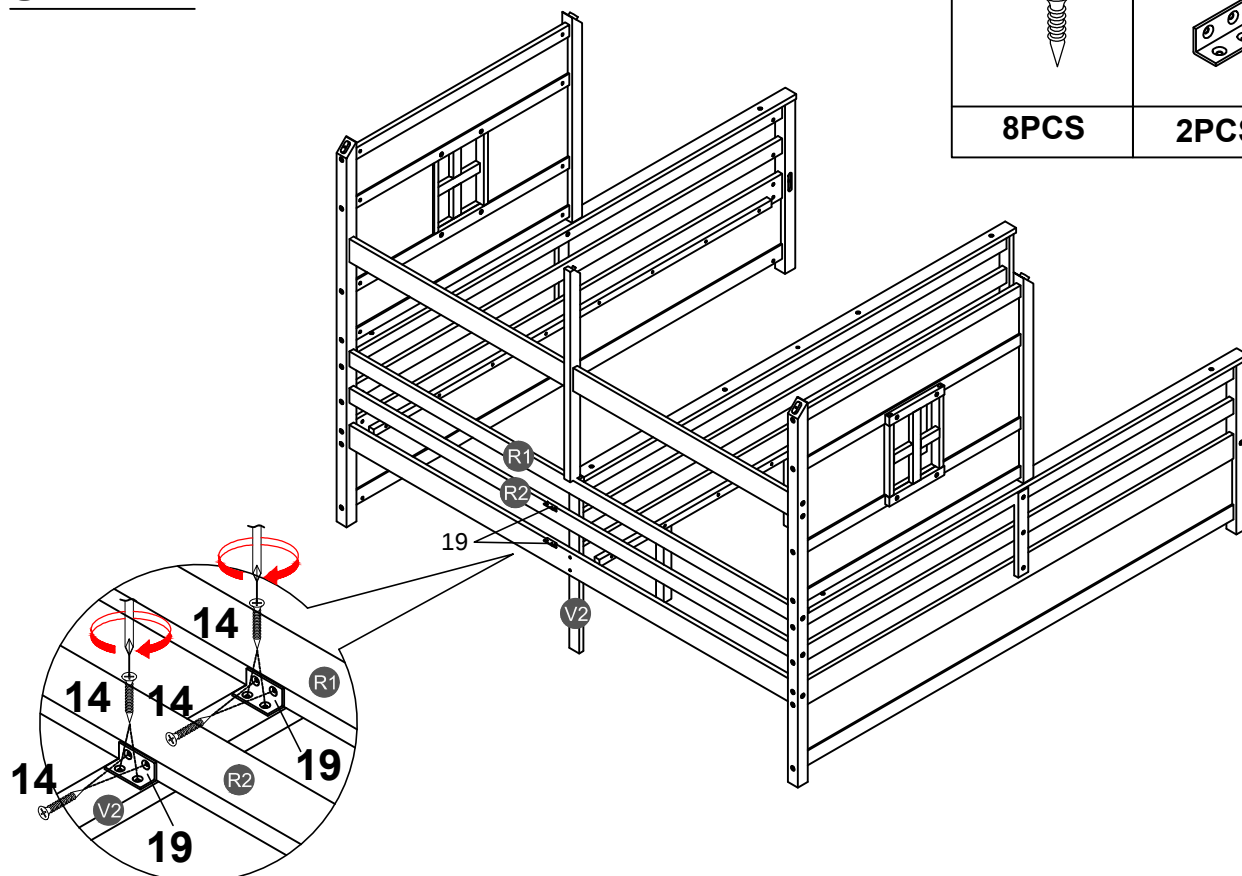

STEP 18:

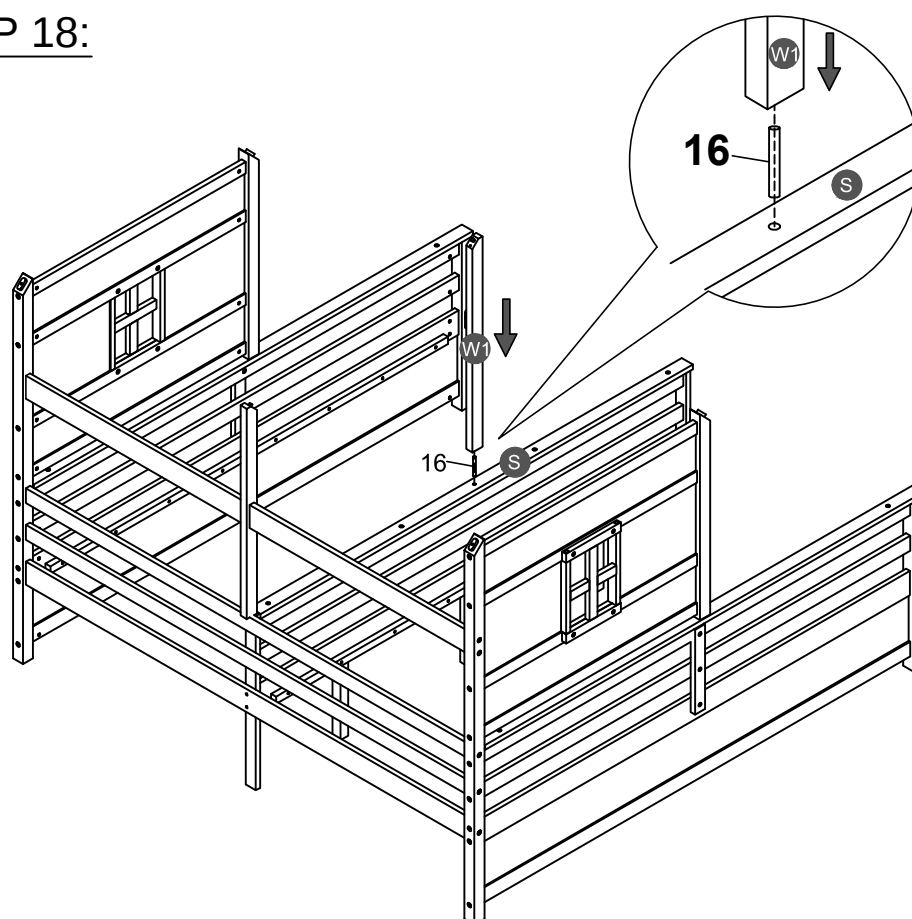


STEP 19:

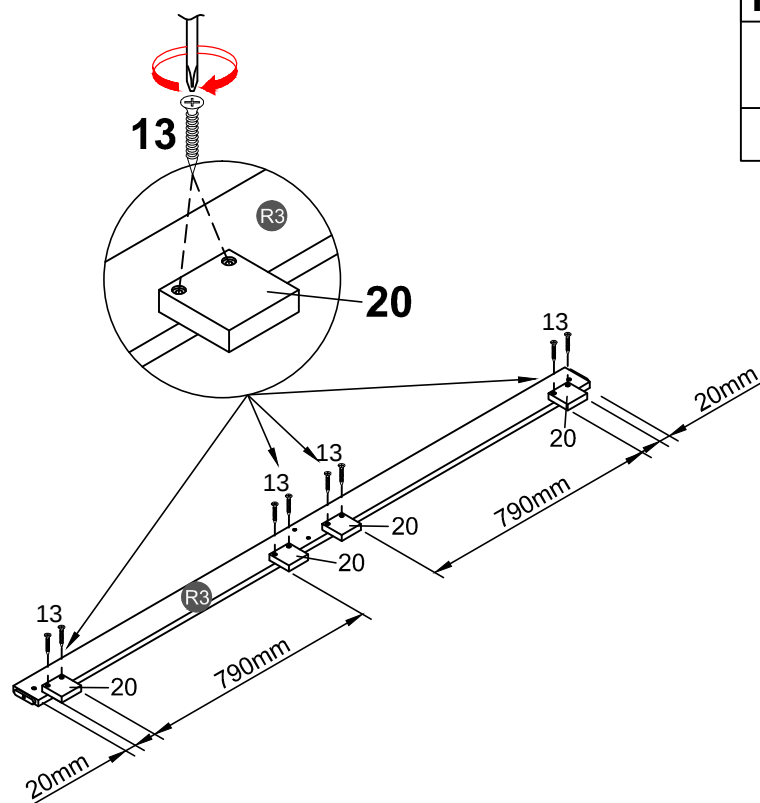


13		20	
8PCS		4PCS	

STEP 20:

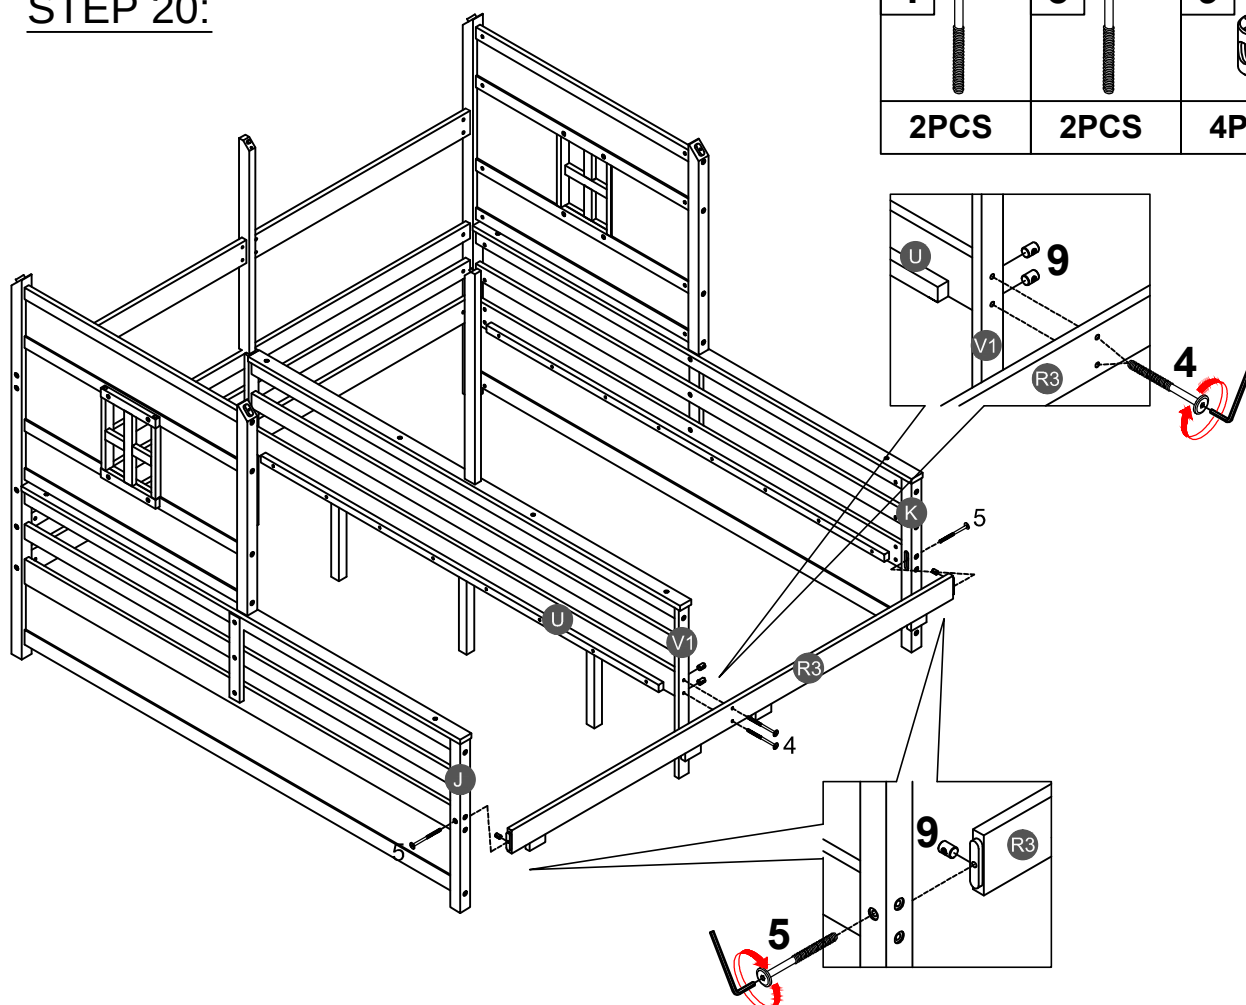


4		5		9	
2PCS		2PCS		4PCS	


STEP 21:

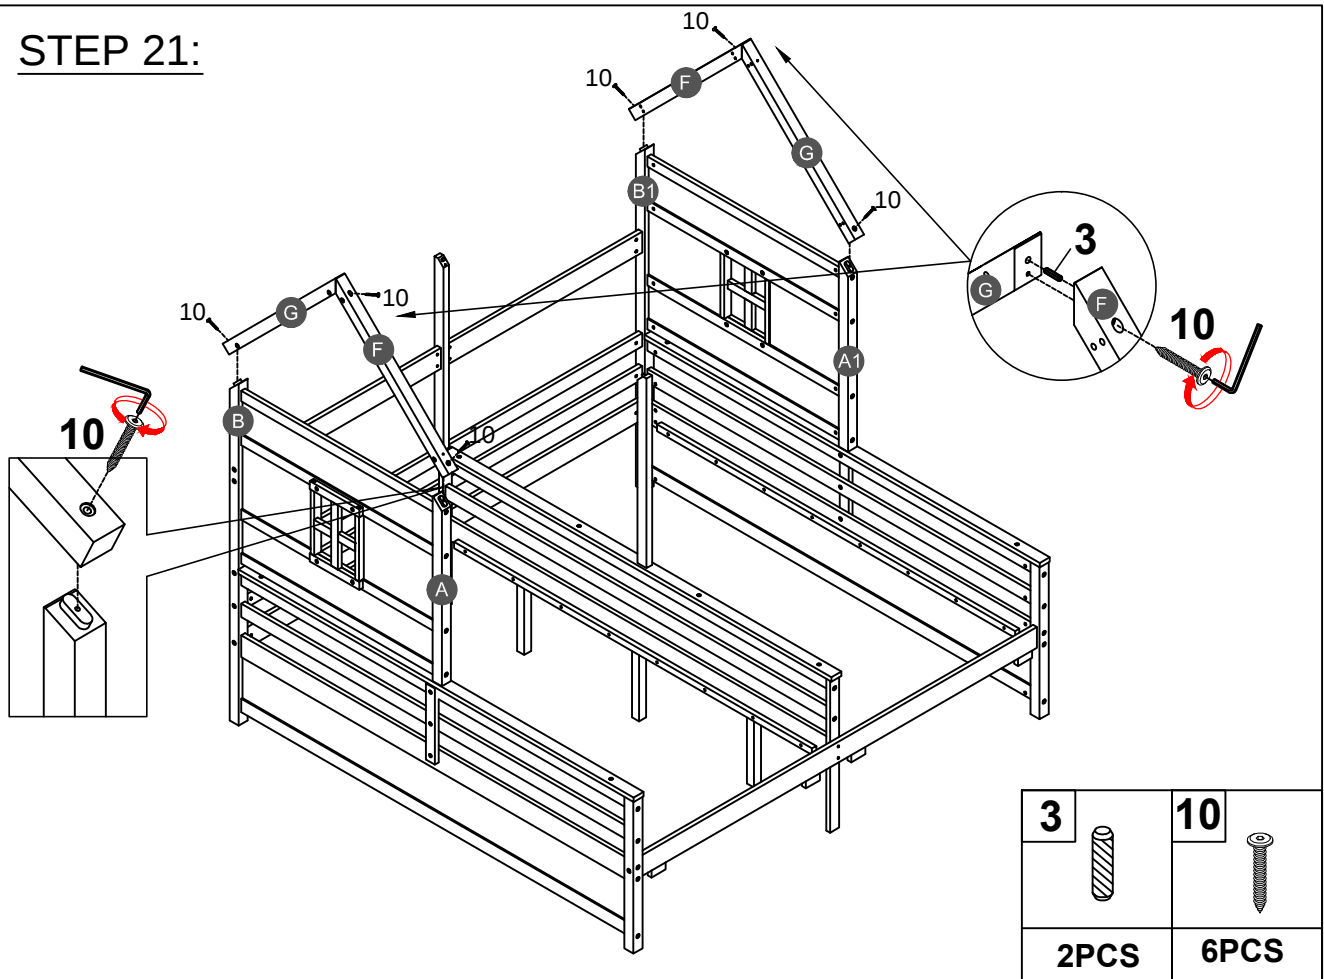

STEP 22:

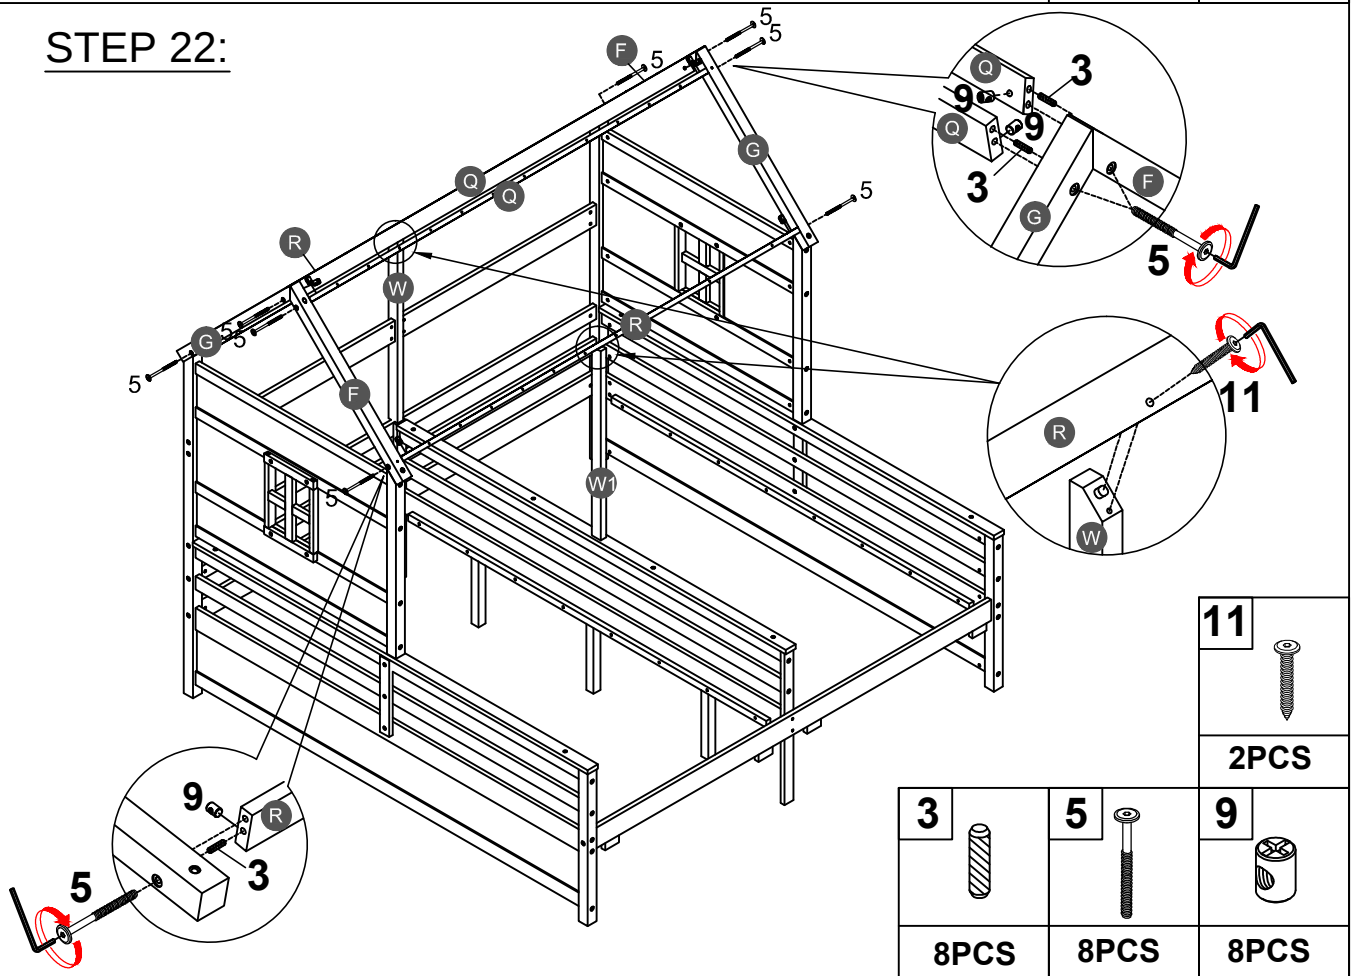

STEP 23:

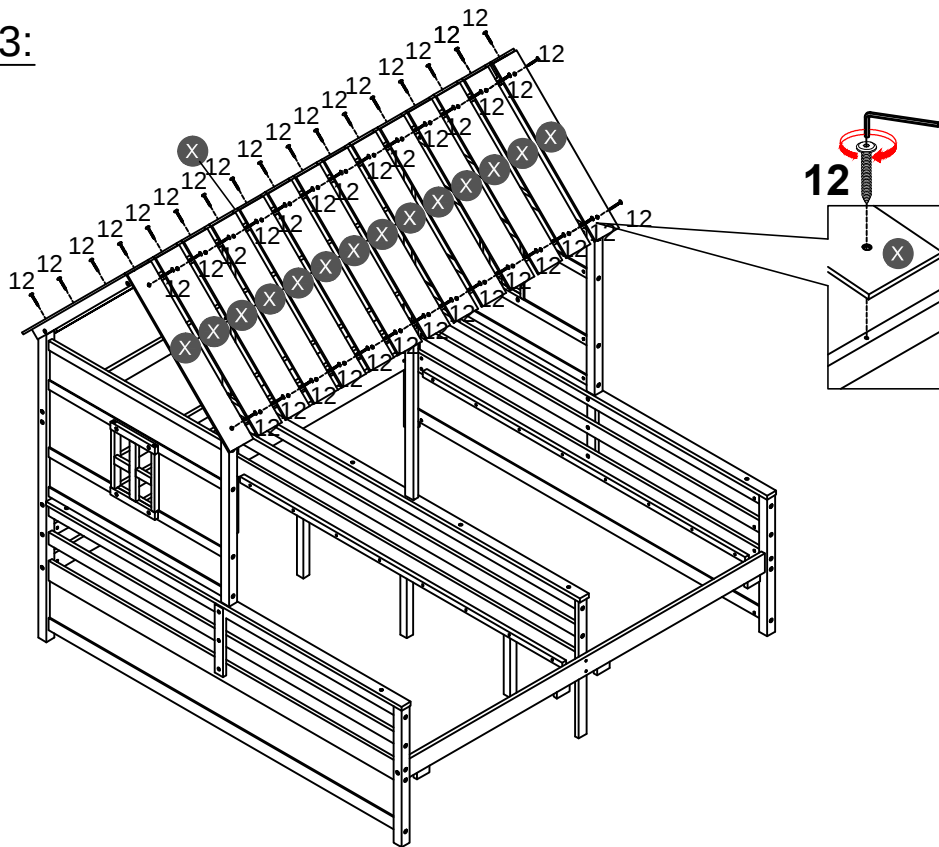


12



56PCS

STEP 24:

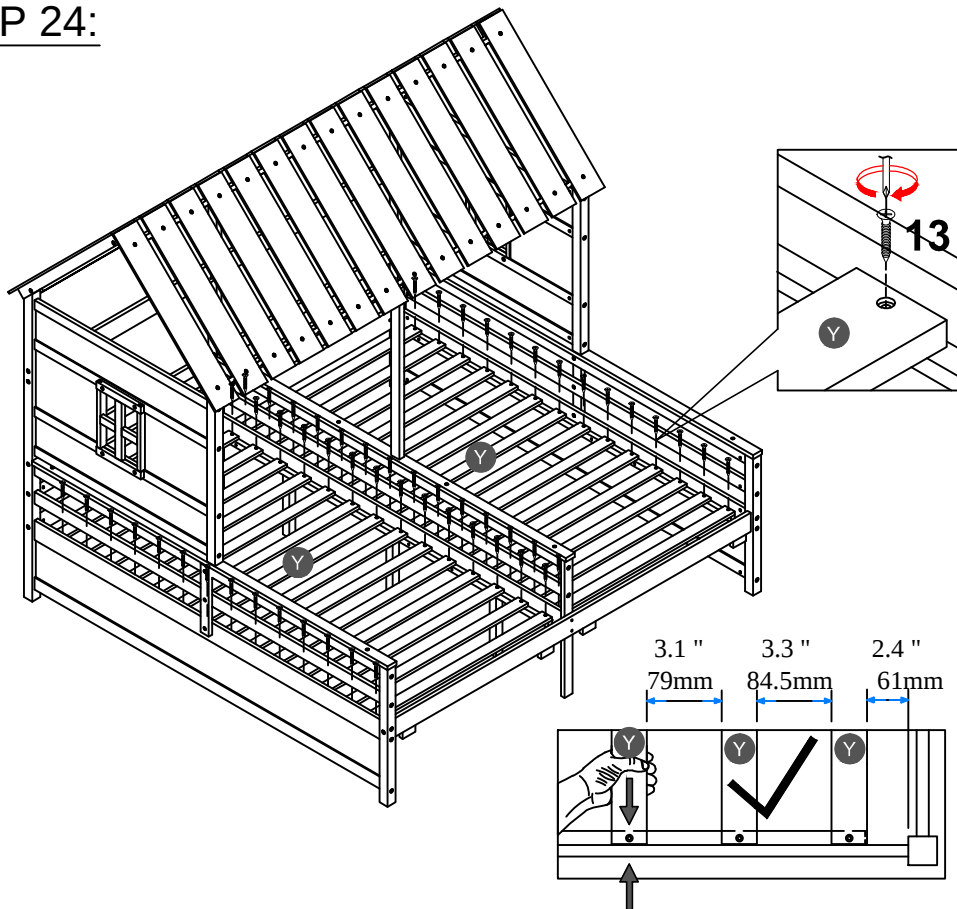


13



56PCS


NOTE: Please make sure the bed slats close to the side rail before locking the screws to avoid breakage. This step is required for both the left and right sides. Moreover, please do not lock the screws of the bed slats at the outermost edge to avoid damaging.

STEP 25:

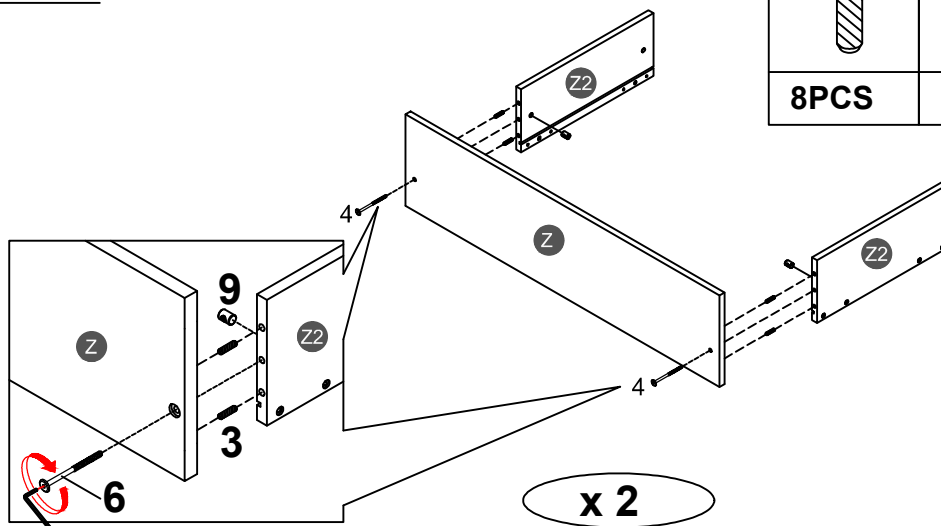


3		6		9	
8PCS		4PCS		4PCS	

STEP 26:

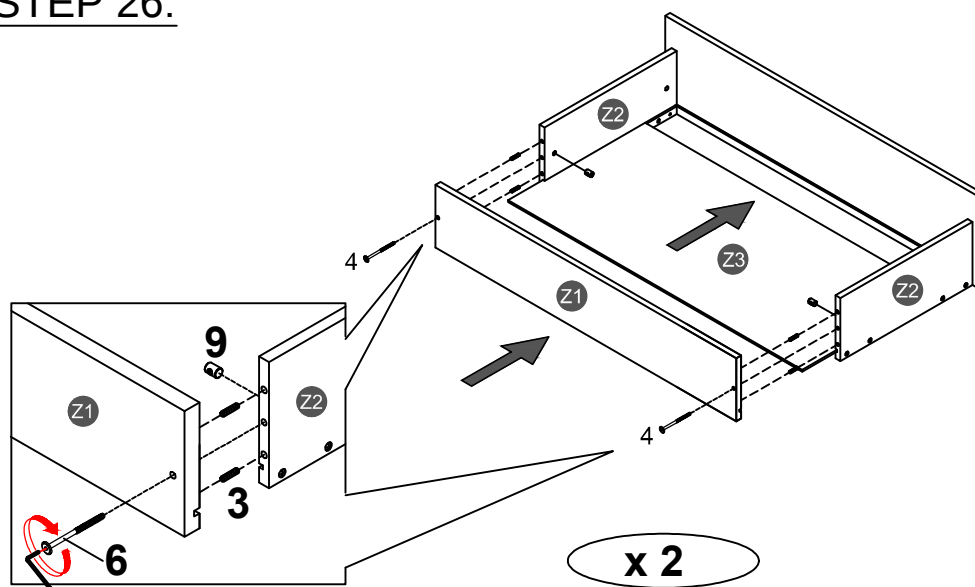


3		6		9	
8PCS		4PCS		4PCS	

STEP 27:

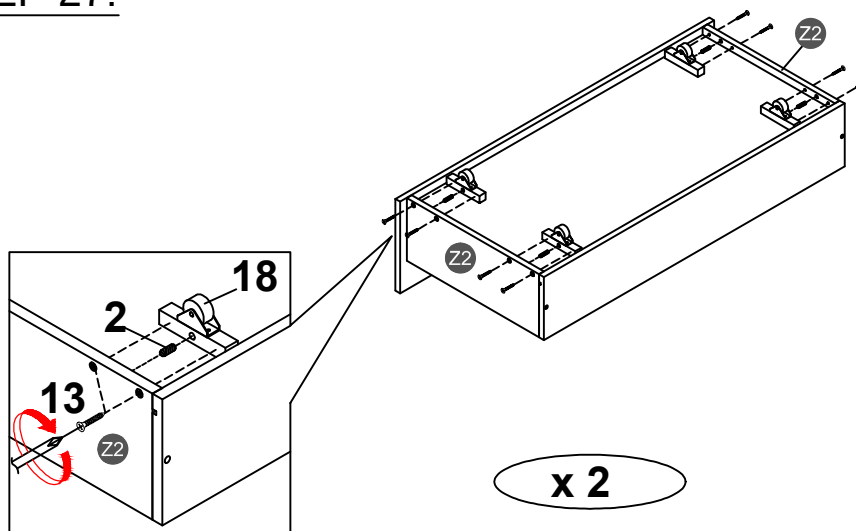


2		13		18	
8PCS		16PCS		8PCS	

STEP 28:

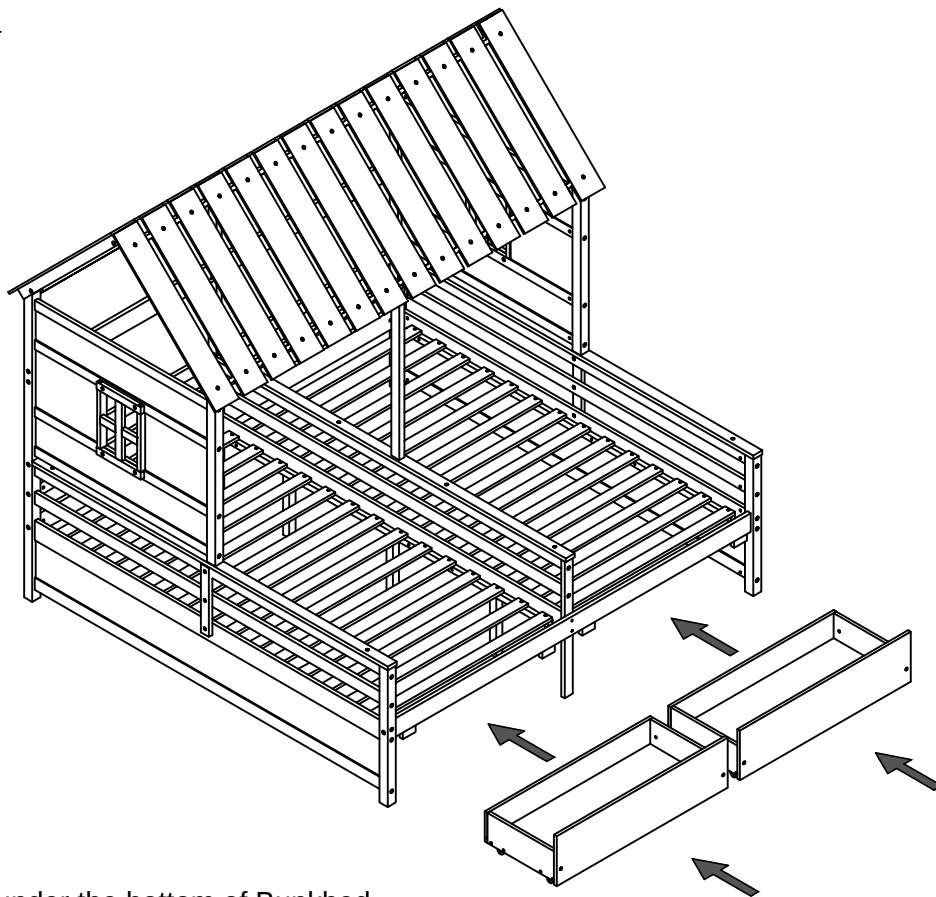

Push Drawers under the bottom of Bunkbed.

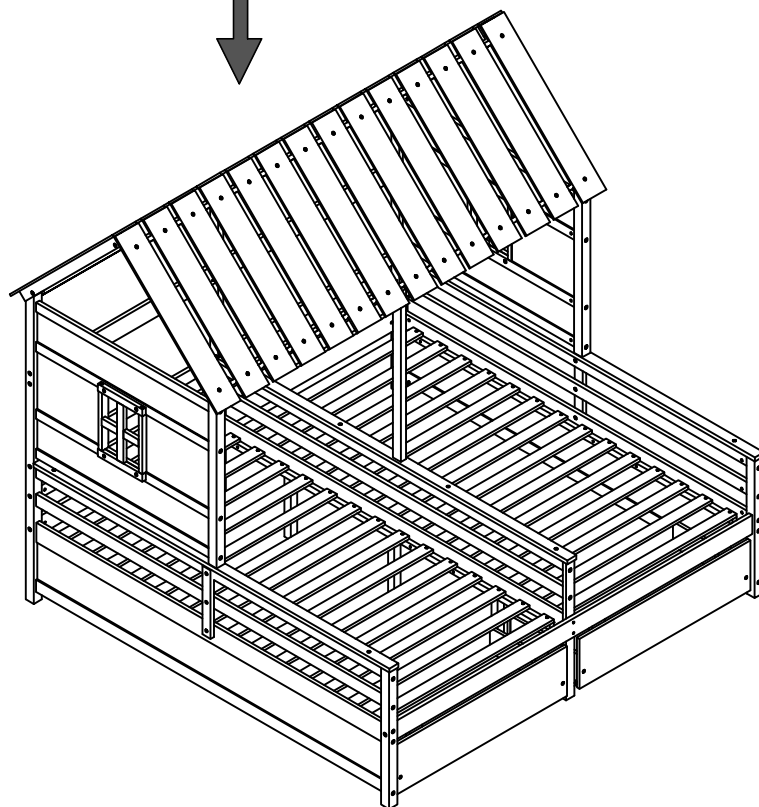

Make sure to tighten all the screws of the bed.